


---

# **BASLER A301f**

## **Camera User's Manual**

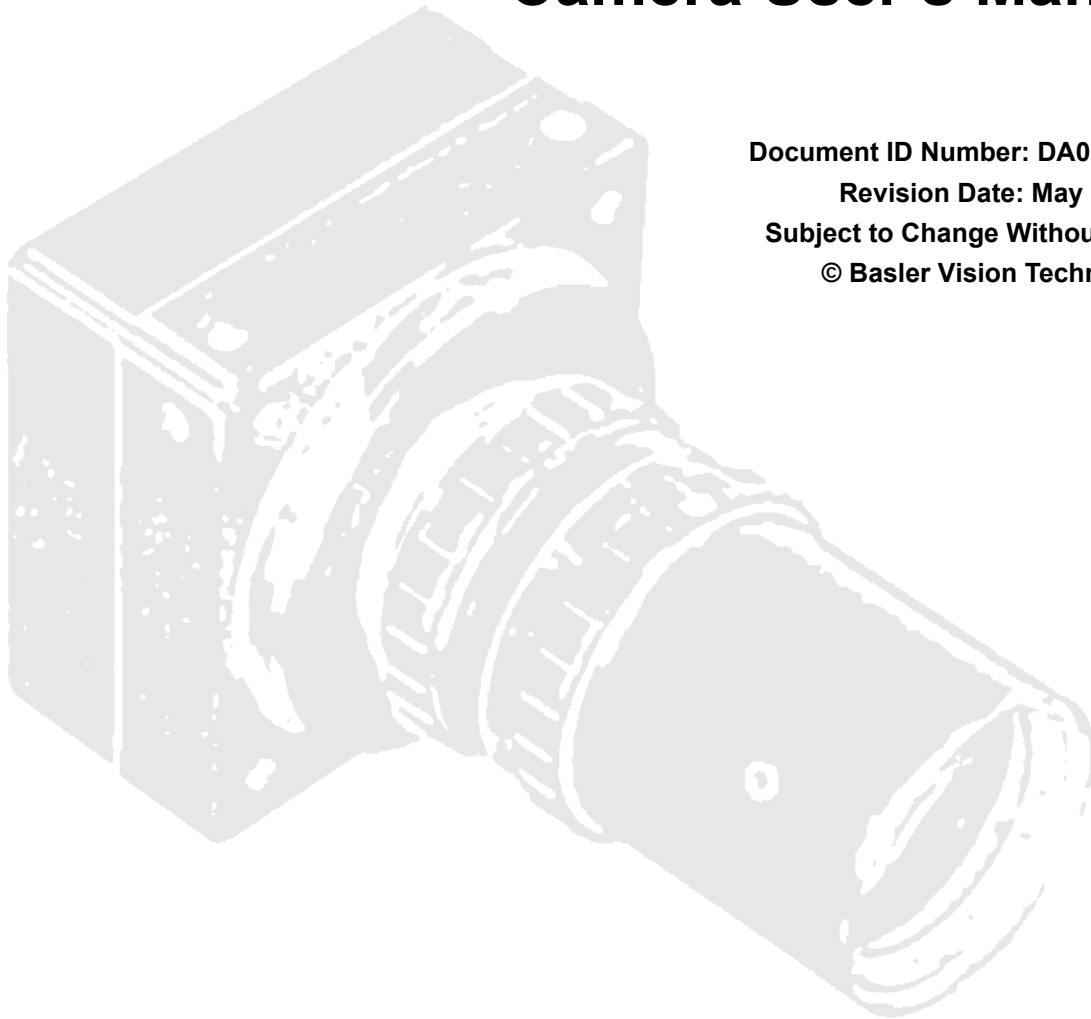

**Document ID Number: DA00044803**

**Revision Date: May 20, 2002**

**Subject to Change Without Notice**

**© Basler Vision Technologies**

### **Basler Support Worldwide:**

Americas: +1-877-934-8472  
vc.support.usa@baslerweb.com

Europe: +49-4102-463-500  
vc.support.europe@baslerweb.com

Asia: +65-425-0472  
vc.support.asia@baslerweb.com

**[www.basler-vc.com](http://www.basler-vc.com)**

---

**For customers in the U.S.A.**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a computing device pursuant to Subpart J of Part 15 of FCC Rules.

**For customers in Canada**

This apparatus complies with the Class A limits for radio noise emissions set out in Radio Interference Regulations.

**Pour utilisateurs au Canada**

Cet appareil est conforme aux normes Classe A pour bruits radioélectriques, spécifiées dans le Règlement sur le brouillage radioélectrique.

**Life Support Applications**

These products are not designed for use in life support appliances, devices, or systems where malfunction of these products can reasonably be expected to result in personal injury. Basler customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify Basler for any damages resulting from such improper use or sale.

**Warranty Note**

Do not open the housing of the camera. The warranty becomes void if the housing is opened.

---

---

# Table of Contents

## 1 Introduction

1.1 Camera Models .....	1-1
1.2 Performance Specifications .....	1-2
1.3 Environmental Requirements .....	1-5
1.3.1 Temperature and Humidity .....	1-5
1.3.2 Ventilation .....	1-5
1.4 Precautions .....	1-5

## 2 Camera Interface

2.1 Connections .....	2-1
2.1.1 General Description .....	2-1
2.1.2 Pin Assignments .....	2-2
2.1.3 Connector Types .....	2-3
2.2 Video Data and Control Signals .....	2-3
2.2.1 Input Signals .....	2-3
2.2.1.1 ExTrig: Controls Exposure Start .....	2-3
2.2.2 Output Signals .....	2-3
2.2.2.1 IntEn: Indicates that Exposure is Taking Place .....	2-3
2.2.2.2 TrigRdy: Indicates that Exposure Can Begin .....	2-3
2.2.2.3 Pixel Data .....	2-4
2.2.3 IEEE 1394 Device Information .....	2-4
2.3 Camera Power .....	2-6
2.4 Status LEDs .....	2-6

## 3 Operation and Features

3.1 Functional Description .....	3-1
3.1.1 Overview .....	3-1
3.2 Exposure Control .....	3-3
3.2.1 Setting the Exposure Time .....	3-3
3.2.2 Controlling Exposure Start via the 1394 Interface .....	3-3
3.2.3 Controlling Exposure Start with an ExTrig Signal .....	3-4
3.2.4 Recommended Methods for Controlling Exposure Start .....	3-5
3.3 Trigger Ready Signal .....	3-8
3.3.1 What Happens if you Toggle ExTrig while TrigRdy is Low .....	3-9
3.4 Integrate Enabled Signal .....	3-10
3.5 Version Information .....	3-10
3.6 Gain and Brightness .....	3-11
3.6.1 Setting Gain .....	3-12
3.6.2 Setting Brightness .....	3-13
3.7 Area of Interest (AOI) .....	3-14
3.8 Test Images .....	3-16

---

3.9 Color Creation in the A301fc .....	3-18
3.9.1 Integrated IR Cut Filter on C-Mount Equipped Cameras.....	3-18
3.10 Available Video Formats, Modes, & Frame Rates .....	3-19
3.10.1 Standard Formats, Modes, and Frame Rates .....	3-19
3.10.2 Customizable Format and Mode .....	3-19
<b>4 Configuring the Camera</b>	
4.1 Block Read and Write Capabilities .....	4-2
4.2 Register Write Order .....	4-2
4.3 Changing the Video Format setting .....	4-2
4.4 Implemented Registers .....	4-3
4.5 Advanced Features .....	4-8
4.5.1 Advanced Features Access Register .....	4-8
4.5.2 Advanced Features Registers .....	4-8
<b>5 Mechanical Considerations</b>	
5.1 Camera Dimensions .....	5-1
5.2 C-Mount Adapter Dimensions .....	5-3
5.3 F-Mount Adapter Dimensions .....	5-3
5.4 Positioning Accuracy of the Sensor Chip .....	5-4
5.5 Maximum Lens Thread Length on A301fc .....	5-4
<b>6 Troubleshooting</b>	
6.1 Fault Finding Using Camera LEDs .....	6-1
6.1.1 Yellow LED .....	6-1
6.1.2 Green LED .....	6-1
<b>Revision History</b> .....	i
<b>Index</b> .....	iii

# 1 Introduction

The **BASLER A301f** progressive scan camera is a versatile camera designed for industrial use. Superb image sensing features are combined with a robust, high precision housing.

Important features are:

- Compliant with the 1394 TA Digital Camera Specification (V 1.20)
- High spatial resolution
- High sensitivity
- Anti-blooming
- Asynchronous full frame shutter via electronic control
- Square sensor cells
- High Signal-to-Noise Ratio
- Area of interest scanning
- Correlated double-sampling
- Industrial housing manufactured with high planar, parallel and angular precision
- Compact size

## 1.1 Camera Models

The camera is available in a monochrome model (the **A301f**) and a color model (the **A301fc**). Throughout the manual, the camera will be called the **A301f**. Passages that are only valid for a specific model will be so indicated.

## 1.2 Performance Specifications

Specification	A301f
Sensor Type	Sony ICX074AL/AK - 1/2 inch, HAD, interline transfer, progressive scan CCD
Pixels	658 (H) x 494 (V)
Pixel Size	9.9 $\mu\text{m}$ (H) x 9.9 $\mu\text{m}$ (V)
Anti-Blooming	1:100
Max. Frame Rate	80 frames/sec
Video Output Signal	Mono: 8 bits per pixel, IEEE 1394 Compliant Color: 8 bits per pixel, raw data
Gain and Brightness	Programmable via IEEE 1394 bus
Exposure Time Control	Programmable via IEEE 1394 bus
Synchronization	External via External Trigger signal - ExTrig input is opto-isolated, max. 1.4 V, max. 50 mA
Power Requirements	12 VDC ( $\pm 10\%$ ), $\sim 6.0$ W, $< 1\%$ ripple supplied via 1394 cable
Max. Cable Lengths	1394: 4.5 m I/O: 10 m
Shock	20G with 50 repetitions in each axis
Vibration	10G (58-500Hz) for 1 hour in each axis
Lens Adapter	C-mount or F-mount
Housing Size (L x W x H)	without lens adapter: 48.7mm x 62 mm x 62 mm with C-mount adapter: 51.2 mm x 62 mm x 62 mm with F-mount adapter: 80.2 mm x 62 mm x 62 mm
Weight	without lens adapter: $\sim 200$ g with C-mount adapter: $\sim 240$ g with F-mount adapter: $\sim 310$ g
Conformity	CE, FCC

Table 1-1: Performance Specifications

The spectral responsivity for monochrome cameras is shown in Figure 1-1. The graph includes lens characteristics and excludes light source characteristics.

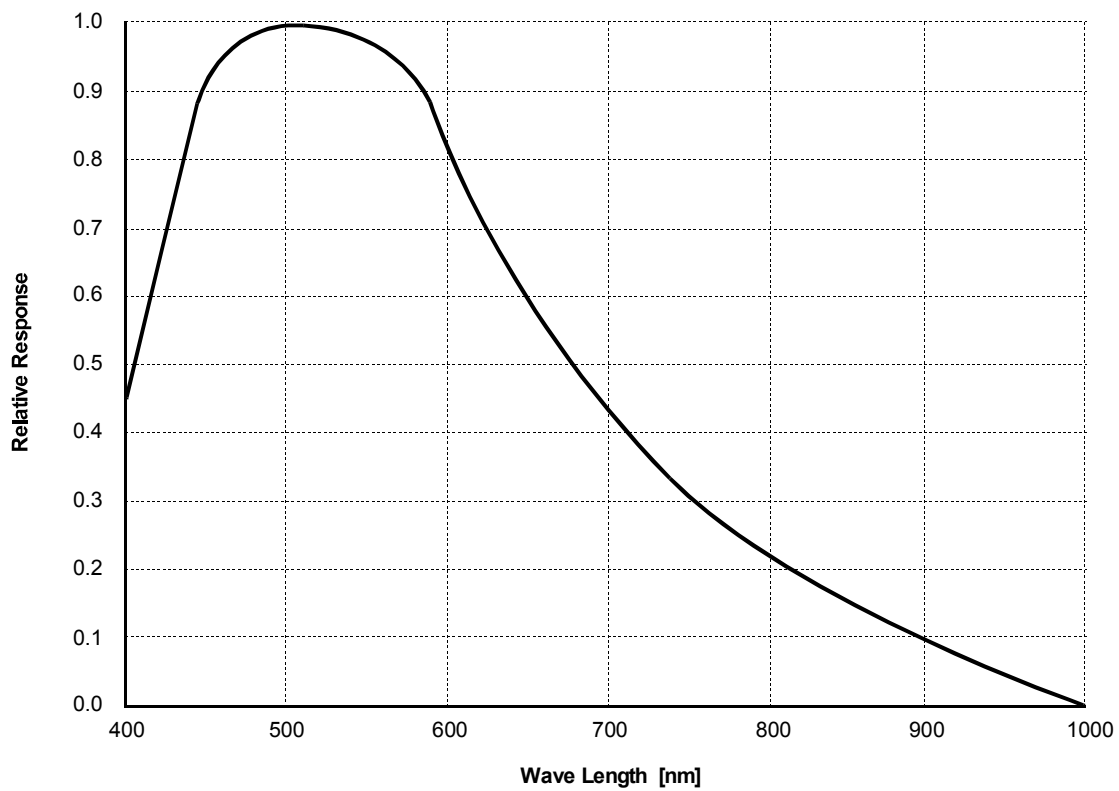


Figure 1-1: Spectral Responsivity - Monochrome Cameras

The spectral responsivity for color cameras is shown in Figure 1-2. The graph includes lens characteristics and excludes light source characteristics

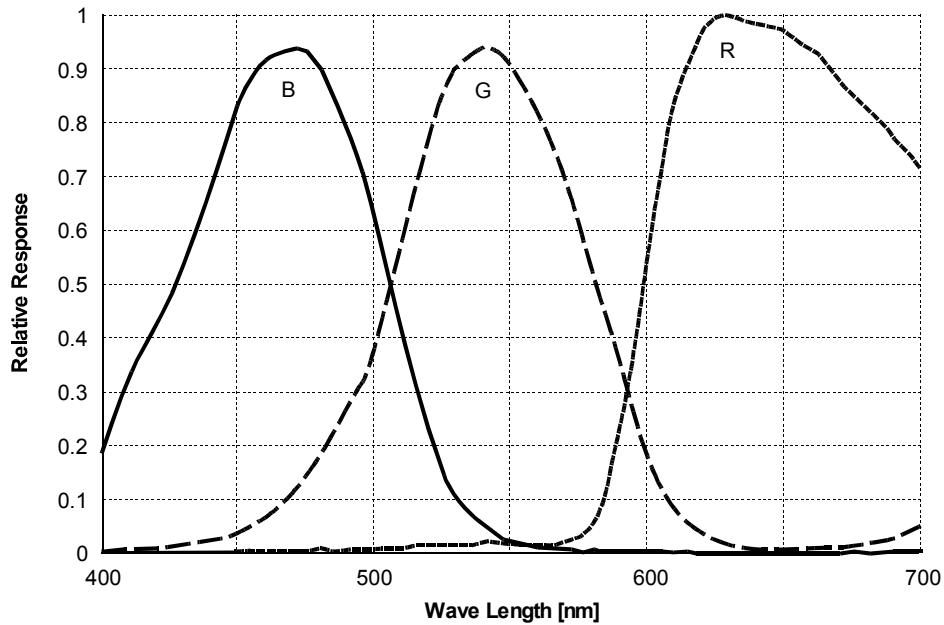


Figure 1-2: Spectral Responsivity - Color Cameras



Cameras equipped with a C-mount lens adapter contain an integrated IR cut filter. On cameras equipped with an F-mount adapter, use of a suitable IR cut filter is recommended to maintain spectral balance and optimum MTF.



## 1.3 Environmental Requirements


### 1.3.1 Temperature and Humidity

Housing temperature during operation: 0° C ... + 50° C (+ 32° F ... +122° F)

Humidity during operation: 20% ... 80%, relative, non-condensing

### 1.3.2 Ventilation

Allow sufficient air circulation around the camera to prevent internal heat build-up in your system and to keep the camera housing temperature below 50° C. Provide additional cooling such as fans or heat sinks if necessary.

	<p><b>Warning!</b></p> <p>Without sufficient cooling, the camera can get hot enough during operation to cause burning when touched.</p>
---	---

## 1.4 Precautions

### Read the manual

Read the manual carefully before using the camera.

### Keep foreign matter outside of the camera

Do not open the casing. Touching internal components may damage them.

Be careful not to allow liquid, flammable, or metallic material inside the camera housing. If operated with any foreign matter inside, the camera may fail or cause a fire.

### Electromagnetic Fields

Do not operate the camera in the vicinity of strong electromagnetic fields. Avoid electrostatic charging.

### Transporting

Only transport the camera in its original packaging. Do not discard the packaging.

### Cleaning

Avoid cleaning the surface of the CCD sensor if possible. If you must clean it, use a soft, lint free cloth dampened with a small quantity of pure alcohol. Do not use methylated alcohol. Because electrostatic discharge can damage the CCD sensor, you must use a cloth that will not generate static during cleaning (cotton is a good choice).

To clean the surface of the camera housing, use a soft, dry cloth. To remove severe stains, use a soft cloth dampened with a small quantity of neutral detergent, then wipe dry.

Do not use volatile solvents such as benzine and thinners; they can damage the surface finish.



## 2 Camera Interface

### 2.1 Connections

#### 2.1.1 General Description

The A301f is interfaced to external circuitry via an IEEE 1394 socket and a 9-pin micro-D plug located on the side of the housing. Figure 2-1 shows the location of the two connectors. There are also two status LEDs on the back of the camera. The LEDs indicate signal integrity and power OK (see Section 6.1).

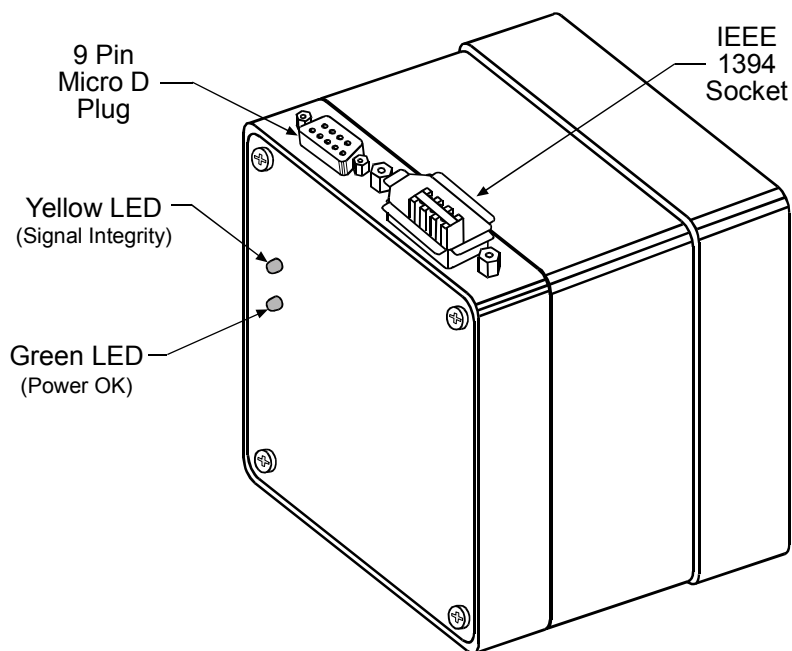


Figure 2-1: Camera Connectors and Indicators

## 2.1.2 Pin Assignments

The IEEE 1394 socket is used to supply power to the camera and to interface video data and control signals. The pin assignments for the socket are shown in Table 2-1.


Pin	Signal	Pin	Signal
1	+12 VDC	4	TPB+
2	DC Gnd	5	TPA-
3	TPB-	6	TPA+

Table 2-1: Pin Assignments for the IEEE 1394 Socket

The 9-pin micro-D plug is used to interface the external trigger, integrate enabled, and trigger ready signals. The pin assignments for the plug are shown in Table 2-2.

Pin	Signal	Pin	Signal
1	External Trigger +	6	External Trigger -
2	Integrate Enabled +	7	Integrate Enabled -
3	Trigger Ready +	8	Trigger Ready -
4	Not Connected	9	Not Connected
5	Not Connected		

Table 2-2: Pin Assignments for the 9-Pin Micro-D Plug

	<p>The camera housing is not grounded and is isolated from the circuit boards inside of the camera.</p>
---	---

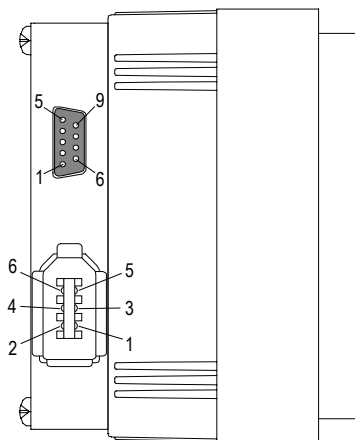


Figure 2-2: A301f Pin Numbering

## 2.1.3 Connector Types

The 6-pin connector on the camera is a standard IEEE-1394 socket.

The 9-pin Micro-D plug is Molex Part Number 83611-9006 or the equivalent.

(A three meter long cable with a 9-pin Micro-D receptacle on one end and a 9-pin D-sub receptacle on the other end is available from Basler - part # 1000012016.)

## 2.2 Video Data and Control Signals

### 2.2.1 Input Signals

#### 2.2.1.1 ExTrig: Controls Exposure Start

An external trigger (ExTrig) signal can be used to control the start of exposure. ExTrig can be a periodic or a non-periodic function. When the camera is operating under the control of an ExTrig signal, the frequency of the ExTrig signal determines the camera's frame rate. For more detailed information on using the ExTrig signal, see Sections 3.2 and 3.3.

As shown in Figure 2-3, the input for the ExSync signal is opto-isolated. The voltage of the LED in the opto-coupler is 1.4 V. The absolute maximum input current for the LED is 50 mA.<sup>1</sup>

For the ExSync input, a current of more than 5 mA means a logical one. A current of less than 0.1 mA means a logical zero.

### 2.2.2 Output Signals

#### 2.2.2.1 IntEn: Indicates that Exposure is Taking Place

The integration enabled (IntEn) signal indicates that exposure is taking place. The IntEn signal will be high during exposure and low when exposure is not taking place.

As shown in Figure 2-3, the output for the IntEn signal is opto-isolated. The maximum forward voltage is 35 V, the maximum reverse voltage is 6 V, and the maximum collector current is 100 mA.<sup>1</sup>

A conducting transistor means a logical one and a non-conducting transistor means a logical zero.

#### 2.2.2.2 TrigRdy: Indicates that Exposure Can Begin

When the trigger ready (TrigRdy) signal goes high, it indicates that exposure of the next frame can be triggered. Section 3.3 explains the operation of the trigger ready signal in more detail.

As shown in Figure 2-3, the output for the TrigRdy signal is opto-isolated. The maximum forward voltage is 35 V, the maximum reverse voltage is 6 V, and the maximum collector current is 100 mA.<sup>1</sup>

A conducting transistor means a logical one and a non-conducting transistor means a logical zero.

<sup>1</sup> The opto-isolator used in the camera is a Sharp PC3Q64Q or the equivalent. A detailed spec sheet for this device is available at the Sharp Microelectronics Group ([www.sharpmeg.com](http://www.sharpmeg.com)).

### **2.2.2.3 Pixel Data**

Pixel data is transmitted as isochronous data packets according to version 1.20 of the “1394 - based Digital Camera Specification” issued by the 1394 Trade Association. The first packet of each frame is identified by a 1 in the sync bit of the packet header.

The video data for each pixel is output in an 8 bit format. Thus the range of intensity for each pixel includes 256 gray levels. The digital gray value of 0 corresponds to black and the digital gray value of 255 to white.

### **Pixel Data Transmission Sequence**

Pixel data is transmitted in the following sequence:

- Line 1/Pixel 1, Line 1/Pixel 2, Line 1/Pixel 3 ... Line 1/Pixel 657, Line 1/Pixel 658.
- Line 2/Pixel 1, Line 2/Pixel 2, Line 2/Pixel 3 ... Line 2/Pixel 657, Line 2/Pixel 658.
- Line 3/Pixel 1, Line 3/Pixel 2, Line 3/Pixel 3 ... Line 3/Pixel 657, Line 3/Pixel 658.
- and so forth.

### **2.2.3 IEEE 1394 Device Information**

The **A301f** uses an IEEE 1394a compliant physical layer device to transmit pixel data. Detailed spec sheets for devices of this type are available at the Texas Instruments web site ([www.ti.com](http://www.ti.com)).


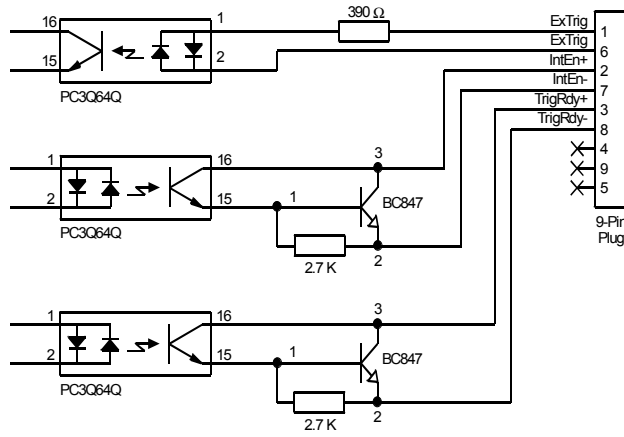


Figure 2-3: I/O Schematic

## 2.3 Camera Power

Power must be supplied to the camera via the IEEE 1394 cable. The camera requires +12 VDC  $\pm$  10%. Maximum power consumption for the **A301f** is 6.0 W approximately. Ripple must be less than 1%.

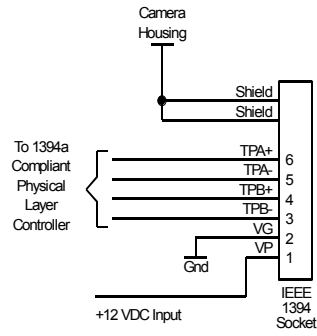

The IEEE 1394 standard specifies a voltage range of 8 to 40 VDC. The **A301f** does not conform to this specification. The **A301f** requires an input voltage of +12 VDC  $\pm$  10%.

## 2.4 Status LEDs

### Green LED

The green LED on the back of the camera is used to indicate whether power is being supplied to the camera. When the green LED is out, it means that no power is present. When the green LED is lit, it means that power is present.



Keep in mind that the circuit used to light the green LED does not perform a range check. If power to the camera is present but it is out of range, the LED may be lit but the camera will not operate properly.

### Yellow LED

The yellow LED indicates signal integrity. In case of an error, blinking signals from the yellow LED indicate that an error condition is present. See Section 6.1 for more information.



# 3 Operation and Features

## 3.1 Functional Description

### 3.1.1 Overview

The A301f area scan camera employs a CCD-sensor chip which provides features such as electronic exposure time control and anti-blooming.

Normally, exposure time and charge readout are controlled by values transmitted to the camera's control registers via the IEEE 1394 interface. Command registers are available to set exposure time and frame rate. There are also command registers available to set the camera for single frame capture, multiple frame capture, and continuous frame capture.

Exposure start can also be controlled via an externally generated trigger (ExTrig) signal. The ExTrig signal facilitates periodic or non-periodic start of exposure. When exposure start is controlled by an ExTrig signal, exposure begins when the trigger signal goes low and continues for a pre-programmed period of time. Accumulated charges are read out when the programmed exposure time ends.

At readout, accumulated charges are transported from the sensor's light-sensitive elements (pixels) to the vertical shift registers (see Figure 3-1). The charges from the bottom two lines of pixels in the array are then moved into two horizontal shift registers. As charges move out of the horizontal shift registers, they are converted to voltages which are proportional to the size of each charge. Shifting is clocked according to the camera's internal data rate.

The voltages moving out of the horizontal shift registers are amplified by two internal Variable Gain Controls (VGCs) and then digitized by two 10 bit, Analog-to-Digital converters (ADCs). For optimal digitization, gain and brightness can be programmed by setting command registers in the camera. Since the IEEE 1394 bus can only handle 8 bit data, the two least significant bits from each ADC are dropped.

The 8 bit pixel data leaving the ADC is transferred to an image buffer. From the buffer, the image data is moved to a 1394 link layer controller where it is assembled into data packets that comply with version 1.20 of the "1394 - based Digital Camera Specification" issued by the 1394 Trade Association. The packets are passed to a 1394 physical layer controller which transmits them isochronously to a 1394 interface board in the host PC. The physical and link layer controllers also handle transmission and receipt of asynchronous data such as programming commands.

The image buffer between the sensor and the link layer controller allows data to be transferred out of the sensor at a rate that is independent of the of the data transmission rate between the camera and the host computer. This ensures that the data transmission rate has no influence on image quality.

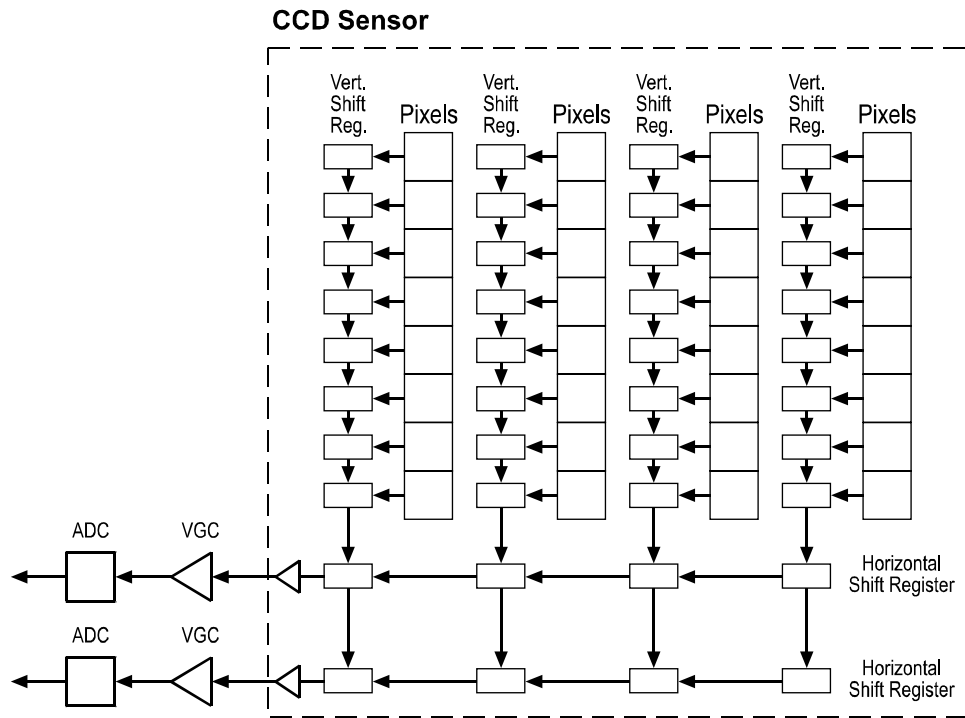


Figure 3-1: A301f Sensor Architecture

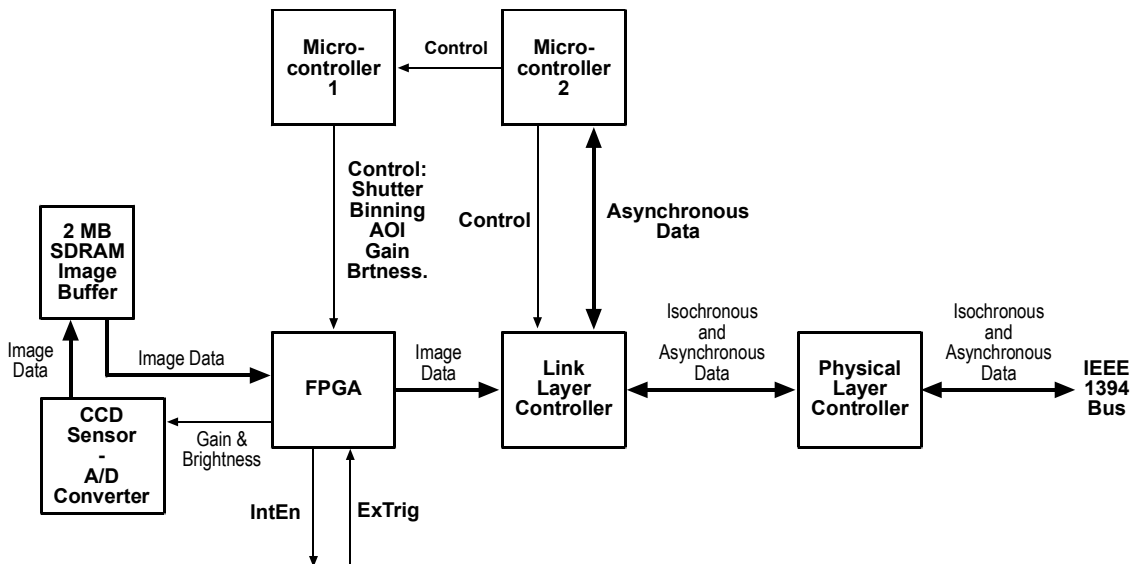


Figure 3-2: Block Diagram

## 3.2 Exposure Control

### 3.2.1 Setting the Exposure Time

Exposure time is determined by the value stored in the SHUTTER control register. The value in the register can range from 0 to 4095 (0x000 to 0xFFFF). The value in the register represents  $n$  in the equation: Exposure Time =  $(n + 1) \times 20 \mu\text{s}$ . So, for example, if the value stored in the SHUTTER register is 100 (0x064), the exposure time will be  $(100 + 1) \times 20 \mu\text{s}$  or 2020  $\mu\text{s}$ .



The default setting for the exposure time will usually be set to the maximum. With the exposure time set to the maximum, you can only operate the camera at about 10 frames per second. If you want to operate the camera at the maximum rate of 80 frames per second, you must use a shorter exposure time.

### 3.2.2 Controlling Exposure Start via the 1394 Interface

#### One-Shot Operation

In one-shot operation, the camera exposes and transmits a single frame. Exposure begins when the ONE\_SHOT control register is set to 1. Exposure time is determined by the value field in the SHUTTER control register (see Section 3.2.1).

The ONE\_SHOT control register is self cleared when transmission of frame data begins.



See Section 4.2, Register Write Order, for a complete description of the order in which the camera registers must be written. This applies for one-shot, multi-shot and continuous-shot operation.

#### Multi-Shot Operation

In multi-shot operation, the camera exposes and transmits multiple frames. The exposure for the first frame begins when the MULTI\_SHOT control register is set to 1. The number of frames that will be transmitted is determined by the value stored in the COUNT\_NUMBER field of the control register. The exposure time for each frame is determined by the value field in the SHUTTER control register (see Section 3.2.1). The start of exposure on the second and subsequent frames is automatically controlled by the camera.

If the camera is operating in video Format 0, Format 1, or Format 2, the rate at which frames will be captured and transmitted is determined by the value stored in the CUR\_V\_FRM\_RATE / REVISION control register.

If the camera is operating in video Format 7, the rate at which frames will be captured and transmitted is determined by the value stored in the BYTE\_PER\_PACKET control register (see Section 3.10.2).

The MULTI\_Shot control register is self cleared when transmission of the last frame begins.

### Continuous-Shot Operation

In continuous-shot operation, the camera continuously exposes and transmits frames. The exposure of the first frame begins when the ISO\_EN/CONTINUOUS\_SHOT control register is set to 1. The exposure time for each frame is determined by the value field in the SHUTTER control register (see Section 3.2.1). The start of exposure on the second and subsequent frames is automatically controlled by the camera.

If the camera is operating in video Format 0, the rate at which frames will be captured and transmitted is determined by the value stored in the CUR\_V\_FRM\_RATE / REVISION control register.

If the camera is operating in video Format 7, the rate at which frames will be captured and transmitted is determined by the value stored in the BYTE\_PER\_PACKET control register (see Section 3.10.2).

Frame exposure and transmission stop when the ISO\_EN/CONTINUOUS\_SHOT control register is set to 0.

### 3.2.3 Controlling Exposure Start with an ExTrig Signal

The external trigger (ExTrig) input signal can be used to control the start of exposure. A rising edge on the ExTrig signal begins exposure. The ExTrig signal can be periodic or non-periodic.

The ExTrig signal must be used in combination with a one-shot, multi-shot, or continuous-shot command. If precise control of exposure start time is desired, you must also monitor the Trigger Ready signal and Integrate Enabled signals and you must base the timing of the ExTrig signal on the state of these signals. (See Section 3.3 for recommended methods for using the signals)

To enable the external trigger feature and set the camera for rising edge triggering, set the ON\_OFF field of the TRIGGER\_MODE control register to 1, the Trigger\_Polarity field to 1, and the Trigger\_Mode field to 0.

#### ExTrig/One-Shot Operation

In ExTrig/One-shot operation, the camera exposes and transmits a single frame. To use this method of operation, follow this sequence:

1. Set the SHUTTER control register for your desired exposure time (see Section 3.2.1).
2. Set the ONE\_SHOT control register to 1.
3. Check the state of the TrigRdy signal:
  - a) If TrigRdy is high, you can toggle ExTrig when desired.
  - b) If TrigRdy is low, wait until TrigRdy goes high and then toggle ExTrig when desired.
4. When ExTrig goes high, exposure will begin. Exposure will continue for the length of time specified in the SHUTTER control register.
5. At the end of the specified exposure time, frame readout and transmission will take place.

The ONE\_SHOT control register is self cleared after frame transmission.



See Section 4.2, Register Write Order, for a complete description of the order in which the camera registers must be written. This applies for one-shot, multi-shot and continuous-shot operation.

### ExTrig/Multi-Shot Operation

In ExTrig/Multi-shot operation, the camera exposes and transmits multiple frames. The number of frames that will be transmitted is determined by the value stored in the COUNT\_NUMBER control register. To use this method of operation, follow this sequence:

1. Set the SHUTTER control register for your desired exposure time (See Section 3.2.1).
2. Set the MULTI\_SHOT control register to 1 and set the COUNT\_NUMBER control register to the desired number of frames.
3. Check the state of the TrigRdy signal:
  - a) If TrigRdy is high, you can toggle ExTrig when desired.
  - b) If TrigRdy is low, wait until TrigRdy goes high and then toggle ExTrig when desired.
4. When ExTrig goes high, exposure will begin. Exposure will continue for the length of time specified in the SHUTTER control register.
5. At the end of the specified exposure time, frame readout and transmission will take place.
6. Repeat steps 3, 4, and 5 until you have captured the number of frames specified in the count number register.

The MULTI\_SHOT control register is self cleared after transmission of the last frame.

### ExTrig/Continuous-Shot Operation

In ExTrig/Continuous-shot operation, the camera continuously exposes and transmits frames. To use this method of operation, follow this sequence:

1. Set the SHUTTER control register for your desired exposure time (see Section 3.2.1).
2. Set the ISO\_EN/CONTINUOUS\_SHOT control register to 1.
3. Check the state of the TrigRdy signal:
  - a) If TrigRdy is high, you can toggle ExTrig when desired.
  - b) If TrigRdy is low, wait until TrigRdy goes high and then toggle ExTrig when desired.
4. When ExTrig goes high, exposure will begin. Exposure will continue for the length of time specified in the SHUTTER control register.
5. At the end of the specified exposure time, frame readout and transmission will take place.
6. Repeat steps 3, 4, and 5 each time that you want to capture a frame.
7. Frame exposure and transmission stop when the ISO\_EN/CONTINUOUS\_SHOT control register is set to 0.

## 3.2.4 Recommended Methods for Controlling Exposure Start

If a camera user requires close control of exposure start, there are several general guidelines that must be followed:

- the camera should be placed in continuous shot mode.
- the user must use an external trigger signal to start exposure and must set the camera to react to a rising edge of the trigger signal (i.e., active high).
- the user must monitor the trigger ready signal and the integrate enabled signal (see Sections 3.3 and 3.4 for an explanation of these signals).
- a rising edge of the external trigger signal must only occur when the trigger ready signal is high.

Assuming that these general guidelines are followed, the reaction of the camera to a rising external trigger signal will be one of two cases. In case one, the rising edge of ExTrig occurs when the camera is not transferring a captured frame from the sensor to the image buffer. In case two,

the rising edge of ExTrig occurs when the camera is transferring a captured frame from the sensor to the image buffer.


### Case 1 - Exposure Start When the Camera is not Transferring a Frame

After each exposure is complete, there is a time period of 11.7 ms. during which the captured frame is transferred from the CCD sensor to the camera's image buffer.

If the ExTrig signal rises after this time period has ended as shown in Figure 3-3:


- The start of exposure will occur between 3 and 4  $\mu\text{s}$  after the rise of ExTrig. For a given camera, the delay in the start of exposure will be consistent from frame to frame. (The size of the delay will vary slightly from camera to camera, but will always be in the 3 to 4  $\mu\text{s}$  range.)
- The IntEn signal will rise between 2 and 3  $\mu\text{s}$  after the start of exposure. For a given camera, the delay in the rise of IntEn will be consistent from frame to frame. (The size of the delay will vary slightly from camera to camera, but will always be in the 2 to 3  $\mu\text{s}$  range.)
- The actual length of exposure will be equal to the programmed exposure time plus 4  $\mu\text{s}$ .

To know when frame transfer to the buffer is taking place, the user must monitor the integrate enabled signal. The frame transfer time period begins on the falling edge of the integrate enabled signal and lasts for 11.7 ms.

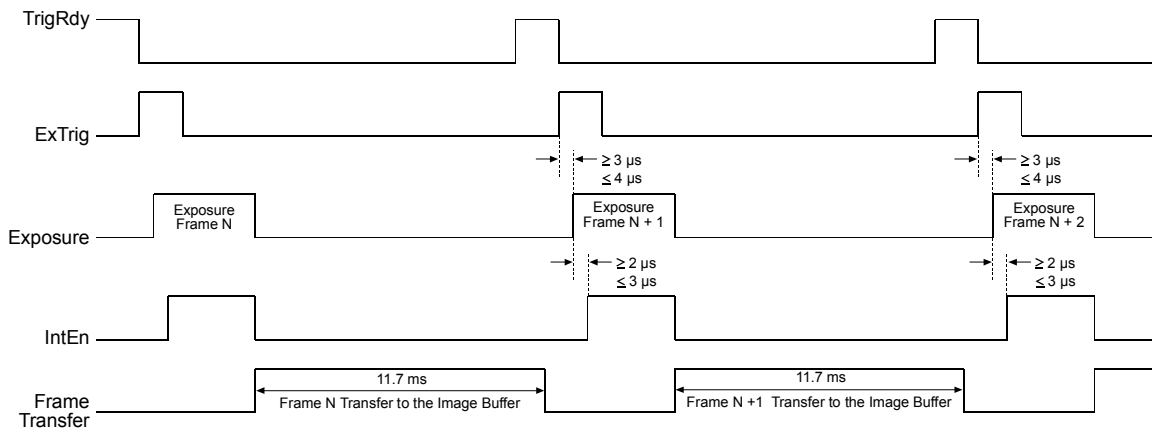

TIMING CHARTS ARE NOT DRAWN TO SCALE

Figure 3-3: Exposure Start After Frame Transfer

	<p>The camera can be programmed to react to a rising edge of the ExTrig signal or to a falling edge of the ExTrig signal. We <b>strongly</b> recommend that you program the camera to react to the rising edge of the signal (i.e., active high).</p> <p>If falling edge triggering is used, the time between the falling edge of the ExTrig signal and the actual start of exposure is excessively long (at least 90 <math>\mu\text{s}</math>). This occurs due to the characteristics of the opto-coupler on the camera's ExTrig input.</p>
---	---


## Case 2 - Exposure Start When the Camera is Transferring a Frame

After each exposure is complete, there is a time period of 11.7 ms. during which the captured frame is transferred from the CCD sensor to the camera's image buffer.

If the ExTrig signal rises during this time period as shown in Figure 3-4:

- The start of exposure will occur between 3  $\mu$ s and 51  $\mu$ s after the rise of ExTrig. The delay in the start of exposure will vary from frame to frame but will always fall in the 3 to 51  $\mu$ s range.<sup>1</sup>
- The IntEn signal will rise between 2 and 3  $\mu$ s after the start of exposure. For a given camera, the delay in the rise of IntEn will be consistent from frame to frame. (The size of the delay will vary slightly from camera to camera, but will always be in the 2 to 3  $\mu$ s range.)
- The actual length of exposure will be equal to the programmed exposure time plus 4  $\mu$ s.

To know when frame transfer to the buffer is taking place, the user must monitor the integrate enabled signal. The frame transfer time period begins on the falling edge of the integrate enabled signal and lasts for 11.7 ms.

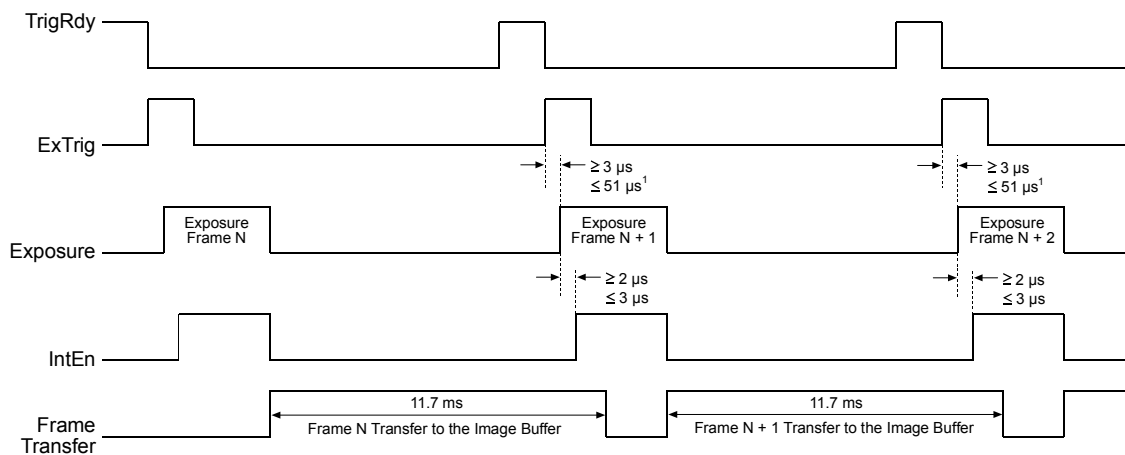


TIMING CHARTS ARE NOT DRAWN TO SCALE


Figure 3-4: Exposure Start During Frame Transfer

<sup>1</sup> This variability in the start of exposure is commonly referred to as an exposure start jitter. It occurs because when the camera is transferring an image, exposure can only start at certain fixed points during the frame transfer process. If an exposure is triggered when the transfer process is very near to one of these fixed points, the exposure start delay can be as little as 3  $\mu$ s. If an exposure is triggered when the transfer process is very far from one of these fixed points, the start delay can be as much as 51  $\mu$ s.

If you need very close control of exposure start time, you should trigger exposure start when the camera is not transferring a frame as shown on page 3-6.

	<p>The camera can be programmed to react to a rising edge of the ExTrig signal or to a falling edge of the ExTrig signal. We <b>strongly</b> recommend that you program the camera to react to the rising edge of the signal (i.e., active high).</p> <p>If falling edge triggering is used, the time between the falling edge of the ExTrig signal and the start of exposure will be excessively long (at least 90 <math>\mu</math>s). This occurs due to the characteristics of the opto-coupler on the camera's ExTrig input.</p>
---	--

### 3.3 Trigger Ready Signal

	<p>The trigger ready signal is not defined in the 1394 Trade Association Digital Camera Specification. Trigger ready is a patented feature of Basler cameras.</p>
---	---

One possible way to control the camera is to perform an exposure and to wait until transmission of the captured frame from the camera to the frame grabber is complete before beginning the next exposure. This situation is illustrated in Figure 3-5.

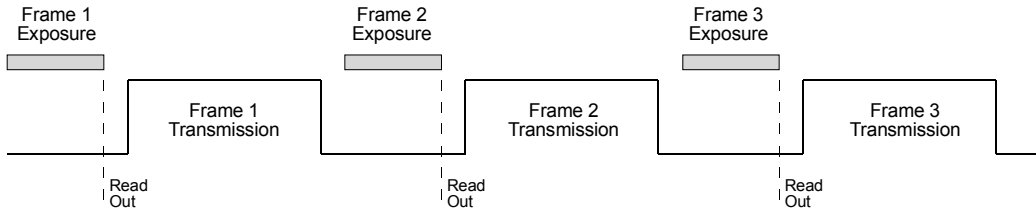


Figure 3-5: Exposure Between Frame Transmissions

While the method of control shown above may be useful in many situations, it is not workable if your objective is to achieve maximum frame rate. To achieve maximum frame rate, most of the exposure for each frame must take place while the previous frame is being transmitted out of the camera. This situation is illustrated in Figure 3-6.

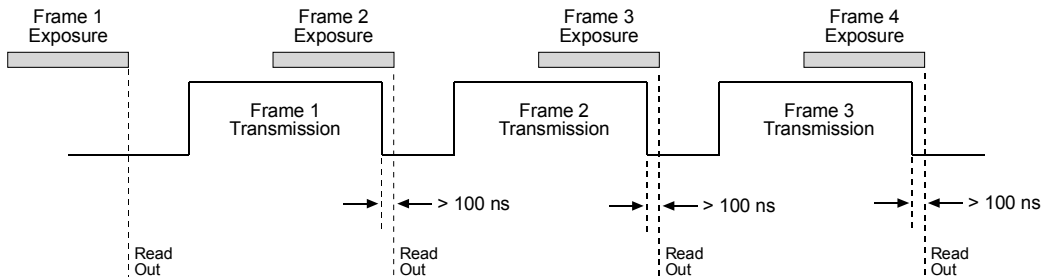


Figure 3-6: Exposure During Frame Transmission

A point to notice when looking at Figure 3-6 is that **exposure must not end during frame transmission**; the end of exposure for the next frame must occur at least 100 ns after transmission of the current frame is complete. (For example, the exposure for frame two must end at least 100 ns after frame one transfer is complete.)

This situation poses a problem when you are controlling exposure with an ExTrig signal, that is, how will you know when to toggle the ExTrig signal and begin exposure so that the exposure will end at least 100 ns after the last frame transmission is complete.

This problem is addressed by the trigger ready signal. The trigger ready signal will go high at the earliest moment that you can begin exposure and still be sure that the exposure will end at least 100 ns after the transmission of the last frame.



For better understanding of the use of trigger ready signal, consider an example. Assume that you will set the exposure time to 20  $\mu\text{s}$  for each exposure and that you want to begin exposing as early as possible during transfer of the previous frame. In this case, the trigger ready signal will go high 20  $\mu\text{s}$  before the earliest allowable end of exposure. This situation is illustrated in Figure 3-7.

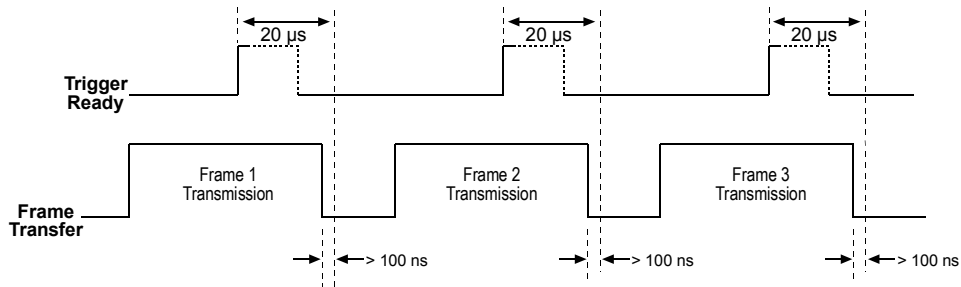


Figure 3-7: Trigger Ready Signal

If you monitor the trigger ready signal, and toggle ExTrig when the trigger ready signal goes high, the exposure will end at the earliest allowable point. Figure 3-8 illustrates how the ExTrig signal should toggle if you want your 20  $\mu\text{s}$  exposure time to overlap frame transfer as much as possible. (Note that the trigger ready signal goes low when exposure starts.)

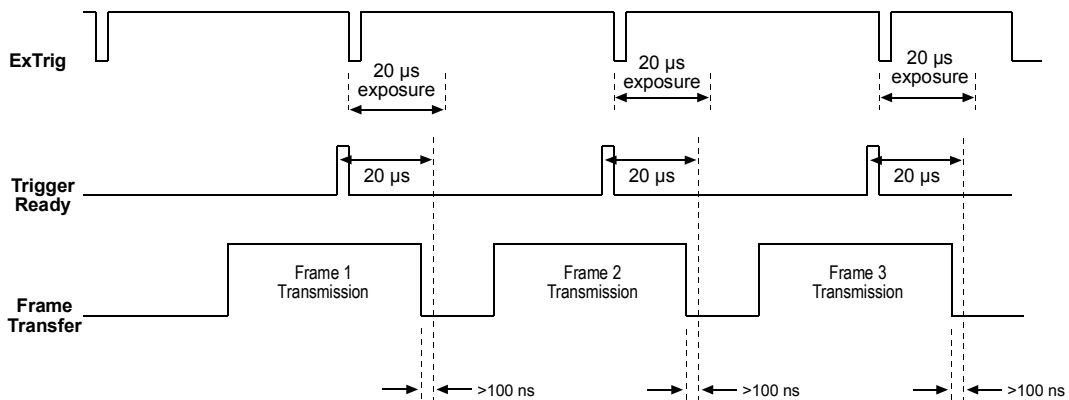


Figure 3-8: Using Trigger Ready to Time the ExTrig Signal

### 3.3.1 What Happens if you Toggle ExTrig while TrigRdy is Low

As explained above, the trigger ready signal is designed to ensure that exposure ends after the previous frame transmission is complete. But what happens if you toggle ExTrig while the trigger ready signal is low. In this case, the camera will remember that ExTrig has toggled and will delay the start of exposure until the trigger ready signal goes high.

## 3.4 Integrate Enabled Signal

The Integrate Enabled (IntEn) signal goes high when exposure begins and goes low when exposure ends.

This signal can be used as a flash trigger and is also useful when you are operating a system where either the camera or the object being imaged is movable. For example, assume that the camera is mounted on an arm mechanism and that the mechanism can be used to move the camera to view different portions of a product assembly. Typically, you do not want the camera to move during exposure. In this case, you can monitor the IntEn signal to know exactly when exposure is taking place and thus know when to avoid moving the camera.

## 3.5 Version Information

A301f cameras include an advanced feature called “Extended Versions” that allows the user to read the version numbers of the firmware and several other elements in the camera. The version numbers are contained in an ASCII character string located in the EXTENDED\_VERSIONS advanced features register. The extended versions register and the layout of the information contained in the character string are described in detail on page 4-9.



Extended versions is an advanced feature and may not be supported by the camera driver software that you are using.

## 3.6 Gain and Brightness

The major components in the camera electronics include: a CCD sensor, two VGC (Variable Gain Controls), and two ADCs (Analog to Digital Converters). The pixels in the CCD sensor output voltage signals when they are exposed to light. These voltages are amplified by the VGCs and transferred to the ADCs which convert the voltages to digital output signals.

Two parameters, gain and brightness are associated with each VGC. As shown in Figures 3-9 and 3-10, increasing or decreasing the gain increases or decreases the amplitude of the signal that is input to the ADC. Increasing or decreasing the brightness moves the signal up or down the measurement scale but does not change the signal amplitude.

For most applications, black should have a gray value of 1 and white should have a gray value of 254. Attempt to achieve this by varying exposure and illumination rather than changing the camera's gain. The default gain is the optimal operating point (minimum noise) and should be used if possible.

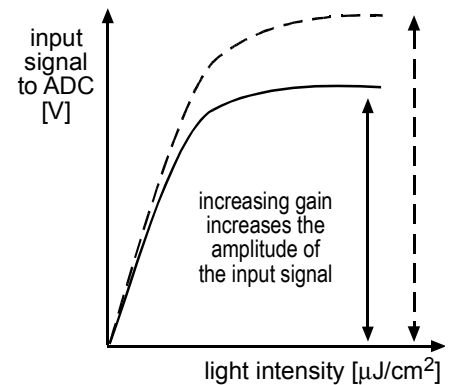


Figure 3-9: Gain

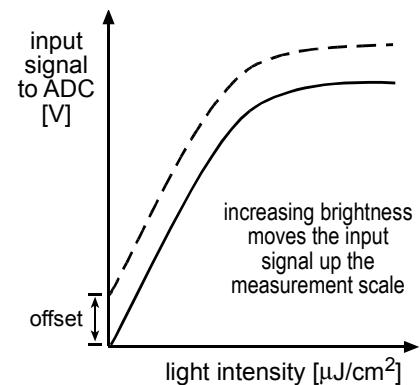


Figure 3-10: Brightness



Because increasing gain increases both signal and noise, the signal to noise ratio does not change significantly when gain is increased.

### 3.6.1 Setting Gain

Normally, the VGCs in the camera should be set so that the linear output range of the CCD sensor maps directly to the input range of the ADCs. In this situation, a gray value of 0 is produced when the pixels are exposed to no light and a gray value of 255 is produced when the pixels are exposed to bright light. This condition is defined as 0 dB of system gain for the camera.

Increasing the gain to more than 0 dB maps a smaller portion of the sensor's linear output range to the ADC's input. This can be useful when at your brightest exposure, a gray value of less than 255 is achieved. For example, if gray values no higher than 127 were achieved with bright light, you could increase the gain to 6 dB (an amplification factor of 2) and see an increase in gray values to 254.

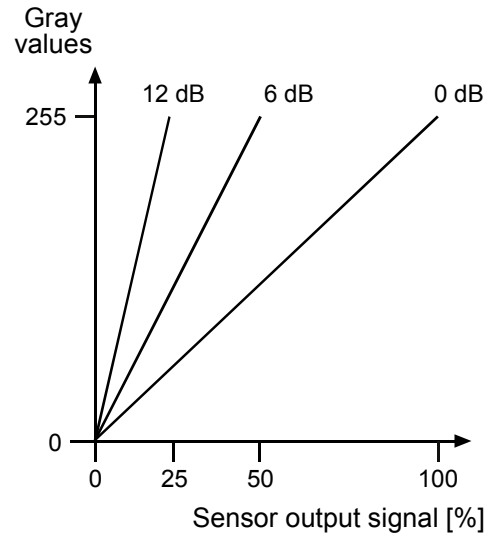


Figure 3-11: Gain Settings in dB

Normally, the camera's gain setting is determined by the value field in the GAIN control register. The value can range from 0 to 213 (0x000 to 0x0D5). These settings result in the following amplification:

Decimal	Hexadecimal	dB	Amplification Factor
0	0x000	0	x 1
213	0x0D5	20	x 10

Table 3-1: Gain Settings

For each increase of one in the setting, the gain will increase by 0.094 dB. To determine the dB of amplification that you will see for a particular setting, multiply the setting by 0.094. For example, if the setting of the value field in the GAIN control register is 125 (decimal), the gain will be:

$$125 \times 0.094 = 11.8 \text{ dB.}$$

### Automatic Gain Balancing

Internally, A301f cameras process odd and even lines separately in two different data channels (see Figure 3-1). Consequently, gain must be adjusted separately for the odd lines and the even lines. Due to variations in the camera electronics, the gain needed on the odd channel to correctly map the output from the VGC to the input of the ADC may be different from the gain needed on the even channel. Gain balance between the odd and even channels is important to maintain uniform output data with minimal gray value difference between odd and even lines.

When each A301f camera leaves the Basler factory, it undergoes a calibration procedure. As part of the procedure, a set of gain reference values are determined and stored in the camera. During normal operation, the camera uses the reference values to keep the odd and even channels in balance. Whenever the value field in the camera's GAIN control register is changed, the camera will automatically make any adjustments necessary to achieve the desired gain while keep the channels in balance.

### 3.6.2 Setting Brightness

Normally, the camera's brightness is changed by setting the value field in the BRIGHTNESS control register. The setting can range on a decimal scale from 0 to 511 (0x000 to 0x1FF). An increase of 8 (decimal) in the setting will result in a positive offset of 1 in the digital values output by the camera.

Internally, **A301f** cameras process odd and even lines separately in two different data channels (see Figure 3-1). Whenever the value field in the camera's BRIGHTNESS control register is changed, the camera will automatically apply the new setting to both the odd line channel and the even line channel.

### 3.7 Area of Interest (AOI)

The area of interest (AOI) feature allows you to specify a portion of the CCD array and during operation, only the pixel information from the specified portion of the array is transmitted out of the camera.

The area of interest is referenced to the top left corner of the CCD array. The top left corner is designated as column 0 and row 0 as shown in Figure 3-12.

The location and size of the area of interest is defined by declaring a left-most column, a width, a top row and a height. Reference position is the top left corner of the image. For example, suppose that you specify the left column as 10, the width as 16, the top row as 4 and the height as 10. The area of the array that is bounded by these settings is shown in Figure 3-12.

The camera will only transmit pixel data from within the area defined by your settings. Information from the pixels outside of the area of interest is discarded.

On **A301f** cameras, the maximum allowed frame rate **does not** increase when the area of interest feature is used.

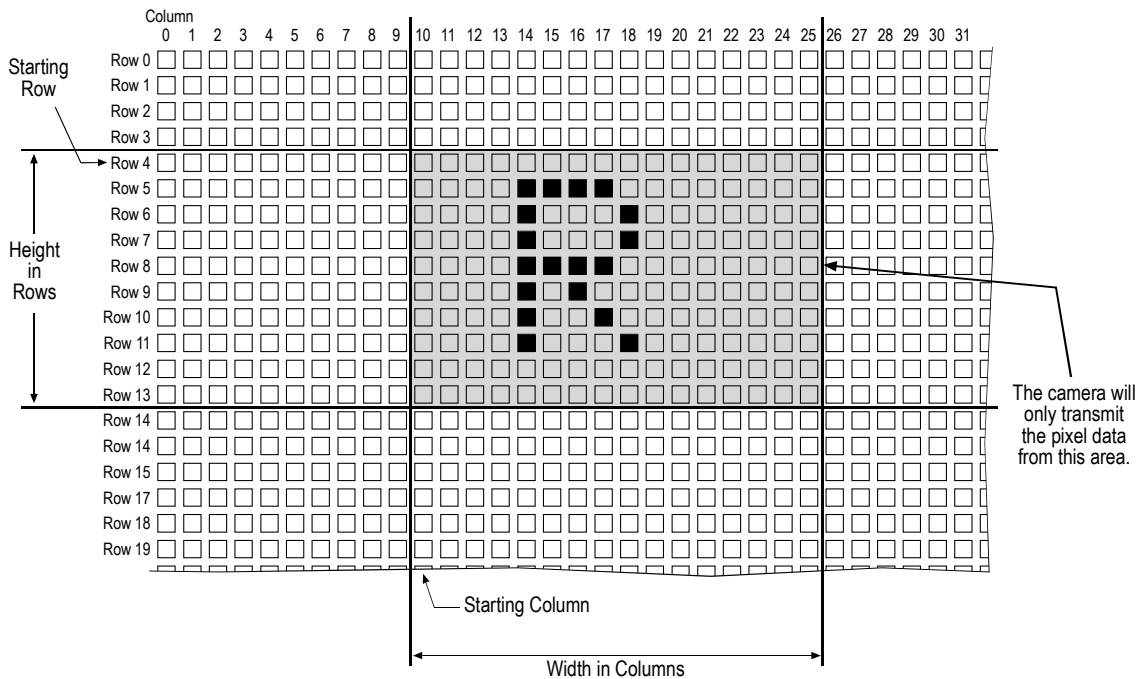


Figure 3-12: Area of Interest

The AOI feature is enabled by setting the `CUR_V_FORMAT` control register to 7 and the `CUR_V_MODE` control register to 0. The location of the area of interest is defined by setting a value for the “left” field and a value for the “top” field within the `IMAGE_POSITION` control register that has been established for `Format_7, Mode_0`. The size of the area of interest is defined by setting a value for the “width” field and a value for the “height” field within the `IMAGE_SIZE` control register that has been established for `Format_7, Mode_0`.

To use the entire CCD array on the **A301f**, set the value for “left” to 0, the value for “top” to 0, the value for “width” to 658 and the value for “height” to 494.



On **A301f** and **A301fc** camera:

the setting for *Left* must be 0 or an even number.

the setting for *Top* must be 0 or an even number.

the setting for *Width* must be an even number.

the setting for *Height* must be an even number.

On all cameras, the sum of the setting for *Left* plus the setting for *Width* must not exceed 658.

On all cameras, the sum of the setting for *Top* plus the setting for *Height* must not exceed 494.

On all cameras, the AOI must contain at least 7680 pixels (width x height).

## 3.8 Test Images

A301f cameras include a test image mode as an advanced feature. The test image mode is used to check the camera's basic functionality and its ability to transmit an image via the video data cable. The test image mode can be used for service purposes and for failure diagnostics. In test mode, the image is generated with a software program and the camera's digital devices and does not use the optics, CCD sensor, VGC, or ADC. Three different test images are available.

The test images are enabled by setting the ImageOn field of the TEST\_IMAGE advanced features register (see page 4-10). To enable test image one, set the field to 1, to enable test image two, set the field to 2, to enable test image three, set the field to 3. To disable the test image feature, set the field to 0.

When a test image is active, the gain, brightness, and exposure time have no effect on the image.

### Test Image one

As shown in Figure 3-13, test image one consists of lines with several gray scale gradients ranging from 0 to 255. If the camera is operating at full 658 x 494 resolution when the test images are generated:

- the first line starts with a gray value of 0 for the first pixel,
- the second line starts with a value of 1 for the first pixel,
- the third line starts with a gray value of 2 for the first pixel, and so on.

(If the camera is operating at a lower resolution when the test images are generated, the basic appearance of the test pattern will be similar to Figure 3-13, but the starting pixel values on each line will not be as described above.)

The mathematical expression for test image one is:

$$\text{grayvalue} = [x + y] \text{ MOD} 256$$

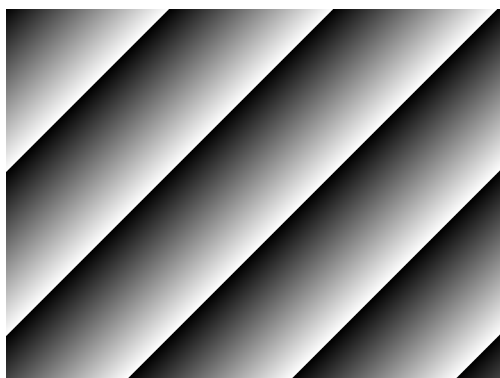


Figure 3-13: Test Image One



## Test Image Two


Test image two is similar to test image one but it is not stationary. The image moves by 1 pixel from right to left whenever a one-shot, multi-shot or continuous-shot command signal is sent to the camera.



Test images are an advanced feature and may not be supported by the camera driver-software that you are using.

### 3.9 Color Creation in the A301fc

The CCD sensor used in the **A301fc** is equipped with an additive color separation filter known as a Bayer filter. With the Bayer filter, each individual pixel is covered by a micro-lens which allows light of only one color to strike the pixel. The pattern of the Bayer filter used in the **A301fc** is shown in Figure 3-14. As the figure illustrates, within each block of four pixels, one pixel sees only red light, one sees only blue light, and two pixels see only green light. (This combination mimics the human eye’s sensitivity to color.)

 The **A301fc** color camera outputs single color raw data for each pixel. This allows the camera user to perform color interpolations or other processing algorithms on pixel data that has not been manipulated.

Since each individual pixel gathers information for only one color, an interpolation must be made from the surrounding pixels to get full RGB information for an individual pixel. A DLL that can be used to convert the output from the to full RGB color is available through Balsler support.

#### 3.9.1 Integrated IR Cut Filter on C-Mount Equipped Cameras

**A301fc** cameras equipped with a C-mount lens adapter contain an IR cut filter inside of the camera. The location of the filter limits the thread length of the lens that is used on the camera. See Section 5.5 for more details on lens thread length.

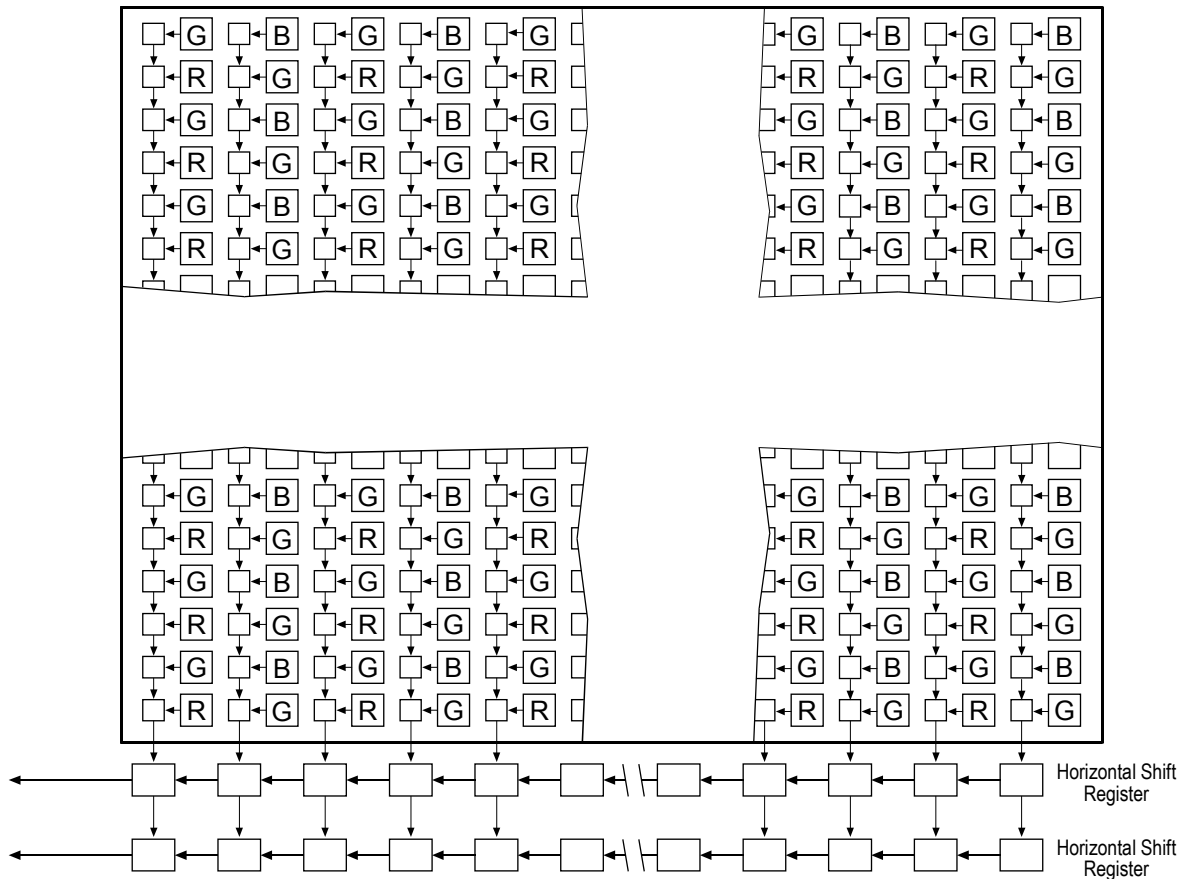


Figure 3-14: Bayer Filter Pattern on the **A301fc**

## 3.10 Available Video Formats, Modes, & Frame Rates

### 3.10.1 Standard Formats, Modes, and Frame Rates

The following standard video formats, modes, and frame rates are available on the **A301f** and on the **A301fc**:

Format\_0, Mode\_5, FrameRate\_1 (Mono, 8 bits/pixel, 640 x 480 pixels at 3.75 fps)

Format\_0, Mode\_5, FrameRate\_2 (Mono, 8 bits/pixel, 640 x 480 pixels at 7.5 fps)

Format\_0, Mode\_5, FrameRate\_3 (Mono, 8 bits/pixel, 640 x 480 pixels at 15 fps)

Format\_0, Mode\_5, FrameRate\_4 (Mono, 8 bits/pixel, 640 x 480 pixels at 30 fps)

Format\_0, Mode\_5, FrameRate\_5 (Mono, 8 bits/pixel, 640 x 480 pixels at 60 fps)



The **A301fc** color camera outputs single color raw data for each pixel. It does not output a Y component (see Section 3.9).

### 3.10.2 Customizable Format and Mode

The following customizable video format and mode is available on the **A301f** and on the **A301fc**:

#### Format\_7, Mode\_0

Format\_7, Mode\_0 is available on the **A301f** and on the **A301fc**. This mode is used to enable and set up the area of interest (AOI) feature described in Section 3.7. When the camera is operating in Format\_7, Mode\_0, the frame rate can be adjusted by setting the number of bytes that are transmitted in each packet. The number of bytes per packet is set using the BytePerPacket field of the BYTE\_PER\_PACKET control register that has been established for Format\_7, Mode\_0.

The value that appears in the MaxBytePerPacket field of the PACKET\_PARA\_INQ control register will show the maximum allowed setting for the bytes per packet. When the bytes per packet is set to the maximum, the camera will transmit frames at its maximum specified rate. By default, the bytes per packet are set to the maximum.

If you set the bytes per packet to a value lower than the maximum allowed, the camera will transmit frames at a lower rate. The rate is calculated by the formula:

$$\text{Frames/Sec.} = \frac{1,000,000 \mu\text{s}}{\text{Packets per Frame} \times 125 \mu\text{s}}$$

When you set the bytes per packet, keep in mind that the camera's link layer controller can handle a maximum of 4095 packets per frame. If you set the bytes per packet too low, the number of packets per frame will exceed this limit and the camera will not transmit frames properly.



When the camera is operating in Format\_7, Mode\_0, the CUR\_V\_FRAME\_RATE control register is not used and has no effect on camera operation.



# 4 Configuring the Camera

The **A301f** is configured by setting status and control registers as described in version 1.20 of the “1394-Based Digital Camera Specification” issued by the 1394 Trade Association. (The specification is available at the 1394 Trade Association’s web site: [www.1394ta.org](http://www.1394ta.org).)

If you are creating your own driver to operate the camera, Sections 4.1 through 4.5 provide the basic information that you will need about the registers implemented in the camera along with some information about read/write capabilities.

A fully functional driver is available for Basler IEEE 1394 cameras such as the **A301f**. The Basler BCAM 1394 Driver includes an API that allows a C++ programmer to easily integrate camera configuration and operating functions into your system control software. The driver also includes a Windows® based viewer program that provides camera users with quick and simple tools for changing camera settings and viewing captured images.

The BCAM 1394 Driver is supplied with comprehensive documentation including a programmer’s guide and code samples. For more information, visit the Basler web site at: [www.basler-vc.com](http://www.basler-vc.com).

## 4.1 Block Read and Write Capabilities

The camera supports block reads but not block writes. Block writes are rejected by the camera.



Do not block read registers that are not present. Use the inquiry registers to find out what registers are present and see the tables on the following pages which list all implemented registers.

## 4.2 Register Write Order

Whenever the camera is powered on or is initialized, the registers must be written in the following sequence:

INITIALIZE (optional)

ISO\_Channel

CUR\_V\_FORMAT

CUR\_V\_MODE

IMAGE\_POSITION (Only when using Format 7)

IMAGE\_SIZE (Only when using Format 7)

BYTE\_PER\_PACKET (Only when using Format 7)

CUR\_V\_FRAME\_RATE (For formats other than Format 7)

TRIGGER\_MODE

All other registers in any order

ONE\_SHOT, MULTI\_SHOT, or CONTINUOUS\_SHOT

## 4.3 Changing the Video Format setting

Whenever the Current Video Format setting is changed, you must also do the following:

If the CUR\_V\_FORMAT is changed from Format 7 to Format 0, you must also write the CUR\_V\_MODE and the CUR\_V\_FRM\_RATE.

If the CUR\_V\_FORMAT is changed from Format 0 to Format 7, you must also write the CUR\_V\_MODE, the IMAGE\_POSITION, the IMAGE\_SIZE and the BYTES\_PER\_PACKET. (See Section 3.10.2 for more information on setting the Bytes per Packet in Format 7).

## 4.4 Implemented Registers

A list of all registers implemented in A301f appears below.

The base address for all camera control registers is:

Bus\_ID, Node\_ID, FFFF F0F0 0000

This address is contained in the configuration ROM in the camera unit directory. The offset field in each of the tables is the byte offset from the above base address.

### Camera Initialize Register

Offset	Name	Notes
000h	INITIALIZE	

### Inquiry Register for Video Format

Offset	Name	Notes
100h	V_FORMAT_INQ	

### Inquiry Registers for Video Mode

Offset	Name	Notes
180h	V_MODE_INQ_0 (Format 0)	
184h	V_MODE_INQ_1 (Format 1)	
188h	V_MODE_INQ_2 (Format 2)	
18Ch ... 194h	Reserved	
198h	V_MODE_INQ_6 (Format 6)	
19Ch	V_MODE_INQ_7 (Format 7)	

**Inquiry Registers for Video Frame Rate and the Base Address of the Video Mode Command and Status Registers for the Scalable Image Size Format**

Offset	Name	Notes
200h	V_RATE_INQ_0_0 (Format_0, Mode_0)	
204h	V_RATE_INQ_0_1 (Format_0, Mode_1)	
208h	V_RATE_INQ_0_2 (Format_0, Mode_2)	
20Ch	V_RATE_INQ_0_3 (Format_0, Mode_3)	
210h	V_RATE_INQ_0_4 (Format_0, Mode_4)	
214h	V_RATE_INQ_0_5 (Format_0, Mode_5)	
218h ... 21Fh	Reserved	
220h	V_RATE_INQ_1_0 (Format_1, Mode_0)	
224h	V_RATE_INQ_1_1 (Format_1, Mode_1)	
228h	V_RATE_INQ_1_2 (Format_1, Mode_2)	
22Ch	V_RATE_INQ_1_3 (Format_1, Mode_3)	
230h	V_RATE_INQ_1_4 (Format_1, Mode_4)	
234h	V_RATE_INQ_1_5 (Format_1, Mode_5)	
238h ... 23Fh	Reserved	
240h	V_RATE_INQ_2_0 (Format_2, Mode_0)	
244h	V_RATE_INQ_2_1 (Format_2, Mode_1)	
248h	V_RATE_INQ_2_2 (Format_2, Mode_2)	
2E0h	V_CSR_INQ_7_0	
2E4h	V_CSR_INQ_7_1	
2E8h	V_CSR_INQ_7_2	
2ECh	V_CSR_INQ_7_3	



**Inquiry Register for Basic Functions**

Offset	Name	Notes
400h	BASIC_FUNC_INQ	

**Inquiry Registers for Feature Presence**

Offset	Name	Notes
404h	Feature_Hi_Inq	
408h	Feature_Lo_Inq	
480h	Advanced_Feature_Inq	

**Inquiry Registers for Feature Elements**

Offset	Name	Notes
500h	BRIGHTNESS_INQ	
504h	AUTO_EXPOSURE_INQ	
508h	SHARPNESS_INQ	
50Ch	WHITE_BAL_INQ	
510h	HUE_INQ	
514h	SATURATION_INQ	
518h	GAMMA_INQ	
51Ch	SHUTTER_INQ	
520h	GAIN_INQ	
524h	IRIS_INQ	
528h	FOCUS_INQ	
52Ch	TEMPERATURE_INQ	
530h	TRIGGER_INQ	
580h	ZOOM_INQ	
584h	PAN_INQ	
588h	TILT_INQ	
58Ch	OPTICAL_FILTER_INQ	
5C0h	CAPTURE_SIZE_INQ	
5C4h	CAPTURE_QUALITY_INQ	

**Status and Control Registers for the Camera**

Offset	Name	Notes
600h	CUR_V_FRAME_RATE	
604h	CUR_V_MODE	
608h	CUR_V_FORMAT	
60Ch	ISO_CHANNEL	
610h	Camera_Power	Has no effect
614h	ISO_EN Continuous Shot	
618h	Memory_Save	Has no effect
61Ch	One_Shot / Multi_Shot	
620h	Mem_Save_Ch	Has no effect
624h	Cur_Mem_Ch	Has no effect

**Status and Control Registers for Features**

Offset	Name	Notes
800h	BRIGHTNESS	
804h	AUTO_EXPOSURE	Has no effect
808h	SHARPNESS	Has no effect
80Ch	WHITE_BALANCE	Has no effect.
810h	HUE	Has no effect
814h	SATURATION	Has no effect
818h	GAMMA	Has no effect
81Ch	SHUTTER	Exposure time = (shutter value + 1) x 20 $\mu$ s
820h	GAIN	
824h	IRIS	Has no effect
828h	FOCUS	Has no effect
82Ch	TEMPERATURE	Has no effect
830h	TRIGGER_MODE	Only trigger mode 0 is available. We <b>strongly</b> recommend that the trigger input polarity be set for high active (1).

## Video Mode Control and Status Registers for Format\_7

The base address for each Format\_7, Mode\_0 camera control register is:

Bus\_ID, Node\_ID, FFFF F1F0 0000


This address is contained in the Format\_7 section of the “Inquiry Registers for Video Frame Rate and Base Address of the Video Mode Command and Status Registers for the Scalable Image Size Format.” A register has been prepared for each video mode that is Format\_7, Mode\_x.

The offset field in each of the tables is the byte offset from the above base address.

### Video Mode Control and Status Registers for Format\_7, Mode\_0

Offset	Name	Notes
000h	MAX_IMAGE_SIZE_INQ	
004h	UNIT_SIZE_INQ	
008h	IMAGE_POSITION	
00Ch	IMAGE_SIZE	
010h	COLOR_CODING_ID	
014h	COLOR_CODING_INQ	
034h	PIXEL_NUMBER_INQ	
038h	TOTAL_BYTES_HI_INQ	
03Ch	TOTAL_BYTES_LO_INQ	
040h	PACKET_PARA_INQ	
044h	BYTE_PER_PACKET	TOTAL_BYTES_LO_INQ / BYTE_PER_PACKET must be $\leq 4095$ .

## 4.5 Advanced Features

	The advanced features control and status registers are vendor unique and are subject to change.
---	---

### 4.5.1 Advanced Features Access Register

The base address for the Advanced Features Access register is:

Bus\_ID, Node\_ID, FFFF F2F0 0000

This address is contained in the Advanced\_Feature\_Inq register of the “Inquiry register for feature presence” section.

The offset field in each of the tables is the byte offset from the above base address.

#### Advanced Features Access Register

Offset	Name	Notes
000h	ADV_FEATURE_ACCESS	

### 4.5.2 Advanced Features Registers

The base address for the advanced features registers is:

Bus\_ID, Node\_ID, FFFF F2F0 0000

The offset field in each of the tables is the byte offset from the above base address.

#### Inquiry Register for Extended Version Information

Offset	Name	Field	Bit	Description
1010h	EXTD_VERSIONS_INQ	Presence (Read only)	[0]	Presence of this feature
		---	[1..7]	Reserved
		Length (Read only)	[8..15]	Specifies the length in quadlets of the “String” field in the Version Information register (see below).
		---	[16..31]	Reserved

### Extended Versions Information Register

Offset	Name	Field	Bit	Description
1014h	EXTD_VERSIONS	String (Read only)	[n Bytes]	An ASCII character string that includes the software version numbers for the camera. The length of this string field is equal to the number of quadlets given in the "Length" field of the Inquiry Register for Version Information (see page 4-8).

The layout of the information in the string field of the Extended Version Information register is as follows:

*aaaa,bbbb-cc,dddd-ee,fff-gg*

*aaaa* = the overall version number of the camera

*bbbb* = the firmware version for microcontroller 1

*cc* = the layout version for the registers accessible via the 1394 bus

*dddd* = the FPGA firmware version

*ee* = the layout version for the registers in the FPGA

*fff* = the firmware version for microcontroller 2

*gg* = the layout version of the registers in microcontroller 2

If the string does not fill the entire allocated field length, it will be padded with 0x00 at the end of the string.

**Status and Control Register for Test Images**

This advanced features register can be used to control the operation of the camera's test image feature (see Section 3.8).

Offset	Name	Field	Bit	Description
0098h	TEST_IMAGE	Presence_Inq (Read only)	[0]	Presence of this feature 0: N/A 1: Available
		---	[1..7]	Reserved
		Image_Inq_1 (Read only)	[8]	Presence of test image 1 0: N/A 1: Available
		Image_Inq_2 (Read only)	[9]	Presence of test image 2 0: N/A 1: Available
		Image_Inq_3 (Read only)	[10]	Presence of test image 3 0: N/A 1: Available
		Image_Inq_4 (Read only)	[11]	Presence of test image 4 0: N/A 1: Available
		Image_Inq_5 (Read only)	[12]	Presence of test image 5 0: N/A 1: Available
		Image_Inq_6 (Read only)	[13]	Presence of test image 6 0: N/A 1: Available
		Image_Inq_7 (Read only)	[14]	Presence of test image 7 0: N/A 1: Available
		---	[15]	Reserved
		Image_On (Read/write)	[16..18]	0: No test image active 1: Test image 1 active 2: Test image 2 active
		---	[19..31]	Reserved

# 5 Mechanical Considerations

## 5.1 Camera Dimensions

The camera housing for the **A301f** is manufactured with high precision. Planar, parallel, and angular sides guarantee precise mounting with high repeatability.

The **A301f** camera is equipped with four M4 mounting holes on the front and two M4 mounting holes on each side as indicated in Figure 5-1.

**Caution!**

To avoid collecting dust on the sensor, mount a lens on the camera immediately after unpacking it.

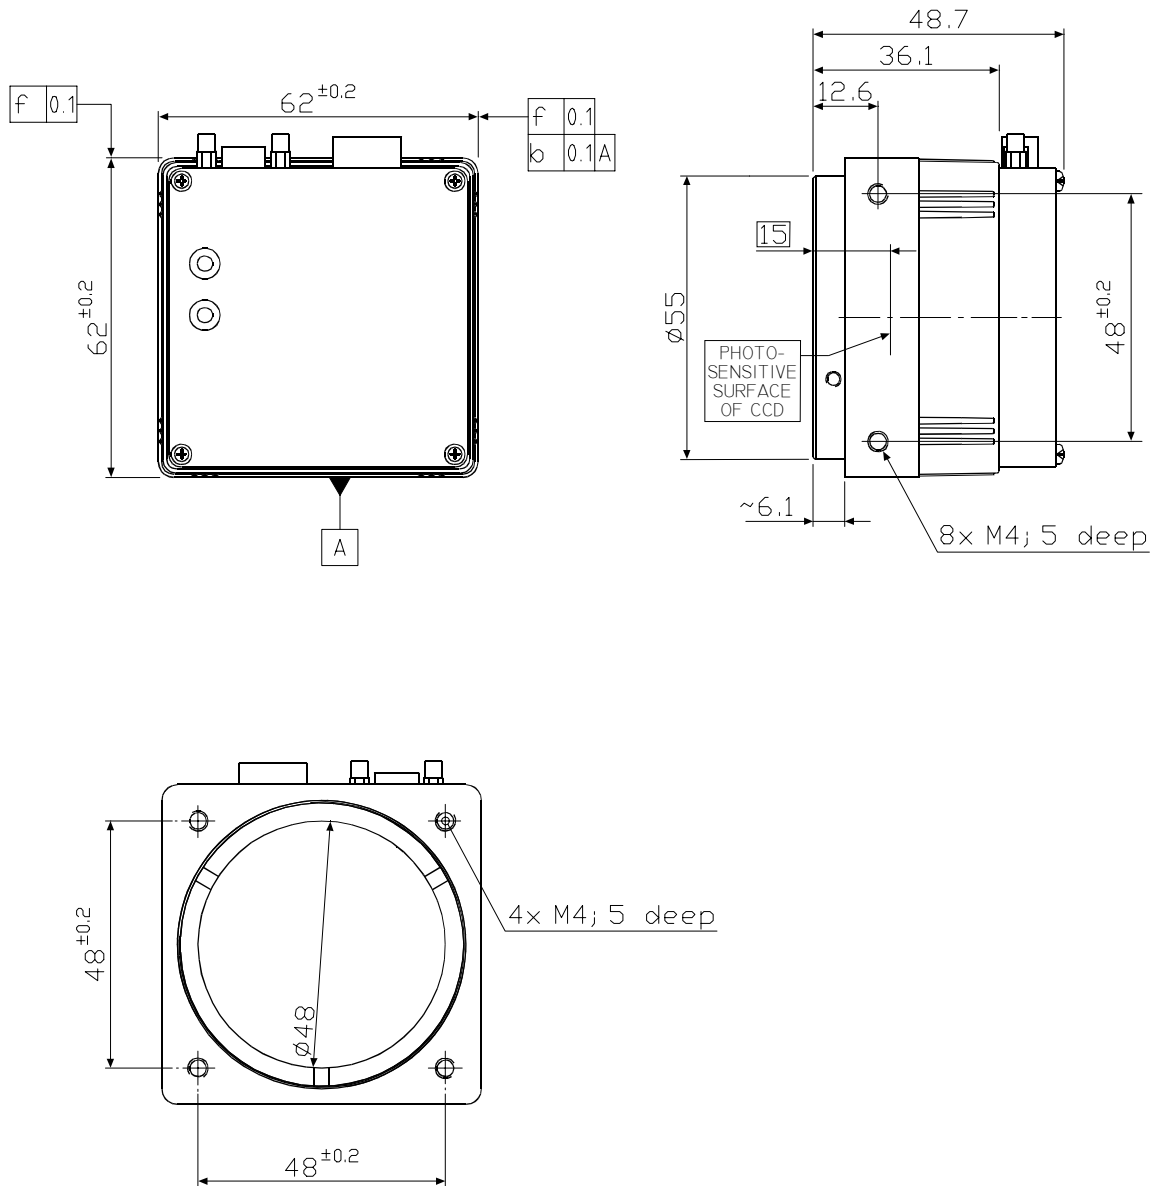


Figure 5-1: A301f Mechanical Dimensions (in mm)



## 5.2 C-Mount Adapter Dimensions

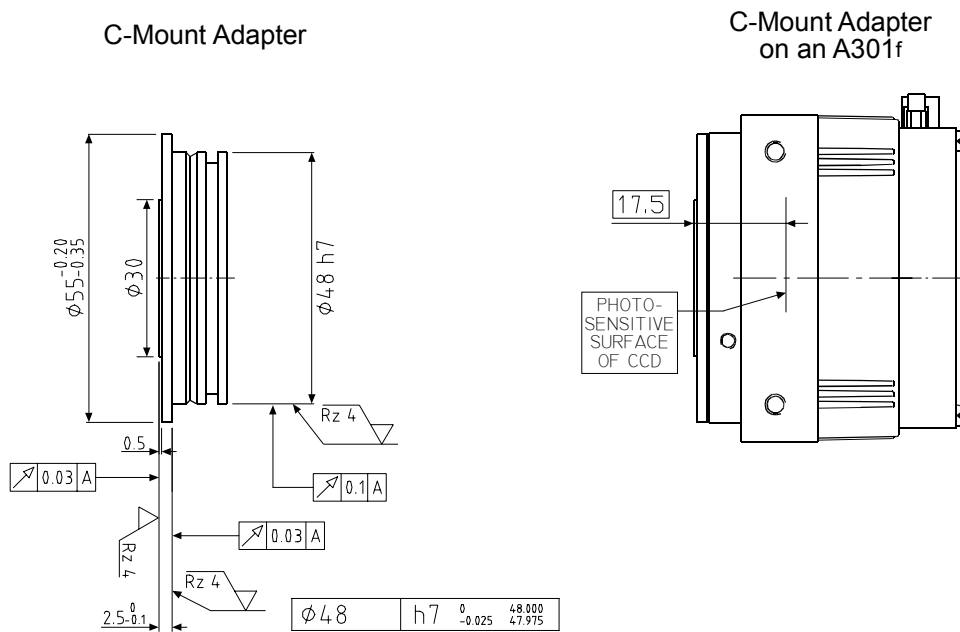


Figure 5-2: C-Mount Adapter Dimensions (in mm)

## 5.3 F-Mount Adapter Dimensions

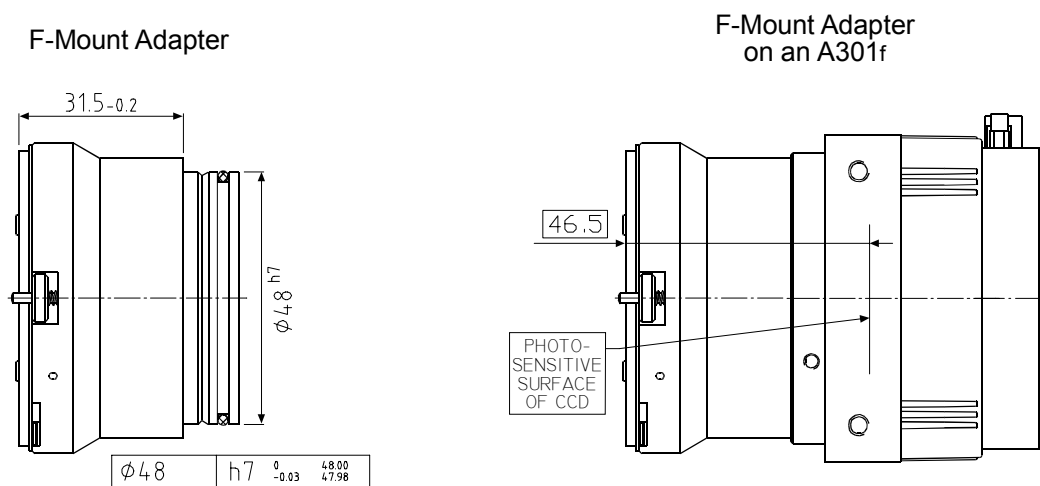


Figure 5-3: F-Mount Adapter Dimensions (in mm)

## 5.4 Positioning Accuracy of the Sensor Chip

On the **A301f**, the tolerance for the positioning of the sensor's image area to the camera housing is  $\pm 0.3$  mm in the horizontal and vertical directions. Rotational positioning accuracy is as shown in Figure 5-4. Reference position is the center of the camera housing.

Since the translational and rotational positioning tolerances depend on each other, the worst case of maximum rotational and horizontal/vertical mis-positioning cannot occur at the same time.

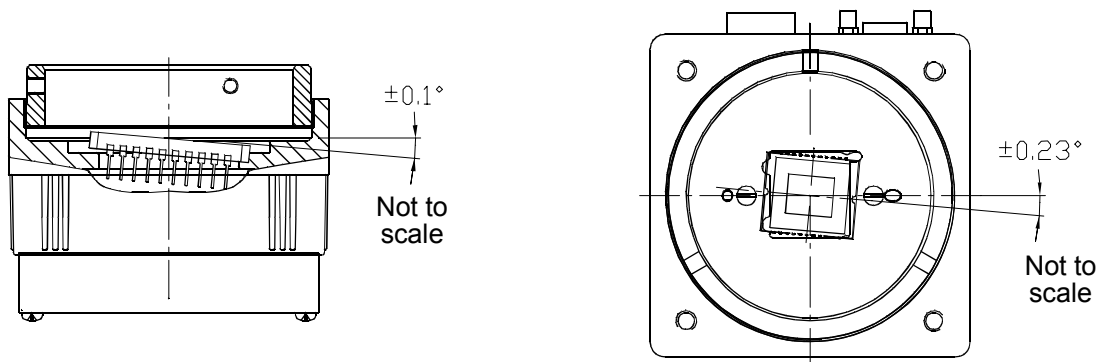


Figure 5-4: **A301f** Rotational Positioning Accuracy

## 5.5 Maximum Lens Thread Length on A301fc

	<p><b>Caution!</b></p> <p>When a C-mount lens is used on an <b>A301fc</b>, the thread length on the lens must be less than 7.5 mm. If a lens with a longer thread length is used, the camera will be damaged and will no longer operate.</p>
--	--

As shown in Figure 5.5, when a C-mount lens is used on an **A301fc**, the thread length on the lens must be less than 7.5 mm. **A301fc** cameras equipped with a C-mount lens adapter have an internal IR cut filter. If a lens with a longer thread length is used, the IR cut filter will be damaged or destroyed and the camera will no longer operate.

Cameras equipped with F-mount lens adapters do not have an internal IR cut filter.

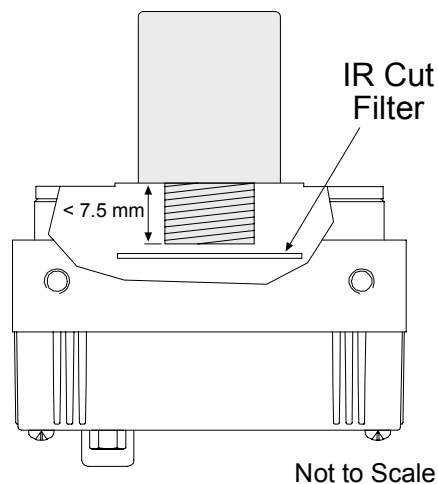


Figure 5-5: C-mount Lens Thread

# 6 Troubleshooting

## 6.1 Fault Finding Using Camera LEDs

### 6.1.1 Yellow LED

The A301f regularly performs self tests. Detected errors are signaled by blinking of the yellow LED on the back of the camera. The number of pulses indicate the detected error. If several error states are present, the yellow LED outputs the error codes in succession.

See Table 6-1 for the description of the pulses.

LED	Camera Condition
On Continuous	The camera is OK.
3 pulses	ExTrig has not changed state for 5 seconds or longer. If you are not using an ExTrig signal, this indication is normal and should be ignored.
6 pulses	The default camera configuration settings could not be loaded. Please contact Basler technical support.
8 pulses	The FPGA could not be configured. Please contact Basler technical support.

Table 6-1: LED States

### 6.1.2 Green LED

The green LED on the back of the camera is used to indicate whether power is being supplied to the camera. When the green LED is out, it means that no power is present. When the green LED is lit, it means that power is present.



Keep in mind that the circuit used to light the green LED does not perform a range check. If power to the camera is present but it is out of range, the LED may be lit but the camera will not operate properly.



---

## Revision History

Doc. ID Number	Date	Changes
DA00044801	26-October-2001	Initial release of manual covering prototype cameras only.
DA00044802	13-November-2001	Initial release of manual covering series production cameras.
DA00044803	20-May-2002	<p>Added the block diagram on page 3-2.</p> <p>Deleted descriptions of the extended shutter, extended gain, and extended brightness features from Chapter 3.</p> <p>Updated the exposure control information in Section 3.2.3 to specify the use of rising edge triggering.</p> <p>Corrected the timings and revised the timing charts in the recommended methods for exposure (Section 3.2.4).</p> <p>Updated Figure 3-12 in Section 3.7 and added information about the minimum AOI size to the note box.</p> <p>Corrected the description of test image one in Section 3.8.</p> <p>Corrected Figure 3-14 in Section 3.9.</p> <p>Added information about the BCAM Driver to page 4-1.</p> <p>Updated information about the advanced features registers in Section 4.5.</p>

---

---

# Index

## A

advanced features registers ..... 4-8-??  
anti-blooming ..... 1-2  
area of interest ..... 3-14

## B

block reads and writes ..... 4-2  
brightness ..... 3-11

## C

cable lengths ..... 1-2  
camera models ..... 1-1  
camera power ..... 2-6  
cleaning the camera and sensor ..... 1-5  
C-mount adapter ..... 5-3  
connections, general description ..... 2-1  
connector types ..... 2-3  
continuous-shot operation ..... 3-4, 3-5

## D

dimensions ..... 5-2, 5-3

## E

environmental requirements ..... 1-5  
exposure start  
    controlling via the 1394 interface ..... 3-3  
    controlling with an ExTrig signal ..... 3-4  
exposure time, setting ..... 3-3  
external trigger signal ..... 2-3

## F

fault finding  
    using camera LEDs ..... 6-1  
F-mount adapter ..... 5-3  
frame rate  
    nominal maximum rate ..... 1-2  
    standard frame rates ..... 3-19  
functional description ..... 3-1

## G

gain ..... 3-11  
gain balancing ..... 3-12

## H

housing size ..... 1-2  
humidity requirements ..... 1-5

## I

IEEE 1394 Device Information ..... 2-4  
input signals  
    external trigger ..... 2-3  
integrate enabled signal ..... 2-3, 3-10  
introduction ..... 1-1  
IR cut filter ..... 1-4, 5-4

## L

LEDs ..... 2-6, 6-1  
lens adapters ..... 1-2, 5-3  
lens thread length ..... 5-4

## M

mechanical considerations ..... 5-1  
models, camera ..... 1-1  
mounting facilities ..... 5-1  
multi-shot operation ..... 3-3, 3-5

## O

one-shot operation ..... 3-3, 3-4  
output signals  
    integrate enabled ..... 2-3  
    pixel data ..... 2-4  
    trigger ready ..... 2-3

## P

performance specifications ..... 1-2  
pin assignments ..... 2-2  
pixel data ..... 2-4  
pixel size ..... 1-2  
positioning accuracy of the sensor chip ..... 5-4  
power requirements ..... 1-2, 2-6  
precautions ..... 1-5

## R

register write order ..... 4-2  
registers implemented in the camera ..... 4-3-??

## S

sensor  
    anti-blooming ..... 1-2  
    pixel size ..... 1-2  
    size ..... 1-2  
    type ..... 1-2  
shock ..... 1-2  
spectral responsivity  
    color cameras ..... 1-4  
    monochrome cameras ..... 1-3

---

status LED	
green	2-6
yellow	2-6

## T

temperature requirements	1-5
test images	3-16
trigger ready signal	2-3, 3-8
troubleshooting	6-1

## V

ventilation requirements	1-5
version information	3-10
vibration	1-2
video data and control signals	2-3
video format	
changing the setting	4-2
video formats, modes, & frame rates	
customizable	3-19
standard	3-19
video output	1-2

## W

write order, register	4-2
-----------------------	-----