

# ATX-GPS Satellite Synchronizer

## Installation & Setup Guide

### Welcome

Lathem's ATX-GPS is a Global Positioning Satellite receiver that accesses the accurate date and time signal transmitted each second by 24 satellites in geosynchronous orbit around the globe.

The package includes an amplified GPS Antenna, which must be mounted out-doors or beneath a roof sky-light, facing skyward. An integrated cable links the Antenna to the ATX6.

The ATX-GPS receives its power from the ATX6 so there is no need for a Power Adapter.

#### ***The ATX-GPS package includes the following:***

- ATX-GPS Satellite Synchronizer
- Magnetic Base (Attached)
- 25' Cable (Attached)
- Antenna Mounting Bracket
- 2 #10 X 1 ½ Screws
- 2 #10 Wall Anchors
- P-Clip Cable fastener
- Installation and Setup Guide

#### ***Optional ATX-GPS Accessories:***

- GPS50X 50' Extension Cable with In-Line Coupler
- GPS100X 100' Extension Cable with In-Line Coupler

#### **ATX-GPS Specifications:**

- Size / Weight 3.39" Diameter / 11.7 oz.
- Power 6 to 40 Vdc unregulated, 100mA @ 6Vdc, 65mA @ 12Vdc, 28mA @ 40 Vdc




**LATHEM**

## Installing the ATX-GPS


Locate the antenna at the highest elevation possible, with a wide view of unobstructed, open sky. If possible, avoid mounting the antenna on the North side of a building, which might block exposure to satellites.

### Proper locations for antenna mounting:

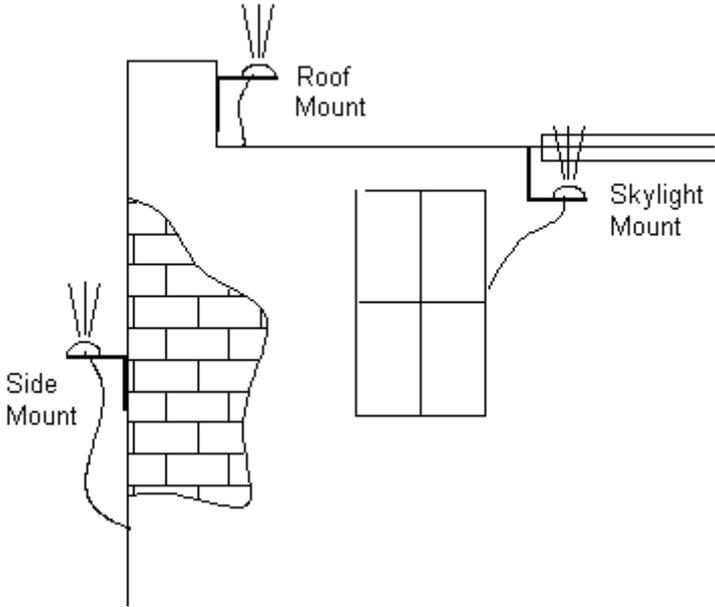

### **Improper** locations for antenna mounting:

Avoiding mounting the ATX-GPS in windows, between buildings, at “inside” corners or under awnings.

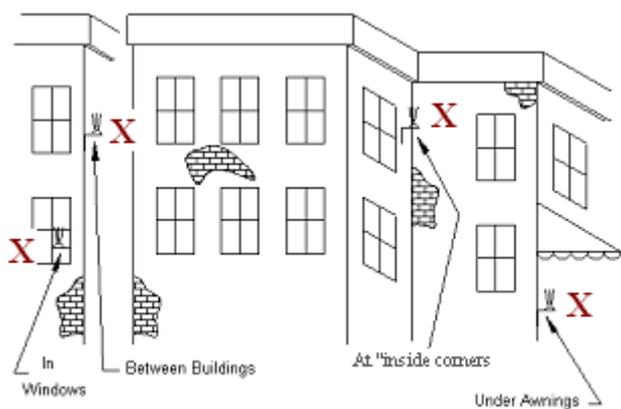

Mount the unit, according to the following steps.

- Place the bracket at the selected location and mark the 2 mounting holes.
- Drill a ¼" X 1 ½" hole at each of the marks
- Insert the wall anchors in holes and tap flush to wall with a hammer.
- Insert a screw through the top mounting hole and into the top anchor and tighten securely.
- Place the ATX-GPS Receiver on the top of the bracket.
- Place the p-clip around the cable
- Insert a screw through the p-clip, through the bottom mounting hole and into the bottom anchor and tighten securely.

After mounting, connect the RJ45 jack to the RJ45 port of the ATX6. Verify the Time Source (function 7) of the ATX6 is set to GPS.

