



**MODEL H8211**

**14 PIECE DIE GRINDER KIT**

**INSTRUCTION MANUAL**



COPYRIGHT © AUGUST, 2007 BY GRIZZLY INDUSTRIAL, INC.  
WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE  
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.  
#JM9807 PRINTED IN CHINA



# WARNING!

This manual provides critical safety instructions on the proper setup, operation, maintenance and service of this machine/equipment.

Failure to read, understand and follow the instructions given in this manual may result in serious personal injury, including amputation, electrocution or death.

The owner of this machine/equipment is solely responsible for its safe use. This responsibility includes but is not limited to proper installation in a safe environment, personnel training and usage authorization, proper inspection and maintenance, manual availability and comprehension, application of safety devices, blade/cutter integrity, and the usage of personal protective equipment.

The manufacturer will not be held liable for injury or property damage from negligence, improper training, machine modifications or misuse.



# WARNING!

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement and other masonry products.
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: Work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

# SAFETY

## ⚠WARNING

### For Your Own Safety Read Instruction Manual Before Operating This Equipment

The purpose of safety symbols is to attract your attention to possible hazardous conditions. This manual uses a series of symbols and signal words which are intended to convey the level of importance of the safety messages. The progression of symbols is described below. Remember that safety messages by themselves do not eliminate danger and are not a substitute for proper accident prevention measures.

#### ⚠DANGER

Indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

#### ⚠WARNING

Indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

#### ⚠CAUTION

Indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices.

#### NOTICE

This symbol is used to alert the user to useful information about proper operation of the equipment.

## ⚠WARNING

### Safety Instructions For Pneumatic Tools

- 1. READ THIS MANUAL.** This tool may cause personal injury if used incorrectly. This manual contains proper safety and operating instructions that must be followed to reduce this risk.
- 2. WEAR EYE PROTECTION.** This tool may throw small fragments during operation, which may cause serious eye injury. Always wear ANSI approved safety glasses or face shield to reduce your risk from this hazard.
- 3. WEAR A RESPIRATOR.** This tool may produce fine dust during operation, which can cause respiratory injury if inhaled. Always wear a respirator NIOSH approved for the type of material being processed.
- 4. WEAR HEARING PROTECTION.** Operating this tool for prolonged time periods may damage your hearing. Your risk depends on length and frequency of use. To reduce your risk of this hazard, wear hearing protection.
- 5. MAINTAIN SAFETY GUARDS.** Your tool may be equipped with safety guards or other structural components designed to reduce the risk of injury during operation. Never modify or operate this tool with any guards or components removed or damaged.
- 6. KEEP CHILDREN AWAY.** Prevent children from injury by keeping them away from this tool. Disconnect and lock the tool away when not in use.

- 7. AVOID ENTANGLEMENTS.** Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry, which may get caught in moving parts, when operating this tool. Wear a protective hair covering to contain long hair.
- 8. USE CORRECT AIR PRESSURE.** Exceeding the maximum PSI rating of this tool may cause unpredictable operation or bursting.
- 9. DISCONNECT AIR PRESSURE** before servicing, changing accessories, or moving to another location. Never leave this tool unattended when connected to air.
- 10. SECURE TOOLING.** Always verify tooling is secure before operation.
- 11. SHARP SURFACES.** DO NOT place hands near the tooling surfaces when in operation.
- 12. REMOVE ADJUSTING KEYS AND WRENCHES AFTER USE.** These tools become dangerous projectiles if left on the tool when it is started.
- 13. AVOID FLAMMABLES.** Do not use this tool around any flammables that may be ignited by sparks.
- 14. SECURE WORK.** Use clamps or a vise to hold work when practical. It is safer than using your hand and frees both hands to operate tool.
- 15. MAINTAIN TOOLS WITH CARE.** Keep tools lubricated and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
- 16. DO NOT FORCE TOOL.** It will do the job better and safer at the rate for which it was designed.
- 17. CHECK FOR DAMAGED PARTS BEFORE USING.** Check for binding and alignment of parts, broken parts, part mounting, loose bolts, and any other conditions that may affect operation. Repair or replace damaged parts before operating.
- 18. USE GOOD LIGHTING.** Keep work area well lighted. Dark work areas increase risk of accidental injury.
- 19. AVOID UNINTENTIONAL OPERATION.** Always disconnect air when not in use, and do not carry tool with hand on trigger.
- 20. USE THE RECOMMENDED ACCESSORIES.** Consult owner's manual for recommended accessories. Using improper accessories may increase the risk of injury.
- 21. NEVER ALLOW UNTRAINED USERS TO USE THIS TOOL WHILE UNSUPERVISED.**
- 22. IF YOU ARE UNSURE OF THE INTENDED OPERATION, STOP USING TOOL.** Seek formal training or research books or magazines that specialize in pneumatic tools.
- 23. BE AWARE OF HOSE LOCATION.** Hoses can easily become a tripping hazard when laid across the floor in a disorganized fashion.
- 24. DO NOT USE UNDER THE INFLUENCE OF DRUGS OR ALCOHOL, OR WHEN TIRED.**

# INTRODUCTION

---

---

## Foreword

---

---

The specifications, details, and photographs in this manual represent the Model H8211 as supplied when the manual was prepared. However, owing to Grizzly's policy of continuous improvement, changes may be made at any time with no obligation on the part of Grizzly.

If you have any comments regarding this manual, please write to us at the following address:

Grizzly Industrial, Inc.  
C/O Technical Documentation  
P.O. Box 2069  
Bellingham, WA 98227-2069  
E-Mail: [manuals@grizzly.com](mailto:manuals@grizzly.com)

Most importantly, we stand behind our tools. If you have any service questions or parts requests, please call or write us at the location listed below.

Grizzly Industrial, Inc.  
1203 Lycoming Mall Circle  
Muncy, PA 17756  
Phone: (570) 546-9663  
Fax: (800) 438-5901  
E-Mail: [techsupport@grizzly.com](mailto:techsupport@grizzly.com)  
Web Site: <http://www.grizzly.com>

## Specifications

---

---

Collet Size.....	1/8" and 1/4"
No Load Speed.....	22,000 RPM
Air Consumption.....	.4 CFM
Air Inlet.....	1/4"
Required PSI.....	.90 PSI
Maximum Sound Level.....	93.8 dB

## Inventory

---

---

H8211 Inventory	Qty
A. Case.....	1
B. 1/4" Mini Die Grinder.....	1
C. Grinding Stones.....	10
D. 1/4" NPT Male Air Fitting.....	1
E. 1/8" Collet.....	1
F. Wrenches.....	2


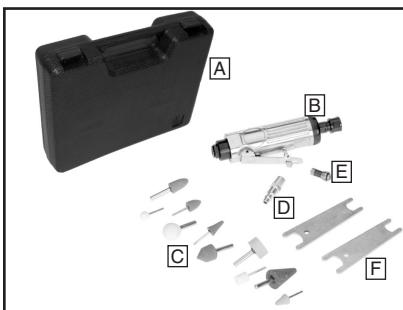


Figure 1. Model H8211 Inventory.

# OPERATIONS

## WARNING

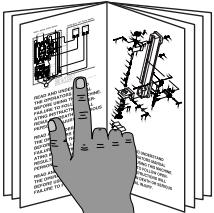

**Read the manual before operation. Become familiar with this tool, its safety instructions, and its operation before beginning any work. Serious personal injury may result if safety or operational information is not understood or followed.**

### Installing Bits

The Model H8211 uses grinding stones and cutters with a  $\frac{1}{4}$ " and  $\frac{1}{8}$ " diameter shaft. See the Grizzly catalog or [www.grizzly.com](http://www.grizzly.com) for a complete listing of available bits and accessories.

## WARNING

**DO NOT use bits or cutters with a cutting diameter larger than 1". The bit or cutter could break apart under the stresses of high speed use, causing serious personal injury.**


## WARNING

**Like all tools there is potential danger when operating this tool. Accidents are frequently caused by lack of familiarity or failure to pay attention. If normal safety precautions are overlooked or ignored, serious personal injury may occur.**

#### To install a bit:

- 1. DISCONNECT THE GRINDER FROM THE AIR SUPPLY!**
- 2. Use the two included wrenches to loosen the collet nut, as shown in **Figure 2**.**

**Note:** It is not necessary to completely remove the collet nut from the shaft unless you are also changing the collet.

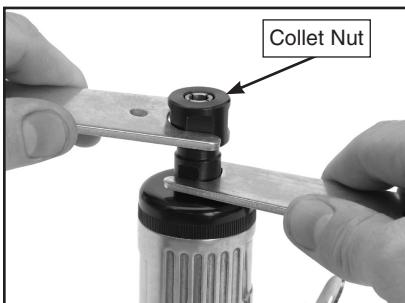

**Figure 2.** Loosening the collet.

- 3. Insert at least  $\frac{1}{2}$ " of the bit into the collet.**
- 4. Hand tighten the collet nut, then use the collet wrenches to tighten the collet nut. Verify that the tooling bit is secure and will not pull out.**

The Model H8211 Grinder kit is equipped with 1/4" and 1/8" collets for the included grinding stones.

#### To change a collet:


1. DISCONNECT THE GRINDER FROM THE AIR SUPPLY.
2. Remove the collect nut from the grinder.
3. Using needlenose pliers, remove the collet from the shaft.
4. Insert the desired collet and tighten the collet nut with the included wrenches.

### Using the Grinder

Always test the grinder on a scrap piece of material similar to the workpiece. Trial and error is the best way to determine the ideal setup.


#### To use the grinder:

1. Attach the 1/4" NPT male quick connect fitting to the air inlet plug.
2. Attach the grinder to an air supply set at 90 PSI.
3. Hold the grinder securely.
4. Turn the grinder **ON** by depressing the trigger.
5. Securely holding the grinder, ease the working end of the bit against the workpiece with a light, but steady, pressure.
6. To turn the grinder **OFF**, release the trigger.
7. To avoid accidental starting, disconnect the grinder from the air supply when it is not in use.
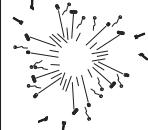
<b>WARNING</b>	
	<b>LUNG/EAR INJURY HAZARD!</b> Wear protective equipment when using this tool.
	<b>ACCIDENTAL START HAZARD!</b> Disconnect before service or tool changes.
	<b>AIR PRESSURE HAZARD!</b> Never exceed max PSI rating for tool.
	<b>EYE INJURY HAZARD!</b> Wear protective equipment when using this tool.

### Daily Maintenance

The die grinder MUST have 2-6 drops of oil directly dropped into the air fitting before each use. In addition, we recommend using an in-line filter, lubricator, and regulator, as shown in **Figure 3**.

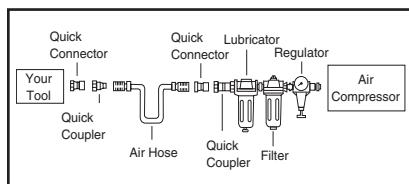


**Figure 3.** Installed filter lubricator regulator.

#### These procedures should be done after each use:

- Wipe the motor housing and tool bits with a dry cloth, or blow off the dust and debris with compressed air.
- Check for damage to tooling, hoses, housing or other accessories.

# H8211 PARTS LIST

---

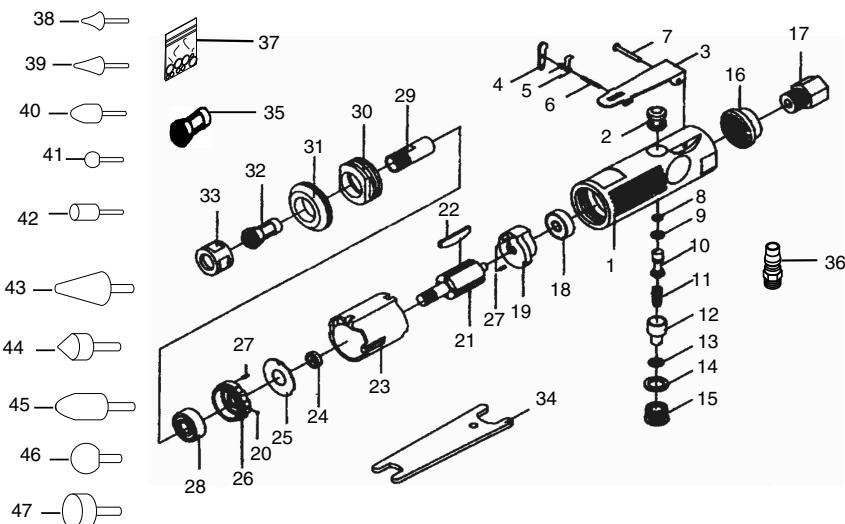

REF PART #	DESCRIPTION
1 PH8211001	HOUSING
2 PH8211002	VALVE BUSHING
3 PH8211003	TRIGGER
4 PH8211004	TRIGGER THROTTLE
5 PH8211005	TORSION SPRING
6 PH8211006	ROLL PIN 1.5 X 20
7 PRP43M	ROLL PIN 3 X 22
8 PORP005	O-RING 4.8 X 1.9 P5
9 PORP006	O-RING 5.8 X 1.9 P6
10 PH8211010	VALVE STEM
11 PH8211011	COMPRESSION SPRING
12 PH8211012	AIR REGULATOR
13 PORP007	O-RING 6.8 X 1.9 P7
14 POR00016	O-RING 12 X 3
15 PH8211015	SCREW CAP
16 PH8211016	MUFFLE COVER
17 PH8211017	AIR INLET
18 P626	BALL BEARING 626
19 PH8211019	END PLATE
20 PH8211020	STEEL BALL
21 PH8211021	ROTOR
22 PH8211022	ROTOR BLADE
23 PH8211023	CYLINDER
24 PH8211024	BUSHING

REF PART #	DESCRIPTION
25 PH8211025	SPECIAL WASHER
26 PH8211026	FRONT PLATE
27 PH8211027	STEEL PIN 2 X 6
28 P6000	BALL BEARING 6000ZZ
29 PH8211029	CHUCK SEAT
30 PH8211030	LOCK RING
31 PH8211031	PROTECTING RUBBER
32 PH8211032	1/4" COLLET
33 PH8211033	COLLET NUT
34 PH8211034	WRENCH
35 PH8211035	1/8" COLLET
36 PH8211036	1/4" NPT MALE AIR FITTING
37 PH8211037	O-RING KIT
38 PH8211038	PINK MUSHROOM 1/8"
39 PH8211039	GRAY MUSHROOM 1/8"
40 PH8211040	GRAY BULLET 1/8"
41 PH8211041	WHITE BALL 1/8"
42 PH8211042	WHITE CYLINDER 1/8"
43 PH8211043	GRAY CONE 1/4"
44 PH8211044	GRAY CROWN 1/4"
45 PH8211045	GRAY BULLET 1/4"
46 PH8211046	WHITE BALL 1/4"
47 PH8211047	PINK CYLINDER 1/4"