



INSTALLATION & OPERATION MANUAL

VCD SERIES CHIP WARMERS

MODELS:

VCD22* ML-138037

VCD44 ML-138069

***Formerly VCD5**



For additional information on Vulcan-Hart or to locate an authorized parts and service provider in your area, visit our website at www.vulcanhart.com

VULCAN-HART
DIVISION OF ITW FOOD EQUIPMENT GROUP, LLC
www.vulcanhart.com

Vulcan ©2010 All Rights Reserved

3600 NORTH POINT BLVD.
BALTIMORE, MD 21222
F-38053 (09-10)

IMPORTANT FOR YOUR SAFETY

THIS MANUAL HAS BEEN PREPARED FOR PERSONNEL QUALIFIED TO INSTALL ELECTRICAL EQUIPMENT, WHO SHOULD PERFORM THE INITIAL FIELD START-UP AND ADJUSTMENTS OF THE EQUIPMENT COVERED BY THIS MANUAL.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

WARNING

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death.

Read the installation, operating and maintenance instructions thoroughly before installing or servicing equipment.

**IN THE EVENT OF A POWER FAILURE,
DO NOT ATTEMPT TO OPERATE THIS DEVICE.**

TABLE OF CONTENTS

- IMPORTANT FOR YOUR SAFETY** 1
- GENERAL** 3
 - INTRODUCTION 3
 - INSTALLATION 3
 - UNPACKING 3
 - ACCESS PANEL POSITIONING 4
 - LEGS INSTALLATION 4
 - SCOOP HOLDER INSTALLATION 4
 - LOCATION 4
- ELECTRICAL REQUIREMENTS** 5
 - ELECTRICAL CODES & STANDARDS 5
 - ELECTRICAL CONNECTIONS 5
- OPERATION** 6
 - BEFORE FIRST USE 6
 - TESTING THE CHIP WARMER 6
 - OPERATION INSTRUCTIONS 7
 - SHUTDOWN 7
 - EXTENDED SHUTDOWN 7
- SPECIFICATIONS** 7
- MAINTENANCE** 8
 - CLEANING 8
 - STAINLESS STEEL CARE 8
- LOCKOUT / TAGOUT PROCEDURE** 9
- TROUBLESHOOTING** 10
- SERVICE & PARTS INFORMATION.** 10
- WIRING DIAGRAM** 11

GENERAL

INTRODUCTION

Vulcan-Hart Chip Warmers are produced with quality workmanship and material. Proper installation, usage, and maintenance of your warmer will result in many years of satisfactory performance.

It is suggested that you thoroughly read this entire manual and carefully follow all of the instructions provided.

As with any piece of food service equipment, this Chip Warmer requires a minimum of care and maintenance. Recommended procedures are contained in this manual and should become a regular part of the operation of the unit.

INSTALLATION

Before installing, verify that the electrical service agrees with the specifications on the rating plate located on the lower back corner of the warmer. If the supply and equipment requirements do not agree, do not proceed with unpacking and installation. Contact your Vulcan-Hart Customer Service Department immediately. (Fig. 4)

UNPACKING:

The Warmer was inspected before leaving the factory. The transportation company assumes full responsibility for safe delivery upon acceptance of the shipment. Immediately after unpacking, check for possible shipping damage to the warmer.


If the warmer is found to be damaged, save the packaging material and contact the carrier within 15 days of delivery.

Carefully unpack warmer and place in a work accessible area.

1. Remove banding holding the carton to the pallet.
2. Carefully remove warmer from carton and place on floor or table.
3. Remove any and all packaging materials inside unit.
4. Peel off all vinyl protection film.
5. Thoroughly clean the warmer as described in the cleaning instructions in this manual.


ACCESS PANEL POSITIONING:

1. Ensure that top Baffle notches are over carriage bolts.
2. Insert Access Panel onto the back of the Chip Warmer. (Fig. 1)

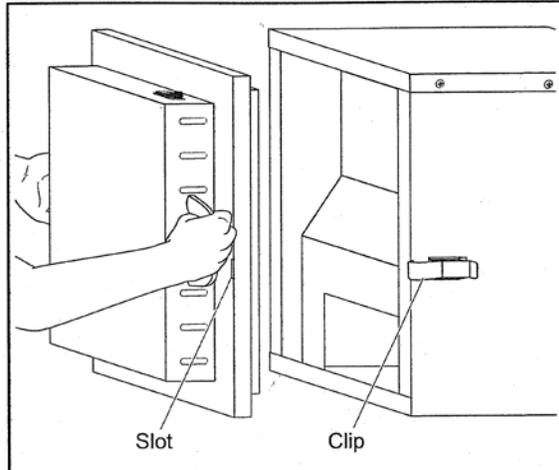

(Fig. 1)

3. On both sides of Access Panel, place clips into slots, then lock. (Fig. 3)

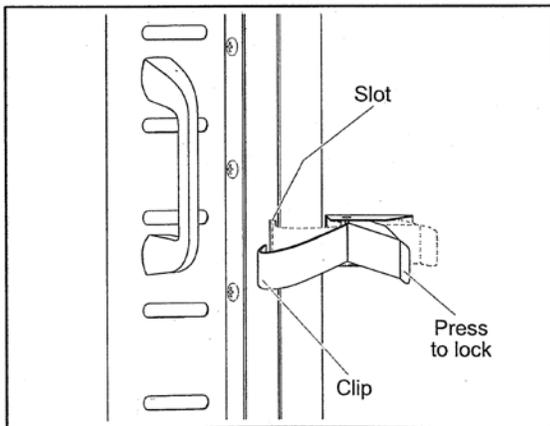

(Fig. 2)


LEGS INSTALLATION:

1. To install legs, carefully tip Chip Warmer onto its side. Screw legs into pre-drilled holes. Return warmer to the upright position.

SCOOP HOLDER INSTALLATION:

The Chip Scoop Holder will secure up to a 6" wide scoop.

1. On either the left or right side of the Chip Warmer, loosen four side screws one revolution.
2. Position the Chip Scoop Holder. (Fig. 3)

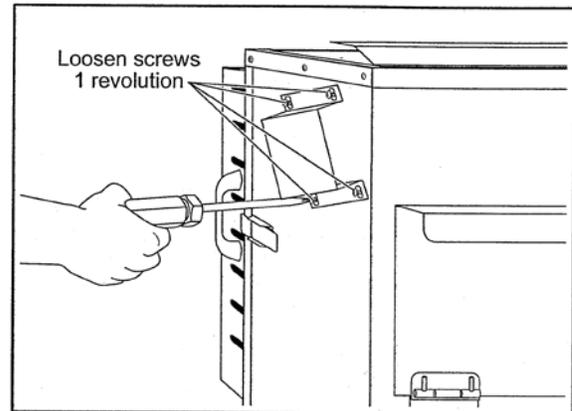

(Fig. 3)

3. Tighten four side screws.

CLEANING:

The warmer should be thoroughly cleaned prior to putting into service. Please refer to cleaning instructions on page 6.

LOCATION:

For efficient warmer operation, choose a location that will provide easy loading and unloading without interfering with the final assembly of food orders.

The installation location must allow adequate clearances for servicing and proper operation.

ELECTRICAL REQUIREMENTS

ELECTRICAL CODES & STANDARDS:

The warmer must be installed in accordance with:

In the United States of America:

1. State and Local Codes.
2. National Electrical Code, ANSI/NFPA-70 (latest edition.) Copies may be obtained from: The National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

In Canada:

1. Local Codes.
2. Canadian Electrical Code, CSA C22.1 (latest edition.) Copies may be obtained from: The Canadian Standard Association, 178 Rexdale Blvd., Etobicoke, Ontario, Canada M9W 1R3.

ELECTRICAL CONNECTIONS:


The warmer is factory wired for 110/120 volt single phase operation. All 110/120 volt warmers are equipped with a 8 foot cord and NEMA 5-15 plug as standard equipment. Refer to wiring diagram in the back of this manual.

The cord and plug supplied is a suitable durable cord with a molded three-prong plug, and is provided with a proper strain relief.

⚠ WARNING All warmers are equipped with a three-prong plug. It is imperative that this plug must be connected into a properly grounded three-prong receptacle. If the receptacle is not the proper grounding type, contact an electrician. *Do not remove the grounding prong from this plug.*

Verify that the power source matches the Serial Data Plate located on the lower back corner of the warmer and the plug configuration before the connection is made. (Fig. 4)

SERIAL DATA PLATE

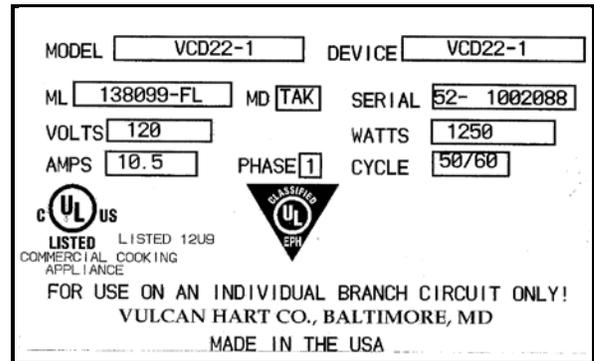

(Fig. 4.)

A separate disconnect switch or circuit breaker is recommended to be placed at a convenient location between the Chip Warmer and the electric power source.

To avoid damage to the power supply cord, cord retainer bushing, or electrical outlets, always check to be certain that the power cord is unplugged from the power source before moving the unit.

OPERATION

BEFORE FIRST USE

The Chip Warmer should be thoroughly cleaned before initial use.

▲ WARNING Always disconnect electrical power to the Chip Warmer before cleaning or servicing.

1. Remove Access Panel by unlocking clips.
2. Place Access Panel away from Chip Warmer.
3. Remove Top Door.
4. Remove all internal Baffles through back opening.
5. Using a soft, clean cloth, clean Top Door and Baffles with a solution of mild detergent and warm water. Rinse with a soft cloth and warm water. Wipe dry with a soft dry cloth.

Never spray the unit with a hose.


6. Using a soft, clean cloth, clean the inside of the unit with a solution of mild detergent and warm water. Rinse with a soft cloth and warm water. Wipe dry with a soft dry cloth.
7. Replace Top Door and all internal Baffles.
8. Reattach Access Panel.

TESTING THE CHIP WARMER

▲ WARNING The Warmer and its parts are hot. Be very careful when operating, cleaning, or servicing the warmer.

Before using the Chip Warmer for the first time, verify that it operates properly.

1. Verify that the Chip Warmer is connected to the correct power source.
2. The Lighted Power Switch is located on the top rear of the Chip Warmer. Switch power switch to ON position. Verify that the switch illuminates. (Fig. 5)

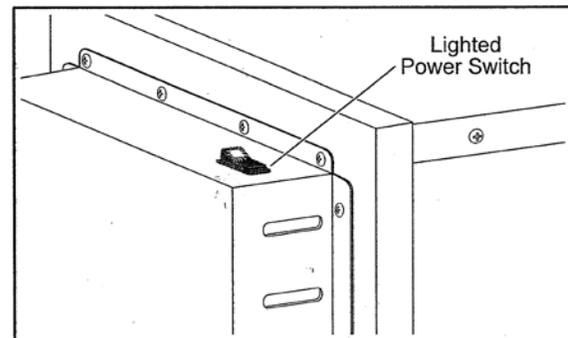

(Fig.5)

3. Check the interior rear of warmer to ensure that it is heating. The internal thermostat is factory preset to 180° F. The blower fan circulates heated air through the perforated removable chip tray located at the bottom of the interior of the cabinet (under the chips.)

OPERATION INSTRUCTIONS

▲ WARNING The Warmer and its parts are hot. Be very careful when operating, cleaning, or servicing the warmer.

1. Switch Power Switch to ON position. Verify that switch illuminates.
2. Open Top Door.
3. Pour chips into Baffle.

Do not overfill. The Top Door must be able to fully close.

VCD22 holds approx. 22 gallons and VCD44 holds approx. 44 gallons of chips.

4. Close Top Door.
5. After approx. 30 to 40 minutes, open Front Door to access warmed chips.
6. Use the Chip Scoop to remove desired amount of chips.
7. Close Front Door.

SHUTDOWN

▲ WARNING The Warmer and its parts are hot. Be very careful when operating, cleaning, or servicing the warmer.

At the end of the day, switch Power Switch to OFF position. Follow cleaning instructions in this manual, if necessary.

EXTENDED SHUTDOWN

▲ WARNING The Warmer and its parts are hot. Be very careful when operating, cleaning, or servicing the warmer.

Perform the following procedure to shut down the Chip Warmer for an extended shutdown.

1. Switch Power Switch to OFF position.
2. Unplug Chip Warmer.
3. Wait until Warmer cools down.
4. Thoroughly clean Warmer. Refer to “General Cleaning” instructions in the MAINTENANCE section of this manual.
5. Leave all doors slightly open to allow for ventilation.

SPECIFICATIONS

MODEL	HEIGHT	DEPTH	WIDTH	SHIPPING WEIGHT	VOLTS	WATTS	AMPS.
VCD22	20.75 " 527 mm	26.25 " 667 mm	24.25 " 616 mm	115 # 52 kg.	120	1250	10.5
VCD44	38.5 " 978 mm	28 " 711 mm	24.25 " 616 mm	160 # 73 kg.	120	1250	10.5

MAINTENANCE

CLEANING

▲ WARNING The Warmer and its parts are hot. Be very careful when operating, cleaning, or servicing the warmer.

▲ WARNING Always *unplug electrical power supply* before cleaning.

INTERIOR:

The inside of the Chip Warmer must be cleaned each day.

1. Unplug electrical power supply.
2. Allow warmer to cool before cleaning.
3. Remove Access Panel by unlocking the clips.
4. Place Access Panel away from Chip Warmer.
5. Remove Top Door.
6. Remove all internal Baffles through back opening.
7. Using a soft, clean cloth, clean inside of warmer with a solution of mild detergent and warm water. Rinse with warm water, and wipe dry.
8. Replace Top Door and all internal Baffles.
9. Reattach Access Panel.

EXTERIOR:

Refer to "STAINLESS STEEL CARE."

HEAVY-DUTY CLEANING:

For heavy-duty cleaning, use warm water, a degreaser, and a plastic, stainless steel, or Scotch-Brite pad. Never rub in a circular motion -- rub gently in the direction of the steel grain. Always rinse thoroughly.

STAINLESS STEEL CARE

CLEANING:

Stainless Steel contains 70 – 80% iron, which will rust if not properly maintained. Stainless Steel also contains 12 – 30% chromium, which forms an invisible passive, protective film that shields against corrosion.

If the protective film remains intact, the stainless steel will remain intact. However, if the film is damaged, the stainless steel can break down and rust.

PREVENTIVE CARE:

To prevent stainless steel break-down, follow these steps:

1. **Never use any metal tools, scrapers, files, wire brushes, or scouring pads** (*except for stainless steel scouring pads,*) which will mar the surface.
2. **Never use steel wool** – which will leave behind particles that will rust.
3. **Never use acid-based or chloride containing cleaning solutions** – which will break down the protective film.

4. **Never rub in a circular motion.** Always rub gently in the direction of the steel grain.
5. **Never leave any food products or salt on the surface.** Many foods are acidic. Salt contains chloride.

PRESERVING & RESTORING:

Special stainless steel polishing cleaners can preserve and restore the protective film.

Preserve the life of stainless steel with a regular application of a high-quality stainless steel polishing cleaner, as a final step to daily cleaning.

If signs of breakdown appear, restore the stainless steel surface. First, thoroughly clean, rinse, and dry the surface. Then, on a daily basis, apply a high-quality stainless steel polish according to manufacturer's instructions.

HEAT TINT:

Darkened areas, called "heat tint," may appear on stainless steel exposed to excessive heat. Excessive heat causes the protective film to thicken. This is unsightly, but is not a sign of permanent damage.

To remove heat tint, follow the routine cleaning procedure. Stubborn heat tint will require heavy-duty cleaning. To reduce heat tint, limit the exposure of equipment to excessive heat.

LOCKOUT / TAGOUT PROCEDURE



⚠ WARNING Always perform the **LOCKOUT / TAGOUT PROCEDURE** of your facility before removing any sheet metal panels or attempting to service this equipment.

The Lockout / Tagout Procedure is used to protect personnel working on an electrical appliance. Before performing any type of maintenance or service on an electrically operated appliance, follow these steps:

1. In electrical box, place unit's circuit breaker into OFF position.
2. Place a lock or other device on electrical box cover to prevent someone from placing circuit breaker ON.
3. Place a tag on electrical box cover to indicate that unit has been disconnected for service and power should not be restored until tag is removed by maintenance personnel.
4. Disconnect unit power cord from electrical outlet.
5. Place a tag on cord to indicate that unit has been disconnected for service and power should not be restored until tag is removed by maintenance personnel

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	REMEDY
Chip Warmer not operating	Chip Warmer not plugged into power source.	Plug chip warmer into correct power source as indicated on serial data plate.
	Lighted power switch not in ON position.	Press power switch to ON position.
	No power.	Check fuse and reset is necessary. Check GFCI switch on outlet.
GFCI or Ground Fault Circuit Indicator tripped.	Moisture problem.	Dry moisture problem.
	Damaged: element, wire, power cord, etc.	Contact Authorized Service Provider.
Chip Warmer is connected to power source, power is on, but not heating.	Damaged: element, wire, power cord, motor, etc.	Contact Authorized Service Provider.
Lighted power switch is illuminated, but circulating fan is not operating	Damaged fan, etc.	Contact Authorized Service Provider


SERVICE & PARTS INFORMATION

To obtain Service and Parts information concerning this model, contact Vulcan-Hart Service Department at the address listed on the front cover of this manual or refer to our website: www.vulcanhart.com for a complete listing of Authorized Service and Parts depots.

Customer Service 1-800-814-2028
Technical Service 1-800-814-2028
Service Parts 1-800-814-2028

When calling for service, have the model number and serial number available.

WIRING DIAGRAM

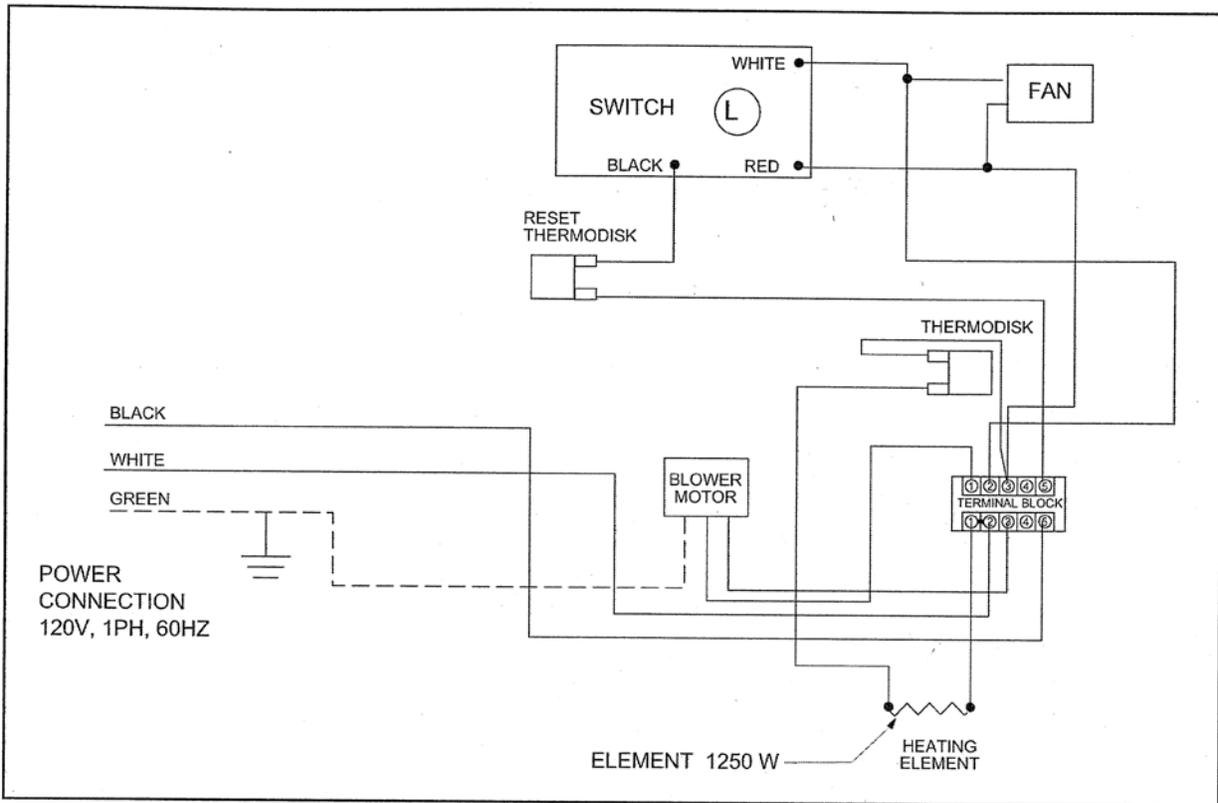

VCD22 & VCD44