

iProtoXi



AistinTM
Firmware User Guide

Version 0.8.0

2013-07-19

TABLE OF CONTENTS


1. INTRODUCTION	4
2. AISTIN PROTOCOL	5
DATA FIELDS AND CHARACTER ALLOCATION	5
MESSAGE STRUCTURE	6
PROTOCOL CONFIGURATION OPTIONS	6
MESSAGE TYPES	7
COMMENT CHARACTER	10
3. SOFTWARE DEVICES	11
REGISTER TYPES	11
MASTER REGISTER SET	12
EXAMPLE USE CASES	14
READING REAL-TIME CLOCK	14
SETTING REAL-TIME CLOCK	14
INCLUDE TIME STAMP TO DATA MESSAGES	14
ANALOG INPUTS REGISTER SET	15
EXAMPLE USE CASES	16
READING BATTERY VOLTAGE CHANNEL ONCE PER SECOND	16
READING ANALOG INPUT CHANNELS #0 AND #1 TEN TIMES PER SECOND	16
VIRTUAL MACHINE REGISTER SET	17
EXAMPLE USE CASES	18
START TO RUN USER'S VM PROGRAM	18
STOP RUNNING THE PROGRAM	18
START UPLOADING A NEW PROGRAM FOR THE VM	18
VIRTUAL MACHINE PROGRAM REGISTER SET	19
EXAMPLE USE CASES	19
START UPLOADING A NEW PROGRAM	19
UPLOAD AN EMPTY PROGRAM THAT HAS DEVICE ADDRESS ABH	20

VIRTUAL MACHINE "RAM" REGISTER SET	21
<hr/>	
EXAMPLE USE CASES	21
WRITE A STRING INTO RAM AREA	21
CHANGE RAM AREA'S DEVICE ADDRESS	21
VIRTUAL MACHINE PROGRAM INSTRUCTION SET	22
<hr/>	
SOME EXAMPLE PROGRAMS	25
HELLOWORLD . AIS	25
TRAFFICLIGHTS . AIS	25

1. INTRODUCTION

iProtoXi Aistin firmware is the software provided with the iProtoXi Micro controller board. It is designed to support easy use of add-on boards, such as accelerometer sensor and gyro, as well as temperature and humidity sensors, or the RGB-LED board. To achieve this, firmware has ability to communicate with outer world using a specifically designed human-readable protocol, called Aistin Protocol.

In more complicated configurations there may be several boards connected to a server – Aistin Server – which in turn may be connected to some clients, such as specific Web pages. Furthermore, there might be several servers connected together, to enable variety of networking configurations. This makes possible to network sensors even over the internet. Below is an example picture of a possible complex networked system configuration.

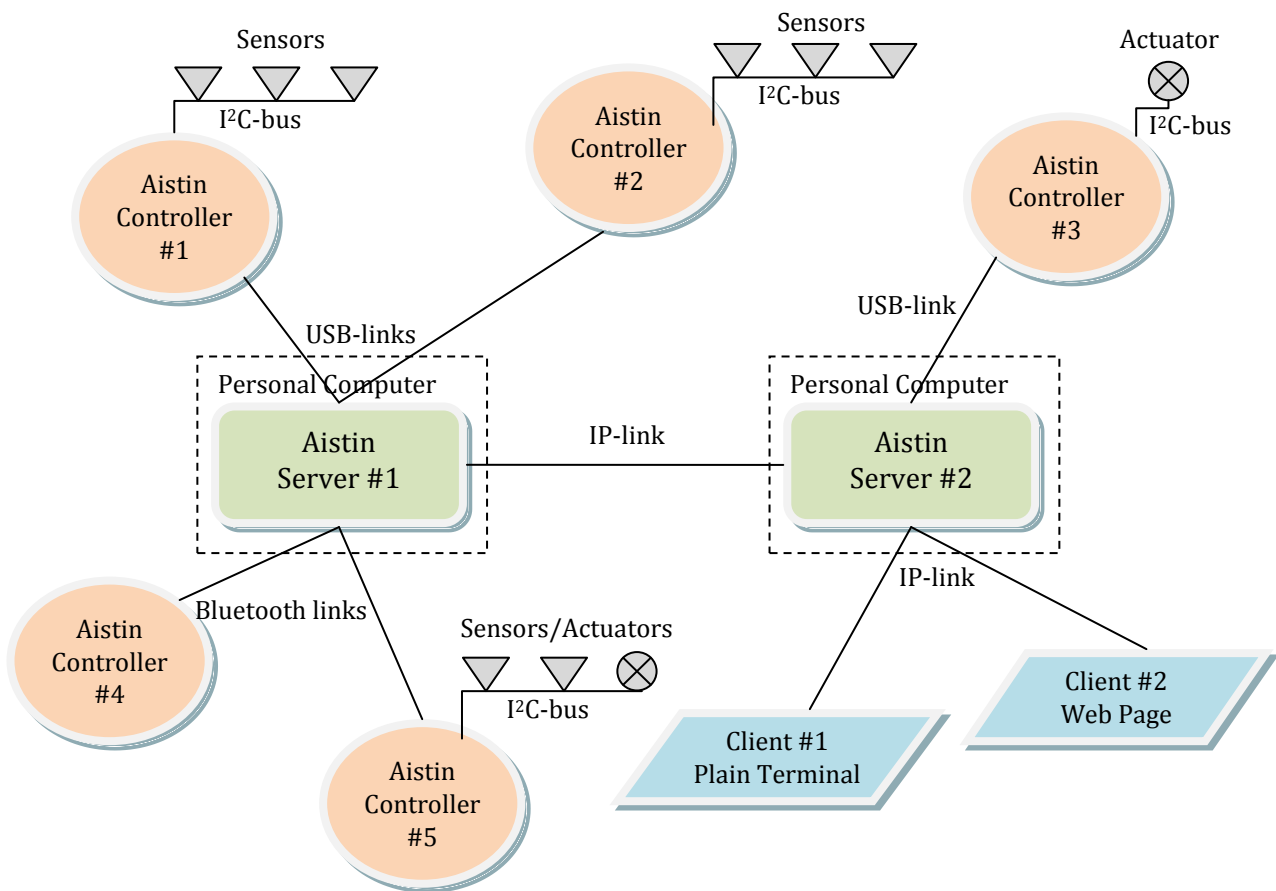

Aistin protocol makes it possible to access all the networked sensors and actuators from the clients, with a single unified way. In current implementation, I²C-types of devices are supported, but other common buses may be implemented later on.

2. AISTIN PROTOCOL

The Aistin protocol is designed to work using any 7- or 8-bit ascii bearer, and is based on ASCII characters only. One of its main principles is to be both human- and machine-readable, so it can be used with just a simple terminal program, such as Windows Hyper Terminal. However, the protocol has a clear, fixed format to enable other software applications on top of it.

Another important aspect is a small memory footprint, thus instead of having large set of different command words, there are only few one-letter commands. The needed command divergence is achieved by using numerical codes, called "addresses". This thinking is derived from the world of hardware I²C bus, and people familiar with such kind of things will feel the system very pleasing.

Third thing provided by the protocol is "node-addressing". It is possible to address an individual iProtoXi controller board in a network, even though the board itself doesn't implement a TCP/IP stack.

DATA FIELDS AND CHARACTER ALLOCATION

The protocol is based on *data fields* that are preceded by a single special character. The characters are allocated as follows:

>X	Beginning of a message and a message code (X) when it is the first character in a line, after a carriage return and/or a linefeed
<i>LF</i>	Line feed (ascii code 10), end of a message
<i>CR</i>	Carriage return (ascii code 13), alternative end of a message
@DaRa	Target identifier (targetID): device address (Da), 8-bit register address (Ra)
@DaRaNb	Target identifier: device address (Da), 8-bit register address (Ra), number of bytes (Nb)
@DaRaraNb	Target identifier: device address (Da), 16-bit register address (Rara), number of bytes
:D0D1D2..	Data bytes in hexadecimal format, no spaces between bytes
\$string	Human readable data – a text string or e.g. a signed 16-bit integer
%time	Time value in decimal, most often in microseconds
~senderID	Identifier string (nodeID) of the sender of a message, maximum length is 12 characters
^receiverID	Identifier string (nodeID) of the receiver of a message, maximum length is 12 characters
'	Comment

In case of 16-bit register address, the byte order is lo-hi: low-order byte comes before the high-order byte (so called big-endian).

The protocol aims to be stateless, two-way and symmetric. This means that both sides can send a message at any time, and they must be prepared to receive a message at any time. Because of symmetry, both sides can behave as a "client" and as a "server" – all message types are available for both sides. There are a few configurable protocol parameters described later.

The overall system is based on idea of "writing" and "reading" data to and from a connected iProtoXi system. There is also a concept of *device address* that is used to route messages into the correct place within the system. The iProtoXi *Master Device* has a fixed device address, namely hex 80, but there can be several other "devices" within the same node, each having their unique address. Further, each device has one or more *registers* which are accessed using unique *register address*.

In case of real I²C devices connected to the main board, they can be accessed "transparently" as specified in their data sheets. This is a very useful feature.

In outgoing messages receiverID field (^) is a copy of latest incoming message's senderID field (~). This makes possible to track where an outgoing received message should be forwarded, in case of multi-client configuration. However, these fields are both optional and may or may not exist. Existence of senderID in outgoing messages can be configured via *Master Register Set*.

MESSAGE STRUCTURE

All messages have the following logical structure – the corresponding characters as described in the previous chapter are shown. All fields may or may not be present. Also, the time field (%) may be configured to appear before the data.

```
[ begin-code | message-code | sender | receiver | location | data | time | end-code ]
>          X           ~      ^      @           : $           %      (LF/CR)
```

Where X is one of the following message codes:

- R - Read
- W - Write
- D - Data
- S - Scan
- A - Acknowledge

Some examples of valid messages could be:

```
>W@343603:5B23AF
>A@343603
>R@1D2901
>D@1D2901:8D
```

PROTOCOL CONFIGURATION OPTIONS

Protocol has three configuration bytes that are available through system registers (see *Master Register Set*). Configuration options affect also to virtual machine output. Shortly, they are as follows:

"positiveAck" option controls whether or not acknowledge message is sent as a reply to all received messages (except the acknowledge message itself, indeed). If it is set ON (value is one), then positive acknowledge is sent always. The default value is OFF (zero). *Note: negative acknowledge i.e. error is sent always independent of this option.*

"messageFields" option is for performance reasons to control if outgoing messages will have optional targetID field (@) and/or senderID field (~).

"dataTimestamp" option is also for performance reasons to control whether or not outgoing data messages will have timestamp field or not (%). Default value (zero) is OFF, whereas 01h corresponds to ON, and the field is positioned before the data. Value 81h is ON, and the field is positioned after the data. The timestamp precision is fixed to 10-digits, in microseconds.

MESSAGE TYPES

Write - "W"

Write message takes one of the following forms when writing binary data in hexadecimal format:

- `>W@DaRa:D0D1D2...` 8-bit register address
- `>W@DaRaNb:D0D1D2...` 8-bit register address, Nb given
- `>W@DaRaraNb:D0D1D2...` 16-bit register address, Nb is always needed

Where Da is the device address, Ra is the register address, Nb is the number of bytes and D0, D1, D2 .. are data bytes that will be send into the device Da and written into the register Ra. All numbers are in two-character hexadecimal format, in other words, a value between 00...FF. Thus, a leading zero is required if the number is less than hex 10. Spaces are not allowed. If the value of Nb is not zero but does not match to the given data, an error is returned (negative acknowledge). If Nb is zero, then any number of data bytes is allowed. Leaving Nb away (first form) equals to setting it to zero. Note that in case of 16-bit register address, Nb must always be given. Alternative formats for text type of data are as follows:

- `>W@DaRa$my text` 8-bit register address, Nb is zero
- `>W@DaRaNb$my text` 8-bit register address, Nb given
- `>W@DaRaraNb$my text` 16-bit register address, Nb is always needed

In this case, the data to be written is given as a string and the number of bytes (Nb) is set to either zero or to match the length of the string. In case of zero, end of string is indicated with linefeed. If protocol specific characters, linefeed and single quote ('), are included into the string, Nb must be set to indicate the total length of the string.

Read - "R"

Read message gets one of the following forms:

- `>R@DaRa` 8-bit register address, Nb is zero
- `>R@DaRaNb` 8-bit register address, Nb given

```
>R@DaRaNb
```

16-bit register address, Nb is always needed

Again, Da and Ra are device and register addresses, whereas Nb is the number of bytes that we want to read. If Nb is not given or is zero, it indicates that we want to get the Ra in "readable" format. Thus, the result will be returned as a text instead of hexadecimal byte values. In case of e.g. 16-bit register the string may be a decimal integer whereas in case of date/time it is a string containing year, month, day and time. The actual number of bytes that will be read from the register Ra is register-dependent and may or may not be shown in the responded data message (within the @-field as Nb value).

Read message can be put to repeat itself by giving a time field with a value that sets the period between reads. For example, the following code reads a register 24h from a device 80h once a second. Reading stops whenever a new message is send or started.

```
>R@8024%1000000
```

Charactes 'm' and 's' can be used to indicate milliseconds and seconds, correspondingly. This avoids using long microsecond numbers. The previous command can thus be replaced with either of the following forms:

```
>R@8024%1000m
```

```
>R@8024%1s
```

Data - "D"

Data message appears normally as a response to a read message as follows:

```
>D@DaRaNb:D0D1D2.. or
```

```
>D@DaRaraNb:D0D1D2..
```

or

```
>D@DaRaNb$string or
```

```
>D@DaRaraNb$string
```

The target ID -field (@) may or may not be included depending on the related configuration option. In the first case, Nb corresponds to the number of bytes, whereas in the latter case it will be either zero or the length of the string. Further, if timestamp was requested, then there will be more information as follows:

```
>D@DaRaNb%timestamp:D0D1D2.. or
```

```
>D@DaRaraNb%timestamp:D0D1D2..
```

or

```
>D@DaRaNb%timestamp$string or
```

```
>D@DaRaraNb%timestamp$string
```

Now, the additional %-character indicates that the following number is a timestamp for the data when it was read. The value is always in microseconds.

Scan - "S"

This message is an alias to reading "scan" register from the device 80h. So, the following two messages do the same thing:

```
>R@8038ff
```

or

```
>S
```

The 38h is the address of scan register, see register tables at the end of this document. Note that "ff" is used to indicate we want to read as many bytes as there is available. After a scan command, a sequence of hexadecimal numbers corresponding to the available device addresses is returned as a data message, e.g. as follows:

```
>D@803808:1D203480818D9091
```

Acknowledge - "A"

If configuration option "positiveAcknowledges" is ON, then the positive acknowledge message takes a form:

```
>A@DaRaNb
```

or

```
>A@DaRaraNb
```

Where @DaRaNb has the same contents that was used in the message that caused the acknowledgment. This field may or may not be present depending on the "includeAddress" configuration option. *Negative acknowledge is sent always and takes a form:*

```
>A@DaRaNb:ER
```

or

```
>A@DaRaraNb:ER
```

Where ER is a non-zero hexadecimal error code. Note that Nb will be the value that was used in the message that caused this negative acknowledge. It does not tell the number of data bytes in this message (which is always one, the error code).

Version - "V" or an empty message

A "V" message or an empty message can be used to see some system information, i.e. by giving only ">" character and hitting enter on terminal:

```
>
```

Version information is then shown and will be something like the following:

```
>D@80140C$ipxdevice-01      Node ID
>D@800805$0.8.0           Software version
>D@800C05$1.2.0           Hardware version
>D@800E0C$27EB142B0000    Board UID
>D@802413$2013-04-05 15.27.48 Real time clock
>D@803806:5D80818D9092    Scan result: available "devices"
```

COMMENT CHARACTER

Linefeed or carriage return character (ascii 10 or 13) is always used to detect end of message line. Because messages may be taken from a script file, system also accepts human readable comment string after the actual message. Comment is separated from the message with a single quote ('), ending quote is not needed. For example:

```
>R@802400 'read real time clock as a text
```

There is a special exception related to this: a comment character can be used to start a message that contains only a comment, as follows:

```
'This is a comment only
```

That kind of message is just ignored by the Aistin system. The lines that do not begin with > or single-quote, will be handled as off-message data and forwarded to a possible connected "raw device", such as a Bluetooth module.

Note: Because copy-pasting of single-quote from different kind of documents sometimes produces varying ascii-code, the system interprets all character codes equal to or higher than 80h similar way as the single-quote character.

3. SOFTWARE DEVICES

In addition to the real I²C devices, the system has a few "software devices" used to access software features. Those devices have their own *register sets* described in the following sections. Register set is a set of parameters that can be read or written by the protocol. There are different types of parameters, such as bytes, words and strings. It must be noted that words (two bytes) and longs (four bytes) are in big-endian format, i.e. low-order byte becomes always first.

Each device has its unique device address that is used to address the corresponding register set. In addition, each register set has a version number to distinguish between possible different versions of register sets. The version number and total size of the related register set can be read from the first four bytes of each register set. These four bytes have always fixed, version-independent order, making possible to deal with different versions.

If register set version byte has its most significant byte set (i.e. the value is equal to or greater than 80h), it means that the register set has additional four control bytes in the beginning. These bytes are used to control software devices, that are continuously run by the CPU.

REGISTER TYPES

There are the following possible register types:

byte

word

long

string Null-terminating character array

byte_{ff} Hidden byte array – reading "ff" bytes returns all available data.

One or more of the following operations are possible:

R Read

W Write

R_{\$} Readable also as a formatted string, using Nb=00

W_{\$} Writable also as a formatted string, using \$ instead of colon (:)

R_{ff} Arbitrary number of bytes available, can be read using Nb=ff, or maximum amount that is needed

Reading and writing of several registers with a single command is possible only for the basic register types: byte, word and long. Even in these cases it might be that all data is not updated, so the safest way is always to access a single register at a time.

MASTER REGISTER SET

Software Device 80h, Version 81h

Master Register Set is used to control basic features of the iProtoXi Aistin firmware. Most important things are board's ID, protocol options and access to on-board real time clock. Detailed descriptions are listed in the table below.

Address	Type	R/W	Name	Values / purpose
00h	byte	R	deviceAddress	80h, identifies this device, "iProtoXi Master"
01h	byte	R	regsVersion	81h, identifies this register set version
02h	word	R	regsSize	0046h, total size of this register set
04h	byte	R	deviceState	State of this device: 0 = stopped, 1 = running
05h	byte	RW	deviceControl	Write to control this device: 01h = reset to defaults, 02h = stop, 03h = run
06h	byte	RW	debugLevel	Debug messages: 00h = no, 01h = show all
07h	byte	-	(reserved)	Reserved for future purposes
08h	word	R	softwareVersion	Version of iProtoXi Aistin firmware, in hexadecimal - e.g. 0080h equals to 0.8.0
0Ah	word	R	arduinoVersion	Version of used Arduino build environment, in hexadecimal - e.g. 0104h equals to 1.0.4
0Ch	word	R	hardwareVersion	Version of iProtoXi Micro board we are running on, in hexadecimal - e.g. 0120h means 1.2.0
0Eh	6 bytes	RW	boardUID	Six-byte unique board identifier
14h	13 bytes	RW	nodeID	Null-terminated board ("node") identifier string
21h	byte	-	(reserved)	Even-byte alignment
22h	byte	RW	i2cBaseAddress	00h, offset for I ² C addresses (not implemented)
23h	byte	RW	virtualI2cBaseAddr	80h, offset for virtual I ² C addresses (not impl.)
24h	long	R _s W _s	datetime	Real time clock, value is in seconds when read as hexadecimal binary. For text-format date and time, read zero bytes instead. For setting, send a string as \$YYYY-MM-DD HH.MM.SS
28h	2 bytes	-	(reserved)	Reserved for different type of real time clock
2Ah	long	RW	usCounter	Free running microseconds counter
2Eh	byte	RW	messageBeginChar	">", message begin character (not implemented)
2Fh	byte	RW	positiveAck	Protocol control: 00h = do not send positive acknowledgment 01h = always send acknowledgment
30h	byte	RW	messageFields	Protocol control 00h = do not include optional fields 01h = include location field (@) 02h = include senderID field (~)

				03h = include both
31h	byte	RW	includeTimestamp	Protocol control: 00h = do not include timestamp 01h = include timestamp before data 81h = include timestamp after data
32h	byte	RW	dataEncoding	Protocol control: 00h = encode data as hex, no spaces (other values are not currently supported)
33h	byte	RW	commChannels	Which channels are used for messaging: 00h = no messaging 02h = serial channel 0 (USB) 04h = serial channel 1 (e.g. Bluetooth) 06h = serial channels 0 and 1
34h	byte	RW	outputChannels	Where to output data messages, see "commChannels" for accepted values
35h	byte	RW	forwardChannels	Where to forward messages, see "commChannels" for accepted values. This can be used to monitor message traffic from another channel.
36h	byte	RW	nonipxChannels	Where to forward off-message characters, see "commChannels" for accepted values. This can be used to communicate with e.g. a Bluetooth module.
37h	byte	RW	debugChannels	Where to send debug printing – not currently supported
38h	byte _{ff}	R _{ff}	scanForDevices	Read to get list of available device addresses, both real I ² C devices and software devices will be listed
39h	byte	-	(reserved)	Reserved, even-byte alignment
3Ah	long	-	(reserved)	-
3Eh	long	-	(reserved)	-
42h	byte	RW	powerSaveMode	Operating mode: 00h = no power save 01h = basic power saving 02h = advanced power saving (preliminary)
43h	byte	-	(reserved)	-
44h	byte	R	latestErrorCode	Latest error code
45h	byte	R	detectedConnections	Detected connections: 00h = no connections 02h = USB-connection detected

EXAMPLE USE CASES

READING REAL-TIME CLOCK

```
>r@802400
```

SETTING REAL-TIME CLOCK

```
>w@8024$2013-07-17 11.20.00
```

INCLUDE TIME STAMP TO DATA MESSAGES

```
>w@803101:01
```

ANALOG INPUTS REGISTER SET

Software Device 81h, Version 01h

This register set is used to read the microcontroller's analog input channels. The index numbers refer to the ADC-pin numbers shown in Atmega32u4 specification. Note that channels 2 and 3 do not really exist and most other channels are configured for other purposes in default iProtoXi Micro configuration. Only channels 0 and 1 are free for user purposes. Channel 5 corresponds to USB voltage level, channel 6 to battery voltage level and channel 7 measures current consumed by add-on sensor boards.

Add-ress	Type	R/W	Name	Values / purpose
00h	byte	R	deviceAddress	81h, identifies this device, "Analog Inputs"
01h	byte	R	regsVersion	01h, identifies this register set version
02h	word	R	regsSize	0022h, total size of this register set
04h	byte	R	numAdcChannels	14, number of analog input channels in this register set. Note! All channels are not supported by the hardware.
05h	byte	-	(reserved)	Reserved for future use, even-byte alignment
06h	word	R	analogInputs[0]	Analog input value for channel 0
08h	word	R	analogInputs[1]	Analog input value for channel 1
0Ah	word	R	analogInputs[2]	Analog input value for channel 2
0Ch	word	R	analogInputs[3]	Analog input value for channel 3
0Eh	word	R	analogInputs[4]	Analog input value for channel 4
10h	word	R	analogInputs[5]	Analog input value for channel 5
12h	word	R	analogInputs[6]	Analog input value for channel 6
14h	word	R	analogInputs[7]	Analog input value for channel 7
16h	word	R	analogInputs[8]	Analog input value for channel 8
18h	word	R	analogInputs[9]	Analog input value for channel 9
1Ah	word	R	analogInputs[10]	Analog input value for channel 10
1Ch	word	R	analogInputs[11]	Analog input value for channel 11
1Eh	word	R	analogInputs[12]	Analog input value for channel 12
20h	word	R	analogInputs[13]	Analog input value for channel 13

EXAMPLE USE CASES

READING BATTERY VOLTAGE CHANNEL ONCE PER SECOND

```
>r@811202%1s
```

READING ANALOG INPUT CHANNELS #0 AND #1 TEN TIMES PER SECOND

```
>r@810602%100m
```


VIRTUAL MACHINE REGISTER SET

Software Device 8Dh, Version 82h

Virtual machine (VM) is a special device that can be used to run user's own program. This register set is used to control the "virtual processor". In practice, the needed operations are normally stopping and re-starting execution of a loaded program. See next section for information how to load a program for the virtual machine.

Add-ress	Type	R/W	Name	Values / purpose
00h	byte	R	deviceAddress	8Dh, identifies this device, "Virtual Machine"
01h	byte	R	regsVersion	82h, identifies this register set version
02h	word	R	regsSize	0031h, total size of this register set
04h	byte	R	deviceState	State of the VM: 0 = stopped, 1 = running
05h	byte	RW	deviceControl	Write to control VM: 01h = reset, 02h = stop, 03h = continue, 04h = (re)start program, 10h = start programming, 12h = set autostart off, 13h = set autostart on
06h	byte	RW	debugLevel	Level of debug messages: 00h = no debug messages, 01h = show debug messages
07h	byte	R	vmControl	VM program autostart bits: 01h = auto-start after reset, 00h = do not auto-start
08h	word	R	programMemSize	Size of available program memory for a VM program
0Ah	word	R	ramSize	Size of available "RAM" memory for a VM program
0Ch	byte	RW	outputChannels	Channels where VM sends messages, see "Master Register Set" for more information
0Dh	byte	RW	outputOptions	00h = output plain data 01h = output real time clock on VM start and stop
0Eh	byte	R	condition	VM condition code register
0Fh	byte	-	(reserved)	Reserved for future use, even-byte alignment
10h	word	R	pc	Program Counter, address of the instruction in progress
12h	word	R	firstTag	Address of first TAG in the program
14h	word	R	prevTag	Address of previous TAG in the program
16h	long	R	vmStartDatetime	Real time when VM started to run program
1Ah	long	R	vmStartTime	Microseconds time when VM started to run program
1Eh	long	-	(internal)	Internal use
22h	long	-	(reserved)	Reserved for future
26h	byte	-	(internal)	Internal use

27h	byte	-	(reserved)	Reserved for future
28h	byte	-	(internal)	Internal use
29h	byte	-	(reserved)	Reserved for future
2Ah-37h	byte	RW	ownerNodeID[13]	Node's ID that currently controls VM (null-terminating string). This is set automatically when writing to deviceControl byte.

EXAMPLE USE CASES

START TO RUN USER'S VM PROGRAM

```
>w@8d05:04
```

STOP RUNNING THE PROGRAM

```
>w@8d05:02
```

START UPLOADING A NEW PROGRAM FOR THE VM

```
>w@8d05:10
```

VIRTUAL MACHINE PROGRAM REGISTER SET

Software Device 8Eh = unprogrammed, 90h = programmed; Version 04h

Program register set is used to store virtual machine's application program. All programs must have specific eight bytes at the beginning, as documented below. Programming is controlled using virtual machine register set (see Device 8Dh).

Address	Type	R/W	Name	Values / purpose
00h	byte	R	deviceAddress	8Eh when programming or 90h when already programmed. Identifies this device, "Virtual Machine Program"
01h	byte	R	regsVersion	04h, identifies this register set version. This is also used to check program's compatibility with VM.
02h	word	R	regsSize	0100h, total size of this register set. This is maximum size of VM application, including this header.
04h	byte	RW	programUID[0]	A0h-EFh, device number that the VM application is implementing, will be copied to VM-RAM
05h	byte	RW	programUID[1]	Register set version that the VM application is implementing, will be copied to VM-RAM
06h	word	RW	programUID[2-3]	Register set size that the VM application is implementing, will be copied to VM-RAM
08h-FFh	byte	RW	program	The actual VM application's program code.

To send a program, you can use address 08h for each instruction line: the system automatically keeps track where the next program instruction must be located. In most cases that eliminates the need to calculate addresses by hand.

EXAMPLE USE CASES

START UPLOADING A NEW PROGRAM

```
>w@8d05:10
```

UPLOAD AN EMPTY PROGRAM THAT HAS DEVICE ADDRESS ABH

```
>w@8d05:10      're-program VM
>w@8e00:90040001 'VM type ID V04 with 0x0100 bytes of room
>w@8e04:ab010000 'program UID: dev. addr, version, reg. set size
>w@8e08:00      'actual program code (00 = no program)
```

VIRTUAL MACHINE "RAM" REGISTER SET

**Software Device: 8Fh = unprogrammed, 91h = anonymous application, 92h-9Fh = iProtoXi application, A0h-EFh = user application;
Version 00h-FFh – set by application**

"VM-RAM" register set is used to store your own application's data as you wish. However, first four bytes should always be laid out as described below. They will be directly copied from the program register set, from the bytes 4-7. The rest of "RAM" area can be used as needed. It is also possible to store static data, such as constants and strings into this area, and they will resist over power-down, since data is stored to EEPROM and re-loaded on boot-up.

Address	Type	R/W	Name	Values / purpose
00h	byte	R	deviceAddress	8Fh, 91h-9Fh, A0h-EFh, identifies your device that the VM application is implementing. The values below A0h and over EFh are reserved for other purposes. At the beginning of programming, address is set to 8Fh. When program is started, default value 91h is used if the program does not specify any other value ("anonymous application").
01h	byte	R	regsVersion	00h-FFh, identifies your register set version
02h	word	R	regsSize	00h-80h, total size of your register set, meaning the bytes you are providing as an interface to be read and written by the Aistin protocol
04h-7Fh	byte	RW	ram	"RAM" and static data area for free use by your VM application

Note that bytes 00h-03h are read-only. To change them, you must provide the values via the Program register set, using register *programUID[]* (bytes 4-7).

EXAMPLE USE CASES

WRITE A STRING INTO RAM AREA

```
>w@8d05:10 'begin programming  
>w@8f04$My string
```

CHANGE RAM AREA'S DEVICE ADDRESS

The correct and only way to change ram area's device address is to begin programming and then to write the desired device address into program area's register 04h. This is shown below.

```
>w@8d05:10 'begin programming  
>w@8e04:ab 'set device address we want to provide to ABh
```

VIRTUAL MACHINE PROGRAM INSTRUCTION SET

For the Device 8Eh, version 04h

Virtual machine is based on assembly-alike instructions, laid out as byte stream with operation codes and corresponding arguments. The operation code byte (opcode) is divided into following bits:

bit	7	6	5	4	3	2	1	0
Purpose	Op. modifier	Operand type	Operand size	Operation code				

Operation code -bits define the operation in case, for example addition or multiplication. In most cases, *Operand size* is set zero for byte-sized operations and one for word-sized. The *Operand type* bit is mostly set zero if one of the operands is included as an immediate value, and one, if that operand should be taken from a RAM register, instead. *Operation modifier* is mostly used to select between unsigned and signed operations. The table below lists all available instructions. Note that arithmetic instructions are currently always producing saturated results in case of under/overflow.

The supported instructions are described in the table below. Following abbreviations are used:

- rd Byte value, destination ram address
- rs Byte value, source ram address
- Da Byte value, destination device address
- Ra Byte value, destination device register address
- Nb Byte value, used as a number of bytes
- de Byte value, message data encoding: use 42h for text, 03h for binary in hexadecimal
- b# Byte value, read as immediate value from code flow
- w# Word value (two bytes), read as immediate value from code flow
- jb Relative one byte jump address with special values 00h = first TAG, ffh= previous TAG
- jw Absolute two byte jump address with special values 0000h = first TAG, ffffh = previous TAG

Mnemonic	Code [hex]	Operands	Description
readdev8.b	01	rd, Ra	Read a single byte from current device using 8-bit register address
readdev8.w	21	rd, Ra	Read a word (2 bytes) from current device using 8-bit register address
readdev8.n	02	rd, Ra, Nb	Read Nb bytes from current device using 8-bit register address
writedev8.b	03	Ra, b#	Write an immediate byte to current device using 8-bit register address
writedev8.w	23	Ra, w#	Write an immediate word to current device using 8-bit register address
writedev8.b	43	Ra, rs	Write a single byte to current device using 8-bit register address

writedev8.w	63	Ra, rs	Write a word to current device using 8-bit register address
writedev8.n	04	Ra, rs, Nb	Write Nb bytes to current device using 8-bit register address
copy.b	05	rd, b#	Copy an immediate byte to rd
copy.w	25	rd, w#	Copy an immediate word to rd
copy.b	45	rd, rs	Copy a byte from rs to rd
copy.w	65	rd, rs	Copy a word from rs to rd
copy.n	06	rd, rs, Nb	(*) Copy Nb bytes from rs to rd
add.b	07	rd, b#	Add an immediate unsigned byte value
add.w	27	rd, w#	Add an immediate unsigned word value
add.b	47	rd, rs	Add unsigned bytes: $rd = rd + rs$
add.w	67	rd, rs	Add unsigned words: $rd = rd + rs$
add.sb	87	rd, b#	Add an immediate signed byte value
add.sw	A7	rd, w#	Add an immediate signed word value
add.sb	C7	rd, rs	Add signed bytes: $rd = rd + rs$
add.sw	E7	rd, rs	Add signed words: $rd = rd + rs$
sub.b	08	rd, b#	Subtract an immediate unsigned byte value
sub.w	28	rd, w#	Subtract an immediate unsigned word value
sub.b	48	rd, rs	Subtract unsigned bytes: $rd = rd - rs$
sub.w	68	rd, rs	Subtract unsigned words: $rd = rd - rs$
sub.sb	88	rd, b#	Subtract an immediate signed byte value
sub.sw	A8	rd, w#	Subtract an immediate signed word value
sub.sb	C8	rd, rs	Subtract signed bytes: $rd = rd - rs$
sub.sw	E8	rd, rs	Subtract signed words: $rd = rd - rs$
send.n	4B	rs, Nb, de	Send Nb bytes from rs to output channels as a D message
sync	0C	w#	Synchronize to microseconds time interval
sync	2C	w#	Synchronize to milliseconds time interval
sync	4C	rs	Synchronize to microseconds time interval
sync	6C	rs	Synchronize to milliseconds time interval
jmp.b	0D	jb	Signed one-byte relative jump
jmp.w	2D	jw	Absolute two-byte jump
cmp.b	0E	rs, b#	Compare unsigned bytes
cmp.w	2E	rs, w#	Compare unsigned words
cmp.sb	8E	rs, b#	Compare signed bytes
cmp.sw	AE	rs, w#	Compare signed words

jmpneq	0F	jb	Jump if not equal
jmpeq	2F	jb	Jump if equal
jmpg	4F	jb	Jump if greater
jmpgeq	6F	jb	Jump if greater or equal
jmppl	8F	jb	Jump if less
jmppeq	AF	jb	Jump if less or equal
abs.b	15	rd	Take an absolute value from a signed byte
abs.w	35	rd	Take an absolute value from a signed word
mul.b	17	rd, b#	Multiply with immediate unsigned byte
mul.w	37	rd, w#	Multiply with immediate unsigned word
mul.sb	97	rd, b#	Multiply with immediate signed byte
mul.sw	B7	rd, w#	Multiply with immediate signed word
div.b	18	rd, b#	Divide with immediate unsigned byte
div.w	38	rd, w#	Divide with immediate unsigned word
div.sb	98	rd, b#	Divide with immediate signed byte
div.sw	B8	rd, w#	Divide with immediate signed word
tag	1D	-	Mark a loop TAG for a program to loop later on
setdev	1E	b#	Set current device address (Da)
setnode	9E	rs	Set target nodeID to a null-terminating string stored at rs. Following special values can also be used: 00h = <i>loopback</i> , local reads/writes (default) 01h = <i>allnodes</i> , reads/writes to all nodes 02h = <i>allclients</i> , reads/writes to all clients 03h = <i>vmowner</i> , reads/writes to current VM owner

(*) This opcode may be replaced with other function in the future – use only if absolutely necessary.

SOME EXAMPLE PROGRAMS

The following codes can be uploaded as such into the iProtoXi Micro CPU board from a terminal program, using either copy-paste or alternatively, save example in a file and then upload that file. It is convenient to use file extension ".ais" in those files, to recognize them later on. After successful uploading, start the virtual machine with a command:

```
>w@8d05:04 'restart VM
```

To stop, use command:

```
>w@8d05:02 'stop VM
```

If you want to auto-start the program after uploading, just add the start command as a last line into the file before uploading. However, whether your program starts again automatically after power-down, depends on a setting on device 8Dh (Master register set). To set auto-start, command:

```
>w@8d05:13 'set auto-start ON
```

To turn it off, command:

```
>w@8d05:12 'set auto-start OFF
```

HELLOWORLD . AIS

```
'HELLOWORLD - iProtoXi Aistin virtual machine program for VM V04
>w@8d05:10      'command: re-program VM
>w@8e00:90040001 'VM V04 program ID
>w@8e04:91001000 'provided device address, version, reg. set size
'actual code
>w@8e08:1d      'loop begins
>w@8e08:2ce803  'sync at 1000 ms = 3e8h ms
>w@8e08:0b040c42 'send "Hello world!" D-message (12 chars)
>w@8e08:0dff    'jump to beginning (loop)
'program's register set (data)
>w@9104$Hello world!

>w@8d05:04      'command: start the program
```

TRAFFICLIGHTS . AIS

```
'TRAFFICLIGHTS - iProtoXi Aistin virtual machine program for VM V04
'This example needs you to have the iProtoXi LED controller board
'installed.
'(c) iProtoXi, originally created 2013-04-19 JNi
>w@8d05:10      'command: re-program VM
>w@8e00:90040001 'VM 04 program ID
>w@8e04:91000600 'provided device address, version, reg. set size
'Code begins
>w@8e08:1e34     'select LEDs device
>w@8e08:030040  'init direct..
>w@8e08:03365b  '..PWM
>w@8e08:1d      'loop begins
>w@8e08:6c04    'sync at r04 ms
'Set red light
>w@8e08:031c00  'LED0-R
>w@8e08:031600  'LED0-G
>w@8e08:031700  'LED0-B
>w@8e08:031d00  'LED1-R
```

```
>w@8e08:031800 'LED1-G
>w@8e08:031900 'LED1-B
>w@8e08:031e10 'LED2-R
>w@8e08:031a00 'LED2-G
>w@8e08:031b00 'LED2-B
>w@8e08:6c04 'sync at r04 ms
'Add yellow light
>w@8e08:031d10 'LED1-R
>w@8e08:031810 'LED1-G
>w@8e08:6c04 'sync at r04 ms
'Change to green
>w@8e08:031610 'LED0-G
>w@8e08:031d00 'LED1-R
>w@8e08:031800 'LED1-G
>w@8e08:031e00 'LED2-R
>w@8e08:6c04 'sync at r04 ms
'Change to yellow
>w@8e08:031600 'LED0-G
>w@8e08:031d10 'LED1-R
>w@8e08:031810 'LED1-G
>w@8e08:0dff 'loop to beginning
'program's register set (data)
>w@9104:0004 'default speed: 0400h ms = 1024 ms

>w@8d05:04 'command: start the program
```