

C141-E088-01EN

**MHJ2181AT, MHK2120AT,  
MHK2090AT, MHK2060AT**

**DISK DRIVES**

**PRODUCT MANUAL**

## **FOR SAFE OPERATION**

### **Handling of This Manual**

This manual contains important information for using this product. Read thoroughly before using the product. Use this product only after thoroughly reading and understanding especially the section “Important Alert Items” in this manual. Keep this manual handy, and keep it carefully.

FUJITSU makes every effort to prevent users and bystanders from being injured or from suffering damage to their property. Use the product according to this manual.

### **IMPORTANT NOTE TO USERS**

**READ THE ENTIRE MANUAL CAREFULLY BEFORE USING THIS PRODUCT. INCORRECT USE OF THE PRODUCT MAY RESULT IN INJURY OR DAMAGE TO USERS, BYSTANDERS OR PROPERTY.**

While FUJITSU has sought to ensure the accuracy of all information in this manual, FUJITSU assumes no liability to any party for any damage caused by any error or omission contained in this manual, its updates or supplements, whether such errors or omissions result from negligence, accident, or any other cause. In addition, FUJITSU assumes no liability with respect to the application or use of any product or system in accordance with the descriptions or instructions contained herein; including any liability for incidental or consequential damages arising therefrom. FUJITSU DISCLAIMS ALL WARRANTIES REGARDING THE INFORMATION CONTAINED HEREIN, WHETHER EXPRESSED, IMPLIED, OR STATUTORY.

FUJITSU reserves the right to make changes to any products described herein without further notice and without obligation.

The contents of this manual may be revised without prior notice.

The contents of this manual shall not be disclosed in any way or reproduced in any media without the express written permission of Fujitsu Limited.

All Rights Reserved, Copyright © FUJITSU LIMITED 1999

C141-E088-01EN

**This page is intentionally left blank.**

# Revision History

(1/1)

| Edition | Date       | Revised section (*1)<br>(Added/Deleted/Altered) | Details |
|---------|------------|---|---------|
| 01      | 1999-07-20 | —   | —       |
|         |            |   |         |

\*1 Section(s) with asterisk (\*) refer to the previous edition when those were deleted.

**This page is intentionally left blank.**

# Preface

This manual describes the MHJ Series and MHK Series, 2.5-inch hard disk drives. These drives have a built-in controller that is compatible with the ATA interface.

This manual describes the specifications and functions of the drives and explains in detail how to incorporate the drives into user systems. This manual assumes that the reader has a basic knowledge of hard disk drives and their implementations in computer systems.

This manual consists of seven chapters and sections explaining the special terminology and abbreviations used in this manual:

## Overview of Manual

### **CHAPTER 1 Device Overview**

This chapter gives an overview of the MHJ Series and MHK Series and describes their features.

### **CHAPTER 2 Device Configuration**

This chapter describes the internal configurations of the MHJ Series and MHK Series and the configuration of the systems in which they operate.

### **CHAPTER 3 Installation Conditions**

This chapter describes the external dimensions, installation conditions, and switch settings of the MHJ Series and MHK Series.

### **CHAPTER 4 Theory of Device Operation**

This chapter describes the operation theory of the MHJ Series and MHK Series.

### **CHAPTER 5 Interface**

This chapter describes the interface specifications of the MHJ Series and MHK Series.

### **CHAPTER 6 Operations**

This chapter describes the operations of the MHJ Series and MHK Series.

### **Terminology**

This section explains the special terminology used in this manual.

### **Abbreviation**

This section gives the meanings of the definitions used in this manual.

## Conventions for Alert Messages

This manual uses the following conventions to show the alert messages. An alert message consists of an alert signal and alert statements. The alert signal consists of an alert symbol and a signal word or just a signal word.

The following are the alert signals and their meanings:



This indicates a hazardous situation *could* result in *minor or moderate personal injury* if the user does not perform the procedure correctly. This alert signal also indicates that damages to the product or other property, *may* occur if the user does not perform the procedure correctly.

**IMPORTANT**

This indicates information that could help the user use the product more efficiently.

In the text, the alert signal is centered, followed below by the indented message. A wider line space precedes and follows the alert message to show where the alert message begins and ends. The following is an example:

(Example)



**Data corruption:** Avoid mounting the disk drive near strong magnetic sources such as loud speakers. Ensure that the disk drive is not affected by external magnetic fields.

The main alert messages in the text are also listed in the “Important Alert Items.”

## Operating Environment

This product is designed to be used in offices or computer rooms.

For details regarding the operating environment of use, refer to the \_\_\_\_\_  
\_\_\_\_\_ (Cnnn-Xnnn) and the \_\_\_\_\_  
\_\_\_\_\_ (Cnnn-Xnnn).

## Attention

Please forward any comments you may have regarding this manual.

To make this manual easier for users to understand, opinions from readers are needed. Please write your opinions or requests on the Comment at the back of this manual and forward it to the address described in the sheet.

## **Liability Exception**

“Disk drive defects” refers to defects that involve adjustment, repair, or replacement.

Fujitsu is not liable for any other disk drive defects, such as those caused by user misoperation or mishandling, inappropriate operating environments, defects in the power supply or cable, problems of the host system, or other causes outside the disk drive.



**This page is intentionally left blank.**

# Important Alert Items

## Important Alert Messages

The important alert messages in this manual are as follows:



A hazardous situation *could* result in *minor* or *moderate personal injury* if the user does not perform the procedure correctly. Also, damage to the predate or other property, *may* occur if the user does not perform the procedure correctly.

| Task             | Alert message   | Page |
|------------------|---|------|
| Normal Operation | <b>Data corruption:</b> Avoid mounting the disk near strong magnetic sources such as loud speakers. Ensure that the disk drive is not affected by external magnetic fields.<br><b>Static:</b> When handling the device, disconnect the body ground (500 k $\Omega$ or greater). Do not touch the printed circuit board, but hold it by the edges. | 3-8  |

**This page is intentionally left blank.**

# Manual Organization

MHJ2181AT, MHK2120AT,  
MHK2090AT, MHK2060AT

DISK DRIVES  
PRODUCT MANUAL  
(C141-E088)

<This manual>

- Device Overview
- Device Configuration
- Installation Conditions
- Theory of Device Operation
- Interface
- Operations

MHJ2181AT, MHK2120AT,  
MHK2090AT, MHK2060AT

DISK DRIVES  
MAINTENANCE MANUAL  
(C141-F038)

- Maintenance and Diagnosis
- Removal and Replacement Procedure

**This page is intentionally left blank.**

# Contents

## **CHAPTER 1 Device Overview..... 1-1**

- 1.1 Features 1-2
  - 1.1.1 Functions and performance 1-2
  - 1.1.2 Adaptability 1-2
  - 1.1.3 Interface 1-3
- 1.2 Device Specifications 1-4
  - 1.2.1 Specifications summary 1-4
  - 1.2.2 Model and product number 1-5
- 1.3 Power Requirements 1-5
- 1.4 Environmental Specifications 1-7
- 1.5 Acoustic Noise 1-8
- 1.6 Shock and Vibration 1-8
- 1.7 Reliability 1-9
- 1.8 Error Rate 1-10
- 1.9 Media Defects 1-10

## **CHAPTER 2 Device Configuration..... 2-1**

- 2.1 Device Configuration 2-2
- 2.2 System Configuration 2-4
  - 2.2.1 ATA interface 2-4
  - 2.2.2 1 drive connection 2-4
  - 2.2.3 2 drives connection 2-4

**CHAPTER 3 Installation Conditions.....3-1**

- 3.1 Dimensions 3-2
- 3.2 Mounting 3-4
- 3.3 Cable Connections 3-9
  - 3.3.1 Device connector 3-9
  - 3.3.2 Cable connector specifications 3-10
  - 3.3.3 Device connection 3-10
  - 3.3.4 Power supply connector (CN1) 3-11
- 3.4 Jumper Settings 3-11
  - 3.4.1 Location of setting jumpers 3-11
  - 3.4.2 Factory default setting 3-12
  - 3.4.3 Master drive-slave drive setting 3-12
  - 3.4.4 CSEL setting 3-13

**CHAPTER 4 Theory of Device Operation.....4-1**

- 4.1 Outline 4-2
- 4.2 Subassemblies 4-2
  - 4.2.1 Disk 4-2
  - 4.2.2 Head 4-2
  - 4.2.3 Spindle 4-3
  - 4.2.4 Actuator 4-3
  - 4.2.5 Air filter 4-3
- 4.3 Circuit Configuration 4-4
- 4.4 Power-on Sequence 4-6
- 4.5 Self-calibration 4-7
  - 4.5.1 Self-calibration contents 4-7
  - 4.5.2 Execution timing of self-calibration 4-8
  - 4.5.3 Command processing during self-calibration 4-9
- 4.6 Read/write Circuit 4-9

---

|                  |  |            |
|------------------|--|------------|
| 4.6.1            | Read/write preamplifier (PreAMP)               | 4-9        |
| 4.6.2            | Write circuit                                  | 4-10       |
| 4.6.3            | Read circuit                                   | 4-12       |
| 4.6.4            | Digital PLL circuit                            | 4-13       |
| 4.7              | Servo Control                                  | 4-14       |
| 4.7.1            | Servo control circuit                          | 4-14       |
| 4.7.2            | Data-surface servo format                      | 4-18       |
| 4.7.3            | Servo frame format                             | 4-18       |
| 4.7.4            | Actuator motor control                         | 4-19       |
| 4.7.5            | Spindle motor control                          | 4-20       |
| <b>CHAPTER 5</b> | <b>Interface .....</b>                         | <b>5-1</b> |
| 5.1              | Physical Interface                             | 5-2        |
| 5.1.1            | Interface signals                              | 5-2        |
| 5.1.2            | Signal assignment on the connector             | 5-3        |
| 5.2              | Logical Interface                              | 5-6        |
| 5.2.1            | I/O registers                                  | 5-7        |
| 5.2.2            | Command block registers                        | 5-8        |
| 5.2.3            | Control block registers                        | 5-13       |
| 5.3              | Host Commands                                  | 5-13       |
| 5.3.1            | Command code and parameters                    | 5-14       |
| 5.3.2            | Command descriptions                           | 5-16       |
| 5.3.3            | Error posting                                  | 5-77       |
| 5.4              | Command Protocol                               | 5-79       |
| 5.4.1            | Data transferring commands from device to host | 5-79       |
| 5.4.2            | Data transferring commands from host to device | 5-81       |
| 5.4.3            | Commands without data transfer                 | 5-83       |
| 5.4.4            | Other commands                                 | 5-84       |
| 5.4.5            | DMA data transfer commands                     | 5-84       |
| 5.5              | Ultra DMA Feature Set                          | 5-86       |
| 5.5.1            | Overview                                       | 5-86       |



- 5.5.2 Phases of operation 5-87
  - 5.5.2.1 Ultra DMA burst initiation phase 5-87
  - 5.5.2.2 Data transfer phase 5-88
  - 5.5.2.3 Ultra DMA burst termination phase 5-88
- 5.5.3 Ultra DMA data in commands 5-89
  - 5.5.3.1 Initiating an Ultra DMA data in burst 5-89
  - 5.5.3.2 The data in transfer 5-90
  - 5.5.3.3 Pausing an Ultra DMA data in burst 5-90
  - 5.5.3.4 Terminating an Ultra DMA data in burst 5-91
- 5.5.4 Ultra DMA data out commands 5-94
  - 5.5.4.1 Initiating an Ultra DMA data out burst 5-94
  - 5.5.4.2 The data out transfer 5-94
  - 5.5.4.3 Pausing an Ultra DMA data out burst 5-95
  - 5.5.4.4 Terminating an Ultra DMA data out burst 5-96
- 5.5.5 Ultra DMA CRC rules 5-98
- 5.5.6 Series termination required for Ultra DMA 5-100
  
- 5.6 Timing 5-101
  - 5.6.1 PIO data transfer 5-101
  - 5.6.2 Multiword DMA data transfer 5-103
  - 5.6.3 Transfer of Ultra DMA data 5-104
    - 5.6.3.1 Starting of Ultra DMA data In Burst 5-104
    - 5.6.3.2 Ultra DMA data burst timing requirements 5-105
    - 5.6.3.3 Sustained Ultra DMA data in burst 5-107
    - 5.6.3.4 Host pausing an Ultra DMA data in burst 5-108
    - 5.6.3.5 Device terminating an Ultra DMA data in burst 5-109
    - 5.6.3.6 Host terminating an Ultra DMA data in burst 5-110
    - 5.6.3.7 Initiating an Ultra DMA data out burst 5-111
    - 5.6.3.8 Sustained Ultra DMA data out burst 5-112
    - 5.6.3.9 Device pausing an Ultra DMA data out burst 5-113
    - 5.6.3.10 Host terminating an Ultra DMA data out burst 5-114
    - 5.6.3.11 Device terminating an Ultra DMA data in burst 5-115
  - 5.6.4 Power-on and reset 5-116

---

|                                   |                                |             |
|-----------------------------------|--------------------------------|-------------|
| <b>CHAPTER 6</b>                  | <b>Operations .....</b>        | <b>6-1</b>  |
| 6.1                               | Device Response to the Reset   | 6-2         |
| 6.1.1                             | Response to power-on           | 6-2         |
| 6.1.2                             | Response to hardware reset     | 6-4         |
| 6.1.3                             | Response to software reset     | 6-5         |
| 6.1.4                             | Response to diagnostic command | 6-6         |
| 6.2                               | Address Translation            | 6-7         |
| 6.2.1                             | Default parameters             | 6-7         |
| 6.2.2                             | Logical address                | 6-8         |
| 6.3                               | Power Save                     | 6-9         |
| 6.3.1                             | Power save mode                | 6-9         |
| 6.3.2                             | Power commands                 | 6-11        |
| 6.4                               | Defect Management              | 6-11        |
| 6.4.1                             | Spare area                     | 6-12        |
| 6.4.2                             | Alternating defective sectors  | 6-12        |
| 6.5                               | Read-Ahead Cache               | 6-14        |
| 6.5.1                             | Data buffer configuration      | 6-14        |
| 6.5.2                             | Caching operation              | 6-14        |
| 6.5.3                             | Usage of read segment          | 6-16        |
| 6.5.3.1                           | Mis-hit (no hit)               | 6-16        |
| 6.5.3.2                           | Sequential read                | 6-17        |
| 6.5.3.3                           | Full hit (hit all)             | 6-20        |
| 6.5.3.4                           | Partially hit                  | 6-21        |
| 6.6                               | Write Cache                    | 6-22        |
| <b>Glossary</b>                   | <b>.....</b>                   | <b>GL-1</b> |
| <b>Acronyms and Abbreviations</b> | <b>.....</b>                   | <b>AB-1</b> |
| <b>Index</b>                      | <b>.....</b>                   | <b>IN-1</b> |

---

# Illustrations

## Figures

- Figure 1.1 Current fluctuation (Typ.) at +5V when power is turned on 1-6
- Figure 2.1 Disk drive overview (the MHJ Series and MHK Series) 2-2
- Figure 2.2 Configuration of disk media heads 2-3
- Figure 2.3 1 drive system configuration 2-4
- Figure 2.4 2 drives configuration 2-4
- Figure 3.1 Dimensions (MHJ/MHK series) 3-2
- Figure 3.2 Orientation (Sample: MHJ2181AT) 3-4
- Figure 3.3 Mounting frame structure 3-5
- Figure 3.4 Location of breather 3-6
- Figure 3.5 Surface temperature measurement points (Sample: MHJ2181AT) 3-7
- Figure 3.6 Service area (Sample: MHJ2181AT) 3-8
- Figure 3.7 Connector locations (Sample: MHJ2181AT) 3-9
- Figure 3.8 Cable connections 3-10
- Figure 3.9 Power supply connector pins (CN1) 3-11
- Figure 3.10 Jumper location 3-11
- Figure 3.11 Factory default setting 3-12
- Figure 3.12 Jumper setting of master or slave device 3-12
- Figure 3.13 CSEL setting 3-13
- Figure 3.14 Example (1) of Cable Select 3-13
- Figure 3.15 Example (2) of Cable Select 3-14
- Figure 4.1 Head structure 4-3
- Figure 4.2 Circuit Configuration 4-5
- Figure 4.3 Power-on operation sequence 4-7
- Figure 4.4 Read/write circuit block diagram 4-11
- Figure 4.5 Frequency characteristic of programmable filter 4-12
- Figure 4.6 Block diagram of servo control circuit 4-14
- Figure 4.7 Physical sector servo configuration on disk surface 4-16
- Figure 4.8 Servo frame format 4-18
- Figure 5.1 Interface signals 5-2
- Figure 5.2 Execution example of READ MULTIPLE command 5-20
- Figure 5.3 Read Sector(s) command protocol 5-80

|             |  |       |
|-------------|--|-------|
| Figure 5.4  | Protocol for command abort                               | 5-81  |
| Figure 5.5  | WRITE SECTOR(S) command protocol                         | 5-82  |
| Figure 5.6  | Protocol for the command execution without data transfer | 5-84  |
| Figure 5.7  | Normal DMA data transfer                                 | 5-85  |
| Figure 5.8  | An example of generation of parallel CRC                 | 5-99  |
| Figure 5.9  | Ultra DMA termination with pull-up or pull-down          | 5-100 |
| Figure 5.10 | Data transfer timing                                     | 5-102 |
| Figure 5.11 | Multiword DMA data transfer timing (mode 2)              | 5-103 |
| Figure 5.12 | Starting of Ultra DMA data In Burst transfer             | 5-104 |
| Figure 5.13 | Sustained Ultra DMA data in burst                        | 5-107 |
| Figure 5.14 | Host pausing an Ultra DMA data in burst                  | 5-108 |
| Figure 5.15 | Device terminating an Ultra DMA data in burst            | 5-109 |
| Figure 5.16 | Host terminating an Ultra DMA data in burst              | 5-110 |
| Figure 5.17 | Initiating an Ultra DMA data out burst                   | 5-111 |
| Figure 5.18 | Sustained Ultra DMA data out burst                       | 5-112 |
| Figure 5.19 | Device pausing an Ultra DMA data out burst               | 5-113 |
| Figure 5.20 | Host terminating an Ultra DMA data out burst             | 5-114 |
| Figure 5.21 | Device terminating an Ultra DMA data out burst           | 5-115 |
| Figure 5.22 | Power on Reset Timing                                    | 5-116 |
|             |  |       |
| Figure 6.1  | Response to power-on                                     | 6-3   |
| Figure 6.2  | Response to hardware reset                               | 6-4   |
| Figure 6.3  | Response to software reset                               | 6-5   |
| Figure 6.4  | Response to diagnostic command                           | 6-6   |
| Figure 6.5  | Address translation (example in CHS mode)                | 6-8   |
| Figure 6.6  | Address translation (example in LBA mode)                | 6-9   |
| Figure 6.7  | Sector slip processing                                   | 6-12  |
| Figure 6.8  | Alternate cylinder assignment                            | 6-13  |
| Figure 6.9  | Data buffer configuration                                | 6-14  |

## Tables

|           |  |     |
|-----------|--|-----|
| Table 1.1 | Specifications   | 1-4 |
| Table 1.2 | Model names and product numbers                            | 1-5 |
| Table 1.3 | Current and power dissipation                              | 1-6 |
| Table 1.4 | Environmental specifications                               | 1-7 |
| Table 1.5 | Acoustic noise specification                               | 1-8 |
| Table 1.6 | Shock and vibration specification                          | 1-8 |
|           |  |     |
| Table 3.1 | Surface temperature measurement points and standard values | 3-7 |

|            |   |       |
|------------|---|-------|
| Table 3.2  | Cable connector specifications  | 3-10  |
| Table 4.1  | Self-calibration execution timechart  | 4-9   |
| Table 4.2  | Write precompensation algorithm   | 4-10  |
| Table 5.1  | Signal assignment on the interface connector  | 5-3   |
| Table 5.2  | I/O registers   | 5-7   |
| Table 5.3  | Command code and parameters   | 5-14  |
| Table 5.4  | Information to be read by IDENTIFY DEVICE command   | 5-32  |
| Table 5.5  | Features register values and settable modes   | 5-40  |
| Table 5.6  | Diagnostic code   | 5-47  |
| Table 5.7  | Features Register values (subcommands) and functions  | 5-58  |
| Table 5.8  | Format of device attribute value data   | 5-62  |
| Table 5.9  | Format of insurance failure threshold value data  | 5-62  |
| Table 5.10 | SMART error log data format   | 5-66  |
| Table 5.11 | SMART self test log data format   | 5-68  |
| Table 5.12 | Contents of security password   | 5-70  |
| Table 5.13 | Contents of SECURITY SET PASSWORD data  | 5-74  |
| Table 5.14 | Relationship between combination of Identifier and Security level, and operation of the lock function | 5-74  |
| Table 5.15 | Command code and parameters   | 5-77  |
| Table 5.16 | Parallel generation equation of CRC polynomial  | 5-99  |
| Table 5.17 | Recommended series termination for Ultra DMA  | 5-100 |
| Table 5.18 | Ultra DMA data burst timing requirements  | 5-105 |
| Table 6.1  | Default parameters  | 6-7   |

# CHAPTER 1 Device Overview

- |     |                              |
|-----|------------------------------|
| 1.1 | Features                     |
| 1.2 | Device Specifications        |
| 1.3 | Power Requirements           |
| 1.4 | Environmental Specifications |
| 1.5 | Acoustic Noise               |
| 1.6 | Shock and Vibration          |
| 1.7 | Reliability                  |
| 1.8 | Error Rate                   |
| 1.9 | Media Defects                |

Overview and features are described in this chapter, and specifications and power requirement are described.

The MHJ Series and MHK Series are 2.5-inch hard disk drives with built-in disk controllers. These disk drives use the AT-bus hard disk interface protocol and are compact and reliable.

## 1.1 Features

### 1.1.1 Functions and performance

The following features of the MHJ Series and MHK Series are described.

(1) Compact

The MHJ2181AT has 3 disks, and its height is 12.5 mm (0.492 inch). The MHK2120AT, MHK2090AT and MHK2060AT have 1 disk or 2 disks of 65 mm (2.5 inches) diameter, and its height is 9.5 mm (0.374 inch).

(2) Large capacity

The disk drive can record up to 6.0 GB (formatted) on one disk using the 16/17 MTR recording method and 15 recording zone technology. The MHJ Series and MHK Series have a formatted capacity of 18.1 GB (MHJ2181AT), 12.0 GB (MHK2120AT), 9.0 GB (MHK2090AT) and 6.0 GB (MHK2060AT) respectively.

(3) High-speed Transfer rate

The disk drives (the MHJ Series and MHK Series) have an internal data rate up to 22.3 MB/s. The disk drive supports an external data rate up to 66.6 MB/s (UDMA mode 4).

(4) Average positioning time

Use of a rotary voice coil motor in the head positioning mechanism greatly increases the positioning speed. The average positioning time is 13 ms (at read).

### 1.1.2 Adaptability

(1) Power save mode

The power save mode feature for idle operation, stand by and sleep modes makes The disk drives (the MHJ Series and MHK Series) ideal for applications where power consumption is a factor.

(2) Wide temperature range

The disk drives (the MHJ Series and MHK Series) can be used over a wide temperature range (5°C to 55°C).

(3) Low noise and vibration

In Ready status, the noise of the disk drives (the MHJ Series and MHK Series) is only about 30 dBA (measured at 1 m apart from the drive under the idle mode).

### 1.1.3 Interface

(1) Connection to interface

With the built-in ATA interface controller, the disk drives (the MHJ Series and MHK Series) can be connected to an ATA interface of a personal computer.

(2) 512-KB data buffer

The disk drives (the MHJ Series and MHK Series) uses a 512-KB data buffer to transfer data between the host and the disk media.

In combination with the read-ahead cache system described in item (3) and the write cache described in item (7), the buffer contributes to efficient I/O processing.

(3) Read-ahead cache system

After the execution of a disk read command, the disk drive automatically reads the subsequent data block and writes it to the data buffer (read ahead operation). This cache system enables fast data access. The next disk read command would normally cause another disk access. But, if the read ahead data corresponds to the data requested by the next read command, the data in the buffer can be transferred instead.

(4) Master/slave

The disk drives (the MHJ Series and MHK Series) can be connected to ATA interface as daisy chain configuration. Drive 0 is a master device, drive 1 is a slave device.

(5) Error correction and retry by ECC

If a recoverable error occurs, the disk drives (the MHJ Series and MHK Series) themselves attempt error recovery. The ECC has improved buffer error correction for correctable data errors.

(6) Self-diagnosis

The disk drives (the MHJ Series and MHK Series) have a diagnostic function to check operation of the controller and disk drives. Executing the diagnostic command invokes self-diagnosis.

(7) Write cache

When the disk drives (the MHJ Series and MHK Series) receive a write command, the disk drives post the command completion at completion of transferring data to the data buffer completion of writing to the disk media. This feature reduces the access time at writing.



## 1.2 Device Specifications

### 1.2.1 Specifications summary

Table 1.1 shows the specifications of the disk drives (MHJ Series and MHK Series).

**Table 1.1 Specifications (1/2)**

|  | MHJ2181AT   | MHK2120AT                                 | MHK2090AT | MHK2060AT |
|--|---|---|-----------|-----------|
| Format Capacity (*1)   | 18.1 GB   | 12.0 GB                                   | 9.0 GB    | 6.0 GB    |
| Number of Heads  | 6   | 4   | 3         | 2         |
| Number of Cylinders (User)   | 14,784  |   |           |           |
| Bytes per Sector   | 512   |   |           |           |
| Recording Method   | 16/17 MTR   |   |           |           |
| Track Density  | 24,300 TPI  |   |           |           |
| Bit Density  | 383 Kbpi  |   |           |           |
| Rotational Speed   | 4,200 rpm $\pm$ 1%                                    |   |           |           |
| Average Latency  | 7.14 ms   |   |           |           |
| Positioning time (read and seek) <ul style="list-style-type: none"> <li>• Minimum (Track to Track)</li> <li>• Average</li> <li>• Maximum (Full)</li> </ul> | 1.5 ms (typ.)<br>Read: 13 ms (typ.)<br>23 ms (typ.)   |   |           |           |
| Start/Stop time <ul style="list-style-type: none"> <li>• Start (0 rpm to Drive Read)</li> <li>• Stop (at Power Down)</li> </ul>                            | Typ.: 5 sec<br>Typ.: 5 sec                            |   |           |           |
| Interface  | ATA-5 (Max. Cable length: 0.46 m)                     |   |           |           |
| Data Transfer Rate <ul style="list-style-type: none"> <li>• To/From Media</li> <li>• To/From Host</li> </ul>   | 12.5 to 22.3 MB/s<br>66.6 MB/s Max.<br>(U-DMA mode 4) |   |           |           |
| Data Buffer Size   | 512 KB  |   |           |           |
| Physical Dimensions<br>(Height $\times$ Width $\times$ Depth)  | 12.5 mm $\times$<br>100.0 mm $\times$<br>70.0 mm      | 9.5 mm $\times$ 100.0 mm $\times$ 70.0 mm |           |           |
| Weight   | 145 g   | 98 g                                      |           |           |

\*1: Capacity under the LBA mode.

Under the CHS mode (normal BIOS specification), formatted capacity, number of cylinders, number of heads, and number of sectors are as follows.

**Table 1.1 Specifications (2/2)**

| Model     | Formatted Capacity | No. of Cylinder | No. of Heads | No. of Sectors |
|-----------|--------------------|-----------------|--------------|----------------|
| MHJ2181AT | 8,455.20 MB        | 16,383          | 16           | 63             |
| MHK2120AT | 8,455.20 MB        | 16,383          | 16           | 63             |
| MHK2090AT | 8,455.20 MB        | 16,383          | 16           | 63             |
| MHK2060AT | 6,007.35 MB        | 12,416          | 15           | 63             |

### 1.2.2 Model and product number

Table 1.2 lists the model names and product numbers of the MHJ Series and MHK Series.

**Table 1.2 Model names and product numbers**

| Model Name | Capacity (user area) | Mounting screw | Order No.    |
|------------|----------------------|----------------|--------------|
| MHJ2181AT  | 18.1 GB              | M3, depth 3    | CA05365-B060 |
| MHK2120AT  | 12.0 GB              | M3, depth 3    | CA05366-B040 |
| MHK2090AT  | 9.0 GB               | M3, depth 3    | CA05366-B030 |
| MHK2060AT  | 6.0 GB               | M3, depth 3    | CA05366-B020 |

## 1.3 Power Requirements

### (1) Input Voltage

- +5 V  $\pm$  5 %

### (2) Ripple

|           | +5 V                  |
|-----------|-----------------------|
| Maximum   | 100 mV (peak to peak) |
| Frequency | DC to 1 MHz           |

(3) Current Requirements and Power Dissipation

Table 1.3 lists the current and power dissipation.

**Table 1.3 Current and power dissipation**

|                                    | Typical RMS Current |            | Typical Power (*3) |            |
|------------------------------------|---------------------|------------|--------------------|------------|
|                                    | MHJ Series          | MHK Series | MHJ Series         | MHK Series |
| Spin up (*1)                       | 0.9 A               | 0.9 A      | 4.5 W              | 4.5 W      |
| Idle                               | 170 mA              | 170 mA     | 0.85 W             | 0.85 W     |
| R/W (on track) (*2)                | 460 mA              | 460 mA     | 2.3 W              | 2.3 W      |
| Seek (*5)                          | 460 mA              | 460 mA     | 2.3 W              | 2.3 W      |
| Standby                            | 56 mA               | 56 mA      | 0.28 W             | 0.28 W     |
| Sleep                              | 20 mA               | 20 mA      | 0.1 W              | 0.1 W      |
| Energy Consumption Efficiency (*4) | —                   | —          | 0.047 W/GB         | 0.071 W/GB |

\*1 Current at starting spindle motor.


\*2 At 30% disk accessing.

\*3 Power requirements reflect nominal values for +5V power.

\*4 Energy Consumption Efficiency =  
Idle power dissipation / Total record capacity (GB)

\*5 The seek average current is specified based on three operations per 100 msec.

(4) Current fluctuation (Typ.) at +5V when power is turned on

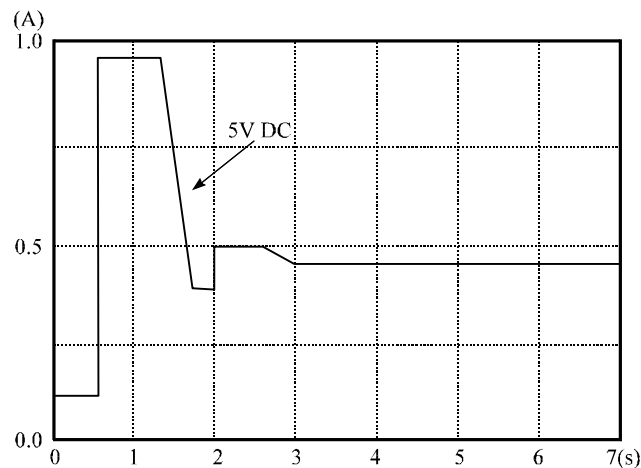

**Figure 1.1 Current fluctuation (Typ.) at +5V when power is turned on**

## (5) Power on/off sequence

The voltage detector circuits (the MHJ Series and MHK Series) monitor +5 V. The circuits do not allow a write signal if either voltage is abnormal. These prevent data from being destroyed and eliminates the need to be concerned with the power on/off sequence.

## 1.4 Environmental Specifications

Table 1.4 lists the environmental specifications.

**Table 1.4 Environmental specifications**

| Item   | Specification  |
|--|--|
| Temperature <ul style="list-style-type: none"> <li>• Operating</li> <li>• Non-operating</li> <li>• Thermal Gradient</li> </ul> | 5°C to 55°C (ambient)<br>5°C to 60°C (disk enclosure surface)<br>–40°C to 65°C<br>20°C/h or less           |
| Humidity <ul style="list-style-type: none"> <li>• Operating</li> <li>• Non-operating</li> <li>• Maximum Wet Bulb</li> </ul>    | 8% to 90% RH (Non-condensing)<br>5% to 95% RH (Non-condensing)<br>29°C (Operating)<br>40°C (Non-operating) |
| Altitude (relative to sea level) <ul style="list-style-type: none"> <li>• Operating</li> <li>• Non-operating</li> </ul>        | –300 to 3,000 m<br>–300 to 12,000 m  |

## 1.5 Acoustic Noise

Table 1.5 lists the acoustic noise specification.

**Table 1.5 Acoustic noise specification**

| Item   | Specification         |
|--|-----------------------|
| Sound Pressure <ul style="list-style-type: none"> <li>• Idle mode (DRIVE READY)</li> </ul> | 30 dBA typical at 1 m |

Note:

Measure the noise from the cover top surface.

## 1.6 Shock and Vibration

Table 1.6 lists the shock and vibration specification.

**Table 1.6 Shock and vibration specification**

| Item   | Specification  |
|--|--|
| Vibration (swept sine, one octave per minute) <ul style="list-style-type: none"> <li>• Operating</li> <li>• Non-operating</li> </ul> | 5 to 500 Hz, 1.0G 0-peak (MHJ series)<br>5 to 400 Hz, 1.0G 0-peak (MHK series)<br>(without non-recovered errors) (9.8 m/s <sup>2</sup> 0-peak)<br><br>5 to 500 Hz, 5G 0-peak (MHJ series)<br>5 to 400 Hz, 5G 0-peak (MHK series)<br>(no damage) (49 m/s <sup>2</sup> 0-peak) |
| Shock (half-sine pulse) <ul style="list-style-type: none"> <li>• Operating</li> <li>• Non-operating</li> </ul>                       | 150G 0-peak (1,470 m/s <sup>2</sup> 0-peak)<br>2 ms duration (without non-recovered errors)<br><br>700G 0-peak (6,860 m/s <sup>2</sup> 0-peak)<br>1 ms duration (no damage)<br><br>120G 0-peak (1,176 m/s <sup>2</sup> 0-peak)<br>11 ms duration (no damage)                 |

## 1.7 Reliability

### (1) Mean time between failures (MTBF)

|                         |                |  |
|-------------------------|----------------|--|
| Conditions of 300,000 h | Power-on time  | 250H/month or less 3000H/years or less                           |
|                         | Operating time | 20% or less of power-on time                                     |
|                         | CSS operations | 50/day or less<br>Total 50,000 or less                           |
|                         | Power on/off   | 1/day or more needed.  |
|                         | Environment    | 5 to 55°C/8 to 90%<br>But humidity bulb temperature 29°C or less |

MTBF is defined as follows:

$$\text{MTBF} = \frac{\text{Total operation time in all fields}}{\text{number of device failure in all fields (*1)}} \text{ (H)}$$

\*1 “Disk drive defects” refers to defects that involve repair, readjustment, or replacement. Disk drive defects do not include failures caused by external factors, such as damage caused by handling, inappropriate operating environments, defects in the power supply host system, or interface cable.

### (2) Mean time to repair (MTTR)

The mean time to repair (MTTR) is 30 minutes or less, if repaired by a specialist maintenance staff member.

### (3) Service life

In situations where management and handling are correct, the disk drive requires no overhaul for five years when the DE surface temperature is less than 48°C. When the DE surface temperature exceeds 48°C, the disk drives requires no overhaul for five years or 20,000 hours of operation, whichever occurs first. Refer to item (3) in Subsection 3.2 for the measurement point of the DE surface temperature. Also the operating conditions except the environment temperature are based on the MTBF conditions.

### (4) Data assurance in the event of power failure

Except for the data block being written to, the data on the disk media is assured in the event of any power supply abnormalities. This does not include power supply abnormalities during disk media initialization (formatting) or processing of defects (alternative block assignment).

## 1.8 Error Rate

Known defects, for which alternative blocks can be assigned, are not included in the error rate count below. It is assumed that the data blocks to be accessed are evenly distributed on the disk media.

### (1) Unrecoverable read error

Read errors that cannot be recovered by maximum read retries of drive without user's retry and ECC corrections shall occur no more than 10 times when reading data of  $10^{14}$  bits. Read retries are executed according to the disk drive's error recovery procedure, and include read retries accompanying head offset operations.

### (2) Positioning error

Positioning (seek) errors that can be recovered by one retry shall occur no more than 10 times in  $10^7$  seek operations.

## 1.9 Media Defects

Defective sectors are replaced with alternates when the disk (the MHJ Series and MHK Series) are formatted prior to shipment from the factory (low level format). Thus, the hosts see a defect-free devices.

Alternate sectors are automatically accessed by the disk drive. The user need not be concerned with access to alternate sectors.

# CHAPTER 2 Device Configuration


|     |                      |
|-----|----------------------|
| 2.1 | Device Configuration |
| 2.2 | System Configuration |

This chapter describes the internal configurations of the hard disk drives and the configuration of the systems in which they operate.



## 2.1 Device Configuration

Figure 2.1 shows the disk drive. The disk drive consists of a disk enclosure (DE), read/write preamplifier, and controller PCA. The disk enclosure contains the disk media, heads, spindle motors, actuators, and a circulating air filter.

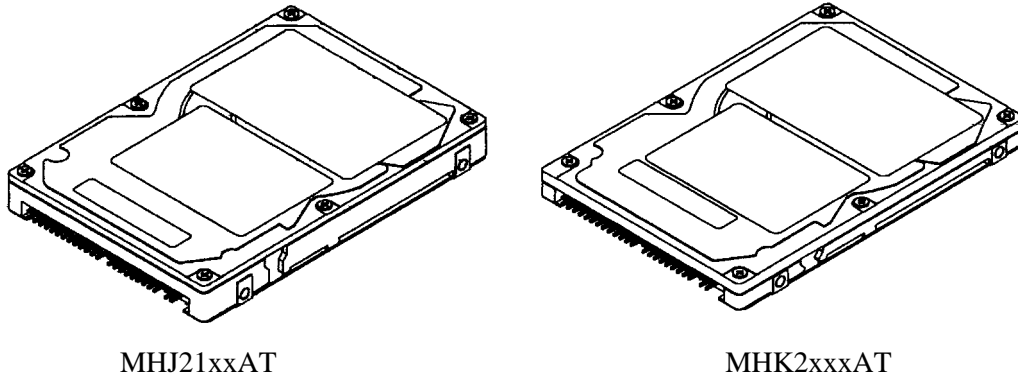

**Figure 2.1 Disk drive overview (the MHJ Series and MHK Series)**

### (1) Disk

The outer diameter of the disk is 65 mm. The inner diameter is 20 mm. The number of disks used varies with the model, as described below. The disks are rated at over 50,000 start/stop operations.


MHJ2181AT: 3 disks

MHK2120AT: 2 disks    MHK2090AT: 2 disks    MHK2060AT: 1 disk

### (2) Head

The heads are of the contact start/stop (CSS) type. The head touches the disk surface while the disk is not rotating and automatically lifts when the disk starts.

Figure 2.2 illustrates the configuration of the disks and heads of each model. In the disk surface, servo information necessary for controlling positioning and read/write and user data are written. Numerals 0 to 5 indicate read/write heads.

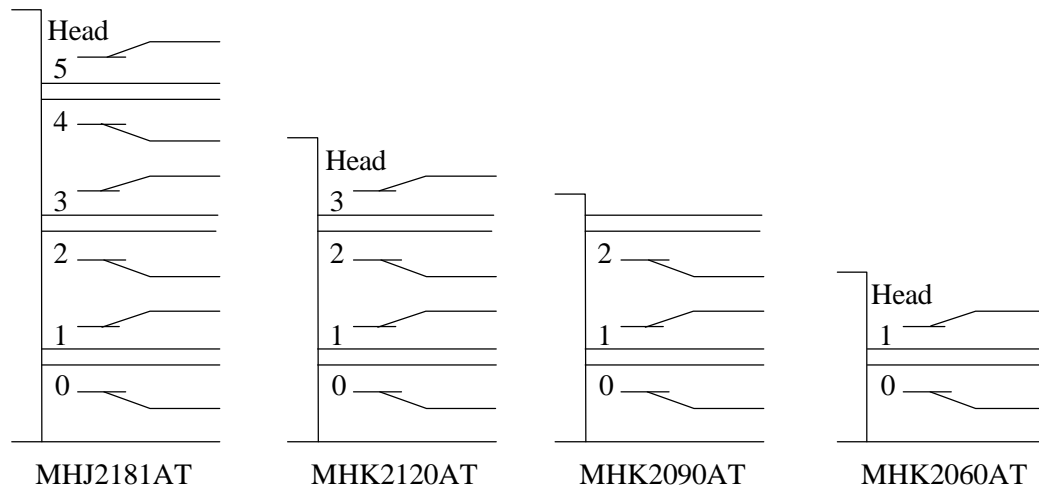

**Figure 2.2 Configuration of disk media heads**

(3) Spindle motor

The disks are rotated by a direct drive Hall-less DC motor.

(4) Actuator

The actuator uses a revolving voice coil motor (VCM) structure which consumes low power and generates very little heat. The head assembly at the edge of the actuator arm is controlled and positioned by feedback of the servo information read by the read/write head. If the power is not on or if the spindle motor is stopped, the head assembly stays in the specific CSS zone on the disk and is fixed by a mechanical lock.

(5) Air circulation system

The disk enclosure (DE) is sealed to prevent dust and dirt from entering. The disk enclosure features a closed loop air circulation system that relies on the blower effect of the rotating disk. This system continuously circulates the air through the circulation filter to maintain the cleanliness of the air within the disk enclosure.

(6) Read/write circuit

The read/write circuit uses a LSI chip for the read/write preamplifier. It improves data reliability by preventing errors caused by external noise.

(7) Controller circuit

The controller circuit consists of an LSI chip to improve reliability. The high-speed microprocessor unit (MPU) achieves a high-performance AT controller.

## 2.2 System Configuration

### 2.2.1 ATA interface

Figures 2.3 and 2.4 show the ATA interface system configuration. The drive has a 44-pin PC AT interface connector and supports the PIO transfer at 16.6 MB/s (ATA-3, Mode 4), the DMA transfer at 16.6 MB/s (ATA-3, Multiword Mode 2) and also the U-DMA at 66.6 MB/s (ATA-3, Mode 4).

### 2.2.2 1 drive connection


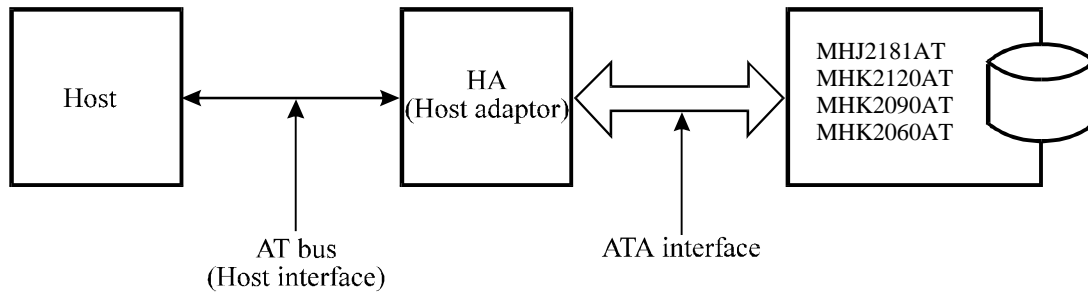


Figure 2.3 1 drive system configuration

### 2.2.3 2 drives connection

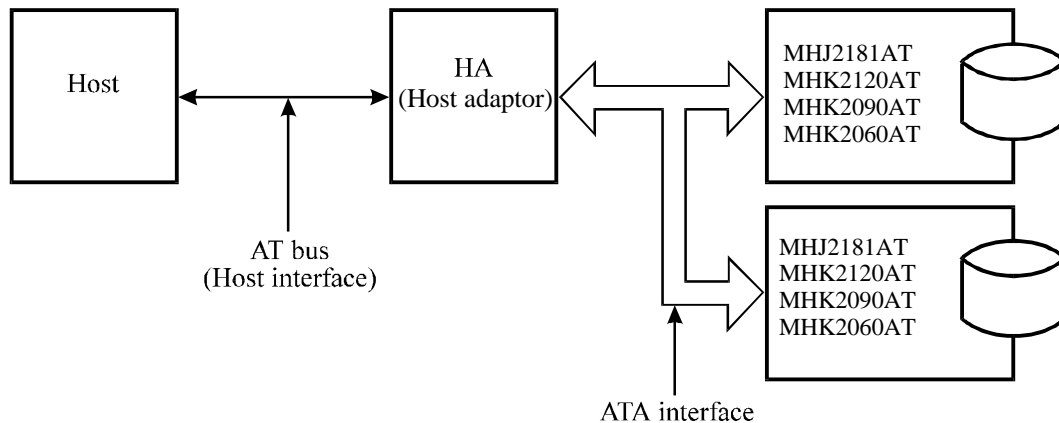

Note:

When the drive that is not conformed to ATA is connected to the disk drive above configuration, the operation is not guaranteed.

Figure 2.4 2 drives configuration

### **IMPORTANT**

HA (host adaptor) consists of address decoder, driver, and receiver. ATA is an abbreviation of “AT attachment”. The disk drive is conformed to the ATA-4 interface.

At high speed data transfer (PIO mode 3, mode 4, or DMA mode 2 U-DMA mode 4), occurrence of ringing or crosstalk of the signal lines (AT bus) between the HA and the disk drive may be a great cause of the obstruction of system reliability. Thus, it is necessary that the capacitance of the signal lines including the HA and cable does not exceed the ATA-5 standard, and the cable length between the HA and the disk drive should be as short as possible.

No need to push the top cover of the disk drive. If the over-power worked, the cover could be contacted with the spindle motor. Thus, that could be made it the cause of failure.

**This page is intentionally left blank.**

## CHAPTER 3 Installation Conditions

- |     |                   |
|-----|-------------------|
| 3.1 | Dimensions        |
| 3.2 | Mounting          |
| 3.3 | Cable Connections |
| 3.4 | Jumper Settings   |

This chapter gives the external dimensions, installation conditions, surface temperature conditions, cable connections, and switch settings of the hard disk drives.

### 3.1 Dimensions

Figure 3.1 illustrates the dimensions of the disk drive and positions of the mounting screw holes. All dimensions are in mm.

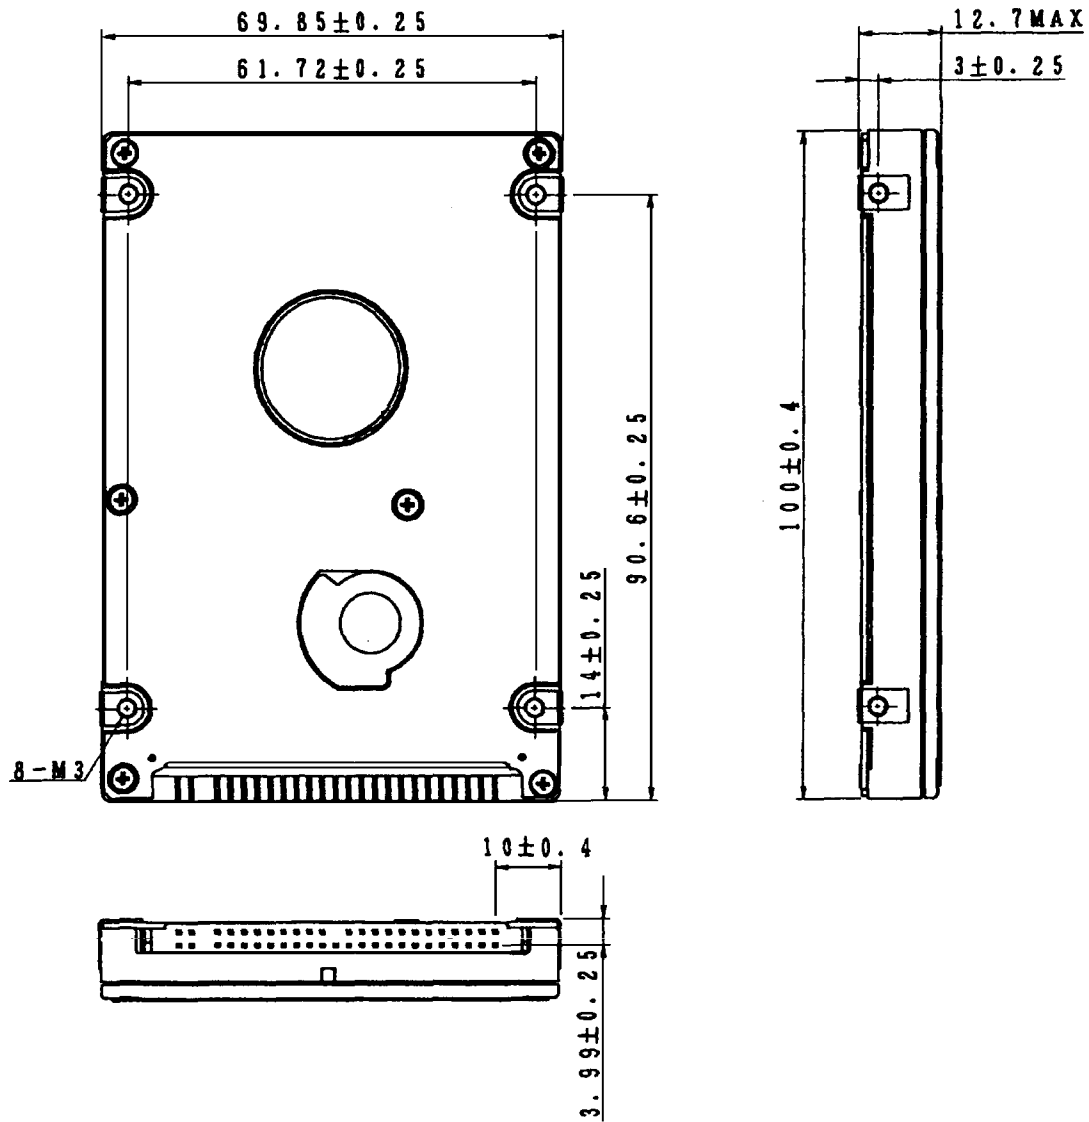


Figure 3.1 Dimensions (MHJ series) (1/2)

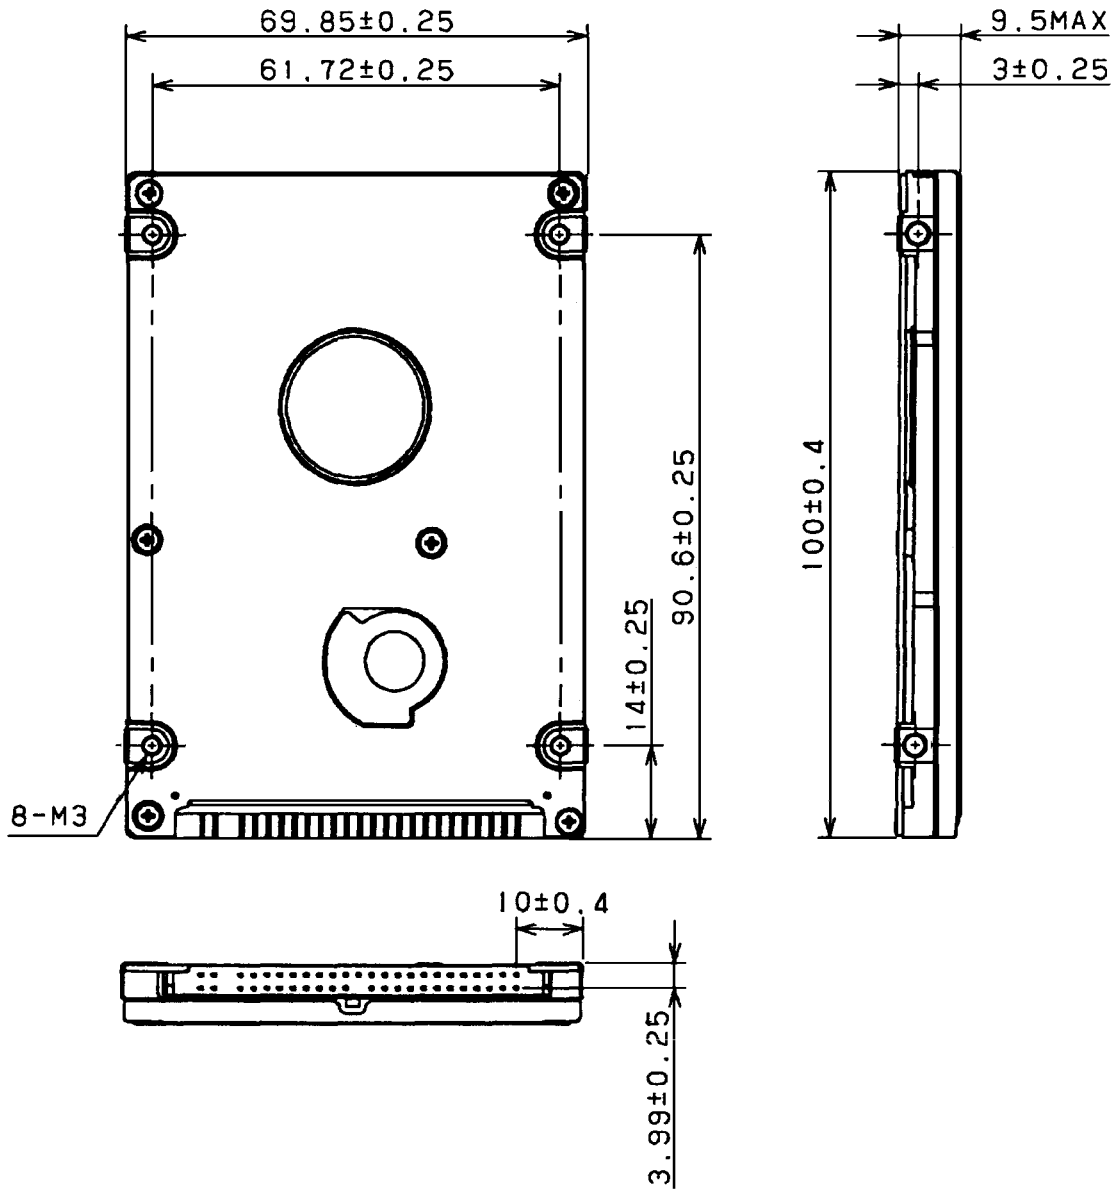



Figure 3.1 Dimensions (MHK series) (2/2)



### 3.2 Mounting

(1) Orientation

Figure 3.2 illustrates the allowable orientations for the disk drive.

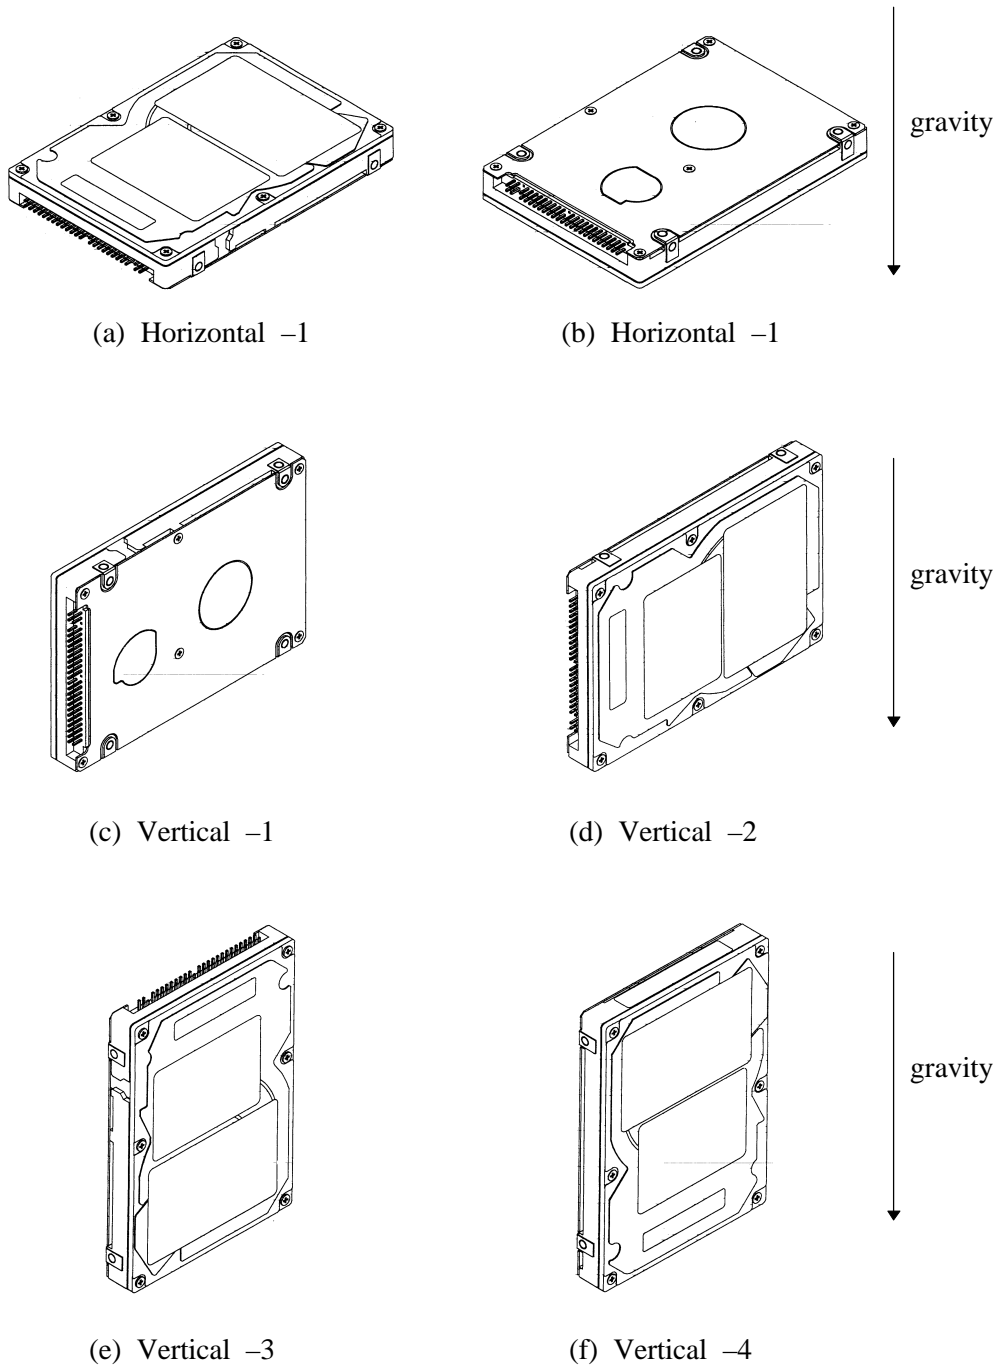

**Figure 3.2 Orientation (Sample: MHJ2181AT)**

## (2) Frame

The MR head bias of the HDD disk enclosure (DE) is zero. The mounting frame is connected to SG.

**IMPORTANT**

Use M3 screw for the mounting screw and the screw length should satisfy the specification in Figure 3.3.


The tightening torque must be 5 kgcm.

When attaching the HDD to the system frame, do not allow the system frame to touch parts (cover and base) other than parts to which the HDD is attached.

## (3) Limitation of mounting

Do not use the center hole. For screw length, see Figure 3.3.

Note) These dimensions are recommended values; if it is not possible to satisfy them, contact us.

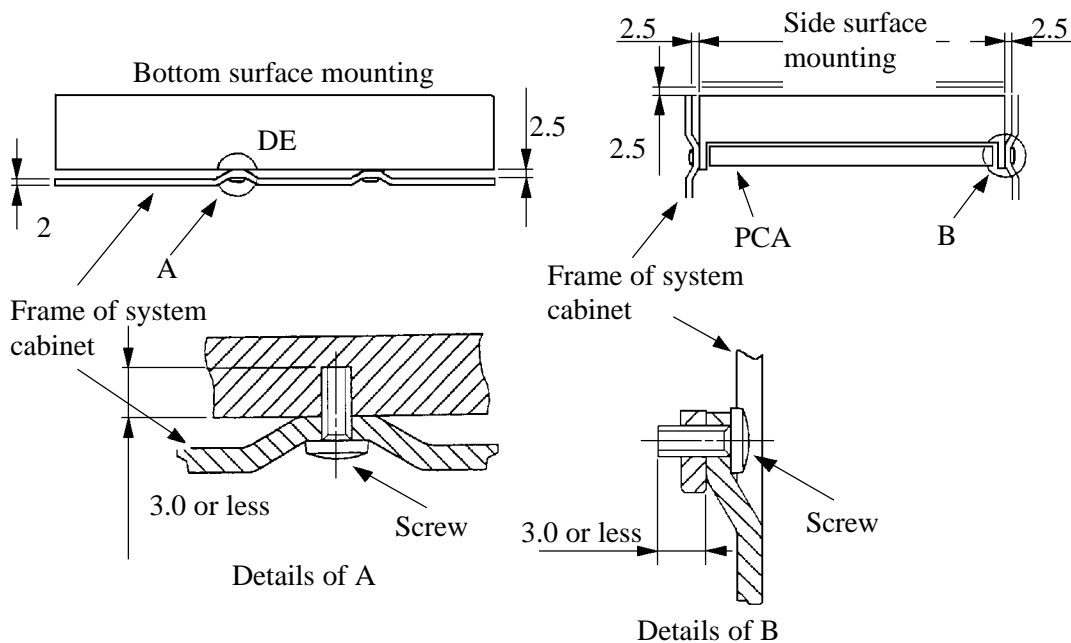

**Figure 3.3 Mounting frame structure**

## IMPORTANT

Because of breather hole mounted to the HDD, do not allow this to close during mounting.

Locating of breather hole is shown as Figure 3.4 in both MHJ series and MHK series.

For breather hole of Figure 3.4, at least, do not allow its around  $\phi 3$  to block.


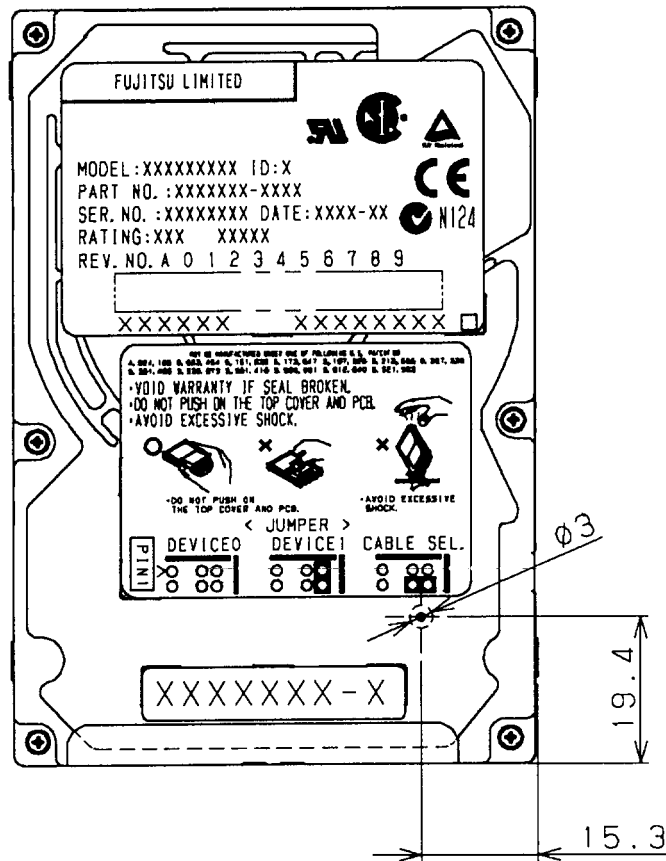


Figure 3.4 Location of breather

## (4) Ambient temperature

The temperature conditions for a disk drive mounted in a cabinet refer to the ambient temperature at a point 3 cm from the disk drive. The ambient temperature must satisfy the temperature conditions described in Section 1.4, and the airflow must be considered to prevent the DE surface temperature from exceeding 60°C.

Provide air circulation in the cabinet such that the PCA side, in particular, receives sufficient cooling. To check the cooling efficiency, measure the surface temperatures of the DE. Regardless of the ambient temperature, this surface temperature must meet the standards listed in Table 3.1. Figure 3.5 shows the temperature measurement point.

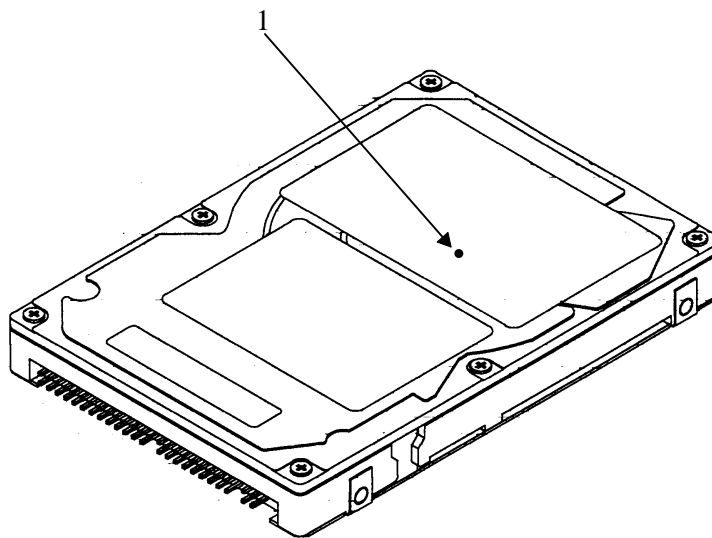


**Figure 3.5 Surface temperature measurement points (Sample: MHJ2181AT)**

**Table 3.1 Surface temperature measurement points and standard values**

| No. | Measurement point | Temperature |
|-----|-------------------|-------------|
| 1   | DE cover          | 60°C max    |

(5) Service area

Figure 3.6 shows how the drive must be accessed (service areas) during and after installation.

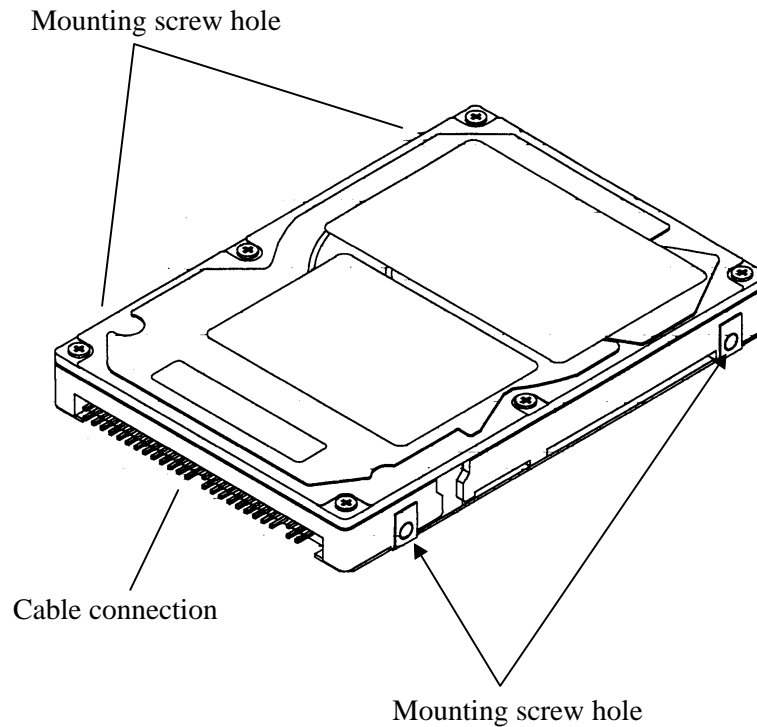

**Figure 3.6 Service area (Sample: MHJ2181AT)**

**CAUTION**

**Data corruption:** Avoid mounting the disk drive near strong magnetic sources such as loud speakers. Ensure that the disk drive is not affected by external magnetic fields.


Also, do not press the cover of the disk drive. Pressing it too much, the cover and the spindle motor contacts and it is fear of causes of the trouble being.

**Stastic:** When handling the device, disconnect the body ground (500 k $\Omega$  or greater). Do not touch the printed circuit board, but hold it by the edges.

## 3.3 Cable Connections

### 3.3.1 Device connector

The disk drive has the connectors and terminals listed below for connecting external devices. Figure 3.7 shows the locations of these connectors and terminals.

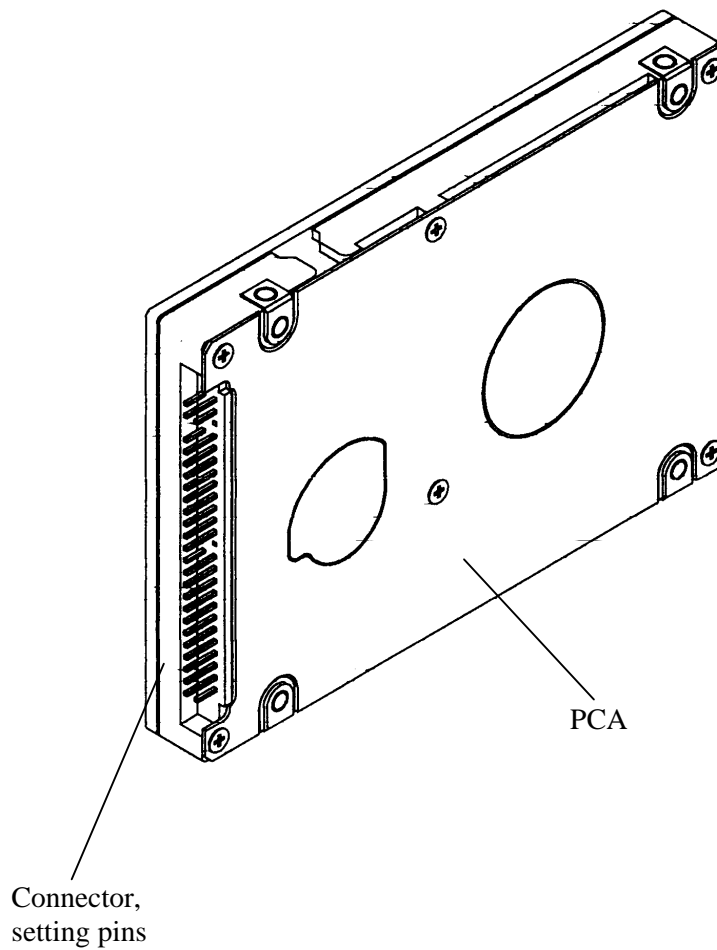

**Figure 3.7 Connector locations (Sample: MHJ2181AT)**

### 3.3.2 Cable connector specifications

Table 3.2 lists the recommended specifications for the cable connectors.

**Table 3.2 Cable connector specifications**


|  | Name                       | Model     | Manufacturer |
|--|----------------------------|-----------|--------------|
| ATA interface and power supply cable (44-pin type) | Cable socket (44-pin type) | 89361-144 | BERG         |

### **IMPORTANT**

For the host interface cable, use a ribbon cable. A twisted cable or a cable with wires that have become separated from the ribbon may cause crosstalk between signal lines. This is because the interface is designed for ribbon cables and not for cables carrying differential signals.

### 3.3.3 Device connection


Figure 3.8 shows how to connect the devices.

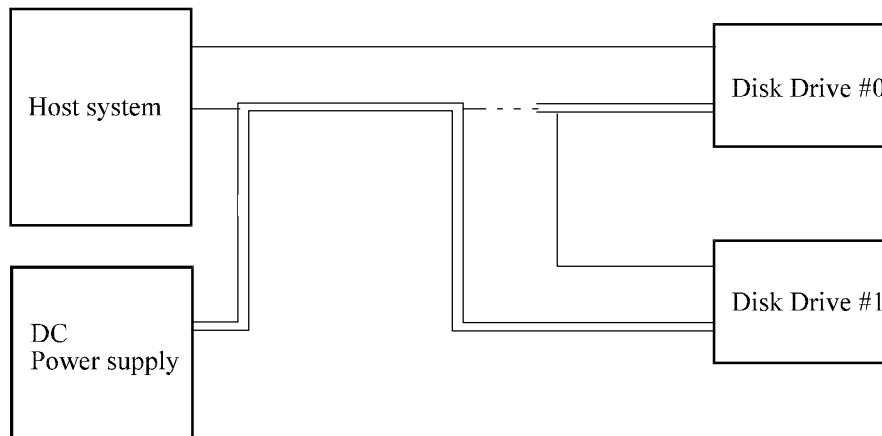

**Figure 3.8 Cable connections**

### 3.3.4 Power supply connector (CN1)

Figure 3.9 shows the pin assignment of the power supply connector (CN1).

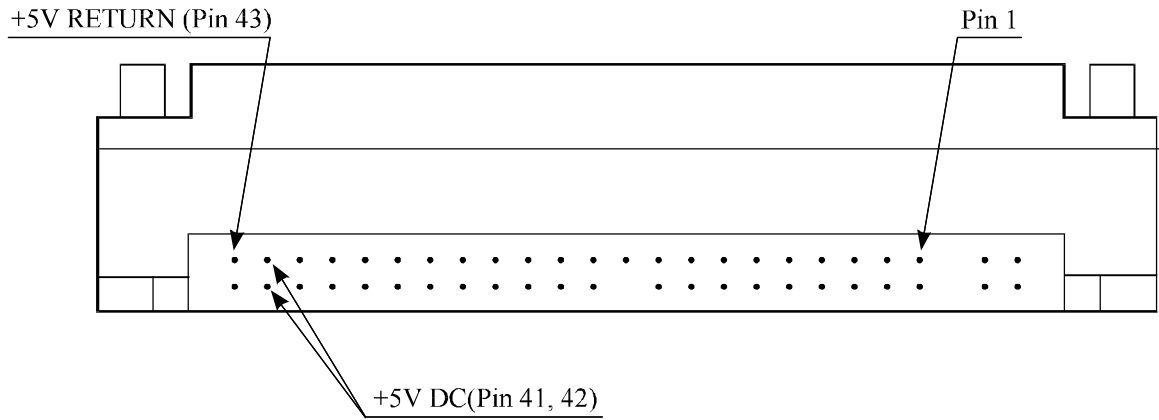


(viewed from connector side)

**Figure 3.9 Power supply connector pins (CN1)**

## 3.4 Jumper Settings

### 3.4.1 Location of setting jumpers

Figure 3.10 shows the location of the jumpers to select drive configuration and functions.

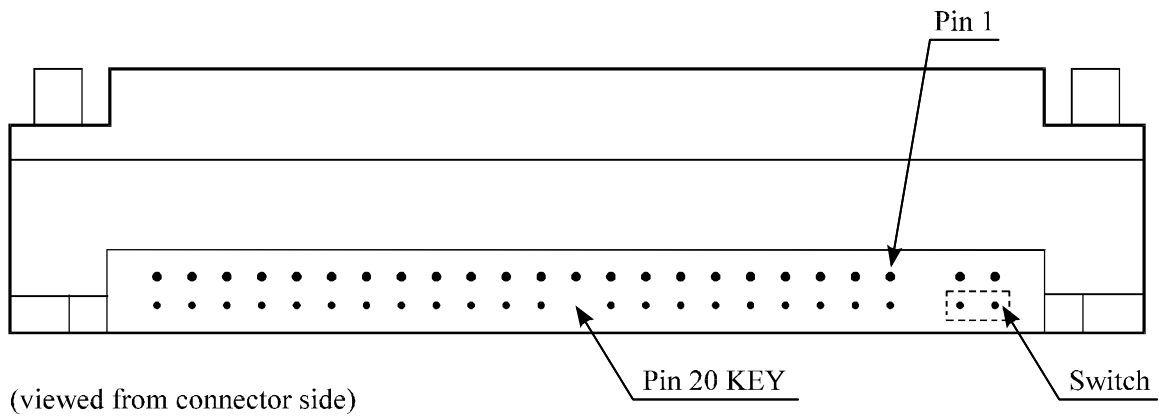


(viewed from connector side)

**Figure 3.10 Jumper location**



### 3.4.2 Factory default setting


Figure 3.11 shows the default setting position at the factory.

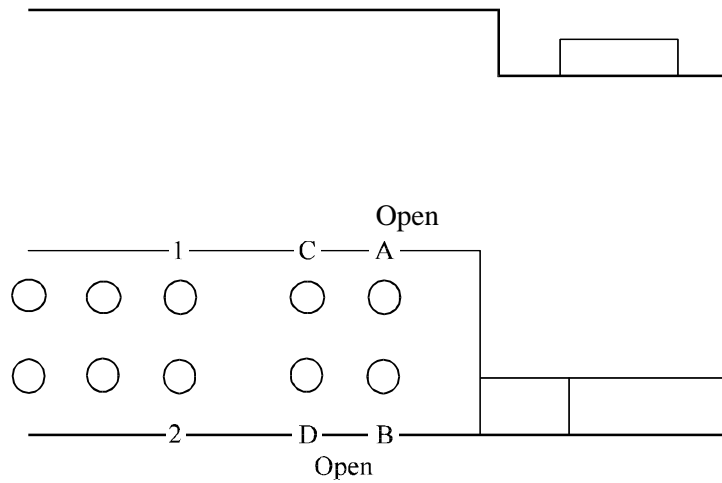

**Figure 3.11 Factory default setting**

### 3.4.3 Master drive-slave drive setting

Master device (device #0) or slave device (device #1) is selected.

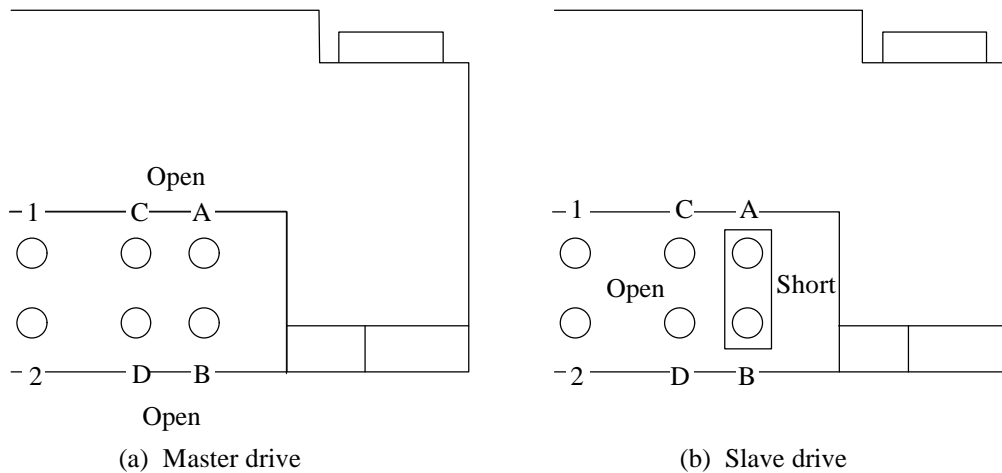


**Figure 3.12 Jumper setting of master or slave device**

Note:

Pins A and C should be open.

### 3.4.4 CSEL setting

Figure 3.13 shows the cable select (CSEL) setting.

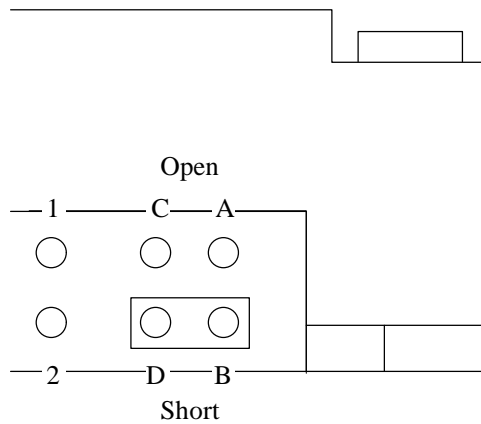

Note:

The CSEL setting is not depended on setting between pins Band D.

#### Figure 3.13 CSEL setting

Figure 3.14 and 3.15 show examples of cable selection using unique interface cables.

By connecting the CSEL of the master device to the CSEL Line (conductor) of the cable and connecting it to ground further, the CSEL is set to low level. The device is identified as a master device. At this time, the CSEL of the slave device does not have a conductor. Thus, since the slave device is not connected to the CSEL conductor, the CSEL is set to high level. The device is identified as a slave device.


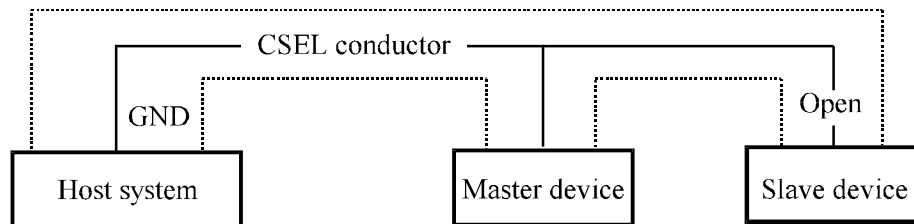


Figure 3.14 Example (1) of Cable Select

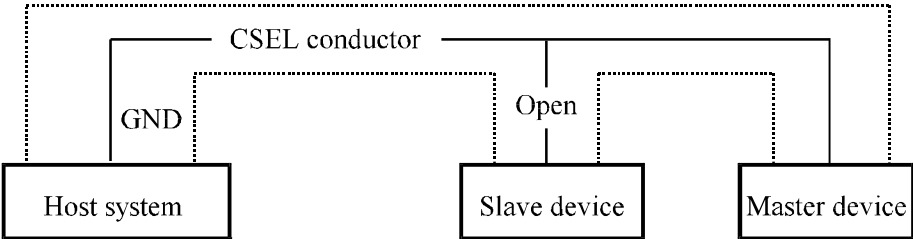

**Figure 3.15 Example (2) of Cable Select**

# CHAPTER 4 Theory of Device Operation

- |     |                       |
|-----|-----------------------|
| 4.1 | Outline               |
| 4.2 | Subassemblies         |
| 4.3 | Circuit Configuration |
| 4.4 | Power-on Sequence     |
| 4.5 | Self-calibration      |
| 4.6 | Read/write Circuit    |
| 4.7 | Servo Control         |

This chapter explains basic design concepts of the disk drive. Also, this chapter explains subassemblies of the disk drive, each sequence, servo control, and electrical circuit blocks.

## 4.1 Outline

This chapter consists of two parts. First part (Section 4.2) explains mechanical assemblies of the disk drive. Second part (Sections 4.3 through 4.7) explains a servo information recorded in the disk drive and drive control method.

## 4.2 Subassemblies

The disk drive consists of a disk enclosure (DE) and printed circuit assembly (PCA).

The DE contains all movable parts in the disk drive, including the disk, spindle, actuator, read/write head, and air filter. For details, see Subsections 4.2.1 to 4.2.5.

The PCA contains the control circuits for the disk drive. The disk drive has one PCA. For details, see Sections 4.3.

### 4.2.1 Disk


The DE contains disks with an outer diameter of 65 mm and an inner diameter of 20 mm. The MHJ2181AT have three disks and MHK2120AT and MHK2090AT have two disks and MHK2060AT have one disk.

The head contacts the disk each time the disk rotation stops; the life of the disk is 50,000 contacts or more. Servo data is recorded on top disk.

Servo data is recorded on each cylinder (total 66). Servo data written at factory is read out by the read/write head. For servo data, see Section 4.7.

### 4.2.2 Head

Figure 4.1 shows the read/write head structures. MHJ2181AT has 6 read/write heads and MHK2120AT has 4 read/write heads and MHK2090AT has 3 read/write heads and MHK2060AT has 2 read/write head. These heads are raised from the disk surface as the spindle motor the rated rotation speed.

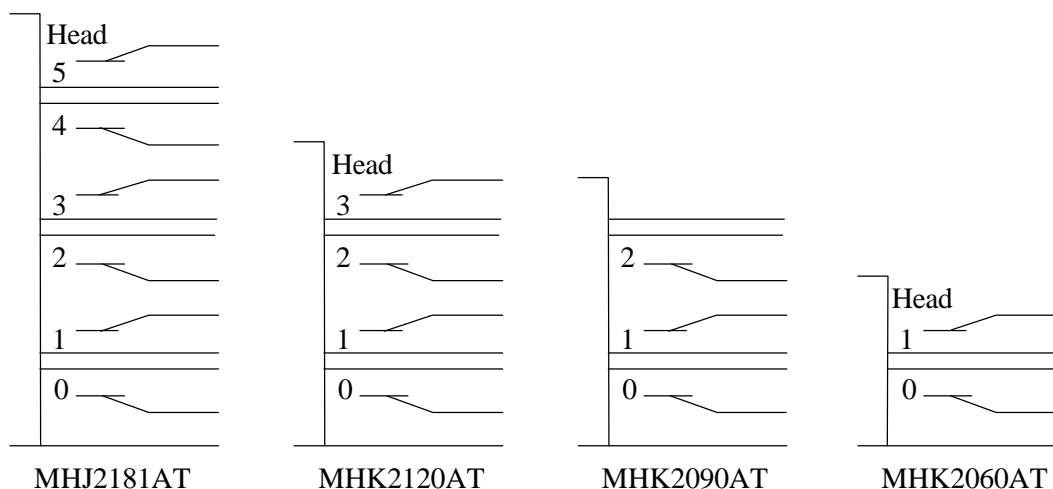

**Figure 4.1 Head structure**

### 4.2.3 Spindle

The spindle consists of a disk stack assembly and spindle motor. The disk stack assembly is activated by the direct drive sensor-less DC spindle motor, which has a speed of 4,200 rpm  $\pm$ 1%. The spindle is controlled with detecting a PHASE signal generated by counter electromotive voltage of the spindle motor at starting.

### 4.2.4 Actuator

The actuator consists of a voice coil motor (VCM) and a head carriage. The VCM moves the head carriage along the inner or outer edge of the disk. The head carriage position is controlled by feeding back the difference of the target position that is detected and reproduced from the servo information read by the read/write head.

### 4.2.5 Air filter

There are two types of air filters: a breather filter and a circulation filter.

The breather filter makes an air in and out of the DE to prevent unnecessary pressure around the spindle when the disk starts or stops rotating. When disk drives are transported under conditions where the air pressure changes a lot, filtered air is circulated in the DE.

The circulation filter cleans out dust and dirt from inside the DE. The disk drive cycles air continuously through the circulation filter through an enclosed loop air cycle system operated by a blower on the rotating disk.

## 4.3 Circuit Configuration

Figure 4.2 shows the disk drive circuit configuration.

### (1) Read/write circuit

The read/write circuit consists of two LSIs; read/write preamplifier (PreAMP) and read channel (RDC).

The PreAMP consists of the write current switch circuit, that flows the write current to the head coil, and the voltage amplifier circuit, that amplifies the read output from the head.

The RDC is the read demodulation circuit using the Modified Extended Partial Response (MEEP), and contains the Viterbi detector, programmable filter, adaptable transversal filter, times base generator, and data separator circuits. The RDC also contains the 16/17 group coded recording (GCR) encoder and decoder and servo demodulation circuit.

### (2) Servo circuit

The position and speed of the voice coil motor are controlled by 2 closed-loop servo using the servo information recorded on the data surface. The servo information is an analog signal converted to digital for processing by a MPU and then reconverted to an analog signal for control of the voice coil motor.

The MPU precisely sets each head on the track according on the servo information on the media surface.

### (3) Spindle motor driver circuit

The circuit measures the interval of a PHASE signal generated by counter-electromotive voltage of a motor at the MPU and controls the motor speed comparing target speed.

### (4) Controller circuit

Major functions are listed below.

- Data buffer (512 KB) management
- ATA interface control and data transfer control
- Sector format control
- Defect management
- ECC control
- Error recovery and self-diagnosis

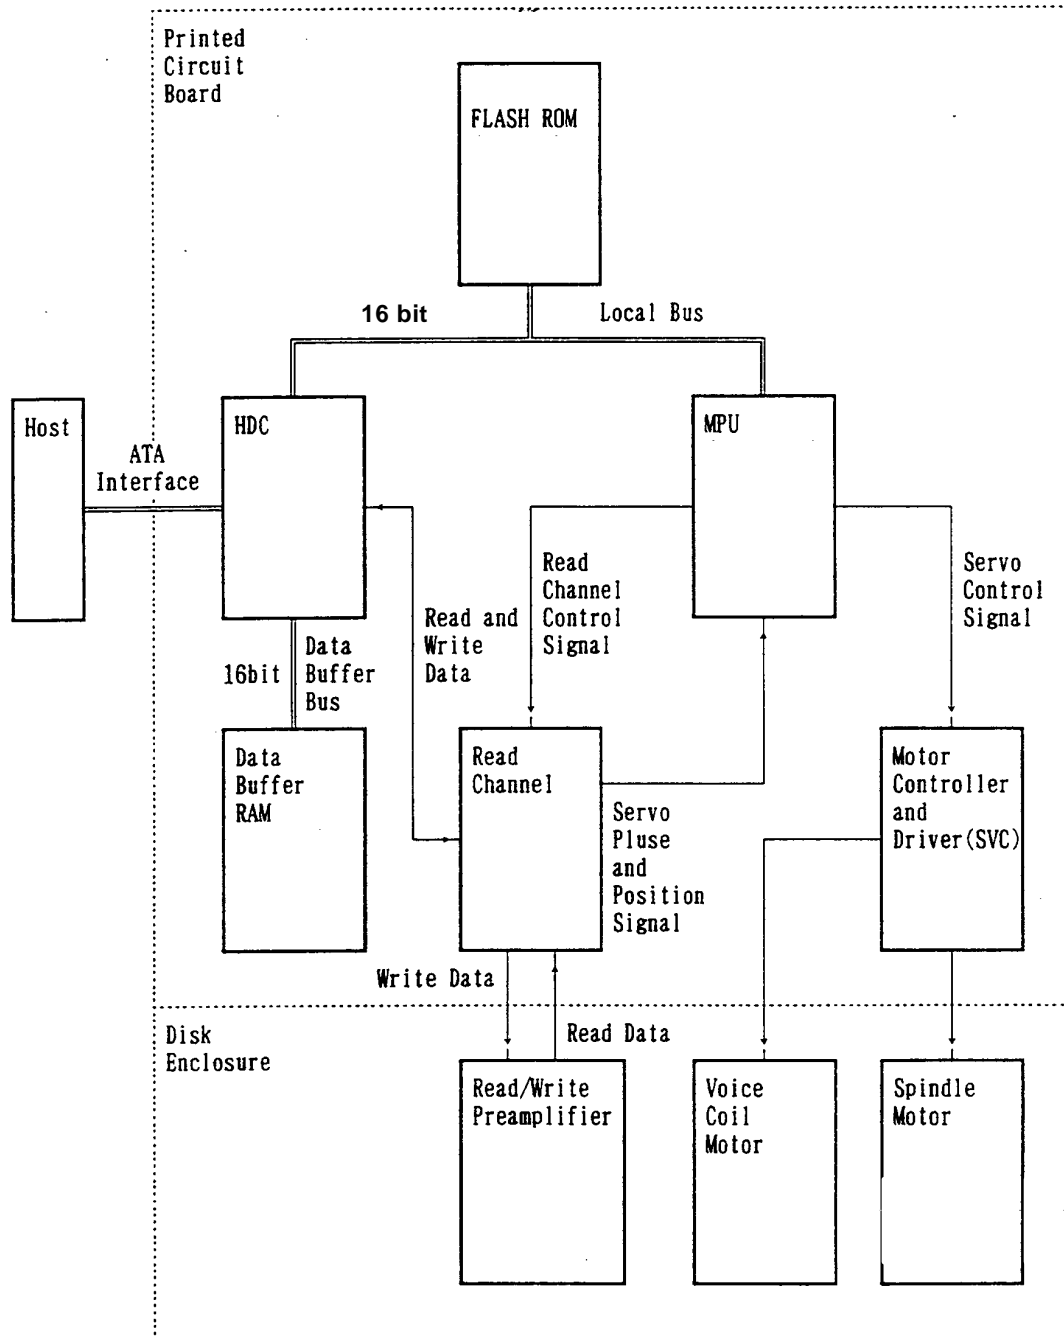



Figure 4.2 Circuit Configuration



## 4.4 Power-on Sequence

Figure 4.3 describes the operation sequence of the disk drive at power-on. The outline is described below.

- a) After the power is turned on, the disk drive executes the MPU bus test, internal register read/write test, and work RAM read/write test. When the self-diagnosis terminates successfully, the disk drive starts the spindle motor.
- b) The disk drive executes self-diagnosis (data buffer read/write test) after enabling response to the ATA bus.
- c) After confirming that the spindle motor has reached rated speed, the disk drive releases the heads from the actuator magnet lock mechanism by applying current to the VCM. This unlocks the heads which are parked at the inner circumference of the disks.
- d) The disk drive positions the heads onto the SA area and reads out the system information.
- e) The disk drive executes self-seek-calibration. This collects data for VCM torque and mechanical external forces applied to the actuator, and updates the calibrating value.
- f) The drive becomes ready. The host can issue commands.

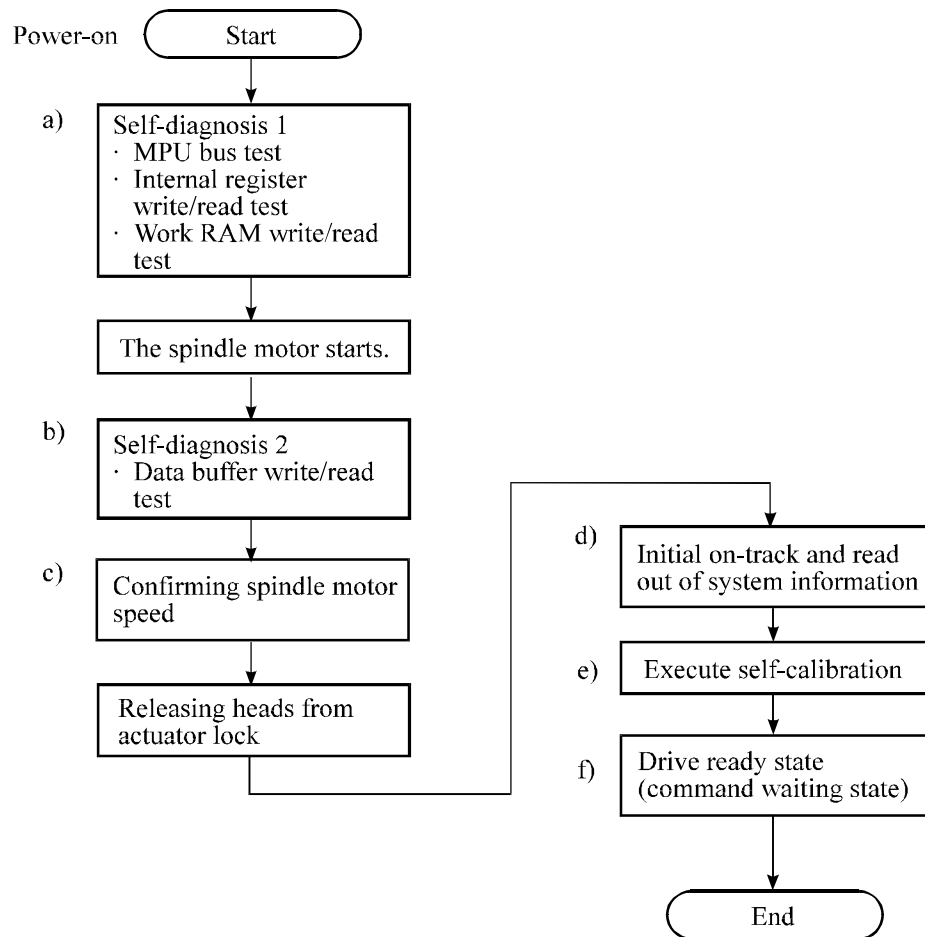

**Figure 4.3 Power-on operation sequence**

## 4.5 Self-calibration

The disk drive occasionally performs self-calibration in order to sense and calibrate mechanical external forces on the actuator, and VCM torque. This enables precise seek and read/write operations.

### 4.5.1 Self-calibration contents

#### (1) Sensing and compensating for external forces

The actuator suffers from torque due to the FPC forces and winds accompanying disk revolution. The torque vary with the disk drive and the cylinder where the head is positioned. To execute stable fast seek operations, external forces are occasionally sensed.

The firmware of the drive measures and stores the force (value of the actuator motor drive current) that balances the torque for stopping head stably. This includes the current offset in the power amplifier circuit and DAC system.

The forces are compensated by adding the measured value to the specified current value to the power amplifier. This makes the stable servo control.

To compensate torque varying by the cylinder, the disk is divided into 23 areas from the innermost to the outermost circumference and the compensating value is measured at the measuring cylinder on each area at factory calibration. The measured values are stored in the SA cylinder. In the self-calibration, the compensating value is updated using the value in the SA cylinder.

## (2) Compensating open loop gain

Torque constant value of the VCM has a dispersion for each drive, and varies depending on the cylinder that the head is positioned. To realize the high speed seek operation, the value that compensates torque constant value change and loop gain change of the whole servo system due to temperature change is measured and stored.

For sensing, the firmware mixes the disturbance signal to the position signal at the state that the head is positioned to any cylinder. The firmware calculates the loop gain from the position signal and stores the compensation value against to the target gain as ratio.

For compensating, the direction current value to the power amplifier is multiplied by the compensation value. By this compensation, loop gain becomes constant value and the stable servo control is realized.

To compensate torque constant value change depending on cylinder, whole cylinders from most inner to most outer cylinder are divided into 16 partitions at calibration in the factory, and the compensation data is measured for representative cylinder of each partition. This measured value is stored in the SA area. The compensation value at self-calibration is calculated using the value in the SA area.

### 4.5.2 Execution timing of self-calibration

Self-calibration is executed when:

- The power is turned on.
- The disk drive receives the RECALIBRATE command from the host.
- The self-calibration execution timechart of the disk drive specifies self-calibration.

The disk drive performs self-calibration according to the timechart based on the time elapsed from power-on. The timechart is shown in Table 4.1. After power-on, self-calibration is performed about every five or ten or fifteen minutes for the first 60 minutes or six RECALIBRATE command executions, and about every 30 minutes after that.

**Table 4.1 Self-calibration execution timechart**

|                       | Time elapsed           | Time elapsed (accumulated) |
|-----------------------|------------------------|----------------------------|
| 1                     | At power-on            | Initial calibration        |
| 2                     | About 5 minutes        | About 5 minutes            |
| 3                     | About 5 minutes        | About 10 minutes           |
| 4                     | About 10 minutes       | About 20 minutes           |
| 5                     | About 10 minutes       | About 30 minutes           |
| 6                     | About 15 minutes       | About 45 minutes           |
| 7                     | About 15 minutes       | About 60 minutes           |
| 8<br>.<br>.<br>.<br>. | Every about 30 minutes |                            |

### 4.5.3 Command processing during self-calibration

If the disk drive receives a command execution request from the host while executing self-calibration according to the timechart, the disk drive terminates self-calibration and starts executing the command precedingly. In other words, if a disk read or write service is necessary, the disk drive positions the head to the track requested by the host, reads or writes data, and restarts calibration.

This enables the host to execute the command without waiting for a long time, even when the disk drive is performing self-calibration. The command execution wait time is about maximum 100 ms.

## 4.6 Read/write Circuit

The read/write circuit consists of the read/write preamplifier (PreAMP), the write circuit, the read circuit, and the time base generator in the read channel (RDC). Figure 4.4 is a block diagram of the read/write circuit.

### 4.6.1 Read/write preamplifier (PreAMP)

One PreAMP is mounted on the FPC. The PreAMP consists of an read preamplifier and a write current switch and senses a write error. Each channel is connected to each data head. The head IC switches the heads by the chip select signals (\*CS) and the head select signals. The IC generates a write error sense

signal (WUS) when a write error occurs due to head short-circuit or head disconnection.

The Pre AMP sets the write current and bias current which flows through MR devices.

#### 4.6.2 Write circuit

The write data is output from the hard disk controller (HDC) with the NRZ data format, and sent to the encoder circuit in the RDC. The NRZ write data is converted from 16-bit data to 17-bit data by the encoder circuit then sent to the PreAMP, and the data is written onto the media.

##### (1) 16/17 MTR MEEPRL

This device converts data using the 16/17 (Maximum Transitions Run) algorithm.

This code is converted so that a maximum of three 1's are placed continuously and so that there are two or fewer 1's in a 17-bit border.

##### (2) Write precompensation

Write precompensation compensates, during a write process, for write non-linearity generated at reading. Table 4.2 shows the write precompensation algorithm.

**Table 4.2 Write precompensation algorithm**

| Bits   | Compensation |
|--------|--------------|
| 111001 | -7           |
| 111010 | -6           |
| :      |              |
| 111111 | -1           |
| 000000 | ±0           |
| 000001 | +1           |
| :      |              |
| 010000 | +16          |
| :      |              |
| 100000 | +32          |

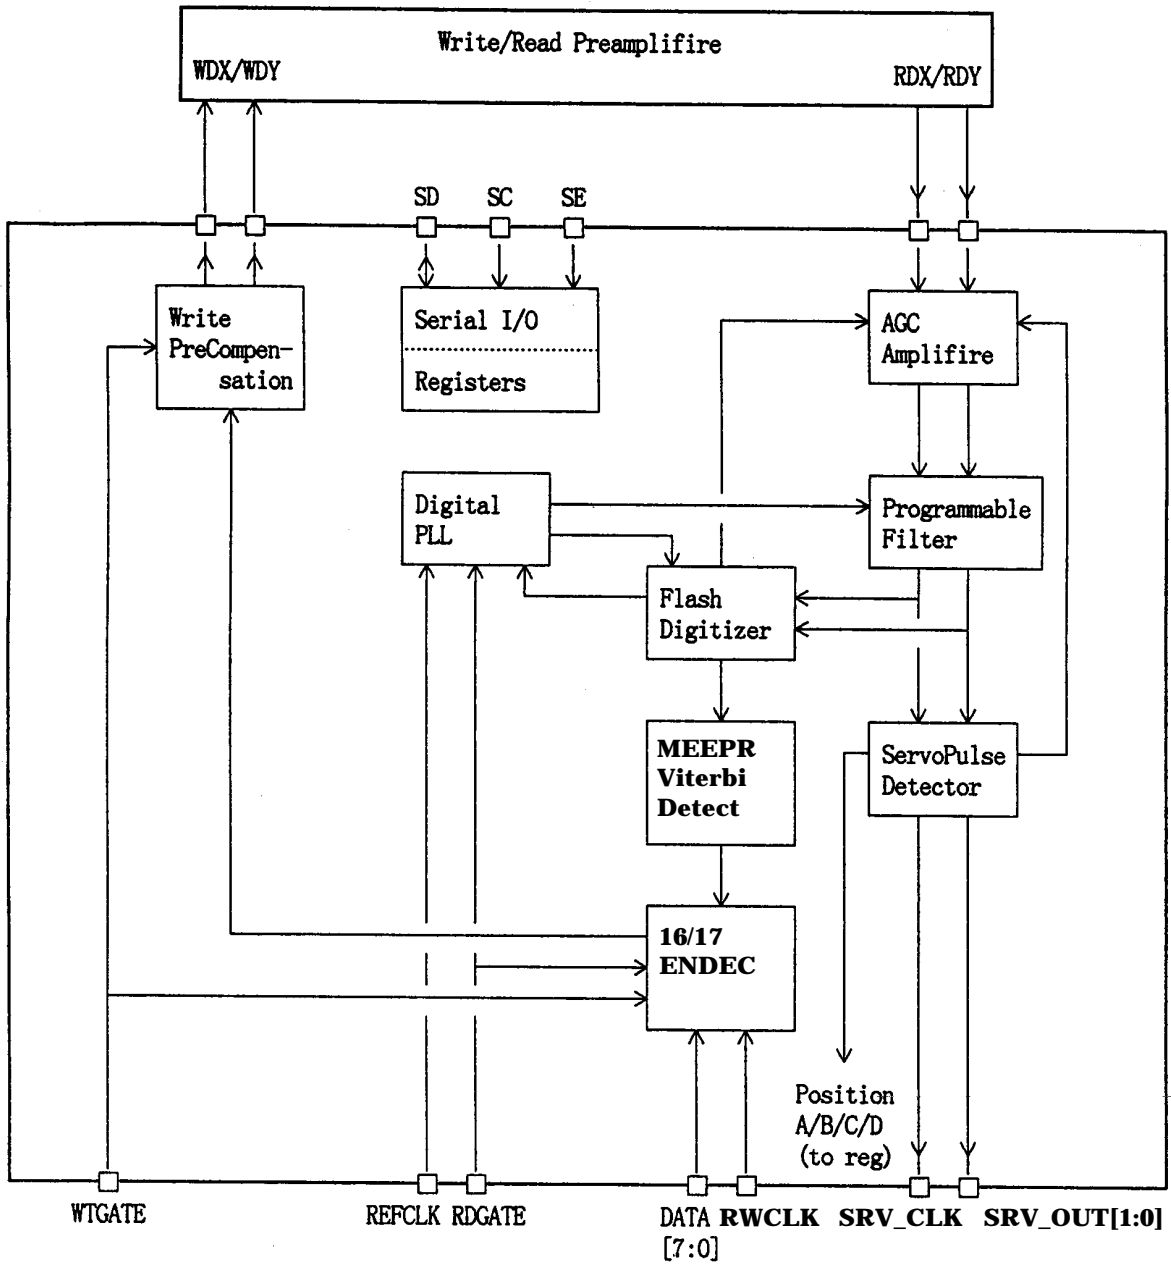


Figure 4.4 Read/write circuit block diagram

### 4.6.3 Read circuit

The head read signal from the PreAMP is regulated by the automatic gain control (AGC) circuit. Then the output is converted into the sampled read data pulse by the programmable filter circuit and the flash digitizer circuit. This clock signal is converted into the NRZ data by the 16/17 GCR decoder circuit based on the read data maximum-likelihood-detected by the Viterbi detection circuit, then is sent to the HDC.

#### (1) AGC circuit


The AGC circuit automatically regulates the output amplitude to a constant value even when the input amplitude level fluctuates. The AGC amplifier output is maintained at a constant level even when the head output fluctuates due to the head characteristics or outer/inner head positions.

#### (2) Programmable filter circuit

The programmable filter circuit has a low-pass filter function that eliminates unnecessary high frequency noise component and a high frequency boost-up function that equalizes the waveform of the read signal.

Cut-off frequency of the low-pass filter and boost-up gain are controlled from the register in read channel by an instruction of the serial data signal from MPU (M5). The MPU optimizes the cut-off frequency and boost-up gain according to the transfer frequency of each zone.

Figure 4.5 shows the frequency characteristic sample of the programmable filter.

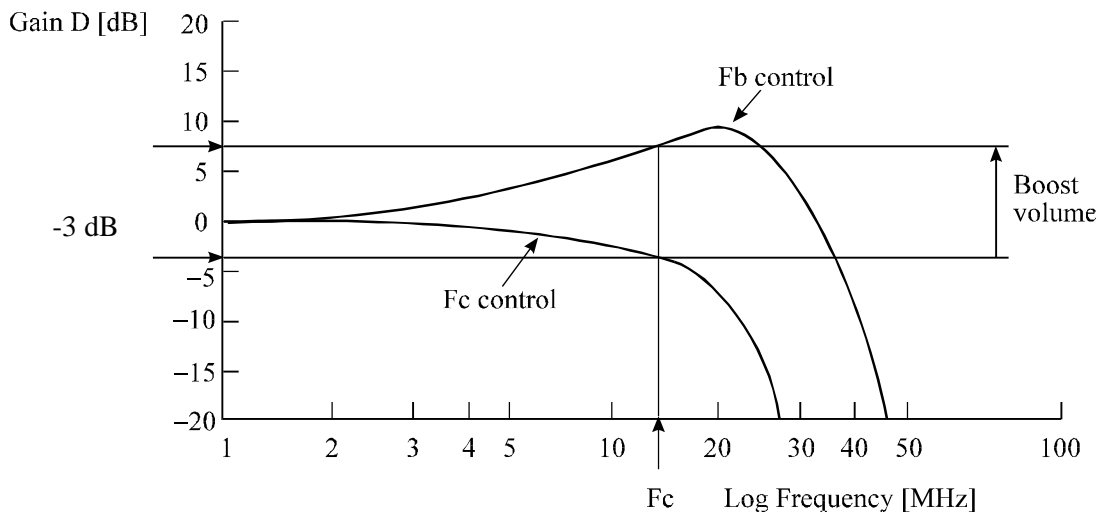

**Figure 4.5 Frequency characteristic of programmable filter**

## (3) Flash digitizer circuit

This circuit is 10-tap sampled analog transversal filter circuit that cosine-equalizes the head read signal to the Modified Extended Partial Response (MEEPR) waveform.

## (4) Viterbi detection circuit

The sample hold waveform output from the flash digitizer circuit is sent to the Viterbi detection circuit. The Viterbi detection circuit demodulates data according to the survivor path sequence.

## (5) 16/17 MTR MEEPRM

This circuit converts the 17-bit read data into the 16-bit NRZ data.

**4.6.4 Digital PLL circuit**

The drive uses constant density recording to increase total capacity. This is different from the conventional method of recording data with a fixed data transfer rate at all data area. In the constant density recording method, data area is divided into zones by radius and the data transfer rate is set so that the recording density of the inner cylinder of each zone is nearly constant. The drive divides data area into 14 zones to set the data transfer rate.

The MPU transfers the data transfer rate setup data (SD/SC) to the RDC that includes the Digital PLL circuit to change the data transfer rate.




## 4.7 Servo Control

The actuator motor and the spindle motor are submitted to servo control. The actuator motor is controlled for moving and positioning the head to the track containing the desired data. To turn the disk at a constant velocity, the actuator motor is controlled according to the servo data that is written on the data side beforehand.

### 4.7.1 Servo control circuit

Figure 4.6 is the block diagram of the servo control circuit. The following describes the functions of the blocks:

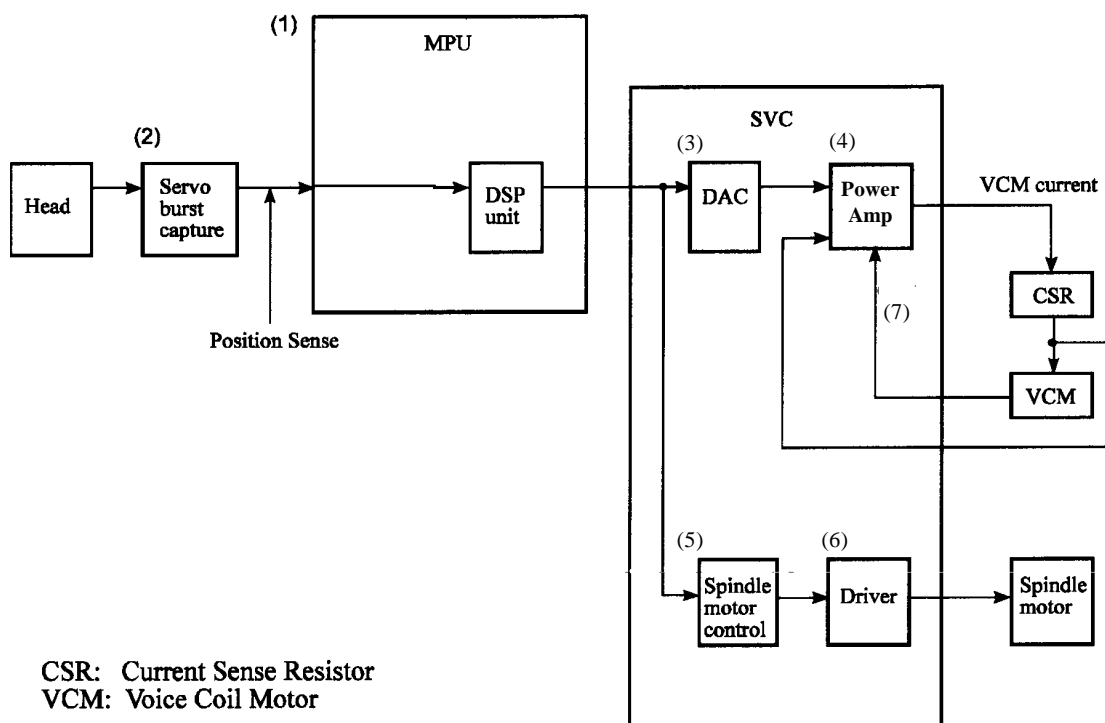

**Figure 4.6 Block diagram of servo control circuit**

#### (1) Microprocessor unit (MPU)

The MPU includes the DSP unit, and the MPU starts the spindle motor, moves the heads to the reference cylinders, seeks the specified cylinder, and executes calibration according to the internal operations of the MPU. Main internal operation of the MPU are shown below.

The major internal operations are listed below.

a. Spindle motor start

Starts the spindle motor and accelerates it to normal speed when power is applied.

b. Move head to reference cylinder

Drives the VCM to position the head at the any cylinder in the data area. The logical initial cylinder is at the outermost circumference (cylinder 0).

c. Seek to specified cylinder

Drives the VCM to position the head to the specified cylinder.

d. Calibration

Senses and stores the thermal offset between heads and the mechanical forces on the actuator, and stores the calibration value.

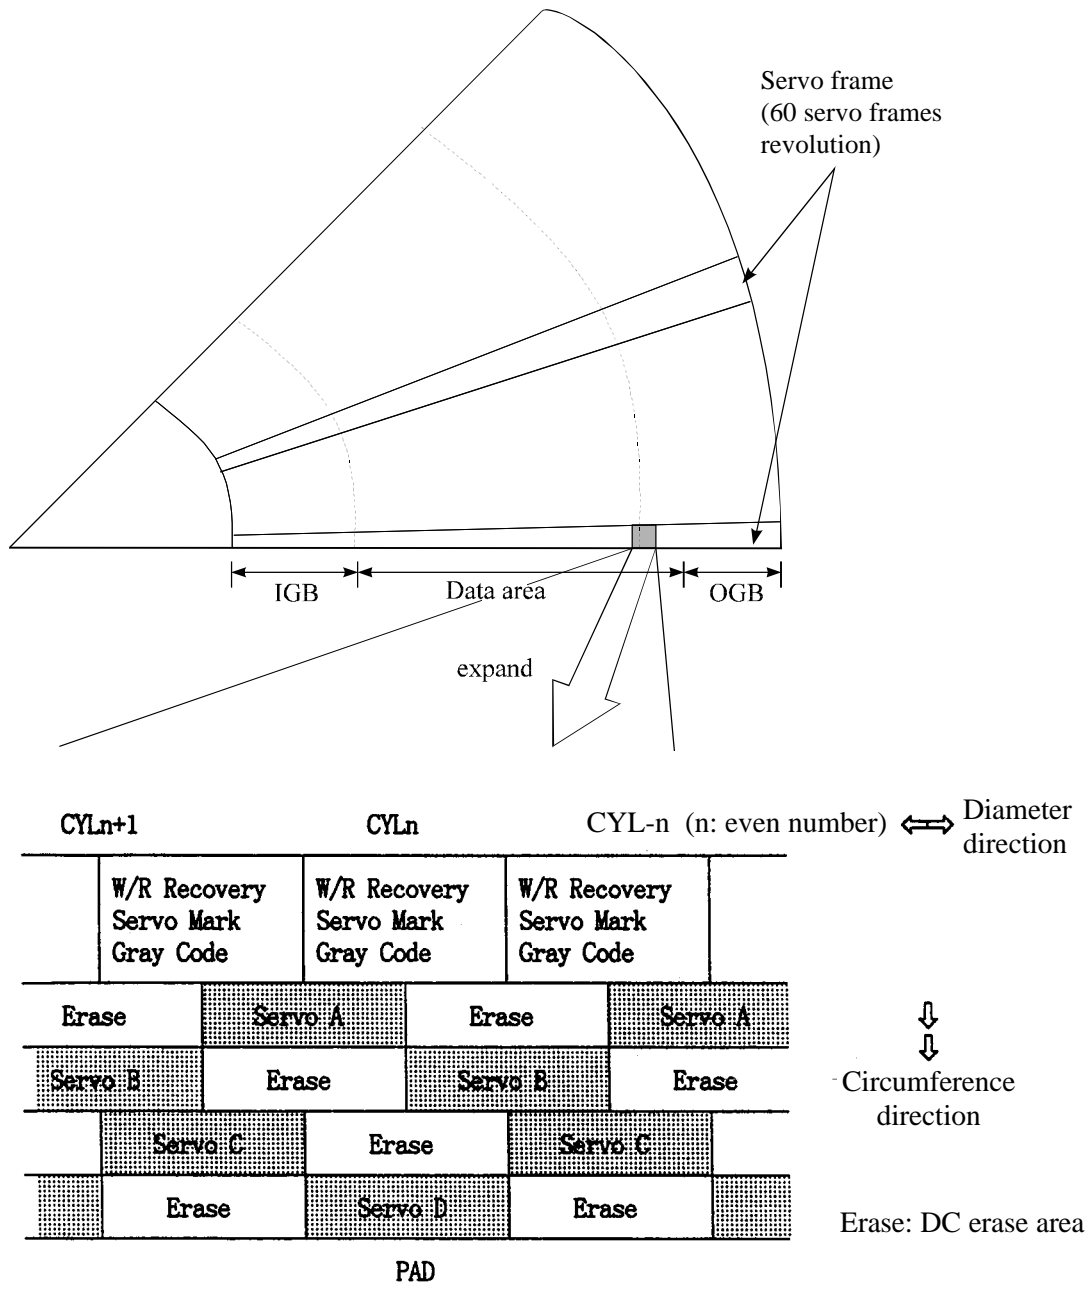


Figure 4.7 Physical sector servo configuration on disk surface

## (2) Servo burst capture circuit

The servo burst capture circuit reproduces signals (position signals) that indicate the head position from the servo data on the data surface. SERVO A, SERVO B, SERVO C and SERVO D burst signals shown in Figure 4.8 followed the servo mark, cylinder gray and index information are output from the servo area on the data surface via the data head. The servo signals do A/D-convert by Fourier-demodulator in the servo burst capture circuit. At that time the AGC circuit is in hold mode. The A/D converted data is recognized by the MPU as position information with A-B and C-D processed.

## (3) D/A converter (DAC)

The D/A converter (DAC) converts the VCM drive current value (digital value) calculated by the DSP unit into analog values and transfers them to the power amplifier.

## (4) Power amplifier

The power amplifier feeds currents, corresponding to the DAC output signal voltage to the VCM.

## (5) Spindle motor control circuit

The spindle motor control circuit controls the sensor-less spindle motor. This circuit detects number of revolution of the motor by the interrupt generated periodically, compares with the target revolution speed, then flows the current into the motor coil according to the differentiation (aberration).

## (6) Driver circuit

The driver circuit is a power amplitude circuit that receives signals from the spindle motor control circuit and feeds currents to the spindle motor.

## (7) VCM current sense resistor (CSR)

This resistor controls current at the power amplifier by converting the VCM current into voltage and feeding back.

### 4.7.2 Data-surface servo format

Figure 4.7 describes the physical layout of the servo frame. The three areas indicated by (1) to (3) in Figure 4.7 are described below.

(1) Inner guard band

The head is in contact with the disk in this space when the spindle starts turning or stops, and the rotational speed of the spindle can be controlled on this cylinder area for head moving.

(2) Data area

This area is used as the user data area SA area.


(3) Outer guard band

This area is located at outer position of the user data area, and the rotational speed of the spindle can be controlled on this cylinder area for head moving.

### 4.7.3 Servo frame format

As the servo information, the IDD uses the two-phase servo generated from the gray code and servo A to D. This servo information is used for positioning operation of radius direction and position detection of circumstance direction.

The servo frame consists of 6 blocks; write/read recovery, servo mark, gray code, servo A to D, and PAD. Figure 4.8 shows the servo frame format.

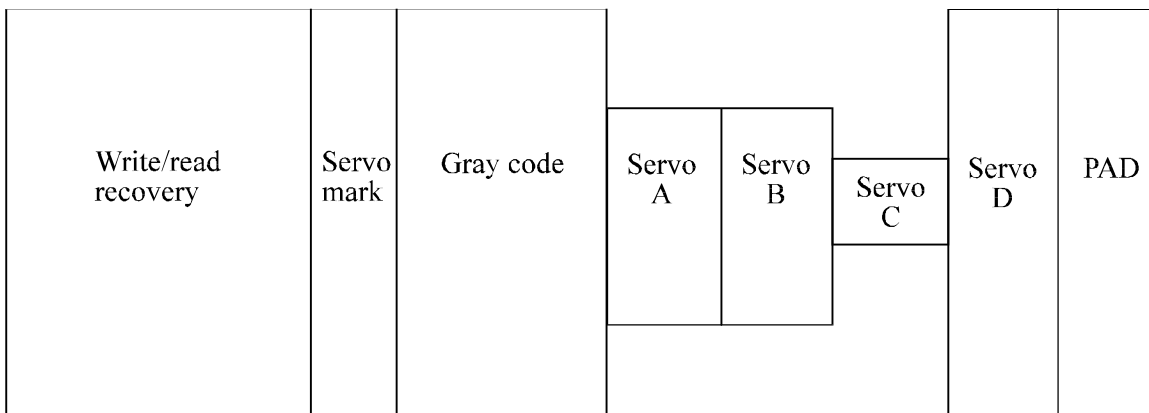

**Figure 4.8 Servo frame format**

## (1) Write/read recovery

This area is used to absorb the write/read transient and to stabilize the AGC.

## (2) Servo mark

This area generates a timing for demodulating the gray code and position-demodulating the servo A to D by detecting the servo mark.

## (3) Gray code (including index bit)

This area is used as cylinder address. The data in this area is converted into the binary data by the gray code demodulation circuit

## (4) Servo A, servo B, servo C, servo D

This area is used as position signals between tracks, and the IDD control at on-track so that servo A level equals to servo B level.

## (5) PAD

This area is used as a gap between servo and data.

#### 4.7.4 Actuator motor control

The voice coil motor (VCM) is controlled by feeding back the servo data recorded on the data surface. The MPU fetches the position sense data on the servo frame at a constant interval of sampling time, executes calculation, and updates the VCM drive current.

The servo control of the actuator includes the operation to move the head to the reference cylinder, the seek operation to move the head to the target cylinder to read or write data, and the track-following operation to position the head onto the target track.

## (1) Operation to move the head to the reference cylinder

The MPU moves the head to the reference cylinder when the power is turned. The reference cylinder is in the data area.

When power is applied the heads are moved from the inner circumference shunt zone to the normal servo data zone in the following sequence:

- a) Micro current is fed to the VCM to press the head against the inner circumference.
- b) Micro current is fed to the VCM to move the head toward the outer circumference.
- c) When the servo mark is detected the head is moved slowly toward the outer circumference at a constant speed.

- d) If the head is stopped at the reference cylinder from there. Track following control starts.

(2) Seek operation

Upon a data read/write request from the host, the MPU confirms the necessity of access to the disk. If a read/write instruction is issued, the MPU seeks the desired track.

The MPU feeds the VCM current via the D/A converter and power amplifier to move the head. The MPU calculates the difference (speed error) between the specified target position and the current position for each sampling timing during head moving. The MPU then feeds the VCM drive current by setting the calculated result into the D/A converter. The calculation is digitally executed by the firmware. When the head arrives at the target cylinder, the track is followed.

(3) Track following operation

Except during head movement to the reference cylinder and seek operation under the spindle rotates in steady speed, the MPU does track following control. To position the head at the center of a track, the DSP drives the VCM by feeding micro current. For each sampling time, the VCM drive current is determined by filtering the position difference between the target position and the position clarified by the detected position sense data. The filtering includes servo compensation. These are digitally controlled by the firmware.

#### 4.7.5 Spindle motor control

Hall-less three-phase twelve-pole motor is used for the spindle motor, and the 3-phase full/half-wave analog current control circuit is used as the spindle motor driver (called SVC hereafter). The firmware operates on the MPU manufactured by Fujitsu. The spindle motor is controlled by sending several signals from the MPU to the SVC. There are three modes for the spindle control; start mode, acceleration mode, and stable rotation mode.

(1) Start mode

When power is supplied, the spindle motor is started in the following sequence:

- a) After the power is turned on, the MPU sends a signal to the SVC to charge the charge pump capacitor of the SVC. The charged amount defines the current that flows in the spindle motor.
- b) When the charge pump capacitor is charged enough, the MPU sets the SVC to the motor start mode. Then, a current (approx. 0.7 A) flows into the spindle motor.
- c) The SVC generates a phase switching signal by itself, and changes the phase of the current flowed in the motor in the order of (V-phase to U-phase), (W-phase to U-phase), (W-phase to V-phase), (U-phase to V-phase), (U-phase to W-phase), and (V-phase to W-phase) (after that, repeating this order).

- d) During phase switching, the spindle motor starts rotating in low speed, and generates a counter electromotive force. The SVC detects this counter electromotive force and reports to the MPU using a PHASE signal for speed detection.
- e) The MPU is waiting for a PHASE signal. When no phase signal is sent for a specific period, the MPU resets the SVC and starts from the beginning. When a PHASE signal is sent, the SVC enters the acceleration mode.

(2) Acceleration mode

In this mode, the MPU stops to send the phase switching signal to the SVC. The SVC starts a phase switching by itself based on the counter electromotive force. Then, rotation of the spindle motor accelerates. The MPU calculates a rotational speed of the spindle motor based on the PHASE signal from the SVC, and waits till the rotational speed reaches 4,200 rpm. When the rotational speed reaches 4,200 rpm, the SVC enters the stable rotation mode.

(3) Stable rotation mode

The SVC calculates a time for one revolution of the spindle motor based on the PHASE signal. The MPU takes a difference between the current time and a time for one revolution at 4,200 rpm that the MPU already recognized. Then, the MPU keeps the rotational speed to 4,200 rpm by charging or discharging the charge pump for the different time. For example, when the actual rotational speed is 4,000 rpm, the time for one revolution is 15.000 ms. And, the time for one revolution at 4,200 rpm is 14.286 ms. Therefore, the MPU charges the charge pump for  $0.714 \text{ ms} \times k$  ( $k$ : constant value). This makes the flowed current into the motor higher and the rotational speed up. When the actual rotational speed is faster than 4,200 rpm, the MPU discharges the pump the other way. This control (charging/discharging) is performed every 1 revolution.



**This page is intentionally left blank.**

# CHAPTER 5 Interface


- |     |                       |
|-----|-----------------------|
| 5.1 | Physical Interface    |
| 5.2 | Logical Interface     |
| 5.3 | Host Commands         |
| 5.4 | Command Protocol      |
| 5.5 | Ultra DMA Feature Set |
| 5.6 | Timing                |

This chapter gives details about the interface, and the interface commands and timings.

## 5.1 Physical Interface

### 5.1.1 Interface signals

Figure 5.1 shows the interface signals.

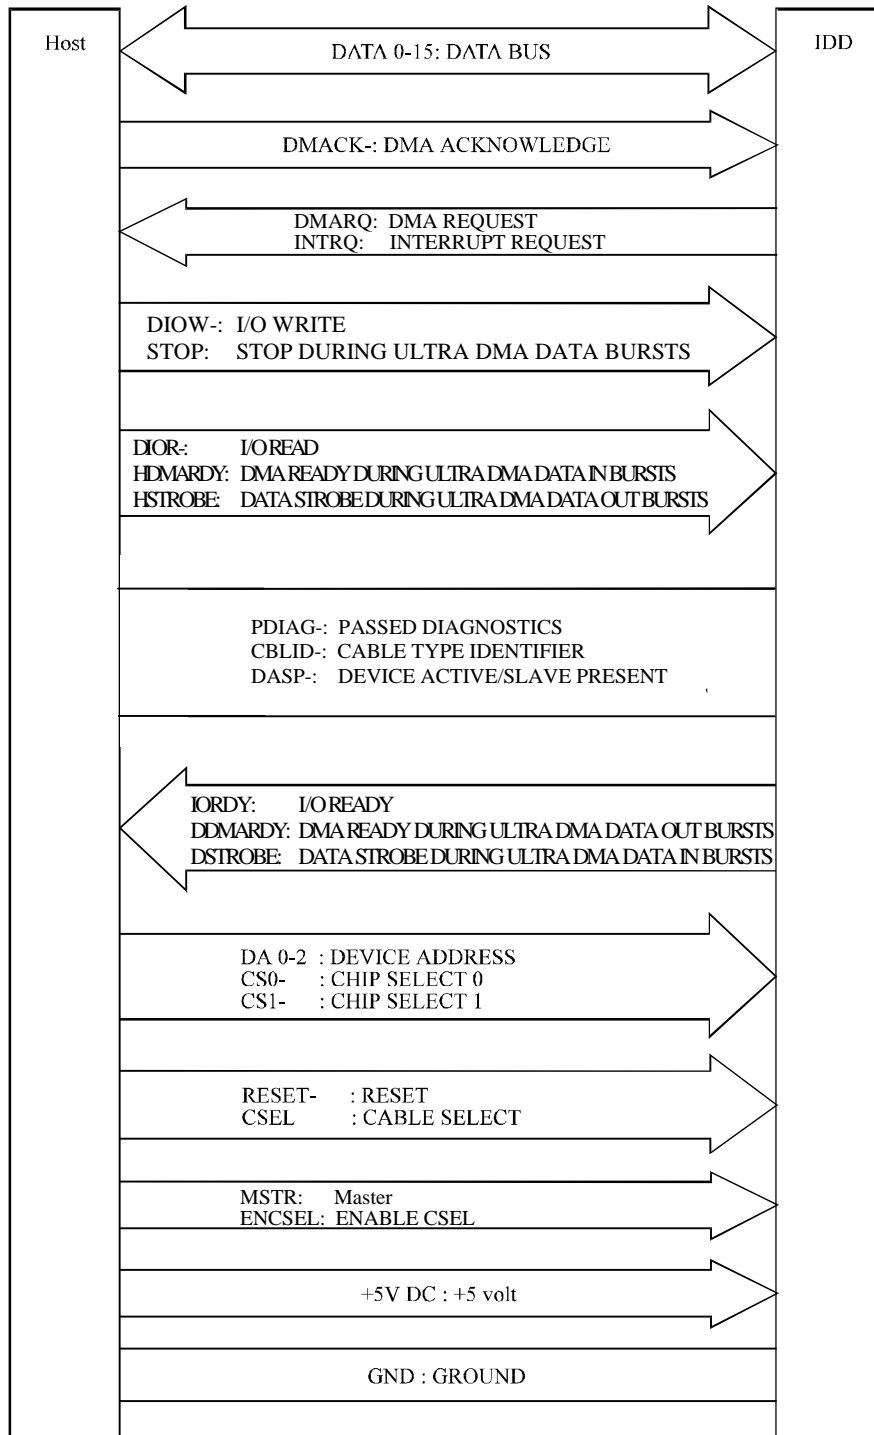

**Figure 5.1 Interface signals**

### 5.1.2 Signal assignment on the connector

Table 5.1 shows the signal assignment on the interface connector.

**Table 5.1 Signal assignment on the interface connector**

| Pin No. | Signal                     | Pin No. | Signal         |
|---------|----------------------------|---------|----------------|
| A       | MSTR                       | B       | MSTR/ENCSEL    |
| C       | unused                     | D       | ENCSEL         |
| E       | (KEY)                      | F       | (KEY)          |
| 1       | RESET-                     | 2       | GND            |
| 3       | DATA7                      | 4       | DATA8          |
| 5       | DATA6                      | 6       | DATA9          |
| 7       | DATA5                      | 8       | DATA10         |
| 9       | DATA4                      | 10      | DATA11         |
| 11      | DATA3                      | 12      | DATA12         |
| 13      | DATA2                      | 14      | DATA13         |
| 15      | DATA1                      | 16      | DATA14         |
| 17      | DATA0                      | 18      | DATA15         |
| 19      | GND                        | 20      | (KEY)          |
| 21      | DMARQ                      | 22      | GND            |
| 23      | DIOW-, STOP                | 24      | GND            |
| 25      | DIOR-, HDMRDY,<br>HSTROBE  | 26      | GND            |
| 27      | IORDY, DDMARDY,<br>DSTROBE | 28      | CSEL           |
| 29      | DMACK-                     | 30      | GND            |
| 31      | INTRQ                      | 32      | reserved       |
| 33      | DA1                        | 34      | PDIAG-, CBLID- |
| 35      | DA0                        | 36      | DA2            |
| 37      | CS0-                       | 38      | CS1-           |
| 39      | DASP-                      | 40      | GND            |
| 41      | +5 VDC                     | 42      | +5 VDC         |
| 43      | GND                        | 44      | unused         |

| [signal]  | [I/O] | [Description]  |
|-----------|-------|--|
| ENCSEL    | I     | This signal is used to set master/slave using the CSEL signal (pin 28).<br>Pins B and D    Open: Sets master/slave using the CSEL signal is disabled.<br>Short: Sets master/slave using the CSEL signal is enabled.  |
| MSTR-     | I     | MSTR, I, Master/slave setting<br>Pin A, B, C, D open: Master setting<br>Pin A, B Short:        Slave setting   |
| RESET-    | I     | Reset signal from the host. This signal is low active and is asserted for a minimum of 25 $\mu$ s during power on.   |
| DATA 0-15 | I/O   | Sixteen-bit bi-directional data bus between the host and the device. These signals are used for data transfer  |
| DIOW-     | I     | Signal asserted by the host to write to the device register or data port.  |
| STOP      | I     | DIOW- must be negated by the host before starting the Ultra DMA transfer. The STOP signal must be negated by the host before data is transferred during the Ultra DMA transfer. During data transfer in Ultra DMA mode, the assertion of the STOP signal asserted by the host later indicates that the transfer has been suspended.  |
| DIOR-     | I     | Read strobe signal from the host to read the device register or data port  |
| HDMARDY-  | I     | Flow control signal for Ultra DMA data In transfer (READ DMA command). This signal is asserted by the host to inform the device that the host is ready to receive the Ultra DMA data In transfer. The host can negate the HDMARDY- signal to suspend the Ultra DMA data In transfer.   |
| HSTROBE   | I     | Data Out Strobe signal from the host during Ultra DMA data Out transfer (WRITE DMA command). Both the rising and falling edges of the HSTROBE signal latch data from Data 15-0 into the device. The host can suspend the inversion of the HSTROBE signal to suspend the Ultra DMA data Out transfer.   |
| INTRQ     | O     | Interrupt signal to the host.<br>This signal is negated in the following cases: <ul style="list-style-type: none"><li>- assertion of RESET- signal</li><li>- Reset by SRST of the Device Control register</li><li>- Write to the command register by the host</li><li>- Read of the status register by the host</li><li>- Completion of sector data transfer<br/>(without reading the Status register)</li></ul> The signal output line has a high impedance when no devices are selected or interruption is disabled. |

| [signal]     | [I/O] | [Description]  |
|--------------|-------|--|
| CS0-         | I     | Chip select signal decoded from the host address bus. This signal is used by the host to select the command block registers.   |
| CS1-         | I     | Chip select signal decoded from the host address bus. This signal is used by the host to select the control block registers.   |
| DA 0-2       | I     | Binary decoded address signals asserted by the host to access task file registers.   |
| KEY          | -     | Key pin for prevention of erroneous connector insertion  |
| PDIAG-       | I/O   | This signal is an input mode for the master device and an output mode for the slave device in a daisy chain configuration. This signal indicates that the slave device has been completed self diagnostics.<br><br>This signal is pulled up to +5 V through 10 kΩ resistor at each device.                       |
| CBLID-       | I/O   | This signal is used to detect the type of cable installed in the system.<br><br>This signal is pulled up to +5 V through 10 kΩ resistor at each device.  |
| DASP-        | I/O   | This is a time-multiplexed signal that indicates that the device is active and a slave device is present.<br><br>This signal is pulled up to +5 V through 10 kΩ resistor at each device.   |
| IORDY        | O     | This signal requests the host system to delay the transfer cycle when the device is not ready to respond to a data transfer request from the host system.  |
| DDMARDY<br>- | O     | Flow control signal for Ultra DMA data Out transfer (WRITE DMA command). This signal is asserted by the device to inform the host that the device is ready to receive the Ultra DMA data Out transfer. The device can negate the DDMARDY- signal to suspend the Ultra DMA data Out transfer.                     |
| DSTROBE      | O     | Data In Strobe signal from the device during Ultra DMA data In transfer. Both the rising and falling edges of the DSTROBE signal latch data from Data 15-0 into the host. The device can suspend the inversion of the DSTROBE signal to suspend the Ultra DMA data In transfer.                                  |
| CSEL         | I     | This signal to configure the device as a master or a slave device. <ul style="list-style-type: none"> <li>- When CSEL signal is grounded,, the IDD is a master device.</li> <li>- When CSEL signal is open,, the IDD is a slave device.</li> </ul> This signal is pulled up with 240 kΩ resistor at each device. |
| DMACK-       | I     | The host system asserts this signal as a response that the host system receive data or to indicate that data is valid.   |

| [signal] | [I/O] | [Description]   |
|----------|-------|---|
| DMARQ    | O     | <p>This signal is used for DMA transfer between the host system and the device. The device asserts this signal when the device completes the preparation of DMA data transfer to the host system (at reading) or from the host system (at writing).</p> <p>The direction of data transfer is controlled by the DIOR and DIOW signals. This signal hand shakes with the DMACK-signal. In other words, the device negates the DMARQ signal after the host system asserts the DMACK signal. When there is other data to be transferred, the device asserts the DMARQ signal again.</p> <p>When the DMA data transfer is performed, IOCS16-, CS0- and CS1- signals are not asserted. The DMA data transfer is a 16-bit data transfer.</p> |
| +5 VDC   | I     | +5 VDC power supplying to the device.   |
| GND      | -     | Grounded signal at each signal wire.  |

Note:

“I” indicates input signal from the host to the device.

“O” indicates output signal from the device to the host.

“I/O” indicates common output or bi-directional signal between the host and the device.

## 5.2 Logical Interface

The device can operate for command execution in either address-specified mode; cylinder-head-sector (CHS) or Logical block address (LBA) mode. The IDENTIFY DEVICE information indicates whether the device supports the LBA mode. When the host system specifies the LBA mode by setting bit 6 in the Device/Head register to 1, HS3 to HS0 bits of the Device/Head register indicates the head No. under the LBA mode, and all bits of the Cylinder High, Cylinder Low, and Sector Number registers are LBA bits.

The sector No. under the LBA mode proceeds in the ascending order with the start point of LBA0 (defined as follows).

LBA0 = [Cylinder 0, Head 0, Sector 1]

Even if the host system changes the assignment of the CHS mode by the INITIALIZE DEVICE PARAMETER command, the sector LBA address is not changed.

$$\text{LBA} = [((\text{Cylinder No.}) \times (\text{Number of head}) + (\text{Head No.})) \times (\text{Number of sector/track})] + (\text{Sector No.}) - 1$$

### 5.2.1 I/O registers

Communication between the host system and the device is done through input-output (I/O) registers of the device.

These I/O registers can be selected by the coded signals, CS0-, CS1-, and DA0 to DA2 from the host system. Table 5.2. shows the coding address and the function of I/O registers.

**Table 5.2 I/O registers**

| CS0-                    | CS1- | DA2 | DA1 | DA0 | I/O registers    |                 | Host I/O address |
|-------------------------|------|-----|-----|-----|------------------|-----------------|------------------|
|                         |      |     |     |     | Read operation   | Write operation |                  |
| Command block registers |      |     |     |     |                  |                 |                  |
| L                       | H    | L   | L   | L   | Data             | Data            | X'1F0'           |
| L                       | H    | L   | L   | H   | Error Register   | Features        | X'1F1'           |
| L                       | H    | L   | H   | L   | Sector Count     | Sector Count    | X'1F2'           |
| L                       | H    | L   | H   | H   | Sector Number    | Sector Number   | X'1F3'           |
| L                       | H    | H   | L   | L   | Cylinder Low     | Cylinder Low    | X'1F4'           |
| L                       | H    | H   | L   | H   | Cylinder High    | Cylinder High   | X'1F5'           |
| L                       | H    | H   | H   | L   | Device/Head      | Device/Head     | X'1F6'           |
| L                       | H    | H   | H   | H   | Status           | Command         | X'1F7'           |
| L                       | L    | X   | X   | X   | (Invalid)        | (Invalid)       | —                |
| Control block registers |      |     |     |     |                  |                 |                  |
| H                       | L    | H   | H   | L   | Alternate Status | Device Control  | X'3F6'           |
| H                       | L    | H   | H   | H   | —                | —               | X'3F7'           |

Notes:

1. The Data register for read or write operation can be accessed by 16 bit data bus (DATA0 to DATA15).
2. The registers for read or write operation other than the Data registers can be accessed by 8 bit data bus (DATA0 to DATA7).
3. When reading the Drive Address register, bit 7 is high-impedance state.
4. H indicates signal level High and L indicates signal level Low.

And the LBA mode is specified, the Device/Head, Cylinder High, Cylinder Low, and Sector Number registers indicate LBA bits 27 to 24, 23 to 16, 15 to 8, and 7 to 0.



## 5.2.2 Command block registers

### (1) Data register (X'1F0')

The Data register is a 16-bit register for data block transfer between the device and the host system. Data transfer mode is PIO or DMA mode.

### (2) Error register (X'1F1')

The Error register indicates the status of the command executed by the device. The contents of this register are valid when the ERR bit of the Status register is 1.

This register contains a diagnostic code after power is turned on, a reset, or the EXECUTIVE DEVICE DIAGNOSTIC command is executed.

[Status at the completion of command execution other than diagnostic command]

| Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-------|-------|-------|-------|-------|-------|-------|-------|
| ICRC  | UNC   | X     | IDNF  | X     | ABRT  | TK0NF | AMNF  |

X: Unused

- Bit 7: Interface CRC Error (ICRC). This bit indicates that a CRC error occurred during Ultra DMA transfer.
- Bit 6: Uncorrectable Data Error (UNC). This bit indicates that an uncorrectable data error has been encountered.
- Bit 5: Unused
- Bit 4: ID Not Found (IDNF). This bit indicates an error except for bad sector, uncorrectable error and SB not found.
- Bit 3: Unused
- Bit 2: Aborted Command (ABRT). This bit indicates that the requested command was aborted due to a device status error (e.g. Not Ready, Write Fault) or the command code was invalid.
- Bit 1: Track 0 Not Found (TK0NF). This bit indicates that track 0 was not found during RECALIBRATE command execution.
- Bit 0: Address Mark Not Found (AMNF). This bit indicates that the SB Not Found error occurred.

[Diagnostic code]

X'01': No Error Detected.

X'02': HDC Register Compare Error

X'03': Data Buffer Compare Error.

X'05': ROM Sum Check Error.

X'80': Device 1 (slave device) Failed.

Error register of the master device is valid under two devices (master and slave) configuration. If the slave device fails, the master device posts X'80' OR (the diagnostic code) with its own status (X'01' to X'05').

However, when the host system selects the slave device, the diagnostic code of the slave device is posted.

(3) Features register (X'1F1')

The Features register provides specific feature to a command. For instance, it is used with SET FEATURES command to enable or disable caching.

(4) Sector Count register (X'1F2')

The Sector Count register indicates the number of sectors of data to be transferred in a read or write operation between the host system and the device. When the value in this register is X'00', the sector count is 256.

When this register indicates X'00' at the completion of the command execution, this indicates that the command is completed successfully. If the command is not completed successfully, this register indicates the number of sectors to be transferred to complete the request from the host system. That is, this register indicates the number of remaining sectors that the data has not been transferred due to the error.

The contents of this register has other definition for the following commands; INITIALIZE DEVICE PARAMETERS, SET FEATURES, IDLE, STANDBY and SET MULTIPLE MODE.

(5) Sector Number register (X'1F3')

The contents of this register indicates the starting sector number for the subsequent command. The sector number should be between X'01' and [the number of sectors per track defined by INITIALIZE DEVICE PARAMETERS command.

Under the LBA mode, this register indicates LBA bits 7 to 0.

## (6) Cylinder Low register (X'1F4')

The contents of this register indicates low-order 8 bits of the starting cylinder address for any disk-access.

At the end of a command, the contents of this register are updated to the current cylinder number.

Under the LBA mode, this register indicates LBA bits 15 to 8.

## (7) Cylinder High register (X'1F5')

The contents of this register indicates high-order 8 bits of the disk-access start cylinder address.

At the end of a command, the contents of this register are updated to the current cylinder number. The high-order 8 bits of the cylinder address are set to the Cylinder High register.

Under the LBA mode, this register indicates LBA bits 23 to 16.

## (8) Device/Head register (X'1F6')

The contents of this register indicate the device and the head number.

When executing INITIALIZE DEVICE PARAMETERS command, the contents of this register defines “the number of heads minus 1” (a maximum head No.).

| Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-------|-------|-------|-------|-------|-------|-------|-------|
| X     | L     | X     | DEV   | HS3   | HS2   | HS1   | HS0   |

- Bit 7: Unused
- Bit 6: L. 0 for CHS mode and 1 for LBA mode.
- Bit 5: Unused
- Bit 4: DEV bit. 0 for the master device and 1 for the slave device.
- Bit 3: HS3 CHS mode head address 3 ( $2^3$ ). LBA bit 27.
- Bit 2: HS2 CHS mode head address 2 ( $2^2$ ). LBA bit 26.
- Bit 1: HS1 CHS mode head address 1 ( $2^1$ ). LBA bit 25.
- Bit 0: HS0 CHS mode head address 0 ( $2^0$ ). LBA bit 24.

## (9) Status register (X'1F7')

The contents of this register indicate the status of the device. The contents of this register are updated at the completion of each command. When the BSY bit is cleared, other bits in this register should be validated within 400 ns. When the BSY bit is 1, other bits of this register are invalid. When the host system reads this register while an interrupt is pending, it is considered to be the Interrupt Acknowledge (the host system acknowledges the interrupt). Any pending interrupt is cleared (negating INTRQ signal) whenever this register is read.

| Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-------|-------|-------|-------|-------|-------|-------|-------|
| BSY   | DRDY  | DF    | DSC   | DRQ   | 0     | 0     | ERR   |

- Bit 7: Busy (BSY) bit. This bit is set whenever the Command register is accessed. Then this bit is cleared when the command is completed. However, even if a command is being executed, this bit is 0 while data transfer is being requested (DRQ bit = 1). When BSY bit is 1, the host system should not write the command block registers. If the host system reads any command block register when BSY bit is 1, the contents of the Status register are posted. This bit is set by the device under following conditions:

- (a) Within 400 ns after RESET- is negated or SRST is set in the Device Control register, the BSY bit is set. the BSY bit is cleared, when the reset process is completed.

The BSY bit is set for no longer than 15 seconds after the IDD accepts reset.

- (b) Within 400 ns from the host system starts writing to the Command register.
- (c) Within 5  $\mu$ s following transfer of 512 bytes data during execution of the READ SECTOR(S), WRITE SECTOR(S), or WRITE BUFFER command.

Within 5  $\mu$ s following transfer of 512 bytes of data and the appropriate number of ECC bytes during execution of READ LONG or WRITE LONG command.

- Bit 6: Device Ready (DRDY) bit. This bit indicates that the device is capable to respond to a command.

The IDD checks its status when it receives a command. If an error is detected (not ready state), the IDD clears this bit to 0. This is cleared to 0 at power-on and it is cleared until the rotational speed of the spindle motor reaches the steady speed.

- Bit 5: The Device Write Fault (DF) bit. This bit indicates that a device fault (write fault) condition has been detected.

If a write fault is detected during command execution, this bit is latched and retained until the device accepts the next command or reset.

- Bit 4: Device Seek Complete (DSC) bit. This bit indicates that the device heads are positioned over a track.

In the IDD, this bit is always set to 1 after the spin-up control is completed.

- Bit 3: Data Request (DRQ) bit. This bit indicates that the device is ready to transfer data of word unit or byte unit between the host system and the device.

- Bit 2: Always 0.

- Bit 1: Always 0.

- Bit 0: Error (ERR) bit. This bit indicates that an error was detected while the previous command was being executed. The Error register indicates the additional information of the cause for the error.

#### (10) Command register (X'1F7')

The Command register contains a command code being sent to the device. After this register is written, the command execution starts immediately.

Table 5.3 lists the executable commands and their command codes. This table also lists the necessary parameters for each command which are written to certain registers before the Command register is written.

### 5.2.3 Control block registers

#### (1) Alternate Status register (X'3F6')

The Alternate Status register contains the same information as the Status register of the command block register.

The only difference from the Status register is that a read of this register does not imply Interrupt Acknowledge and INTRQ signal is not reset.

| Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-------|-------|-------|-------|-------|-------|-------|-------|
| BSY   | DRDY  | DF    | DSC   | DRQ   | 0     | 0     | ERR   |

#### (2) Device Control register (X'3F6')

The Device Control register contains device interrupt and software reset.

| Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|-------|-------|-------|-------|-------|-------|-------|-------|
| X     | X     | X     | X     | X     | SRST  | nIEN  | 0     |

- Bit 2: SRST is the host software reset bit. When this bit is set, the device is held reset state. When two device are daisy chained on the interface, setting this bit resets both device simultaneously.

The slave device is not required to execute the DASP- handshake.

- Bit 1: nIEN bit enables an interrupt (INTRQ signal) from the device to the host. When this bit is 0 and the device is selected, an interruption (INTRQ signal) can be enabled through a tri-state buffer. When this bit is 1 or the device is not selected, the INTRQ signal is in the high-impedance state.

## 5.3 Host Commands

The host system issues a command to the device by writing necessary parameters in related registers in the command block and writing a command code in the Command register.

The device can accept the command when the BSY bit is 0 (the device is not in the busy status).

The host system can halt the uncompleted command execution only at execution of hardware or software reset.

When the BSY bit is 1 or the DRQ bit is 1 (the device is requesting the data transfer) and the host system writes to the command register, the correct device operation is not guaranteed.

### 5.3.1 Command code and parameters

Table 5.3 lists the supported commands, command code and the registers that needed parameters are written.

**Table 5.3 Command code and parameters (1 of 2)**

| Command name                 | Command code (Bit) |   |   |   |   |   |   |   | Parameters used |    |    |    |    |
|------------------------------|--------------------|---|---|---|---|---|---|---|-----------------|----|----|----|----|
|                              | 7                  | 6 | 5 | 4 | 3 | 2 | 1 | 0 | FR              | SC | SN | CY | DH |
| READ SECTOR(S)               | 0                  | 0 | 1 | 0 | 0 | 0 | 0 | R | N               | Y  | Y  | Y  | Y  |
| READ MULTIPLE                | 1                  | 1 | 0 | 0 | 0 | 1 | 0 | 0 | N               | Y  | Y  | Y  | Y  |
| READ DMA                     | 1                  | 1 | 0 | 0 | 1 | 0 | 0 | R | N               | Y  | Y  | Y  | Y  |
| READ VERIFY SECTOR(S)        | 0                  | 1 | 0 | 0 | 0 | 0 | 0 | R | N               | Y  | Y  | Y  | Y  |
| WRITE MULTIPLE               | 1                  | 1 | 0 | 0 | 0 | 1 | 0 | 1 | N               | Y  | Y  | Y  | Y  |
| WRITE DMA                    | 1                  | 1 | 0 | 0 | 1 | 0 | 1 | R | N               | Y  | Y  | Y  | Y  |
| WRITE VERIFY                 | 0                  | 0 | 1 | 1 | 1 | 1 | 0 | 0 | N               | Y  | Y  | Y  | Y  |
| WRITE SECTOR(S)              | 0                  | 0 | 1 | 1 | 0 | 0 | 0 | R | N               | Y  | Y  | Y  | Y  |
| RECALIBRATE                  | 0                  | 0 | 0 | 1 | X | X | X | X | N               | N  | N  | N  | D  |
| SEEK                         | 0                  | 1 | 1 | 1 | X | X | X | X | N               | N  | Y  | Y  | Y  |
| INITIALIZE DEVICE PARAMETERS | 1                  | 0 | 0 | 1 | 0 | 0 | 0 | 1 | N               | Y  | N  | N  | Y  |
| IDENTIFY DEVICE              | 1                  | 1 | 1 | 0 | 1 | 1 | 0 | 0 | N               | N  | N  | N  | D  |
| IDENTIFY DEVICE DMA          | 1                  | 1 | 1 | 0 | 1 | 1 | 0 | 0 | N               | N  | N  | N  | D  |
| SET FEATURES                 | 1                  | 1 | 1 | 0 | 1 | 1 | 1 | 1 | Y               | N* | N  | N  | D  |
| SET MULTIPLE MODE            | 1                  | 1 | 0 | 0 | 0 | 1 | 1 | 0 | N               | Y  | N  | N  | D  |
| SET MAX ADDRESS              | 1                  | 1 | 1 | 1 | 1 | 0 | 0 | 1 | N               | Y  | Y  | Y  | Y  |
| READ NATIVE MAX ADDRESS      | 1                  | 1 | 1 | 1 | 1 | 0 | 0 | 0 | N               | N  | N  | N  | D  |
| EXECUTE DEVICE DIAGNOSTIC    | 1                  | 0 | 0 | 1 | 0 | 0 | 0 | 0 | N               | N  | N  | N  | D* |
| READ LONG                    | 0                  | 0 | 1 | 0 | 0 | 0 | 1 | R | N               | Y  | Y  | Y  | Y  |
| WRITE LONG                   | 0                  | 0 | 1 | 1 | 0 | 0 | 1 | R | N               | Y  | Y  | Y  | Y  |
| READ BUFFER                  | 1                  | 1 | 1 | 0 | 0 | 1 | 0 | 0 | N               | N  | N  | N  | D  |
| WRITE BUFFER                 | 1                  | 1 | 1 | 0 | 1 | 0 | 0 | 0 | N               | N  | N  | N  | D  |
| IDLE                         | 1                  | 0 | 0 | 1 | 0 | 1 | 1 | 1 | N               | Y  | N  | N  | D  |
|                              | 1                  | 1 | 1 | 0 | 0 | 0 | 1 | 1 |                 |    |    |    |    |

**Table 5.3 Command code and parameters (2 of 2)**

| Command name              | Command code (Bit) |        |        |        |        |        |        |        | Parameters used |    |    |    |    |   |
|---------------------------|--------------------|--------|--------|--------|--------|--------|--------|--------|-----------------|----|----|----|----|---|
|                           | 7                  | 6      | 5      | 4      | 3      | 2      | 1      | 0      | FR              | SC | SN | CY | DH |   |
| IDLE IMMEDIATE            | 1<br>1             | 0<br>1 | 0<br>1 | 1<br>0 | 0<br>0 | 1<br>0 | 0<br>0 | 1<br>0 | 1<br>1          | N  | N  | N  | N  | D |
| STANDBY                   | 1<br>1             | 0<br>1 | 0<br>1 | 1<br>0 | 0<br>0 | 1<br>0 | 1<br>0 | 0<br>0 | N               | Y  | N  | N  | D  |   |
| STANDBY IMMEDIATE         | 1<br>1             | 0<br>1 | 0<br>1 | 1<br>0 | 0<br>0 | 1<br>0 | 0<br>0 | 0<br>0 | N               | N  | N  | N  | D  |   |
| SLEEP                     | 1<br>1             | 0<br>1 | 0<br>1 | 1<br>0 | 1<br>0 | 0<br>1 | 0<br>1 | 1<br>0 | N               | N  | N  | N  | D  |   |
| CHECK POWER MODE          | 1<br>1             | 0<br>1 | 0<br>1 | 1<br>0 | 1<br>0 | 0<br>1 | 0<br>0 | 0<br>1 | N               | N  | N  | N  | D  |   |
| SMART                     | 1                  | 0      | 1      | 1      | 0      | 0      | 0      | 0      | Y               | Y  | Y  | Y  | D  |   |
| SECURITY DISABLE PASSWORD | 1                  | 1      | 1      | 1      | 0      | 1      | 1      | 0      | N               | N  | N  | N  | D  |   |
| SECURITY ERASE PREPARE    | 1                  | 1      | 1      | 1      | 0      | 0      | 1      | 1      | N               | N  | N  | N  | D  |   |
| SECURITY ERASE UNIT       | 1                  | 1      | 1      | 1      | 0      | 1      | 0      | 0      | N               | N  | N  | N  | D  |   |
| SECURITY FREEZE LOCK      | 1                  | 1      | 1      | 1      | 0      | 1      | 0      | 1      | N               | N  | N  | N  | D  |   |
| SECURITY SET PASSWORD     | 1                  | 1      | 1      | 1      | 0      | 0      | 0      | 1      | N               | N  | N  | N  | D  |   |
| SECURITY UNLOCK           | 1                  | 1      | 1      | 1      | 0      | 0      | 1      | 0      | N               | N  | N  | N  | D  |   |
| FLUSH CACHE               | 1                  | 1      | 1      | 0      | 0      | 1      | 1      | 1      | N               | N  | N  | N  | D  |   |

Notes:

FR: Features Register

CY: Cylinder Registers

SC: Sector Count Register

DH: Drive/Head Register

SN: Sector Number Register

R: Retry at error

1 = Without retry

0 = With retry

Y: Necessary to set parameters



- Y\*: Necessary to set parameters under the LBA mode.
- N: Not necessary to set parameters (The parameter is ignored if it is set.)
- N\*: May set parameters
- D: The device parameter is valid, and the head parameter is ignored.
- D\*: The command is addressed to the master device, but both the master device and the slave device execute it.
- X: Do not care

### 5.3.2 Command descriptions

The contents of the I/O registers to be necessary for issuing a command and the example indication of the I/O registers at command completion are shown as following in this subsection.

Example: READ SECTOR(S)

| At command issuance (I/O registers setting contents) |                                    |   |   |    |                      |   |   |   |
|--|------------------------------------|---|---|----|----------------------|---|---|---|
| Bit  | 7                                  | 6 | 5 | 4  | 3                    | 2 | 1 | 0 |
| 1F7 <sub>H</sub> (CM)                                | 0                                  | 0 | 1 | 0  | 0                    | 0 | 0 | 0 |
| 1F6 <sub>H</sub> (DH)                                | ×                                  | L | × | DV | Head No. / LBA [MSB] |   |   |   |
| 1F5 <sub>H</sub> (CH)                                | Start cylinder address [MSB] / LBA |   |   |    |                      |   |   |   |
| 1F4 <sub>H</sub> (CL)                                | Start cylinder address [LSB] / LBA |   |   |    |                      |   |   |   |
| 1F3 <sub>H</sub> (SN)                                | Start sector No. / LBA [LSB]       |   |   |    |                      |   |   |   |
| 1F2 <sub>H</sub> (SC)                                | Transfer sector count              |   |   |    |                      |   |   |   |
| 1F1 <sub>H</sub> (FR)                                | xx                                 |   |   |    |                      |   |   |   |

| At command completion (I/O registers contents to be read) |                                  |   |   |    |                      |   |   |   |
|---|----------------------------------|---|---|----|----------------------|---|---|---|
| Bit   | 7                                | 6 | 5 | 4  | 3                    | 2 | 1 | 0 |
| 1F7 <sub>H</sub> (ST)                                     | Status information               |   |   |    |                      |   |   |   |
| 1F6 <sub>H</sub> (DH)                                     | ×                                | L | × | DV | Head No. / LBA [MSB] |   |   |   |
| 1F5 <sub>H</sub> (CH)                                     | End cylinder address [MSB] / LBA |   |   |    |                      |   |   |   |
| 1F4 <sub>H</sub> (CL)                                     | End cylinder address [LSB] / LBA |   |   |    |                      |   |   |   |
| 1F3 <sub>H</sub> (SN)                                     | End sector No. / LBA [LSB]       |   |   |    |                      |   |   |   |
| 1F2 <sub>H</sub> (SC)                                     | X'00'                            |   |   |    |                      |   |   |   |
| 1F1 <sub>H</sub> (ER)                                     | Error information                |   |   |    |                      |   |   |   |

|                            |  |
|----------------------------|--|
| CM: Command register       | FR: Features register                      |
| DH: Device/Head register   | ST: Status register                        |
| CH: Cylinder High register | ER: Error register                         |
| CL: Cylinder Low register  | L: LBA (logical block address) setting bit |
| SN: Sector Number register | DV: Device address. bit                    |
| SC: Sector Count register  | x, xx: Do not care (no necessary to set)   |

Note:

1. When the L bit is specified to 1, the lower 4 bits of the DH register and all bits of the CH, CL and SN registers indicate the LBA bits (bits of the DH register are the MSB (most significant bit) and bits of the SN register are the LSB (least significant bit).
2. At error occurrence, the SC register indicates the remaining sector count of data transfer.
3. In the table indicating I/O registers contents in this subsection, bit indication is omitted.

#### (1) READ SECTOR(S) (X'20' or X'21')

This command reads data of sectors specified in the Sector Count register from the address specified in the Device/Head, Cylinder High, Cylinder Low and Sector Number registers. Number of sectors can be specified to 256 sectors in maximum. To specify 256 sectors reading, '00' is specified. For the DRQ, INTRQ, and BSY protocols related to data transfer, see Subsection 5.4.1.

If the head is not on the track specified by the host, the device performs a implied seek. After the head reaches to the specified track, the device reads the target sector.

If an error occurs, retry reads are attempted to read the target sector before reporting an error, irrespective of the R bit setting.

The DRQ bit of the Status register is always set prior to the data transfer regardless of an error condition.

Upon the completion of the command execution, command block registers contain the cylinder, head, and sector addresses (in the CHS mode) or logical block address (in the LBA mode) of the last sector read.

If an unrecoverable error occurs in a sector, the read operation is terminated at the sector where the error occurred.

Command block registers contain the cylinder, the head, and the sector addresses of the sector (in the CHS mode) or the logical block address (in the LBA mode) where the error occurred, and remaining number of sectors of which data was not transferred.

| At command issuance (I/O registers setting contents) |                                |   |   |    |                          |   |   |
|--|--------------------------------|---|---|----|--------------------------|---|---|
| 1F7 <sub>H</sub> (CM)                                | 0                              | 0 | 1 | 0  | 0                        | 0 | R |
| 1F6 <sub>H</sub> (DH)                                | ×                              | L | × | DV | Start head No./LBA [MSB] |   |   |
| 1F5 <sub>H</sub> (CH)                                | Start cylinder No. [MSB] / LBA |   |   |    |                          |   |   |
| 1F4 <sub>H</sub> (CL)                                | Start cylinder No. [LSB] / LBA |   |   |    |                          |   |   |
| 1F3 <sub>H</sub> (SN)                                | Start sector No. / LBA [LSB]   |   |   |    |                          |   |   |
| 1F2 <sub>H</sub> (SC)                                | Transfer sector count          |   |   |    |                          |   |   |
| 1F1 <sub>H</sub> (FR)                                | xx                             |   |   |    |                          |   |   |

(R: Retry)

| At command completion (I/O registers contents to be read) |                              |   |   |    |                        |  |  |
|---|------------------------------|---|---|----|------------------------|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                        |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | L | × | DV | End head No./LBA [MSB] |  |  |
| 1F5 <sub>H</sub> (CH)                                     | End cylinder No. [MSB] / LBA |   |   |    |                        |  |  |
| 1F4 <sub>H</sub> (CL)                                     | End cylinder No. [LSB] / LBA |   |   |    |                        |  |  |
| 1F3 <sub>H</sub> (SN)                                     | End sector No. / LBA [LSB]   |   |   |    |                        |  |  |
| 1F2 <sub>H</sub> (SC)                                     | 00 (*1)                      |   |   |    |                        |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                        |  |  |

\*1 If the command is terminated due to an error, the remaining number of sectors of which data was not transferred is set in this register.

## (2) READ MULTIPLE (X'C4')

This command operates similarly to the READ SECTOR(S) command. The device does not generate an interrupt (assertion of the INTRQ signal) on each every sector. An interrupt is generated after the transfer of a block of sectors for which the number is specified by the SET MULTIPLE MODE command.

The implementation of the READ MULTIPLE command is identical to that of the READ SECTOR(S) command except that the number of sectors is specified by the SET MULTIPLE MODE command are transferred without intervening interrupts. In the READ MULTIPLE command operation, the DRQ bit of the Status register is set only at the start of the data block, and is not set on each sector.

The number of sectors (block count) to be transferred without interruption is specified by the SET MULTIPLE MODE command. The SET MULTIPLE MODE command should be executed prior to the READ MULTIPLE command.

When the READ MULTIPLE command is issued, the Sector Count register contains the number of sectors requested (not a number of the block count or a number of sectors in a block).

Upon receipt of this command, the device executes this command even if the value of the Sector Count register is less than the defined block count (the value of the Sector Count should not be 0).

If the number of requested sectors is not divided evenly (having the same number of sectors [block count]), as many full blocks as possible are transferred, then a final partial block is transferred. The number of sectors in the partial block to be transferred is  $n$  where  $n = \text{remainder of ("number of sectors" / "block count")}$ .

If the READ MULTIPLE command is issued before the SET MULTIPLE MODE command is executed or when the READ MULTIPLE command is disabled, the device rejects the READ MULTIPLE command with an ABORTED COMMAND error.

If an unrecoverable error occurs, reading sector is stopped at the sector where the error occurred. Command block registers contain the cylinder, the head, the sector addresses (in the CHS mode) or the logical block address (in the LBA mode) of the sector where the error occurred, and remaining number of sectors that had not transferred after the sector where the error occurred.

An interrupt is generated when the DRQ bit is set at the beginning of each block or a partial block.


Figure 5.2 shows an example of the execution of the READ MULTIPLE command.

- Block count specified by SET MULTIPLE MODE command = 4 (number of sectors in a block)
- READ MULTIPLE command specifies;

Number of requested sectors = 9 (Sector Count register = 9)

↓

Number of sectors in incomplete block = remainder of  $9/4 = 1$

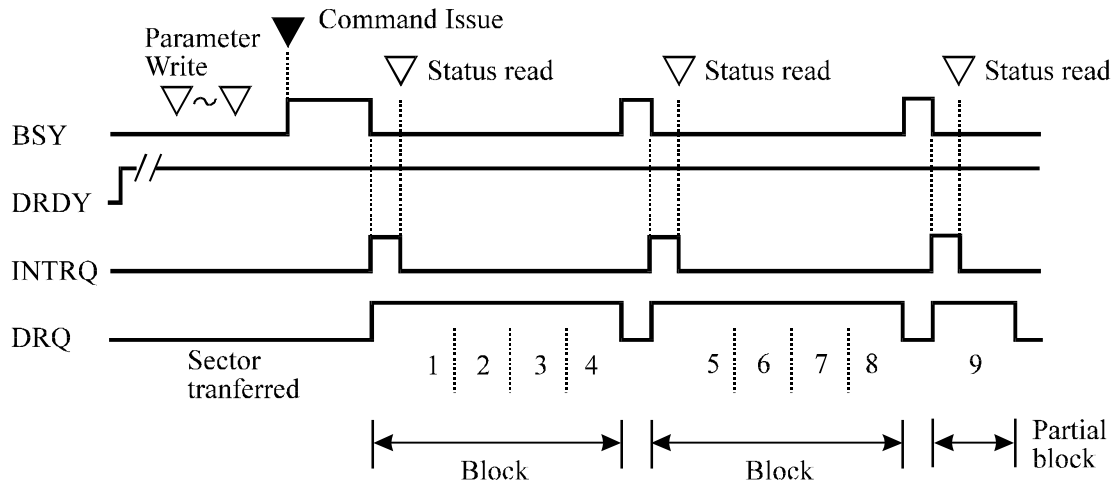

**Figure 5.2 Execution example of READ MULTIPLE command**

| At command issuance (I/O registers setting contents) |                                |   |   |    |                           |
|--|--------------------------------|---|---|----|---------------------------|
| 1F7 <sub>H</sub> (CM)                                | 1                              | 1 | 0 | 0  | 0 1 0 0                   |
| 1F6 <sub>H</sub> (DH)                                | ×                              | L | × | DV | Start head No. /LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                | Start cylinder No. [MSB] / LBA |   |   |    |                           |
| 1F4 <sub>H</sub> (CL)                                | Start cylinder No. [LSB] / LBA |   |   |    |                           |
| 1F3 <sub>H</sub> (SN)                                | Start sector No. / LBA [LSB]   |   |   |    |                           |
| 1F2 <sub>H</sub> (SC)                                | Transfer sector count          |   |   |    |                           |
| 1F1 <sub>H</sub> (FR)                                | xx                             |   |   |    |                           |

| At command completion (I/O registers contents to be read) |                              |   |   |    |                         |
|---|------------------------------|---|---|----|-------------------------|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                         |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | L | × | DV | End head No. /LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                     | End cylinder No. [MSB] / LBA |   |   |    |                         |
| 1F4 <sub>H</sub> (CL)                                     | End cylinder No. [LSB] / LBA |   |   |    |                         |
| 1F3 <sub>H</sub> (SN)                                     | End sector No. / LBA [LSB]   |   |   |    |                         |
| 1F2 <sub>H</sub> (SC)                                     | 00 <sup>(*)</sup>            |   |   |    |                         |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                         |

\*1 If the command is terminated due to an error, the remaining number of sectors for which data was not transferred is set in this register.

## (3) READ DMA (X'C8' or X'C9')

This command operates similarly to the READ SECTOR(S) command except for following events.

- The data transfer starts at the timing of DMARQ signal assertion.
- The device controls the assertion or negation timing of the DMARQ signal.
- The device posts a status as the result of command execution only once at completion of the data transfer.

When an error, such as an unrecoverable medium error, that the command execution cannot be continued is detected, the data transfer is stopped without transferring data of sectors after the erred sector. The device generates an interrupt using the INTRQ signal and posts a status to the host system. The format of the error information is the same as the READ SECTOR(S) command.

In LBA mode

The logical block address is specified using the start head No., start cylinder No., and first sector No. fields. At command completion, the logical block address of the last sector and remaining number of sectors of which data was not transferred, like in the CHS mode, are set.

The host system can select the DMA transfer mode by using the SET FEATURES command.

- Multiword DMA transfer mode 0 to 2
- Ultra DMA transfer mode 0 to 4

| At command issuance (I/O registers setting contents) |                                |   |   |    |                           |   |     |
|--|--------------------------------|---|---|----|---------------------------|---|-----|
| 1F7 <sub>H</sub> (CM)                                | 1                              | 1 | 0 | 0  | 1                         | 0 | 0 R |
| 1F6 <sub>H</sub> (DH)                                | ×                              | L | × | DV | Start head No. /LBA [MSB] |   |     |
| 1F5 <sub>H</sub> (CH)                                | Start cylinder No. [MSB] / LBA |   |   |    |                           |   |     |
| 1F4 <sub>H</sub> (CL)                                | Start cylinder No. [LSB] / LBA |   |   |    |                           |   |     |
| 1F3 <sub>H</sub> (SN)                                | Start sector No. / LBA [LSB]   |   |   |    |                           |   |     |
| 1F2 <sub>H</sub> (SC)                                | Transfer sector count          |   |   |    |                           |   |     |
| 1F1 <sub>H</sub> (FR)                                | xx                             |   |   |    |                           |   |     |

| At command completion (I/O registers contents to be read) |                              |   |   |    |                         |
|---|------------------------------|---|---|----|-------------------------|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                         |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | L | × | DV | End head No. /LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                     | End cylinder No. [MSB] / LBA |   |   |    |                         |
| 1F4 <sub>H</sub> (CL)                                     | End cylinder No. [LSB] / LBA |   |   |    |                         |
| 1F3 <sub>H</sub> (SN)                                     | End sector No. / LBA [LSB]   |   |   |    |                         |
| 1F2 <sub>H</sub> (SC)                                     | 00 (*1)                      |   |   |    |                         |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                         |

- \*1 If the command is terminated due to an error, the remaining number of sectors of which data was not transferred is set in this register.

#### (4) READ VERIFY SECTOR(S) (X'40' or X'41')

This command operates similarly to the READ SECTOR(S) command except that the data is not transferred to the host system.

After all requested sectors are verified, the device clears the BSY bit of the Status register and generates an interrupt. Upon the completion of the command execution, the command block registers contain the cylinder, head, and sector number of the last sector verified.

If an unrecoverable error occurs, the verify operation is terminated at the sector where the error occurred. The command block registers contain the cylinder, the head, and the sector addresses (in the CHS mode) or the logical block address (in the LBA mode) of the sector where the error occurred. The Sector Count register indicates the number of sectors that have not been verified.

| At command issuance (I/O registers setting contents) |                                |   |   |    |                           |   |   |   |
|--|--------------------------------|---|---|----|---------------------------|---|---|---|
| 1F7 <sub>H</sub> (CM)                                | 0                              | 1 | 0 | 0  | 0                         | 0 | 0 | R |
| 1F6 <sub>H</sub> (DH)                                | ×                              | L | × | DV | Start head No. /LBA [MSB] |   |   |   |
| 1F5 <sub>H</sub> (CH)                                | Start cylinder No. [MSB] / LBA |   |   |    |                           |   |   |   |
| 1F4 <sub>H</sub> (CL)                                | Start cylinder No. [LSB] / LBA |   |   |    |                           |   |   |   |
| 1F3 <sub>H</sub> (SN)                                | Start sector No. / LBA [LSB]   |   |   |    |                           |   |   |   |
| 1F2 <sub>H</sub> (SC)                                | Transfer sector count          |   |   |    |                           |   |   |   |
| 1F1 <sub>H</sub> (FR)                                | xx                             |   |   |    |                           |   |   |   |

| At command completion (I/O registers contents to be read) |                              |   |   |    |                         |  |  |  |
|---|------------------------------|---|---|----|-------------------------|--|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                         |  |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | L | × | DV | End head No. /LBA [MSB] |  |  |  |
| 1F5 <sub>H</sub> (CH)                                     | End cylinder No. [MSB] / LBA |   |   |    |                         |  |  |  |
| 1F4 <sub>H</sub> (CL)                                     | End cylinder No. [LSB] / LBA |   |   |    |                         |  |  |  |
| 1F3 <sub>H</sub> (SN)                                     | End sector No. / LBA [LSB]   |   |   |    |                         |  |  |  |
| 1F2 <sub>H</sub> (SC)                                     | 00 (*1)                      |   |   |    |                         |  |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                         |  |  |  |

\*1 If the command is terminated due to an error, the remaining number of sectors of which data was not transferred is set in this register.

#### (5) WRITE SECTOR(S) (X'30' or X'31')

This command writes data of sectors from the address specified in the Device/Head, Cylinder High, Cylinder Low, and Sector Number registers to the address specified in the Sector Count register. Number of sectors can be specified to 256 sectors in maximum. Data transfer begins at the sector specified in the Sector Number register. For the DRQ, INTRQ, and BSY protocols related to data transfer, see Subsection 5.4.2.

If the head is not on the track specified by the host, the device performs a implied seek. After the head reaches to the the specified track, the device writes the target sector.

If an error occurs when writing to the target sector, retries are attempted irrespectively of the R bit setting.

The data stored in the buffer, and CRC code and ECC bytes are written to the data field of the corresponding sector(s). Upon the completion of the command execution, the command block registers contain the cylinder, head, and sector addresses of the last sector written.



If an error occurs during multiple sector write operation, the write operation is terminated at the sector where the error occurred. Command block registers contain the cylinder, the head, the sector addresses (in the CHS mode) or the logical block address (in the LBA mode) of the sector where the error occurred. Then the host can read the command block registers to determine what error has occurred and on which sector the error has occurred.

| At command issuance (I/O registers setting contents) |                                |   |   |    |                           |   |   |
|--|--------------------------------|---|---|----|---------------------------|---|---|
| 1F7 <sub>H</sub> (CM)                                | 0                              | 0 | 1 | 1  | 0                         | 0 | R |
| 1F6 <sub>H</sub> (DH)                                | ×                              | L | × | DV | Start head No. /LBA [MSB] |   |   |
| 1F5 <sub>H</sub> (CH)                                | Start cylinder No. [MSB] / LBA |   |   |    |                           |   |   |
| 1F4 <sub>H</sub> (CL)                                | Start cylinder No. [LSB] / LBA |   |   |    |                           |   |   |
| 1F3 <sub>H</sub> (SN)                                | Start sector No. / LBA [LSB]   |   |   |    |                           |   |   |
| 1F2 <sub>H</sub> (SC)                                | Transfer sector count          |   |   |    |                           |   |   |
| 1F1 <sub>H</sub> (FR)                                | xx                             |   |   |    |                           |   |   |

| At command completion (I/O registers contents to be read) |                              |   |   |    |                         |  |  |
|---|------------------------------|---|---|----|-------------------------|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                         |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | L | × | DV | End head No. /LBA [MSB] |  |  |
| 1F5 <sub>H</sub> (CH)                                     | End cylinder No. [MSB] / LBA |   |   |    |                         |  |  |
| 1F4 <sub>H</sub> (CL)                                     | End cylinder No. [LSB] / LBA |   |   |    |                         |  |  |
| 1F3 <sub>H</sub> (SN)                                     | End sector No. / LBA [LSB]   |   |   |    |                         |  |  |
| 1F2 <sub>H</sub> (SC)                                     | 00 (*1)                      |   |   |    |                         |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                         |  |  |

- \*1 If the command is terminated due to an error, the remaining number of sectors of which data was not transferred is set in this register.

## (6) WRITE MULTIPLE (X'C5')

This command is similar to the WRITE SECTOR(S) command. The device does not generate interrupts (assertion of the INTRQ) signal) on each sector but on the transfer of a block which contains the number of sectors for which the number is defined by the SET MULTIPLE MODE command.

The implementation of the WRITE MULTIPLE command is identical to that of the WRITE SECTOR(S) command except that the number of sectors is specified by the SET MULTIPLE MODE command are transferred without intervening interrupts. In the WRITE MULTIPLE command operation, the DRQ bit of the Status register is required to set only at the start of the data block, not on each sector.

The number of sectors (block count) to be transferred without interruption is specified by the SET MULTIPLE MODE command. The SET MULTIPLE MODE command should be executed prior to the WRITE MULTIPLE command.

When the WRITE MULTIPLE command is issued, the Sector Count register contains the number of sectors requested (not a number of the block count or a number of sectors in a block).

Upon receipt of this command, the device executes this command even if the value of the Sector Count register is less than the defined block count the value of the Sector Count should not be 0).

If the number of requested sectors is not divided evenly (having the same number of sectors [block count]), as many full blocks as possible are transferred, then a final partial block is transferred. The number of sectors in the partial block to be transferred is  $n$  where  $n = \text{remainder of ("number of sectors" / "block count")}$ .

If the WRITE MULTIPLE command is issued before the SET MULTIPLE MODE command is executed or when WRITE MULTIPLE command is disabled, the device rejects the WRITE MULTIPLE command with an ABORTED COMMAND error.

Disk errors encountered during execution of the WRITE MULTIPLE command are posted after attempting to write the block or the partial block that was transferred. Write operation ends at the sector where the error was encountered even if the sector is in the middle of a block. If an error occurs, the subsequent block shall not be transferred. Interrupts are generated when the DRQ bit of the Status register is set at the beginning of each block or partial block.

The contents of the command block registers related to addresses after the transfer of a data block containing an erred sector are undefined. To obtain a valid error information, the host should retry data transfer as an individual request.

| At command issuance (I/O registers setting contents) |                                |   |   |    |                           |
|--|--------------------------------|---|---|----|---------------------------|
| 1F7 <sub>H</sub> (CM)                                | 1                              | 1 | 0 | 0  | 0 1 0 1                   |
| 1F6 <sub>H</sub> (DH)                                | ×                              | L | × | DV | Start head No. /LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                | Start cylinder No. [MSB] / LBA |   |   |    |                           |
| 1F4 <sub>H</sub> (CL)                                | Start cylinder No. [LSB] / LBA |   |   |    |                           |
| 1F3 <sub>H</sub> (SN)                                | Start sector No. / LBA [LSB]   |   |   |    |                           |
| 1F2 <sub>H</sub> (SC)                                | Transfer sector count          |   |   |    |                           |
| 1F1 <sub>H</sub> (FR)                                | xx                             |   |   |    |                           |

| At command completion (I/O registers contents to be read) |                              |   |   |    |                         |
|---|------------------------------|---|---|----|-------------------------|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                         |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | L | × | DV | End head No. /LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                     | End cylinder No. [MSB] / LBA |   |   |    |                         |
| 1F4 <sub>H</sub> (CL)                                     | End cylinder No. [LSB] / LBA |   |   |    |                         |
| 1F3 <sub>H</sub> (SN)                                     | End sector No. / LBA [LSB]   |   |   |    |                         |
| 1F2 <sub>H</sub> (SC)                                     | 00                           |   |   |    |                         |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                         |

#### (7) WRITE DMA (X'CA' or X'CB')

This command operates similarly to the WRITE SECTOR(S) command except for following events.

- The data transfer starts at the timing of DMARQ signal assertion.
- The device controls the assertion or negation timing of the DMARQ signal.
- The device posts a status as the result of command execution only once at completion of the data transfer or completion of processing in the device.
- The device posts a status as the result of command execution only once at completion of the data transfer.

When an error, such as an unrecoverable medium error, that the command execution cannot be continued is detected, the data transfer is stopped without transferring data of sectors after the erred sector. The device generates an interrupt using the INTRQ signal and posts a status to the host system. The format of the error information is the same as the WRITE SECTOR(S) command.

A host system can select the following transfer mode using the SET FEATURES command.

- Multiword DMA transfer mode 0 to 2
- Ultra DMA transfer mode 0 to 4

| At command issuance (I/O registers setting contents) |                                |   |   |    |                           |       |
|--|--------------------------------|---|---|----|---------------------------|-------|
| 1F7 <sub>H</sub> (CM)                                | 1                              | 1 | 0 | 0  | 1                         | 0 1 R |
| 1F6 <sub>H</sub> (DH)                                | ×                              | L | × | DV | Start head No. /LBA [MSB] |       |
| 1F5 <sub>H</sub> (CH)                                | Start cylinder No. [MSB] / LBA |   |   |    |                           |       |
| 1F4 <sub>H</sub> (CL)                                | Start cylinder No. [LSB] / LBA |   |   |    |                           |       |
| 1F3 <sub>H</sub> (SN)                                | Start sector No. / LBA [LSB]   |   |   |    |                           |       |
| 1F2 <sub>H</sub> (SC)                                | Transfer sector count          |   |   |    |                           |       |
| 1F1 <sub>H</sub> (FR)                                | xx                             |   |   |    |                           |       |

| At command completion (I/O registers contents to be read) |                              |   |   |    |                         |  |
|---|------------------------------|---|---|----|-------------------------|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                         |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | L | × | DV | End head No. /LBA [MSB] |  |
| 1F5 <sub>H</sub> (CH)                                     | End cylinder No. [MSB] / LBA |   |   |    |                         |  |
| 1F4 <sub>H</sub> (CL)                                     | End cylinder No. [LSB] / LBA |   |   |    |                         |  |
| 1F3 <sub>H</sub> (SN)                                     | End sector No. / LBA [LSB]   |   |   |    |                         |  |
| 1F2 <sub>H</sub> (SC)                                     | 00 (*1)                      |   |   |    |                         |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                         |  |

- \*1 If the command is terminated due to an error, the remaining number of sectors of which data was not transferred is set in this register.

#### (8) WRITE VERIFY (X'3C')

This command operates similarly to the WRITE SECTOR(S) command except that the device verifies each sector immediately after being written. The verify operation is a read and check for data errors without data transfer. Any error that is detected during the verify operation is posted.

After all sectors are verified, the last interruption (INTRQ for command termination) is generated.

| At command issuance (I/O registers setting contents) |                                |   |   |    |                           |
|--|--------------------------------|---|---|----|---------------------------|
| 1F7 <sub>H</sub> (CM)                                | 0                              | 0 | 1 | 1  | 1 1 0 0                   |
| 1F6 <sub>H</sub> (DH)                                | ×                              | L | × | DV | Start head No. /LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                | Start cylinder No. [MSB] / LBA |   |   |    |                           |
| 1F4 <sub>H</sub> (CL)                                | Start cylinder No. [LSB] / LBA |   |   |    |                           |
| 1F3 <sub>H</sub> (SN)                                | Start sector No. / LBA [LSB]   |   |   |    |                           |
| 1F2 <sub>H</sub> (SC)                                | Transfer sector count          |   |   |    |                           |
| 1F1 <sub>H</sub> (FR)                                | xx                             |   |   |    |                           |

| At command completion (I/O registers contents to be read) |                              |   |   |    |                         |
|---|------------------------------|---|---|----|-------------------------|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                         |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | L | × | DV | End head No. /LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                     | End cylinder No. [MSB] / LBA |   |   |    |                         |
| 1F4 <sub>H</sub> (CL)                                     | End cylinder No. [LSB] / LBA |   |   |    |                         |
| 1F3 <sub>H</sub> (SN)                                     | End sector No. / LBA [LSB]   |   |   |    |                         |
| 1F2 <sub>H</sub> (SC)                                     | 00 (*1)                      |   |   |    |                         |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                         |

- \*1 If the command is terminated due to an error, the remaining number of sectors of which data was not transferred is set in this register.

(9) RECALIBRATE (X'1x', x: X'0' to X'F')

This command performs the calibration. Upon receipt of this command, the device sets BSY bit of the Status register and performs a calibration. When the device completes the calibration, the device updates the Status register, clears the BSY bit, and generates an interrupt.

This command can be issued in the LBA mode.

| At command issuance (I/O registers setting contents) |    |   |   |    |    |   |   |   |
|--|----|---|---|----|----|---|---|---|
| 1F7 <sub>H</sub> (CM)                                | 0  | 0 | 0 | 1  | x  | x | x | x |
| 1F6 <sub>H</sub> (DH)                                | ×  | × | × | DV | xx |   |   |   |
| 1F5 <sub>H</sub> (CH)                                | xx |   |   |    |    |   |   |   |
| 1F4 <sub>H</sub> (CL)                                | xx |   |   |    |    |   |   |   |
| 1F3 <sub>H</sub> (SN)                                | xx |   |   |    |    |   |   |   |
| 1F2 <sub>H</sub> (SC)                                | xx |   |   |    |    |   |   |   |
| 1F1 <sub>H</sub> (FR)                                | xx |   |   |    |    |   |   |   |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |  |  |  |
|---|--------------------|---|---|----|----|--|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |  |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |  |  |  |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |  |  |  |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |  |  |  |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |  |  |  |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |  |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |  |  |  |

Note:

Also executable in LBA mode.

(10) SEEK (X'7x', x : X'0' to X'F')

This command performs a seek operation to the track and selects the head specified in the command block registers. After completing the seek operation, the device clears the BSY bit in the Status register and generates an interrupt.

The IDD always sets the DSC bit (Drive Seek Complete status) of the Status register to 1.

In the LBA mode, this command performs the seek operation to the cylinder and head position in which the sector is specified with the logical block address.

| At command issuance (I/O registers setting contents) |                          |   |   |    |                     |   |   |   |
|--|--------------------------|---|---|----|---------------------|---|---|---|
| 1F7 <sub>H</sub> (CM)                                | 0                        | 1 | 1 | 1  | x                   | x | x | x |
| 1F6 <sub>H</sub> (DH)                                | ×                        | L | × | DV | Head No. /LBA [MSB] |   |   |   |
| 1F5 <sub>H</sub> (CH)                                | Cylinder No. [MSB] / LBA |   |   |    |                     |   |   |   |
| 1F4 <sub>H</sub> (CL)                                | Cylinder No. [LSB] / LBA |   |   |    |                     |   |   |   |
| 1F3 <sub>H</sub> (SN)                                | Sector No. / LBA [LSB]   |   |   |    |                     |   |   |   |
| 1F2 <sub>H</sub> (SC)                                | xx                       |   |   |    |                     |   |   |   |
| 1F1 <sub>H</sub> (FR)                                | xx                       |   |   |    |                     |   |   |   |

| At command completion (I/O registers contents to be read) |                          |   |   |    |                     |  |  |  |
|---|--------------------------|---|---|----|---------------------|--|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information       |   |   |    |                     |  |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                        | L | × | DV | Head No. /LBA [MSB] |  |  |  |
| 1F5 <sub>H</sub> (CH)                                     | Cylinder No. [MSB] / LBA |   |   |    |                     |  |  |  |
| 1F4 <sub>H</sub> (CL)                                     | Cylinder No. [LSB] / LBA |   |   |    |                     |  |  |  |
| 1F3 <sub>H</sub> (SN)                                     | Sector No. / LBA [LSB]   |   |   |    |                     |  |  |  |
| 1F2 <sub>H</sub> (SC)                                     | xx                       |   |   |    |                     |  |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information        |   |   |    |                     |  |  |  |

#### (11) INITIALIZE DEVICE PARAMETERS (X'91')

The host system can set the number of sectors per track and the maximum head number (maximum head number is “number of heads minus 1”) per cylinder with this command. Upon receipt of this command, the device sets the BSY bit of Status register and saves the parameters. Then the device clears the BSY bit and generates an interrupt.

When the SC register is specified to X'00', an ABORTED COMMAND error is posted. Other than X'00' is specified, this command terminates normally.

The parameters set by this command are retained even after reset or power save operation regardless of the setting of disabling the reverting to default setting.

##### In LBA mode

The device ignores the L bit specification and operates with the CHS mode specification. An accessible area of this command within head moving in the LBA mode is always within a default area. It is recommended that the host system refers the addressable user sectors (total number of sectors) in word 60 to 61 of the parameter information by the IDENTIFY DEVICE command.

| At command issuance (I/O registers setting contents) |                         |   |   |    |               |
|--|-------------------------|---|---|----|---------------|
| 1F7 <sub>H</sub> (CM)                                | 1                       | 0 | 0 | 1  | 0 0 0 1       |
| 1F6 <sub>H</sub> (DH)                                | ×                       | × | × | DV | Max. head No. |
| 1F5 <sub>H</sub> (CH)                                | xx                      |   |   |    |               |
| 1F4 <sub>H</sub> (CL)                                | xx                      |   |   |    |               |
| 1F3 <sub>H</sub> (SN)                                | xx                      |   |   |    |               |
| 1F2 <sub>H</sub> (SC)                                | Number of sectors/track |   |   |    |               |
| 1F1 <sub>H</sub> (FR)                                | xx                      |   |   |    |               |

| At command completion (I/O registers contents to be read) |                         |   |   |    |               |
|---|-------------------------|---|---|----|---------------|
| 1F7 <sub>H</sub> (ST)                                     | Status information      |   |   |    |               |
| 1F6 <sub>H</sub> (DH)                                     | ×                       | × | × | DV | Max. head No. |
| 1F5 <sub>H</sub> (CH)                                     | xx                      |   |   |    |               |
| 1F4 <sub>H</sub> (CL)                                     | xx                      |   |   |    |               |
| 1F3 <sub>H</sub> (SN)                                     | xx                      |   |   |    |               |
| 1F2 <sub>H</sub> (SC)                                     | Number of sectors/track |   |   |    |               |
| 1F1 <sub>H</sub> (ER)                                     | Error information       |   |   |    |               |

## (12) IDENTIFY DEVICE (X'EC')

The host system issues the IDENTIFY DEVICE command to read parameter information (512 bytes) from the device. Upon receipt of this command, the drive sets the BSY bit of Status register and sets required parameter information in the sector buffer. The device then sets the DRQ bit of the Status register, and generates an interrupt. After that, the host system reads the information out of the sector buffer. Table 5.4 shows the arrangements and values of the parameter words and the meaning in the buffer.



| At command issuance (I/O registers setting contents) |    |   |   |    |    |   |     |
|--|----|---|---|----|----|---|-----|
| 1F7 <sub>H</sub> (CM)                                | 1  | 1 | 1 | 0  | 1  | 1 | 0 0 |
| 1F6 <sub>H</sub> (DH)                                | ×  | × | × | DV | xx |   |     |
| 1F5 <sub>H</sub> (CH)                                | xx |   |   |    |    |   |     |
| 1F4 <sub>H</sub> (CL)                                | xx |   |   |    |    |   |     |
| 1F3 <sub>H</sub> (SN)                                | xx |   |   |    |    |   |     |
| 1F2 <sub>H</sub> (SC)                                | xx |   |   |    |    |   |     |
| 1F1 <sub>H</sub> (FR)                                | xx |   |   |    |    |   |     |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |  |  |
|---|--------------------|---|---|----|----|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |  |  |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |  |  |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |  |  |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |  |  |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |  |  |

**Table 5.4 Information to be read by IDENTIFY DEVICE command (1 of 8)**

| Word  | Value           | Description  |
|-------|-----------------|--|
| 0     | X'045A'         | General Configuration *1   |
| 1     | *2              | Number of cylinders *2   |
| 2     | X'C837'         | Detailed Configuration   |
| 3     | *2              | Number of Heads *2   |
| 4-5   | X'0000'         | Undefined  |
| 6     | *2              | Number of sectors per track *2                                     |
| 7-9   | X'0000'         | Undefined  |
| 10-19 | Set by a device | Serial number (ASCII code, 20 characters, right)                   |
| 20    | X'0000'         | Undefined  |
| 21    | X'0400'         | Buffer Size (1 LSB: 512 Byte)                                      |
| 22    | X'0004'         | Number of ECC bytes transferred at READ LONG or WRITE LONG command |

**Table 5.4 Information to be read by IDENTIFY DEVICE command (2 of 8)**

| Word  | Value           | Description  |
|-------|-----------------|--|
| 23-26 | –               | Firmware revision (ASCII code, 8 characters, left)                     |
| 27-46 | Set by a device | Model name (ASCII code, 40 characters, left)                           |
| 47    | X'8010'         | Maximum number of sectors per interrupt on READ/WRITE MULTIPLE command |
| 48    | X'0000'         | Reserved   |
| 49    | X'0B00'         | Capabilities *3  |
| 50    | X'0000'         | Reserved   |
| 51    | X'0200'         | PIO data transfer mode *4  |
| 52    | X'0000'         | Reserved   |
| 53    | X'0007'         | Enable/disable setting of words 54-58 and 64-70, 88 *5                 |
| 54    | (Variable)      | Number of current Cylinders  |
| 55    | (Variable)      | Number of current Head   |
| 56    | (Variable)      | Number of current sectors per track                                    |
| 57-58 | (Variable)      | Total number of current sectors  |
| 59    | *6              | Transfer sector count currently set by READ/WRITE MULTIPLE command *6  |
| 60-61 | *2              | Total number of user addressable sectors (LBA mode only) *2            |
| 62    | X'0000'         | Reserved   |
| 63    | X'xx07'         | Multiword DMA transfer mode *7   |
| 64    | X'0003'         | Advance PIO transfer mode support status *8                            |
| 65    | X'0078'         | Minimum multiword DMA transfer cycle time per word : 120 [ns]          |
| 66    | X'0078'         | Manufacturer's recommended DMA transfer cycle time : 120 [ns]          |
| 67    | X'00F0'         | Minimum PIO transfer cycle time without IORDY flow control : 240 [ns]  |
| 68    | X'0078'         | Minimum PIO transfer cycle time with IORDY flow control : 120 [ns]     |
| 69-79 | X'0000'         | Reserved   |
| 80    | X'003C'         | Major version number *9  |
| 81    | X'0000'         | Minor version number (not reported)                                    |
| 82    | X'346B'         | Support of command sets *10  |
| 83    | X'4008'         | Support of command sets *11  |
| 84    | X'4000'         | Support of command sets/function                                       |

**Table 5.4 Information to be read by IDENTIFY DEVICE command (3 of 8)**

| Word    | Value           | Description   |
|---------|-----------------|---|
| 85      | *12             | Valid of command sets/function *12  |
| 86      | *13             | Valid of command sets/function *13  |
| 87      | X'4000'         | Default of command sets/function  |
| 88      | X'xx1F'         | Ultra DMA transfer mode *14   |
| 89      | Set by a device | Security Erase Unit execution time (Unit: 2 min.)   |
| 90      | X'0000'         | Enhanced Security Erase Unit execution time (Unit: 2 min.)  |
| 91      | (Variable)      | Advance power management level  |
| 92      | (Variable)      | Master password revision  |
| 93      | *15             | Hardware configuration  |
| 94-127  | X'0000'         | Reserved  |
| 128     | (Variable)      | Security status *16   |
| 129-159 | X'0000'         | Undefined   |
| 160-254 | X'0000'         | Reserved  |
| 255     | X'xxA5'         | Check sum (The 2 complement of the lower order byte resulting from summing bits 7 to 0 of word 0 to 254 and word 255, in byte units.) |

## \*1 Word 0: General configuration

Bit 15: ATA device = 0, ATAPI device = 1

Bit 14-8: Undefined

Bit 7: Removable disk drive = 1

Bit 6: Fixed drive = 1

Bit 5-3: Undefined

Bit 2: IDENTIFY DEVICE Valid = 0

Bit 1-0: Reserved

## \*2 Word 1, 3, 6, 60-61

|            | MHJ2181AT  | MHK2120AT  | MHK2090AT  | MHK2060AT |
|------------|------------|------------|------------|-----------|
| Word 01    | X'3FFF'    | X'3FFF'    | X'3FFF'    | X'3080'   |
| Word 03    | X'10'      | X'10'      | X'10'      | X'0F'     |
| Word 06    | X'3F'      | X'3F'      | X'3F'      | X'3F'     |
| Word 60-61 | X'21CAB00' | X'167CA00' | X'10D7900' | X'B30880' |

## \*3 Word 49: Capabilities

Bit 15-14: Reserved

**Table 5.4 Information to be read by IDENTIFY DEVICE command (4 of 8)**

|             |   |                      |
|-------------|---|----------------------|
| Bit 13:     | Standby timer value. Factory default is 0.  |                      |
| Bit 12:     | Reserved  |                      |
| Bit 11:     | IORDY support   | 1=Supported          |
| Bit 10:     | IORDY inhibition  | 0=Disable inhibition |
| Bit 9-0:    | Undefined   |                      |
| Bit 9, 8:   | Always 1  |                      |
| *4 Word 51: | PIO data transfer mode  |                      |
| Bit 15-8:   | PIO data transfer mode  | X'02'=PIO mode 2     |
| Bit 7-0:    | Undefined   |                      |
| *5 Word 53: | Enable/disable setting of word 54-58 and 64-70  |                      |
| Bit 15-3:   | Reserved  |                      |
| Bit 2:      | Enable/disable setting of word 88   | 1=Enable             |
| Bit 1:      | Enable/disable setting of word 64-70  | 1=Enable             |
| Bit 0:      | Enable/disable setting of word 54-58  | 1=Enable             |
| *6 Word 59: | Transfer sector count currently set by READ/WRITE MULTIPLE command  |                      |
| Bit 15-9:   | Reserved  |                      |
| Bit 8:      | Multiple sector transfer  | 1=Enable             |
| Bit 7-0:    | Transfer sector count currently set by READ/WRITE MULTIPLE command without interrupt supports 2, 4, 8 and 16 sectors. |                      |
| *7 Word 63: | Multiword DMA transfer mode   |                      |
| Bit 15-8:   | Currently used multiword DMA transfer mode  |                      |
| Bit 7-0:    | Supportable multiword DMA transfer mode   |                      |
|             | Bit 2=1   | Mode 2               |
|             | Bit 1=1   | Mode 1               |
|             | Bit 0=1   | Mode 0               |
| *8 Word 64: | Advance PIO transfer mode support status  |                      |
| Bit 15-8:   | Reserved  |                      |
| Bit 7-0:    | Advance PIO transfer mode   |                      |
|             | Bit 1 = 1   | Mode 4               |

**Table 5.4 Information to be read by IDENTIFY DEVICE command (5 of 8)**

Bit 0 = 1 Mode 3

**\*9 WORD 80**

Bit 15-6: Reserved

Bit 5: ATA/ATAPI-5 supported = 1

Bit 4: ATA/ATAPI-4 supported = 1

Bit 3: ATA-3 supported = 1

Bit 2: ATA-2 supported = 1

Bit 1-0: Undefined

**\*10 WORD 82**

Bit 15: Undefined

Bit 14: '1' = Supports the NOP command.

Bit 13: '1' = Supports the READ BUFFER command.

Bit 12: '1' = Supports the WRITE BUFFER command.

Bit 11: Undefined

Bit 10: '1' = Supports the Host Protected Area feature set.

Bit 9: '1' = Supports the DEVICE RESET command.

Bit 8: '1' = Supports the SERVICE interrupt.

Bit 7: '1' = Supports the release interrupt.

Bit 6: '1' = Supports the read cache function.

Bit 5: '1' = Supports the write cache function.

Bit 4: '1' = Supports the PACKET command feature set.

Bit 3: '1' = Supports the power management feature set.

Bit 2: '1' = Supports the Removable Media feature set.

Bit 1: '1' = Supports the Security Mode feature set.

Bit 0: '1' = Supports the SMART feature set.

**\*11 WORD 83**

Bits 15-7: Undefined

Bit 6: '1' = When the power is turned on, spin is started by the SET FEATURES sub-command.

**Table 5.4 Information to be read by IDENTIFY DEVICE command (6 of 8)**

- Bit 5: '1' = Supports the Power-Up In Standby set.
- Bit 4: '1' = Supports the Removable Media Status Notification feature set.
- Bit 3: '1' = Supports the Advanced Power Management feature set.
- Bit 2: '1' = Supports the CFA (Compact Flash Association) feature set.
- Bit 1: '1' = Supports the READ/WRITE DMA QUEUED command.
- Bit 0: '1' = Supports the DOWNLOAD MICROCODE command.

**\*12 WORD 85**

- Bits 15-9 : Same definition as WORD 82.
- Bit 8 : '1' = Enables the SERVICE interrupt.
- Bit 7: '1' = Enables the release interrupt.
- Bit 6: '1' = Enables the read cache function.
- Bit 5: '1' = Enables the write cache function.
- Bits 4-2: '1' = Same definition as WORD 82.
- Bit 1: '1' = Enables the Security Mode function.
- Bit 0: '1' = Enables the SMART function.

**\*13 WORD 86**

- Bits 15-7: '1' = Reserved
- Bit 6: Same definition as WORD 83.
- Bit 5: Enables the Power-Up In Standby function.
- Bit 4: '1' = Enables the Removable Media Status Notification function.
- Bit 3: '1' = Enables the Advanced Power Management function.
- Bits 2-0: Same definition as WORD 83.

**\*14 WORD 88**

- Bit 15-8: Currently used Ultra DMA transfer mode
- Bit 7-0: Supportable Ultra DMA transfer mode
  - Bit 4 = '1': Mode 4
  - Bit 3 = '1': Mode 3
  - Bit 2 = '1': Mode 2

**Table 5.4 Information to be read by IDENTIFY DEVICE command (7 of 8)**

Bit 1 = '1': Mode 1

Bit 0 = '1': Mode 0

\*15 WORD 93

Bits 15-14: Reserved

Bit 13: '1' = CBLID- is a level higher than  $V_{IH}$ .

'0' = CBLID- is a level lower than  $V_{IL}$ .

Bits 12-8: In the case of Device 1 (slave drive), a valid value is set.

Bit 12: Reserved

Bit 11: '1' = Device asserts PDIAG-.

Bit 10, 9: Method for deciding the device No. of Device 1.

'00' = Reserved

'01' = Using a jumper.

'10' = Using the CSEL signal.

'11' = Other method.

Bit 8: Reserved

Bits 7-0: In the case of Device 0 (master drive), a valid value is set.

Bit 7: Reserved

Bit 6: '1' = Device 1 is selected, Device 0 responds.

Bit 5: '1' = Device 0, assertion of DASP- was detected.

Bit 4: '1' = Device 0, assertion of PDIAG- was detected.

Bit 3: '1' = Device 0, an error was not detected in the self-diagnosis.

Bit 2, 1: Method for deciding the device No. of Device 0.

'00' = Reserved

'01' = Using a jumper.

'10' = Using the CSEL signal.

'11' = Other method.

Bit 0: Reserved

\*16 WORD 128

**Table 5.4 Information to be read by IDENTIFY DEVICE command (8 of 8)**

|           |                                      |
|-----------|--------------------------------------|
| Bit 15-9: | Reserved                             |
| Bit 8:    | Security level. 0: High, 1: Maximum  |
| Bit 7-6:  | Reserved                             |
| Bit 5:    | 1: Enhanced security erase supported |
| Bit 4:    | 1: Security counter expired          |
| Bit 3:    | 1: Security frozen                   |
| Bit 2:    | 1: Security locked                   |
| Bit 1:    | 1: Security enabled                  |
| Bit 0:    | 1: Security supported                |

## (13) IDENTIFY DEVICE DMA (X'EE')

When this command is not used to transfer data to the host in DMA mode, this command functions in the same way as the Identify Device command.

| At command issuance (I/O registers setting contents) |    |   |   |    |         |
|--|----|---|---|----|---------|
| 1F7 <sub>H</sub> (CM)                                | 1  | 1 | 1 | 0  | 1 1 1 0 |
| 1F6 <sub>H</sub> (DH)                                | ×  | × | × | DV | xx      |
| 1F5 <sub>H</sub> (CH)                                | xx |   |   |    |         |
| 1F4 <sub>H</sub> (CL)                                | xx |   |   |    |         |
| 1F3 <sub>H</sub> (SN)                                | xx |   |   |    |         |
| 1F2 <sub>H</sub> (SC)                                | xx |   |   |    |         |
| 1F1 <sub>H</sub> (FR)                                | xx |   |   |    |         |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |



## (14) SET FEATURES (X'EF')

The host system issues the SET FEATURES command to set parameters in the Features register for the purpose of changing the device features to be executed. For the transfer mode (Feature register = 03), detail setting can be done using the Sector Count register.

Upon receipt of this command, the device sets the BSY bit of the Status register and saves the parameters in the Features register. Then, the device clears the BSY bit, and generates an interrupt.

If the value in the Features register is not supported or it is invalid, the device posts an ABORTED COMMAND error.

Table 5.5 lists the available values and operational modes that may be set in the Features register.

**Table 5.5 Features register values and settable modes**

| Features Register | Drive operation mode   |
|-------------------|--|
| X'02'             | Enables the write cache function.  |
| X'03'             | Transfer mode depends on the contents of the Sector Count register. (Details are given later.) |
| X'05'             | Enables the advanced power management function.  |
| X'55'             | Disables read cache function.  |
| X'66'             | Disables the reverting to power-on default settings after software reset.                      |
| X'82'             | Disables the write cache function.   |
| X'85'             | Disables the advanced power management function.   |
| X'AA'             | Enables the read cache function.   |
| X'BB'             | Specifies the transfer of 4-byte ECC for READ LONG and WRITE LONG commands.                    |
| X'CC'             | Enables the reverting to power-on default settings after software reset.                       |

At power-on or after hardware reset, the default mode is the same as that is set with a value greater than X'85' (except for write cache). If X'66' is specified, it allows the setting value greater than X'AA' which may have been modified to a new value since power-on, to remain the same even after software reset.

| At command issuance (I/O registers setting contents) |                     |   |   |    |         |
|--|---------------------|---|---|----|---------|
| 1F7 <sub>H</sub> (CM)                                | 1                   | 1 | 1 | 0  | 1 1 1 1 |
| 1F6 <sub>H</sub> (DH)                                | ×                   | × | × | DV | xx      |
| 1F5 <sub>H</sub> (CH)                                | xx                  |   |   |    |         |
| 1F4 <sub>H</sub> (CL)                                | xx                  |   |   |    |         |
| 1F3 <sub>H</sub> (SN)                                | xx                  |   |   |    |         |
| 1F2 <sub>H</sub> (SC)                                | xx or transfer mode |   |   |    |         |
| 1F1 <sub>H</sub> (FR)                                | [See Table 5.5]     |   |   |    |         |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |

The host sets X'03' to the Features register. By issuing this command with setting a value to the Sector Count register, the transfer mode can be selected. Upper 5 bits of the Sector Count register defines the transfer type and lower 3 bits specifies the binary mode value.

The IDD supports following values in the Sector Count register value. If other value than below is specified, an ABORTED COMMAND error is posted.

|                                  |                           |
|----------------------------------|---------------------------|
| PIO default transfer mode        | 00000 000 (X'00')         |
| PIO flow control transfer mode X | 00001 000 (X'08': Mode 0) |
|                                  | 00001 001 (X'09': Mode 1) |
|                                  | 00001 010 (X'0A': Mode 2) |
|                                  | 00001 011 (X'0B': Mode 3) |
|                                  | 00001 100 (X'0C': Mode 4) |

|                               |                           |
|-------------------------------|---------------------------|
| Multiword DMA transfer mode X | 00100 000 (X'20': Mode 0) |
|                               | 00100 001 (X'21': Mode 1) |
|                               | 00100 010 (X'22': Mode 2) |
| Ultra DMA transfer mode X     | 01000 000 (X'40': Mode 0) |
|                               | 01000 001 (X'41': Mode 1) |
|                               | 01000 010 (X'42': Mode 2) |
|                               | 01000 011 (X'43': Mode 3) |
|                               | 01000 100 (X'44': Mode 4) |

The host writes the Sector Count register with the desired power management level and executes this command with the Features register X'05', and then Advanced Power Management is enabled.

| Level                            | Sector Count register |
|----------------------------------|-----------------------|
| Power management without standby | 80h-FEh               |
| Power management with standby    | 01h-7Fh               |
| Reserved                         | FFh, 00h              |

#### (15) SET MULTIPLE MODE (X'C6')

This command enables the device to perform the READ MULTIPLE and WRITE MULTIPLE commands. The block count (number of sectors in a block) for these commands are also specified by the SET MULTIPLE MODE command.

The number of sectors per block is written into the Sector Count register. The IDD supports 2, 4, 8, 16 and 32 (sectors) as the block counts.

Upon receipt of this command, the device sets the BSY bit of the Status register and checks the contents of the Sector Count register. If the contents of the Sector Count register is valid and is a supported block count, the value is stored for all subsequent READ MULTIPLE and WRITE MULTIPLE commands. Execution of these commands is then enabled. If the value of the Sector Count register is not a supported block count, an ABORTED COMMAND error is posted and the READ MULTIPLE and WRITE MULTIPLE commands are disabled.

If the contents of the Sector Count register is 0, 1 when the SET MULTIPLE MODE command is issued, the READ MULTIPLE and WRITE MULTIPLE commands are disabled.

When the SET MULTIPLE MODE command operation is completed, the device clears the BSY bit and generates an interrupt.

| At command issuance (I/O registers setting contents) |                    |   |   |    |         |
|--|--------------------|---|---|----|---------|
| 1F7 <sub>H</sub> (CM)                                | 1                  | 1 | 0 | 0  | 0 1 1 0 |
| 1F6 <sub>H</sub> (DH)                                | ×                  | × | × | DV | xx      |
| 1F5 <sub>H</sub> (CH)                                | xx                 |   |   |    |         |
| 1F4 <sub>H</sub> (CL)                                | xx                 |   |   |    |         |
| 1F3 <sub>H</sub> (SN)                                | xx                 |   |   |    |         |
| 1F2 <sub>H</sub> (SC)                                | Sector count/block |   |   |    |         |
| 1F1 <sub>H</sub> (FR)                                | xx                 |   |   |    |         |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | Sector count/block |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |

After power-on or after hardware reset, the READ MULTIPLE and WRITE MULTIPLE command operation are disabled as the default mode.

The mode established before software reset is retained if disable default (Features Reg. = 66h setting) has been defined by the SET FEATURES command. If disable default has not been defined after the software is the READ MULTIPLE and WRITE MULTIPLE commands are disabled.

The parameters for the multiple commands which are posted to the host system when the IDENTIFY DEVICE command is issued are listed below. See Subsection 5.32 for the IDENTIFY DEVICE command.

Word 47

Bit 7-0 = 10: Maximum number of sectors that can be transferred per interrupt by the READ MULTIPLE and WRITE MULTIPLE commands.

Word 59 = 0000: The READ MULTIPLE and WRITE MULTIPLE commands are disabled.

= 01xx: The READ MULTIPLE and WRITE MULTIPLE commands are enabled. "xx" indicates the current setting for number of sectors that can be transferred per interrupt by the READ MULTIPLE and WRITE MULTIPLE commands.

e.g. 0110 = Block count of 16 has been set by the SET MULTIPLE MODE command.

#### (16) SET MAX ADDRESS (F9)

This command allows the maximum address accessible by the user to be set in LBA or CHS mode. Upon receipt of the command, the device sets the BSY bit and saves the maximum address specified in the DH, CH, CL and SN registers. Then, it clears BSY and generates an interrupt.

The new address information set by this command is reflected in Words 1, 54, 57, 58, 60 and 61 of IDENTIFY DEVICE information. If an attempt is made to perform a read or write operation for an address beyond the new address space, an ID Not Found error will result.

When SC register bit 0, VV (Value Volatile), is 1, the value set by this command is held even after power on and the occurrence of a hard reset. When the VV bit is 0, the value set by this command becomes invalid when the power is turned on or a hard reset occurs, and the maximum address returns to the value (default value if not set) most lately set when VV bit = 1.

After power on and the occurrence of a hard reset, the host can issue this command only once when VV bit = 1. If this command with VV bit = 1 is issued twice or more, any command following the first time will result in an Aborted Command error.

| At command issuance (I/O registers setting contents) |                              |   |   |    |                    |   |    |   |
|--|------------------------------|---|---|----|--------------------|---|----|---|
| 1F7 <sub>H</sub> (CM)                                | 1                            | 1 | 1 | 1  | 1                  | 0 | 0  | 1 |
| 1F6 <sub>H</sub> (DH)                                | ×                            | L | × | DV | Max head/LBA [MSB] |   |    |   |
| 1F5 <sub>H</sub> (CH)                                | Max. cylinder [MSB]/Max. LBA |   |   |    |                    |   |    |   |
| 1F4 <sub>H</sub> (CL)                                | Max. cylinder [LSB]/Max. LBA |   |   |    |                    |   |    |   |
| 1F3 <sub>H</sub> (SN)                                | Max. sector/Max. LBA [LSB]   |   |   |    |                    |   |    |   |
| 1F2 <sub>H</sub> (SC)                                | xx                           |   |   |    |                    |   | VV |   |
| 1F1 <sub>H</sub> (FR)                                | xx                           |   |   |    |                    |   |    |   |

| At command completion (I/O registers contents to be read) |                              |   |   |    |                    |  |  |  |
|---|------------------------------|---|---|----|--------------------|--|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                    |  |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | × | × | DV | Max head/LBA [MSB] |  |  |  |
| 1F5 <sub>H</sub> (CH)                                     | Max. cylinder [MSB]/Max. LBA |   |   |    |                    |  |  |  |
| 1F4 <sub>H</sub> (CL)                                     | Max. cylinder [LSB]/Max. LBA |   |   |    |                    |  |  |  |
| 1F3 <sub>H</sub> (SN)                                     | Max. sector/Max. LBA [LSB]   |   |   |    |                    |  |  |  |
| 1F2 <sub>H</sub> (SC)                                     | xx                           |   |   |    |                    |  |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                    |  |  |  |

## (17) READ NATIVE MAX ADDRESS (F8)

This command posts the maximum address intrinsic to the device, which can be set by the SET MAX ADDRESS command. Upon receipt of this command, the device sets the BSY bit and indicates the maximum address in the DH, CH, CL and SN registers. Then, it clears BSY and generates an interrupt.

| At command issuance (I/O registers setting contents) |    |   |   |    |    |   |   |   |
|--|----|---|---|----|----|---|---|---|
| 1F7 <sub>H</sub> (CM)                                | 1  | 1 | 1 | 1  | 1  | 0 | 0 | 0 |
| 1F6 <sub>H</sub> (DH)                                | ×  | L | × | DV | xx |   |   |   |
| 1F5 <sub>H</sub> (CH)                                | xx |   |   |    |    |   |   |   |
| 1F4 <sub>H</sub> (CL)                                | xx |   |   |    |    |   |   |   |
| 1F3 <sub>H</sub> (SN)                                | xx |   |   |    |    |   |   |   |
| 1F2 <sub>H</sub> (SC)                                | xx |   |   |    |    |   |   |   |
| 1F1 <sub>H</sub> (FR)                                | xx |   |   |    |    |   |   |   |

| At command completion (I/O registers contents to be read) |                              |   |   |    |                    |
|---|------------------------------|---|---|----|--------------------|
| 1F7 <sub>H</sub> (ST)                                     | Status information           |   |   |    |                    |
| 1F6 <sub>H</sub> (DH)                                     | ×                            | × | × | DV | Max head/LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                     | Max. cylinder [MSB]/Max. LBA |   |   |    |                    |
| 1F4 <sub>H</sub> (CL)                                     | Max. cylinder [LSB]/Max. LBA |   |   |    |                    |
| 1F3 <sub>H</sub> (SN)                                     | Max. sector/Max. LBA [LSB]   |   |   |    |                    |
| 1F2 <sub>H</sub> (SC)                                     | xx                           |   |   |    |                    |
| 1F1 <sub>H</sub> (ER)                                     | Error information            |   |   |    |                    |

## (18) EXECUTE DEVICE DIAGNOSTIC (X'90')

This command performs an internal diagnostic test (self-diagnosis) of the device. This command usually sets the DRV bit of the Drive/Head register is to 0 (however, the DV bit is not checked). If two devices are present, both devices execute self-diagnosis.

If device 1 is present:

- Both devices shall execute self-diagnosis.
- The device 0 waits for up to 5 seconds until device 1 asserts the PDIAG-signal.
- If the device 1 does not assert the PDIAG- signal but indicates an error, the device 0 shall append X'80' to its own diagnostic status.
- The device 0 clears the BSY bit of the Status register and generates an interrupt. (The device 1 does not generate an interrupt.)
- A diagnostic status of the device 0 is read by the host system. When a diagnostic failure of the device 1 is detected, the host system can read a status of the device 1 by setting the DV bit (selecting the device 1).

When device 1 is not present:

- The device 0 posts only the results of its own self-diagnosis.
- The device 0 clears the BSY bit of the Status register, and generates an interrupt.

Table 5.6 lists the diagnostic code written in the Error register which is 8-bit code.

If the device 1 fails the self-diagnosis, the device 0 “ORs” X'80' with its own status and sets that code to the Error register.

**Table 5.6 Diagnostic code**

| Code  | Result of diagnostic      |
|-------|---------------------------|
| X'01' | No error detected.        |
| X'03' | Data buffer compare error |
| X'05' | ROM sum check error       |
| X'8x' | Failure of device 1       |

attention: The device responds normally to this command without executing internal diagnostic test.

| At command issuance (I/O registers setting contents) |    |   |   |    |                     |
|--|----|---|---|----|---------------------|
| 1F7 <sub>H</sub> (CM)                                | 1  | 0 | 0 | 1  | 0 0 0 0             |
| 1F6 <sub>H</sub> (DH)                                | ×  | × | × | DV | Head No. /LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                | xx |   |   |    |                     |
| 1F4 <sub>H</sub> (CL)                                | xx |   |   |    |                     |
| 1F3 <sub>H</sub> (SN)                                | xx |   |   |    |                     |
| 1F2 <sub>H</sub> (SC)                                | xx |   |   |    |                     |
| 1F1 <sub>H</sub> (FR)                                | xx |   |   |    |                     |

| At command completion (I/O registers contents to be read) |                      |   |   |    |                     |
|---|----------------------|---|---|----|---------------------|
| 1F7 <sub>H</sub> (ST)                                     | Status information   |   |   |    |                     |
| 1F6 <sub>H</sub> (DH)                                     | ×                    | × | × | DV | Head No. /LBA [MSB] |
| 1F5 <sub>H</sub> (CH)                                     | xx                   |   |   |    |                     |
| 1F4 <sub>H</sub> (CL)                                     | xx                   |   |   |    |                     |
| 1F3 <sub>H</sub> (SN)                                     | 01 <sub>H</sub> (*1) |   |   |    |                     |
| 1F2 <sub>H</sub> (SC)                                     | 01 <sub>H</sub>      |   |   |    |                     |
| 1F1 <sub>H</sub> (ER)                                     | Diagnostic code      |   |   |    |                     |

\*1 This register indicates X'00' in the LBA mode.



## (19) READ LONG (X'22' or X'23')

This command operates similarly to the READ SECTOR(S) command except that the device transfers the data in the requested sector and the ECC bytes to the host system. The ECC error correction is not performed for this command. This command is used for checking ECC function by combining with the WRITE LONG command.

Number of ECC bytes to be transferred is fixed to 4 bytes and cannot be changed by the SET FEATURES command.

The READ LONG command supports only single sector operation.

| At command issuance (I/O registers setting contents) |                          |   |   |    |                     |   |     |
|--|--------------------------|---|---|----|---------------------|---|-----|
| 1F7 <sub>H</sub> (CM)                                | 0                        | 0 | 1 | 0  | 0                   | 0 | 1 R |
| 1F6 <sub>H</sub> (DH)                                | ×                        | L | × | DV | Head No. /LBA [MSB] |   |     |
| 1F5 <sub>H</sub> (CH)                                | Cylinder No. [MSB] / LBA |   |   |    |                     |   |     |
| 1F4 <sub>H</sub> (CL)                                | Cylinder No. [LSB] / LBA |   |   |    |                     |   |     |
| 1F3 <sub>H</sub> (SN)                                | Sector No. / LBA [LSB]   |   |   |    |                     |   |     |
| 1F2 <sub>H</sub> (SC)                                | 01                       |   |   |    |                     |   |     |
| 1F1 <sub>H</sub> (FR)                                | xx                       |   |   |    |                     |   |     |

(R: Retry)

| At command completion (I/O registers contents to be read) |                          |   |   |    |                     |  |  |
|---|--------------------------|---|---|----|---------------------|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information       |   |   |    |                     |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                        | L | × | DV | Head No. /LBA [MSB] |  |  |
| 1F5 <sub>H</sub> (CH)                                     | Cylinder No. [MSB] / LBA |   |   |    |                     |  |  |
| 1F4 <sub>H</sub> (CL)                                     | Cylinder No. [LSB] / LBA |   |   |    |                     |  |  |
| 1F3 <sub>H</sub> (SN)                                     | Sector No. / LBA [LSB]   |   |   |    |                     |  |  |
| 1F2 <sub>H</sub> (SC)                                     | 00 (*1)                  |   |   |    |                     |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information        |   |   |    |                     |  |  |

\*1 If the command is terminated due to an error, this register indicates 01.

## (20) WRITE LONG (X'32' or X'33')

This command operates similarly to the READ SECTOR(S) command except that the device writes the data and the ECC bytes transferred from the host system to the disk medium. The device does not generate ECC bytes by itself. The WRITE LONG command supports only single sector operation.

The number of ECC bytes to be transferred is fixed to 4 bytes and can not be changed by the SET FEATURES command.

This command is operated under the following conditions:

- READ LONG issued → WRITE LONG (Same address) issues sequence (After READ LONG is issued, WRITE LONG can be issued consecutively.)

If above condition is not satisfied, the command operation is not guaranteed.

| At command issuance (I/O registers setting contents) |                          |   |   |    |                     |   |     |
|--|--------------------------|---|---|----|---------------------|---|-----|
| 1F7 <sub>H</sub> (CM)                                | 0                        | 0 | 1 | 1  | 0                   | 0 | 1 R |
| 1F6 <sub>H</sub> (DH)                                | ×                        | L | × | DV | Head No. /LBA [MSB] |   |     |
| 1F5 <sub>H</sub> (CH)                                | Cylinder No. [MSB] / LBA |   |   |    |                     |   |     |
| 1F4 <sub>H</sub> (CL)                                | Cylinder No. [LSB] / LBA |   |   |    |                     |   |     |
| 1F3 <sub>H</sub> (SN)                                | Sector No. / LBA [LSB]   |   |   |    |                     |   |     |
| 1F2 <sub>H</sub> (SC)                                | 01                       |   |   |    |                     |   |     |
| 1F1 <sub>H</sub> (FR)                                | xx                       |   |   |    |                     |   |     |

| At command completion (I/O registers contents to be read) |                          |   |   |    |                     |  |  |
|---|--------------------------|---|---|----|---------------------|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information       |   |   |    |                     |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                        | L | × | DV | Head No. /LBA [MSB] |  |  |
| 1F5 <sub>H</sub> (CH)                                     | Cylinder No. [MSB] / LBA |   |   |    |                     |  |  |
| 1F4 <sub>H</sub> (CL)                                     | Cylinder No. [LSB] / LBA |   |   |    |                     |  |  |
| 1F3 <sub>H</sub> (SN)                                     | Sector No. / LBA [LSB]   |   |   |    |                     |  |  |
| 1F2 <sub>H</sub> (SC)                                     | 00 (*1)                  |   |   |    |                     |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information        |   |   |    |                     |  |  |

\*1 If the command is terminated due to an error, this register indicates 01.

## (21) READ BUFFER (X'E4')

The host system can read the current contents of the sector buffer of the device by issuing this command. Upon receipt of this command, the device sets the BSY bit of Status register and sets up the sector buffer for a read operation. Then the

device sets the DRQ bit of Status register, clears the BSY bit, and generates an interrupt. After that, the host system can read up to 512 bytes of data from the buffer.

| At command issuance (I/O registers setting contents) |    |   |   |    |    |   |     |
|--|----|---|---|----|----|---|-----|
| 1F7 <sub>H</sub> (CM)                                | 1  | 1 | 1 | 1  | 0  | 1 | 0 0 |
| 1F6 <sub>H</sub> (DH)                                | ×  | × | × | DV | xx |   |     |
| 1F5 <sub>H</sub> (CH)                                | xx |   |   |    |    |   |     |
| 1F4 <sub>H</sub> (CL)                                | xx |   |   |    |    |   |     |
| 1F3 <sub>H</sub> (SN)                                | xx |   |   |    |    |   |     |
| 1F2 <sub>H</sub> (SC)                                | xx |   |   |    |    |   |     |
| 1F1 <sub>H</sub> (FR)                                | xx |   |   |    |    |   |     |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |  |  |
|---|--------------------|---|---|----|----|--|--|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |  |  |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |  |  |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |  |  |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |  |  |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |  |  |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |  |  |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |  |  |

## (22) WRITE BUFFER (X'E8')

The host system can overwrite the contents of the sector buffer of the device with a desired data pattern by issuing this command. Upon receipt of this command, the device sets the BSY bit of the Status register. Then the device sets the DRQ bit of Status register and clears the BSY bit when the device is ready to receive the data. After that, 512 bytes of data is transferred from the host and the device writes the data to the sector buffer, then generates an interrupt.

| At command issuance (I/O registers setting contents) |    |   |   |    |    |   |   |   |
|--|----|---|---|----|----|---|---|---|
| 1F7 <sub>H</sub> (CM)                                | 1  | 1 | 1 | 1  | 1  | 0 | 0 | 0 |
| 1F6 <sub>H</sub> (DH)                                | ×  | × | × | DV | xx |   |   |   |
| 1F5 <sub>H</sub> (CH)                                | xx |   |   |    |    |   |   |   |
| 1F4 <sub>H</sub> (CL)                                | xx |   |   |    |    |   |   |   |
| 1F3 <sub>H</sub> (SN)                                | xx |   |   |    |    |   |   |   |
| 1F2 <sub>H</sub> (SC)                                | xx |   |   |    |    |   |   |   |
| 1F1 <sub>H</sub> (FR)                                | xx |   |   |    |    |   |   |   |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |

## (23) IDLE (X'97' or X'E3')

Upon receipt of this command, the device sets the BSY bit of the Status register, and enters the idle mode. Then, the device clears the BSY bit, and generates an interrupt. The device generates an interrupt even if the device has not fully entered the idle mode. If the spindle of the device is already rotating, the spin-up sequence shall not be implemented.

By using this command, the automatic power-down function is enabled and the timer immediately starts the countdown. When the timer reaches the specified value, the device enters standby mode.

Enabling the automatic power-down function means that the device automatically enters the standby mode after a certain period of time. When the device enters the idle mode, the timer starts countdown. If any command is not issued while the timer is counting down, the device automatically enters the standby mode. If any command is issued while the timer is counting down, the timer is initialized and the command is executed. The timer restarts countdown after completion of the command execution.

The period of timer count is set depending on the value of the Sector Count register as shown below.

| Sector Count register value | Point of timer        |
|-----------------------------|-----------------------|
| 0 [X'00']                   | 30 minutes            |
| 1 to 3 [X'01' to X'03']     | 15 seconds            |
| 4 to 240 [X'04' to X'F0']   | (Value ×5) seconds    |
| 241 to 251 [X'F1' to X'FB'] | 30 minutes            |
| 252 [X'FC']                 | 21 minutes            |
| 253 [X'FD']                 | 30 minutes            |
| 254 to 255 [X'FE' to X'FF'] | 21 minutes 15 seconds |

attention: The automatic power-down is executed if no command is coming for 30 min.

| At command issuance (I/O registers setting contents) |                 |   |   |    |    |
|--|-----------------|---|---|----|----|
| 1F7 <sub>H</sub> (CM)                                | X'97' or X'E3'  |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                | ×               | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                | xx              |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                | xx              |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                | xx              |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                | Period of timer |   |   |    |    |
| 1F1 <sub>H</sub> (FR)                                | xx              |   |   |    |    |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |

## (24) IDLE IMMEDIATE (X'95' or X'E1')

Upon receipt of this command, the device sets the BSY bit of the Status register, and enters the idle mode. Then, the device clears the BSY bit, and generates an interrupt. This command does not support the automatic power-down function.

| At command issuance (I/O registers setting contents) |                |   |   |    |    |
|--|----------------|---|---|----|----|
| 1F7 <sub>H</sub> (CM)                                | X'95' or X'E1' |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                | ×              | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                | xx             |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                | xx             |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                | xx             |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                | xx             |   |   |    |    |
| 1F1 <sub>H</sub> (FR)                                | xx             |   |   |    |    |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |

## (25) STANDBY (X'96' or X'E2')

Upon receipt of this command, the device sets the BSY bit of the Status register and enters the standby mode. The device then clears the BSY bit and generates an interrupt. The device generates an interrupt even if the device has not fully entered the standby mode. If the device has already spun down, the spin-down sequence is not implemented.

By using this command, the automatic power-down function is enabled and the timer starts the countdown when the device returns to idle mode.

When the timer value reaches 0 (a specified time has padded), the device enters standby mode.

Under the standby mode, the spindle motor is stopped. Thus, when the command involving a seek such as the READ SECTOR(s) command is received, the device processes the command after driving the spindle motor.

attention: The automatic power-down is executed if no command is coming for 30 min.

| At command issuance (I/O registers setting contents) |                 |   |   |    |    |
|--|-----------------|---|---|----|----|
| 1F7 <sub>H</sub> (CM)                                | X'96' or X'E2'  |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                | ×               | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                | xx              |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                | xx              |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                | xx              |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                | Period of timer |   |   |    |    |
| 1F1 <sub>H</sub> (FR)                                | xx              |   |   |    |    |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |

#### (26) STANDBY IMMEDIATE (X'94' or X'E0')

Upon receipt of this command, the device sets the BSY bit of the Status register and enters the standby mode. The device then clears the BSY bit and generates an interrupt. This command does not support the automatic power-down sequence.

| At command issuance (I/O registers setting contents) |                |   |   |    |    |
|--|----------------|---|---|----|----|
| 1F7 <sub>H</sub> (CM)                                | X'94' or X'E0' |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                | ×              | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                | xx             |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                | xx             |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                | xx             |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                | xx             |   |   |    |    |
| 1F1 <sub>H</sub> (FR)                                | xx             |   |   |    |    |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |

## (27) SLEEP (X'99' or X'E6')

This command is the only way to make the device enter the sleep mode.

Upon receipt of this command, the device sets the BSY bit of the Status register and enters the sleep mode. The device then clears the BSY bit and generates an interrupt. The device generates an interrupt even if the device has not fully entered the sleep mode.

In the sleep mode, the spindle motor is stopped and the ATA interface section is inactive. All I/O register outputs are in high-impedance state.

The only way to release the device from sleep mode is to execute a software or hardware reset.



| At command issuance (I/O registers setting contents) |                |   |   |    |    |
|--|----------------|---|---|----|----|
| 1F7 <sub>H</sub> (CM)                                | X'99' or X'E6' |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                | ×              | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                | xx             |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                | xx             |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                | xx             |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                | xx             |   |   |    |    |
| 1F1 <sub>H</sub> (FR)                                | xx             |   |   |    |    |

| At command completion (I/O registers contents to be read) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                  | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                 |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                 |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                 |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | xx                 |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information  |   |   |    |    |

## (28) CHECK POWER MODE (X'98' or X'E5')

The host checks the power mode of the device with this command.

The host system can confirm the power save mode of the device by analyzing the contents of the Sector Count and Sector registers.

The device sets the BSY bit and sets the following register value. After that, the device clears the BSY bit and generates an interrupt.

| Power save mode   | Sector Count register |
|---|-----------------------|
| <ul style="list-style-type: none"> <li>• During moving to standby mode</li> <li>• Standby mode</li> <li>• During returning from the standby mode</li> </ul> | X'00'                 |
| <ul style="list-style-type: none"> <li>• Idle mode</li> </ul>   | X'FF'                 |
| <ul style="list-style-type: none"> <li>• Active mode</li> </ul>   | X'FF'                 |

| At command issuance (I/O registers setting contents) |                |   |   |    |    |
|--|----------------|---|---|----|----|
| 1F7 <sub>H</sub> (CM)                                | X'98' or X'E5' |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                | ×              | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                | xx             |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                | xx             |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                | xx             |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                | xx             |   |   |    |    |
| 1F1 <sub>H</sub> (FR)                                | xx             |   |   |    |    |

| At command completion (I/O registers contents to be read) |                       |   |   |    |    |
|---|-----------------------|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                     | Status information    |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                     | ×                     | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                     | xx                    |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                     | xx                    |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                     | xx                    |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                     | X'00' ,X'80' or X'FF' |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                     | Error information     |   |   |    |    |

## (29) SMART (X'B0)

This command performs operations for device failure predictions according to a subcommand specified in the FR register. If the value specified in the FR register is supported, the Aborted Command error is posted.

It is necessary for the host to set the keys (CL = 4Fh and CH = C2h) in the CL and CH registers prior to issuing this command. If the keys are set incorrectly, the Aborted Command error is posted.

In the default setting, the failure prediction feature is enabled.

The device collects or updates several items to forecast failures. In the following sections, the values of items collected or updated by the device to forecast failures are referred to as attribute values.

**Table 5.7 Features Register values (subcommands) and functions (1 of 3)**

| Features Register | Function   |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
|-------------------|--|----|-------------------------------|-------|--|------|------------------------------------|------|----------------------------------|------|---|------|----------------|------|---------------------------------|------|--|
| X'D0'             | <p>SMART Read Attribute Values:<br/>A device that received this subcommand asserts the BSY bit and saves all the updated attribute values. The device then clears the BSY bit and transfers 512-byte attribute value information to the host.</p> <p>* For information about the format of the attribute value information, see Table 5.8.</p>   |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| X'D1'             | <p>SMART Read Attribute Thresholds:<br/>This subcommand is used to transfer 512-byte insurance failure threshold value data to the host.</p> <p>* For information about the format of the insurance failure threshold value data, see Table 5.9.</p>   |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| X'D2'             | <p>SMART Enable-Disable Attribute AutoSave:<br/>This subcommand is used to enable (SC register ≠ 00h) or disable (SC register = 00h) the setting of the automatic saving feature for the device attribute data. The setting is maintained every time the device is turned off and then on. When the automatic saving feature is enabled, the attribute values are saved before the device enters the power saving mode. However, if the failure prediction feature is disabled, the attribute values are not automatically saved.</p> <p>When the device receives this subcommand, it asserts the BSY bit, enables or disables the automatic saving feature, then clears the BSY bit.</p>  |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| X'D3'             | <p>SMART Save Attribute Values:<br/>When the device receives this subcommand, it asserts the BSY bit, saves device attribute value data, then clears the BSY bit.</p>  |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| X'D4'             | <p>SMART Executive Off-line Immediate:<br/>A device which receives this command asserts the BSY bit, then starts collecting the off-line data specified in the SN register, or stops.</p> <p>In the off-line mode, after BSY is cleared, off-line data are collected. In the captive mode, it collects off-line data with the BSY assertion as is, then clears the BSY when collection of data is completed.</p> <table border="0" data-bbox="487 1428 1039 1701"> <tr> <td style="padding-right: 10px;">SN</td> <td>Off-line data collection mode</td> </tr> <tr> <td colspan="2"><hr/></td> </tr> <tr> <td>00h:</td> <td>Off-line diagnosis (off-line mode)</td> </tr> <tr> <td>01h:</td> <td>Simple self test (off-line mode)</td> </tr> <tr> <td>02h:</td> <td>Comprehensive self test (off-line mode)</td> </tr> <tr> <td>7Fh:</td> <td>Self test stop</td> </tr> <tr> <td>81h:</td> <td>Simple self test (captive mode)</td> </tr> <tr> <td>82h:</td> <td>Comprehensive self test (captive mode)</td> </tr> </table> | SN | Off-line data collection mode | <hr/> |  | 00h: | Off-line diagnosis (off-line mode) | 01h: | Simple self test (off-line mode) | 02h: | Comprehensive self test (off-line mode) | 7Fh: | Self test stop | 81h: | Simple self test (captive mode) | 82h: | Comprehensive self test (captive mode) |
| SN                | Off-line data collection mode  |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| <hr/>             |  |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| 00h:              | Off-line diagnosis (off-line mode)   |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| 01h:              | Simple self test (off-line mode)   |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| 02h:              | Comprehensive self test (off-line mode)  |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| 7Fh:              | Self test stop   |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| 81h:              | Simple self test (captive mode)  |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |
| 82h:              | Comprehensive self test (captive mode)   |    |                               |       |  |      |                                    |      |                                  |      |   |      |                |      |                                 |      |  |

**Table 5.7 Features Register values (subcommands) and functions (2 of 3)**

| Features Register | Function  |     |            |          |                 |      |                     |          |                 |
|-------------------|---|-----|------------|----------|-----------------|------|---------------------|----------|-----------------|
| X'D5'             | <p>SMART Read Log Sector:<br/>A device which receives this sub-command asserts the BSY bit, then reads the log sector specified in the SN register. Next, it clears the BSY bit and transmits the log sector to the host computer. 01h should be specified in the SC register.</p> <table border="0" data-bbox="560 499 963 653"> <tr> <td style="border-bottom: 1px solid black;">SN:</td> <td style="border-bottom: 1px solid black;">Log sector</td> </tr> <tr> <td>01h:</td> <td>SMART error log</td> </tr> <tr> <td>06h:</td> <td>SMART self test log</td> </tr> <tr> <td>80h-9Fh:</td> <td>Host vendor log</td> </tr> </table> <p>* See Table 5.10 concerning the SMART error log data format.<br/>See Table 5.11 concerning the SMART self test log data format.</p> | SN: | Log sector | 01h:     | SMART error log | 06h: | SMART self test log | 80h-9Fh: | Host vendor log |
| SN:               | Log sector  |     |            |          |                 |      |                     |          |                 |
| 01h:              | SMART error log   |     |            |          |                 |      |                     |          |                 |
| 06h:              | SMART self test log   |     |            |          |                 |      |                     |          |                 |
| 80h-9Fh:          | Host vendor log   |     |            |          |                 |      |                     |          |                 |
| X'D6'             | <p>SMART Write Log Sector:<br/>A device which receives this sub-command asserts the BSY bit and when it has prepared to receive data from the host computer, it sets DRQ and clears the BSY bit. Next, it receives 512 bytes of data from the host computer and writes the specified log sector in the SN register. 01h should be specified in the SC register.</p> <table border="0" data-bbox="560 1024 963 1102"> <tr> <td style="border-bottom: 1px solid black;">SN:</td> <td style="border-bottom: 1px solid black;">Log sector</td> </tr> <tr> <td>80h-9Fh:</td> <td>Host vendor log</td> </tr> </table> <p>* The host can write any desired data in the host vendor log.</p>  | SN: | Log sector | 80h-9Fh: | Host vendor log |      |                     |          |                 |
| SN:               | Log sector  |     |            |          |                 |      |                     |          |                 |
| 80h-9Fh:          | Host vendor log   |     |            |          |                 |      |                     |          |                 |
| X'D8'             | <p>SMART Enable Operations:<br/>This subcommand enables the failure prediction feature. The setting is maintained even when the device is turned off and then on.<br/>When the device receives this subcommand, it asserts the BSY bit, enables the failure prediction feature, then clears the BSY bit.</p>  |     |            |          |                 |      |                     |          |                 |
| X'D9'             | <p>SMART Disable Operations:<br/>This subcommand disables the failure prediction feature. The setting is maintained even when the device is turned off and then on.<br/>When the device receives this subcommand, it asserts the BSY bit, disables the failure prediction feature, then clears the BSY bit.</p>   |     |            |          |                 |      |                     |          |                 |

**Table 5.7 Features Register values (subcommands) and functions (3 of 3)**

| Features Register | Function   |
|-------------------|--|
| X'DA'             | <p>SMART Return Status:</p> <p>When the device receives this subcommand, it asserts the BSY bit and saves the current device attribute values. Then the device compares the device attribute values with insurance failure threshold values. If there is an attribute value exceeding the threshold, F4h and 2Ch are loaded into the CL and CH registers. If there are no attribute values exceeding the thresholds, 4Fh and C2h are loaded into the CL and CH registers. After the settings for the CL and CH registers have been determined, the device clears the BSY bit</p> |
| X'DB'             | <p>SMART Enable/Disable Auto Off-line:</p> <p>This sets automatic off-line data collection in the enabled (when the SC register specification <math>\neq</math> 00h) or disabled (when the SC register specification = 00) state. This setting is preserved whether the drive's power is switched on or off.</p> <p>If four hours have passed since the power was switched on, or since the last time that off-line data were collected, off-line data collection is performed without relation to any command from the host computer.</p>                                       |

The host must regularly issue the SMART Read Attribute Values subcommand (FR register = D0h), SMART Save Attribute Values subcommand (FR register = D3h), or SMART Return Status subcommand (FR register = DAh) to save the device attribute value data on a medium.

Alternative, the device must issue the SMART Enable-Disable Attribute AutoSave subcommand (FR register = D2h) to use a feature which regularly save the device attribute value data to a medium.

The host can predict failures in the device by periodically issuing the SMART Return Status subcommand (FR register = DAh) to reference the CL and CH registers.

If an attribute value is below the insurance failure threshold value, the device is about to fail or the device is nearing the end of its life . In this case, the host recommends that the user quickly backs up the data.

| At command issuance (I-O registers setting contents) |            |   |   |    |    |         |
|--|------------|---|---|----|----|---------|
| 1F7 <sub>H</sub> (CM)                                | 1          | 0 | 1 | 1  | 0  | 0 0 0 0 |
| 1F6 <sub>H</sub> (DH)                                | ×          | × | × | DV | xx |         |
| 1F5 <sub>H</sub> (CH)                                | Key (C2h)  |   |   |    |    |         |
| 1F4 <sub>H</sub> (CL)                                | Key (4Fh)  |   |   |    |    |         |
| 1F3 <sub>H</sub> (SN)                                | xx         |   |   |    |    |         |
| 1F2 <sub>H</sub> (SC)                                | xx         |   |   |    |    |         |
| 1F1 <sub>H</sub> (FR)                                | Subcommand |   |   |    |    |         |

| At command completion (I-O registers setting contents) |   |   |   |    |    |
|--|---|---|---|----|----|
| 1F7 <sub>H</sub> (ST)                                  | Status information                      |   |   |    |    |
| 1F6 <sub>H</sub> (DH)                                  | ×                                       | × | × | DV | xx |
| 1F5 <sub>H</sub> (CH)                                  | Key-failure prediction status (C2h-2Ch) |   |   |    |    |
| 1F4 <sub>H</sub> (CL)                                  | Key-failure prediction status (4Fh-F4h) |   |   |    |    |
| 1F3 <sub>H</sub> (SN)                                  | xx                                      |   |   |    |    |
| 1F2 <sub>H</sub> (SC)                                  | xx                                      |   |   |    |    |
| 1F1 <sub>H</sub> (ER)                                  | Error information                       |   |   |    |    |

The attribute value information is 512-byte data; the format of this data is shown below. The host can access this data using the SMART Read Attribute Values subcommand (FR register = D0h). The insurance failure threshold value data is 512-byte data; the format of this data is shown below. The host can access this data using the SMART Read Attribute Thresholds subcommand (FR register = D1h).

**Table 5.8 Format of device attribute value data**

| Byte       | Item   |                                       |
|------------|--|---------------------------------------|
| 00<br>01   | Data format version number                     |                                       |
| 02         | Attribute 1                                    | Attribute ID                          |
| 03<br>04   |  | Status flag                           |
| 05         |  | Current attribute value               |
| 06         |  | Attribute value for worst case so far |
| 07 to 0C   |  | Raw attribute value                   |
| 0D         |  | Reserved                              |
| 0E to 169  |  | Attribute 2 to attribute 30           |
| 16A        | Off-line data collection status                |                                       |
| 16B        | Self test execution status                     |                                       |
| 16C, 16D   | Off-line data collection execution time [sec.] |                                       |
| 16E        | Reserved                                       |                                       |
| 16F        | Off-line data collection capability            |                                       |
| 170, 171   | Trouble prediction capability flag             |                                       |
| 172        | Error logging capability                       |                                       |
| 173        | Vendor unique                                  |                                       |
| 174        | Simple self test execution time [min.]         |                                       |
| 175        | Comprehensive self test execution time [min.]  |                                       |
| 176 to 181 | Reserved                                       |                                       |
| 182 to 1FE | Vendor unique                                  |                                       |
| 1FF        | Check sum                                      |                                       |

**Table 5.9 Format of insurance failure threshold value data**

| Byte       | Item                        |   |
|------------|-----------------------------|---|
| 00<br>01   | Data format version number  |   |
| 02         | Threshold 1                 | Attribute ID  |
| 03         |                             | Insurance failure threshold   |
| 04 to 0D   |                             | Reserved  |
| 0E to 169  | Threshold 2 to Threshold 30 | (The format of each threshold value is the same as that of bytes 02 to 0D.) |
| 16A to 17B | Reserved                    |   |
| 17C to 1FE | Vendor unique               |   |
| 1FF        | Check sum                   |   |

- Data format version number

The data format version number indicates the version number of the data format of the device attribute values or insurance failure thresholds. The data format version numbers of the device attribute values and insurance failure thresholds are the same. When a data format is changed, the data format version numbers are updated.

- Attribute ID

The attribute ID is defined as follows:

| Attribute ID | Attribute name                                       |
|--------------|--|
| 0            | (Indicates unused attribute data.)                   |
| 1            | Read error rate                                      |
| 2            | Throughput performance                               |
| 3            | Spin up time   |
| 4            | Start/stop count                                     |
| 5            | Re-allocated sector count                            |
| 7            | Seek error rate                                      |
| 8            | Seek time performance                                |
| 9            | Power-on time  |
| 10           | Number of retries made to activate the spindle motor |
| 12           | Number of power-on-power-off times                   |
| 13 to 198    | (Reserved)   |
| 199          | Ultra ATA CRC error rate                             |
| 200          | Write error rate                                     |
| 201 to 255   | (Unique to vendor)                                   |

- Status Flag

| Bit     | Meaning  |
|---------|--|
| 0       | If this bit 1, it indicates that if the attribute exceeds the threshold, it is the attribute covered by the drive warranty.    |
| 1       | If this bit is 1 (0), it indicates the attribute only updated by an on-line test (off-line test).                              |
| 2       | If this bit 1, it indicates the attribute that represents performance.   |
| 3       | If this bit 1, it indicates the attribute that represents an error rate.   |
| 4       | If this bit 1, it indicates the attribute that represents the number of occurrences.   |
| 5       | If this bit 1, it indicates the attribute that can be collected/saved even if the drive fault prediction function is disabled. |
| 6 to 15 | Reserve bit  |



- Current attribute value

The current attribute value is the normalized raw attribute data. The value varies between 01h and 64h. The closer the value gets to 01h, the higher the possibility of a failure. The device compares the attribute values with thresholds. When the attribute values are larger than the thresholds, the device is operating normally.

- Attribute value for the worst case so far

This is the worst attribute value among the attribute values collected to date. This value indicates the state nearest to a failure so far.

- Raw attribute value

Raw attributes data is retained.

- Off-line data collection status

Bits 0 to 6: Indicates the situation of off-line data collection according to the table below.

Bit 7: If this bit is 1, it indicates that the automatic off-line data collection function is enabled.

| Status Byte | Meaning   |
|-------------|---|
| 0           | Off-line data collection is not started.                            |
| 2           | Off-line data collection has been completed normally.               |
| 4           | Off-line data collection has been suspended by a command interrupt. |
| 5           | Off-line data collection has been aborted by a command interrupt.   |
| 6           | Off-line data collection has been aborted by a fatal error.         |

- Self test execution status

Bits 0 to 3: Indicates the rest of self-test in 0 to 9 (corresponding 0 to 90%).

Bits 4 to 7: Indicates the self-test execution status at the following table.

| Self-test execution status | Meaning   |
|----------------------------|---|
| 0                          | Self-test has been completed normally or has not been executed. |
| 1                          | Self-test has been stopped by the host computer.                |
| 2                          | Self-test has been suspended by hard or soft reset.             |
| 3                          | Self-test has been aborted by a fatal error.                    |
| 4                          | Self-test has been completed abnormally by an unknown meaning.  |
| 5                          | Self-test has been completed abnormally by write test.          |
| 6                          | Self-test has been completed abnormally by serbo test.          |
| 7                          | Self-test has been completed abnormally by read test.           |
| 8 to 14                    | Reserved  |
| 15                         | Self-test is in progress.                                       |

- Off-line data collection capability

Indicates the method of off-line data collection carried out by the drive. If the off-line data collection capability is 0, it indicates that off-line data collection is not supported.

| Bit | Meaning   |
|-----|---|
| 0   | Indicates that Execute Off-Line Immediate is supported.   |
| 1   | Vendor unique   |
| 2   | Indicates that off-line data collection being executed is aborted when a new command is received. |
| 3   | Indicates that supports off-line read scan function.  |
| 4   | Indicates that supports self-test function.   |

- Failure prediction capability flag

Bit 0: The attribute value data is saved to a media before the device enters power saving mode.

Bit 1: The device automatically saves the attribute value data to a media after the previously set operation.

Bits 2 to 15: Reserved bits

- Error logging capability

Bit 0: Indicates that error logging function.

Bits 1 to 7: Reserved bits

- Check sum

Two's complement of the lower byte, obtained by adding 511-byte data one byte at a time from the beginning.

- Insurance failure threshold

The limit of a varying attribute value. The host compares the attribute values with the thresholds to identify a failure.

If an unrecoverable error is detected during execution of a command received by the device from the host computer, the device saves the SMART error log on the disk medium.

The host computer can issue the SMART Read Log Sector sub-command (FR register = D5h, SN register = 01h) and read the SMART error log.

**Table 5.10 SMART error log data format (1/2)**

| Byte     | Item                     |                        |  |   |
|----------|--------------------------|------------------------|--|---|
| 00       | Error log version number |                        |  |   |
| 01       | Error log index          |                        |  |   |
| 02       | Error log 1              | Command Data 1         | Device Control register  |   |
| 03       |                          |                        | Features register  |   |
| 04       |                          |                        | Sector Count register  |   |
| 05       |                          |                        | Sector Number register   |   |
| 06       |                          |                        | Cylinder Low register  |   |
| 07       |                          |                        | Cylinder High register   |   |
| 08       |                          |                        | Device/Head register   |   |
| 09       |                          |                        | Command register   |   |
| 0A to 0D |                          |                        | Elapsed time [ms] from the point when the power is turned on until command reception |   |
| 0E to 3D |                          |                        | Command Data 2 to 5  | (The format of each type of command data is the same as that of byte 02 to 0D.) |
| 3E       | Error data               | Reserved               |  |   |
| 3F       |                          | Error register         |  |   |
| 40       |                          | Sector Count register  |  |   |
| 41       |                          | Sector Number register |  |   |
| 42       |                          | Cylinder Low register  |  |   |
| 43       |                          | Cylinder High register |  |   |

**Table 5.10 SMART error log data format (2/2)**

| Byte       | Item   |  |                            |
|------------|--|--|----------------------------|
| 44         | Error log 1  | Error data   | Device/Head register       |
| 45         |  |  | Status register            |
| 46 to 58   |  |  | Vendor unique              |
| 59         |  |  | Status                     |
| 5A, 5B     |  |  | Total power on time [hour] |
| 5C to 1C3  | Error log 2 to Error log 5                         | (The format of each error log is the same as Byte 02 to 5B.) |                            |
| 1C4, 1C5   | Number of unrecoverable errors that have occurred. |  |                            |
| 1C6 to 1FE | Reserved   |  |                            |
| 1FF        | Check sum  |  |                            |

- Error log index  
Indicates the latest error log number. If an error has not occurred, 00 is displayed.
- Error log 1 to 5  
When an error occurs, the error log index value is incremented and information at the time the error occurred is recorded in the error log area specified by this value. When the error log index exceeds 05, it returns to 01.
- Command data 1 to 5  
Indicates five commands data in order received by the device until the error occurs. Commands for which an error occurred are included in Command Data 5.
- Error data  
Indicates the I/O register values when the error is reported.
- Status  
Bits 0 to 3: Indicates the drive status when received error commands according to the following table.  
Bits 4 to 7: Vendor unique

| Status | Meaning                                    |
|--------|--|
| 0      | Unclear status                             |
| 1      | Sleep status                               |
| 2      | Standby status                             |
| 3      | Active status or idle status (BSY bit = 0) |
| 4      | Off-line data collection being executed    |
| 5 to F | Reserved                                   |

The host computer can issue the SMART Execute Off-line Immediate sub-command (FR Register = D4h) and cause the device to execute a self test. When the self test is completed, the device saves the SMART self test log to the disk medium.

The host computer can issue the SMART Read Log Sector sub-command (FR Register = D5h, SN Register = 06h) and can read the SMART self test log.

**Table 5.11 SMART self test log data format**

| Byte      | Item                                     |   |
|-----------|--|---|
| 00, 01    | Self test log data format version number |   |
| 02        | Self test log 1                          | Self test mode (SN Register Value)                            |
| 03        |  | Self test execution status                                    |
| 04, 05    |  | Total power on time until the self test is completed. [hours] |
| 06        |  | Self test error No.   |
| 07 to 0A  |  | Error LBA   |
| 0B to 19  |  | Vendor unique   |
| 1A to 1F9 |  | Self test log 2 to 21   |
| 1FA, 1FB  | Vendor unique                            |   |
| 1FC       | Self test index                          |   |
| 1FD, 1FE  | Reserved                                 |   |
| 1FF       | Check sum                                |   |

- Self test log 1 to 21

When executes self test, the self test index value is incremented and the self test execution result is recorded in the self log test area specified by this value. When the self test index exceeds 21, it returns to 01.

- Self test index

Indicates the latest self test log number. If the self test has not been executed, 00h is displayed.

**(30) SECURITY DISABLE PASSWORD (F6h)**

This command invalidates the user password already set and releases the lock function.

The host transfers the 512-byte data shown in Table 5.12 to the device. The device compares the user password or master password in the transferred data with the user password or master password already set, and releases the lock function if the passwords are the same.

Although this command invalidates the user password, the master password is retained. To recover the master password, issue the SECURITY SET PASSWORD command and reset the user password.

If the user password or master password transferred from the host does not match, the Aborted Command error is returned.

Issuing this command while in LOCKED MODE or FROZEN MODE returns the Aborted Command error.

(The section about the SECURITY FREEZE LOCK command describes LOCKED MODE and FROZEN MODE.)

**Table 5.12 Contents of security password**

| Word      | Contents  |
|-----------|---|
| 0         | Control word<br>Bit 0: Identifier<br>0 = Compares the user passwords.<br>1 = Compares the master passwords.<br>Bits 1 to 15: Reserved |
| 1 to 16   | Password (32 bytes)   |
| 17 to 255 | Reserved  |

| At command issuance (I-O register contents)) |    |   |   |    |    |   |   |
|--|----|---|---|----|----|---|---|
| 1F7 <sub>h</sub> (CM)                        | 1  | 1 | 1 | 1  | 0  | 1 | 0 |
| 1F6 <sub>h</sub> (DH)                        | ×  | × | × | DV | xx |   |   |
| 1F5 <sub>h</sub> (CH)                        | xx |   |   |    |    |   |   |
| 1F4 <sub>h</sub> (CL)                        | xx |   |   |    |    |   |   |
| 1F3 <sub>h</sub> (SN)                        | xx |   |   |    |    |   |   |
| 1F2 <sub>h</sub> (SC)                        | xx |   |   |    |    |   |   |
| 1F1 <sub>h</sub> (FR)                        | xx |   |   |    |    |   |   |

| At command completion (I-O register contents) |                    |   |   |    |    |  |  |
|---|--------------------|---|---|----|----|--|--|
| 1F7 <sub>h</sub> (ST)                         | Status information |   |   |    |    |  |  |
| 1F6 <sub>h</sub> (DH)                         | ×                  | × | × | DV | xx |  |  |
| 1F5 <sub>h</sub> (CH)                         | xx                 |   |   |    |    |  |  |
| 1F4 <sub>h</sub> (CL)                         | xx                 |   |   |    |    |  |  |
| 1F3 <sub>h</sub> (SN)                         | xx                 |   |   |    |    |  |  |
| 1F2 <sub>h</sub> (SC)                         | xx                 |   |   |    |    |  |  |
| 1F1 <sub>h</sub> (ER)                         | Error information  |   |   |    |    |  |  |

**(31) SECURITY ERASE PREPARE (F3h)**

The SECURITY ERASE UNIT command feature is enabled by issuing the SECURITY ERASE PREPARE command and then the SECURITY ERASE UNIT command. The SECURITY ERASE PREPARE command prevents data from being erased unnecessarily by the SECURITY ERASE UNIT command.

Issuing this command during FROZEN MODE returns the Aborted Command error.

| At command issuance (I-O register contents) |    |   |   |    |    |   |     |
|---|----|---|---|----|----|---|-----|
| 1F7 <sub>h</sub> (CM)                       | 1  | 1 | 1 | 1  | 0  | 0 | 1 1 |
| 1F6 <sub>h</sub> (DH)                       | ×  | × | × | DV | xx |   |     |
| 1F5 <sub>h</sub> (CH)                       | xx |   |   |    |    |   |     |
| 1F4 <sub>h</sub> (CL)                       | xx |   |   |    |    |   |     |
| 1F3 <sub>h</sub> (SN)                       | xx |   |   |    |    |   |     |
| 1F2 <sub>h</sub> (SC)                       | xx |   |   |    |    |   |     |
| 1F1 <sub>h</sub> (FR)                       | xx |   |   |    |    |   |     |

| At command completion (I-O register contents) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>h</sub> (ST)                         | Status information |   |   |    |    |
| 1F6 <sub>h</sub> (DH)                         | ×                  | × | × | DV | xx |
| 1F5 <sub>h</sub> (CH)                         | xx                 |   |   |    |    |
| 1F4 <sub>h</sub> (CL)                         | xx                 |   |   |    |    |
| 1F3 <sub>h</sub> (SN)                         | xx                 |   |   |    |    |
| 1F2 <sub>h</sub> (SC)                         | xx                 |   |   |    |    |
| 1F1 <sub>h</sub> (ER)                         | Error information  |   |   |    |    |

### (32) SECURITY ERASE UNIT (F4h)

This command erases all user data. This command also invalidates the user password and releases the lock function.

The host transfers the 512-byte data shown in Table 5.10 to the device. The device compares the user password or master password in the transferred data with the user password or master password already set. The device erases user data, invalidates the user password, and releases the lock function if the passwords are the same.

Although this command invalidates the user password, the master password is retained. To recover the master password, issue the SECURITY SET PASSWORD command and reset the user password.

If the SECURITY ERASE PREPARE command is not issued immediately before this command is issued, the Aborted Command error is returned.

Issuing this command while in FROZEN MODE returns the Aborted Command error.



| At command issuance (I-O register contents) |    |   |   |    |    |   |     |
|---|----|---|---|----|----|---|-----|
| 1F7 <sub>h</sub> (CM)                       | 1  | 1 | 1 | 1  | 0  | 1 | 0 0 |
| 1F6 <sub>h</sub> (DH)                       | ×  | × | × | DV | xx |   |     |
| 1F5 <sub>h</sub> (CH)                       | xx |   |   |    |    |   |     |
| 1F4 <sub>h</sub> (CL)                       | xx |   |   |    |    |   |     |
| 1F3 <sub>h</sub> (SN)                       | xx |   |   |    |    |   |     |
| 1F2 <sub>h</sub> (SC)                       | xx |   |   |    |    |   |     |
| 1F1 <sub>h</sub> (FR)                       | xx |   |   |    |    |   |     |

| At command completion (I-O register contents) |                    |   |   |    |    |  |  |
|---|--------------------|---|---|----|----|--|--|
| 1F7 <sub>h</sub> (ST)                         | Status information |   |   |    |    |  |  |
| 1F6 <sub>h</sub> (DH)                         | ×                  | × | × | DV | xx |  |  |
| 1F5 <sub>h</sub> (CH)                         | xx                 |   |   |    |    |  |  |
| 1F4 <sub>h</sub> (CL)                         | xx                 |   |   |    |    |  |  |
| 1F3 <sub>h</sub> (SN)                         | xx                 |   |   |    |    |  |  |
| 1F2 <sub>h</sub> (SC)                         | xx                 |   |   |    |    |  |  |
| 1F1 <sub>h</sub> (ER)                         | Error information  |   |   |    |    |  |  |

### (33) SECURITY FREEZE LOCK (F5h)

This command puts the device into FROZEN MODE. The following commands used to change the lock function return the Aborted Command error if the device is in FROZEN MODE.

- SECURITY SET PASSWORD
- SECURITY UNLOCK
- SECURITY DISABLE PASSWORD
- SECURITY ERASE UNIT

FROZEN MODE is canceled when the power is turned off. If this command is reissued in FROZEN MODE, the command is completed and FROZEN MODE remains unchanged.

Issuing this command during LOCKED MODE returns the Aborted Command error.

The following medium access commands return the Aborted Command error when the device is in LOCKED MODE:

- READ DMA
- READ LONG
- READ MULTIPLE
- READ SECTORS
- WRITE DMA
- WRITE LONG
- WRITE MULTIPLE
- WRITE SECTORS
- WRITE VERIFY
- SECURITY DISABLE PASSWORD
- SECURITY FREEZE LOCK
- SECURITY SET PASSWORD

| At command issuance (I-O register contents) |    |   |   |    |    |   |   |   |
|---|----|---|---|----|----|---|---|---|
| 1F7 <sub>h</sub> (CM)                       | 1  | 1 | 1 | 1  | 0  | 1 | 0 | 1 |
| 1F6 <sub>h</sub> (DH)                       | ×  | × | × | DV | xx |   |   |   |
| 1F5 <sub>h</sub> (CH)                       | xx |   |   |    |    |   |   |   |
| 1F4 <sub>h</sub> (CL)                       | xx |   |   |    |    |   |   |   |
| 1F3 <sub>h</sub> (SN)                       | xx |   |   |    |    |   |   |   |
| 1F2 <sub>h</sub> (SC)                       | xx |   |   |    |    |   |   |   |
| 1F1 <sub>h</sub> (FR)                       | xx |   |   |    |    |   |   |   |

| At command completion (I-O register contents) |                    |   |   |    |    |  |  |
|---|--------------------|---|---|----|----|--|--|
| 1F7 <sub>h</sub> (ST)                         | Status information |   |   |    |    |  |  |
| 1F6 <sub>h</sub> (DH)                         | ×                  | × | × | DV | xx |  |  |
| 1F5 <sub>h</sub> (CH)                         | xx                 |   |   |    |    |  |  |
| 1F4 <sub>h</sub> (CL)                         | xx                 |   |   |    |    |  |  |
| 1F3 <sub>h</sub> (SN)                         | xx                 |   |   |    |    |  |  |
| 1F2 <sub>h</sub> (SC)                         | xx                 |   |   |    |    |  |  |
| 1F1 <sub>h</sub> (ER)                         | Error information  |   |   |    |    |  |  |

## (34) SECURITY SET PASSWORD (F1h)

This command enables a user password or master password to be set.

The host transfers the 512-byte data shown in Table 5.13 to the device. The device determines the operation of the lock function according to the specifications of the Identifier bit and Security level bit in the transferred data. (Table 5.14)

Issuing this command in LOCKED MODE or FROZEN MODE returns the Aborted Command error.

**Table 5.13 Contents of SECURITY SET PASSWORD data**

| Word      | Contents   |
|-----------|--|
| 0         | Control word<br>Bit 0 Identifier<br>0 = Sets a user password.<br>1 = Sets a master password.<br>Bits 1 to 7 Reserved<br>Bit 8 Security level<br>0 = High<br>1 = Maximum<br>Bits 9 to 15 Reserved |
| 1 to 16   | Password (32 bytes)  |
| 17 to 18  | Master password version number   |
| 19 to 255 | Reserved   |

**Table 5.14 Relationship between combination of Identifier and Security level, and operation of the lock function**

| Identifier | Level   | Description   |
|------------|---------|---|
| User       | High    | The specified password is saved as a new user password. The lock function is enabled after the device is turned off and then on. LOCKED MODE can be canceled using the user password or the master password already set.                              |
| Master     | High    | The specified password is saved as a new master password. The lock function is not enabled.   |
| User       | Maximum | The specified password is saved as a new user password. The lock function is enabled after the device is turned off and then on. LOCKED MODE can be canceled using the user password only. The master password already set cannot cancel LOCKED MODE. |
| Master     | Maximum | The specified password is saved as a new master password. The lock function is not enabled.   |

| At command issuance (I-O register contents) |    |   |   |    |    |   |   |
|---|----|---|---|----|----|---|---|
| 1F7 <sub>h</sub> (CM)                       | 1  | 1 | 1 | 1  | 0  | 0 | 1 |
| 1F6 <sub>h</sub> (DH)                       | ×  | × | × | DV | xx |   |   |
| 1F5 <sub>h</sub> (CH)                       | xx |   |   |    |    |   |   |
| 1F4 <sub>h</sub> (CL)                       | xx |   |   |    |    |   |   |
| 1F3 <sub>h</sub> (SN)                       | xx |   |   |    |    |   |   |
| 1F2 <sub>h</sub> (SC)                       | xx |   |   |    |    |   |   |
| 1F1 <sub>h</sub> (FR)                       | xx |   |   |    |    |   |   |

| At command completion (I-O register contents) |                    |   |   |    |    |
|---|--------------------|---|---|----|----|
| 1F7 <sub>h</sub> (ST)                         | Status information |   |   |    |    |
| 1F6 <sub>h</sub> (DH)                         | ×                  | × | × | DV | xx |
| 1F5 <sub>h</sub> (CH)                         | xx                 |   |   |    |    |
| 1F4 <sub>h</sub> (CL)                         | xx                 |   |   |    |    |
| 1F3 <sub>h</sub> (SN)                         | xx                 |   |   |    |    |
| 1F2 <sub>h</sub> (SC)                         | xx                 |   |   |    |    |
| 1F1 <sub>h</sub> (ER)                         | Error information  |   |   |    |    |

### (35) SECURITY UNLOCK

This command cancels LOCKED MODE.

The host transfers the 512-byte data shown in Table 5.12 to the device. Operation of the device varies as follows depending on whether the host specifies the master password.

- When the master password is selected

When the security level is LOCKED MODE is high, the password is compared with the master password already set. If the passwords are the same, LOCKED MODE is concealed. Otherwise, the Aborted Command error is returned. If the security level in LOCKED MODE is set to the highest level, the Aborted Command error is always returned.

- When the user password is selected

The password is compared with the user password already set. If the passwords are the same, LOCKED MODE is concealed. Otherwise, the Aborted Command error is returned.

If the password comparison fails, the device decrements the UNLOCK counter. The UNLOCK counter initially has a value of five. When the value of the UNLOCK counter reaches zero, this command or the SECURITY ERASE UNIT command causes the Aborted Command error until the device is turned off and then on, or until a hardware reset is executed. Issuing this command with

LOCKED MODE concealed (in UNLOCK MODE) has no affect on the UNLOCK counter.

Issuing this command in FROZEN MODE returns the Aborted Command error.

| At command issuance (I-O register contents) |    |   |   |    |    |   |     |
|---|----|---|---|----|----|---|-----|
| 1F7 <sub>h</sub> (CM)                       | 1  | 1 | 1 | 1  | 0  | 0 | 1 0 |
| 1F6 <sub>h</sub> (DH)                       | ×  | × | × | DV | xx |   |     |
| 1F5 <sub>h</sub> (CH)                       | xx |   |   |    |    |   |     |
| 1F4 <sub>h</sub> (CL)                       | xx |   |   |    |    |   |     |
| 1F3 <sub>h</sub> (SN)                       | xx |   |   |    |    |   |     |
| 1F2 <sub>h</sub> (SC)                       | xx |   |   |    |    |   |     |
| 1F1 <sub>h</sub> (FR)                       | xx |   |   |    |    |   |     |

| At command completion (I-O register contents) |                    |   |   |    |    |  |  |
|---|--------------------|---|---|----|----|--|--|
| 1F7 <sub>h</sub> (ST)                         | Status information |   |   |    |    |  |  |
| 1F6 <sub>h</sub> (DH)                         | ×                  | × | × | DV | xx |  |  |
| 1F5 <sub>h</sub> (CH)                         | xx                 |   |   |    |    |  |  |
| 1F4 <sub>h</sub> (CL)                         | xx                 |   |   |    |    |  |  |
| 1F3 <sub>h</sub> (SN)                         | xx                 |   |   |    |    |  |  |
| 1F2 <sub>h</sub> (SC)                         | xx                 |   |   |    |    |  |  |
| 1F1 <sub>h</sub> (ER)                         | Error information  |   |   |    |    |  |  |

### (36) FLUSH CACHE (E7)

This command is used to order to write every write cache data stored by the device into the medium. BSY bit is held at "1" until every data has been written normally or a error has occurred. The device performs every error recovery so that the data are read correctly.

When executing this command, the reading of the data may take several seconds if much data are to be read.

In case a non-recoverable error has occurred while the data is being read, the error generation address is put into the command block register before ending the command. This error sector is deleted from the write cache data, and the remaining cache data is written into the medium by the execution of the next Flush Cache command.

| At command issuance (I-O register contents) |    |   |   |    |    |   |   |   |
|---|----|---|---|----|----|---|---|---|
| 1F7 <sub>h</sub> (CM)                       | 1  | 1 | 1 | 0  | 0  | 1 | 1 | 1 |
| 1F6 <sub>h</sub> (DH)                       | ×  | × | × | DV | xx |   |   |   |
| 1F5 <sub>h</sub> (CH)                       | xx |   |   |    |    |   |   |   |
| 1F4 <sub>h</sub> (CL)                       | xx |   |   |    |    |   |   |   |
| 1F3 <sub>h</sub> (SN)                       | xx |   |   |    |    |   |   |   |
| 1F2 <sub>h</sub> (SC)                       | xx |   |   |    |    |   |   |   |
| 1F1 <sub>h</sub> (FR)                       | xx |   |   |    |    |   |   |   |

| At command completion (I-O register contents to be read) |                    |   |   |    |    |  |  |
|--|--------------------|---|---|----|----|--|--|
| 1F7 <sub>h</sub> (ST)                                    | Status information |   |   |    |    |  |  |
| 1F6 <sub>h</sub> (DH)                                    | ×                  | × | × | DV | xx |  |  |
| 1F5 <sub>h</sub> (CH)                                    | xx                 |   |   |    |    |  |  |
| 1F4 <sub>h</sub> (CL)                                    | xx                 |   |   |    |    |  |  |
| 1F3 <sub>h</sub> (SN)                                    | xx                 |   |   |    |    |  |  |
| 1F2 <sub>h</sub> (SC)                                    | xx                 |   |   |    |    |  |  |
| 1F1 <sub>h</sub> (ER)                                    | Error information  |   |   |    |    |  |  |

### 5.3.3 Error posting

Table 5.15 lists the defined errors that are valid for each command.

**Table 5.15 Command code and parameters (1 of 2)**

| Command name          | Error register (X'1F1') |     |      |      |       | Status register (X'1F7') |     |     |
|-----------------------|-------------------------|-----|------|------|-------|--------------------------|-----|-----|
|                       | ICRC                    | UNC | INDF | ABRT | TKONF | DRDY                     | DWF | ERR |
| READ SECTOR(S)        |                         | V   | V    | V    |       | V                        | V   | V   |
| WRITE SECTOR(S)       |                         |     | V    | V    |       | V                        | V   | V   |
| READ MULTIPLE         |                         | V   | V    | V    |       | V                        | V   | V   |
| WRITE MULTIPLE        |                         |     | V    | V    |       | V                        | V   | V   |
| READ DMA              | V                       | V   | V    | V    |       | V                        | V   | V   |
| WRITE DMA             | V                       |     | V    | V    |       | V                        | V   | V   |
| WRITE VERIFY          |                         | V   | V    | V    |       | V                        | V   | V   |
| READ VERIFY SECTOR(S) |                         | V   | V    | V    |       | V                        | V   | V   |

V: Valid on this command

\*: See the command descriptions.

Table 5.15 Command code and parameters (2 of 2)

| Command name                 | Error register (X'1F1') |     |      |      |       | Status register (X'1F7') |     |     |
|------------------------------|-------------------------|-----|------|------|-------|--------------------------|-----|-----|
|                              | ICRC                    | UNC | INDF | ABRT | TK0NF | DRDY                     | DWF | ERR |
| RECALIBRATE                  |                         |     |      | V    | V     | V                        | V   | V   |
| SEEK                         |                         |     | V    | V    |       | V                        | V   | V   |
| INITIALIZE DEVICE PARAMETERS |                         |     |      | V    |       | V                        | V   | V   |
| IDENTIFY DEVICE              |                         |     |      | V    |       | V                        | V   | V   |
| IDENTIFY DEVICE DMA          |                         |     |      | V    |       | V                        | V   | V   |
| SET FEATURES                 |                         |     |      | V    |       | V                        | V   | V   |
| SET MULTIPLE MODE            |                         |     |      | V    |       | V                        | V   | V   |
| SET MAX ADDRESS              |                         |     | V    | V    |       | V                        | V   | V   |
| READ NATIVE MAX ADDRESS      |                         |     |      | V    |       | V                        | V   | V   |
| EXECUTE DEVICE DIAGNOSTIC    | *                       | *   | *    | *    | *     |                          |     | V   |
| READ LONG                    |                         |     | V    | V    |       | V                        | V   | V   |
| WRITE LONG                   |                         |     | V    | V    |       | V                        | V   | V   |
| READ BUFFER                  |                         |     |      | V    |       | V                        | V   | V   |
| WRITE BUFFER                 |                         |     |      | V    |       | V                        | V   | V   |
| IDLE                         |                         |     |      | V    |       | V                        | V   | V   |
| IDLE IMMEDIATE               |                         |     |      | V    |       | V                        | V   | V   |
| STANDBY                      |                         |     |      | V    |       | V                        | V   | V   |
| STANDBY IMMEDIATE            |                         |     |      | V    |       | V                        | V   | V   |
| SLEEP                        |                         |     |      | V    |       | V                        | V   | V   |
| CHECK POWER MODE             |                         |     |      | V    |       | V                        | V   | V   |
| SMART                        |                         |     | V    | V    |       | V                        | V   | V   |
| SECURITY DISABLE PASSWORD    |                         |     |      | V    |       | V                        | V   | V   |
| SECURITY ERASE PREPARE       |                         |     |      | V    |       | V                        | V   | V   |
| SECURITY ERASE UNIT          |                         |     |      | V    |       | V                        | V   | V   |
| SECURITY FREEZE LOCK         |                         |     |      | V    |       | V                        | V   | V   |
| SECURITY SET PASSWORD        |                         |     |      | V    |       | V                        | V   | V   |
| SECURITY UNLOCK              |                         |     |      | V    |       | V                        | V   | V   |
| FLUSH CACHE                  |                         |     | V    | V    |       | V                        | V   | V   |
| Invalid command              |                         |     |      | V    |       | V                        | V   | V   |

V: Valid on this command

\*: See the command descriptions.

## 5.4 Command Protocol

The host should confirm that the BSY bit of the Status register of the device is 0 prior to issue a command. If BSY bit is 1, the host should wait for issuing a command until BSY bit is cleared to 0.

Commands can be executed only when the DRDY bit of the Status register is 1. However, the following commands can be executed even if DRDY bit is 0.

- EXECUTE DEVICE DIAGNOSTIC
- INITIALIZE DEVICE PARAMETERS

### 5.4.1 Data transferring commands from device to host

The execution of the following commands involves data transfer from the device to the host.

- IDENTIFY DEVICE.
- IDENTIFY DEVICE DMA
- READ SECTOR(S)
- READ LONG
- READ BUFFER
- SMART

The execution of these commands includes the transfer one or more sectors of data from the device to the host. In the READ LONG command, 516 bytes are transferred. Following shows the protocol outline.


- a) The host writes any required parameters to the Features, Sector Count, Sector Number, Cylinder, and Device/Head registers.
- b) The host writes a command code to the Command register.
- c) The device sets the BSY bit of the Status register and prepares for data transfer.
- d) When one sector of data is available for transfer to the host, the device sets DRQ bit and clears BSY bit. The drive then asserts INTRQ signal.
- e) After detecting the INTRQ signal assertion, the host reads the Status register. The host reads one sector of data via the Data register. In response to the Status register being read, the device negates the INTRQ signal.
- f) The drive clears DRQ bit to 0. If transfer of another sector is requested, the device sets the BSY bit and steps d) and after are repeated.

Even if an error is encountered, the device prepares for data transfer by setting the DRQ bit. Whether or not to transfer the data is determined for each host. In other



words, the host should receive the relevant sector of data (512 bytes of uninsured dummy data) or release the DRQ status by resetting.

Figure 5.3 shows an example of READ SECTOR(S) command protocol, and Figure 5.4 shows an example protocol for command abort.

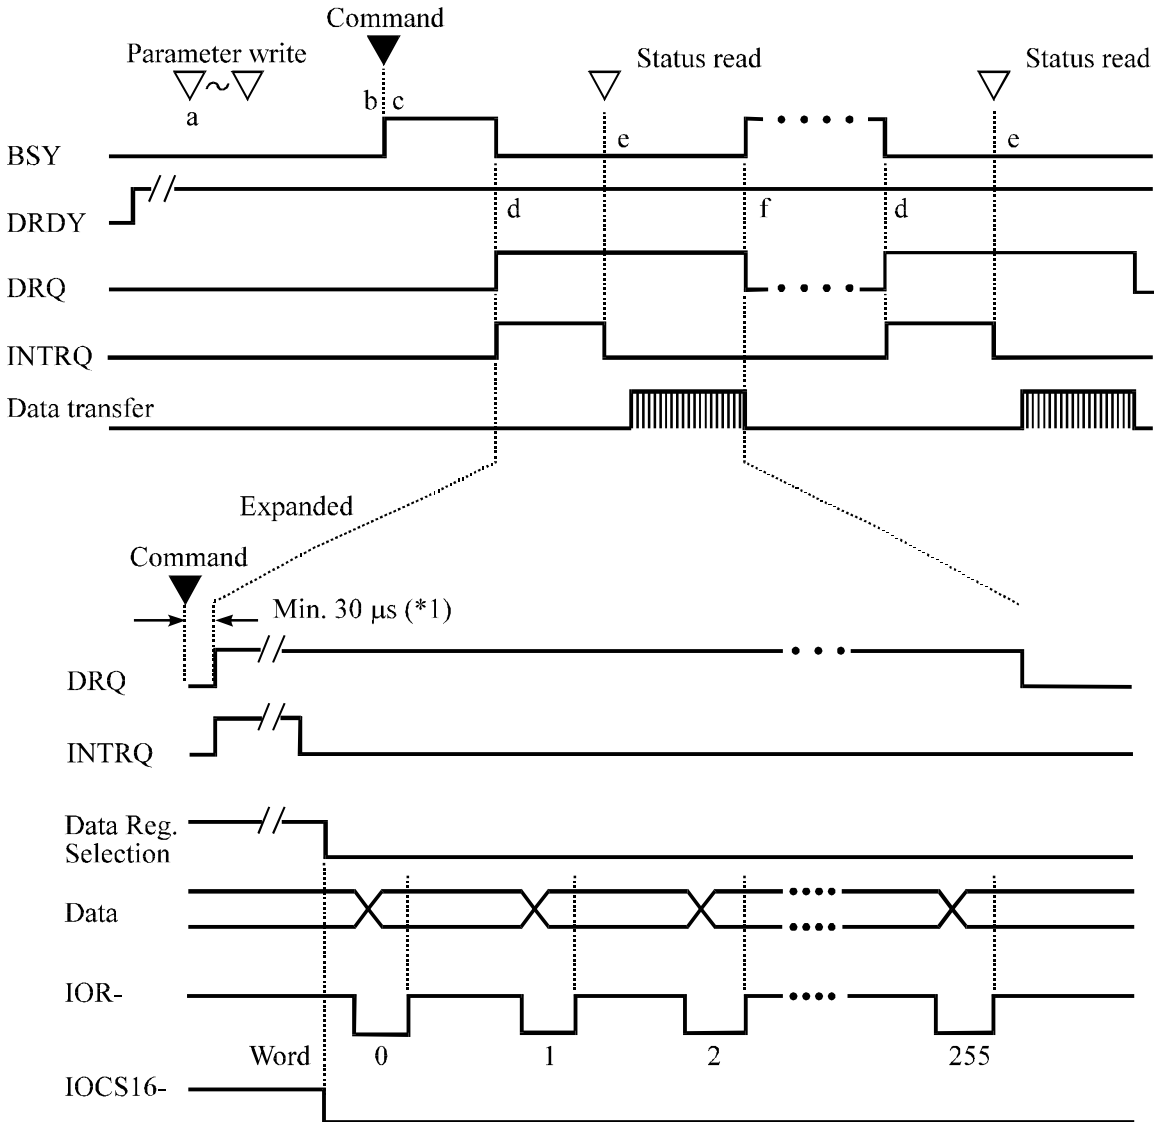


\*1 When the IDD receives a command that hits the cache data during read-ahead, and transfers data from the buffer without reading from the disk medium.

**Figure 5.3 Read Sector(s) command protocol**

### IMPORTANT

For transfer of a sector of data, the host needs to read Status register (X'1F7') in order to clear INTRQ (interrupt) signal. The Status register should be read within a period from the DRQ setting by the

device to 50 ms after the completion of the sector data transfer. Note that the host does not need to read the Status register for the reading of a single sector or the last sector in multiple-sector reading. If the timing to read the Status register does not meet above condition, normal data transfer operation is not guaranteed. When the host new command even if the device requests the data transfer (setting in DRQ bit), the correct device operation is not guaranteed.

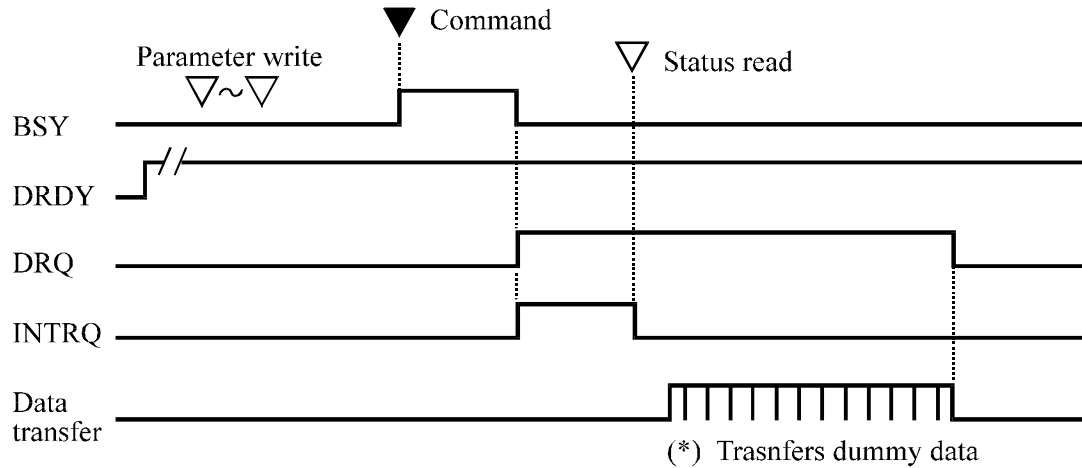

\*: The host should receive 512-byte dummy data or release the DRQ set state by resetting.

**Figure 5.4 Protocol for command abort**

### 5.4.2 Data transferring commands from host to device

The execution of the following commands involves Data transfer from the host to the drive.

- WRITE SECTOR(S)
- WRITE LONG
- WRITE BUFFER
- WRITE VERIFY
- SECURITY DISABLE PASSWORD
- SECURITY ERASE UNIT
- SECURITY SET PASSWORD
- SECURITY UNCLOCK

The execution of these commands includes the transfer one or more sectors of data from the host to the device. In the WRITE LONG command, 516 bytes are transferred. Following shows the protocol outline.

- a) The host writes any required parameters to the Features, Sector Count, Sector Number, Cylinder, and Device/Head registers.
- b) The host writes a command code in the Command register. The drive sets the BSY bit of the Status register.
- c) When the device is ready to receive the data of the first sector, the device sets DRQ bit and clears BSY bit.
- d) The host writes one sector of data through the Data register.
- e) The device clears the DRQ bit and sets the BSY bit.
- f) When the drive completes transferring the data of the sector, the device clears BSY bit and asserts INTRQ signal. If transfer of another sector is requested, the drive sets the DRQ bit.
- g) After detecting the INTRQ signal assertion, the host reads the Status register.
- h) The device resets INTRQ (the interrupt signal).
- I) If transfer of another sector is requested, steps d) and after are repeated.

Figure 5.5 shows an example of WRITE SECTOR(S) command protocol.

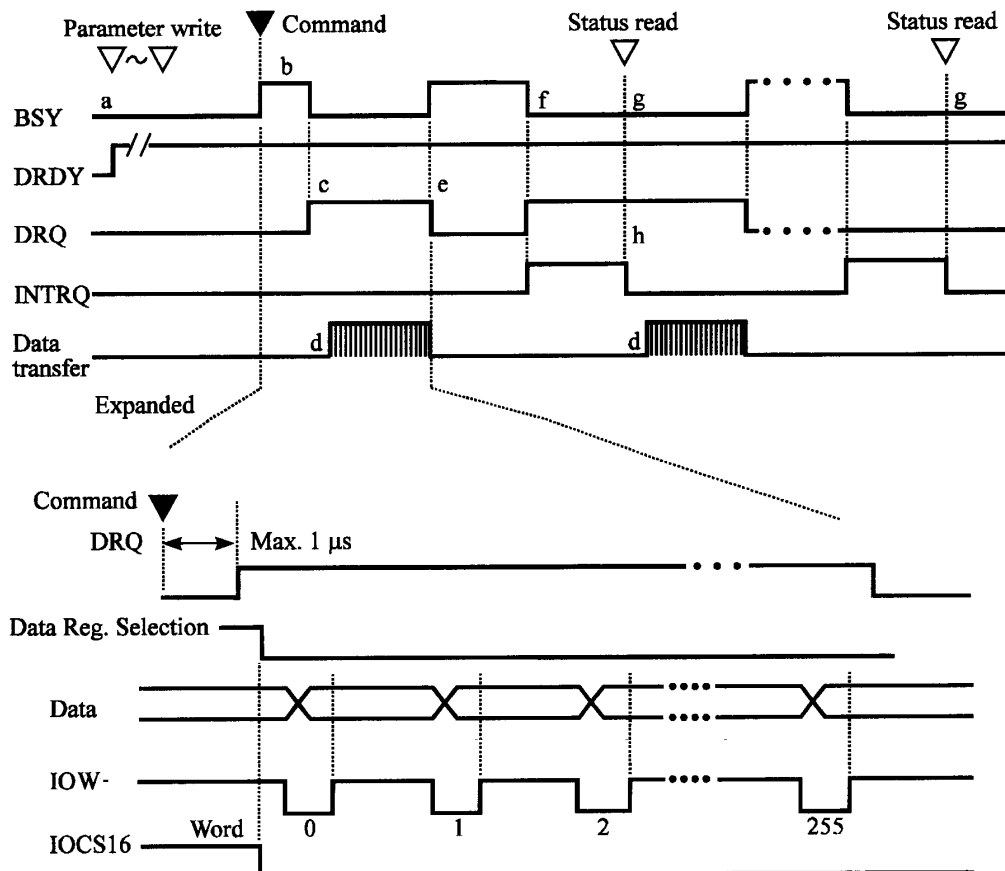


Figure 5.5 WRITE SECTOR(S) command protocol

**IMPORTANT**

For transfer of a sector of data, the host needs to read Status register (X'1F7') in order to clear INTRQ (interrupt) signal. The Status register should be read within a period from the DRQ setting by the device to 50  $\mu$ s after the completion of the sector data transfer.

Note that the host does not need to read the Status register for the first and the last sector to be transferred. If the timing to read the Status register does not meet above condition, normal data transfer operation is not assured guaranteed.


When the host issues the command even if the drive requests the data transfer (DRQ bit is set), or when the host executes resetting, the device correct operation is not guaranteed.

**5.4.3 Commands without data transfer**

Execution of the following commands does not involve data transfer between the host and the device.

- RECABLIBRATE
- SEEK
- READY VERIFY SECTOR(S)
- EXECUTE DEVICE DIAGNOSTIC
- INITIALIZE DEVICE PARAMETERS
- SET FEATURES
- SET MULTIPLE MODE
- SET MAX ADDRESS
- READ NATIVE MAX ADDRESS
- IDLE
- IDLE IMMEDIATE
- STANDBY
- STANDBY IMMEDIATE
- CHECK POWER MODE
- SECURITY ERASE PREPARE
- SECURITY FREEZE LOCK
- FLUSH CACHE

Figure 5.6 shows the protocol for the command execution without data transfer.

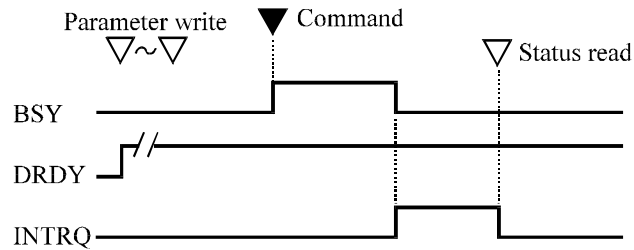

**Figure 5.6 Protocol for the command execution without data transfer**

#### 5.4.4 Other commands

- READ MULTIPLE
- SLEEP
- WRITE MULTIPLE

See the description of each command.

#### 5.4.5 DMA data transfer commands

- READ DMA
- WRITE DMA

Starting the DMA transfer command is the same as the READ SECTOR(S) or WRITE SECTOR(S) command except the point that the host initializes the DMA channel preceding the command issuance.

Interrupt processing for DMA transfer does not issue interruptions in any intermediate sector when a multisector command is executed.

The following outlines the protocol:

The interrupt processing for the DMA transfer differs the following point.

- The interrupt processing for the DMA transfer differs the following point.
  - a) The host writes any parameters to the Features, Sector Count, Sector Number, Cylinder, and Device/Head register.
  - b) The host initializes the DMA channel
  - c) The host writes a command code in the Command register.
  - d) The device sets the BSY bit of the Status register.
  - e) The device asserts the DMARQ signal after completing the preparation of data transfer. The device asserts either the BSY bit or DRQ bit during DMA data transfer.

- f) When the command execution is completed, the device clears both BSY and DRQ bits and asserts the INTRQ signal. Then, the host reads the Status register.
- g) The host resets the DMA channel.

Figure 5.7 shows the correct DMA data transfer protocol.

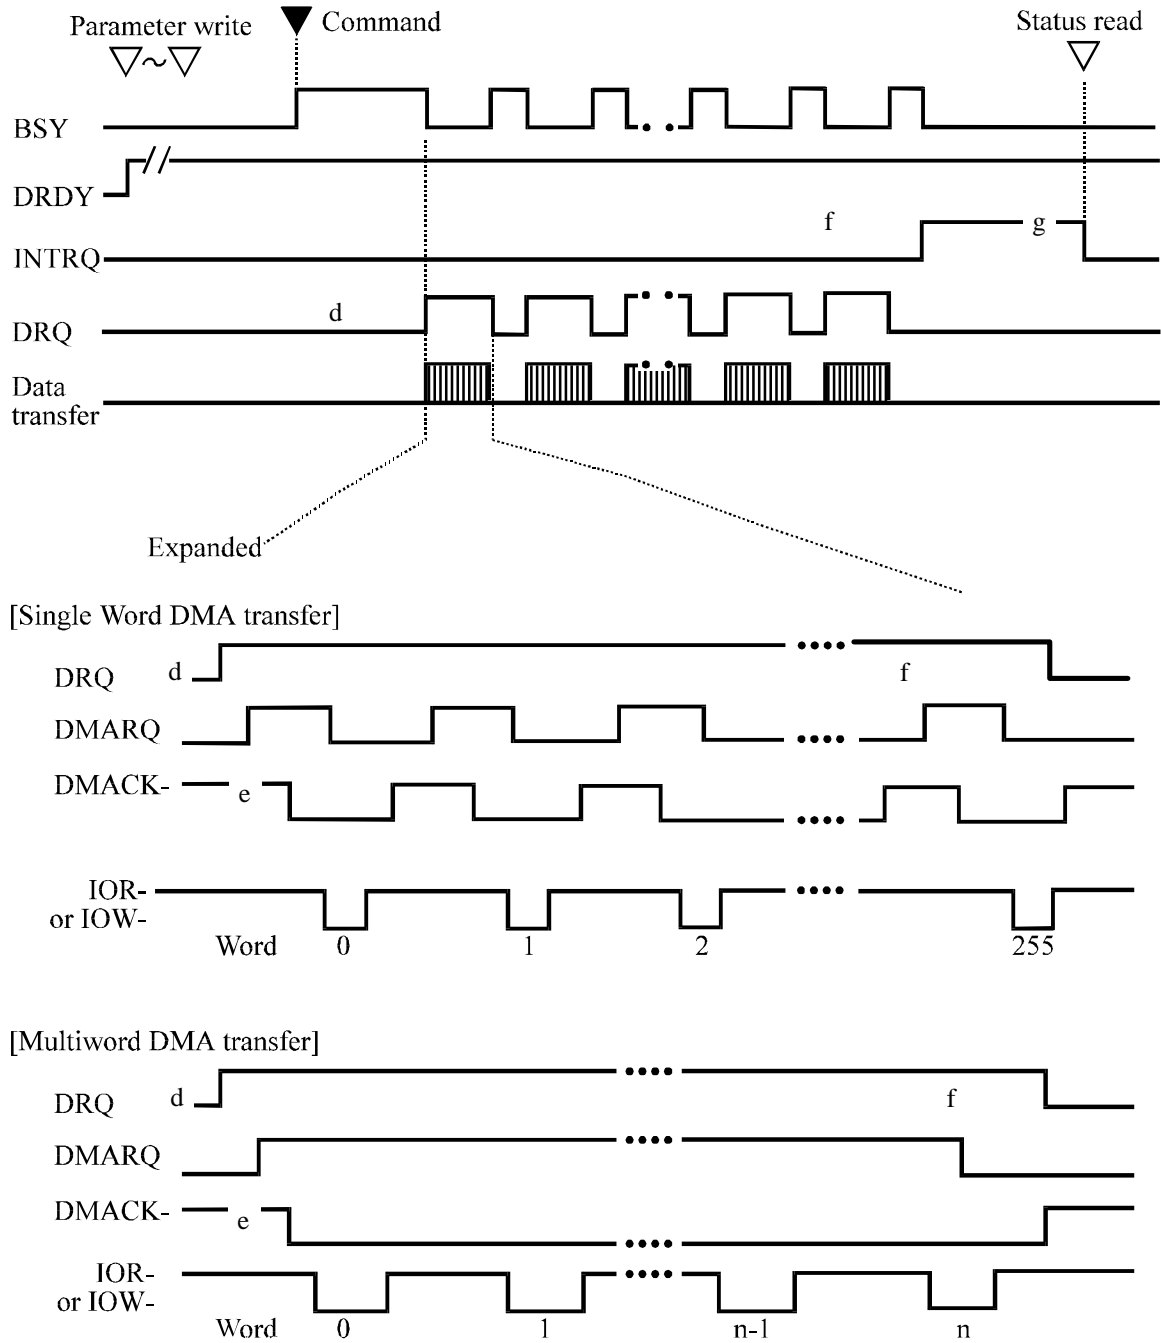


Figure 5.7 Normal DMA data transfer

## 5.5 Ultra DMA Feature Set

### 5.5.1 Overview

Ultra DMA is a data transfer protocol used with the READ DMA and WRITE DMA commands. When this protocol is enabled it shall be used instead of the Multiword DMA protocol when these commands are issued by the host. This protocol applies to the Ultra DMA data burst only. When this protocol is used there are no changes to other elements of the ATA protocol (e.g.: Command Block Register access).

Several signal lines are redefined to provide new functions during an Ultra DMA burst. These lines assume these definitions when 1) an Ultra DMA Mode is selected, and 2) a host issues a READ DMA or a WRITE DMA, command requiring data transfer, and 3) the host asserts DMACK-. These signal lines revert back to the definitions used for non-Ultra DMA transfers upon the negation of DMACK- by the host at the termination of an Ultra DMA burst. All of the control signals are unidirectional. DMARQ and DMACK- retain their standard definitions.

With the Ultra DMA protocol, the control signal (STROBE) that latches data from DD (15:0) is generated by the same agent (either host or device) that drives the data onto the bus. Ownership of DD (15:0) and this data strobe signal are given either to the device during an Ultra DMA data in burst or to the host for an Ultra DMA data out burst.

During an Ultra DMA burst a sender shall always drive data onto the bus, and after a sufficient time to allow for propagation delay, cable settling, and setup time, the sender shall generate a STROBE edge to latch the data. Both edges of STROBE are used for data transfers so that the frequency of STROBE is limited to the same frequency as the data. The highest fundamental frequency on the cable shall be 16.67 million transitions per second or 8.33 MHz (the same as the maximum frequency for PIO Mode 4 and DMA Mode 2).

Words in the IDENTIFY DEVICE data indicate support of the Ultra DMA feature and the Ultra DMA Modes the device is capable of supporting. The Set transfer mode subcommand in the SET FEATURES command shall be used by a host to select the Ultra DMA Mode at which the system operates. The Ultra DMA Mode selected by a host shall be less than or equal to the fastest mode of which the device is capable. Only the Ultra DMA Mode shall be selected at any given time. All timing requirements for a selected Ultra DMA Mode shall be satisfied. Devices supporting Ultra DMA Mode 2 shall also support Ultra DMA Modes 0 and 1. Devices supporting Ultra DMA Mode 1 shall also support Ultra DMA Mode 0.

An Ultra DMA capable device shall retain its previously selected Ultra DMA Mode after executing a Software reset sequence. An Ultra DMA capable device shall clear any previously selected Ultra DMA Mode and revert to its default non-Ultra DMA Modes after executing a Power on or hardware reset.

Both the host and device perform a CRC function during an Ultra DMA burst. At the end of an Ultra DMA burst the host sends the its CRC data to the device. The device compares its CRC data to the data sent from the host. If the two values do not match the device reports an error in the error register at the end of the command. If an error occurs during one or more Ultra DMA bursts for any one command, at the end of the command, the device shall report the first error that occurred.

## 5.5.2 Phases of operation

An Ultra DMA data transfer is accomplished through a series of Ultra DMA data in or data out bursts. Each Ultra DMA burst has three mandatory phases of operation: the initiation phase, the data transfer phase, and the Ultra DMA burst termination phase. In addition, an Ultra DMA burst may be paused during the data transfer phase (see 5.5.3 and 5.5.4 for the detailed protocol descriptions for each of these phases, 5.6.4 defines the specific timing requirements). In the following rules DMARDY- is used in cases that could apply to either DDMARDY- or HDMARDY-, and STROBE is used in cases that could apply to either DSTROBE or HSTROBE. The following are general Ultra DMA rules.

- a) An Ultra DMA burst is defined as the period from an assertion of DMACK- by the host to the subsequent negation of DMACK-.
- b) A recipient shall be prepared to receive at least two data words whenever it enters or resumes an Ultra DMA burst.

### 5.5.2.1 Ultra DMA burst initiation phase

- a) The Ultra DMA burst initiation phase is started by the assertion of DMARQ signal by the device, and is ended when the transmitting side has inverted STROBE signal for transmitting the first data.
- b) The Ultra DMA burst requires the assertion of DMARQ signal by the device.
- c) The host asserts DMACK-signal when it is able to start the requested burst.
- d) The host always asserts DMACK signal after detecting the first assertion of DMARQ signal.
- e) Ultra DMA data in burst

The device starts transmission of the data to DD (15 : 0) when;

- DMACK-signal assertion has been detected,
- STOP signal negation has been detected, or
- HDMARDY-signal assertion has been detected.

- f) Ultra DMA data out burst

The device should not invert the state of this signal in the period from the moment of DMARQ signal assertion or DDMARDY-signal assertion to the moment of inversion of the first STROBE signal.



- g) Ultra DMA data in burst

The device should not invert the state of this signal in the period from the moment of STOP signal negation or HDMARDY-signal assertion to the moment of inversion of the first STROBE signal.

### 5.5.2.2 Data transfer phase

- a) The Data transfer phase is defined as the period from The Ultra DMA burst initiation phase to Ultra DMA burst termination phase.
- b) The receiving side stops the Ultra DMA burst temporarily by negating DMARDY-signal, and then restarts the Ultra DMA burst by asserting again.
- c) The transmitting side stops the Ultra DMA burst temporarily by not-performing inversion of STROBE signal, and then restarts the Ultra DMA burst by restarting the inversion.
- d) When the transmitting side has stopped the inversion of STROBE signal, the receiving side should not output termination request signal immediately.

The receiving side should negate DMARDY signal when no termination request signal has been received from the transmission side, and then should output the termination request signal when a certain wait time has elapsed.

- e) The transmitting side is allowed to send STROBE signal at a transfer speed that is lower than the one in the transferable fastest Ultra DMA mode, but is not allowed to send the STROBE signal at a higher speed than this.

The receiving side should be able to receive the data in the transferable fastest Ultra DMA mode.

### 5.5.2.3 Ultra DMA burst termination phase

- a) The transmitting side or receiving side is allowed to end the Ultra DMA burst.
- b) The Ultra DMA burst termination is not the end of the command execution. When the Ultra DMA burst termination has occurred before the ending of the command, the command should be ended by starting a new Ultra DMA burst, or the host should issue command abort by outputting hard reset or soft reset to the device.
- c) The Ultra DMA burst should be stopped temporarily before the receiving side outputs the ending request.
- d) The host outputs the ending request by asserting STOP signal, and then the device negates DMARQ signal to confirm it.
- e) The device outputs the ending request by negating DMARQ signal, and then the host asserts STOP signal to confirm it.

- f) Once the transmitting side has outputted the ending request, the output state of STROBE signal should not be changed unless the receiving side has confirmed it. Then, if the STROBE signal is not in asserted state, The transmitting side should assert the STROBE signal. However, the assertion of the STROBE signal should not cause the data transfer to occur.
- g) The transmitting side should return the STROBE signal to its asserted state immediately after receiving the ending request from the receiving side.

However, the returning of the STROBE signal to its asserted state should not cause the data transfer to occur and CRC to be perform.

- h) Once the receiving side has outputted the ending request, the negated state of the DMARDY signal should not be changed for the remaining Ultra DMA burst to be performed.
- i) The receiving side should neglect the inversion of the STROBE signal if DMARQ signal has been negated or STOP signal has been asserted.

### 5.5.3 Ultra DMA data in commands

#### 5.5.3.1 Initiating an Ultra DMA data in burst

The following steps shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.1 and 5.6.4.2 for specific timing requirements):

- 1) The host shall keep DMACK- in the negated state before an Ultra DMA burst is initiated.
- 2) The device shall assert DMARQ to initiate an Ultra DMA burst. After assertion of DMARQ the device shall not negate DMARQ until after the first negation of DSTROBE.
- 3) Steps (3), (4) and (5) may occur in any order or at the same time. The host shall assert STOP.
- 4) The host shall negate HDMARDY-.
- 5) The host shall negate CS0-, CS1-, DA2, DA1, and DA0. The host shall keep CS0-, CS1-, DA2, DA1, and DA0 negated until after negating DMACK- at the end of the burst.
- 6) Steps (3), (4) and (5) shall have occurred at least  $t_{ACK}$  before the host asserts DMACK-. The host shall keep DMACK- asserted until the end of an Ultra DMA burst.
- 7) The host shall release DD (15:0) within  $t_{AZ}$  after asserting DMACK-.
- 8) The device may assert DSTROBE  $t_{ZIORDY}$  after the host has asserted DMACK-. Once the device has driven DSTROBE the device shall not release DSTROBE until after the host has negated DMACK- at the end of an Ultra DMA burst.

- 9) The host shall negate STOP and assert HDMARDY- within  $t_{ENV}$  after asserting DMACK-. After negating STOP and asserting HDMARDY-, the host shall not change the state of either signal until after receiving the first transition of DSTROBE from the device (i.e., after the first data word has been received).
- 10) The device shall drive DD (15:0) no sooner than  $t_{ZAD}$  after the host has asserted DMACK-, negated STOP, and asserted HDMARDY-.
- 11) The device shall drive the first word of the data transfer onto DD (15:0). This step may occur when the device first drives DD (15:0) in step (10).
- 12) To transfer the first word of data the device shall negate DSTROBE within  $t_{FS}$  after the host has negated STOP and asserted HDMARDY-. The device shall negate DSTROBE no sooner than  $t_{DVS}$  after driving the first word of data onto DD (15:0).

### 5.5.3.2 The data in transfer

The following steps shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.3 and 5.6.4.2):

- 1) The device shall drive a data word onto DD (15:0).
- 2) The device shall generate a DSTROBE edge to latch the new word no sooner than  $t_{DVS}$  after changing the state of DD (15:0). The device shall generate a DSTROBE edge no more frequently than  $t_{CYC}$  for the selected Ultra DMA Mode. The device shall not generate two rising or two falling DSTROBE edges more frequently than  $2t_{CYC}$  for the selected Ultra DMA mode.
- 3) The device shall not change the state of DD (15:0) until at least  $t_{DVH}$  after generating a DSTROBE edge to latch the data.
- 4) The device shall repeat steps (1), (2) and (3) until the data transfer is complete or an Ultra DMA burst is paused, whichever occurs first.

### 5.5.3.3 Pausing an Ultra DMA data in burst

The following steps shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.4 and 5.6.4.2 for specific timing requirements).

- a) Device pausing an Ultra DMA data in burst
  - 1) The device shall not pause an Ultra DMA burst until at least one data word of an Ultra DMA burst has been transferred.
  - 2) The device shall pause an Ultra DMA burst by not generating DSTROBE edges.

NOTE - The host shall not immediately assert STOP to initiate Ultra DMA burst termination when the device stops generating STROBE edges. If the device does not negate DMARQ, in order to initiate ULTRA DMA burst termination, the host shall negate HDMARDY- and wait  $t_{RP}$  before asserting STOP.

- 3) The device shall resume an Ultra DMA burst by generating a DSTROBE edge.
- b) Host pausing an Ultra DMA data in burst
  - 1) The host shall not pause an Ultra DMA burst until at least one data word of an Ultra DMA burst has been transferred.
  - 2) The host shall pause an Ultra DMA burst by negating HDMARDY-.
  - 3) The device shall stop generating DSTROBE edges within  $t_{RFS}$  of the host negating HDMARDY-.
  - 4) If the host negates HDMARDY- within  $t_{SR}$  after the device has generated a DSTROBE edge, then the host shall be prepared to receive zero or one additional data words. If the host negates HDMARDY- greater than  $t_{SR}$  after the device has generated a DSTROBE edge, then the host shall be prepared to receive zero, one or two additional data words. The additional data words are a result of cable round trip delay and  $t_{RFS}$  timing for the device.
  - 5) The host shall resume an Ultra DMA burst by asserting HDMARDY-.

#### 5.5.3.4 Terminating an Ultra DMA data in burst

- a) Device terminating an Ultra DMA data in burst

The following steps shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.5 and 5.6.4.2 for specific timing requirements):

- 1) The device shall initiate termination of an Ultra DMA burst by not generating DSTROBE edges.
- 2) The device shall negate DMARQ no sooner than  $t_{SS}$  after generating the last DSTROBE edge. The device shall not assert DMARQ again until after the Ultra DMA burst is terminated.
- 3) The device shall release DD (15:0) no later than  $t_{AZ}$  after negating DMARQ.
- 4) The host shall assert STOP within  $t_{LI}$  after the device has negated DMARQ. The host shall not negate STOP again until after the Ultra DMA burst is terminated.
- 5) The host shall negate HDMARDY- within  $t_{LI}$  after the device has negated DMARQ. The host shall continue to negate HDMARDY- until the Ultra DMA burst is terminated. Steps (4) and (5) may occur at the same time.
- 6) The host shall drive DD (15:0) no sooner than  $t_{ZAH}$  after the device has negated DMARQ. For this step, the host may first drive DD (15:0) with the result of its CRC calculation (see 5.5.5):

- 7) If DSTROBE is negated, the device shall assert DSTROBE within  $t_{LI}$  after the host has asserted STOP. No data shall be transferred during this assertion. The host shall ignore this transition on DSTROBE. DSTROBE shall remain asserted until the Ultra DMA burst is terminated.
  - 8) If the host has not placed the result of its CRC calculation on DD (15:0) since first driving DD (15:0) during (6), the host shall place the result of its CRC calculation on DD (15:0) (see 5.5.5).
  - 9) The host shall negate DMACK- no sooner than  $t_{MLI}$  after the device has asserted DSTROBE and negated DMARQ and the host has asserted STOP and negated HDMARDY-, and no sooner than  $t_{DVS}$  after the host places the result of its CRC calculation on DD (15:0).
  - 10) The device shall latch the host's CRC data from DD (15:0) on the negating edge of DMACK-.
  - 11) The device shall compare the CRC data received from the host with the results of its own CRC calculation. If a miscompare error occurs during one or more Ultra DMA bursts for any one command, at the end of the command the device shall report the first error that occurred (see 5.5.5).
  - 12) The device shall release DSTROBE within  $t_{IORDYZ}$  after the host negates DMACK-.
  - 13) The host shall not negate STOP no assert HDMARDY- until at least  $t_{ACK}$  after negating DMACK-.
  - 14) The host shall not assert DIOR-, CS0-, CS1-, DA2, DA1, or DA0 until at least  $t_{ACK}$  after negating DMACK.
- b) Host terminating an Ultra DMA data in burst

The following steps shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.6 and 5.6.4.2 for specific timing requirements):

- 1) The host shall not initiate Ultra DMA burst termination until at least one data word of an Ultra DMA burst has been transferred.
- 2) The host shall initiate Ultra DMA burst termination by negating HDMARDY-. The host shall continue to negate HDMARDY- until the Ultra DMA burst is terminated.
- 3) The device shall stop generating DSTROBE edges within  $t_{RFS}$  of the host negating HDMARDY-.
- 4) If the host negates HDMARDY- within  $t_{SR}$  after the device has generated a DSTROBE edge, then the host shall be prepared to receive zero or one additional data words. If the host negates HDMARDY- greater than  $t_{SR}$  after the device has generated a DSTROBE edge, then the host shall be prepared to receive zero, one or two additional data words. The additional data words are a result of cable round trip delay and  $t_{RFS}$  timing for the device.

- 5) The host shall assert STOP no sooner than  $t_{RP}$  after negating HDMARDY-. The host shall not negate STOP again until after the Ultra DMA burst is terminated.
- 6) The device shall negate DMARQ within  $t_{LI}$  after the host has asserted STOP. The device shall not assert DMARQ again until after the Ultra DMA burst is terminated.
- 7) If DSTROBE is negated, the device shall assert DSTROBE within  $t_{LI}$  after the host has asserted STOP. No data shall be transferred during this assertion. The host shall ignore this transition on DSTROBE. DSTROBE shall remain asserted until the Ultra DMA burst is terminated.
- 8) The device shall release DD (15:0) no later than  $t_{AZ}$  after negating DMARQ.
- 9) The host shall drive DD (15:0) no sooner than  $t_{ZAH}$  after the device has negated DMARQ. For this step, the host may first drive DD (15:0) with the result of its CRC calculation (see 5.5.5).
- 10) If the host has not placed the result of its CRC calculation on DD (15:0) since first driving DD (15:0) during (9), the host shall place the result of its CRC calculation on DD (15:0) (see 5.5.5).
- 11) The host shall negate DMACK- no sooner than  $t_{MLI}$  after the device has asserted DSTROBE and negated DMARQ and the host has asserted STOP and negated HDMARDY-, and no sooner than  $t_{DVS}$  after the host places the result of its CRC calculation on DD (15:0).
- 12) The device shall latch the host's CRC data from DD (15:0) on the negating edge of DMACK-.
- 13) The device shall compare the CRC data received from the host with the results of its own CRC calculation. If a miscompare error occurs during one or more Ultra DMA burst for any one command, at the end of the command, the device shall report the first error that occurred (see 5.5.5).
- 14) The device shall release DSTROBE within  $t_{IORDYZ}$  after the host negates DMACK-.
- 15) The host shall neither negate STOP nor assert HDMARDY- until at least  $t_{ACK}$  after the host has negated DMACK-.
- 16) The host shall not assert DIOR-, CS0-, CS1-, DA2, DA1, or DA0 until at least  $t_{ACK}$  after negating DMACK.

## 5.5.4 Ultra DMA data out commands

### 5.5.4.1 Initiating an Ultra DMA data out burst

The following steps shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.7 and 5.6.4.2 for specific timing requirements):

- 1) The host shall keep DMACK- in the negated state before an Ultra DMA burst is initiated.
- 2) The device shall assert DMARQ to initiate an Ultra DMA burst.
- 3) Steps (3), (4), and (5) may occur in any order or at the same time. The host shall assert STOP.
- 4) The host shall assert HSTROBE.
- 5) The host shall negate CS0-, CS1-, DA2, DA1, and DA0. The host shall keep CS0-, CS1-, DA2, DA1, and DA0 negated until after negating DMACK- at the end of the burst.
- 6) Steps (3), (4), and (5) shall have occurred at least  $t_{ACK}$  before the host asserts DMACK-. The host shall keep DMACK- asserted until the end of an Ultra DMA burst.
- 7) The device may negate DDMARDY-  $t_{ZIORDY}$  after the host has asserted DMACK-. Once the device has negated DDMARDY-, the device shall not release DDMARDY- until after the host has negated DMACK- at the end of an Ultra DMA burst.
- 8) The host shall negate STOP within  $t_{ENV}$  after asserting DMACK-. The host shall not assert STOP until after the first negation of HSTROBE.
- 9) The device shall assert DDMARDY- within  $t_{LI}$  after the host has negated STOP. After asserting DMARQ and DDMARDY- the device shall not negate either signal until after the first negation of HSTROBE by the host.
- 10) The host shall drive the first word of the data transfer onto DD (15:0). This step may occur any time during Ultra DMA burst initiation.
- 11) To transfer the first word of data: the host shall negate HSTROBE no sooner than  $t_{LI}$  after the device has asserted DDMARDY-. The host shall negate HSTROBE no sooner than  $t_{DVS}$  after the driving the first word of data onto DD (15:0).

### 5.5.4.2 The data out transfer

The following steps shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.8 and 5.6.4.2 for specific timing requirements):

- 1) The host shall drive a data word onto DD (15:0).
- 2) The host shall generate an HSTROBE edge to latch the new word no sooner than  $t_{DVS}$  after changing the state of DD (15:0). The host shall generate an

HSTROBE edge no more frequently than  $t_{cyc}$  for the selected Ultra DMA Mode. The host shall not generate two rising or falling HSTROBE edges more frequently than  $2 t_{cyc}$  for the selected Ultra DMA mode.

- 3) The host shall not change the state of DD (15:0) until at least  $t_{dvh}$  after generating an HSTROBE edge to latch the data.
- 4) The host shall repeat steps (1), (2) and (3) until the data transfer is complete or an Ultra DMA burst is paused, whichever occurs first.

#### 5.5.4.3 Pausing an Ultra DMA data out burst

The following steps shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.9 and 5.6.4.2 for specific timing requirements).

- a) Host pausing an Ultra DMA data out burst
  - 1) The host shall not pause an Ultra DMA burst until at least one data word of an Ultra DMA burst has been transferred.
  - 2) The host shall pause an Ultra DMA burst by not generating an HSTROBE edge.
 

Note: The device shall not immediately negate DMARQ to initiate Ultra DMA burst termination when the host stops generating HSTROBE edges. If the host does not assert STOP, in order to initiate Ultra DMA burst termination, the device shall negate DDMARDY- and wait  $t_{rp}$  before negating DMARQ.
  - 3) The host shall resume an Ultra DMA burst by generating an HSTROBE edge.
- b) Device pausing an Ultra DMA data out burst
  - 1) The device shall not pause an Ultra DMA burst until at least one data word of an Ultra DMA burst has been transferred.
  - 2) The device shall pause an Ultra DMA burst by negating DDMARDY-.
  - 3) The host shall stop generating HSTROBE edges within  $t_{rfs}$  of the device negating DDMARDY-.
  - 4) If the device negates DDMARDY- within  $t_{sr}$  after the host has generated an HSTROBE edge, then the device shall be prepared to receive zero or one additional data words. If the device negates DDMARDY- greater than  $t_{sr}$  after the host has generated an HSTROBE edge, then the device shall be prepared to receive zero, one or two additional data words. The additional data words are a result of cable round trip delay and  $t_{rfs}$  timing for the host.
  - 5) The device shall resume an Ultra DMA burst by asserting DDMARDY-.



#### 5.5.4.4 Terminating an Ultra DMA data out burst

a) Host terminating an Ultra DMA data out burst

The following stops shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.10 and 5.6.4.2 for specific timing requirements):

- 1) The host shall initiate termination of an Ultra DMA burst by not generating HSTROBE edges.
- 2) The host shall assert STOP no sooner than  $t_{ss}$  after it last generated an HSTROBE edge. The host shall not negate STOP again until after the Ultra DMA burst is terminated.
- 3) The device shall negate DMARQ within  $t_{LI}$  after the host asserts STOP. The device shall not assert DMARQ again until after the Ultra DMA burst is terminated.
- 4) The device shall negate DDMARDY- with  $t_{LI}$  after the host has negated STOP. The device shall not assert DDMARDY- again until after the Ultra DMA burst termination is complete.
- 5) If HSTROBE is negated, the host shall assert HSTROBE with  $t_{LI}$  after the device has negated DMARQ. No data shall be transferred during this assertion. The device shall ignore this transition on HSTROBE. HSTROBE shall remain asserted until the Ultra DMA burst is terminated.
- 6) The host shall place the result of its CRC calculation on DD (15:0) (see 5.5.5)
- 7) The host shall negate DMACK- no sooner than  $t_{MLI}$  after the host has asserted HSTROBE and STOP and the device has negated DMARQ and DDMARDY-, and no sooner than  $t_{DVS}$  after placing the result of its CRC calculation on DD (15:0).
- 8) The device shall latch the host's CRC data from DD (15:0) on the negating edge of DMACK-.
- 9) The device shall compare the CRC data received from the host with the results of its own CRC calculation. If a miscompare error occurs during one or more Ultra DMA bursts for any one command, at the end of the command, the device shall report the first error that occurred (see 5.5.5).
- 10) The device shall release DDMARDY- within  $t_{IORDYZ}$  after the host has negated DMACK-.
- 11) The host shall neither negate STOP nor negate HSTROBE until at least  $t_{ACK}$  after negating DMACK-.
- 12) The host shall not assert DIOW-, CS0-, CS1-, DA2, DA1, or DA0 until at least  $t_{ACK}$  after negating DMACK.

## b) Device terminating an Ultra DMA data out burst

The following steps shall occur in the order they are listed unless otherwise specifically allowed (see 5.6.4.11 and 5.6.4.2 for specific timing requirements):

- 1) The device shall not initiate Ultra DMA burst termination until at least one data word of an Ultra DMA burst has been transferred.
- 2) The device shall initiate Ultra DMA burst termination by negating DDMARDY-.
- 3) The host shall stop generating an HSTROBE edges within  $t_{RFS}$  of the device negating DDMARDY-.
- 4) If the device negates DDMARDY- within  $t_{SR}$  after the host has generated an HSTROBE edge, then the device shall be prepared to receive zero or one additional data words. If the device negates DDMARDY- greater than  $t_{SR}$  after the host has generated an HSTROBE edge, then the device shall be prepared to receive zero, one or two additional data words. The additional data words are a result of cable round trip delay and  $t_{RFS}$  timing for the host.
- 5) The device shall negate DMARQ no sooner than  $t_{RP}$  after negating DDMARDY-. The device shall not assert DMARQ again until after the Ultra DMA burst is terminated.
- 6) The host shall assert STOP with  $t_{LI}$  after the device has negated DMARQ. The host shall not negate STOP again until after the Ultra DMA burst is terminated.
- 7) If HSTROBE is negated, the host shall assert HSTROBE with  $t_{LI}$  after the device has negated DMARQ. No data shall be transferred during this assertion. The device shall ignore this transition of HSTROBE. HSTROBE shall remain asserted until the Ultra DMA burst is terminated.
- 8) The host shall place the result of its CRC calculation on DD (15:0) (see 5.5.5).
- 9) The host shall negate DMACK- no sooner than  $t_{MLI}$  after the host has asserted HSTROBE and STOP and the device has negated DMARQ and DDMARDY-, and no sooner than  $t_{DVS}$  after placing the result of its CRC calculation on DD (15:0).
- 10) The device shall latch the host's CRC data from DD (15:0) on the negating edge of DMACK-.
- 11) The device shall compare the CRC data received from the host with the results of its own CRC calculation. If a miscompare error occurs during one or more Ultra DMA bursts for any one command, at the end of the command, the device shall report the first error that occurred (see 5.5.5).
- 12) The device shall release DDMARDY- within  $t_{IORDYZ}$  after the host has negated DMACK-.

- 13) The host shall neither negate STOP nor HSTROBE until at least  $t_{ACK}$  after negating DMACK-.
- 14) The host shall not assert DIOW-, CS0-, CS1-, DA2, DA1, or DA0 until at least  $t_{ACK}$  after negating DMACK.

### 5.5.5 Ultra DMA CRC rules

The following is a list of rules for calculating CRC, determining if a CRC error has occurred during an Ultra DMA burst, and reporting any error that occurs at the end of a command.

- a) Both the host and the device shall have a 16-bit CRC calculation function.
- b) Both the host and the device shall calculate a CRC value for each Ultra DMA burst.
- c) The CRC function in the host and the device shall be initialized with a seed of 4ABAh at the beginning of an Ultra DMA burst before any data is transferred.
- d) For each STROBE transition used for data transfer, both the host and the device shall calculate a new CRC value by applying the CRC polynomial to the current value of their individual CRC functions and the word being transferred. CRC is not calculated for the return of STROBE to the asserted state after the Ultra DMA burst termination request has been acknowledged.
- e) At the end of any Ultra DMA burst the host shall send the results of its CRC calculation function to the device on DD (15:0) with the negation of DMACK-.
- f) The device shall then compare the CRC data from the host with the calculated value in its own CRC calculation function. If the two values do not match, the device shall save the error and report it at the end of the command. A subsequent Ultra DMA burst for the same command that does not have a CRC error shall not clear an error saved from a previous Ultra DMA burst in the same command. If a miscompare error occurs during one or more Ultra DMA bursts for any one command, at the end of the command, the device shall report the first error that occurred.
- g) For READ DMA or WRITE DMA commands: When a CRC error is detected, it shall be reported by setting both ICRC and ABRT (bit 7 and bit 2 in the Error register) to one. ICRC is defined as the "Interface CRC Error" bit. The host shall respond to this error by re-issuing the command.
- h) A host may send extra data words on the last Ultra DMA burst of a data out command. If a device determines that all data has been transferred for a command, the device shall terminate the burst. A device may have already received more data words than were required for the command. These extra words are used by both the host and the device to calculate the CRC, but, on an Ultra DMA data out burst, the extra words shall be discarded by the device.
- i) The CRC generator polynomial is :  $G(X) = X^{16} + X^{12} + X^5 + 1$ .

Note: Since no bit clock is available, the recommended approach for calculating CRC is to use a word clock derived from the bus strobe. The combinational logic shall then be equivalent to shifting sixteen bits serially through the generator polynomial where DD0 is shifted in first and DD15 is shifted in last.

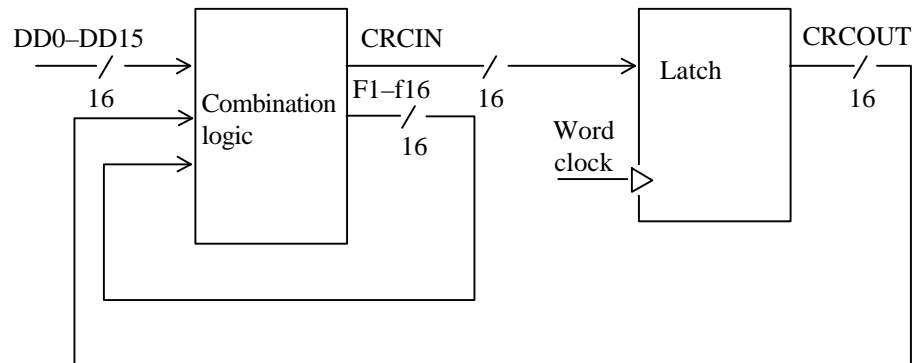


Figure 5.8 An example of generation of parallel CRC

Table 5.16 Parallel generation equation of CRC polynomial

|                                     |  |
|-------------------------------------|--|
| $CRCIN0=f_{16}$                     | $CRCIN8 = f_8 \text{ XOR } f_{13}$                   |
| $CRCIN1=f_{15}$                     | $CRCIN9 = f_7 \text{ XOR } f_{12}$                   |
| $CRCIN2=f_{14}$                     | $CRCIN10 = f_6 \text{ XOR } f_{11}$                  |
| $CRCIN3=f_{13}$                     | $CRCIN11 = f_5 \text{ XOR } f_{10}$                  |
| $CRCIN4=f_{12}$                     | $CRCIN12 = f_4 \text{ XOR } f_9 \text{ XOR } f_{16}$ |
| $CRCIN5=f_{11} \text{ XOR } f$      | $CRCIN13 = f_3 \text{ XOR } f_8 \text{ XOR } f_{15}$ |
| $CRCIN6=f_{10} \text{ XOR } f_{15}$ | $CRCIN14 = f_2 \text{ XOR } f_7 \text{ XOR } f_{14}$ |
| $CRCIN7=f_9 \text{ XOR } f_{14}$    | $CRCIN15 = f_1 \text{ XOR } f_6 \text{ XOR } f_{13}$ |

$$\begin{aligned}
 f_1 &= DD0 \text{ XOR } CRCOUT_{15} & f_9 &= DD8 \text{ XOR } CRCOUT_7 \text{ XOR } f_5 \\
 f_2 &= DD1 \text{ XOR } CRCOUT_{14} & f_{10} &= DD9 \text{ XOR } CRCOUT_6 \text{ XOR } f_6 \\
 f_3 &= DD2 \text{ XOR } CRCOUT_{13} & f_{11} &= DD10 \text{ XOR } CRCOUT_5 \text{ XOR } f_7 \\
 f_4 &= DD3 \text{ XOR } CRCOUT_{12} & f_{12} &= DD11 \text{ XOR } CRCOUT_4 \text{ XOR } f_1 \text{ XOR } f_8 \\
 f_5 &= DD4 \text{ XOR } CRCOUT_{11} \text{ XOR } f_1 & f_{13} &= DD12 \text{ XOR } CRCOUT_3 \text{ XOR } f_2 \text{ XOR } f_9 \\
 f_6 &= DD5 \text{ XOR } CRCOUT_{10} \text{ XOR } f_2 & f_{14} &= DD13 \text{ XOR } CRCOUT_2 \text{ XOR } f_3 \text{ XOR } f_{10} \\
 f_7 &= DD6 \text{ XOR } CRCOUT_9 \text{ XOR } f_3 & f_{15} &= DD14 \text{ XOR } CRCOUT_1 \text{ XOR } f_4 \text{ XOR } f_{11} \\
 f_8 &= DD7 \text{ XOR } CRCOUT_8 \text{ XOR } f_4 & f_{16} &= DD15 \text{ XOR } CRCOUT_0 \text{ XOR } f_5 \text{ XOR } f_{12}
 \end{aligned}$$

DD : Data from bust      f : Feedback  
CRCIN : Output of combination logic (the next CRC)  
CROUT : Result of 16 bit latch (current CRC)


### 5.5.6 Series termination required for Ultra DMA

Series termination resistors are required at both the host and the device for operation in any of the Ultra DMA Modes. The following table describes recommended values for series termination at the host and the device.

**Table 5.17 Recommended series termination for Ultra DMA**

| Signal                 | Host Termination | Device Termination     |
|------------------------|------------------|------------------------|
| DIOR-:HDMARDY-:HSTROBE | 33 $\Omega$      | 82 $\Omega$            |
| DIOW-:STOP             | 33 $\Omega$      | 82 $\Omega$            |
| CS0-, CS1-             | 33 $\Omega$      | 82 $\Omega$            |
| DA0, DA1, DA2          | 33 $\Omega$      | 82 $\Omega$            |
| DMACK-                 | 33 $\Omega$      | 82 $\Omega$            |
| DD15 through DD0       | 33 $\Omega$      | 120 $\Omega$ (100 MHz) |
| DMARQ                  | 82 $\Omega$      | 33 $\Omega$            |
| INTRQ                  | 82 $\Omega$      | 33 $\Omega$            |
| IORDY:DDMARDY-:DSTROBE | 82 $\Omega$      | 22 $\Omega$            |

Note: Only those signals requiring termination are listed in this table. If a signal is not listed, series termination is not required for operation in an Ultra DMA Mode. For signals also requiring a pull-up or pull-down resistor at the host see Figure 5.9.

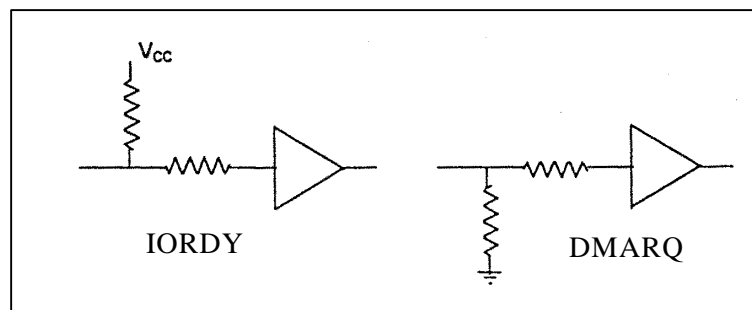

**Figure 5.9 Ultra DMA termination with pull-up or pull-down**


#### Configuration of cable

For the configuration of the cable (common use of primary port and secondary port), DMACK signal should not be used in common. It is not recommended to use DIOR-, DIOW- and IORDY signal in common.

## 5.6 Timing

### 5.6.1 PIO data transfer

Figure 5.10 shows of the data transfer timing between the device and the host system.

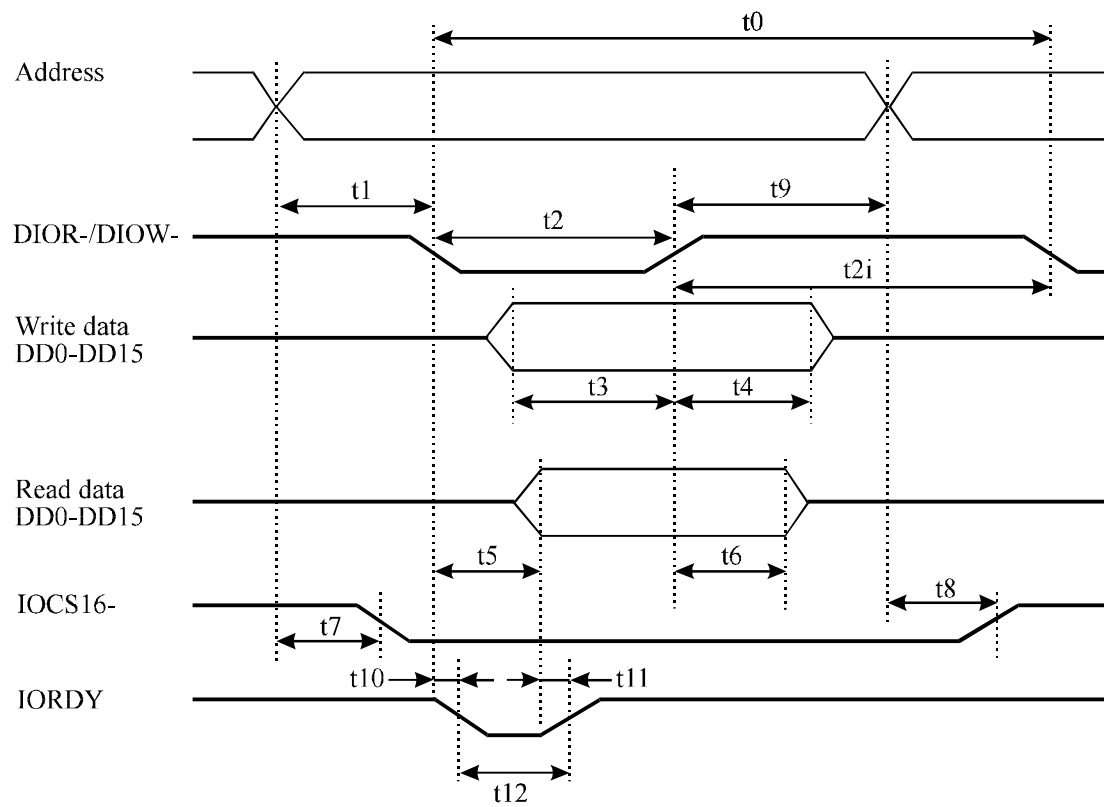


| Symbol   | Timing parameter  | Min. | Max.  | Unit |
|----------|---|------|-------|------|
| $t_0$    | Cycle time  | 120  | —     | ns   |
| $t_1$    | Data register selection setup time for DIOR-/DIOW-          | 25   | —     | ns   |
| $t_2$    | Pulse width of DIOR-/DIOW-                                  | 70   | —     | ns   |
| $t_{21}$ | Recovery time of DIOR-/DIOW-                                | 25   | —     | ns   |
| $t_3$    | Data setup time for DIOW-                                   | 20   | —     | ns   |
| $t_4$    | Data hold time for DIOW-                                    | 10   | —     | ns   |
| $t_5$    | Time from DIOR- assertion to read data available            | —    | 20    | ns   |
| $t_6$    | Data hold time for DIOR-                                    | 5    | —     | ns   |
| $t_7$    | Time from Data register selection to IOCS16- assertion      | —    | 20    | ns   |
| $t_8$    | Time from Data register selection reset to IOCS16- negation | —    | 5     | ns   |
| $t_9$    | Data register selection hold time for DIOR-/DIOW-           | 10   | —     | ns   |
| $t_{10}$ | Time from DIOR-/DIOW- assertion to IORDY "low" level        | —    | 35    | ns   |
| $t_{11}$ | Time from validity of read data to IORDY "high" level       | 0    | —     | ns   |
| $t_{12}$ | Pulse width of IORDY  | —    | 1,250 | ns   |

Figure 5.10 Data transfer timing

### 5.6.2 Multiword DMA data transfer

Figure 5.11 shows the multiword DMA data transfer timing between the device and the host system.

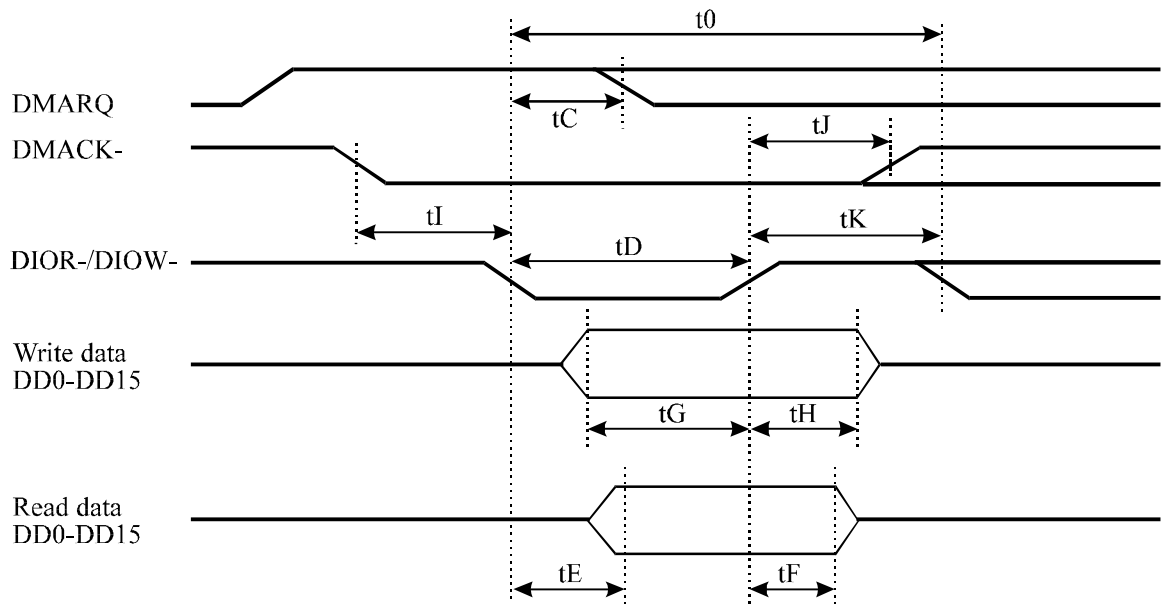

| Symbol | Timing parameter  | Min. | Max. | Unit |
|--------|---|------|------|------|
| $t_0$  | Cycle time  | 120  | —    | ns   |
| $t_C$  | Delay time from DIOR-/DIOW- assertion to DMARQ negation | —    | 35   | ns   |
| $t_D$  | Pulse width of DIOR-/DIOW-                              | 70   | —    | ns   |
| $t_E$  | Data setup time for DIOW-                               | —    | 30   | ns   |
| $t_F$  | Data hold time for DIOW-                                | 5    | —    | ns   |
| $t_G$  | Data setup time for DIOW-                               | 20   | —    | ns   |
| $t_H$  | Data hold time for DIOW-                                | 10   | —    | ns   |
| $t_I$  | DMACK setup time for DIOR-/DIOW-                        | 0    | —    | ns   |
| $t_J$  | DMACK hold time for DIOR-/DIOW-                         | 5    | —    | ns   |
| $t_K$  | Continuous time of high level for DIOR-/DIOW-           | 25   | —    | ns   |

**Figure 5.11 Multiword DMA data transfer timing (mode 2)**




### 5.6.3 Transfer of Ultra DMA data

Figures 5.12 to 5.21 define the timings concerning every phase for the Ultra DMA Burst.

Table 5.18 includes the timing for each Ultra DMA mode.

#### 5.6.3.1 Starting of Ultra DMA data In Burst

The timing for each Ultra DMA mode is included in 5.6.3.2.

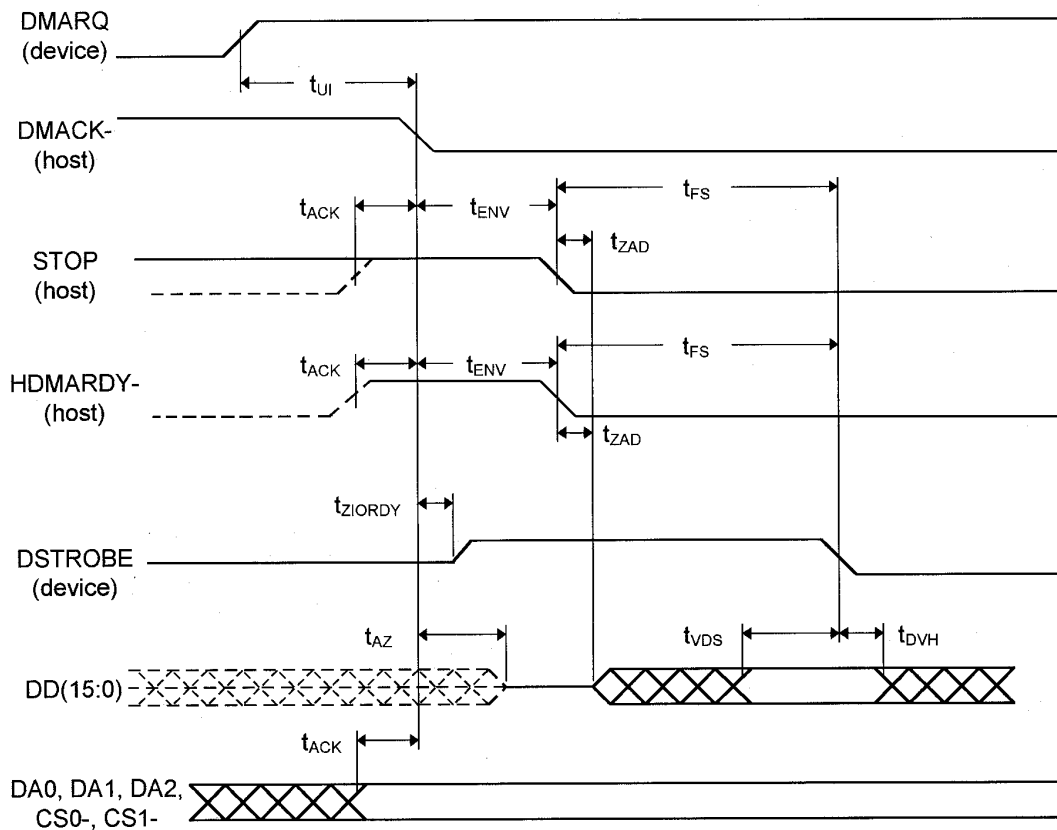

Note : The definitions of STOP, HDMARDY- and DSTROBE signals are valid before the assertion of DMACK signal.

**Figure 5.12 Starting of Ultra DMA data In Burst transfer**

## 5.6.3.2 Ultra DMA data burst timing requirements

Table 5.18 Ultra DMA data burst timing requirements (1 of 2)

| NAME                 | MODE 0<br>(in ns) |     | MODE 1<br>(in ns) |     | MODE 2<br>(in ns) |     | MODE 3<br>(in ns) |     | MODE 4<br>(in ns) |     | COMMENT<br><br>(see Notes 1 and 2)  |
|----------------------|-------------------|-----|-------------------|-----|-------------------|-----|-------------------|-----|-------------------|-----|---|
|                      | MIN               | MAX | MIN               | MAX | MIN               | MAX | MIN               | MAX | MIN               | MAX |   |
| t <sub>2CYCTYP</sub> | 240               |     | 160               |     | 120               |     | 90                |     | 60                |     | Typical sustained average two cycle time  |
| t <sub>CYC</sub>     | 112               |     | 73                |     | 54                |     | 39                |     | 25                |     | Cycle time allowing for asymmetry and clock variations (from STROBE edge to STROBE edge)  |
| t <sub>2CYC</sub>    | 230               |     | 154               |     | 115               |     | 86                |     | 57                |     | Two cycle time allowing for clock variations (from rising edge to next rising edge or from falling edge to next falling edge of STROBE)             |
| t <sub>DS</sub>      | 15                |     | 10                |     | 7                 |     | 7                 |     | 5                 |     | Data setup time (at recipient)<br>(see Note 4)  |
| t <sub>DH</sub>      | 5                 |     | 5                 |     | 5                 |     | 5                 |     | 5                 |     | Data hold time (at recipient)<br>(see Note 4)   |
| t <sub>DVS</sub>     | 70                |     | 48                |     | 30                |     | 20                |     | 6                 |     | Data valid setup time at sender (from data valid until STROBE edge)<br>(see Note 5)   |
| t <sub>DVH</sub>     | 6                 |     | 6                 |     | 6                 |     | 6                 |     | 6                 |     | Data valid hold time at sender (from STROBE edge until data may become invalid) (see Note 5)  |
| t <sub>FS</sub>      | 0                 | 230 | 0                 | 200 | 0                 | 170 | 0                 | 130 | 0                 | 120 | First STROBE time (for device to first negate DSTROBE from STOP during a data in burst)   |
| t <sub>LI</sub>      | 0                 | 150 | 0                 | 150 | 0                 | 150 | 0                 | 100 | 0                 | 100 | Limited interlock time (see Note 3)   |
| t <sub>MLI</sub>     | 20                |     | 20                |     | 20                |     | 20                |     | 20                |     | Interlock time with minimum<br>(see Note 3)   |
| t <sub>UI</sub>      | 0                 |     | 0                 |     | 0                 |     | 0                 |     | 0                 |     | Unlimited interlock time (see Note 3)   |
| t <sub>AZ</sub>      |                   | 10  |                   | 10  |                   | 10  |                   | 10  |                   | 10  | Maximum time allowed for output drivers to release (from asserted or negated)   |
| t <sub>ZAH</sub>     | 20                |     | 20                |     | 20                |     | 20                |     | 20                |     | Minimum delay time required for output  |
| t <sub>ZAD</sub>     | 0                 |     | 0                 |     | 0                 |     | 0                 |     | 0                 |     | Drivers to assert or negate (from released)   |
| t <sub>ENV</sub>     | 20                | 70  | 20                | 70  | 20                | 70  | 20                | 55  | 20                | 55  | Envelope time (from DMACK- to STOP and HDMARDY- during data in burst initiation and from DMACK to STOP during data out burst initiation)            |
| t <sub>SR</sub>      |                   | 50  |                   | 30  |                   | 20  |                   | NA  |                   | NA  | STROBE-to-DMARDY-time (if DMARDY- is negated before this long after STROBE edge, the recipient shall receive no more than one additional data word) |
| t <sub>RFS</sub>     |                   | 75  |                   | 70  |                   | 60  |                   | 60  |                   | 60  | Ready-to-final-STROBE time (no STROBE edges shall be sent this long after negation of DMARDY)   |
| t <sub>RP</sub>      | 160               |     | 125               |     | 100               |     | 100               |     | 100               |     | Ready-to-pause time (that recipient shall wait to pause after negating DMARDY-)   |
| t <sub>IORDYZ</sub>  |                   | 20  |                   | 20  |                   | 20  |                   | 20  |                   | 20  | Maximum time before releasing IORDY   |

Table 5.18 Ultra DMA data burst timing requirements (2 of 2)


| NAME         | MODE 0<br>(in ns) |     | MODE 1<br>(in ns) |     | MODE 2<br>(in ns) |     | MODE 3<br>(in ns) |     | MODE 4<br>(in ns) |     | COMMENT<br><br>(see Notes 1 and 2)   |
|--------------|-------------------|-----|-------------------|-----|-------------------|-----|-------------------|-----|-------------------|-----|--|
|              | MIN               | MAX | MIN               | MAX | MIN               | MAX | MIN               | MAX | MIN               | MAX |  |
| $t_{ZIORDY}$ | 0                 |     | 0                 |     | 0                 |     | 0                 |     | 0                 |     | Minimum time before driving IORDY  |
| $t_{ACK}$    | 20                |     | 20                |     | 20                |     | 20                |     | 20                |     | Setup and hold times for DMACK- (before assertion or negation)                                   |
| $t_{SS}$     | 50                |     | 50                |     | 50                |     | 50                |     | 50                |     | Time from STROBE edge to negation of DMARQ or assertion of STOP (when sender terminates a burst) |

## Notes:

- 1) Unless otherwise specified, timing parameters shall be measured at the connector of the sender or receiver to which the parameter applies (see Note 5 for exceptions). For example, the sender shall stop generating STROBE edges after the negation of DMARDY-. Both STROBE and DMARDY- timing measurements are taken at the connector of the sender.
- 2) All timing measurement switching points (low to high and high to low) shall be taken at 1.5 V.
- 3)  $t_{UL}$ ,  $t_{MLI}$  and  $t_{LI}$  indicate sender-to-recipient or recipient-to-sender interlocks, i.e., one agent (either sender or recipient) is waiting for the other agent to respond with a signal before proceeding.  $t_{U}$  is an unlimited interlock that has no maximum time value.  $t_{MLI}$  is a limited time-out that has a defined minimum.  $t_{L}$  is a limited time-out that has a defined maximum.
- 4) Special cabling shall be required in order to meet data setup ( $t_{S}$ ) and data hold ( $t_{H}$ ) times in modes 3 and 4.
- 5) Timing for  $t_{bVS}$  and  $t_{bVH}$  shall be met for all capacitive loads from 15 to 40 pf where all signals have the same capacitive load value.

### 5.6.3.3 Sustained Ultra DMA data in burst

5.6.3.2 contains the values for the timings for each of the Ultra DMA Modes.

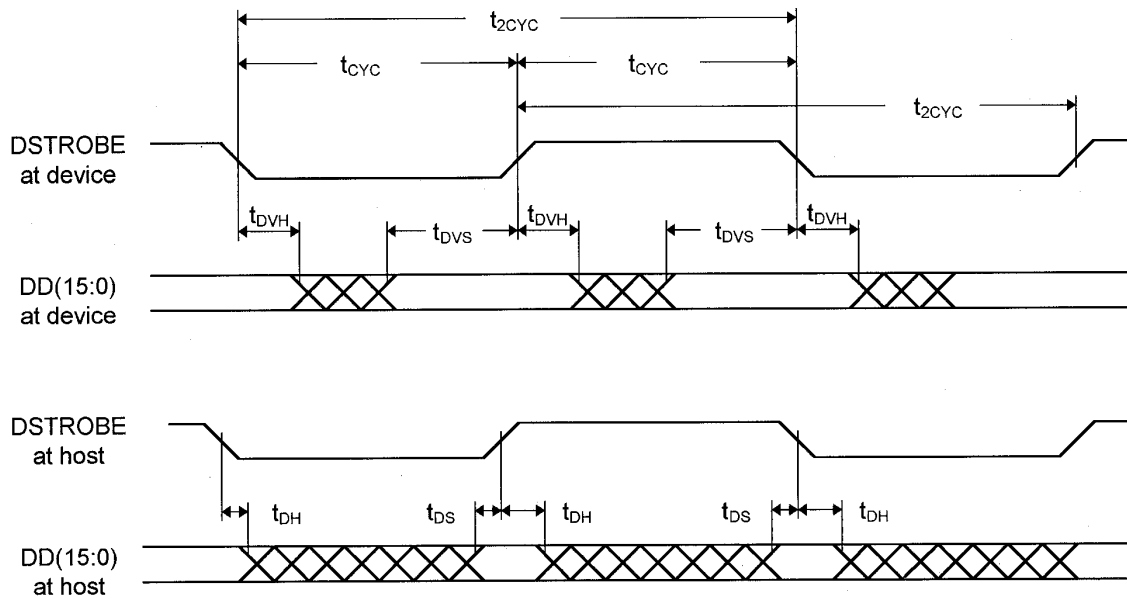


Note: DD (15:0) and DSTROBE are shown at both the host and the device to emphasize that cable setting time as well as cable propagation delay shall not allow the data signals to be considered stable at the host until some time after they are driven by the device.

**Figure 5.13 Sustained Ultra DMA data in burst**

### 5.6.3.4 Host pausing an Ultra DMA data in burst

5.6.3.2 contains the values for the timings for each of the Ultra DMA Modes.

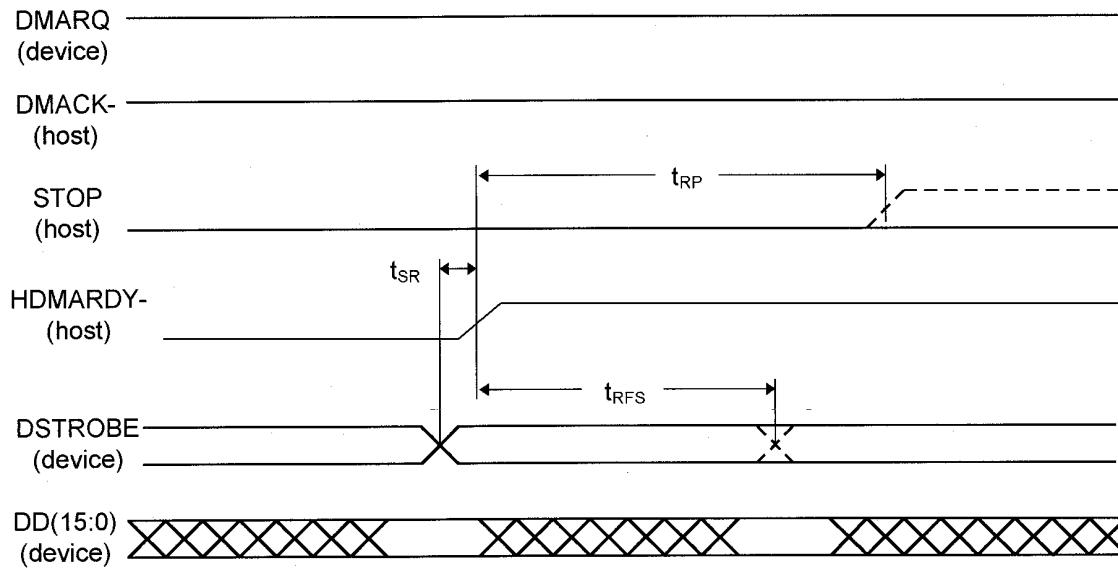


Notes:

- 1) The host may assert *STOP* to request termination of the Ultra DMA burst no sooner than  $t_{RP}$  after *HDMARDY-* is negated.
- 2) If the  $t_{SR}$  timing is not satisfied, the host may receive zero, one or two more data words from the device.

**Figure 5.14 Host pausing an Ultra DMA data in burst**

### 5.6.3.5 Device terminating an Ultra DMA data in burst

5.6.3.2 contains the values for the timings for each of the Ultra DMA Modes.

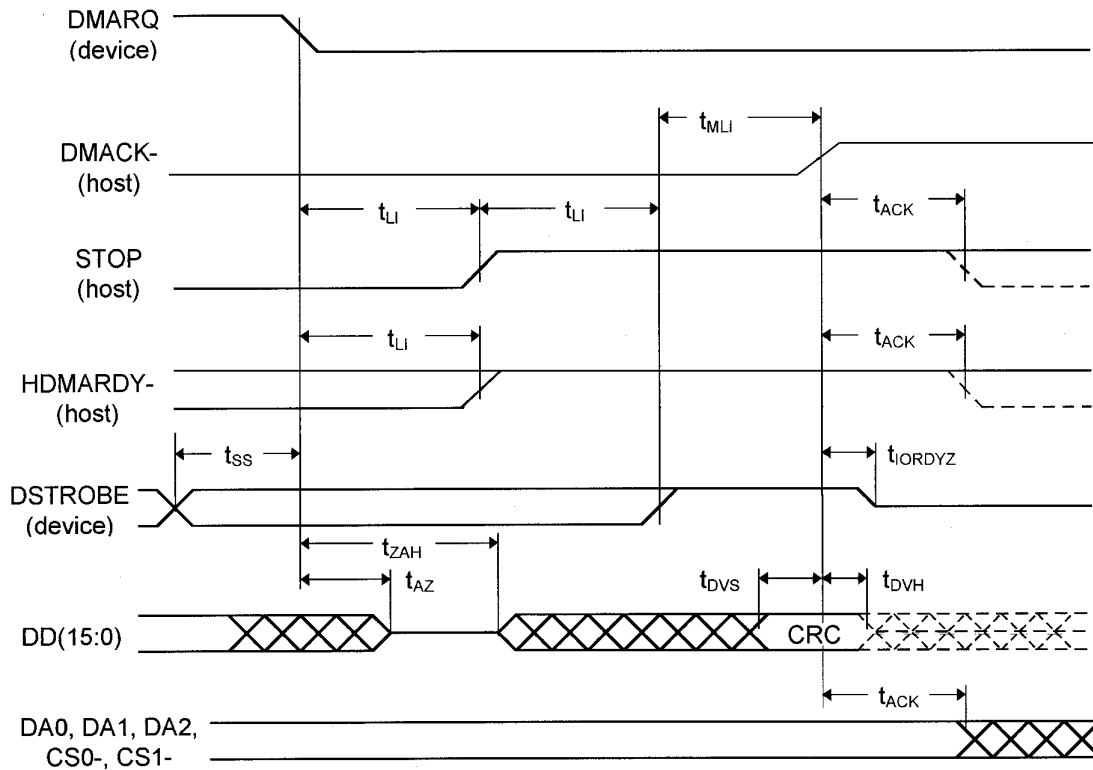


Note: The definitions for the STOP, HDMARDY- and DSTROBE signal lines are no longer in effect after DMARQ and DMACK are negated.

**Figure 5.15 Device terminating an Ultra DMA data in burst**

### 5.6.3.6 Host terminating an Ultra DMA data in burst

5.6.3.2 contains the values for the timings for each of the Ultra DMA Modes.

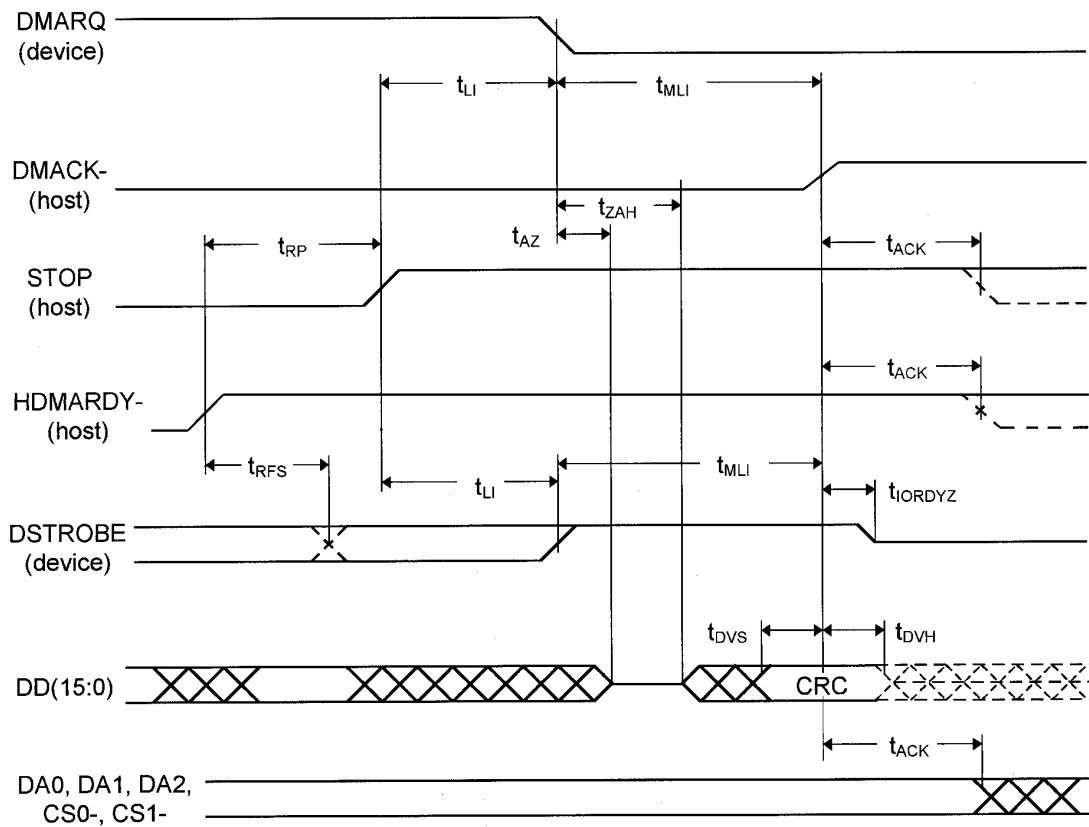


Note: The definitions for the STOP, HDMARDY- and DSTROBE signal lines are no longer in effect after DMARQ and DMACK are negated.

Figure 5.16 Host terminating an Ultra DMA data in burst

### 5.6.3.7 Initiating an Ultra DMA data out burst

5.6.3.2 contains the values for the timings for each of the Ultra DMA Modes.

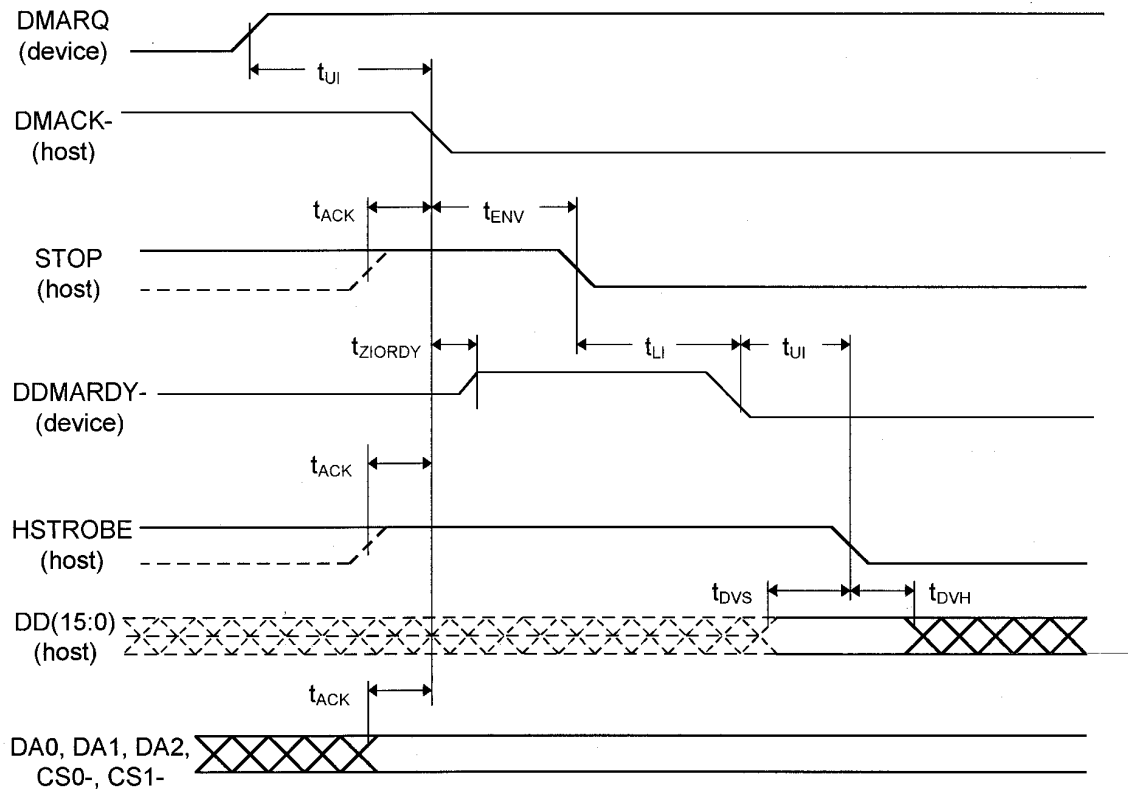


Note: The definitions for the STOP, DDMARDY- and HSTROBE signal lines are not in effect until DMARQ and DMACK are asserted.

**Figure 5.17 Initiating an Ultra DMA data out burst**



### 5.6.3.8 Sustained Ultra DMA data out burst

5.6.3.2 contains the values for the timings for each of the Ultra DMA Modes.

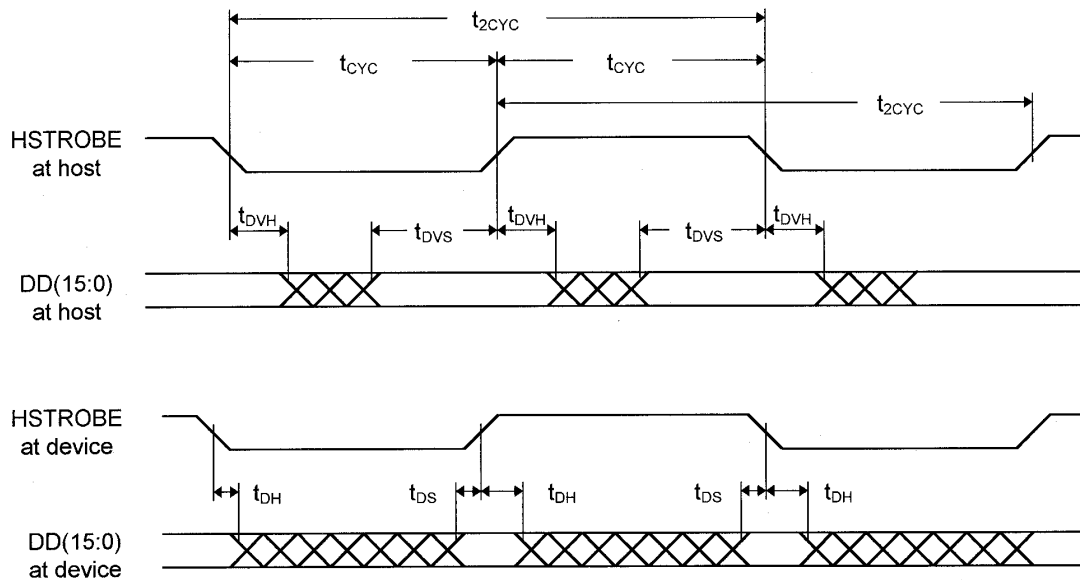


Note: DD (15:0) and HSTROBE signals are shown at both the device and the host to emphasize that cable setting time as well as cable propagation delay shall not allow the data signals to be considered stable at the device until some time after they are driven by the host.

**Figure 5.18 Sustained Ultra DMA data out burst**

### 5.6.3.9 Device pausing an Ultra DMA data out burst

5.6.3.2 contains the values for the timings for each of the Ultra DMA Modes.

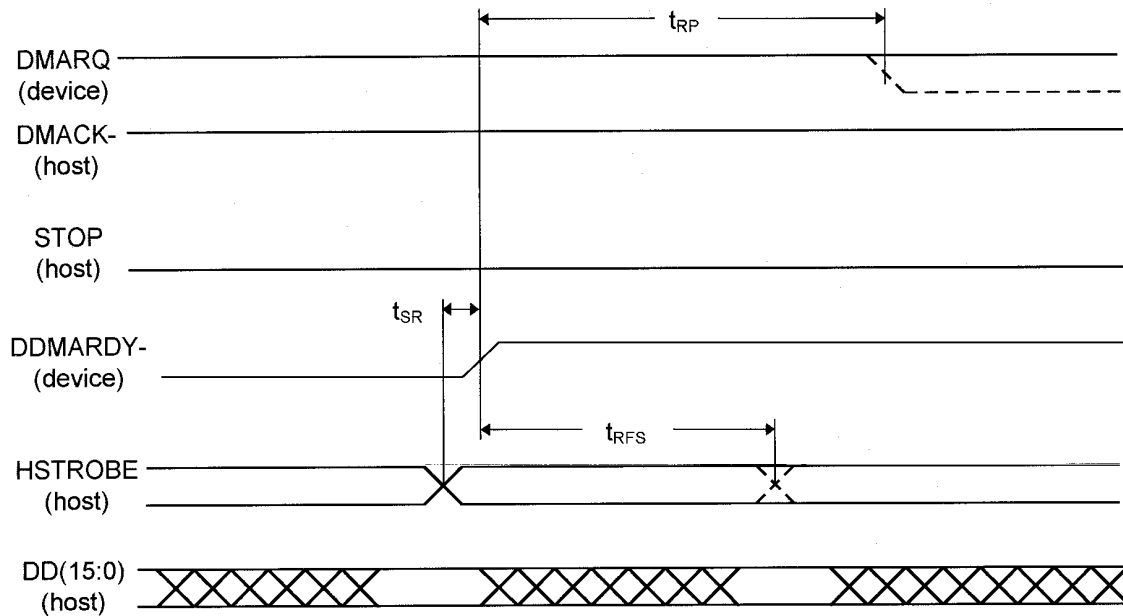


Notes:

- 1) The device may negate DMARQ to request termination of the Ultra DMA burst no sooner than  $t_{RP}$  after DDMARDY- is negated.
- 2) If the  $t_{SR}$  timing is not satisfied, the device may receive zero, one or two more data words from the host.

**Figure 5.19 Device pausing an Ultra DMA data out burst**

### 5.6.3.10 Host terminating an Ultra DMA data out burst

5.6.3.2 contains the values for the timings for each of the Ultra DMA Modes.

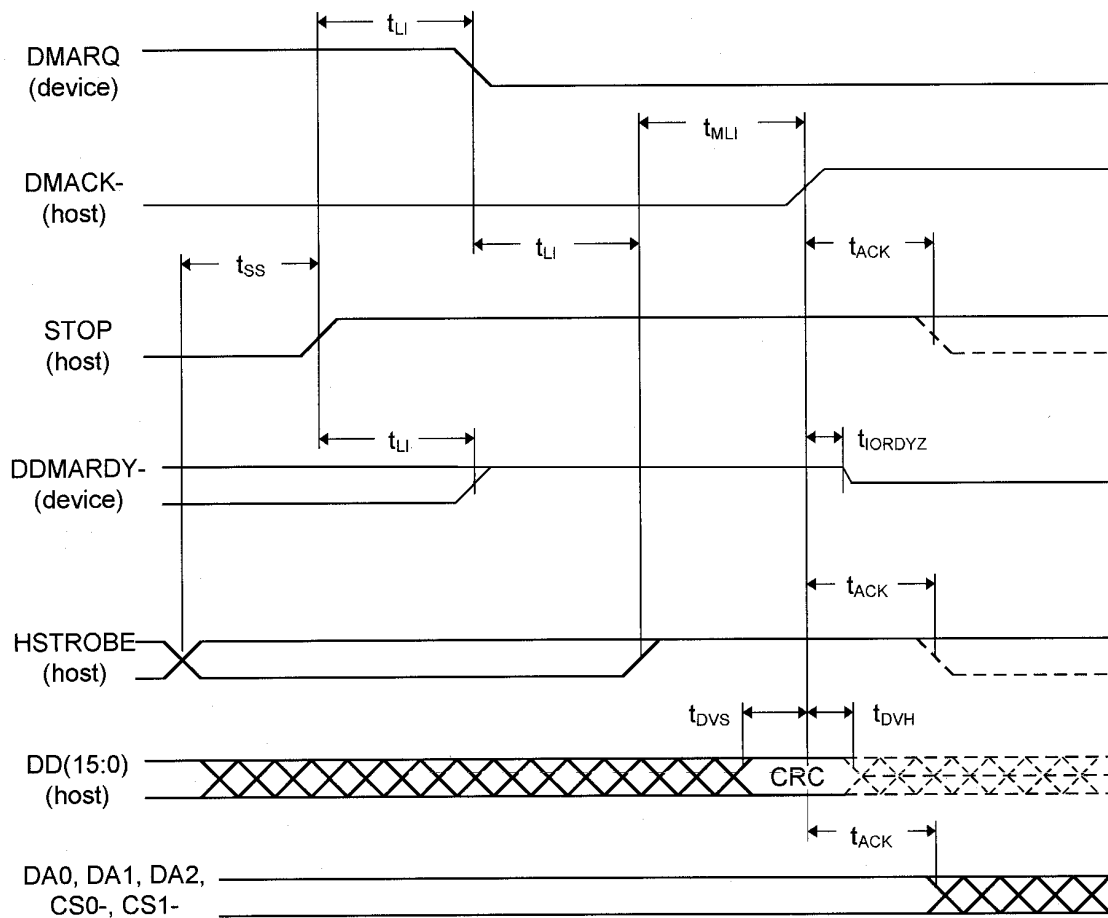


Note: The definitions for the STOP, DDMARDY- and HSTROBE signal lines are no longer in effect after DMARQ and DMACK are negated.

Figure 5.20 Host terminating an Ultra DMA data out burst

### 5.6.3.11 Device terminating an Ultra DMA data in burst

5.6.3.2 contains the values for the timings for each of the Ultra DMA Modes.

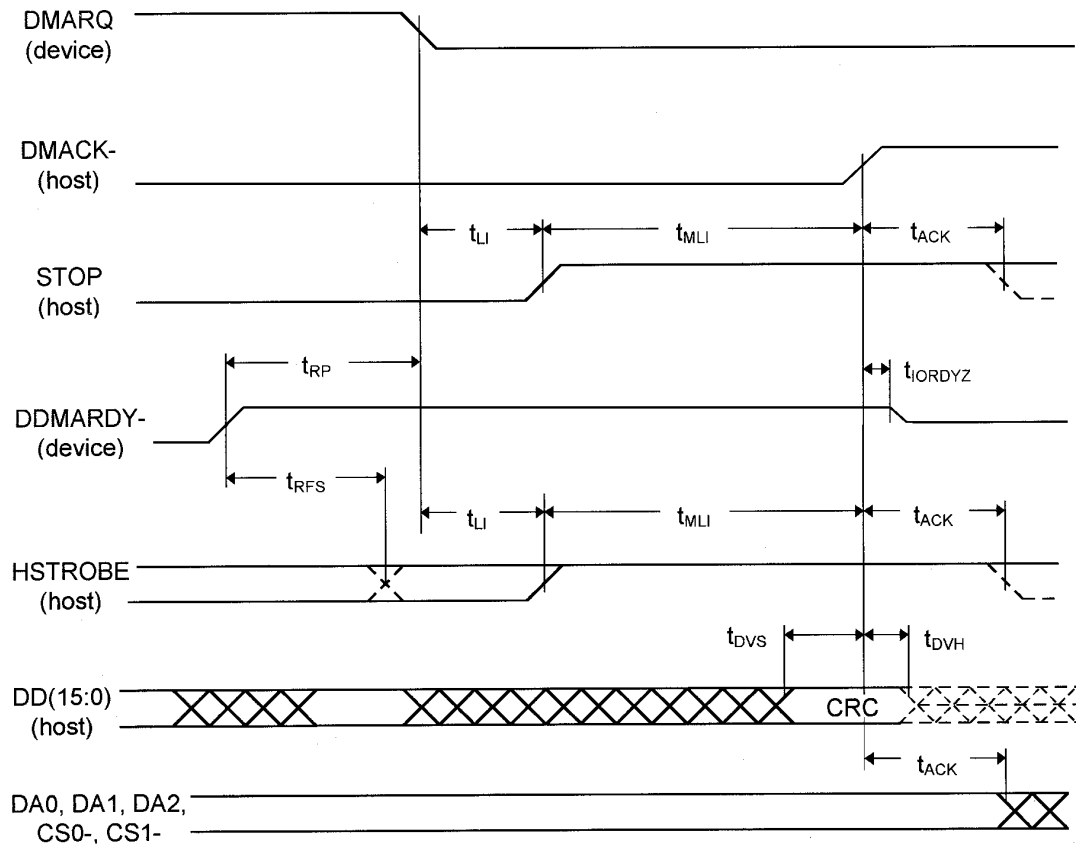


Note: The definitions for the STOP, DDMARDY- and HSTROBE signal lines are no longer in effect after DMARQ and DMACK are negated.

Figure 5.21 Device terminating an Ultra DMA data out burst

### 5.6.4 Power-on and reset


Figure 5.22 shows power-on and reset (hardware and software reset) timing.

(1) Only master device is present

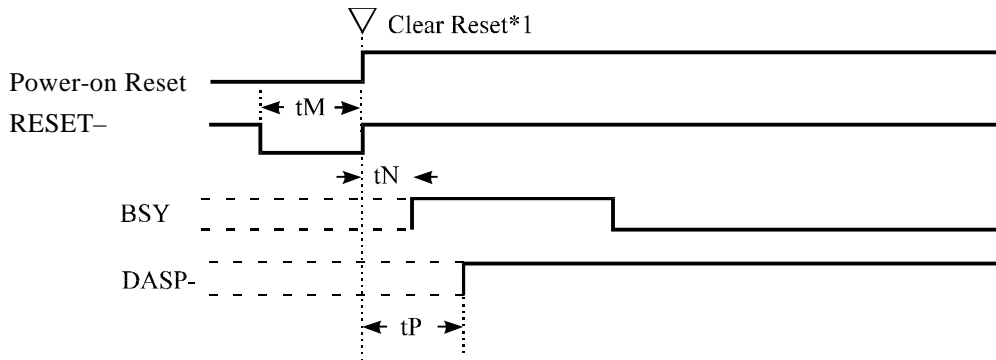

\*1: Reset means including Power-on-Reset, Hardware Reset (RESET-), and Software Reset.

(2) Master and slave devices are present (2-drives configuration)

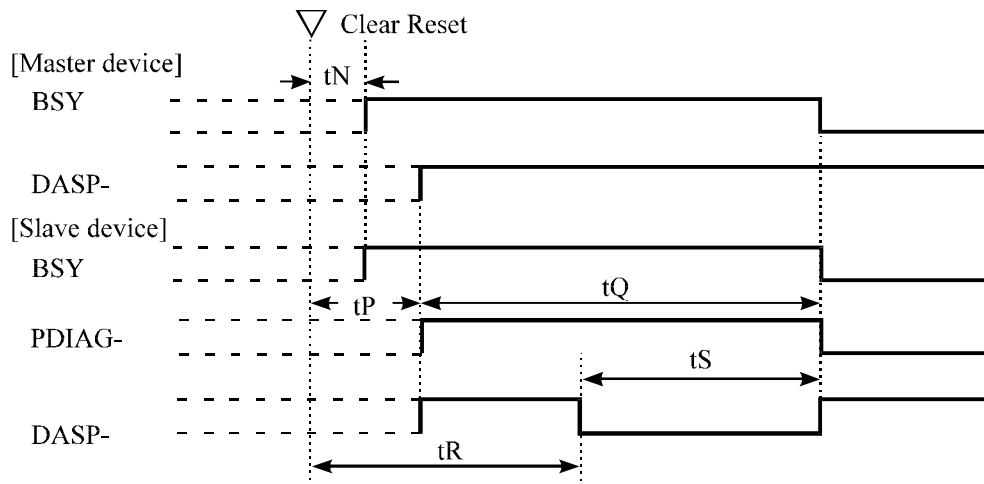

| Symbol | Timing parameter  | Min. | Max. | Unit          |
|--------|---|------|------|---------------|
| $t_M$  | Pulse width of RESET-                                       | 25   | —    | $\mu\text{s}$ |
| $t_N$  | Time from RESET- negation to BSY set                        | —    | 400  | ns            |
| $t_P$  | Time from RESET- negation to DASP- or PDIAG- negation       | —    | 1    | ms            |
| $t_Q$  | Self-diagnostics execution time                             | —    | 15   | s             |
| $t_R$  | Time from RESET- negation to DASP- assertion (slave device) | —    | 400  | ms            |
| $t_S$  | Duration of DASP- assertion                                 | —    | 31   | s             |

Figure 5.22 Power on Reset Timing

# CHAPTER 6 Operations

- 6.1 Device Response to the Reset
- 6.2 Address Translation
- 6.3 Power Save
- 6.4 Defect Management
- 6.5 Read-Ahead Cache
- 6.6 Write Cache

## 6.1 Device Response to the Reset

This section describes how the PDIAG- and DASP- signals responds when the power of the IDD is turned on or the IDD receives a reset or diagnostic command.

### 6.1.1 Response to power-on

After the master device (device 0) releases its own power-on reset state, the master device shall check a DASP- signal for up to 450 ms to confirm presence of a slave device (device 1). The master device recognizes presence of the slave device when it confirms assertion of the DASP- signal. Then, the master device checks a PDIAG- signal to see if the slave device has successfully completed the power-on diagnostics.

If the master device cannot confirm assertion of the DASP- signal within 450 ms, the master device recognizes that no slave device is connected.

After the slave device (device 1) releases its own power-on reset state, the slave device shall report its presence and the result of power-on diagnostics to the master device as described below:

DASP- signal: Asserted within 400 ms.

PDIAG- signal: Negated within 1 ms and asserted within 30 seconds.

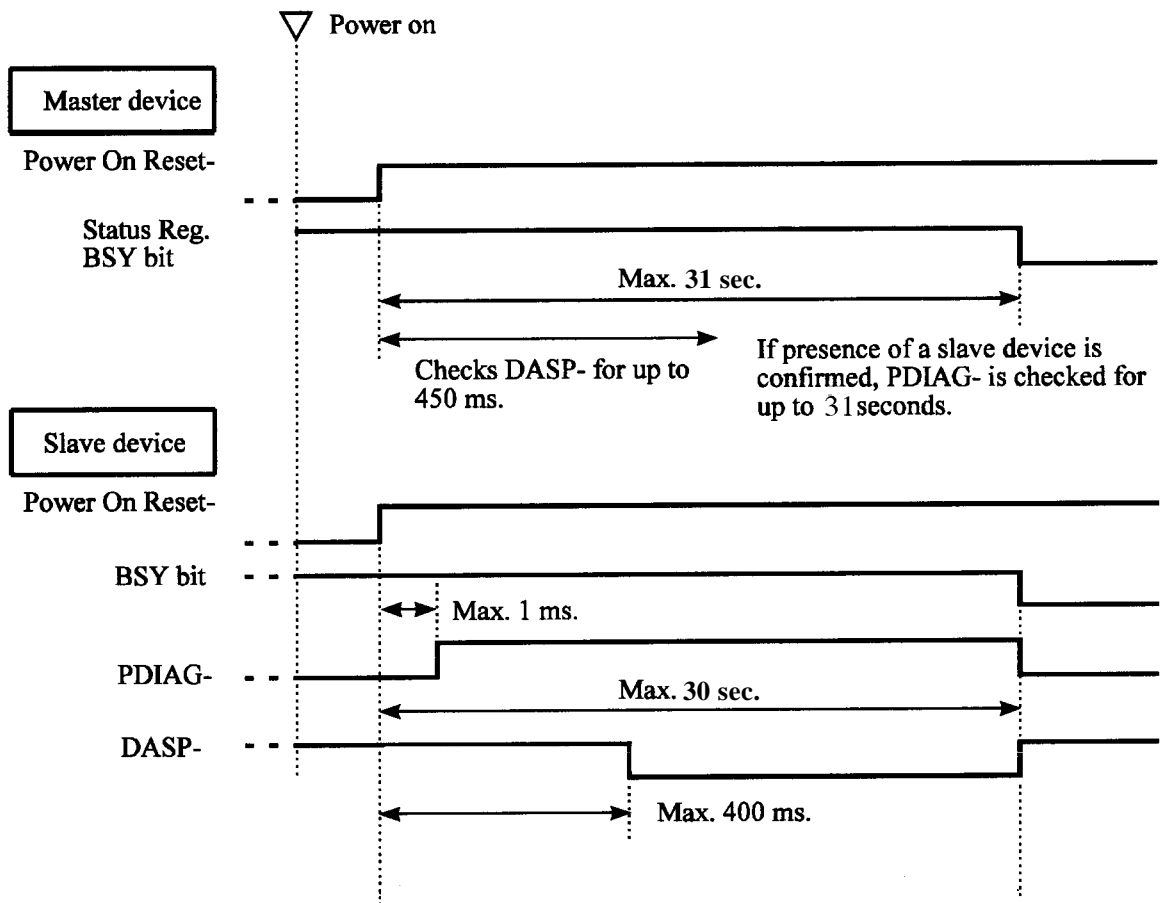


Figure 6.1 Response to power-on



### 6.1.2 Response to hardware reset

Response to RESET- (hardware reset through the interface) is similar to the power-on reset.

Upon receipt of hardware reset, the master device checks a DASP- signal for up to 450 ms to confirm presence of a slave device. The master device recognizes the presence of the slave device when it confirms assertion of the DASP- signal. Then the master device checks a PDIAG- signal to see if the slave device has successfully completed the self-diagnostics.

If the master device cannot confirm assertion of the DASP- signal within 450 ms, the master device recognizes that no slave device is connected.

After the slave device receives the hardware reset, the slave device shall report its presence and the result of the self-diagnostics to the master device as described below:

DASP- signal: Asserted within 400 ms.

PDIAG- signal: Negated within 1 ms and asserted within 30 seconds.

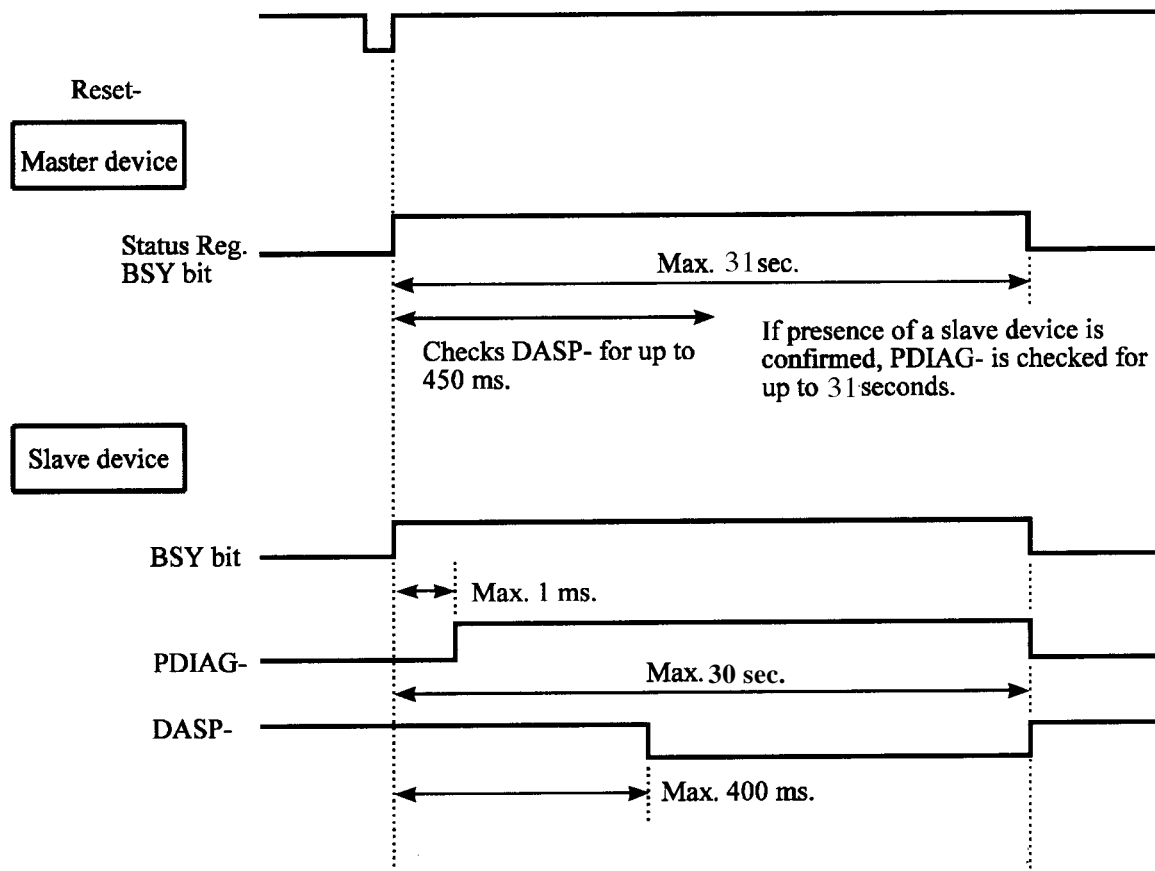


Figure 6.2 Response to hardware reset

### 6.1.3 Response to software reset

The master device does not check the DASP- signal for a software reset. If a slave device is present, the master device checks the PDIAG- signal for up to 15 seconds to see if the slave device has completed the self-diagnosis successfully.

After the slave device receives the software reset, the slave device shall report its presence and the result of the self-diagnostics to the master device as described below:

PDIAG- signal: negated within 1 ms and asserted within 30 seconds

When the IDD is set to a slave device, the IDD asserts the DASP- signal when negating the PDIAG- signal, and negates the DASP- signal when asserting the PDIAG- signal.

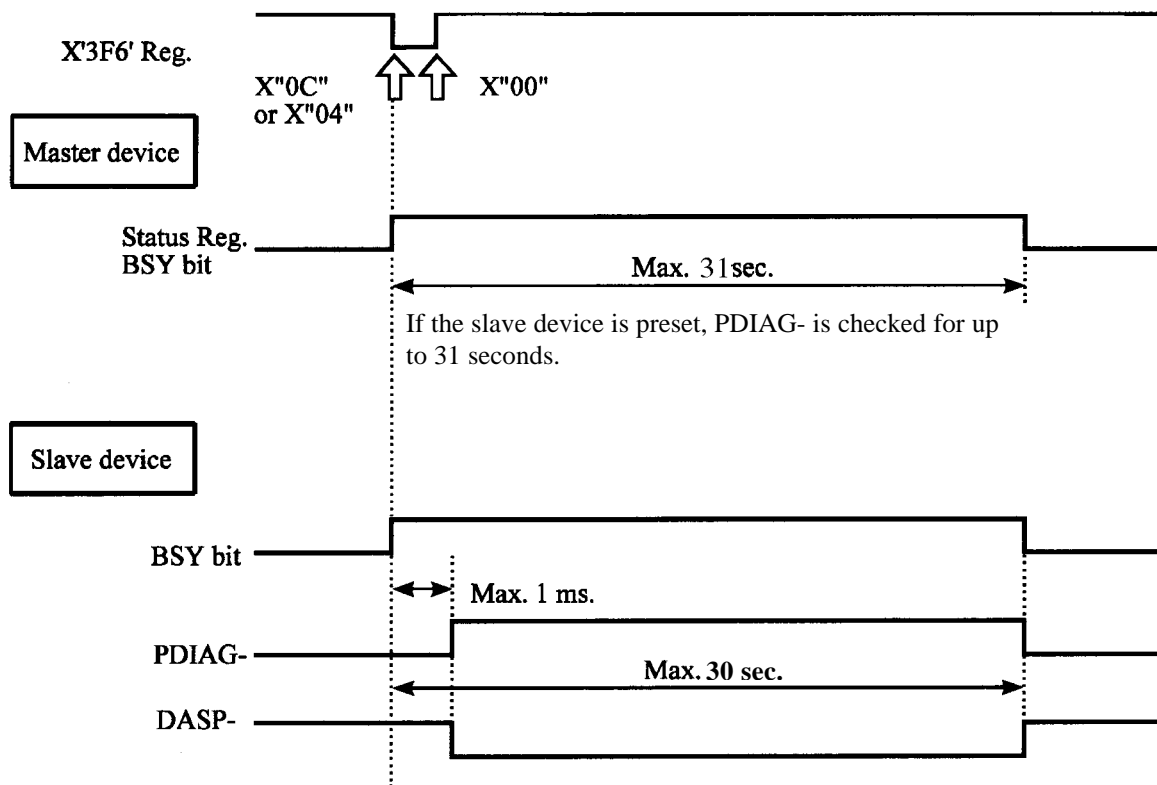


Figure 6.3 Response to software reset

### 6.1.4 Response to diagnostic command

When the master device receives an EXECUTE DEVICE DIAGNOSTIC command and the slave device is present, the master device checks the PDIAG- signal for up to 6 seconds to see if the slave device has completed the self-diagnosis successfully.

The master device does not check the DASP- signal.

After the slave device receives the EXECUTE DEVICE DIAGNOSTIC command, it shall report the result of the self-diagnostics to the master device as described below:

PDIAG- signal: negated within 1 ms and asserted within 5 seconds

When the IDD is set to a slave device, the IDD asserts the DASP- signal when negating the PDIAG- signal, and negates the DASP- signal when asserting the PDIAG- signal.

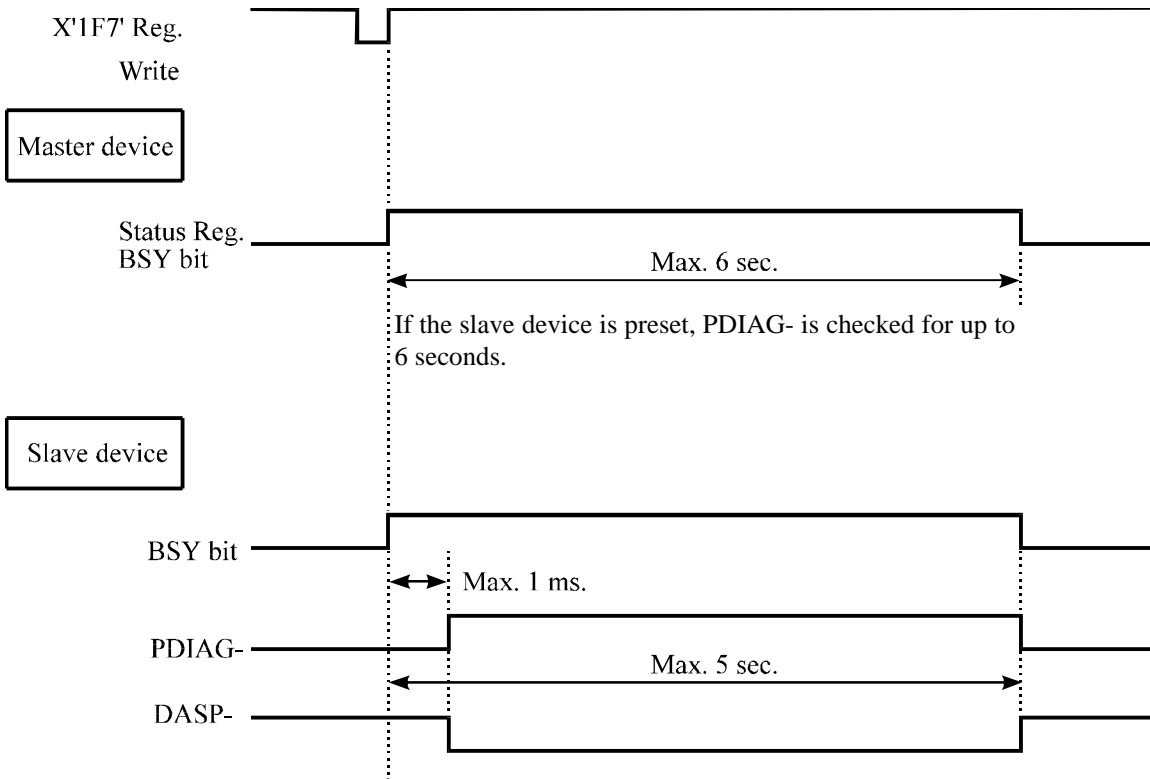


Figure 6.4 Response to diagnostic command

## 6.2 Address Translation

When the IDD receives any command which involves access to the disk medium, the IDD always implements the address translation from the logical address (a host-specified address) to the physical address (logical to physical address translation).

Following subsections explain the CHS translation mode.

### 6.2.1 Default parameters

In the logical to physical address translation, the logical cylinder, head, and sector addresses are translated to the physical cylinder, head, and sector addresses based on the number of heads and the number of sectors per track which are specified with an INITIALIZE DEVICE PARAMETERS command. This is called as the current translation mode.

If the number of heads and the number of sectors are not specified with an INITIALIZE DEVICE PARAMETERS command, the default values listed in Table 6.1 are used. This is called as the default translation mode. The parameters in Table 6.1 are called BIOS specification.

**Table 6.1 Default parameters**

|                         |                         | MHJ2181AT | MHK2120AT | MHK2090AT | MHK2060AT |
|-------------------------|-------------------------|-----------|-----------|-----------|-----------|
| Parameters<br>(logical) | Number of cylinders     | 16,383    | 16,383    | 16,383    | 12,416    |
|                         | Number of heads         | 16        | 16        | 16        | 15        |
|                         | Number of sectors/track | 63        | 63        | 63        | 63        |
| Formatted capacity (MB) |                         | 8,455.20  | 8,455.20  | 8,455.20  | 6,007.35  |

As long as the formatted capacity of the IDD does not exceed the value shown on Table 6.1, the host can freely specify the number of cylinders, heads, and sectors per track.

Generally, the device recognizes the number of heads and sectors per track with the INITIALIZE DEVICE PARAMETER command. However, it cannot recognize the number of cylinders. In other words, there is no way for the device to recognize a host access area on logical cylinders. Thus the host should manage cylinder access to the device.

The host can specify a logical address freely within an area where an address can be specified (within the specified number of cylinders, heads, and sectors per track) in the current translation mode.


The host can read an addressable parameter information from the device by the IDENTIFY DEVICE command (Words 54 to 56).

## 6.2.2 Logical address

### (1) CHS mode

Logical address assignment starts from physical cylinder (PC) 0, physical head (PH) 0, and physical sector (PS) 1 and is assigned by calculating the number of sectors per track that is specified by the INITIALIZE DEVICE PARAMETERS command. If the last sector of a physical track is used, the track is switched and the next logical sector is placed in the initial sector of the subsequent physical track.

Figure 6.5 shows an example of 6 heads configuration. (assuming there is no track skew).

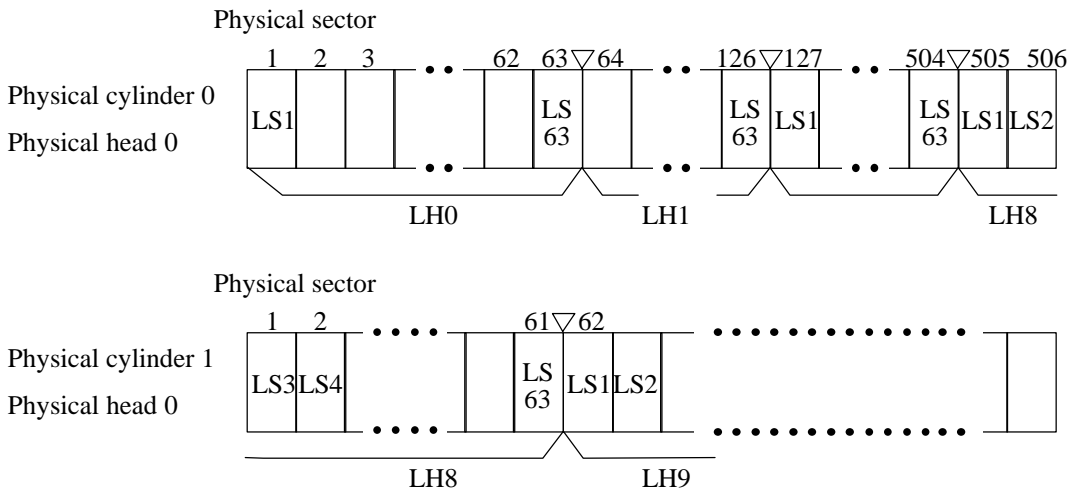

ex: Zone 0 in 6-head device

Physical parameter

- Physical head: 0 to 5
- Physical sector: 1 to 506

Specification of INITIALIZE DEVICE PARAMETERS command


- Logical head: 0 to 15
- Logical sector: 1 to 63

**Figure 6.5 Address translation (example in CHS mode)**

## (2) LBA mode

Logical address assignment in the LBA mode starts from physical cylinder 0, physical head 0, and physical sector 1. If the last sector of a physical track is used, the track is switched and the next LBA is assigned to the initial sector of the subsequent physical track.

Figure 6.6 shows an example of 4 heads configuration (assuming there is no track skew).

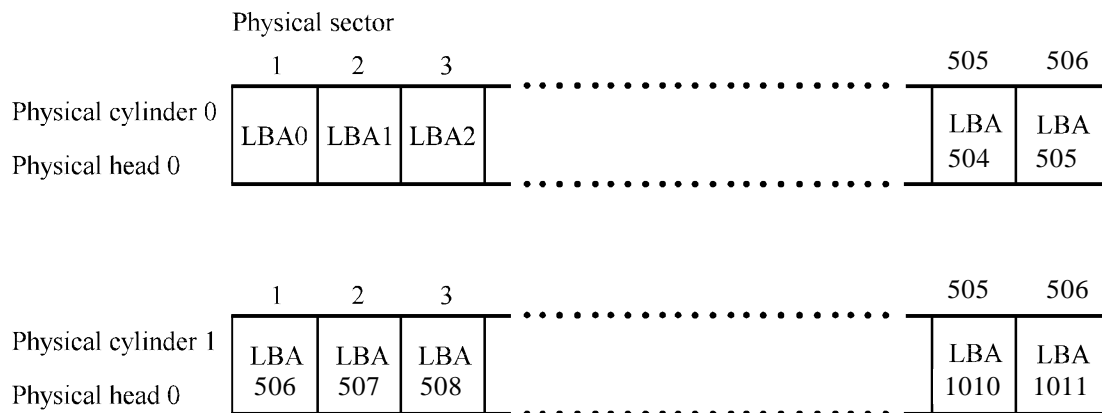

ex: Zone 0 in 6-head device

Physical parameter

- Physical head : 0 to 5
- Physical sector : 1 to 506

**Figure 6.6 Address translation (example in LBA mode)**

## 6.3 Power Save

The host can change the power consumption state of the device by issuing a power command to the device.

### 6.3.1 Power save mode

There are four types of power consumption state of the device including active mode where all circuits are active.

In the power save mode, power supplying to the part of the circuit is turned off. There are three types of power save modes:

- Idle mode
- Standby mode
- Sleep mode

The drive moves from the Active mode to the idle mode by itself.

Regardless of whether the power down is enabled, the device enters the idle mode. The device also enters the idle mode in the same way after power-on sequence is completed.

And, the automatic power-down is executed if no command is coming for 30 min. (default)

(1) Active mode

In this mode, all the electric circuit in the device are active or the device is under seek, read or write operation.

A device enters the active mode under the following conditions:

- A command other than power commands is issued.
- A reset command is received.

(2) Idle mode

In this mode, circuits on the device is set to power save mode.

The device enters the Idle mode under the following conditions:

- After completion of power-on sequence.
- After completion of the command execution other than SLEEP and STANDBY commands.
- After completion of the reset sequence

(3) Standby mode

In this mode, the VCM circuit is turned off and the spindle motor is stopped.

The device can receive commands through the interface. However if a command with disk access is issued, response time to the command under the standby mode takes longer than the active or Idle mode because the access to the disk medium cannot be made immediately.

The drive enters the standby mode under the following conditions:

- A STANDBY or STANDBY IMMEDIATE command is issued in the active or idle mode.
- When automatic power down sequence is enabled, the timer has elapsed.
- A reset is issued in the sleep mode.

When one of following commands is issued, the command is executed normally and the device is still stayed in the standby mode.

- Reset (hardware or software)
- STANDBY command
- STANDBY IMMEDIATE command
- INITIALIZE DEVICE PARAMETERS command
- CHECK POWER MODE command

#### (4) Sleep mode

The power consumption of the drive is minimal in this mode. The drive enters only the standby mode from the sleep mode. The only method to return from the standby mode is to execute a software or hardware reset.

The drive enters the sleep mode under the following condition:

- A SLEEP command is issued.

Issued commands are invalid (ignored) in this mode.

### 6.3.2 Power commands

The following commands are available as power commands.

- IDLE
- IDLE IMMEDIATE
- STANDBY
- STANDBY IMMEDIATE
- SLEEP
- CHECK POWER MODE

## 6.4 Defect Management

Defective sectors of which the medium defect location is registered in the system space are replaced with spare sectors in the formatting at the factory shipment.

All the user space area are formatted at shipment from the factory based on the default parameters listed in Table 6.1.



### 6.4.1 Spare area

Following two types of spare area are provided for every physical head.

- 1) Spare cylinder for sector slip:  
used for alternating defective sectors at formatting in shipment (4 cylinders)
- 2) Spare cylinder for alternative assignment:  
used for automatic alternative assignment at read error occurrence.  
(4 cylinders)

### 6.4.2 Alternating defective sectors


The two alternating methods described below are available:

#### (1) Sector slip processing

A defective sector is not used and is skipped and a logical sector address is assigned to the subsequent normal sector (physically adjacent sector to the defective sector).

When defective sector is present, the sector slip processing is performed in the formatting.

Figure 6.7 shows an example where (physical) sector 5 is defective on head 0 in cylinder 0.

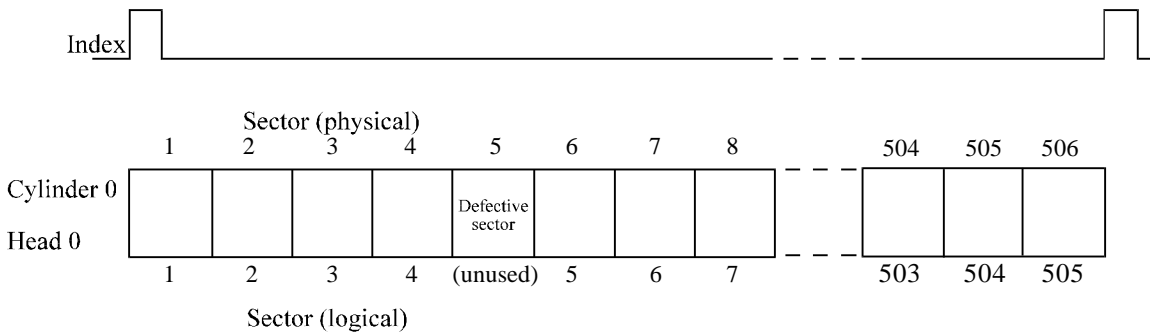

Note: If an access request to physical sector 5 is specified, the device accesses physical sector 6 instead of sector 5.


**Figure 6.7 Sector slip processing**

## (2) Alternate cylinder assignment

A defective sector is assigned to the spare sector in the alternate cylinder.

This processing is performed when the alternate assignment is specified in the FORMAT TRACK command or when the automatic alternate processing is performed at read error occurrence.

Figure 6.8 shows an example where (physical) sector 5 is defective on head 0 in cylinder 0.

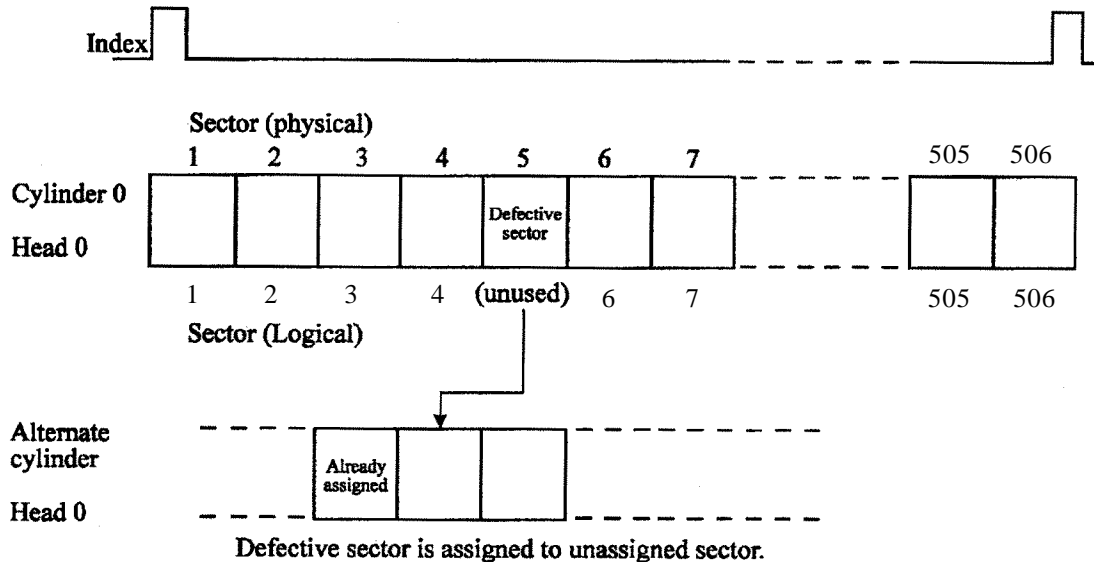

Notes:

- 1) 4 alternate cylinders are provided for each head in zone 14 (inner side).
- 2) When an access request to physical sector 5 is specified, the device accesses the alternated sector in the alternate cylinder instead of sector 5. When an access request to sectors next to sector 5 is specified, the device seeks to cylinder 0, head 0, and continues the processing.

**Figure 6.8 Alternate cylinder assignment**

## (3) Automatic alternate assignment

The device performs the automatic alternate assignment when ECC correction performance is increased during read error retry, a read error is recovered. Before automatic alternate assignment, the device performs rewriting the corrected data to the erred sector and rereading. If no error occurs at rereading, the automatic alternate assignment is not performed.

An unrecoverable write error occurs during write error retry, automatic alternate assignment is performed.


## 6.5 Read-Ahead Cache

After read command which involves read data from the disk medium is completed, the read-ahead cache function reads the subsequent data blocks automatically and stores the data to the data buffer.

When the next command requests to read the read-ahead data, the data can be transferred from the data buffer without accessing the disk medium. The host can thus access data at higher speed.

### 6.5.1 Data buffer configuration

The drive has a 512-KB data buffer. The buffer is used by divided into three parts; for read commands, for write commands, and for MPU work (see Figure 6.9).

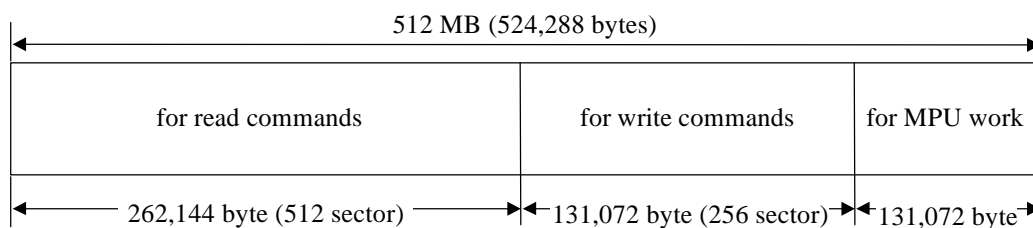

**Figure 6.9 Data buffer configuration**

The read-ahead operation is performed at execution of the READ SECTOR(S), READ MULTIPLE, or READ DMA command, and read-ahead data is stored in the buffer for read commands.

### 6.5.2 Caching operation

Caching operation is performed only at issuance of the following commands. The device transfers data from the data buffer to the host system at issuance of following command if following data exist in the data buffer.

- All sectors to be processed by the command
- A part of data including load sector to be processed by the command

When a part of data to be processed exist in the data buffer, remaining data are read from the medium and are transferred to the host system.

(1) Commands that are object of caching operation

Follow commands are object of caching operation.

- READ SECTOR (S)
- READ MULTIPLE
- READ DMA

When caching operation is disabled by the SET FEATURES command, no caching operation is performed.

(2) Data that are object of caching operation

Follow data are object of caching operation.

- 1) Read-ahead data read from the medium to the data buffer after completion of the command that are object of caching operation.
- 2) Data transferred to the host system once by requesting with the command that are object of caching operation (except for the cache invalid data by some reasons).
- 3) Remaining data in the data buffer (for write command) transferred from the host system by the command that writes data onto the disk medium, such as the WRITE SECTOR (S), WRITE DMA, WRITE MULTIPLE.

Followings are definition of in case that the write data is treated as a cache data. However, since the hit check at issuance of read command is performed to the data buffer for read command priority, caching write data is limited to the case that the hit check is missed at the data buffer for read command.

- When all data requested by the read command are stored in the data buffer for write command (hit all), the device transfers data from the data buffer for write command. At this time, the read-ahead operation to the data subsequent to the requested data is not performed.
- Even if a part of data requested by the read command are stored in the data buffer for write command (hit partially), all data are read from the disk medium without transferring from the data buffer for write command.

(3) Invalidating caching data

Caching data in the data buffer is invalidated in the following case.

- 1) Following command is issued to the same data block as caching data.
  - WRITE SECTOR(S)
  - WRITE DMA
  - WRITE MULTIPLE
- 2) Command other than following commands is issued (all caching data are invalidated)
  - READ SECTOR (S)
  - READ DMA

- READ MULTIPLE
  - WRITE SECTOR(S)
  - WRITE MULTIPLE
  - WRITE VERIFY SECTOR(S)
- 3) Caching operation is inhibited by the SET FEATURES command.
  - 4) Issued command is terminated with an error.
  - 5) Soft reset or hard reset occurs, or power is turned off.
  - 6) The device enters the sleep mode.
  - 7) Under the state that the write data is kept in the data buffer for write command as a caching data, new write command is issued. (write data kept until now are invalidated)

### 6.5.3 Usage of read segment


This subsection explains the usage of the read segment buffer at following cases.

#### 6.5.3.1 Mis-hit (no hit)


A lead block of the read-requested data is not stored in the data buffer. The requested data is read from the disk media.

The read-ahead operation is performed only when the last sector address of the previous read command and the lead sector address of this read command is sequential (see item (2)).


- 1) Sets the host address pointer (HAP) and the disk address pointer (DAP) to the lead of segment.

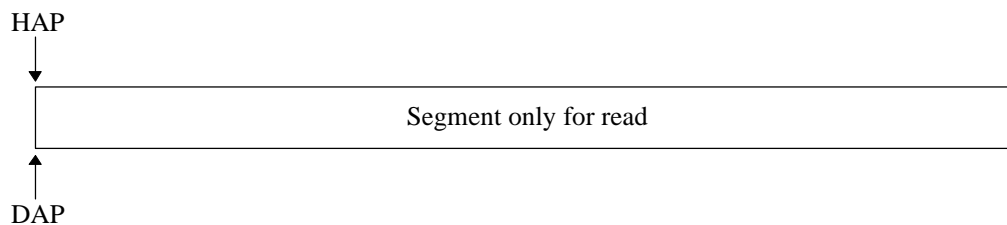


- 2) Transfers the requested data that already read to the host system with reading the requested data from the disk media.

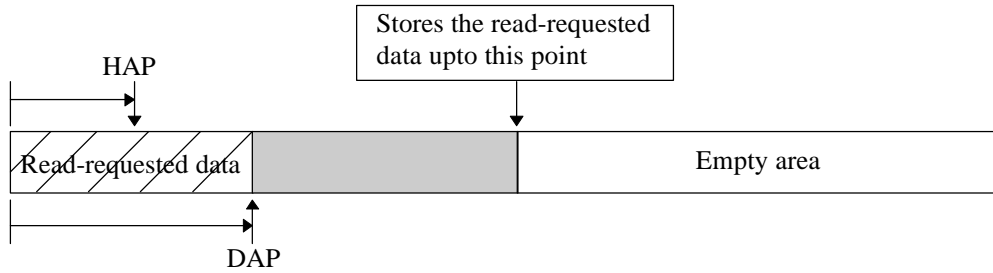

- 3) After reading the requested data and transferring the requested data to the host system had been completed, the disk drive stops command execution without performing the read-ahead operation.

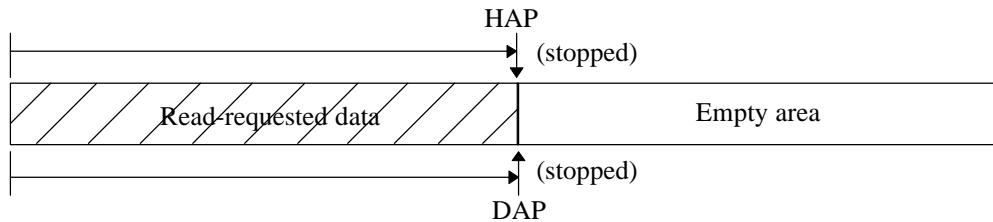

- 4) Following shows the cache enabled data for next read command.

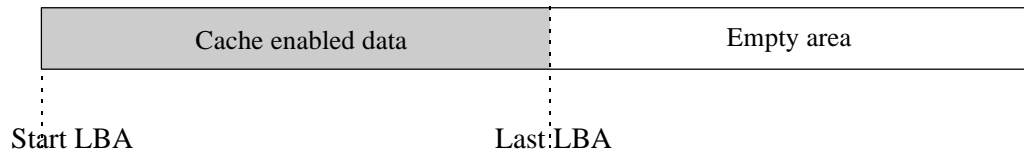


### 6.5.3.2 Sequential read

When the disk drive receives the read command that targets the sequential address to the previous read command, the disk drive starts the read-ahead operation.


- a. Sequential command just after non-sequential command

When the previously executed read command is an non-sequential command and the last sector address of the previous read command is sequential to the lead sector address of the received read command, the disk drive assumes the received command is a sequential command and performs the read-ahead operation after reading the requested data.


- 1) At receiving the sequential read command, the disk drive sets the DAP and HAP to the start address of the segment and reads the requested data from the load of the segment.

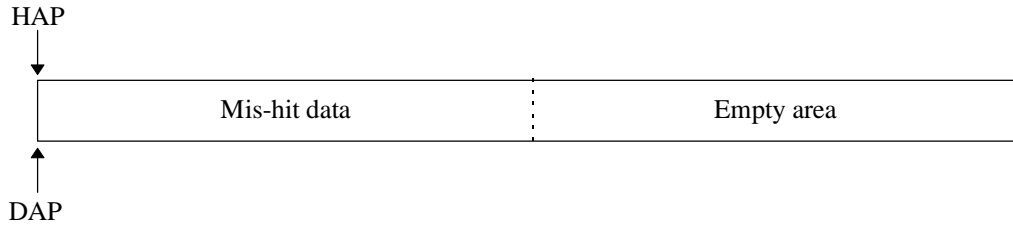


- 2) The disk drive transfers the requested data that is already read to the host system with reading the requested data.

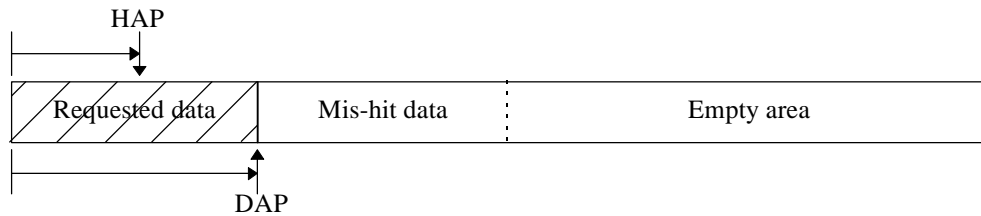

- 3) After completion of the reading and transferring the requested data to the host system, the disk drive performs the read-ahead operation continuously.

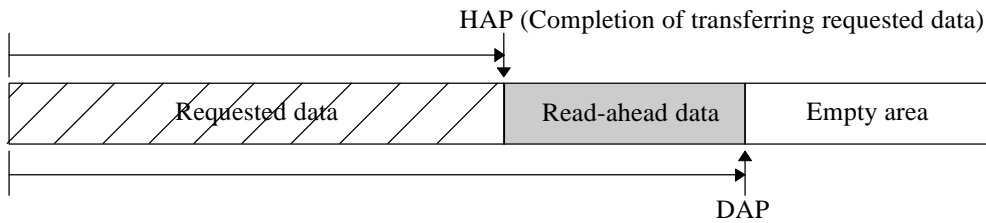

- 4) The disk drive performs the read-ahead operation for all area of segment with overwriting the requested data. Finally, the cache data in the buffer is as follows.

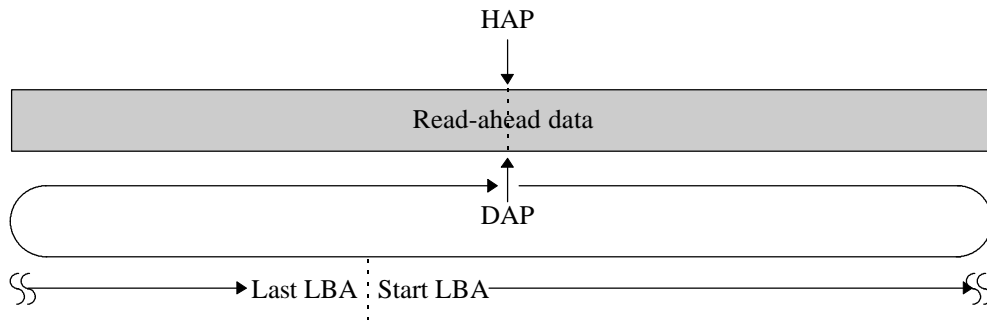


## b. Sequential hit


When the previously executed read command is the sequential command and the last sector address of the previous read command is sequential to the lead sector address of the received read command, the disk drive transfers the hit data in the buffer to the host system.

The disk drive performs the read-ahead operation of the new continuous data to the empty area that becomes vacant by data transfer at the same time as the disk drive starts transferring data to the host system.


- 1) In the case that the contents of buffer is as follows at receiving a read command;

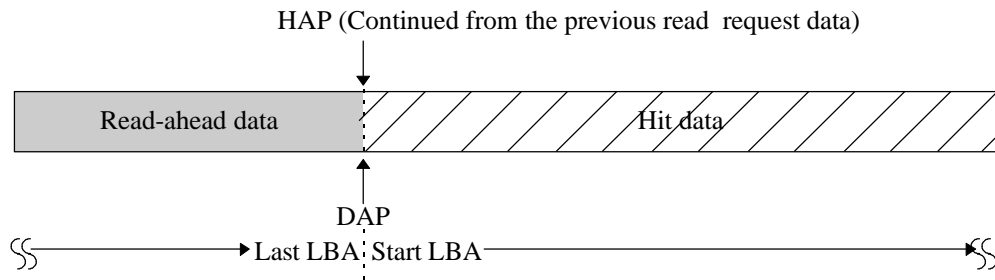

- 2) The disk drive starts the read-ahead operation to the empty area that becomes vacant by data transfer at the same time as the disk drive starts transferring hit data.

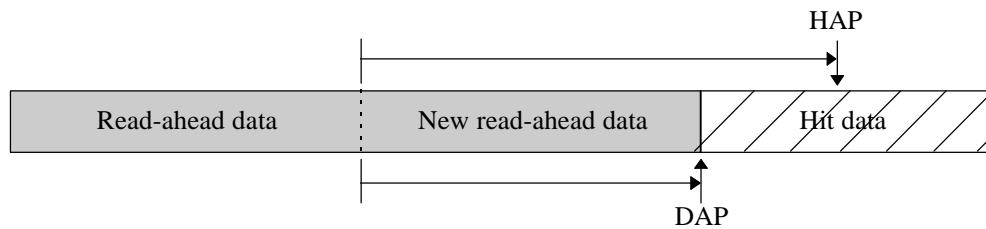


- 3) After completion of data transfer of hit data, the disk drive performs the read-ahead operation for the data area of which the disk drive transferred hit data.

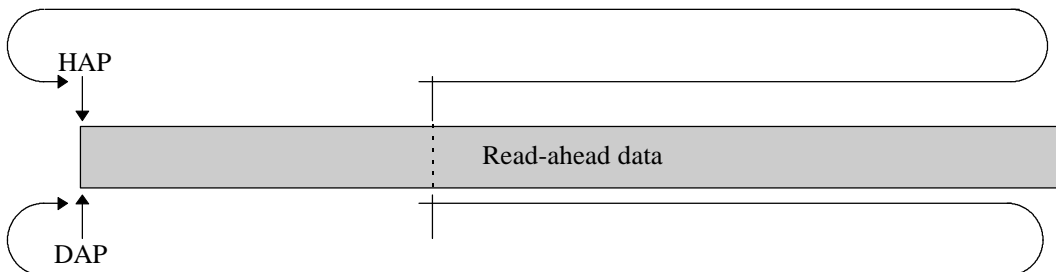



- 4) Finally, the cache data in the buffer is as follows.

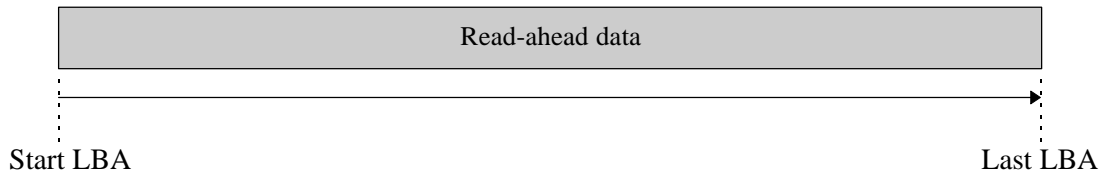

- c. Non-sequential command immediately after sequential command


When a sequential read command (first read) has been executed, the first read operation should be stopped if a non-sequential read command has been received and then, ten or more of the non-sequential read commands have been received. (Refer to 6.5.3.1.)

The figure that describes the first read operation is the same as that shown in the sub-section a.


### 6.5.3.3 Full hit (hit all)

All requested data are stored in the data buffer. The disk drive starts transferring the requested data from the address of which the requested data is stored. After completion of command, a previously existed cache data before the full hit reading are still kept in the buffer, and the disk drive does not perform the read-ahead operation.


- 1) In the case that the contents of the data buffer is as follows for example and the previous command is a sequential read command, the disk drive sets the HAP to the address of which the hit data is stored.

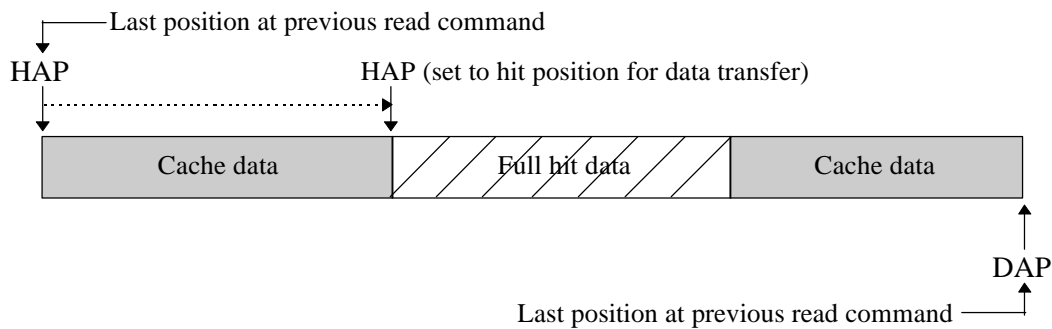

- 2) The disk drive transfers the requested data but does not perform the read-ahead operation.

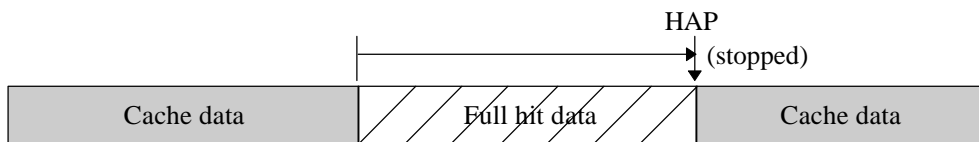


- 3) The cache data for next read command is as follows.

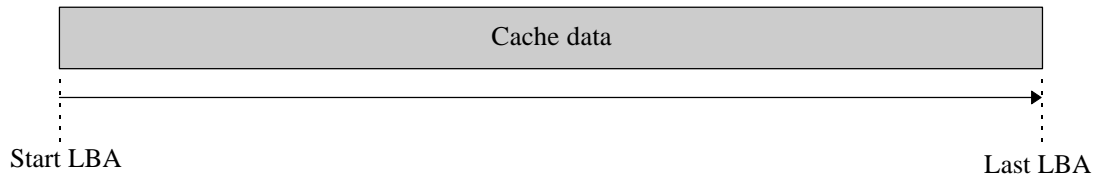


#### 6.5.3.4 Partially hit

A part of requested data including a lead sector are stored in the data buffer. The disk drive starts the data transfer from the address of the hit data corresponding to the lead sector of the requested data, and reads remaining requested data from the disk media directly. The disk drive does not perform the read-ahead operation after data transfer.


Following is an example of partially hit to the cache data.

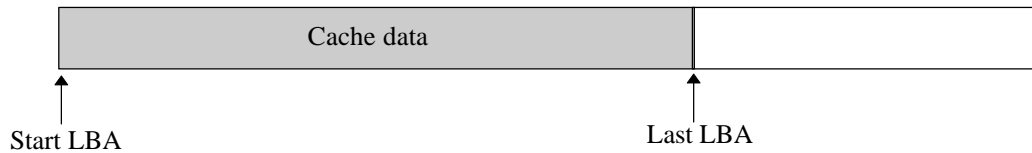


- 1) The disk drive sets the HAP to the address where the partially hit data is stored, and sets the DAP to the address just after the partially hit data.

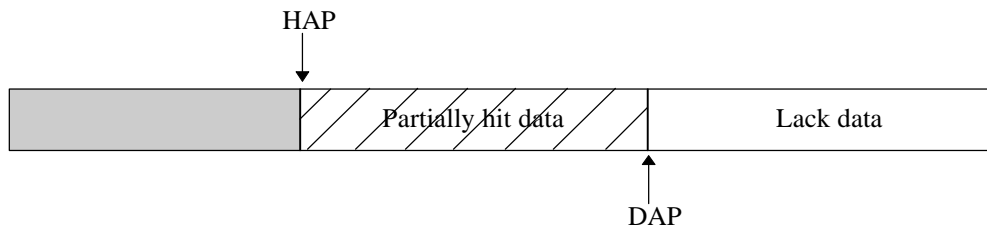

- 2) The disk drive starts transferring partially hit data and reads lack data from the disk media at the same time. However, the disk drive does not perform the read-ahead operation newly.

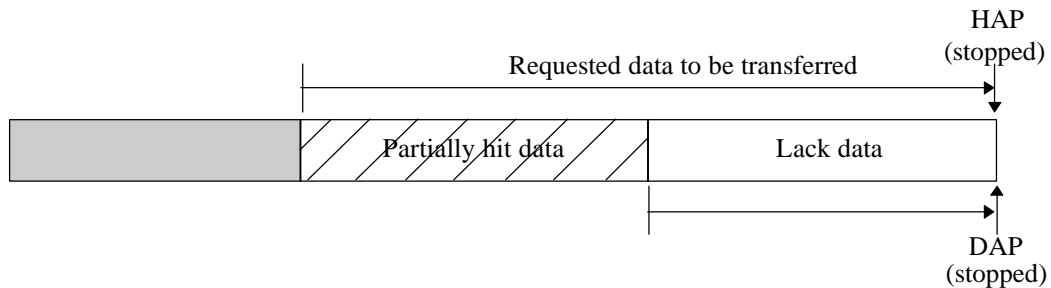

- 3) The cache data for next read command is as follows.

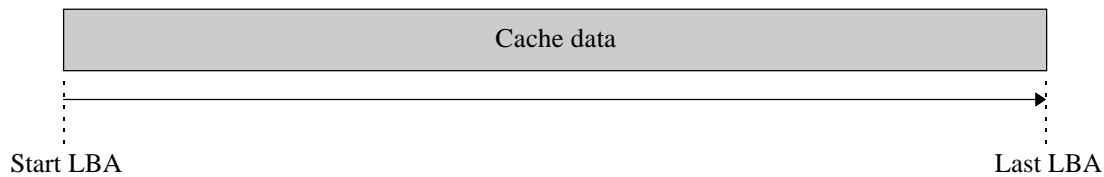

## 6.6 Write Cache

The write cache function of the drive makes a high speed processing in the case that data to be written by a write command is physically sequent the data of previous command and random write operation is performed.

When the drive receives a write command, the drive starts transferring data of sectors requested by the host system and writing on the disk medium. After transferring data of sectors requested by the host system, the drive generates the interrupt of command complete. Also, the drive sets the normal end status in the Status register.

The drive continues writing data on the disk medium. When all data requested by the host are written on the disk medium, actual write operation is completed.

The drive receives the next command continuously. If the received command is a “sequential write” (data to be written by a command is physically sequent to data of previous command), the drive starts data transfer and receives data of sectors requested by the host system. At this time, if the write operation of the previous command is still been executed, the drive continuously executes the write operation of the next command from the sector next to the last sector of the previous write operation. Thus, the latency time for detecting a target sector of the next command is eliminated. This shortens the access time.

The drive generates an interrupt of command complete after completion of data transfer requested by the host system as same as at previous command.

When the write operation of the previous command had been completed, the latency time occurs to search the target sector.

If the received command is not a “sequential write”, the drive receives data of sectors requested by the host system as same as “sequential write”. The drive generates the interrupt of command complete after completion of data transfer requested by the host system. Received data is processed after completion of the write operation to the disk medium of the previous command.

Even if a hard reset or soft reset is received or the write cache function is disabled by the SET FEATURES command during unwritten data is kept, the instruction is not enabled until remaining unwritten data is written onto the disk medium.

The drive uses a cache data of the last write command as a read cache data. When a read command is issued to the same address after the write command (cache hit), the read operation to the disk medium is not performed.

If an error occurs during the write operation, the device retries the processing. If the error cannot be recovered by retry, automatic alternate assignment is performed. For details about automate alternate assignment, see item (3) of Section 6.4.2.

The write cache function is operated with the following command.

- WRITE SECTOR(S)
- WRITE MULTIPLE
- WRITE DMA

### **IMPORTANT**

When Write Cache is permitted, the writing of the data transferred from the host by the abovementioned Write Cache permit command into the disk medium may not be completed at the moment a normal ending interrupt has occurred.

In case a non-recoverable error has occurred during receiving more than one write command, it is difficult for the host to identify a command that caused the error.

(However, the error is not reported to the hose if an error at writing has been processed normally.)

Therefore, note that it is difficult for the host to retry an operation that caused a non-recoverable error.

**This page is intentionally left blank.**

# Glossary

## **Actuator**

Head positioning assembly. The actuator consists of a voice coil motor and head arm. It positions the read-write (R-W) head.

## **AT bus**

A bus between the host CPU and adapter board

## **ATA (AT Attachment) standard**

The ATA standard is for a PC AT interface regulated to establish compatibility between products manufactured by different vendors. Interfaces based on this standard are called ATA interfaces.

## **BIOS standard for drives**

The BIOS standard collectively refers to the parameters defined by the host, which, for example, include the number of cylinders, the number of heads, and the number of sectors per track in the drive. The physical specifications of the drive do not always correspond to these parameters.

The BIOS of a PC AT cannot make full use of the physical specifications of these drives. To make the best use of these drives, a BIOS that can handle the standard parameters of these drives is required.

## **Command**

Commands are instructions to input data to and output data from a drive. Commands are written in command registers.

## **Data block**

A data block is the unit used to transfer data. A data block normally indicates a single sector.

## **DE**

Disk enclosure. The DE includes the disks, built-in spindle motor, actuator, heads, and air filter. The DE is sealed to protect these components from dust.

## **Master (Device 0)**

The master is the first drive that can operate on the AT bus. The master is daisy-chained with the second drive which can operate in conformity with the ATA standard.

## **MTBF**

Mean time between failures. The MTBF is calculated by dividing the total operation time (total power-on time) by the number of failures in the disk drive during operation.

## **MTTR**

Mean time to repair. The MTTR is the average time required for a service person to diagnose and repair a faulty drive.

## **PIO (Programmed input-output)**

Mode to transfer data under control of the host CPU

## **Positioning**

Sum of the seek time and mean rotational delay

## **Power save mode**

The power save modes are idle mode, standby mode, and sleep mode.

In idle mode, the drive is neither reading, writing, nor seeking data. In standby mode, the spindle motor is stopped and circuits other than the interface control circuit are sleeping. The drive enters sleep mode when the host issues the SLEEP command.

## **Reserved**

Reserved bits, bytes, and fields are set to zero and unusable because they are reserved for future standards.

## **Rotational delay**

Time delay due to disk rotation. The mean delay is the time required for half a disk rotation. The mean delay is the average time required for a head to reach a sector after the head is positioned on a track.

## **Seek time**

The seek time is the time required for a head to move from the current track to another track. The seek time does not include the mean rotational delay.

## **Slave (Device 1)**

The slave is a second drive that can operate on the AT bus. The slave is daisy-chained with the first drive operating in conformity with the ATA standard.

**Status**

The status is a piece of one-byte information posted from the drive to the host when command execution is ended. The status indicates the command termination state.

**VCM**

Voice coil motor. The voice coil motor is excited by one or more magnets. In this drive, the VCM is used to position the heads accurately and quickly.



**This page is intentionally left blank.**

# Acronyms and Abbreviations

|          |                               |          |                          |
|----------|-------------------------------|----------|--------------------------|
| <b>A</b> |                               | HDD      | Hard disk drive          |
| ABRT     | Aborted command               | <b>I</b> |                          |
| AIC      | Automatic idle control        | IDNF     | ID not found             |
| AMNF     | Address mark not found        | IRQ14    | Interrupt request 14     |
| ATA      | AT attachment                 | <b>L</b> |                          |
| AWG      | American wire gage            | LED      | Light emitting diode     |
| <b>B</b> |                               | <b>M</b> |                          |
| BBK      | Bad block detected            | MB       | Mega-byte                |
| BIOS     | Basic input-output system     | MB/S     | Mega-byte per seconds    |
| <b>C</b> |                               | MPU      | Micro processor unit     |
| CORR     | Corrected data                | <b>P</b> |                          |
| CH       | Cylinder high register        | PCA      | Printed circuit assembly |
| CL       | Cylinder low register         | PIO      | Programed input-output   |
| CM       | Command register              | <b>R</b> |                          |
| CSR      | Current sense register        | RLL      | Run-Inrnght-limited      |
| CSS      | Current start/stop            | <b>S</b> |                          |
| CY       | Cylinder register             | SA       | System area              |
| <b>D</b> |                               | SC       | Sector count register    |
| dB A     | dB A-scale weighting          | SG       | Signal ground            |
| DE       | Disk enclosure                | SN       | Sector number register   |
| DH       | Device/head register          | ST       | Status register          |
| DRDY     | Drive ready                   | <b>T</b> |                          |
| DRQ      | Ddata request bit             | TPI      | Track per inches         |
| DSC      | Drive seek complete           | TRONF    | Track 0 not found        |
| DWF      | Drive write fault             | Typ      | Typical                  |
| <b>E</b> |                               | <b>U</b> |                          |
| ECC      | Error checking and correction | UNC      | Uncorrectable ECC error  |
| ER       | Error register                | <b>V</b> |                          |
| ERR      | Error                         | VCM      | Voice coil motor         |
| <b>F</b> |                               |          |                          |
| FR       | Feature register              |          |                          |
| <b>H</b> |                               |          |                          |
| HA       | Host adapter                  |          |                          |

**This page is intentionally left blank.**

# Index

1-drive connection 2-4  
2-drive connection 2-4  
16/17 MTR MEEPRL 4-10  
16/17 MTR MEEPRM 4-13

## A

Acceleration mode 4-21  
Acoustic noise 1-7  
Acoustic noise specification 1-8  
Active mode 6-10  
Actuator 2-3, 4-3  
Actuator motor control 4-19  
Adaptability 1-2  
Adaptive equalizer circuit 4-12  
ADC 4-17  
A/D converter 4-17  
Address translation 6-7, 6-8  
AGC circuit 4-12  
Air circulation system 2-3  
Air filter 4-3  
Alternate assignment, automatic 6-13  
Alternate cylinder assignment 6-13  
Alternate Status register 5-13  
Alternating defective sector 6-12  
Ambient temperature 3-7  
ATA 2-5  
ATA interface 2-4  
Attribute ID 5-63  
Attribute value for worst case so far 5-64  
Automatic alternate assignment 6-13  
Average positioning time 1-2

## B

Block diagram of servo control circuit 4-14  
Blower 4-3  
Blower effect 2-3  
Breather filter 4-3  
BSY 5-11

## C

Cable connection 3-8, 3-9  
Cable connector specification 3-10  
Caching operation 6-14  
Calibration 4-15  
CHECK POWER MODE 5-56  
Check sum 5-66

CHS mode 6-8  
Circuit configuration 4-4, 4-5  
Circulation filter 2-3, 4-3  
Combination of Identifier and Security level 5-4  
Command block register 5-8  
Command code 5-14, 5-77  
Command description 5-16  
Command processing 4-9  
Command protocol 5-79  
Command register 5-12  
Command that is object of caching operation 6-14  
Command without data transfer 5-83  
Compact 1-2  
Compensating open loop gain 4-8  
Connection to interface 1-3  
Connector location 3-9  
Content of SECURITY SET PASSWORD data 5-74  
Control block register 5-13  
Controller circuit 2-3, 4-4  
CSEL setting 3-13  
Current attribute value 5-64  
Current fluctuation 1-6  
Current fluctuation when power is turned on 1-6  
Current requirement 1-6  
Cylinder High register 5-10  
Cylinder Low register 5-10

## D

DAC 4-17  
D/A converter 4-17  
Data area 4-18  
Data assurance in event of power failure 1-9  
Data buffer 1-3  
Data buffer configuration 6-14  
Data corruption 3-8  
Data format version number 5-63  
Data register 5-8  
Data separator circuit 4-13  
Data-surface servo format 4-18  
Data that is object of caching operation 6-15  
Data transfer rate 4-13

Data transferring command 5-79, 5-81  
Data transfer timing 5-102  
DE 2-3  
Default parameter 6-7  
Defect management 6-11  
Device configuration 2-1  
Device connection 3-10  
Device connector 3-9  
Device Control register 5-13  
Device/Head register 5-10  
Device overview 1-1  
Device response to reset 6-2  
DF 5-12  
Diagnostic code 5-9  
Dimension 3-2, 3-3  
Disk 2-2, 4-2  
Disk enclosure 2-2  
Disk media 2-3  
DMA data transfer command 5-84  
DRDY 5-11  
Driver 4-17  
Driver circuit 4-17  
DRQ 5-12  
DSC 5-12

## E

Environmental specification 1-7  
ERR 5-12  
Error correction by ECC 1-3  
Error correction by retry 1-3  
Error posting 5-77  
Error rate 1-10  
Error register 5-8  
EXECUTE DEVICE DIAGNOSTIC 5-46  
Execution example of READ MULTIPLE  
command 5-20  
Execution timing of self-calibration 4-8  
External magnetic field 3-6

## F

Factory default setting 3-12  
Failure prediction capability flag 5-65  
Feature register function 5-58  
Feature register value 5-40, 5-58  
Features 1-2  
Features register 5-9  
Format of device attribute value data 5-62  
Format of insurance failure threshold value  
data 5-62  
Frame 3-5

Frequency characteristics of programmable  
filter 4-12  
Full hit 6-20  
Functions and performance 1-2

## G

Gray code 4-19

## H

HA 2-5  
Head 2-2, 4-2  
Head carriage 4-3  
Head structure 4-3  
High-speed transfer rate 1-2  
Hit all 6-20  
Host command 5-13

## I

IDENTIFY DEVICE 5-31  
IDENTIFY DEVICE DMA 5-39  
IDLE 5-51  
IDLE IMMEDIATE 5-53  
Idle mode 6-10  
INITIALIZE DEVICE PARAMETERS  
5-30  
Inner guard band 4-18  
Input voltage 1-5  
Installation condition 3-1  
Insurance failure threshold 5-66  
Interface 1-3, 5-1  
Interface signal 5-2  
Invalidating caching data 6-15

## J

Jumper location 3-11  
Jumper setting 3-11

## L

Large capacity 1-2  
LBA mode 6-9  
Limitation of mounting 3-5  
Logical address 6-8  
Logical interface 5-6

## M

Master 1-3  
Master drive setting 3-12  
Master password 5-74  
Mean time between failures 1-9

Mean time to repair 1-9  
 Media defect 1-10  
 Microprocessor unit 4-14  
 Mis-hit 6-16  
 Model and product number 1-5  
 Model name and product number 1-5  
 Mounting 3-4  
 Move head to reference cylinder 4-15  
 MPU 4-14  
 MTBF 1-9  
 MTTR 1-9  
 Multiword DMA data transfer timing 5-103  
 Multiword mode 2 2-4

**N**

NIEN 5-13  
 No hit 6-16  
 Noise and vibration 1-2

**O**

Operation 6-1  
 Operation sequence 4-7  
 Operation to move head to reference  
 cylinder 4-19  
 Other command 5-84  
 Outer guard band 4-18  
 Outerview 2-2  
 Outline 4-2

**P**

PAD 4-19  
 Parameter 5-14, 5-77  
 Partially hit 6-21  
 Physical interface 5-2  
 PIO data transfer 5-101  
 PIO Mode 4 2-4  
 Positioning error 1-10  
 Power amplifier 4-17  
 Power commands 6-11  
 Power dissipation 1-6  
 Power on/off sequence 1-7  
 Power-on sequence 4-6  
 Power requirement 1-5  
 Power save 6-9  
 Power save mode 1-2, 6-9  
 Power supply connector 3-11  
 PreAMP 4-9  
 Programmable filter 4-12  
 Programmable filter circuit 4-12  
 Protocol for command abort 5-81

Protocol for command execution without  
 data transfer 5-84

**R**

Raw attribute value 5-64  
 Read-ahead cache 6-14  
 Read-ahead cache system 1-3  
 Read circuit 4-12  
 READ DMA 5-21  
 READ LONG 5-48  
 READ MULTIPLE 5-18  
 READ SECTOR(S) 5-16, 5-17  
 Read Sector(s) command protocol 5-80  
 READ VERIFY SECTOR(S) 5-22  
 Read/write circuit 2-3, 4-4, 4-9  
 Read/write circuit block diagram 4-11  
 Read/write preamplifier 4-9  
 RECALIBRATE 5-28  
 Reliability 1-9  
 Response to diagnostic command 6-6  
 Response to hardware reset 6-4  
 Response to power-on 6-2  
 Response to software reset 6-5  
 Ripple 1-5

**S**

SA area 4-18  
 Sector Count register 5-9  
 Sector Number register 5-9  
 Sector servo configuration 4-16  
 Sector slip processing 6-12  
 SECURITY DISABLE PASSWORD 5-69  
 SECURITY ERASE PREPARE 5-70  
 SECURITY ERASE UNIT 5-71  
 SECURITY FREEZE LOCK 5-72  
 SECURITY SET PASSWORD 5-74  
 SECURITY UNLOCK 5-75  
 SEEK 5-29  
 Seek operation 4-20  
 Seek to specified cylinder 4-15  
 Self-calibration 4-7  
 Self-calibration content 4-7  
 Self-diagnosis 1-3  
 Sensing and compensating for external force  
 4-7  
 Sequential command 6-17  
 Sequential hit 6-19  
 Sequential read 6-17  
 Service area 3-8  
 Service life 1-9  
 Servo A 4-19

Servo B 4-19  
Servo burst capture 4-17  
Servo burst capture circuit 4-17  
Servo C 4-19  
Servo circuit 4-4  
Servo control 4-14  
Servo control circuit 4-14  
Servo D 4-19  
Servo format, data-surface 4-18  
Servo frame format 4-18  
Servo mark 4-19  
SET FEATURES 5-40  
SET MULTIPLE MODE 5-42  
Shock 1-8  
Slave 1-3  
Slave drive setting 3-12  
SLEEP 5-55  
Sleep mode 6-11  
SMART 5-57  
Spare area 6-12  
Specification summary 1-4  
Spindle 4-3  
Spindle motor 2-3  
Spindle motor control 4-17, 4-20  
Spindle motor control circuit 4-17  
Spindle motor driver circuit 4-4  
Spindle motor start 4-15  
SRST 5-13  
Stable rotation mode 4-21  
Standard value, surface 3-7  
STANDBY 5-53  
STANDBY IMMEDIATE 5-54  
Standby mode 6-10  
Start, spindle motor 4-15  
Start mode 4-20  
Status at completion of command execution  
5-8  
Status flag 5-63  
Status register 5-11

Subassembly 4-2  
Surface standard value 3-7  
Surface temperature measurement point 3-7  
System configuration 2-4

## T

Temperature range 1-2  
Theory of device operation 4-1  
Time base generator circuit 4-13  
Track following operation 4-19

## U

Unrecoverable read error 1-10  
Usage of read segment 6-16

## V

VCM 4-3  
VCM current sense resistor (CSR) 4-17  
Vibration 1-8  
Viterbi detection circuit 4-13  
Voice coil motor 4-3

## W

WRITE BUFFER 5-50  
Write cache 1-3, 6-22  
Write circuit 4-10  
WRITE DMA 5-26  
WRITE LONG 5-49  
WRITE MULTIPLE 5-25  
Write precompensation 4-10  
Write precompensation algorithm 4-10  
Write/read recovery 4-19  
WRITE SECTOR(S) 5-23  
WRITE SECTOR(S) command protocol  
5-82  
WRITE VERIFY 5-27

**This page is intentionally left blank.**



# Comment Form

We would appreciate your comments and suggestions regarding this manual.

|   |   |
|---|---|
| Manual code   | C141-E088-01EN  |
| Manual name   | MHJ2181AT, MHK2120AT, MHK2090AT, MHK2060AT DISK DRIVES PRODUCT MANUAL |
| Please mark each item: E(Excellent), G(Good), F(Fair), P(Poor). |   |
| General appearance  | (     )   |
| Technical level   | (     )   |
| Organization  | (     )   |
| Clarity   | (     )   |
| Accuracy  | (     )   |
| Illustration  | (     )   |
| Glossary  | (     )   |
| Acronyms & Abbreviations  | (     )   |
| Index   | (     )   |
| Comments & Suggestions  |   |

List any errors or suggestions for improvement.

| Page | Line | Contents |
|------|------|----------|
|      |      |          |

Please send this form to the address below. We will use your comments in planning future editions.

Address: Fujitsu Learning Media Limited  
22-7 Minami-Ooi 6-Chome  
Shinagawa-Ku  
Tokyo 140-0013  
JAPAN

Fax: 81-3-5762-8073

Organization: \_\_\_\_\_

Name: \_\_\_\_\_

---

**MHJ2181AT, MHK2120AT, MHK2090AT, MHK2060AT DISK DRIVES  
PRODUCT MANUAL**

---

C141-E088-01EN

---

**MHJ2181AT, MHK2120AT, MHK2090AT, MHK2060AT DISK DRIVES  
PRODUCT MANUAL**

---

C141-E088-01EN

**FUJITSU**