



Installation and Operation Manual

'Fast-Fri' Gas Fryer

Electronically Controlled

FN8120GE	FNL8120GE	FNB8120GE	FNLB8120GE
FN8226GE	FNL8226GE	FNB8226GE	FNLB8226GE
FN8130GE	FNL8130GE	FNB8130GE	FNLB8130GE



Date Purchased

Serial Number

Dealer

Service Provider



For use in GB & IE

228638-18

MANUFACTURED BY

Moffat Limited

Rolleston 7675
New Zealand

INTERNATIONAL CONTACTS

AUSTRALIA

Moffat Pty Limited

Web: www.moffat.com.au
E.Mail: vsales@moffat.com.au
Main Office: (tel) +61 (03) 9518 3888
(fax) +61 (03) 9518 3833
Service: (tel): 1800 622 216
Spares: (tel): 1800 337 963
Customer Service: (tel): 1800 335 315
(fax): 1800 350 281

CANADA

Serve Canada

Web: www.servecanada.com
E.Mail: info@servecanada.com
Sales: (tel): 800 551 8795 (Toll Free)
Service: (tel): 800 263 1455 (Toll Free)

NEW ZEALAND

Moffat Limited

Web: www.moffat.co.nz
E.Mail: sales@moffat.co.nz
Main Office: (tel): 0800 663328

UNITED KINGDOM

Blue Seal

Web: www.blue-seal.co.uk
E.Mail: sales@blue-seal.co.uk
Sales: (tel): +44 121 327 5575
(fax): +44 121 327 9711
Spares: (tel): +44 121 322 6640
(fax): +44 121 327 9201
Service: (tel): +44 121 322 6644
(fax): +44 121 327 6257

UNITED STATES

Moffat

Web: www.moffat.com
Sales: (tel): 800 551 8795 (Toll Free)
(tel): +1 336 661 1556
(fax): +1 336 661 9546
Service: (tel): 800 858 4477 (Toll Free)
(tel): +1 336 661 1556
(fax): +1 336 661 1660

REST OF WORLD

Moffat Limited

Web: www.moffat.co.nz
E.Mail: export@moffat.co.nz

The reproduction or copying of any part of this manual by any means whatsoever is strictly forbidden unless authorized previously in writing by the manufacturer.

In line with policy to continually develop and improve its products, Moffat Ltd. reserves the right to change the specifications and design without prior notice.

© Copyright Moffat Ltd. November 2014.

FN(L)(B)8120GE 'FAST FRI' GAS FRYER	(Single Tank - 20Ltr).
FN(L)(B)8226GE 'FAST FRI' GAS FRYER	(Twin Tank - 26Ltr).
FN(L)(B)8130GE 'FAST FRI' GAS FRYER	(Single Tank - 31Ltr).

Introduction	3
---------------------------	----------

Specifications	4
-----------------------------	----------

Model Numbers Covered in this Specification.
Gas Supply Requirements.
Electrical Supply Requirements.

Dimensions	6
-------------------------	----------

Installation	7
---------------------------	----------

Installation Requirements.
Unpacking.
Location.
Clearances.
Assembly.
Fitting Rear Rollers.
Electrical Connection.
Gas Connection.
Commissioning.

Operation.....	13
-----------------------	-----------

Operation Guide.
Description of Controls.
Filling the Tank(s).
Controller Basic Programming Mode.
 Entering the Controller Basic Settings.
 Setting the Parameters
 To Exit the Programming Mode

Lighting the Pilot Burners.
Lighting the Main Burners.
Fryer Operation (Flow Chart).
Turning 'OFF' the Fryer.

Cleaning and Maintenance	19
---------------------------------------	-----------

General.
Draining and Daily Cleaning.
Weekly Cleaning.
Periodic Maintenance.

Fault Finding.....	22
---------------------------	-----------

Guide to Cooking Problems with the Fryer.
Fault Finding the Gas System.

Wiring Schematics.....	25
-------------------------------	-----------

Contents

Controller Advanced Programming Mode 28
 Timing Mode.
 Temperature Offset.
 Temperature Display Mode.
 Programming the Melt Cycle.
 Setting the Temperature Units.
 System Programmable Default Settings.

Gas Conversion and Specifications 31
 Conversion Procedure.
 Gas Specifications.

Replacement Parts List 35

We are confident that you will be delighted with your Waldorf 'Fast-Fri' Gas Fryer and it will become a most valued appliance in your commercial kitchen.

To ensure you receive the utmost benefit from your new Waldorf 'Fast-Fri' Gas Fryer, there are two important things you can do.

Firstly

Please read the instruction book carefully and follow the directions given. The time taken will be well spent.

Secondly

If you are unsure of any aspect of the installation, instructions or performance of your Fryer, contact your WALDORF dealer promptly. In many cases a phone call could answer your question.

CE Only

These instructions are only valid if the country code appears on the appliance. If the code does not appear on the appliance, refer to the supplier of this appliance to obtain the technical instructions for adapting the appliance to the conditions for use in that country.



Warning

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS APPLIANCE.



Warning

INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE USER SMELLS GAS ARE TO BE POSTED IN A PROMINENT LOCATION. THIS INFORMATION SHALL BE OBTAINED BY CONSULTING THE LOCAL GAS SUPPLIER.



Warning

GREAT CARE MUST BE TAKEN BY THE OPERATOR TO USE THE EQUIPMENT SAFELY TO GUARD IT AGAINST RISK OF FIRE.

- The appliance must NOT be left on unattended.
- It is recommended that a regular inspection is made by a competent service person to ensure correct and safe operation of your appliance is maintained.
- DO NOT store or use gasoline or other flammable vapours or liquids in the vicinity of this or any other appliance.
- do not spray aerosols in the vicinity of this appliance while it is in operation.



Caution

- This appliance is for professional use and is only to be used by qualified persons.
- Only authorised service persons are to carry out installation, servicing or gas conversion operations.
- Components having adjustments protected (e.g. paint sealed) by the manufacturer should not be adjusted by the user / operator.
- DO NOT operate the appliance without the legs supplied fitted.

Specifications

Model Numbers Covered in this Specification

FN[1]8120GE	'FAST FRI' GAS FRYER	(Single Tank - 20Ltr).
FN[1]8226GE	'FAST FRI' GAS FRYER	(Twin Tank - 26Ltr per Tank).
FN[1]8130GE	'FAST FRI' GAS FRYER	(Single Tank - 31Ltr).

NOTE:

[1]: - Model Options;

- - Standard.
- L - Low Back.
- B - Bold Front.
- LB - Low Back and Bold Front.

Gas Supply Requirements

- Australia:

	Natural Gas	LP Gas (Propane)
Input Rating (N.H.G.C.)	90 MJ/hr	90 MJ/hr
Supply Pressure	1.13 - 2.00 kPa	2.75 - 3.00 kPa
Burner Operating Pressure (*)	0.98 kPa	2.50 kPa
Gas Connection	¾" BSP Male	

- New Zealand:

	Natural Gas	LP Gas
Input Rating (N.H.G.C.)	90 MJ/hr	90 MJ/hr
Supply Pressure	1.13 - 2.00 kPa	2.75 - 3.00 kPa
Burner Operating Pressure (*)	0.98 kPa	2.50 kPa
Gas Connection	¾" BSP Male	

- UK Only:

Category: II_{2H3P} (20, 37).
Flue Type: A₁.

	Natural Gas (G20)	Propane (G31)
Heat Input (nett)	22.5 kW	22.5 kW
Gas Rate	2.26 m ³ /hr	1.75 kg/hr
Supply Pressure	20 mbar	37 mbar
Burner Operating Pressure (*)	9.8 mbar	25 mbar
Gas Connection	¾" BSP Male	

NOTE:

- (*) Measure burner operating pressure at Lower Test Point (Out) on the gas control valve, with both burners operating at 'High Flame' setting. Refer to 'Gas Conversion and Specification' Section for further details.

- All Other Markets:

		Natural Gas	Town Gas (**)
Input Rating (N.H.G.C.)		90 MJ/hr	90 MJ/hr
Supply Pressure	Non-CE	1.13 - 2.0 kPa	0.75 - 1.5 kPa
	CE	25 mbar	N/A
Burner Operating Pressure (*)		0.98 kPa (*)	0.5 kPa (*)
Gas Connection		¾" BSP Male	

		LP Gas (Propane)	Butane
Input Rating (N.H.G.C.)		90 MJ/hr	90 MJ/hr
Supply Pressure	Non-CE	2.75 - 3.0 kPa	2.75 - 3.0 kPa
	CE	37 mbar	37 mbar
Burner Operating Pressure (*)		2.5 kPa (*)	2.5 kPa (*)
Gas Connection		¾" BSP Male	

NOTE:

- (*) Measure burner operating pressure at Lower Test Point (Out) on the gas control valve, with both burners operating at 'High Flame' setting.
- (**) TOWN GAS Option is only available with specific ex-factory built Town Gas models, which can also be converted to any other gas. Standard models can only be converted between Nat. Gas, LP Gas and Butane, but not Town Gas.
- Refer to 'Gas Conversion and Specifications' section of this manual for further details.

Electrical Supply Requirements



Warning

THIS APPLIANCE MUST BE EARTHED. IF SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY A SUITABLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.

220 -240Vac, 1P+N+E, 50Hz, 0.5A.

Electrical Connection

The power cord comes fitted with:

- | | |
|-------------------------|-----------------------|
| Australia / NZ models - | 10A 3-pin plug. |
| United Kingdom models - | 13A 3-pin fused plug. |

Installation Requirements

NOTE:

- It is most important that this Fryer is installed correctly and that the operation is correct before use. Installation shall comply with local electrical, gas and health and safety requirements.
- This appliance shall be installed with sufficient ventilation to prevent occurrence of unacceptable concentrations of health harmful substances in the room, appliance is installed in.

Waldorf 'FAST FRI' gas fryers are designed to provide years of satisfactory service, and correct installation is essential to achieve the best performance, efficiency and trouble-free operation.

This appliance must be installed in accordance with National installation codes and in addition, in accordance with relevant National / Local codes covering gas and fire safety.

Australia / New Zealand	AS 5601.1	- Gas Installations.
Australia / New Zealand:	AS / NZS 3000	- Wiring Rules.
United Kingdom:	Gas Safety (Installation and Use) Regulations 1998.	
United Kingdom:	BS 7671	- Requirements for Electrical Installations.
Ireland:	IS 820	- Non Domestic Gas Installations.

Installations must be carried out by qualified service persons only. Failure to install equipment to the relevant codes and manufacturer's specifications shown in this section will void the warranty.

Components having adjustments protected (e.g. paint sealed) by manufacturer are only to be adjusted by an authorised service agent. They are not to be adjusted by the installation person.

Unpacking

- Remove all packaging and transit protection from appliance including all protective plastic coating from door outer panel and exterior stainless steel panels.
- Check equipment and parts for damage. Report any damage immediately to carrier and distributor.
- Report any deficiencies to distributor who supplied appliance.
- Check available gas supply is correct to as shown on rating plate located on inside of door.
- Check the following parts have been supplied with the appliance:-

	FN8120GE	FN8226GE	FN8130GE	
Baskets	2	2	3	
Basket Grids	1	2	1	
Lid	1	1	1	
Adjustable Legs	4	4	4	
Drain Stick	1	1	1	
Rear Rollers	2	2	2	(NZ only, Rollers fitted).

Location

1. This appliance must be installed in a suitably ventilated room to prevent dangerous build up of combustion products.
2. Installation must allow for a sufficient flow of fresh air for combustion air supply. Combustion air requirements:

Combustion Air Requirements

All Gas Types 24 m³ /hr minimum.

3. Position the appliance in its approximate working position.
4. All air for burner combustion is supplied from beneath appliance. Legs must always be fitted and no obstructions placed beneath or around base of appliance, as obstructions will cause incorrect operation and / or failure of appliance.

NOTE: Do not obstruct or block appliance flue. Never directly connect a ventilation system to appliance flue outlet.

Installation

Clearances

NOTE:

- Only non-combustible materials can be used in close proximity to this appliance.
- To facilitate easy operation, drainage and servicing of appliance, a minimum of 600mm clearance should be maintained at front of appliance.

Any gas burning appliance requires adequate clearance and ventilation for optimum and trouble-free operation. The following minimum installation clearances are to be adhered to:

	Combustible Surface	Non Combustible Surface
Left / Right Hand Side	50mm.	0mm.
Rear	50mm.	0mm.

Assembly

This model is delivered completely assembled. Ensure that the legs are securely attached.

NOTE:



- This appliance is fitted with adjustable feet to enable it to be positioned securely and level on uneven floors. This should be carried out on completion of gas connection. Refer to 'Gas Connection Section'.
- The rear leg housings on this appliance can also be fitted with rear rollers to enable the appliance to be easily moved for positioning and cleaning purposes. If desired, these rollers are supplied in the packaging, with appliance. See overleaf for fitting instructions.

Optional Accessories (Refer to Replacement Parts List)

- Plinth Kit. For installation details, refer to the instructions supplied with each kit.

Fitting Rear Rollers.

1. Raise the appliance from the floor by approx. 75mm using suitable lifting equipment (i.e. Palletiser / Forklift) to allow rear adjustable feet to be removed.
2. Unscrew and remove both rear adjustable feet from rear leg housings.
3. Fit rear roller to rear leg housing and align screw hole in side of rear leg housing with threaded hole in rear roller.
4. Secure the rear roller to the leg support with bolt supplied and tighten bolt.
5. Fit second roller and tighten securing bolt.
6. Lower appliance back to the floor and adjust front adjustable feet to level appliance.

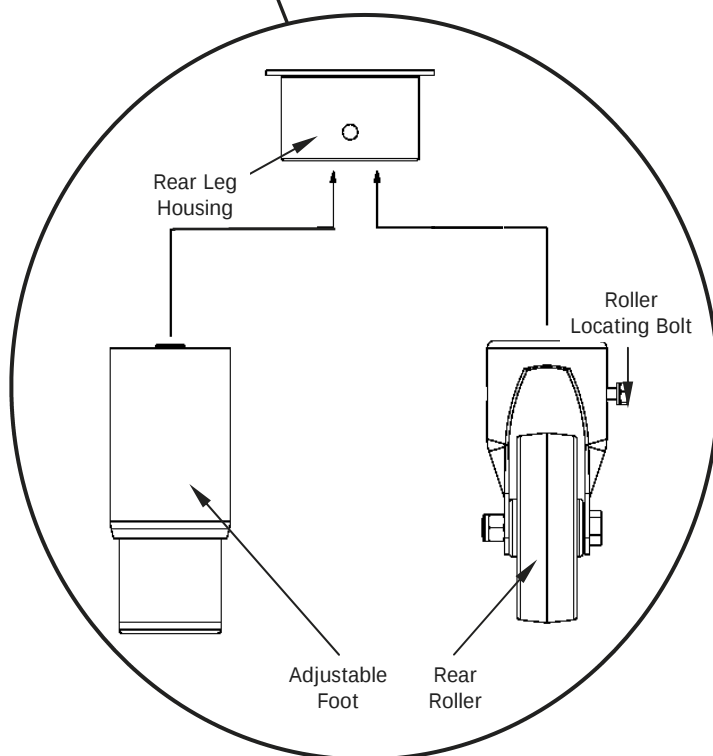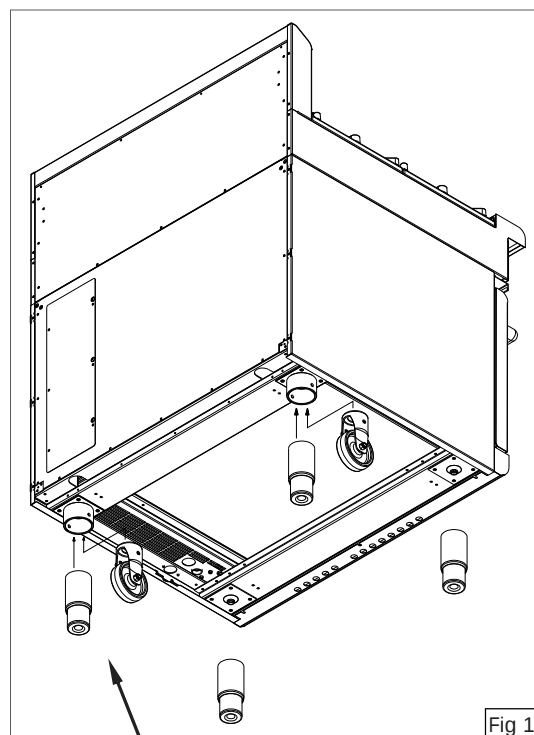

Installation

Electrical Connection

NOTE: ALL ELECTRICAL CONNECTION MUST ONLY BE CARRIED OUT BY A QUALIFIED PERSON.

1. Each appliance should be connected to an adequately protected power supply and an isolation switch mounted adjacent to, but not behind the appliance. This switch must be clearly marked and readily accessible in case of fire.
2. Check electricity supply is correct as shown on Rating Plate attached to inside of access door.
3. For immediate electrical supply, simply plug the lead into a properly earthed, 3 pin socket.

Gas Connection

NOTE: ALL GAS FITTING MUST ONLY BE CARRIED OUT BY AN AUTHORISED PERSON.

Flexible Hose Connection.

If a Gas Hose assembly is used to connect this appliance, hose and all fittings must have a minimum $\frac{3}{4}$ " (Natural Gas) or $\frac{1}{2}$ " (LPG) inside bore diameter to ensure gas flow rate capacity required by this appliance is achieved.

This must be verified by operating pressure testing at maximum gas supply demand condition.

Gas Hose assembly should also be classified for use in commercial kitchen conditions that appliance will be used in.

Recommended Gas Hose Assembly Specification:

- AS/NZS 1869 Class B or D compliant or equivalent, that meets the following requirements:-

Class	Max Working Pressure at 23 ± 2°C	Working Temperature Range	Resistance to Oil
B	7.0 kPa	- 20°C to + 125°C	Oil resistant lining and cover.
D	2.6 MPa		

NOTE: ALL GAS FITTING MUST ONLY BE CARRIED OUT BY A QUALIFIED SERVICE PERSON.

1. It is essential that the gas supply is correct for the appliance being installed and that adequate supply pressure and volume are available. Carry out the following checks before installation:-
 - a. **Gas Type** appliance has been supplied for is shown on coloured stickers located above gas entry point and next to rating plate. Check that this is correct for gas supply appliance is being installed for. Gas conversion procedure is shown in this manual.
 - b. **Supply Pressure** required for this appliance is shown in **Specifications** section of this manual. Check gas supply to ensure that adequate supply pressure exists.
 - c. **Input Rate** of this appliance is also shown on Rating Plate fitted to inside of access door and in **Specifications** section of this manual. Input rate should be checked against available gas supply line capacity. **Particular note should be taken if appliance is being added to an existing installation.**



NOTE: It is important that adequately sized piping runs directly to connection joint on appliance, with as few tees and elbows as possible to give maximum supply volume.

2. A suitable joining compound which resists the breakdown action of LPG must be used on every gas line connection, unless compression fittings are used.
Connection to appliance is $\frac{3}{4}$ " BSP male.

NOTE: A Manual Isolation Valve must be fitted to individual appliance supply line.

3. Correctly locate appliance into its final operating position and using a spirit level, adjust legs so that unit is level and at correct height.
4. Connect gas supply to appliance.
5. Check all gas connections for leakages using soapy water or other gas detecting equipment.



Warning

DO NOT USE A NAKED FLAME TO CHECK FOR GAS LEAKAGES.

6. Check gas supply pressure is as shown in **Specifications** section, **Gas Supply Requirements** table.

NOTE: Measure gas supply pressure at Upper Test Point (Supply Pressure) on the gas control valve.

7. Light Pilot Burners. Refer to **Operation** section, **Lighting Pilot Burners**.
8. Check pilot flame size. Re-adjust if required, using pilot adjusting screw (See Fig 3 below), and as shown in **Gas Conversion and Specifications** section, **Pilot Burner Flame Adjustment**.




Caution

Ensure the tank(s) is / are filled with either water or oil prior to starting Main Burners otherwise the fryer tank(s) may be damaged.

9. Light the Main Burners. Refer to **Operation** section, **Lighting Main Burners**.
10. Verify Supply Pressure is still correct.
11. Check Main Burner operating pressure (Adjust, using **Operating Pressure Adjusting Screw** on Gas Control Valve, see Fig 3), and as shown in **Gas Conversion and Specifications** section, **Main Burner Operating Pressure Adjustment**.

NOTE: Insufficient gas supply line capacity, indicated by operating pressure drop during maximum gas supply demand, is NOT ACCEPTABLE and may invalidate the manufacturers warranty for this appliance.

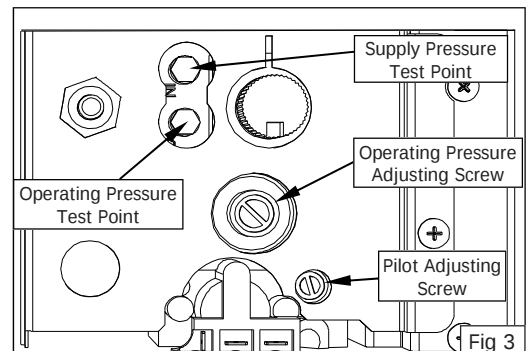

IMPORTANT:

Control Panel 'ON / OFF' Key provides 'ON / OFF' control of Controller and Main Burner heating cycles **ONLY**.

Gas Valve Control Knob is used to turn the Gas System 'ON / OFF' as well as providing Pilot Ignition and Pilot Standby functions.

Installation

Commissioning

Carry out the following commissioning checks before handing over the fryer for use, to ensure that the fryer operates correctly and operator(s) understand correct operating procedure.

1. Before leaving the new installation;
 - a. Check the following functions in accordance with operating instructions specified in the **Operation** section of this manual.
 - Light Pilot Burners.
 - Light Main Burners.
 - Check Fryer Operation (Refer to **Operation** section of this manual).
 - b. The thermostat operation check should be carried out by filling fryer with oil / shortening to the appropriate oil **FILL LEVEL** mark shown at the rear of the tank and setting the thermostat to 180°C. Light pilot burners and turn **On** main burners in accordance with **Operation Instructions** in this manual.
 - c. Once the oil is up to temperature, check the calibration of the thermostat. If a discrepancy is found, thermostat calibration should be referred to the supplier.
 - d. Ensure each operator has been instructed in areas of correct lighting, operation and shutdown procedures for this appliance.

Initial Start-Up

Before using the fryer;

- a. For first time use of the new fryer and before using fryer for cooking product, fill the fryer with oil and operate for about 1 hour at **Full Flame** setting to remove any fumes or odours which may be present in the new appliance.
 - b. Refer to Operation Section of this manual for details on how to operate the fryer.
2. This manual must be kept by the owner for future reference and a record of ***Date of Purchase***, ***Date of Installation*** and ***Serial Number of Appliance*** recorded and kept with this manual. **(These details can be found on the Rating Plate attached to the rear of the access door. Refer to 'Installation' section).**

NOTE: If it is not possible to get the appliance to operate correctly, shut 'Off' gas supply and contact the appliance supplier.

Operation Guide




Caution

- This appliance is for professional use and is only to be used by qualified persons.
- Only authorised service persons are to carry out installation, servicing or gas conversion operations.
- Components having adjustments protected (e.g. paint sealed) by the manufacturer should not be adjusted by the user / operator.

Description of Controls

- (FN8120GE Illustrated)

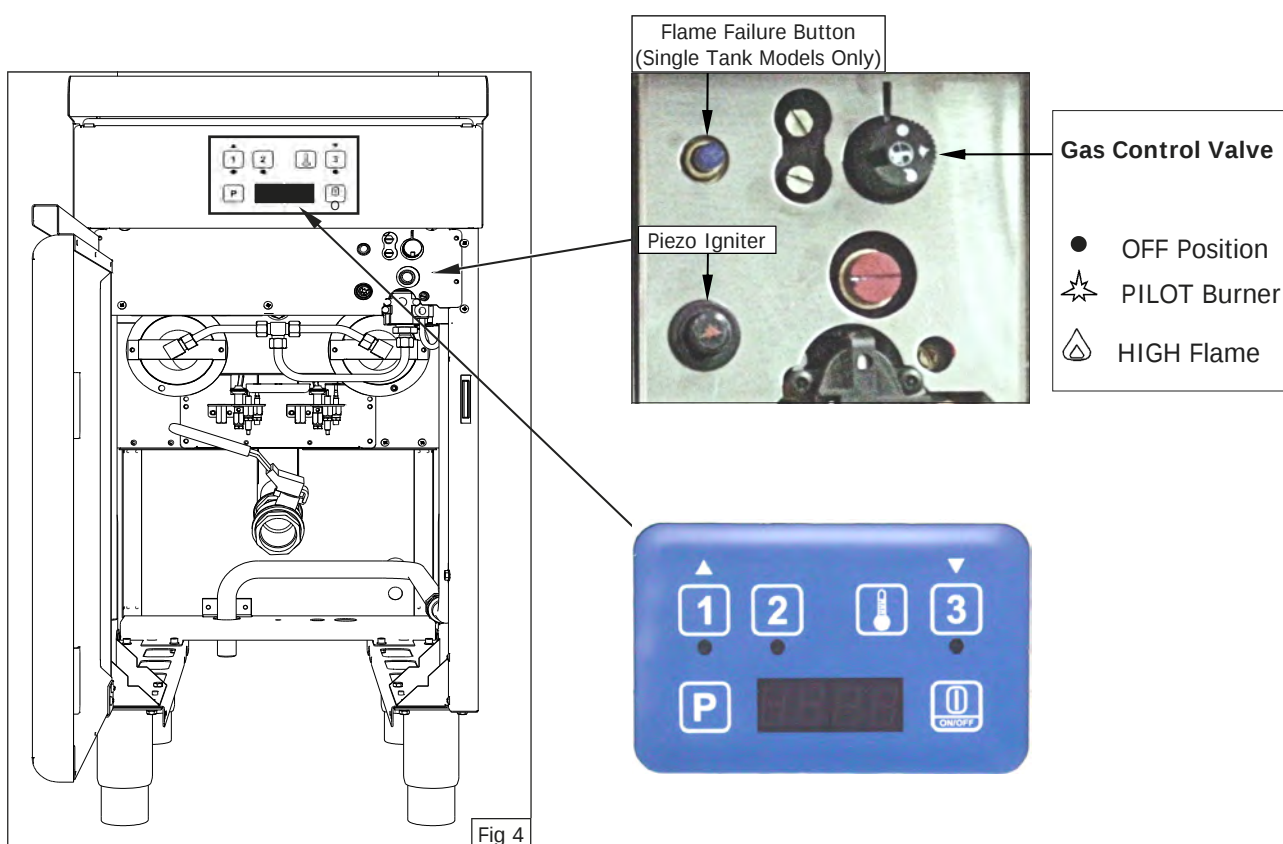

6 Touch Control Keys;-



'ON' / 'OFF' Key.



Programme Key (P).



Left Timer - 'UP' Key and LED Indicator Light.



Centre Timer - and LED Indicator Light.



Right Timer - 'DOWN' Key and LED Indicator Light.



Temperature Key (Thermostat).

The 3 Timer keys on each control panel can be used to program 3 different cook times for each tank.

NOTE: Only one temperature setting applies to all 3 timers.

Controller Basic Programming Mode

The following Parameters can be changed in Controller Basic Programming Mode:-


- Timer 1 - Cook Time Settings.
- Timer 2 - Cook Time Settings.
- Timer 3 - Cook Time Settings.
- Cooking Temperature Setting.
- Keypad 'Lock - Unlock' (Programming the Password Protection).

NOTE:

- Each Timer key on the control panel can be individually programmed with a different cook time.
- The user cannot enter Basic Programming Mode whilst a timer is running. An alarm will sound indicating the key press, but access to programming mode will be blocked.


Entering the Controller Basic Settings

1. To enter 'Programming Mode', press 'ON / OFF' key to turn 'ON' the control panel.
2. Press Programme 'P' key to access the parameter setting required.
 - a. If 'LoC' is displayed, control panel is locked which will prevent any accidental change to the operating mode.
 - b. To access parameters, whilst 'LoC' is displayed on screen, enter the passcode '1 1 3 3'.

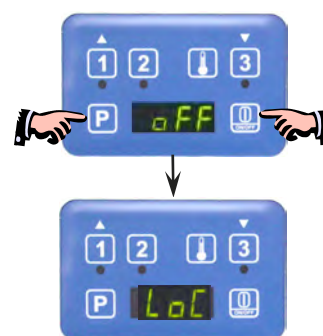

Setting the Parameters

1. To change the settings, press either  or  key until the value required is shown on the display.
2. Press Programme Key 'P' to confirm new value and the change will be accepted. Display will step on to the next parameter.

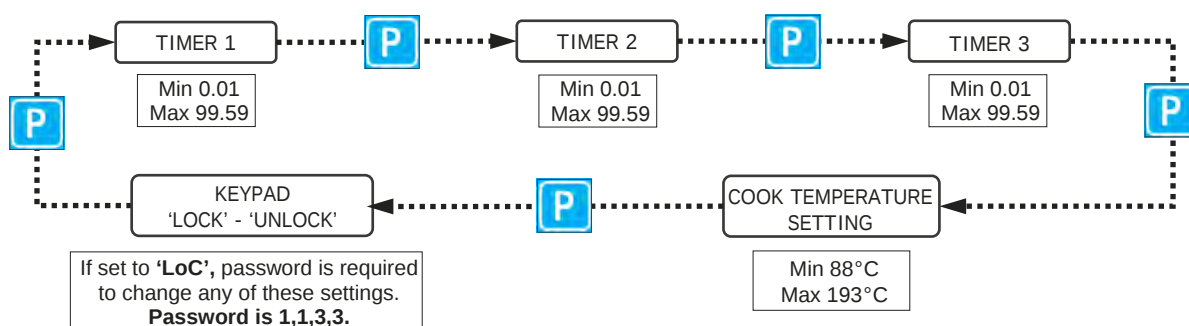

To Exit the Programming Mode.

To exit Programming Mode, press and hold Programme Key 'P' for approximately 3 seconds, or do not press any key for 2 minutes. Display will revert to 'Idle Mode'.

Filling the Tank(s)



Warning


THE OPERATOR MUST TAKE GREAT CARE TO USE THE FRYER SAFELY, TO GUARD AGAINST RISK OF INJURY AND FIRE.

- DO NOT LEAVE FRYER UN-ATTENDED DURING OPERATION.
- DO NOT REPLENISH THE OIL (FRYING MEDIUM) IN THE FRYER WHEN THE FRYER IS **HOT**.
- DO NOT OVER FILL THE OIL (FRYING MEDIUM) IN THE FRYER ABOVE THE TOP LEVEL MARK.
- DO NOT ALLOW THE OIL (FRYING MEDIUM) IN THE FRYER TO FALL BELOW THE LOWER LEVEL MARK.
- DO NOT ALLOW THE OIL (FRYING MEDIUM) IN THE FRYER TO OVERHEAT.
- DO NOT INTRODUCE WET FOOD OR WATER INTO THE **HOT** OIL (FRYING MEDIUM).
- DO NOT USE FLAMMIBLE SOLVENTS AND CLEANING AIDS ON OR IN CLOSE PROXIMITY TO THE FRYER WHILST THE FRYER IS STILL **HOT**.



Warning

DANGER OF FIRE EXISTS IF THE OIL LEVEL IS BELOW THE MINIMUM 'LO' INDICATED LEVEL

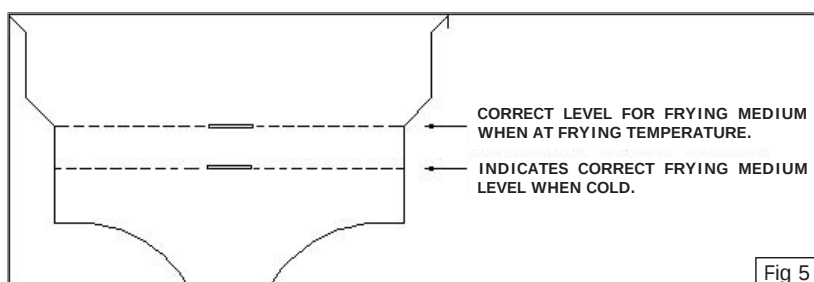

NOTE: WALDORF 'FAST-FRI' fryers can be used with both oil and shortening.

1. Before filling the tank, always check that the drain valve(s) behind the door is (are) closed. A locking slide is provided on these valves and this should always be in the locked position during use.

OIL - Carefully fill fryer tank with oil until the 'FILL-LEVEL' mark is reached.

The FN8120GE fryer will hold 20 litres of oil.

The FN8226GE fryer will hold 13 litres of oil per tank.

The FN8130GE fryer will hold 31 litres of oil.

SHORTENING - Shortening should be cut in pieces and packed down into tank.

The FN8120GE fryer will hold 37lbs shortening.

The FN8226GE fryer will hold 24lbs shortening per tank.

The FN8130GE fryer will hold 46.5lbs shortening.

- Turn 'On' the fryer. Melt cycle should be set to **CY S** on the control panel display. Refer to 'Controller Advanced Programming Mode' section to change. Heating will automatically cycle at a lower temperature to gently melt the shortening.




Operation

Lighting the Pilot Burners


FN8120GE Fryer (Single Tank)

1. Rotate gas control knob to **Pilot** position and hold knob depressed.
2. At the same time hold flame failure button depressed.
3. Press piezo igniter until right hand pilot ignites.
4. Hold gas control knob and flame failure button depressed for approx. 10 to 15 seconds after igniting pilot burner, then release, both pilot burners should remain alight.
5. If pilot burners do not ignite, repeat Items 1 to 4 above.

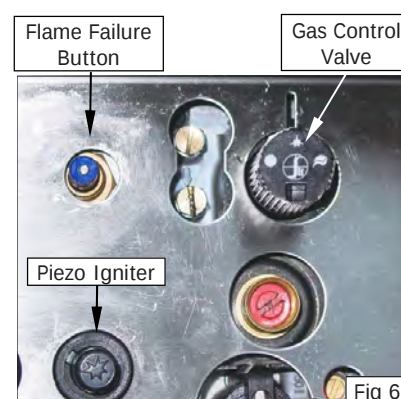

FN8130GE Fryer (Single Tank)

1. Rotate gas control knob to **Pilot** position and hold knob depressed.
2. At the same time hold flame failure button depressed.
3. Press left and right piezo igniters until both pilots ignite.
4. Hold gas control knob and flame failure button depressed for approx. 10 to 15 seconds after igniting both pilot burners, both pilot burners should remain alight.
5. If pilot burners do not ignite, repeat Items 1 to 4 above.

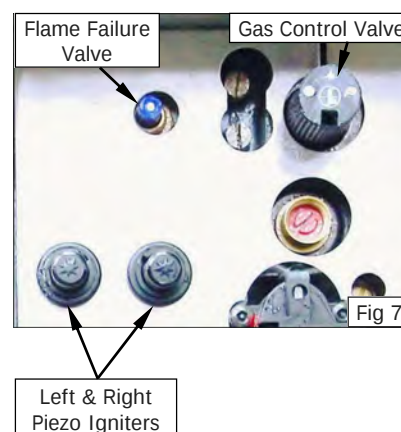

FN8226GE Fryer (Twin Tank)

1. Rotate gas control knob to **Pilot** position and hold knob depressed.
2. Press the piezo igniter until pilot ignites.
3. Hold gas control knob depressed for approx. 10 to 15 seconds after igniting pilot burner, pilot burner should remain alight.
4. If pilot burner does not ignite, repeat Items 1 to 3 above.
5. To ignite the second pilot burner, repeat Items 1 to 3 above.



Lighting the Main Burners

1. Ensure pilot burners are alight, by opening the front access door of the appliance and checking that both pilot flames are alight.
2. Depress and rotate gas control knob to **Full Flame** position.
3. Main burners will ignite automatically off pilot burners, as controlled by the digital controller.




NOTE: As a safety precaution all WALDORF 'FAST-FRI' Fryers feature an Over-Heat Control, which will 'Turn Off' the fryer should there be a thermostat failure and the oil temperature reaches over 220°C.

Fryer Operation (Flow Chart)

Refer to 'Controller Basic Programming Mode' at the start of this section for basic programmable settings for the controller.


Refer to 'Controller Advanced Programming Mode' section for controller advanced programming.

If Melt Cycle is turned ON.

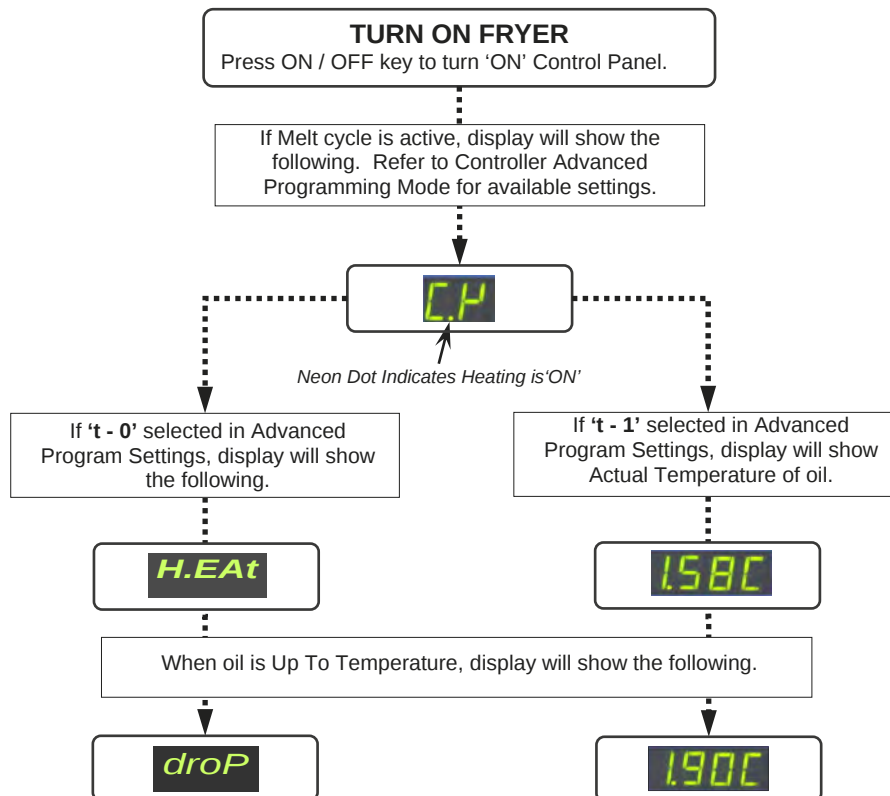

Fryer can now be used without using the Timers, if required.

If Melt Cycle is turned OFF.

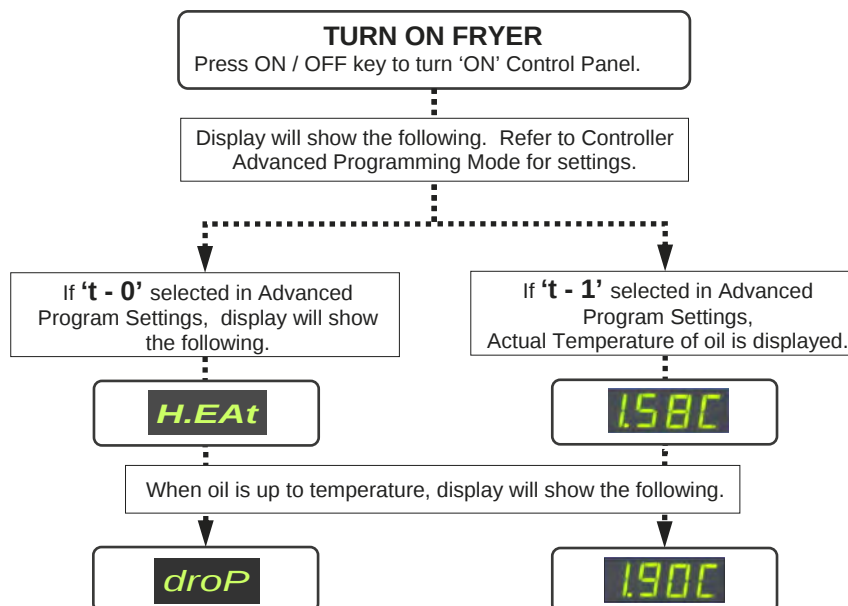


Fryer can now be used without using the Timers, if required.

Operation


To Use the Timers

NOTE: Refer to 'Basic Programming Mode' for information on how to set the Timer Pre-Set times.

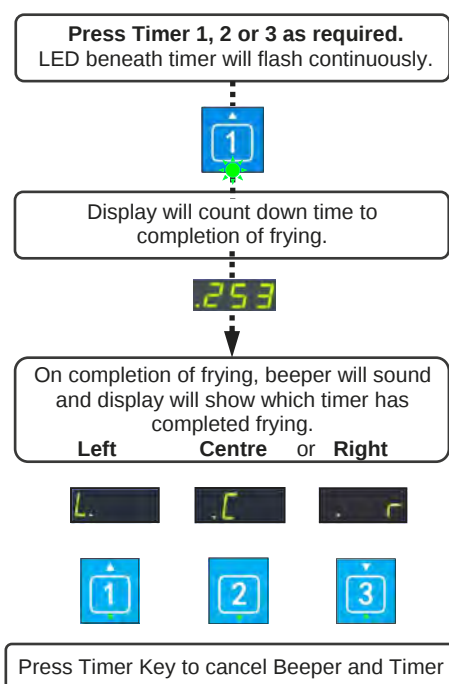

To Use the Temperature Display

NOTE: Refer to 'Basic Programming Mode' for information on how to set the Cooking Temperature.

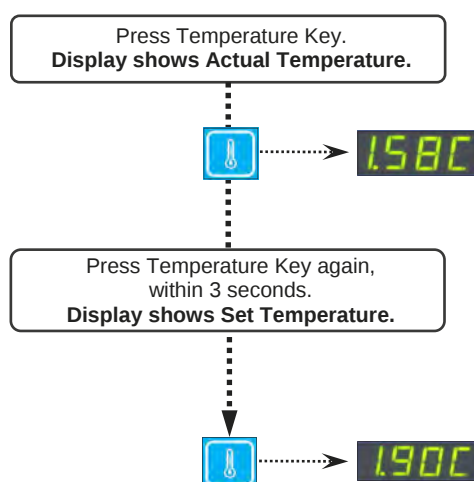

Turning 'OFF' the Fryer

To 'Pilot' Position

- Depress and rotate gas control valve clockwise to the **Pilot** position.
- Main burners will extinguish and **Pilot** will remain alight.

To 'Off' Position

- Depress and rotate gas control valve fully clockwise to the **Off** position.
- The **Pilot** burners will extinguish.

IMPORTANT:

Should any abnormal operation like;

- ignition problems,
- abnormal burner flame,
- burner control problems,
- partial or full loss of burner flame in normal operation,

If any of the above problems are noticed, the appliance requires **IMMEDIATE** service by a qualified service person and should not be used until a service is carried out.

General



Warning

DO NOT USE FLAMMABLE SOLVENTS AND CLEANING AIDS ON OR IN CLOSE PROXIMITY TO FRYER WHILST FRYER IS STILL HOT.



Caution

Always turn 'Off' gas supply before cleaning the fryer.

This appliance is not water proof.

Do not use water jet spray to clean interior or exterior of this appliance.

- To achieve the best results, cleaning must be regular and thorough and all controls and mechanical parts checked and adjusted periodically by a qualified service person. If any small faults occur, have them attended to promptly.
- Don't wait until they cause a complete breakdown. It is recommended that the appliance is serviced every 6 months.
- Clean the fryer regularly. A clean fryer looks better, will last longer and will perform better.

NOTE:

- **DO NOT use abrasive detergents, sharp scrapers, strong solvents or caustic detergents as they could corrode or damage the fryer.**
- **Ensure that any detergent or cleaning material have been completely removed after each cleaning.**

To keep your fryer clean and operating at peak efficiency, follow the procedures below:-

Draining and Daily Cleaning

1. At end of each day or at end of each shift, if frying schedule is heavy, frying medium should be drained and filtered into a receptacle.



Warning


DO NOT ATTEMPT TO MOVE FRYER WHILST FRYER IS FULL OF OIL.



Caution

**Never drain the fryer with power or burners turned 'ON'
Always switch 'OFF' the fryer before draining or re-filling the tank.**

2. Always filter fryer when cool zone under burners is hot and liquid. A cold fryer heated up won't drain, because frying medium in this zone will remain hard if using solid fat / oils.
3. Screw drain extension pipe onto end of drain valve (see Fig 10) and position a suitable container and filter under drain extension pipe.

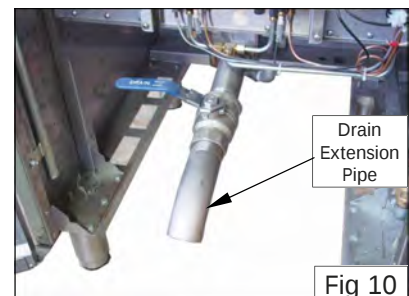

Cleaning and Maintenance

Opening the Drain Valve



Warning

HOT OIL WILL BURN - DO NOT RUSH THIS JOB.

- a. Lift locking slide on valve handle (Fig 11) to release valve.
- b. While holding locking slide in withdrawn position, rotate handle anticlockwise (Fig 12) to open valve.
- c. When valve is closed, locking slide will drop down over locking valve to prevent accidental opening of valve as shown in Fig.11.

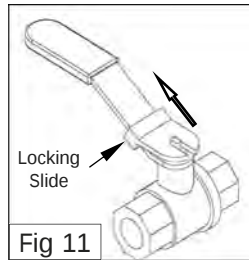


Fig 11

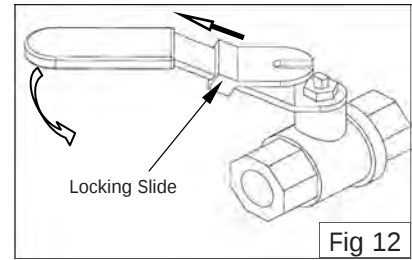


Fig 12

4. Do not empty total fryer contents into one large container, as this will be dangerous and may be difficult, when lifted up, to pour hot oil back into tank.
5. Slip a muslin or other suitable filter bag over the end of the drain valve. Crumbs will be caught in the bag but frying medium will strain freely through into receptacle.
6. Open drain valve slowly to minimise splashing, and take care not to overfill container.
7. If necessary, use the drain stick (see Fig 13) to dislodge any blockages in the drain.
8. When tank has been drained, use a ladle or small pan with a handle and dip into hot frying medium from container and pour around sides and bottom of tank to wash out crumbs and particles adhering to tank.
9. Continue to dip and pour until all crumbs are washed down and into filter bag.
10. Open drain valve fully and check for any particles or crumb residue lodged in valve. Clean out valve with a stiff nylon brush. Do not use a wire brush as this can damage valve seating and will eventually lead to leakage. If obstruction cannot be removed with a brush, use a wooden probe to dislodge obstruction.
11. Wipe all exterior panels with a cloth dampened with detergent and rinse off any residue with clean warm water.
12. Clean Control Panel with a damp cloth lightly moistened with a solution of water and a commercial quality foodservice approved detergent.
13. Once the daily cleaning operation is completed, close drain valve and pour frying medium back into tank.

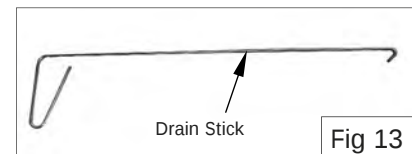


Fig 13

Weekly Cleaning

NOTE: If fryer usage is very high, we recommend that the weekly cleaning procedure is carried out more frequently.

1. Proceed to drain and filter the tank as for 'Daily Cleaning'. Do not refill tank with frying medium until it has been cleaned as shown below.
2. Fill fryer with cold water to normal fill level and add a high quality commercial cleaner that has been specifically formulated for fryers. *All purpose cleaners are not recommended.*

NOTE: Never use a caustic or lye solution, as this will leave a fat destroying film on the tank.

3. Heat water to approximately 80-90°C.
4. Clean fryer baskets at same time by simply immersing them in the cleaning solution. Allow fryer to soak for 5-10 minutes or as directed on cleaner instructions. Remove baskets and turn **Off** main burners.
5. Scrub baskets and fryer tank with a stiff nylon bristle brush to remove any remaining deposits. **DO NOT use a wire brush, as this will scratch the sides.**
6. Empty fryer and rinse thoroughly with water. Use a 1 part vinegar to 15 parts water solution to rinse tank and neutralise any cleaner residue. If this proves unsuitable for cleaner being used, use a weaker solution of up to 1 part vinegar to 25 parts water.
7. Rinse tank thoroughly with water, drain and dry.
8. Refill tank with new filtered frying medium.

Stainless Steel Surfaces

- a. With tank(s) drained, cleaned and dried as shown above, clean exterior surfaces of fryer with hot water, a mild detergent solution and a soft cloth.
- b. Dry all components thoroughly with a dry cloth and polish with a soft dry cloth.
- c. To remove any discoloration, use an approved stainless steel cleaner or stainless steel wool. Always rub in direction of grain.

Periodic Maintenance

NOTE: All maintenance operations should only be carried out by a qualified service person.

To achieve the best results, cleaning must be regular and thorough. All controls and mechanical parts should be checked and adjusted periodically by a qualified service person. If any small faults occur, have them attended to promptly. Don't wait until they cause a complete breakdown. It is recommended that the appliance is serviced every 6 months.

Guide to Cooking Problems with Fryer

This section provides an easy reference guide to the more common problems that may occur during the operation of your equipment. The fault finding guide in this section is intended to help you correct, or at least accurately diagnose problems with your equipment.

Although this section covers the most common problems reported, you may encounter a problem not covered in this section. In such instances, please contact your local authorised service agent who will make every effort to help you identify and resolve the problem. Please note that the service agent will require the following information:-

- **Model Code and Serial Number of appliance. (both can be found on Rating Plate located on appliance).**

Fault	Possible Cause	Remedy
Frying medium foaming.	Presence of soap or detergent residue from cleaning tank.	Rinse fryer thoroughly three times with clean water. Ensure fryer is perfectly dry before re-filling with frying medium.
	Excessive breakdown of frying medium.	Add fresh frying medium daily to replace contents every 3-5 days.
	Continual frying of food with excess moisture.	Remove excess moisture from foods to be fried.
	Continued overheating of oil.	Check thermostat setting. Turn down heat to around 140°C (Standby) when use is quiet.
	Overloading	Maintain 1-8 ratio of food to frying medium.
Gumming.	Heating frying medium too rapidly.	When charging fryer or starting up, melt frying medium gradually.
	Continued overheating of frying medium.	Check oil temperature by using a thermometer or thermocouple.
	Frying oil broken down.	Check amount of fresh frying medium added to fryer to be sure 'turnover' is adequate.
	Using wrong frying medium.	Some frying mediums form gums when used in a deep fryer. e.g safflower oil.
Greasy foods.	Frying at too low a temperature.	Increase temperature and check thermostat setting.
	Inadequate preparation of food.	Be sure foods (especially potatoes) are 'cured' correctly.
	Excessive quantities of breading or batter.	Remove surplus breading or batter.
	Placing food in frying medium direct from freezer.	Allow frozen foods to thaw before frying.
	Surplus moisture in and on surface of food.	Drain and dry foods before frying.
	Frying medium in advanced stages of breakdown.	Discard 'old' frying medium and refill fryer with new medium.
	Use of dripping or other unrefined oil.	Due to low smoking point, cooking in these oils at lower temperatures will result in greater oil absorption by food.
	Using wrong kind of cooking oil.	Always use a completely refined and deodorised cooking oil.


Fault	Possible Cause	Remedy
Rapid oil breakdown.	Inadequate frying oil turnover.	Adjust procedures to fry more food in fryer to increase turnover.
	Oil overheating.	Check oil temperature by using a thermometer or thermocouple.
	Contamination.	Filter or strain oil daily.
	Poor cleaning procedures.	Clean fryer each day or at least once a week and rinse thoroughly. Dry fryer before use.
	Presence of copper or brass in the fryer equipment.	Remove all copper or brass fittings from contact with oil.
	Overloading fryer.	Maintain 1-8 ratio of food to frying oil.
	Food excessively moist.	Drain and dry food before frying.
	Overheating oil on 'Standby' mode.	Turn control to Pilot position during idle ('Standby') periods.
Oil smoking.	Insufficient turnover of oil.	Maintain a minimum quantity of oil in fryer for more rapid turnover or increase quantity of food fried in fryer. Replace with fresh oil every 3 to 5 days.
	Continual frying with excess moisture on food.	Drain foods before frying, pat food dry.
	Contamination of oil.	Filter or strain daily to remove contaminants.
	Oil overheating.	Check oil temperature by using a thermometer or thermocouple.
	Rapid breakdown of oil.	Use a stable frying oil.
	Use of unrefined oils.	Dripping smokes at lower temperature than refined and deodorised oils.
Darkening of oil.	Presence of salt on the food.	Salt food after frying and away from fryer.
	Foods dipped in batter high in egg yolk.	Reduce egg content of batter, replace part egg with milk.
	Contamination of oil.	Filter or strain oil daily to remove contaminants.
	Poor cleaning practice.	Clean fryer at least once a week or each day in cases of heavy usage. Ensure fryer is perfectly dry before use.
	Overheating of oil.	Check oil temperature by using a thermometer or thermocouple.
	Insufficient oil turnover.	Top up daily to replace contents of fryer in 3 to 5 days.
	Cooking foods with high sugar levels.	Potatoes are usually high in reduced sugars at the end of a season. When fried, they will darken quickly and discolour the oil.

NOTE: Excessive usage of oil is an indication of high absorption of oil into the food. This is a function of temperature and character of the goods being fried - NOT due to the type of oil being used (unless refined oils are being used). Any variation in the apparent life of the oil is always due to one or more of the causes mentioned above.

Fault Finding the Gas System


Fault	Possible Cause	Remedy
Pilot Burners will not light.	Gas supply is turned Off .	Turn On gas supply.
	Gas bottles empty.	Replace gas bottles.
	Blocked pilot burner.	Call for service.
	Faulty piezo ignition.	Call for service. NOTE: Pilot can be manually lit until repair is carried out.
Pilot Burner lights then goes out when Gas Control Button is released.	Gas valve control button not held In for long enough.	Hold In for at least 10 seconds after ignition of the pilot.
	Blocked / weak pilot.	Call for service.
	Low gas pressure.	Call for service.
	Faulty thermocouple.	Call for service.
	Faulty overtemp.	Call for service.
	Faulty gas control valve.	Call for service.
Pilot Burner goes Out during operation.	Low / fluctuating gas pressure.	Call for service.
	Weak pilot.	Call for service.
	Faulty thermocouple.	Call for service.
	Faulty overtemp.	Call for service.
	Faulty gas control valve.	Call for service.
	Overtemp tripped, pilot is turned Off if temperature exceeds 220°C.	Call for service.
Main Burners do not light.	Low gas pressure.	Call for service.
	Blocked pilot.	Call for service.
	Faulty thermostat.	Call for service.
	Faulty gas control valve.	Call for service.
Main Burners do not burn correctly. (Burners roar or flash back to Main Injector).	Faulty burner.	Call for service.
	Blockage in flue.	Call for service.

FN8120GE / FNL8120GE Fryer Schematic

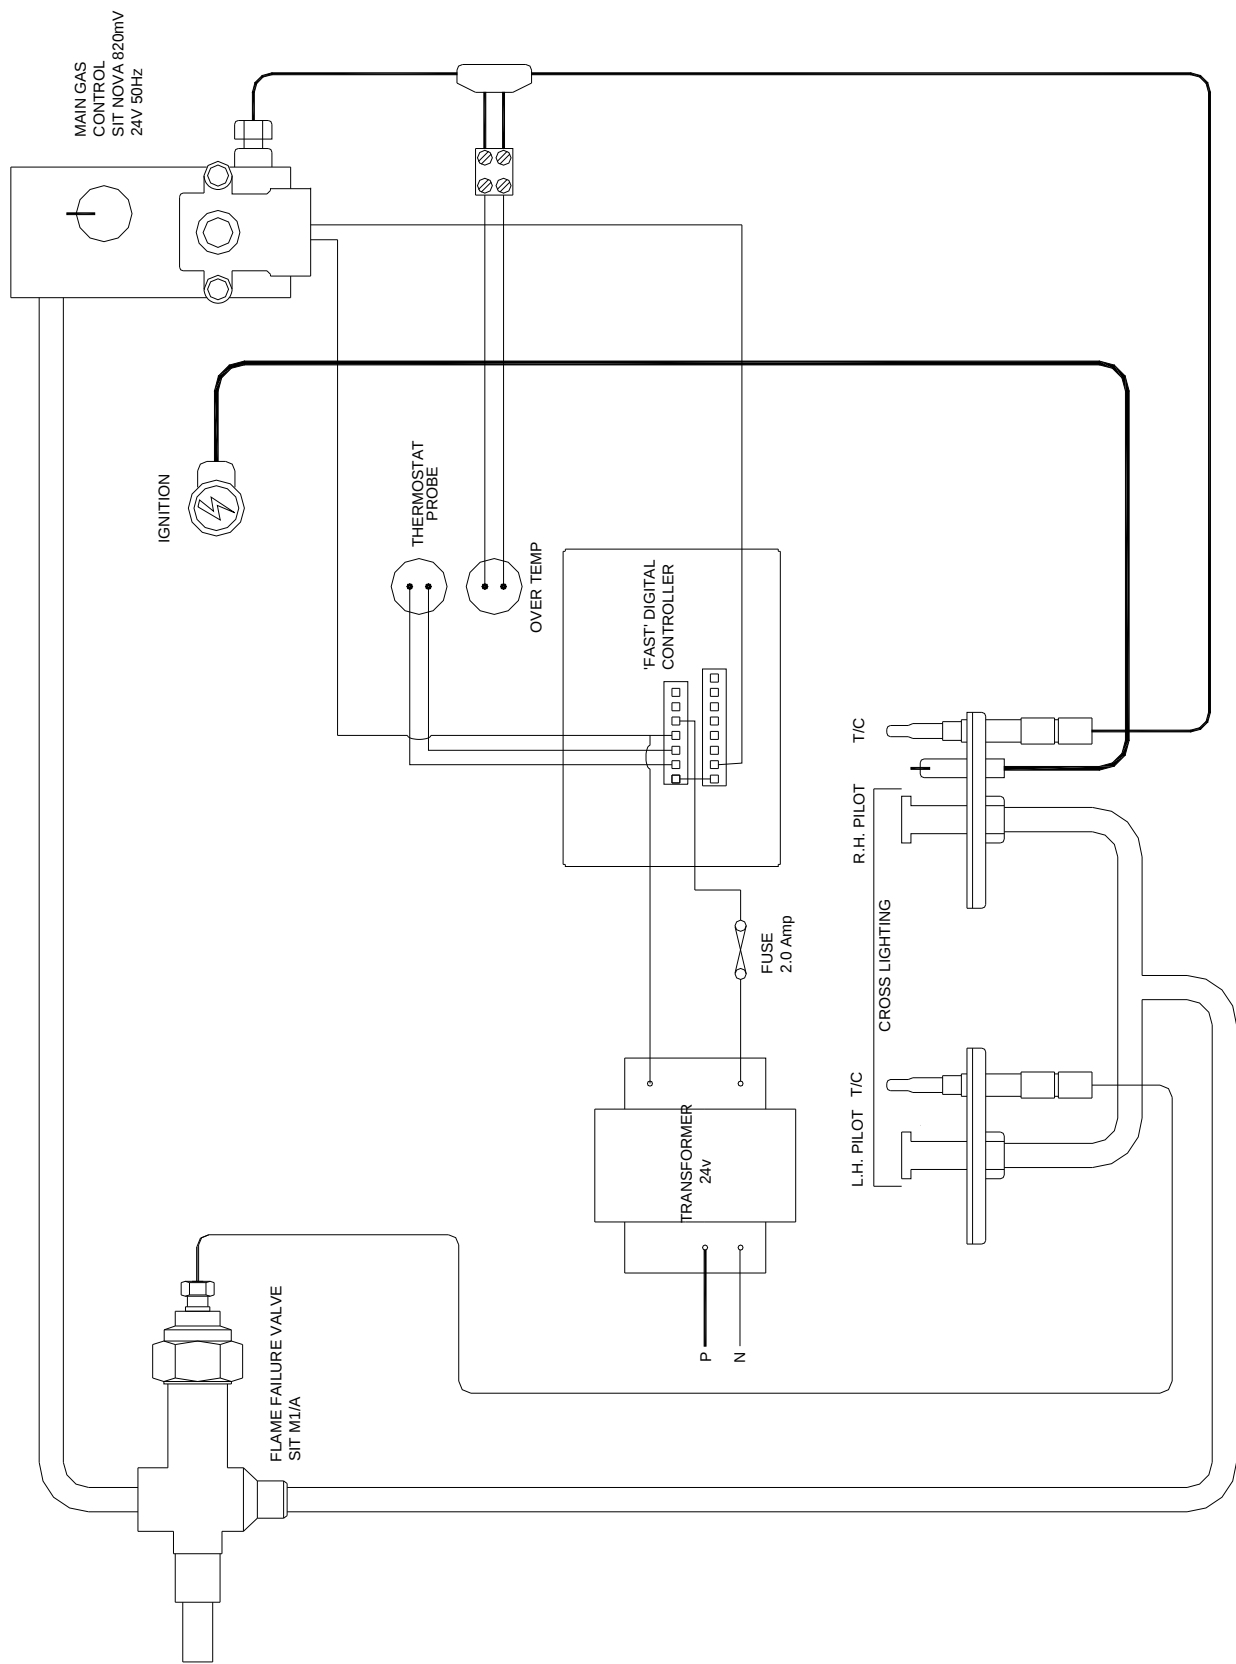


Wiring Schematics

FN8226GE / FNL8226GE Fryer Schematic

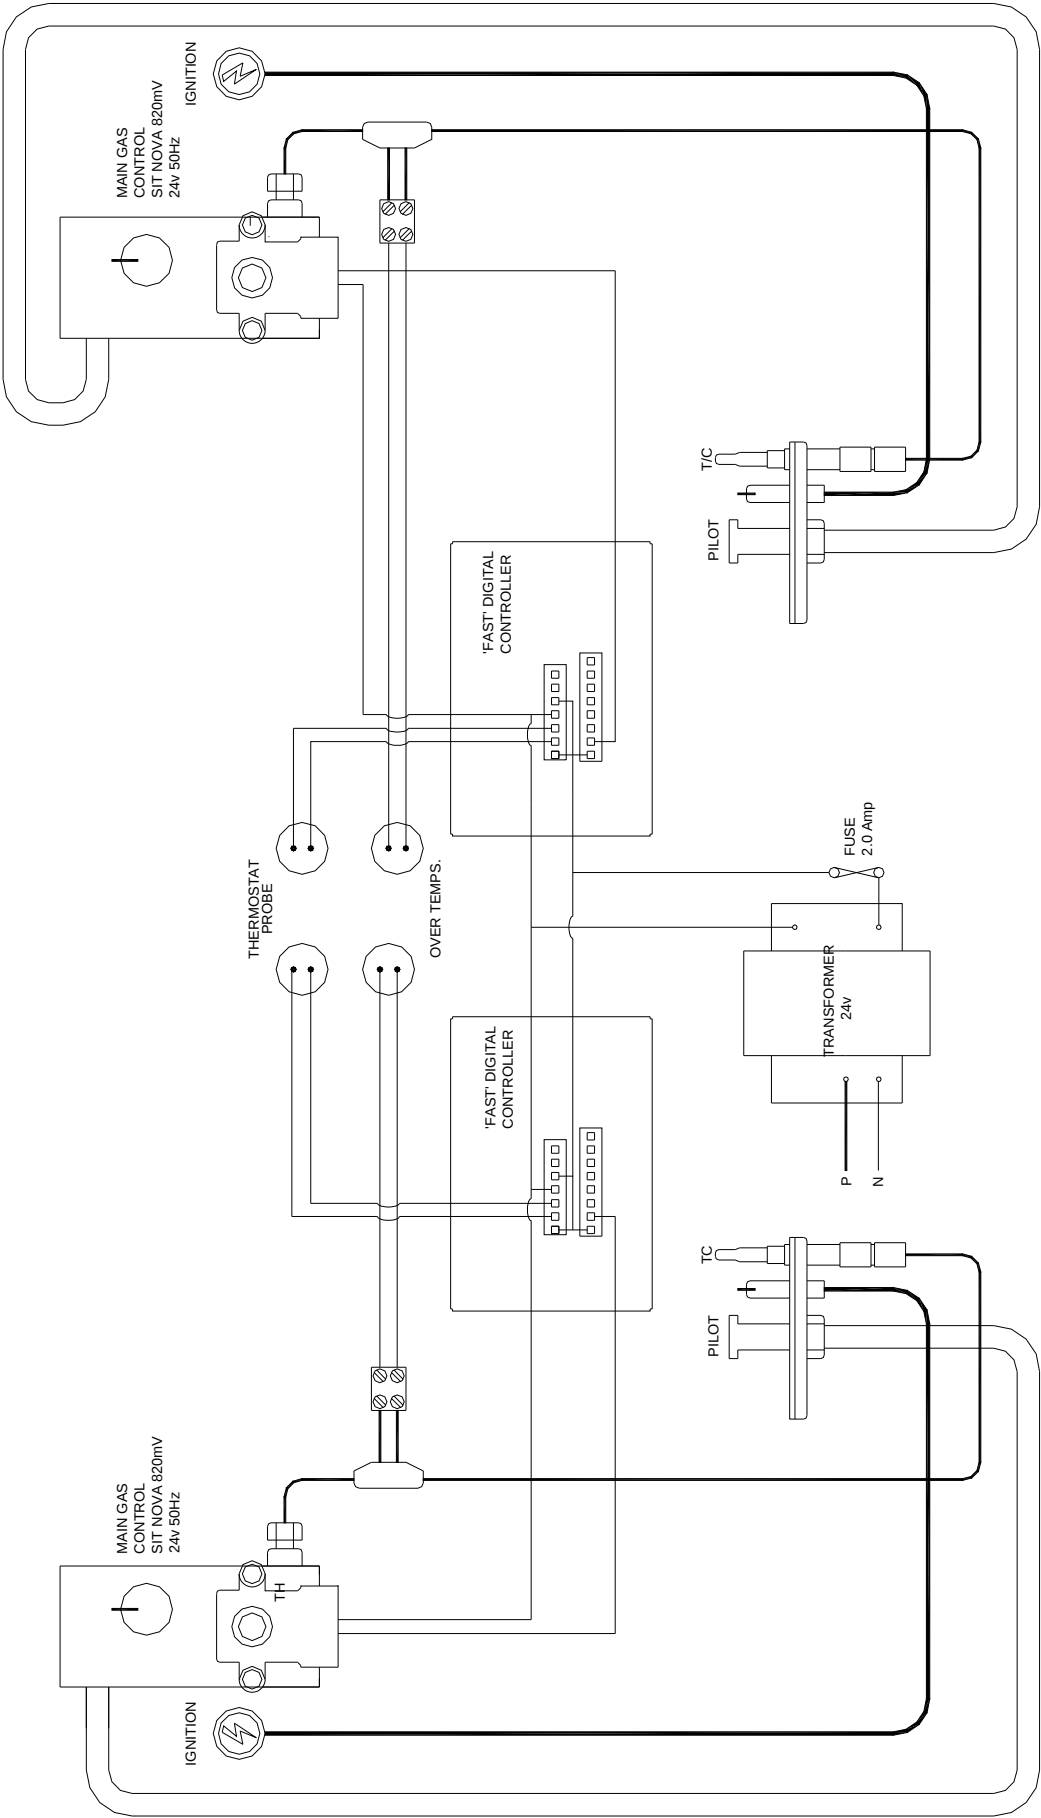

FN8130GE / FNL8130GE Fryer Schematic


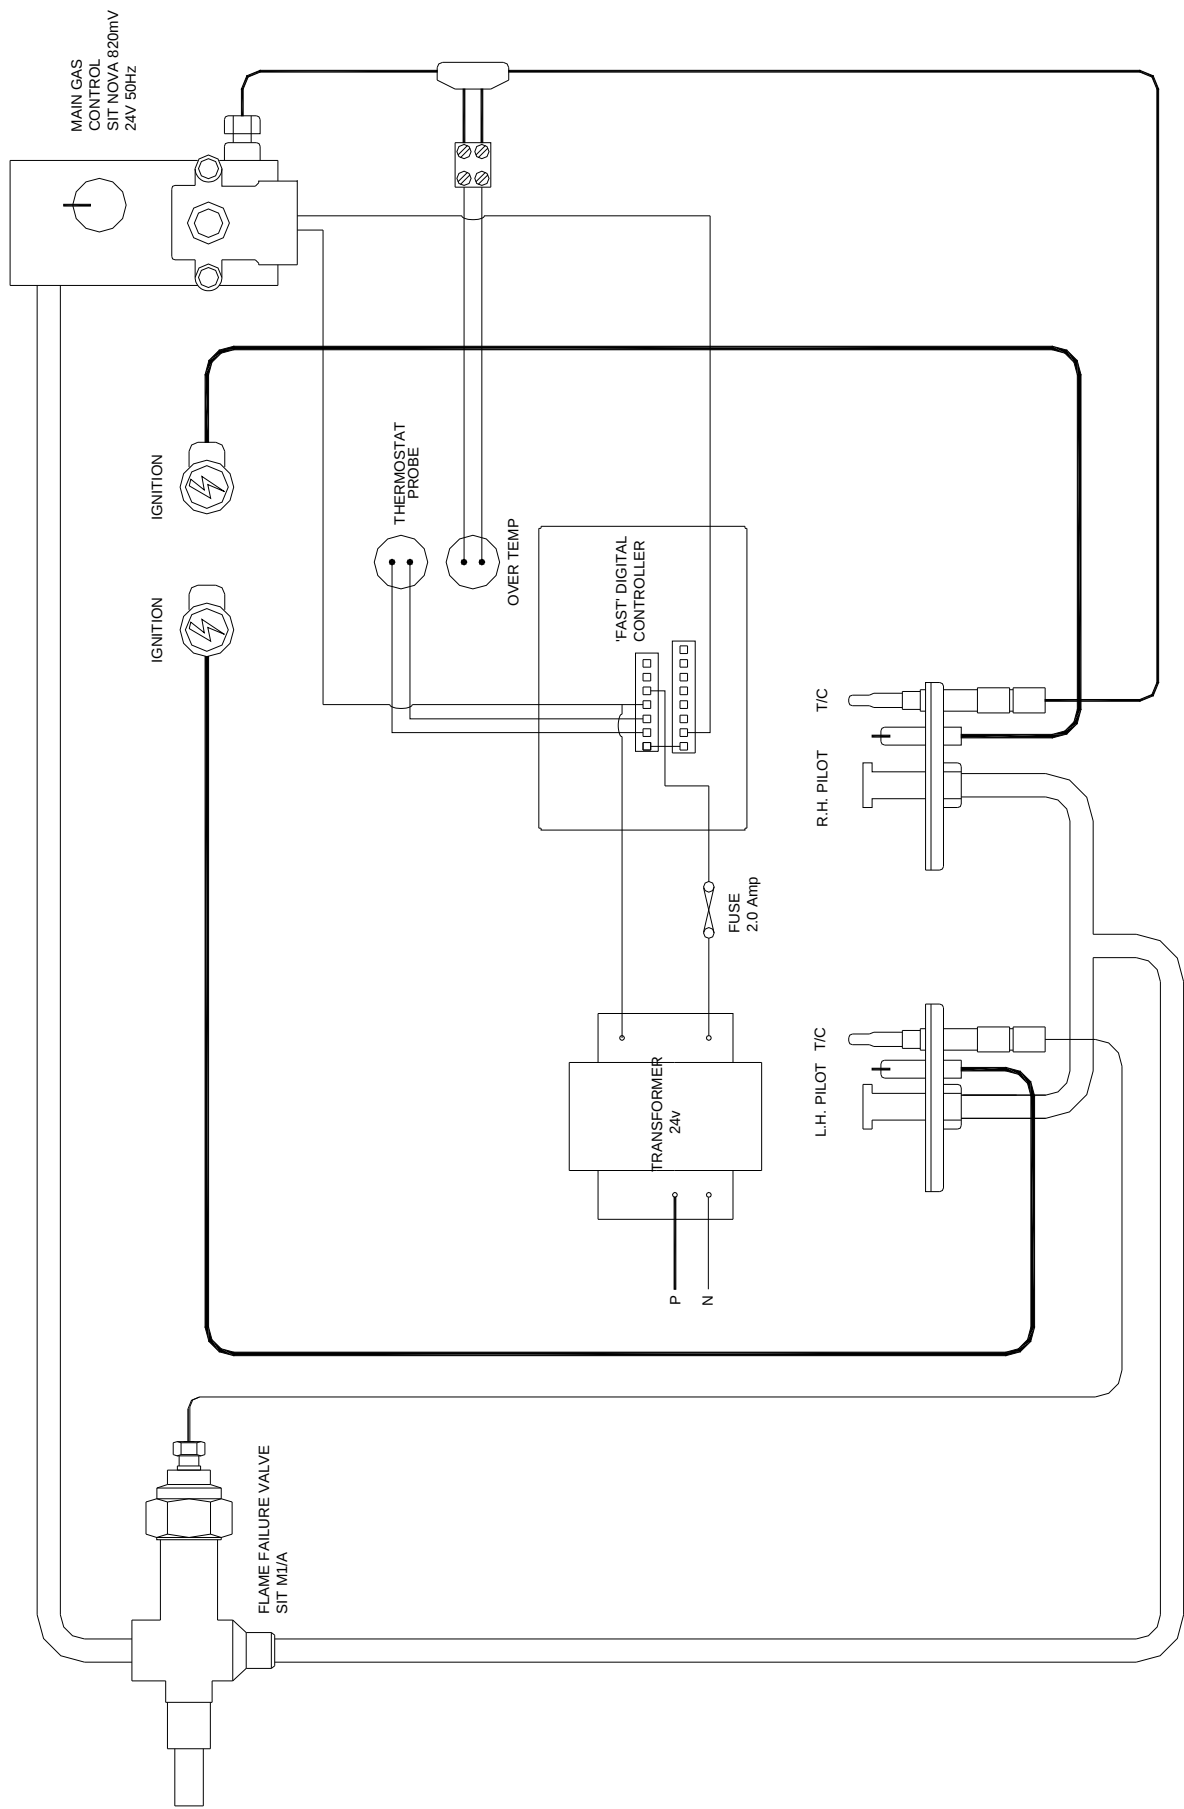


Controller Advanced Programming Mode

The following Parameters can be accessed and adjusted in the Advanced Programming Mode:-

- Timing Mode (Straight or Flexi cook time).
- Temperature Offset (Calibration Setting) -14° to $+14^{\circ}$.
- Temperature Display Mode (Temp display or prompt display).
- Programming the Melt Cycle.
- Setting the Temperature Units (either $^{\circ}\text{C}$ or $^{\circ}\text{F}$).
- System Programmable Default Settings.

1. Press the 'ON / OFF' key to turn 'ON' fryer controller.
2. Press Programme Key 'P' and 'Timer 1' key together to enter 'Advanced Programming Mode'.
3. If 'LoC' is displayed, password protection is turned 'ON' and control panel is locked. Unlock the control panel, refer to 'Controller Basic Programming Mode' - 'Entering the Controller Basic Settings', and repeat from Item 2 above.

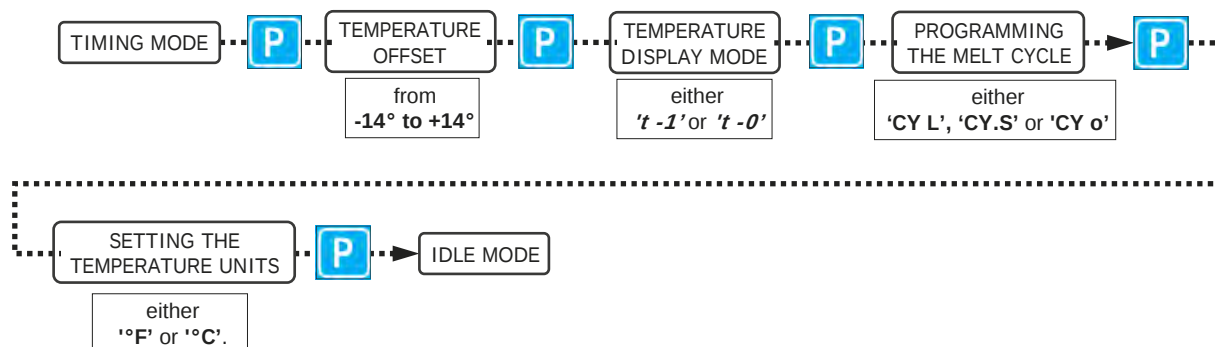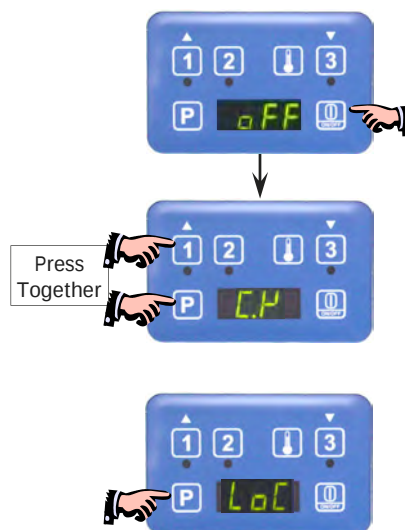

Timing Mode

1. One of the following options will display:-


Straight Cook Time

Straight cook time refers to real time cooking.

Flexible Cook Time

Cook time can be automatically adjusted to compensate for size of load being cooked.

2. To change 'Timing Mode', press either 'Timer 1' or 'Timer 3' key.
3. Press Program Key 'P' to confirm options, the change will be accepted and display will step on to 'Temperature Offset' parameter.

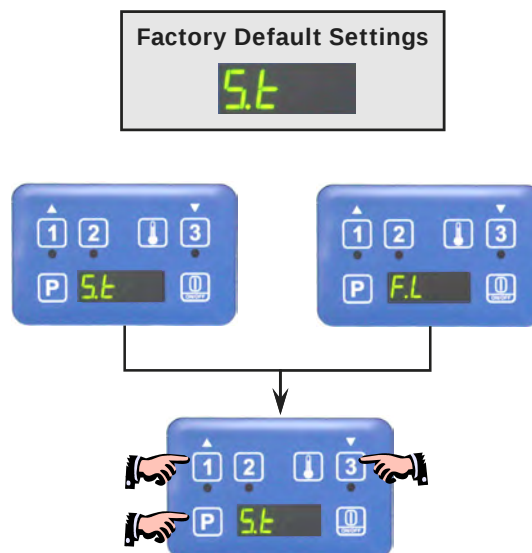

Temperature Offset

The display temperature can be adjusted by between -14° to +14°.

Factory Default Settings

0°

To Calibrate the Control Temperature

- Set control temperature to 170°.
 - Measure the oil temperature that the control is cycling at.
 - If oil temperature is **higher** than reading on control panel, enter a **positive** value of the difference between oil temperature and set temperature (170° + difference).
 - If oil temperature is **lower** than reading on control panel, enter a **negative** value of the difference between oil temperature and set temperature (170° - difference).
1. Temperature offset will appear on the screen.
 2. To change temperature offset option, press either 'Timer 1' or 'Timer 3' key to change selection.
 3. Press Program Key 'P' to confirm the change and the display will step on to 'Temperature Display' parameter.



Temperature Display Mode

Factory Default Settings

t. -0

Temperature display can be set for either of two display modes:-

't - 1' - Display will show oil temperature as an actual temperature.

't - 0' - Display will show one of the following temperature status;


'HEAt' - Awaiting for fryer to heat up to set temperature.



'droP' - When fryer is within 10° of set temperature to indicate that fryer is ready for loading.



1. One of the following options will display:-
2. Press either 'Timer 1' or 'Timer 3' key to select option required.
3. Press Program Key 'P' to accept the change and display will step on to the 'Programming the Melt Cycle' parameter.

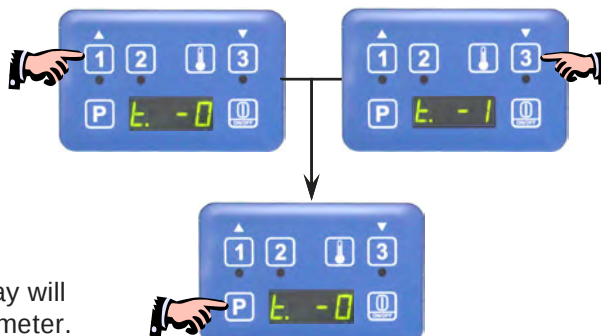


Controller Advanced Programming Mode

Programming the 'Melt Cycle'.

1. One of the following 3 options may be selected:-


- 'L' (Liquid).
- 'S' (Solid).
- 'O' (Override).

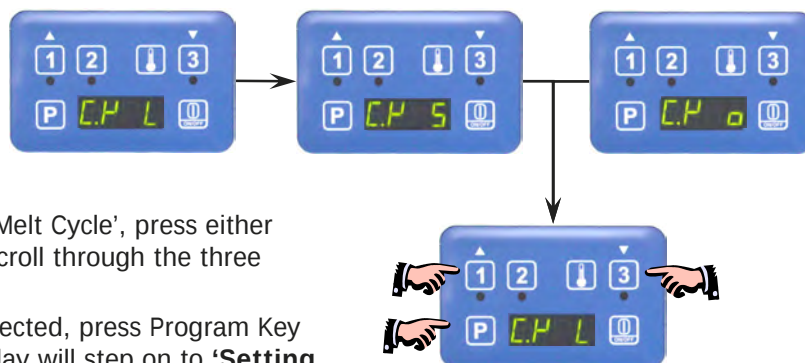

2. To change the programmed 'Melt Cycle', press either 'Timer 1' or 'Timer 3' key to scroll through the three options.
3. Once the desired option is selected, press Program Key 'P' to accept the change, display will step on to **'Setting the Temperature Units'**.

Setting the 'Temperature Units'.

1. User may select from 'F' (Fahrenheit) or 'C' (Celsius).
2. Press either 'Timer 1' or 'Timer 3' key to change selection.
3. Press Programme Key 'P', the change will be accepted and display will revert to **'Idle Mode'**.

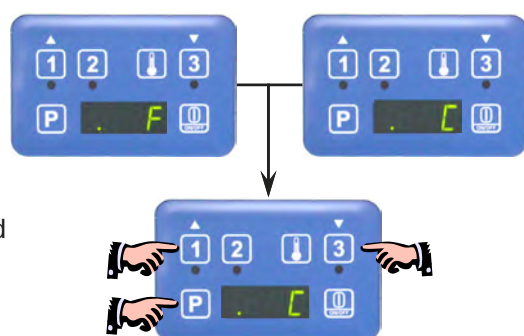

NOTE:

- Pressing and holding Programme Key 'P' for approximately 3 seconds (Or not pressing any keys for 2 minutes) during Advanced Programming Mode, the appliance will exit Advanced Programming Mode and return to Idle Mode.

System Programmable Default Settings

The table below shows a list of the programmable parameters and the default settings for this appliance. These settings can be edited from the Control Panel when in either **'Controller Basic Programme Mode'** or **'Controller Advanced Programming Mode'**.

Programmable Default Settings	
Controller Basic Programming Mode	Default Settings
Timer 1 'L' Cook Time	3:00 min.
Timer 2 'Ctr' Cook Time	3:00 min.
Timer 3 'R' Cook Time	3:00 min.
Temperature Set Point	177°C (350°F).
Keypad Lock or Unlock	Unlock.
Controller Advanced Programming Mode	Default Settings
Timing Mode	S.t (Straight).
Temperature Offset	0°.
Temperature Display Mode	t. -0 = 'HEAt' or 'droP'.
Melt Cycle Mode	L (Liquid).
Degrees; °F or °C	°C.

Conversion Procedure



Caution


Ensure Appliance is isolated from gas supply before commencing servicing.

NOTE:

- These conversions should only be carried out by qualified persons. All connections must be checked for leaks before re-commissioning the appliance.
- Adjustment of components that have adjustments / settings sealed (e.g. paint sealed) can only be adjusted in accordance with the following instructions and should be re-sealed before re-commissioning this appliance.
- For all relevant information and specifications refer to table at end of this section.

Main Burners

1. Remove main burner injectors and replace with correct size injectors as shown in **Gas Specifications** table.

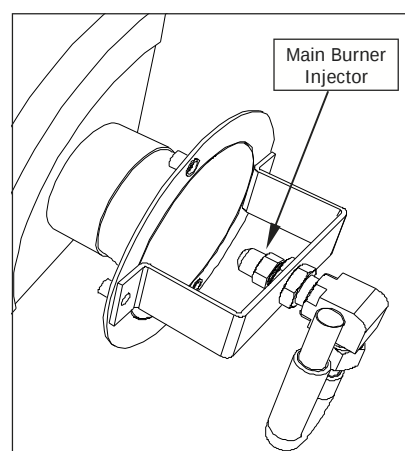


Pilot Burners

1. Remove the following:-
 - Gas supply tube to the pilot burner.

NOTE: Remove the piezo igniter electrode from mounting bracket before unscrewing pilot supply tube.

2. Remove pilot burner injector and replace with correct size injector as shown in **Gas Specifications Table** at rear of this section.
3. Refit the following:-
 - Gas supply tube to pilot burner.
 - Piezo igniter electrode.

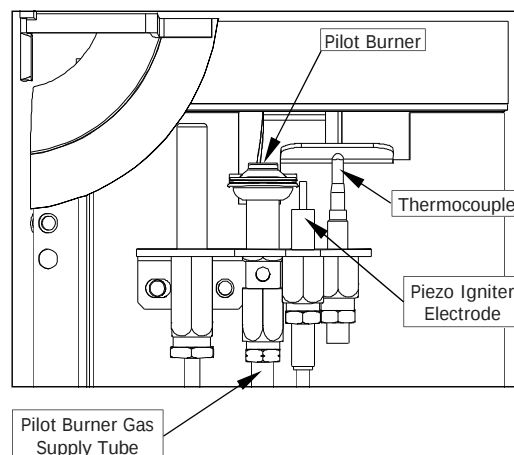

Gas Conversion and Specifications

Gas Controller


NOTE: For Twin Tank Fryers only, the units will be fitted with 2 gas control valves. These valves operate independently of each other. Gas regulator and pilot adjustment will need to be carried out separately for each gas valve.

Main Burner Supply Pressure Check

- Connect a manometer to the upper test point (**Supply Pressure**) on the gas control valve.


Main Burner Operating Pressure Adjustment

- Connect a manometer to the lower test point (**Operating Pressure**) on the gas control valve.
- Remove slotted cap to reveal **Operating Pressure Adjusting Screw**.
- Light main burners and turn the operating pressure adjusting screw to obtain correct burner pressure for type of gas being used. Refer to **Gas Specifications Table** at rear of this section.
- Refit slotted cap to screw adjustment point.

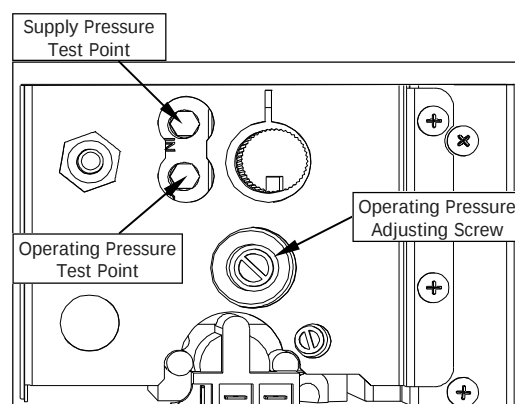

Pilot Burner Flame Adjustment

- Once main burner operating pressure has been set, adjust pilot burner supply so that the impingement of the pilot flame on the thermocouple is correct and main burner pilot flame ignites main burners satisfactorily.
- Adjust pilot flame size by adjusting **Pilot Burner Adjusting Screw**. Pilot burner flame should be approximately 1" long for main burner ignition. Anti-clockwise rotation of adjustment screw will increase pilot flame size.

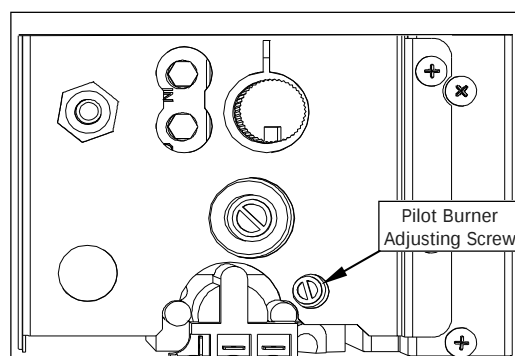

Gas Type Identification Label

On completion of gas conversion, replace gas type identification label located at:-

- Rear of appliance, above gas connection point.
- Beside rating plate on inside of access door.

Commissioning

Before leaving the converted installation;

- Check all gas connections for leakages using soapy water or other gas detecting equipment.



Warning

DO NOT USE A NAKED FLAME TO CHECK FOR GAS LEAKAGES.

- Carry out a **Commissioning** check of the appliance as shown in Installation Section of this manual.
- Ensure any adjustments done to components that have adjustments / settings paint sealed, components are to be re-sealed.

NOTE: If it is not possible to get appliance to operate correctly, shut 'Off' gas supply and contact supplier of this appliance.

Gas Specifications

- Australia

	Natural Gas	LP Gas (Propane)
Main Burner Injectors	Ø 3.10mm	Ø 1.90mm
Pilot Burner Injectors	0.62	0.35
Pilot Screw Adjustment	Full Out (CCW)	1½ turns out (CCW)
Burner Operating Pressure (*)	0.98 kPa	2.50 kPa
Supply Pressure	1.13 - 2.0 kPa	2.75 - 3.0 kPa

- New Zealand:

	Natural Gas	LP Gas
Main Burner Injectors	Ø 3.10mm	Ø 1.90mm
Pilot Burner Injectors	0.62	0.35
Pilot Screw Adjustment	Full Out (CCW)	1½ turns out (CCW)
Burner Operating Pressure (*)	0.98 kPa	2.50 kPa
Supply Pressure	1.13 - 2.0 kPa	2.75 - 3.0 kPa

- UK Only:

Category: **II_{2H3P} (20, 37).**

Flue Type: **A₁.**

	Natural Gas (G20)	Propane (G31)
Main Burner Injectors	Ø 3.10mm	Ø 1.90mm
Pilot Burner Injectors	0.45	0.30
Pilot Screw Adjustment	Full Out (CCW)	1½ turns out (CCW)
Burner Operating Pressure (*)	0.98 kPa	2.50 kPa
Supply Pressure	20 mbar	37 mbar

NOTE:

- * Measure burner operating pressure at Operating Pressure Test Point (Lower - Out) on gas control valve with both burners operating at 'High Flame' setting. Refer to 'Gas Conversion and Specification' Section for further details.

Gas Conversion and Specifications

- All Other Markets

	Natural Gas	Town Gas (**)
Main Burner Injectors	Ø 3.10mm	Ø 6.30mm
Pilot Burner Injectors	0.62	0.75
Pilot Screw Adjustment	Full Out (CCW)	Full Out (CCW)
Burner Operating Pressure (*)	0.98 kPa	0.50 kPa
Supply Pressure	1.13 - 2.0 kPa	0.75 - 1.50 kPa

	LP Gas (Propane)	Butane
Main Burner Injectors	Ø 1.90mm	Ø 1.70mm
Pilot Burner Injectors	0.35	
Pilot Screw Adjustment	1½ turns out (CCW)	
Burner Operating Pressure (*)	2.50 kPa	
Supply Pressure	2.75 - 3.00 kPa	

NOTE:

- (*) Measure burner operating pressure at Operating Pressure Test Point (Lower - Out) on gas control valve, with both burners operating at 'High Flame' setting.
- (**) TOWN GAS Option is only available with specific ex-factory built Town Gas Models, which can also be converted to any other gas. Standard models can only be converted between Nat. Gas, LP Gas and Butane, but not Town Gas.
- Refer to 'Gas Conversion and Specifications' in this manual for further details.

Replacement Parts List

IMPORTANT:

Only genuine authorized replacement parts should be used for servicing and repair of this appliance. Instructions supplied with parts should be followed when replacing components.

For further information and servicing instructions, contact your nearest authorized service branch (contact details are as shown on reverse of front cover of this manual).

When ordering spare parts, please quote part number and description as listed below. If part required is not listed below, request part by description and quote model number and serial number which is shown on rating plate.

Gas System

018094	Interrupted Thermocouple - Main Gas Valve.		
227865	Thermocouple - Flame Failure Valve.		
032190	Main Burner Injector	(LPG)	Ø 1.90mm.
032310	Main Burner Injector	(Nat)	Ø 3.10mm.
032170	Main Burner Injector	(Butane)	Ø 1.70mm.
032630	Main Burner Injector	(Town Gas)	Ø 6.30mm.
018090K	Pilot Burner (Special)	(No Injector - includes electrode).	
018972	Pilot Injector	(Nat)	0.62.
018971	Pilot Injector	(LPG / Butane)	0.35.
026393	Pilot Injector	(Town Gas)	0.75.
228617	Gas Control 24V.		
229158	Gas Valve Cable / Plug 24V.	(FN8120GE / FN8226GE Only).	
229159	Gas Valve Cable / Plug 24V.	(FN8130GE Only).	
019237	Flame Failure Valve.	(FN8120GE / FN8130GE Only).	
018095	Piezo H.T. Lead.		
020119	Piezo Ignitor.		
022575	Burner Kit.		
018022K	Overtemperature Thermostat.		

Electrical System

020117	Temperature Probe.
228660	Transformer 24Vac.
020109	Fuse 2 Amp.
229033	Fuse Holder.
228707	Digital Controller.
230101	Controller Overlay (3 basket / timer).
025948	Terminal Block - 6 Way.
025951	Terminal Block - 3 way.

Replacement Parts

General

018019	Basket.	
227856	Door Magnet.	
227451	Door Handle.	(FN8120GE / FN8226GE).
227460	Door Handle.	(FN8130GE).
018358	Drain Valve.	
018147	Drain Extension.	
018176	Drain Stick.	
228576	Basket Tray.	(FN8120GE).
228577	Basket Tray.	(FN8226GE).
228578	Basket Tray.	(FN8130GE).
228419	Lid.	(FN8120GE / FN8226GE).
228575	Lid.	(FN8130GE).
229674	Rear Roller Assy.	
227850	Leg Adjustable (150mm) (Flush Stud).	

Accessories

228793	450mm (Fryer) Plinth Kit.
228794	600mm (Fryer) Plinth Kit.

Gas Conversion Kits

Model	Gas Type to Convert to:					
	Nat. Gas	LP Gas (Propane)	Butane	Town Gas	Nat. Gas (UK)	LPG (UK-Propane)
FN8120GE FN8226GE FN8130GE	231963	231962	231964	N/A (*)	231967	231966

NOTE: (*) Town Gas Option is only available with specific ex-factory built Town Gas models, which can also be converted to any other gas. Standard models can only be converted between Nat. Gas, LP Gas and Butane, but not Town Gas.

