

Installation and Operation Manual

Bistro Home

Stone Hearth Cooking Appliance
Gas-Fired Residential Models
Jet Style Burner



BISTRO HOME 3030

WS-BH-3030-RFG

BISTRO HOME 4343

WS-BH-4343-RFG

WS-BH-4343-RFG-W


BISTRO 4355

WS-BH-4355-RFG

WS-BH-4355-RFG-W

BISTRO HOME 4836

WS-BH-4836-RFG

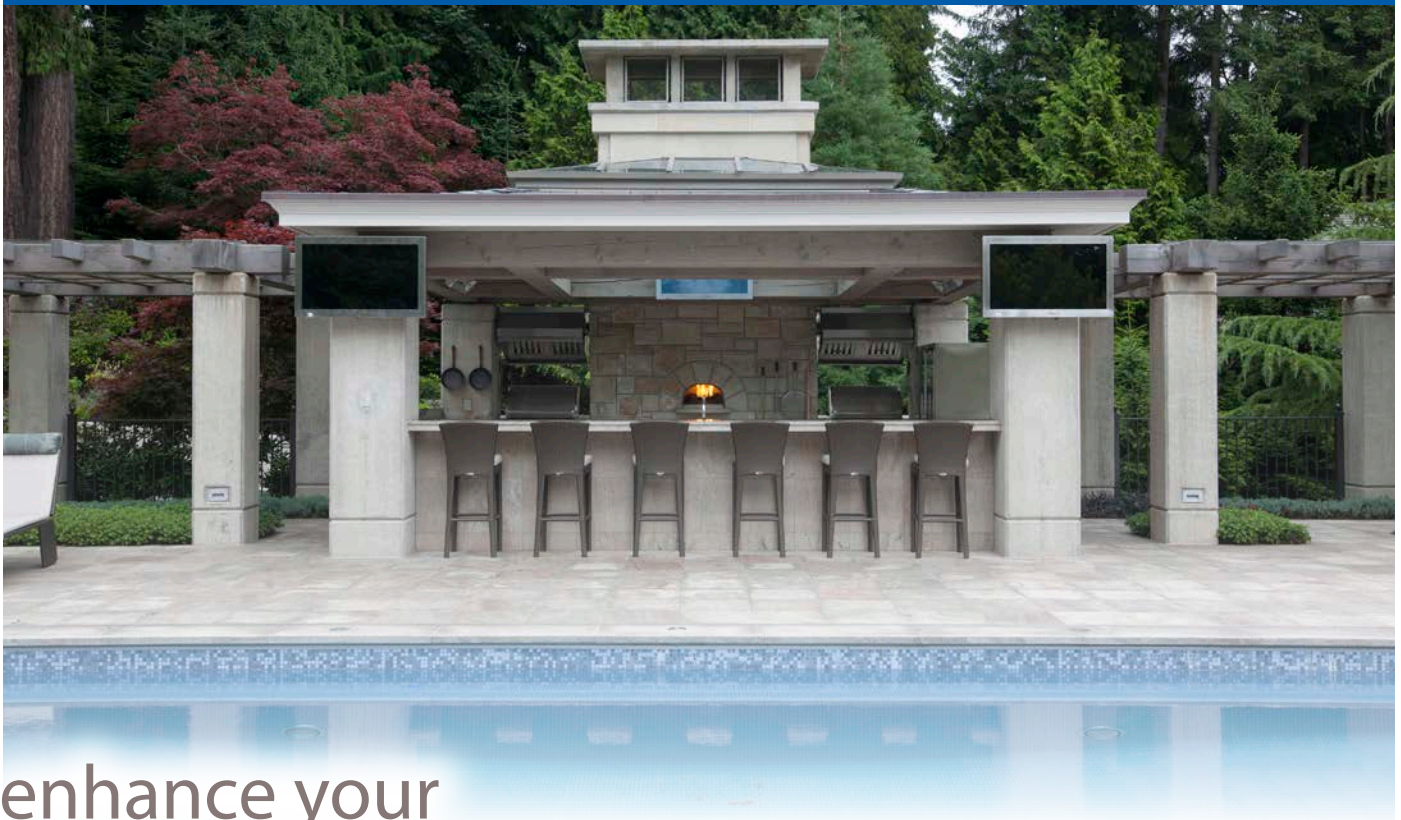

enhance your

food, home & lifestyle

with a Wood Stone Home Oven

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Table of Contents

Bistro Home Oven Installation and Operation Manual



Cautions and Warnings	3
Bistro Home 3030 Specs.....	5
Bistro Home 4343 Specs.....	6
Bistro Home 4355 Specs.....	7
Bistro Home 4836 Specs.....	8
Installation Clearances	9
Venting.....	11
Moving the Bistro	12
Disassembly	13
Lifting the Bistro	16
Exploded Parts View	18
Assembly	19
Utility Connections.....	25
Storage Box Installation	28
Outdoor Installation	29
Mantle Stone Installation.....	30
Mantle Stone Dimensions	32
Controller.....	33
Operation	34
Maintenance.....	37
Wood Burning	38
Troubleshooting Guide	39
Programming.....	40
Fuelwood Facts	42
Electrical Diagram.....	43
Limited Warranty	44

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Cautions and Warnings

Bistro Home Oven Installation and Operation Manual



INSTALLATION AND OPERATION MANUAL FOR THE WOOD STONE HOME BISTRO STONE HEARTH COOKING APPLIANCE

- **WS-BH-3030-RFG-(NG OR LP)**
- **WS-BH-4343-RFG-(NG OR LP)**
- **WS-BH-4343-RFG-W-(NG OR LP)**
- **WS-BH-4355-RFG-(NG OR LP)**
- **WS-BH-4355-RFG-W-(NG OR LP)**
- **WS-BH-4836-RFG-(NG OR LP)**

WOOD STONE HOME INTERNAL TRANSITION MODELS
ADDITIONAL COPIES AVAILABLE AT WOODSTONEHOME.COM

PLEASE READ THIS ENTIRE MANUAL BEFORE YOU INSTALL THE APPLIANCE. FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT IN PROPERTY DAMAGE, BODILY INJURY OR EVEN DEATH. CONTACT YOUR LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION IN YOUR AREA.



WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

FOR YOUR SAFETY: Do not store gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Keep the area under and around this appliance free and clear of any and all combustible materials.

If this appliance is not properly installed, a fire may result. To reduce the risk of fire, follow the installation instructions.



WARNING: Installation and servicing of this product could expose you to glasswool/ ceramic fibers as well as calcium silicate dust. ALWAYS WEAR RESPIRATORY AND EYE PROTECTION WHEN INSTALLING OR SERVICING THIS APPLIANCE.



A MAJOR CAUSE OF OVEN FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES TO COMBUSTIBLE MATERIAL. IT IS OF UTMOST IMPORTANCE THAT THIS APPLIANCE ONLY BE INSTALLED IN ACCORDANCE WITH THESE INSTRUCTIONS

WARNING: Do not pack required air space (clearance) with insulation or other materials. When non-combustible building materials contact the body of the oven, the clearances to combustibles are transferred to those non-combustibles.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Cautions and Warnings

Bistro Home Oven Installation and Operation Manual



WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch.
- Do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone.
- Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

WARNING: Improper installation, adjustment, alteration, service or maintenance can result in property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment. **INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER, SERVICE AGENCY, OR THE GAS SUPPLIER. TURN OFF POWER BEFORE SERVICING.**



WARNING: Disconnect the power supply to this appliance before cleaning or servicing.

WARNING: This product must be installed by a licensed plumber or gas fitter when installed within the Commonwealth of Massachusetts.

DO NOT THROW AWAY THIS MANUAL. RETAIN THIS MANUAL FOR FUTURE REFERENCE.

Additional copies of this manual and prompt responses to service/maintenance questions are available from Wood Stone at (800) 578-6836 or visit woodstonehome.com



This appliance has been tested and approved by Intertek Testing Services, and is ETL Listed to ANSI Z21.1b - 2010; CAN1-1.1-M81, R2006; CGA 2.17-M91, R2009; and CSA C22.2 No.3-M1988, R2009.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Bistro Home 4343 Specs


Bistro Home Oven Installation and Operation Manual




plan view

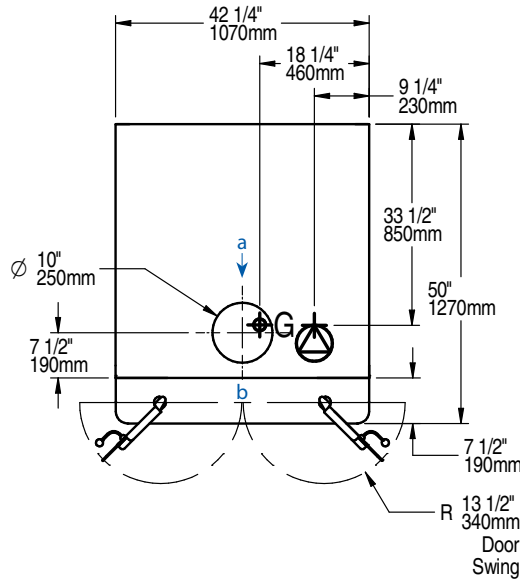


rear view

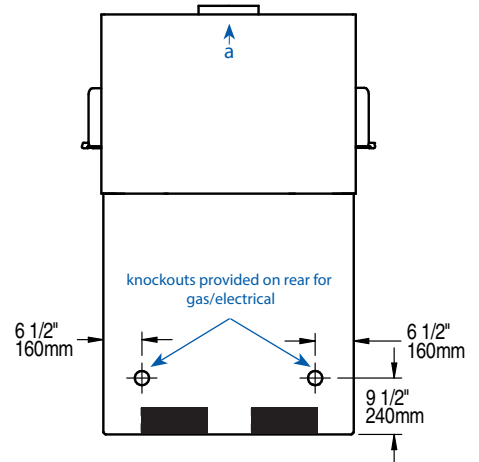

front view

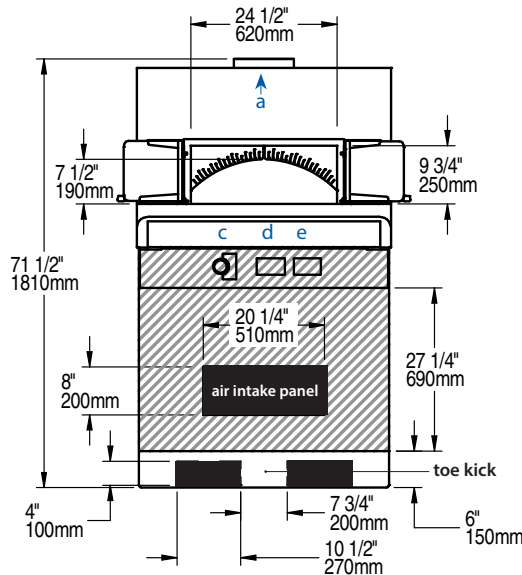

side view

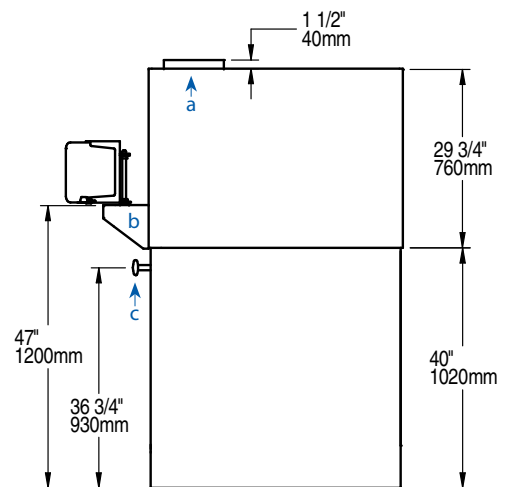

a	flue collar
b	mantle
c	flame height control knob
d	timer
e	control panel
	MUST BE LEFT REMOVABLE FOR SERVICE

please note: **either** the air intake panel **OR** the perforation on the toe kick needs to be left open (do not cover/facade over) to allow for proper airflow.

unit shipping weight: 2,100 lbs

utilities ⚡

Gas: 3/4 inch gas inlet (FNPT)
80,500 BTU/hr Natural Gas (NG) supply
OR
80,500 BTU/hr Propane (LP) supply

electrical ⚡

120 VAC, 2 A, 60 Hz
All utility connections made on the back of the oven control box. Remove front panel for access. Use utility knockouts on rear (provided) to route gas and electrical supplies.

venting

This BH appliance vents through a 10-inch O.D. flue collar located above the doorway. Direct connect to a Listed building heating appliance chimney, also Listed as a grease duct, or a grease duct constructed in accordance with NFPA 96 and all relevant local and national codes, and in a manner acceptable to the authority having jurisdiction. Most installations will require an exhaust fan. See the installation manual for details.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Bistro Home 4355 Specs


Bistro Home Oven Installation and Operation Manual




plan view

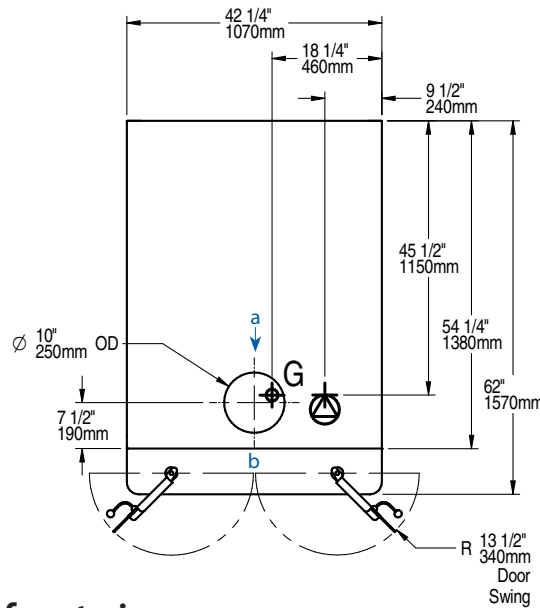


rear view

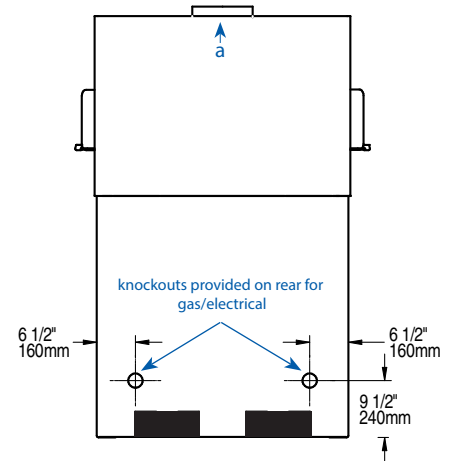

front view

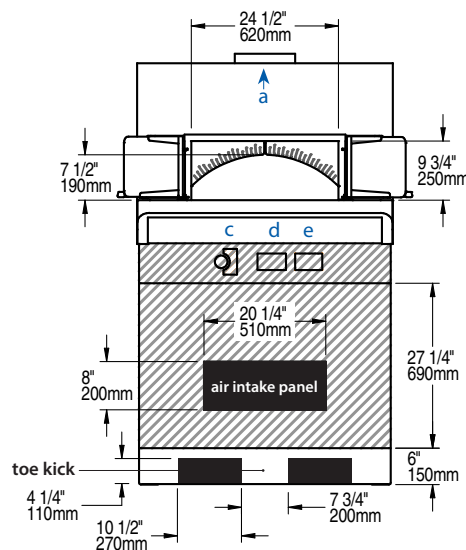

side view

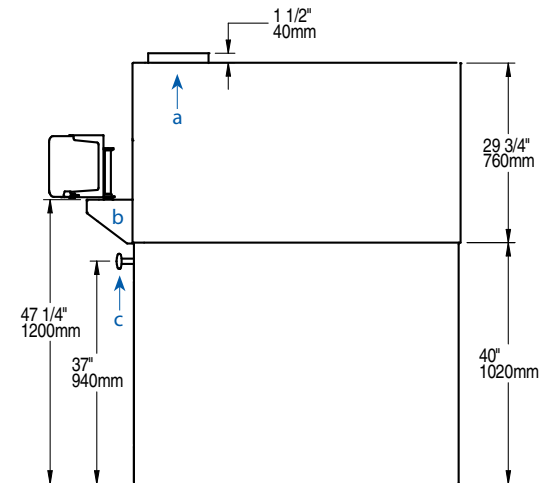

a	flue collar
b	mantle
c	flame height control knob
d	timer
e	control panel
	MUST BE LEFT REMOVABLE FOR SERVICE

please note: **either** the air intake panel **OR** the perforation on the toe kick needs to be left open (do not cover/facade over) to allow for proper airflow.

unit shipping weight: 2,500 lbs

utilities ⚡

Gas: 3/4 inch gas inlet (FNPT)
80,500 BTU/hr Natural Gas (NG)
OR
80,500 BTU/hr Propane (LP)

electrical ⚡

120 VAC, 2 A, 60 Hz
All utility connections made on the back of the oven control box. Remove front panel for access. Use utility knockouts on rear (provided) to route gas and electrical supplies.

venting

This BH appliance vents through a 10-inch O.D. flue collar located above the doorway. Direct connect to a Listed building heating appliance chimney, also Listed as a grease duct, or a grease duct constructed in accordance with NFPA 96 and all relevant local and national codes, and in a manner acceptable to the authority having jurisdiction. Most installations will require an exhaust fan. See the installation manual for details.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com




M0003.05
Rev. February 2015






plan view

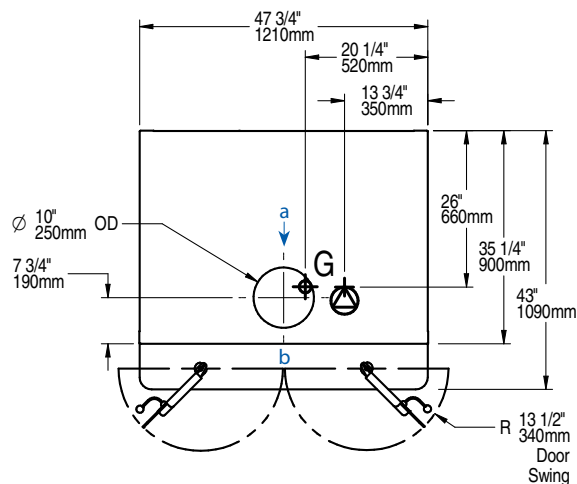

rear view

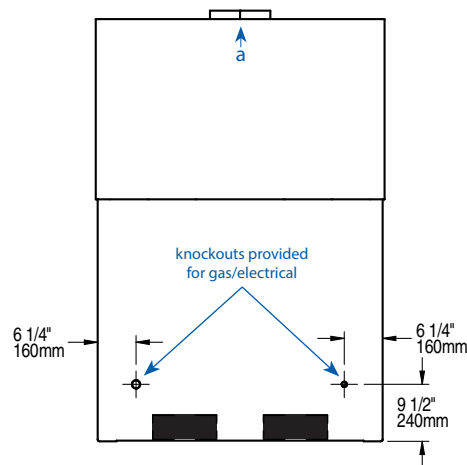


a	flue collar
b	mantle
c	flame height control knob
d	timer
e	control panel
	MUST BE LEFT REMOVABLE FOR SERVICE


please note: **either** the air intake panel **OR** the perforation on the toe kick needs to be left open (do not cover/facade over) to allow for proper airflow.

**unit shipping
weight: 1,800 lbs**

front view

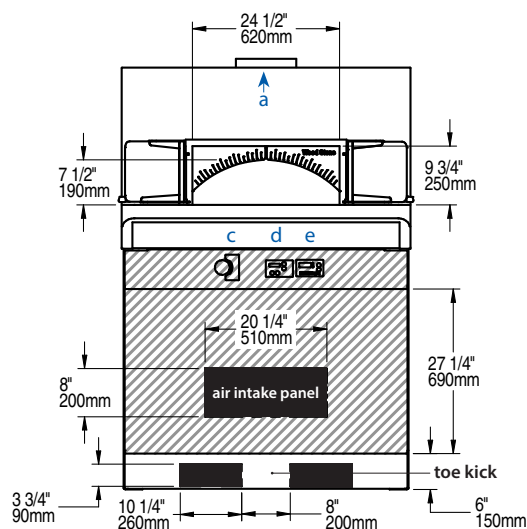

side view

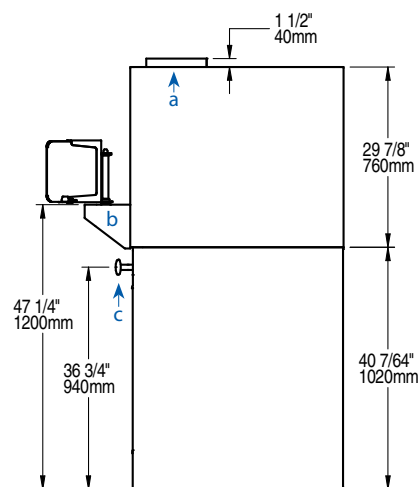**utilities** G

Gas: ¾ inch gas inlet (FNPT)
80,500 BTU/hr Natural Gas (NG)
supply
OR
80,500 BTU/hr Propane (LP)
supply

electrical

120 VAC, 2 A, 60 Hz
All utility connections made on the back of the oven control box. Remove front panel for access. Use utility knockouts on rear (provided) to route gas and electrical supplies.

venting

This BH appliance vents through a 10-inch O.D. flue collar located above the doorway. Direct connect to a Listed building heating appliance chimney, also Listed as a grease duct, or a grease duct constructed in accordance with NFPA 96 and all relevant local and national codes, and in a manner acceptable to the authority having jurisdiction. Most installations will require an exhaust fan. See the installation manual for details.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Installation Clearances

Bistro Home Oven Installation and Operation Manual




IF THIS APPLIANCE IS NOT PROPERLY INSTALLED, A FIRE MAY RESULT. TO REDUCE THE RISK OF FIRE, FOLLOW THESE INSTALLATION INSTRUCTIONS. A MAJOR CAUSE OF APPLIANCE-RELATED FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES) TO COMBUSTIBLE MATERIALS. DO NOT PACK REQUIRED AIR SPACES WITH INSULATION OR OTHER MATERIALS. IT IS OF THE UTMOST IMPORTANCE THAT THIS APPLIANCE BE INSTALLED ONLY IN ACCORDANCE WITH THESE INSTRUCTIONS.

CLEARANCES

- 1. This appliance must have a minimum 1-inch clearance to combustibles from all sides, 6-inch clearance to combustibles from the top, and 6-inch clearance from the exhaust transition and flue collar.** If building a facade that will contact the appliance, use completely non-combustible materials. Any facade wall built 6 inches to either side of the doorway and above must be of non-combustible construction. Please note that standard Drywall (or Sheetrock) is considered a combustible.
- 2. This appliance must be installed on a non-combustible floor surface (Cet appareil doit être installé sur une surface de plancher non-combustible.)** As with any cooking equipment, we suggest that care be taken when choosing the surfaces in front of the appliance to protect them from potential damage from hot, heavy items that may be removed from the cooking chamber.

NOTICE: FOR STUCCO-READY APPLIANCES (MODEL NUMBERS ENDING IN "-S"), THE SAME CLEARANCES AS DESCRIBED ABOVE APPLY. NON-COMBUSTIBLE STUCCO MIX MUST BE USED AND APPLIED TO A MINIMUM THICKNESS OF 1". WHEN NON-COMBUSTIBLE BUILDING MATERIALS CONTACT THE BODY OF THE APPLIANCE, THE CLEARANCES TO COMBUSTIBLES ARE TRANSFERRED TO THOSE NON-COMBUSTIBLES.

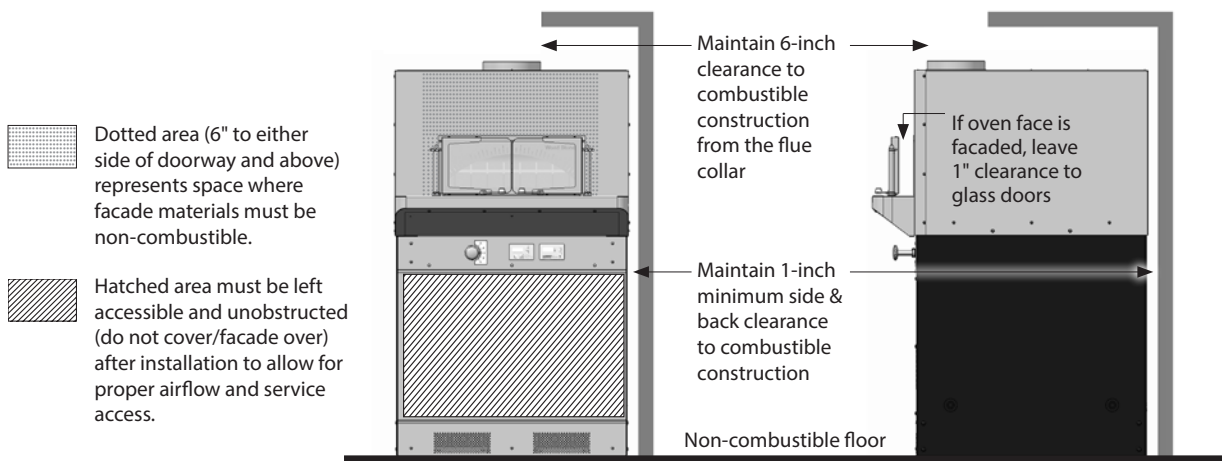

SEE FOLLOWING PAGE FOR EXAMPLES OF NON-COMBUSTIBLE AND COMBUSTIBLE WALL CONSTRUCTION.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Installation Clearances


Bistro Home Oven Installation and Operation Manual




EXAMPLES OF NON-COMBUSTIBLE WALL CONSTRUCTION

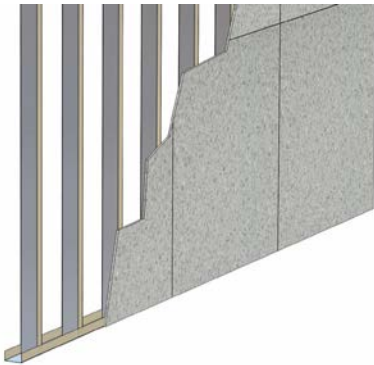

Metal studs faced
with cement board

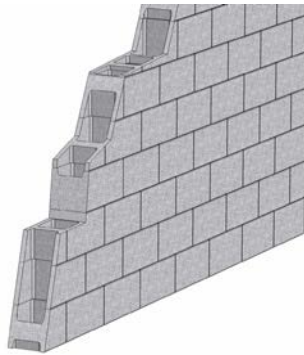


Concrete block wall

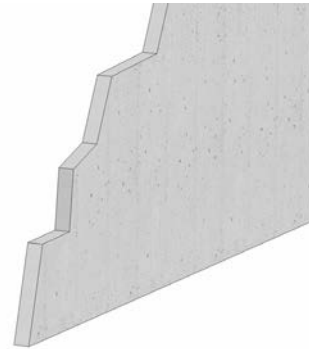

Poured concrete wall

EXAMPLES OF COMBUSTIBLE WALL CONSTRUCTION REQUIRING 1 INCH SIDE CLEARANCE


Note: For clearance purposes, fire-rated Drywall is the same as standard Drywall.

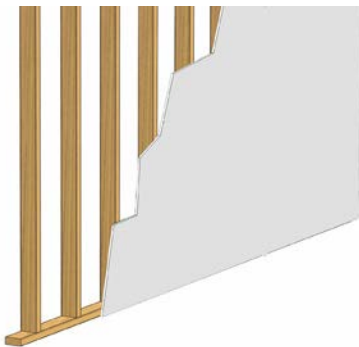

Wood studs faced with
Drywall or fire-rated Drywall



Wood studs faced
with cement board

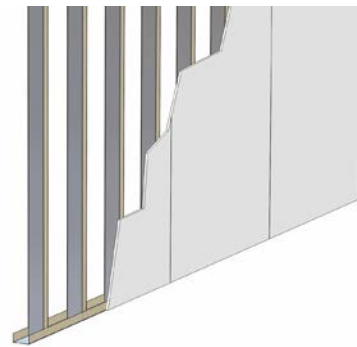

Metal studs faced with
Drywall or fire-rated Drywall

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Venting

Bistro Home Oven Installation and Operation Manual



All of the combustion products and cooking vapors from the WS-BH-4343, WS-BH-4355 and WS-BH-4836 models pass through the 10-inch diameter flue collar. These models may be connected to an 8-inch duct. The WS-BH-3030 models are equipped with an 8-inch collar located atop the exhaust transition. The WS-BH-4343-RFG-W and BH-4355-RFG-W models may burn up to 3 lbs. of wood per hour and must be vented as a solid fuel burning piece of equipment. To ensure proper operation it is recommended that this appliance be vented separately from other equipment.

The following are the manufacturer's recommendations for venting the Wood Stone Bistro. It is never appropriate to use "B vent" in any part of an exhaust system connected to a Wood Stone appliance. All duct material must be manufactured to the specifications of a grease duct. Use either option 1 or option 2 below:


1. A Listed grease duct connected directly to the appliance flue collar and provided with a power ventilator listed for restaurant appliance exhaust and rated for operation at a minimum of 300 °F. Use a stack or curb mounted fan. Wood Stone does not recommend the use of an in-line fan. A field-built grease duct installed and constructed according to the requirements spelled out in NFPA 96 or the International Mechanical Code may also be used. Field-built duct must be a minimum of 0.044" stainless steel or 16 ga. mild steel (0.055") and must maintain a minimum of 18" clearance to combustibles, and must be fully welded.

A static pressure of -0.1 inches water column is necessary at the appliance flue collar to ensure proper flue temperatures at the fan. The airflow required to attain this static pressure will depend on the configuration of your particular installation but will probably be approximately 400 CFM. The exhaust fan must be turned on any time the appliance is running. See instructions for interlocking of the appliance to the fan in the **Utility Connections** section of this manual.

Set the fan speed to maintain a static pressure of -0.1 W.C. Once set, there should not be a need to adjust the speed.

Note: For installations vented with a vertical exhaust run, with or without one or more offsets, a power ventilator is not required. However, if any part of the duct run is horizontal, a power ventilator is required to ensure proper draft.

2. Wood Stone offers eyebrow-type hoods designed specifically for Wood Stone by Gaylord Industries. If using an exhaust hood, it must be installed in accordance with the Standard for Ventilation Control and Fire Protection of Commercial Cooking Operations - NFPA 96. Refer to hood manufacturer's instructions for inspection, maintenance and cleaning instructions.

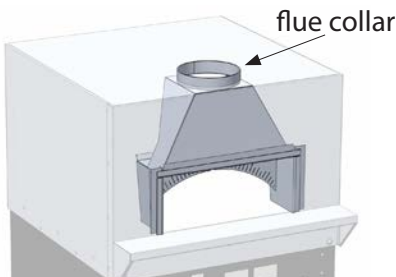

WOOD STONE APPLIANCES MUST BE VENTED IN ACCORDANCE WITH NFPA 96, UL 103 AND/OR ALL PERTINENT LOCAL, REGIONAL AND NATIONAL CODES CONCERNING SUCH APPLIANCES; CHECK VENTING PLANS WITH THE AUTHORITY HAVING JURISDICTION BEFORE PROCEEDING WITH INSTALLATION.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Moving the Bistro

Bistro Home Oven Installation and Operation Manual




IF YOU NEED TO DISASSEMBLE THE OVEN TO MOVE IT THROUGH A NARROW DOOR OR PASSAGEWAY, SEE DISASSEMBLY SECTION.

Bistro models are shipped fully assembled. The oven can be moved into place with a pallet jack using the LOWER forklift pockets. If the oven is to be installed against a wall, you may need to leave access to the back of the oven to complete the utility connections. **NOTE:** Rear panel **MUST** be installed.


CAUTION:

The 3030 model Bistro weighs approximately 850 lbs
The 4343 model Bistro weighs approximately 1,700 lbs
The 4355 model Bistro weighs approximately 2,200 lbs
The 4836 model Bistro weighs approximately 1,700 lbs


The appliances are very top-heavy. **IF THE APPLIANCE TIPS IT CAN CAUSE SEVERE INJURY OR DEATH! NEVER ATTEMPT TO USE A HAND TRUCK TO MOVE THE APPLIANCE!** The appliance should only be moved using a pallet jack on a LEVEL FLOOR. If the appliance must be moved over an inclined surface, a forklift or other suitable means should be employed. If the installer does not have the equipment or experience required to move the appliance safely, we recommend you secure the services of a qualified rigging company.

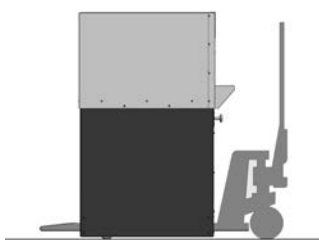

The oven should only be moved using a pallet jack on a LEVEL FLOOR. If the oven must be moved over an inclined surface, a forklift or other suitable means should be employed.

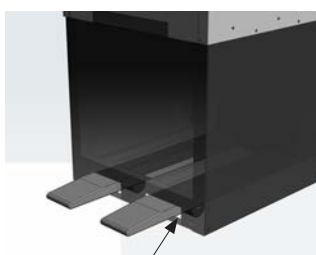

Make sure the pallet jack wheels do not contact the underside of the fork pocket when lifting to avoid damaging the stand.

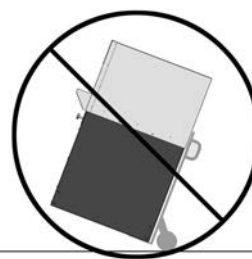

Never attempt to use a hand truck to move the oven.

ONCE YOU HAVE MOVED THE APPLIANCE TO WHERE IT WILL BE INSTALLED, PLEASE SEE THE ASSEMBLY CONNECTIONS SECTION FOR INSTRUCTIONS REGARDING ELECTRICAL AND GAS CONNECTIONS.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Disassembly

Bistro Home Oven Installation and Operation Manual



If you need to disassemble the appliance to move it through a narrow door or passageway...

1. Both the interlock connection to the relay and the leads to the Temp Limit switch will need to be disconnected. The Temp Limit switch is located beneath the oven, just forward of the burner.

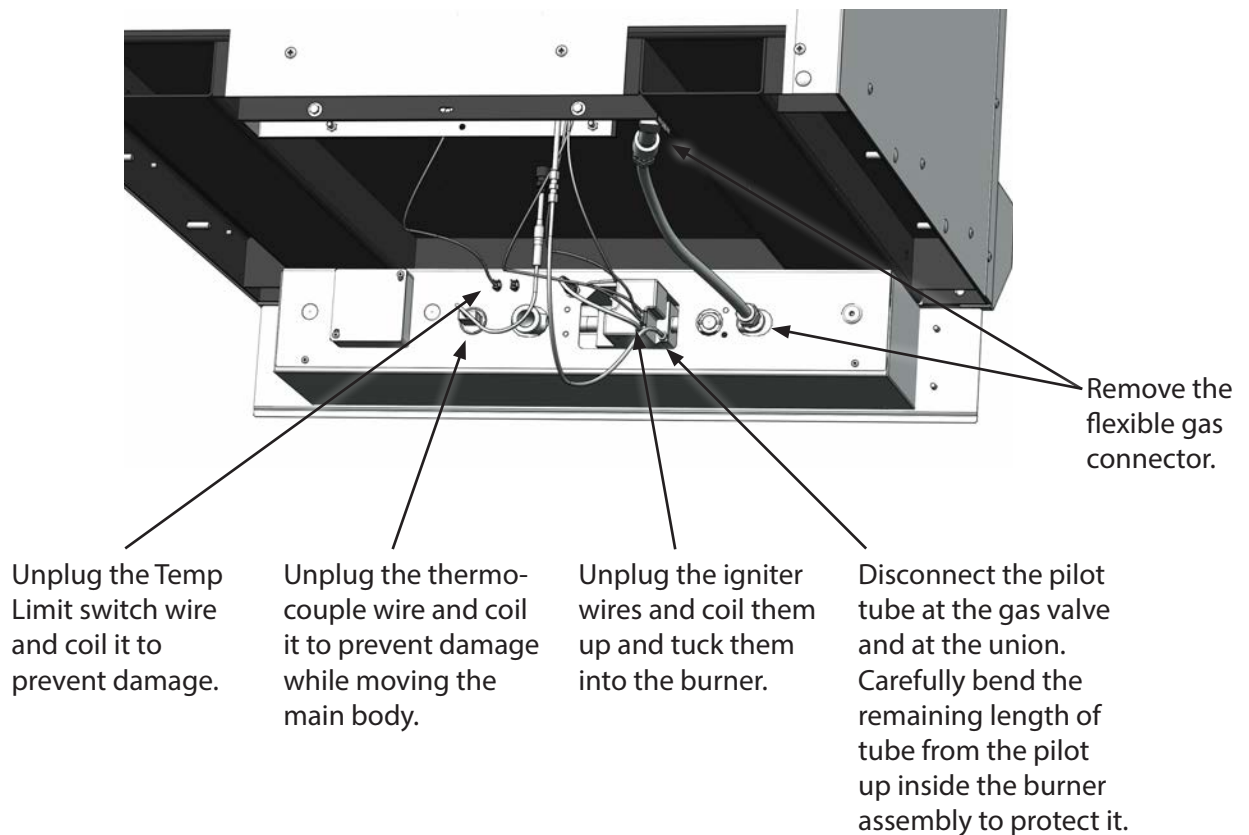

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015





Disassembly

Bistro Home Oven Installation and Operation Manual



2. Remove the (3) nuts and (2) carriage bolts that hold the mantle in place, and remove the mantle. It may be necessary to cut the silicone at the joint between the mantle and the appliance.
3. Remove the control box from the appliance.

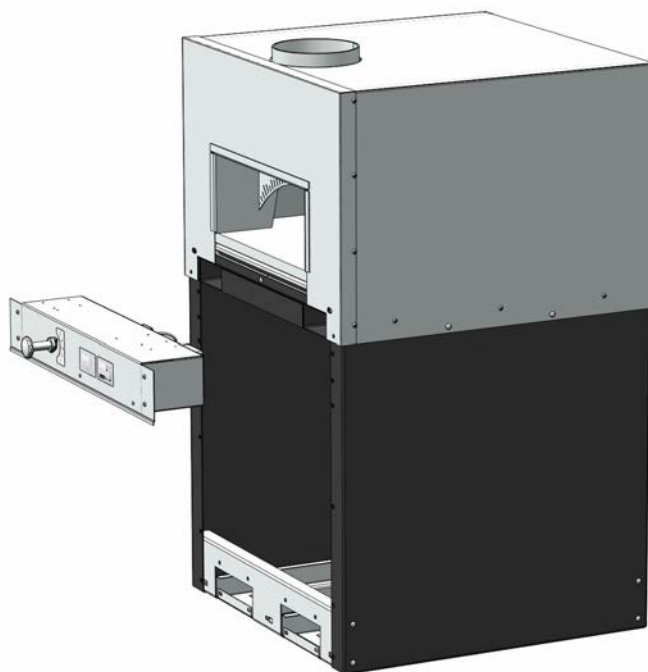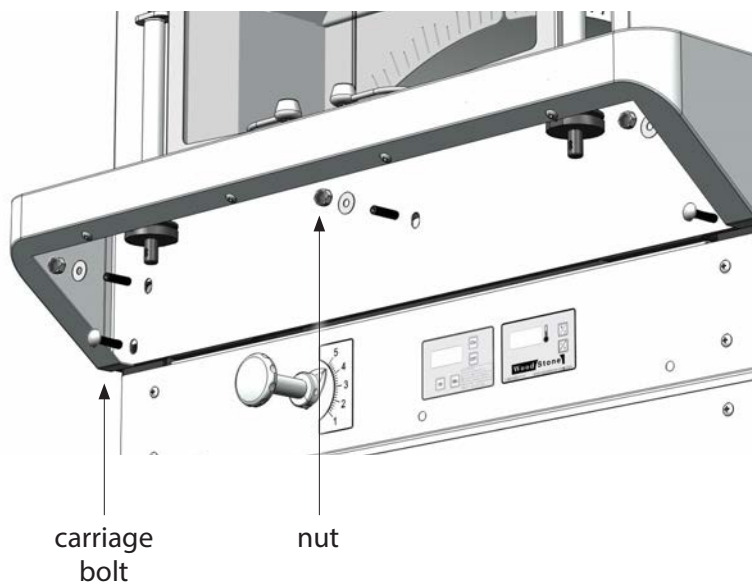

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Disassembly

Bistro Home Oven Installation and Operation Manual



Using the upper forklift pockets, support the appliance with a forklift or other suitable device. Remove the bolts that attach the appliance body to the stand. Lift the appliance off of the stand and place it on blocks as shown in Step 1 on the following page.

For Bistro 3030 models: forklift pockets are on the front only and do not extend all the way through the appliance. Disassemble the stand if necessary. Follow the instructions in the **Moving the Bistro** section for tilting and moving the appliance body. See the **Assembly** section for instructions on how to reassemble the appliance.

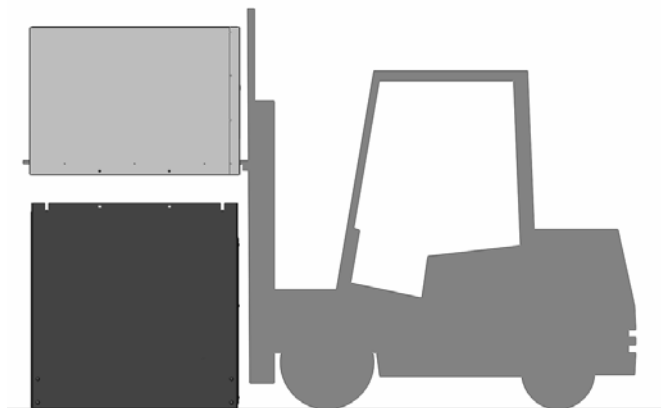

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Lifting the Bistro

Bistro Home Oven Installation and Operation Manual




Moving a disassembled Bistro oven through a narrow door or passageway using the optional lifting system


An optional Lifting System is available from Wood Stone to facilitate tipping the oven body onto its back and lifting it. When turned on its back, the upper oven portion of Bistro or Phoenix models 4343, 4355 and 4836 will be approximately 32 inches wide. This will allow for easier access through small passages. Note: The 3030 is 30" wide without tilting.

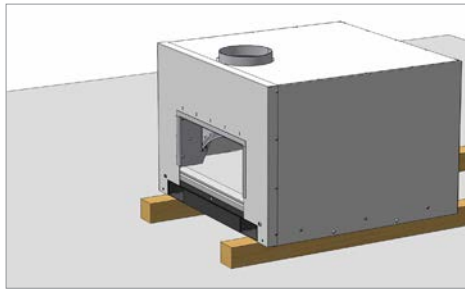



1. Use a forklift or other suitable lifting means to set the oven body onto 4x4" blocks oriented as shown. Refer to DISASSEMBLY section of manual for disassembly instructions.

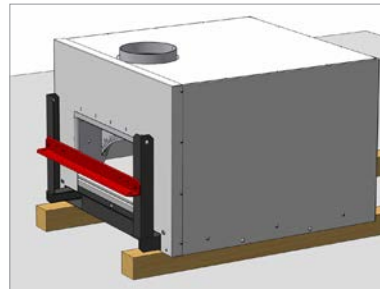

4. Attach the Crosspiece using the hardware provided. See drawing below for placement of bolts. Tighten all Pickeye and Crosspiece bolts.

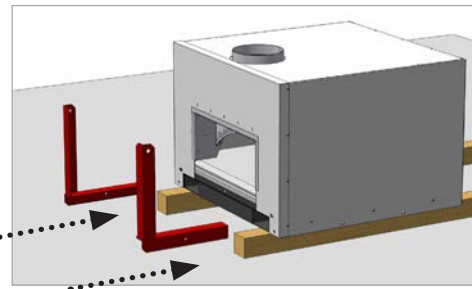


2. Insert the left & right Pickeye Inserts of the Lifting System into the forklift pockets from the oven front.

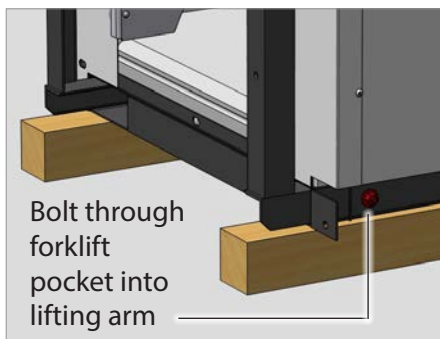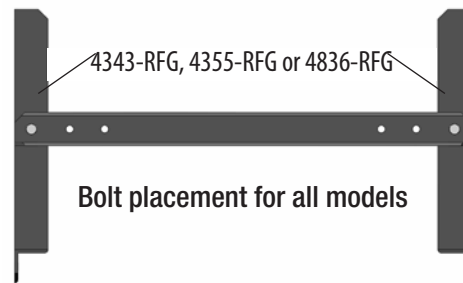

Oven cut-away view showing right Pickeye Insert of Lifting System in forklift pocket.

Bolt through forklift pocket into lifting arm

3. Loosely bolt each Pickeye Insert to the forklift pocket as shown in the cut-away view to above.

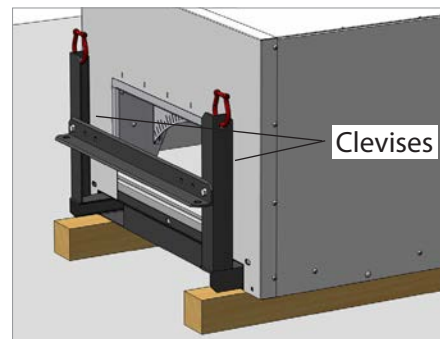

5. Install a clevis in the Top Hole of each Pickeye Insert of the Lifting System.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com




M0003.05
Rev. February 2015




Lifting the Bistro

Bistro Home Oven Installation and Operation Manual

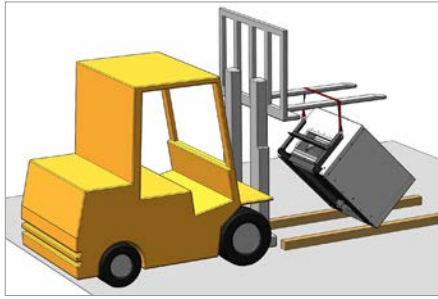

6. Attach strap to the clevises at the top of each Pickeye Insert. Using an appropriate hoist or lift, tilt the oven on its back, onto 4x4" blocks.

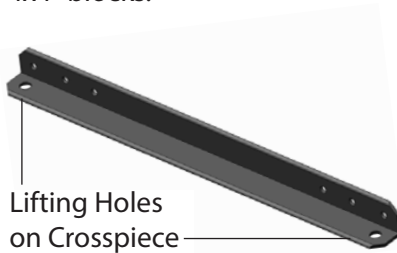


7. Change position of the clevises to the Lifting Holes on the Crosspiece and attach straps.



8. Lift the oven straight up and position pallet jack under the oven. Lower the oven, on its back, onto pallet jack.



DANGER: Never attempt to move oven on incline or sloped floor.

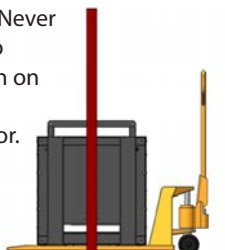

9. The oven can now be moved through a narrow doorway or passageway.




10. Once the oven is on the other side of the passageway, attach strap to the clevises at the Lifting Holes on the Crosspiece and, with a gantry crane, lift the oven straight up. Remove pallet jack. Lower the oven onto 4x4" blocks.



11. Move strap to the clevises at the top of the Pickeye Inserts and tilt the oven down onto the 4x4" blocks positioned as shown. Remove the Lifting System from the oven.



12. Run straps through forklift pockets and up to a Spreader Bar. **Note:** The Spreader Bar must be wide enough so the straps clear the body of the oven. Lift the oven straight up and remove the 4x4" blocks.

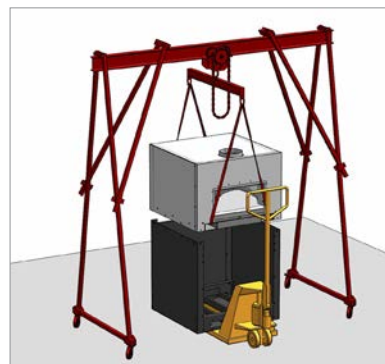

13. Maneuver oven stand into position under the oven using pallet jack. Lower oven and secure oven to stand with bolts.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com




M0003.05
Rev. February 2015



Exploded Parts View

Bistro Home Oven Installation and Operation Manual

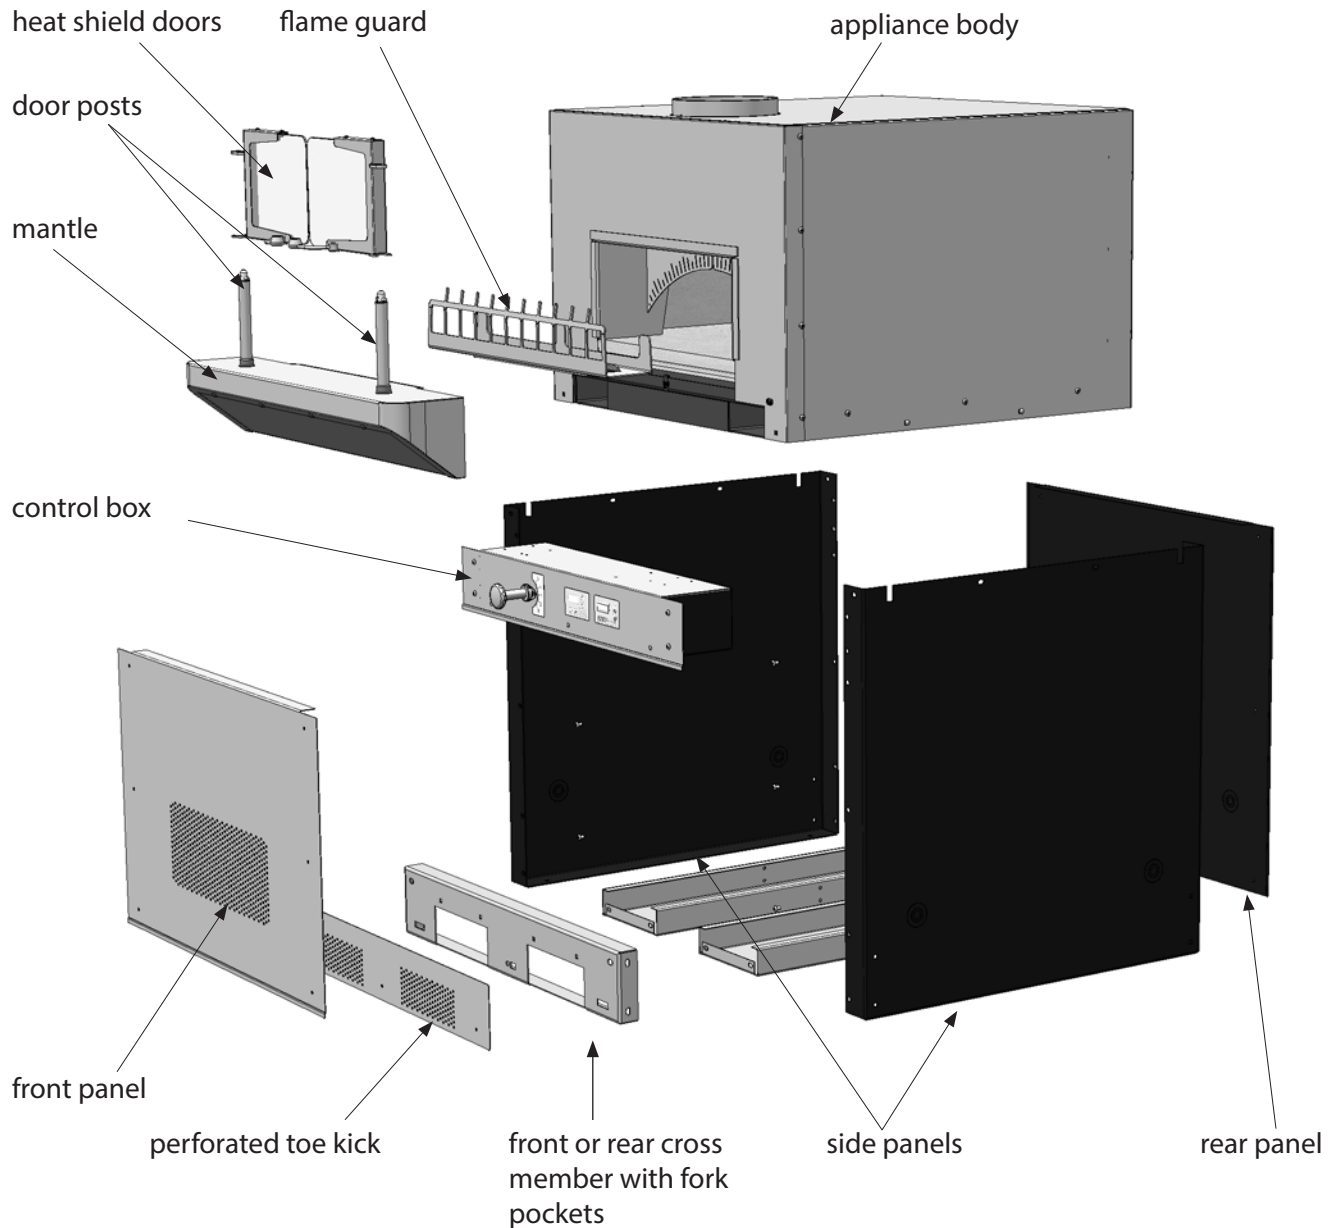

All parts shown above, rear panel included, provided with the appliance **MUST** be installed to ensure the safety and proper operation of the appliance. Note: if appliance came with temporary shipping panel (not shown—see Assembly section, step 5), discard after removing.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Assembly

Bistro Home Oven Installation and Operation Manual




Follow these instructions only if the Bistro was shipped disassembled.

1. Lay out pieces.

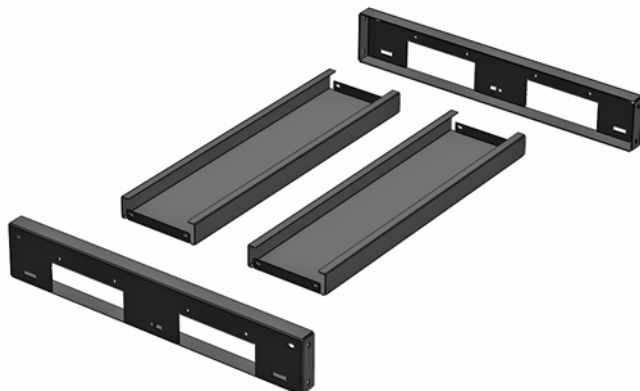

2. Use the 3/8" x 1" carriage bolts to assemble the stand on a level surface. Be sure to use the washers provided and to tighten nuts and bolts securely.

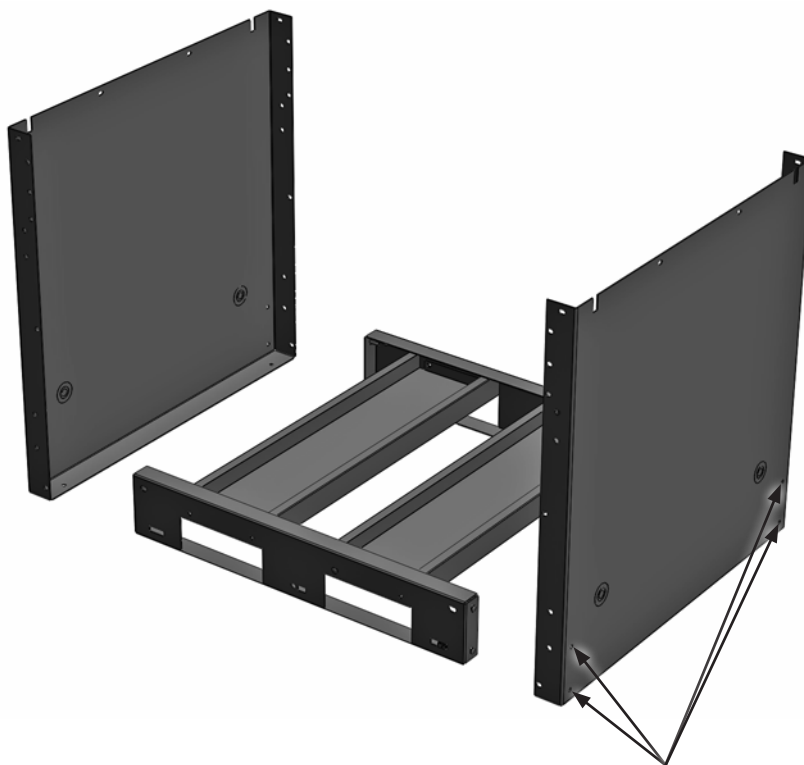

insert 3/8" x 1" carriage bolts

On 3030 Models only:

Use 3/8" x 3/4" carriage bolts to attach the sides instead of the 3/8" x 1" long carriage bolts.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Assembly


Bistro Home Oven Installation and Operation Manual




3. Using a forklift, carefully lower the body of the appliance on to the stand so that the bolt holes line up. While supporting the appliance with the lift, install the 3/8" x 1" carriage bolts. Use the washers provided and tighten all nuts securely. Be sure to use the forklift pockets when lifting the body of the appliance. (**Bistro 3030 models:** forklift pockets are on the front only and do not extend all the way through the appliance.)
4. After the appliance body is bolted to the stand, the appliance can be moved in to place with a pallet jack using the LOWER forklift pockets. If the Bistro is to be installed against a wall, leave access to the back of the appliance until the assembly is completed.

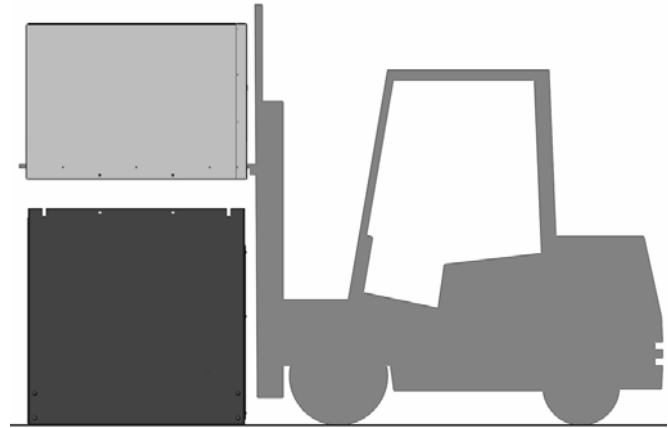


CAUTION: The appliance is very top-heavy. IF THE APPLIANCE TIPS IT CAN CAUSE SEVERE INJURY OR DEATH! The appliance should only be moved using a pallet jack on a LEVEL FLOOR. Do not attempt to move the appliance with a hand truck. If the appliance must be moved over an inclined surface, a forklift or other suitable means should be employed. If the installer does not have the equipment or experience required to move the appliance safely, we recommend you secure the services of a qualified rigging company.

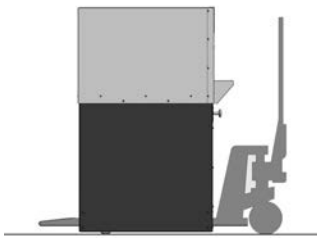

The oven should only be moved using a pallet jack on a LEVEL FLOOR. If the oven must be moved over an inclined surface, a forklift or other suitable means should be employed.

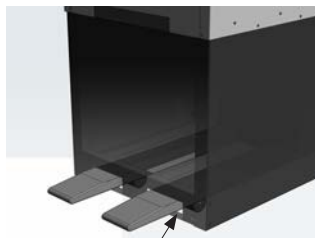

Make sure the pallet jack wheels do not contact the underside of the fork pocket when lifting to avoid damaging the stand.

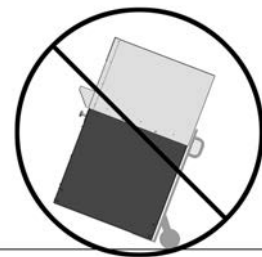

Never attempt to use a hand truck to move the oven.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Assembly


Bistro Home Oven Installation and Operation Manual



5. Remove the shipping panel from beneath the appliance. The shipping panel is secured with (2) screws in the front, and (2) screws in the back. Discard the shipping panel.

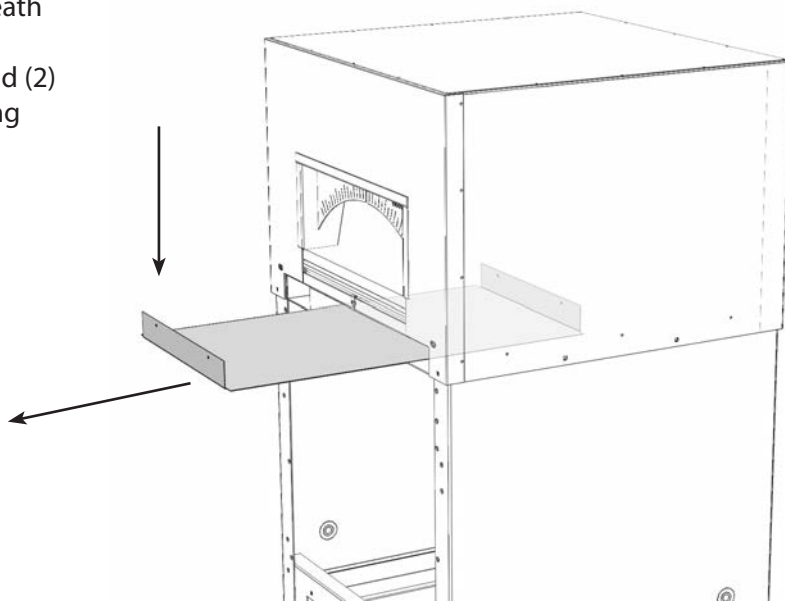

6. Attach the control box to the appliance using (4) 1/4-20 screws. The control box should be oriented so the Flame Height Control Knob is on the left side of the control box.

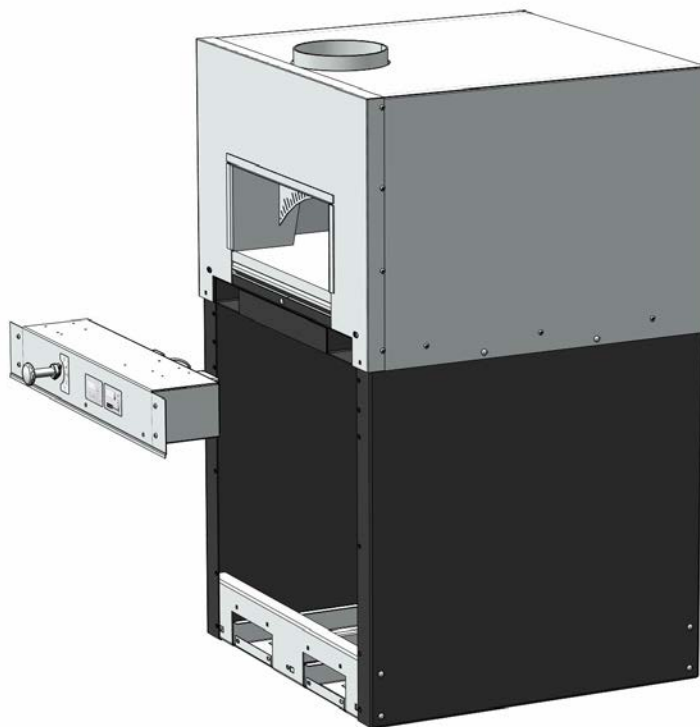

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Assembly

Bistro Home Oven Installation and Operation Manual



7. Connect burner assembly components, thermocouple and Temp Limit switch wires at the rear of the control box.

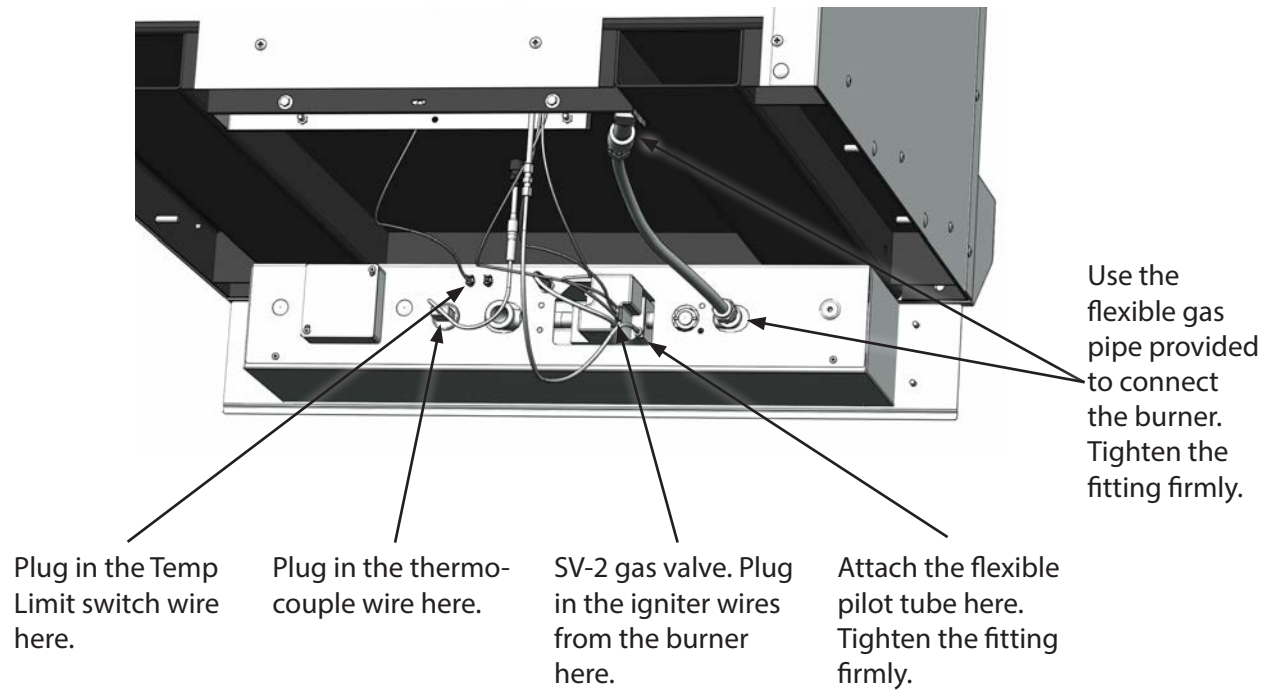

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com




M0003.05
Rev. February 2015



Assembly


Bistro Home Oven Installation and Operation Manual

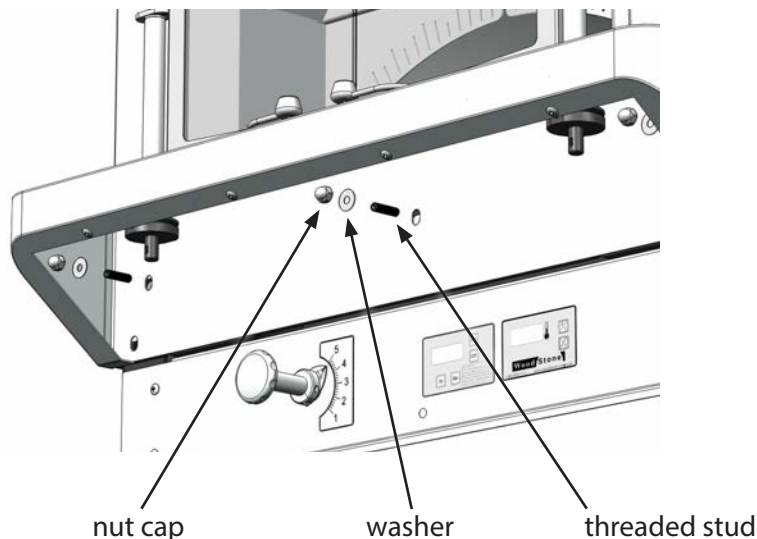

8. Install the mantle. Install the (3) threaded studs into the clips on the front of the appliance. Slide the mantle over the studs, then slip one washer onto each stud. Install and tighten the nut caps onto studs securely.

If the appliance has been supplied with a granite mantle, affix the granite slab to the mounting bracket using a generous amount of the adhesive provided. If the appliance has been supplied with a mantle bracket for use with customer's own material, a mantle template will be included for cutting the stone to fit over the door posts and onto the mantle.

9. Run a bead of high temperature silicone (provided) along the joints where the mantle and appliance intersect. The silicone should run from the edge of the mantle to the inside edge of the doorway on both sides, and down both along the mantle/appliance intersection.

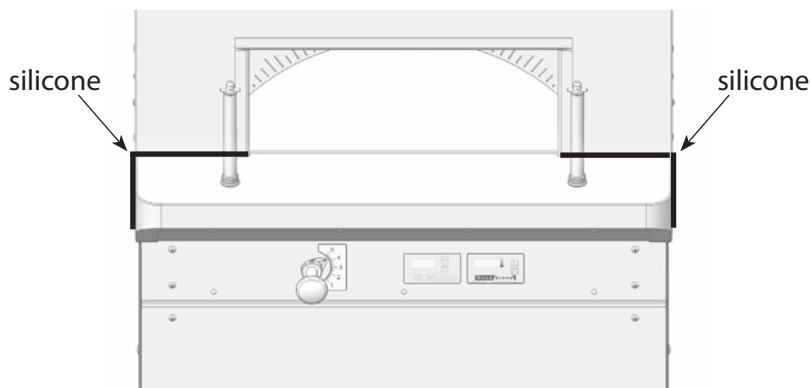

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Assembly

Bistro Home Oven Installation and Operation Manual



10. Reinstall the burner guard and log set. The lower tab of the guard fits into the front of the burner opening. Check that this did not shift during shipment and installation. The log set pieces fit onto the studs on the burner guard, behind the opening in the guard, so the logs sit at the rear of the burner opening.

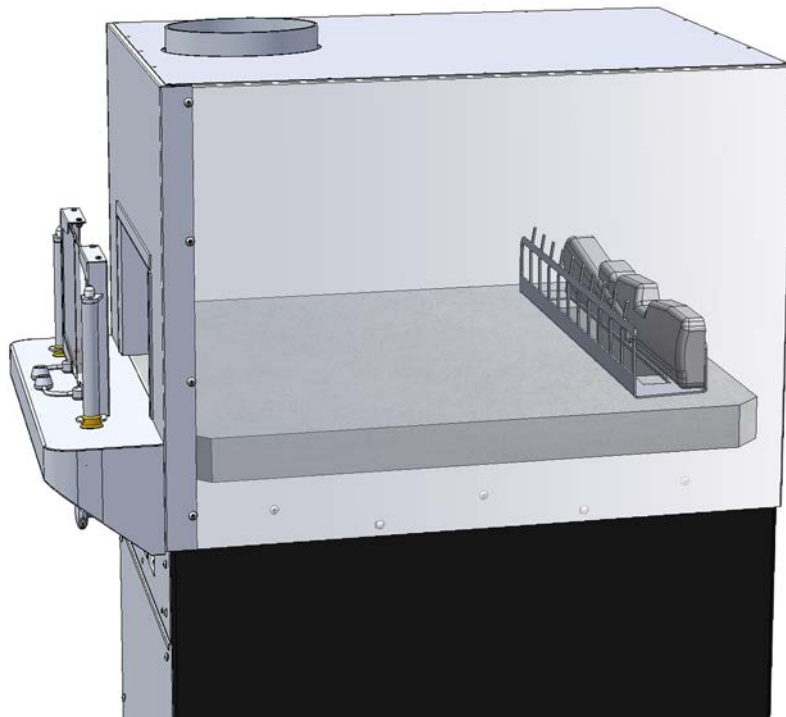

Continued on following page.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Utility Connections

Bistro Home Oven Installation and Operation Manual



11. Make utility connections at the rear of the control box. Gas and electrical connections must comply with all relevant local and national codes, and in a manner acceptable to the authority having jurisdiction.

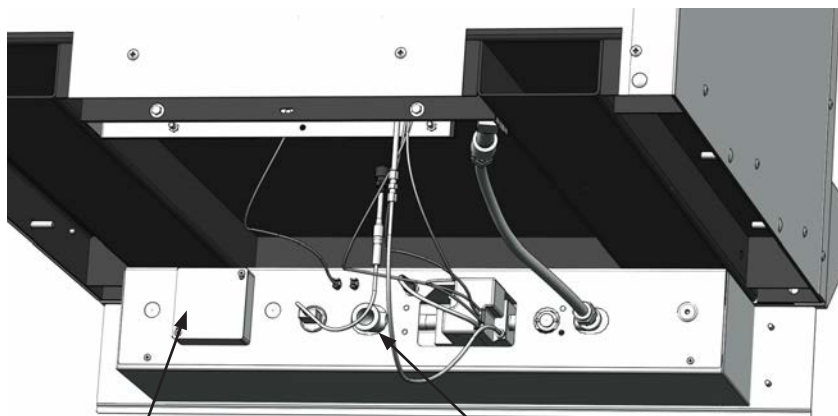

Make the electrical connection to the terminals in this junction box. **Note:** Correct voltage is specified on this junction box and the equipment data plate.

Connect the incoming gas supply to the 3/4 inch FNPT gas inlet.

Knockouts are provided on the rear of the appliance stand for the incoming gas and electrical supplies. If necessary, holes may be drilled in either side panel for the incoming gas and electrical supplies. Gas and electrical supplies should be routed in such a way that they do not interfere with the removal of the appliance burner, or block the access to the space under the appliance for service. The area beneath the burner needs to be kept clear of conduit and piping to allow for removal of the burner for service. **NOTE:** Rear panel **MUST** be installed.

A 3/4" full-flow gas shut-off valve should be installed on the gas supply near the appliance in such a way that it is readily accessible.

This appliance must be electrically grounded in accordance with local code, or in the absence of local code, with the national electrical code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.2, as applicable.

An electrical diagram is provided inside the bottom cover of the control box, and at the end of this manual.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015





The installation must conform with local codes, or in the absence of local codes with the National Fuel Gas Code, ANSI Z223.1, NFPA 54, or Natural Gas Installation Code, CAN/CGA-B149.1, as applicable.

The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi. The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply system at test pressures equal to or less than 1/2 psi.

The incoming gas supply pressure must not exceed 1/2 psi (14" W.C.). If the incoming gas pressure exceeds 1/2 psi, an external gas regulator must be installed in the supply line. If the supply pressure is less than 1/2 psi, no external regulator is required.

The installer should bleed any air out of the gas line supplying the appliance. All gas connections and fittings on the appliance should be leak checked with an approved soap solution.

12. Checking the burner manifold pressure. The burner manifold pressure has been set at the factory, however it should be checked by the installer. The pressure should be checked at the outlet tap on the Honeywell gas valve, located on the back of the control box. Once the manometer is connected, turn the appliance on and use the knob on the appliance to adjust the flame to its maximum height. Then check the manifold pressure. **If incoming gas pressure exceeds 14" W.C. (1/2 PSI) an external regulator by others is required.**

Natural Gas (NG)

3030 models: 3.75" W.C.

4343, 4355, 4836 models: 4.5" W.C.

Propane (LP)

3030 models: 5.25" W.C.

4343, 4355, 4836 models: 7" W.C.

This information can also be found on the data plate located beneath the appliance.

This appliance requires no modifications to operate at high altitudes.

13. Install the rear panel, front panel, and toe kick using the 1/4-20 screws provided. The front panel must remain removable, so as to allow access for service to the appliance components. If this area is covered with a combustible material, it must be 1" away from the service panel. The appliance should be bolted to the floor using the holes provided at the base of the stand.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com




M0003.05
Rev. February 2015





Fan / oven interlock relay instructions

The interlock relay system is an option available from Wood Stone. With the interlock relay option, when the oven is turned on, the interlock relay is energized, allowing power to flow to the exhaust fan serving the oven. The fan will turn on with the oven.

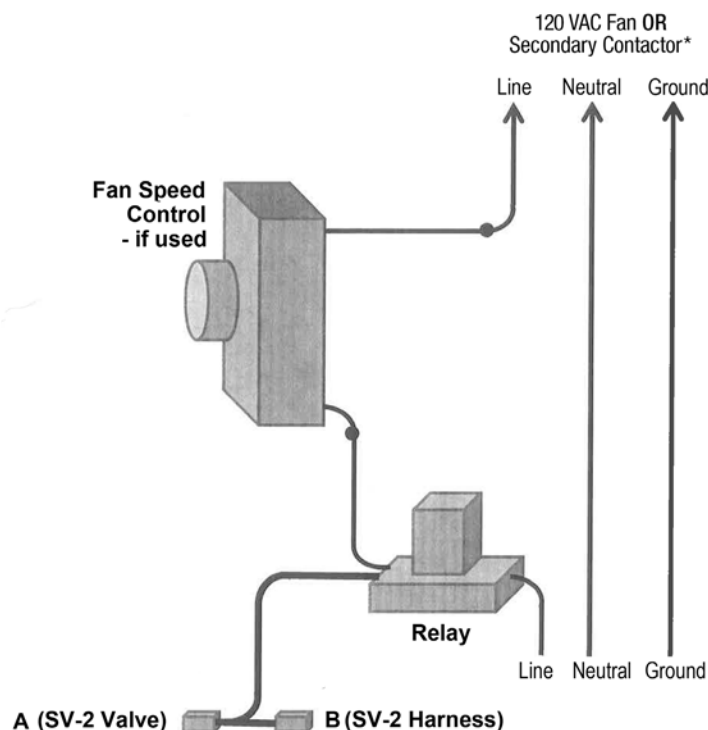

A and B are molex connectors for the relay harness.

* Relay rated for 10 A. If fan current will exceed 10 A, use an additional motor contractor, installed after the relay, to switch power to the fan.

Wire the incoming 120 VAC to the oven J-box as instructed in the **Assembly Connections** section of this manual.

Mount the fan control relay into a junction box, and fan speed controller into a single gang junction box under the oven near the back of the stand. Bring in the 120 VAC power for the roof mounted Energex fan. The line wire will pass through the relay on the black wires (terminals 5 and 9), then through the fan speed controller before going out to the fan. Turn the fan speed controller fully clockwise to the LOW position initially. See the **Venting** section of this manual for instructions on setting the fan speed. Once the fan speed is correctly set, it will not need to change.

Unplug the power harness from the gas valve on the back of the control box. Plug side "A" of the interconnect harness into the gas valve, then plug the power harness into the gas valve, then plug the power harness into side "B" of the interconnect harness.

Turn on the oven control. The relay should close and switch on the fan. When the oven is turned off, the fan will switch off.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Storage Box Installation

Bistro Home Oven Installation and Operation Manual



Installation of optional storage box for models BH-4343, BH-4355 and BH-4836 (Does not apply to BH-3030)

1. Install Toe Kick (w/ perforations) using (3) provided 1/4-20 screws (**a**).
2. Slide Storage Box into front of oven, flush to side panel flanges and Toe Kick. Fasten using (4) provided 1/4-20 screws (**b**).
3. Tuck Storage Box Connector under control panel and over top of Storage Box. Fasten using (2) provided 1/4-20 screws (**c**).

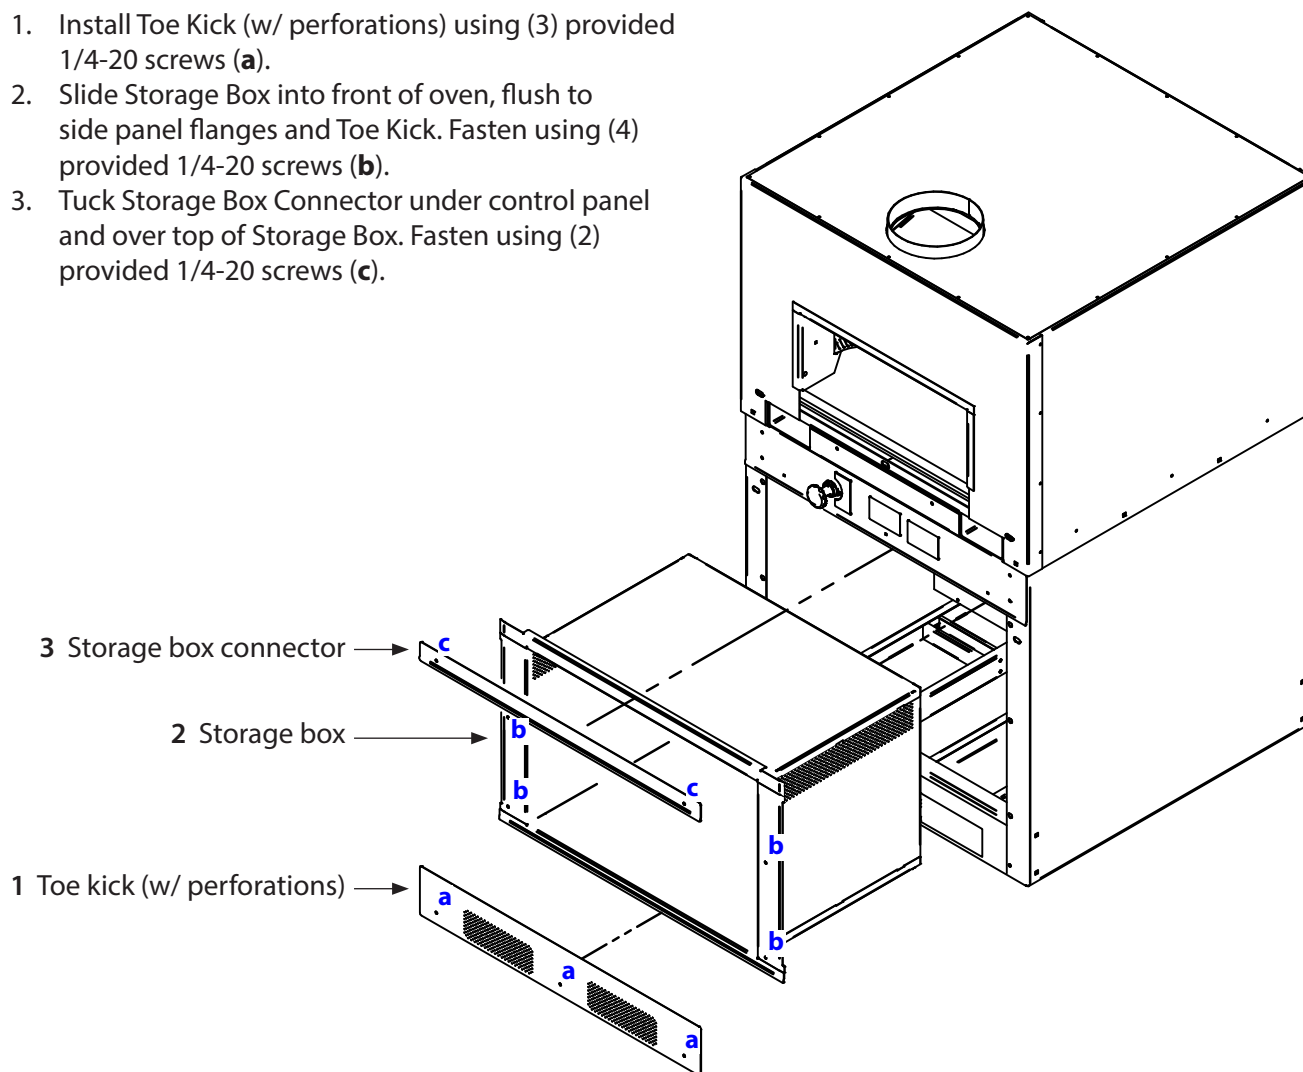

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Outdoor Installation

Bistro Home Oven Installation and Operation Manual



All Mountain Home ovens are approved for outdoor installation. The unit may be installed in a weatherproof enclosure. If so be sure to maintain all clearances and adhere to the installation requirements included in this manual.


For outdoor installations, the indoor installation methods mentioned previously in this manual may be used, OR when installed outdoors or in an open air outdoor structure such as a covered patio or similar structure, the oven may be vented without the use of an exhaust fan when the duct run includes no horizontal sections. A natural draft duct, listed or constructed to the requirements of a grease duct as described in NFPA 96 or the International Mechanical Code, attached directly to the oven flue collar may be used. The duct must be sufficient length and installed in such a manner that proper clearances from combustible construction and proper clearances in regards to the termination of the duct are maintained (i.e. clearances from roofs, window and door openings, etc.) All clearances must be in accordance with NFPA 96, the International Mechanical Code or the applicable local code in force. All manufactured duct systems must be installed in accordance with the duct manufacture's listing and instructions.

When the oven is installed free standing outdoors or in its own non-combustible enclosure, no fan is required, and a suitable metal, stone, clay or ceramic pipe may be used to extend the flue collar outlet above the oven.

Be aware that wind blowing directly at the oven can cause performance and reliability issues. When installing the oven outdoors choose a location that best minimizes wind exposure for the oven. Please note: Keep the area around and beneath the appliance clear of grass, leaves and other combustible materials.

The appliance is available with an optional collapsible chimney assembly with rain cap (shown below) for use with freestanding outdoor installations without a roof structure above the oven. Contact your dealer or Wood Stone for more information.

In the retracted position, the optional collapsible chimney assembly with rain cap closes off the flue opening to protect from water, leaves etc. getting into the oven when not in use.

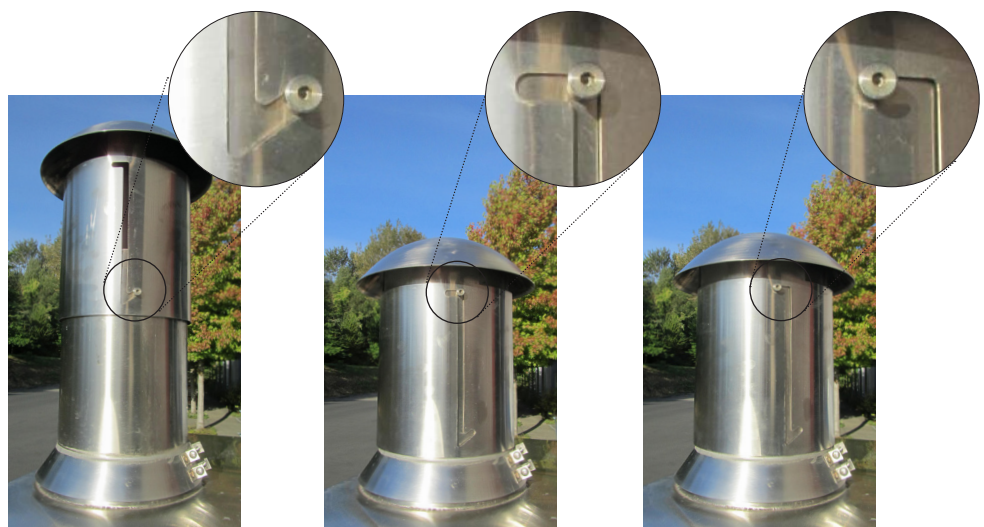

Chimney extended and locked.

Chimney collapsed.

Chimney collapsed and locked.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Mantle Stone Installation

Bistro Home Oven Installation and Operation Manual




On-site installation of mantle stone

Bistro Home ovens can be ordered with the optional Mantle Bracket to facilitate the installation of a custom granite (or similar stone) mantle on-site. The installation process is described below.

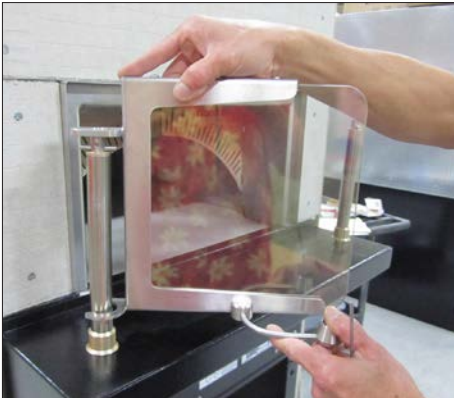

1. Remove the two Swinging Doors by sliding them up over the Door Posts. Put in a safe place.

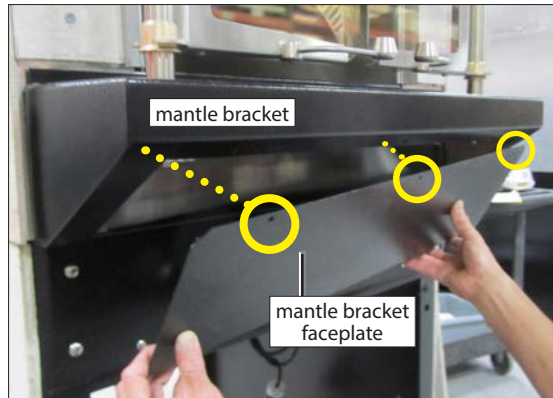


2. Remove Mantle Bracket Faceplate Cover by removing the screws securing it. Here we show a BH-3030, which has 3 screws; models BH-4343, BH-4355 and BH-4836 have 4 screws.

For facade-ready models only (models with factory-installed cement board, ready for facade material installation)



On facade-ready models, there's a flange overhanging the Mantle Bracket. The stone is unable to slide down over the Door Posts because of this flange. To clear this flange, follow the steps below, then continue on to step 3.

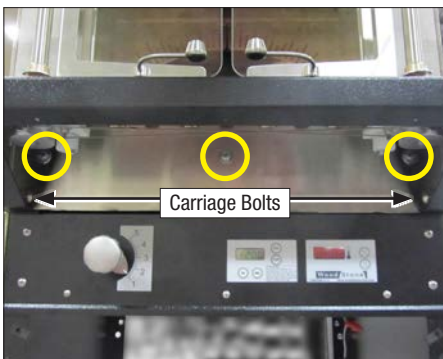

- 2a. Loosen the 3 bolts across the oven face and 2 carriage bolts on either end of the Mantle Bracket so the Mantle tips away from the oven.



- 2b. To reach the carriage bolts, it is necessary to remove the panel under the Control Box. The panel is fastened by two screws on the back lip.



- 2c. Loosen the bolts enough so the Mantle Bracket can tip forward just enough to clear the flange surrounding the doorway. Alternatively, the Mantle Bracket can be removed completely.

Mantle Stone Installation

Bistro Home Oven Installation and Operation Manual



3. Remove Door Post hardware by following the steps below.



3a. Remove the Set Screw from the top of each post. Put in a safe place.



3b. Pull out the Door Restraining Pin. Put in a safe place.



3c. Slide the Brass Flange up to remove. Put in a safe place.



4. Dry fit the stone to ensure proper fit.

Apply a generous amount of silicone adhesive to the top of the Mantle Bracket.

Slide the stone over the Door Posts and position the stone in place. Apply light pressure to seat it properly. Make sure edges of the stone line up with the edges of the Mantle Bracket. Allow the sealant to set for several hours before filling any gap between the stone slab and the Mantle Bracket with the silicone sealant. Clean up any sealant before it dries.

5. Reinstall Door Post hardware in reverse order from disassembly. Use a small amount of silicone sealant under the Brass Flange.

Tighten Mantle Bracket to oven.

Reinstall Mantle Faceplate Cover.

Reinstall Swinging Doors.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015


WOOD STONE
Home

Mantle Stone Dimensions

Bistro Home Oven Installation and Operation Manual




Mantle stone dimensions


Tolerances: Linear $\pm 1/16$ [± 1 mm], Angular $\pm 2^\circ$

Note: Because of the possibility of slight production derivations, we recommend using these dimensions as approximations, and taking final measurements on-site.


BH-3030

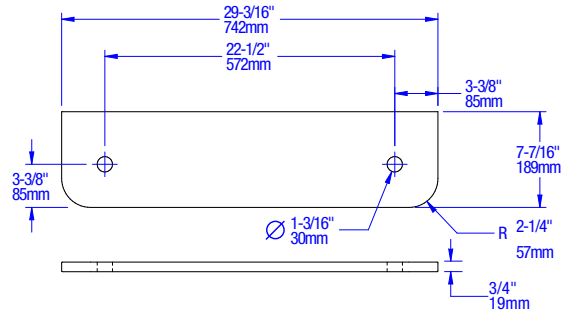

BH-4343/4355

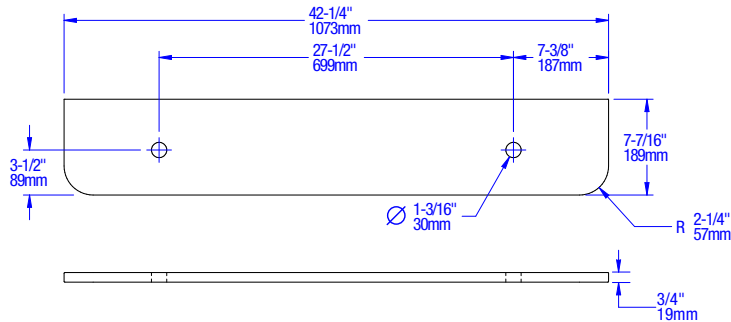

BH-4836

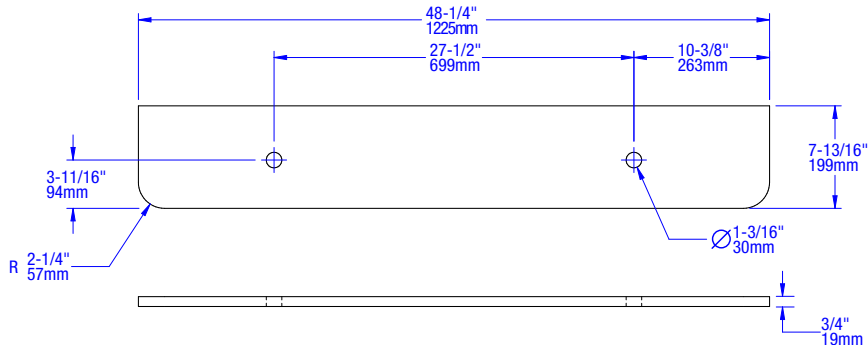

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Controller

Bistro Home Oven Installation and Operation Manual



Hearth temperature


The floor (hearth) temperature will be displayed here any time the unit is turned on. Sensor is embedded 1" below hearth surface. Display will read "LO" when the temperature is below 100 °F.



Temperature units

Press and hold to switch between Fahrenheit and Celsius.

ON/OFF button
Press to turn unit on and off.

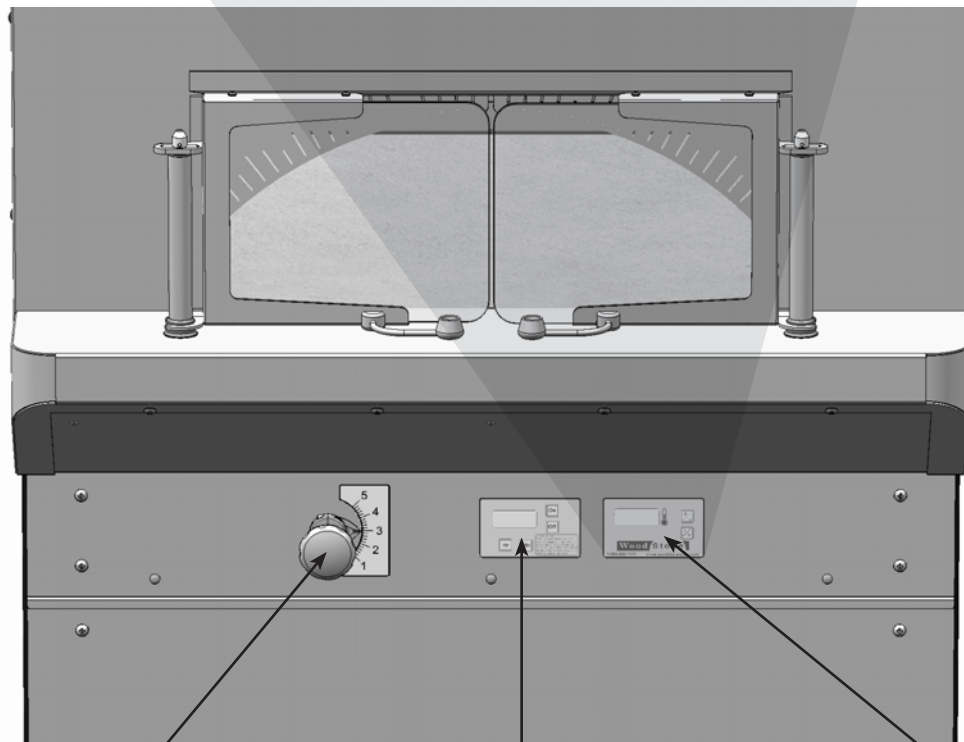

Flame Height Control Knob
Use this knob to raise/lower the flame to control the appliance temperature.

timer
See Programming section for details.

controller

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015


WOOD STONE
Home

Operation

Bistro Home Oven Installation and Operation Manual



NOTE: The ceramic materials used in the construction of your Wood Stone oven will absorb moisture if exposed to high humidity or damp conditions during shipment from the factory or extended periods of storage before installation. Occasionally, through the course of the initial startup, as the oven heats up it is possible that you will see some water dripping from the sides of the oven as this moisture is driven out of the ceramic. This is not a defect in the oven, and once the oven has been fully saturated with heat the moisture will be driven fully from the oven. After this initial process, you will not see any additional moisture from the oven unless the oven is not used for an extended period of time AND it is exposed to excessive moisture or high humidity.

INITIAL APPLIANCE START-UP


FIRST DAY

1. Make sure exhaust fan is properly wired and interlocked to the appliance.
2. Make sure main gas supply is on (valve parallel with gas line).
3. Push I/O button on controller (the exhaust fan should come on as well). It may take a while for the gas to purge all the air from the gas lines.
4. Once the burner ignites, make sure the flame is at its lowest setting and allow the appliance to operate at this setting for about 1 hour.
5. After 1 hour, raise radiant flame to #2 on the Flame Height Index Scale.
6. After 4 hours a raise to #3 on the Flame Height Index Scale and allow the appliance to run until it reaches a temperature of 500 °F. This will take approximately 3–4 hours.

NOTE: Small “crazing” cracks will occur with normal heating and cooling. They will not affect the performance or durability of the oven. If cracks of 1/8" wide or more develop, contact Wood Stone for evaluation.

FLAME HEIGHT INDICATOR

Comprised of two parts

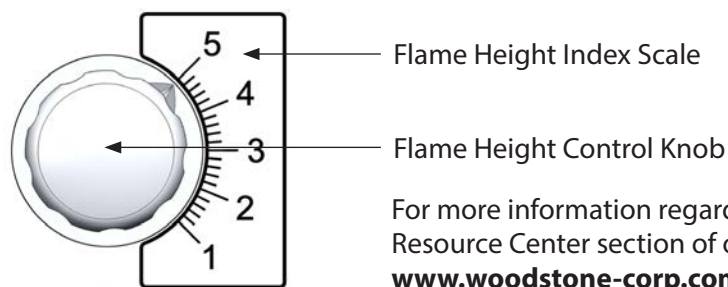

For more information regarding Flame Height Control, go to the Resource Center section of our web site at:
www.woodstone-corp.com

This appliance requires electrical power to operate. Do not attempt to operate this appliance during a power outage or power failure.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015





GENERAL OPERATION

The appliance floor temperature is displayed on the controller readout.


1. Turning on the appliance

Push I/O button and turn the radiant flame to its highest setting. To set the appliance to turn on automatically using the programmable timer, see the programming section of this manual.


2. Heat-up

The appliance should reach cooking temperatures of 550–575 °F in 3 to 3-1/2 hours. Use the Flame Height Control Knob to control the amount of heat in the appliance. If the appliance is still warm from the previous day, push the I/O button and turn the radiant flame to its highest setting (#5). The appliance should reach 500–550 °F within 1-1/2 to 2 hours. See woodstonehome.com for recipes and additional detailed information on cooking in your Wood Stone Bistro.

The optional perforated stainless steel heat efficiency door may be used to speed the heat-up process. To use the heat efficiency door, open the glass doors (if equipped), and place it into the doorway so it is right up against the oven arches, making sure to leave the glass doors (if equipped) open. Push the I/O button and using the Flame Height Control Knob, adjust the radiant burner to its highest setting (#5 with the dial pointer). Once the desired temperature is reached, carefully remove the heat efficiency door. **CAUTION: the handles will be cool, but the rest of the door will be HOT.** Place the door in a safe area while it cools. Adjust the flame height down to a point that holds your oven at your desired cooking temperature (approximately #3). Always remove the heat efficiency door once the appliance reaches temperature. If the unit is allowed to run with the heat efficiency door in place after reaching temperature, it will continue to heat and eventually reach its 850 °F temperature limit and automatically shut down. If it does this, turn the oven off, then carefully remove the heat efficiency door and allow the oven to cool. Once the oven deck has cooled to below 850 °F, the oven can then be restarted. With use, you will see some warpage and discoloration of the heat efficiency door. This is normal.

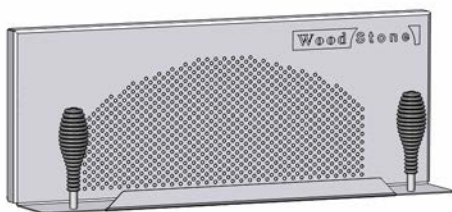

heat efficiency
door

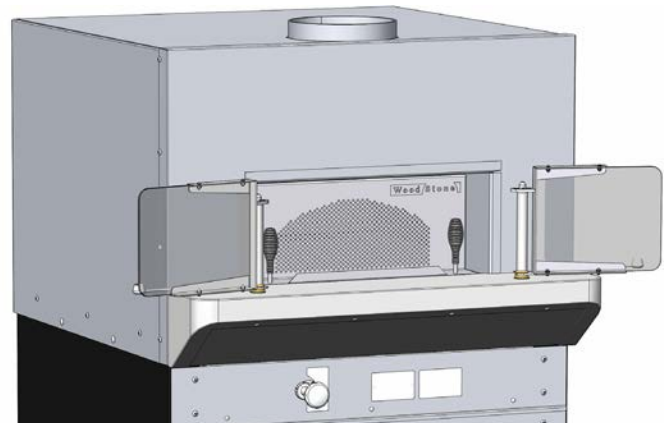

3. Turning off the appliance

Push I/O button, all gas will go off, even the pilot. You may place the heat efficiency door into the opening to help retain heat in the oven.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015





4. Cleaning the appliance interior

As needed, use the natural fiber brush to sweep stray food debris to the corner near the doorway, where it can be easily removed when you are finished cooking or once the appliance is cool.

As needed, swab the deck using a damp (not wet) rag wrapped around the floor brush. This is best to do when the appliance is hot. Take care to avoid brushing debris into the radiant flame burner.

NEVER PLACE ANYTHING IN OR ABOVE THE RADIANT FLAME

Gas-fired models with a “-W” in the model number are listed for the burning of up to 3 lbs. of wood per hour when properly vented as a solid fuel appliance. Build the fire on the side wall of the appliance, 6–10 inches inside the doorway of the appliance or use a smoker tray. Never use the gas (radiant) flame as a fire starter, and keep the fire away from the radiant flame. Keep all ash and debris away from the radiant flame. Burner problems resulting from debris or ash in the burner well will not be covered by the oven warranty. Using the oven floor brush and ash shovel, move debris only toward the oven doorway and dispose of safely. See the **Wood Burning** section for ash disposal guidelines.

Note: Appliances burning solid fuel require a more frequent maintenance schedule.

5. Cleaning the appliance exterior

All painted and stainless steel surfaces should be cleaned as necessary using an approved mild detergent, hot water and a soft cloth or sponge. Stubborn residues may be removed using a nonmetallic scouring pad. When scouring stainless steel surfaces, scrub with the grain of the metal to prevent scratching.

This appliance requires electrical power to operate. Do not attempt to operate this appliance during a power outage or power failure.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Maintenance

Bistro Home Oven Installation and Operation Manual



Wood Stone recommends the use of the natural fiber brush for sweeping aside excess food particles that will accumulate on the floor of the appliance during use. The appliance floor can be cleaned with a damp rag. **DO NOT USE ICE OR EXCESSIVE WATER ON THE FLOOR; THIS IS TO PREVENT THERMAL SHOCKING OF THE STONE.** There is a stainless steel burner guard to prevent food from falling on and thereby obstructing the gas orifices of the radiant flame. If food gets into the radiant flame well and the flame is visibly obstructed, turn the appliance off immediately, and call for service.

DO NOT USE THE RADIANT BURNER WELL AS A DUMP FOR DEBRIS OR TRASH INCINERATION; MAKE EVERY ATTEMPT TO KEEP DEBRIS FROM DROPPING INTO THE WELL.

Cleaning the heat shield doors

With normal use, the heat shield doors will become splattered or soiled. To keep the doors clear, it is important to occasionally clean them to keep the build-up to a minimum and to make the process easier. First, remove the doors from the posts that support them. For minor cleaning and upkeep however, you can use window cleaner to keep the glass clean and do not need to remove them from their posts. Make sure the doors are cool to the touch. If they are not cool, wait to clean them until they are cool to avoid being burned. Next, open the doors and place one hand above and one hand below one door and gently lift up. The bracket that holds the door on the post has a small retainer that keeps the door from being accidentally knocked off the post. Once the top bracket is above this retainer, the door will lift easily and can be removed from the vertical post that supports it. Repeat the process with the second door and take them to the sink. Wash the doors with warm water and liquid dish soap (such as Dawn) on a sponge. Never use "Scotch Brite" or any other abrasive pad, powder or solution as they can scratch the ceramic glass surface. If there is baked on soil or grease, we recommend the use of appliance cleaning products that have been labeled as safe for appliance door glass. Some of these products, like EASY-OFF® FUME FREE MAX™ are also fume free and more user-friendly. While they might require some soaking time, they can actually work quite well. **Do not allow chemical cleaners to contact the oven ceramic as they can cause damage.** Please keep in mind that many heavy-duty appliance cleaning products are caustic and contain sodium hydroxide and should not be used on your doors. These compounds can permanently pit or fog your ceramic glass doors and are also generally unpleasant to use—note the extensive list of hazards. After they are clean, dry and return the doors to the appliance and re-install them.

Thermal Cleaning

Gas-Fired Appliance - If a Wood Stone gas-fired appliance is operated at low temperatures (below 525 °F), you may notice a buildup on the appliance floor. Note that this floor buildup may be perceived as the floor flaking away. If you operate the appliance below 450 °F, you may also notice some buildup on the interior walls and/or ceiling of the appliance. To remove any buildup that has accumulated inside of the appliance, first remove any excess spillage, and all utensils from the oven. Then, simply turn the radiant flame to its highest setting. Monitor the floor temperature displayed on the controller. When the floor reaches 650 °F, lower the flame slightly so as to maintain the appliance floor temperature near 650 °F for about an hour. Heavy accumulations may require more time. Heavy accumulations on the floor may require some additional scraping with a utility peel, floor scraping tool or stiff putty knife. Once the appliance appears clean, allow the appliance to return to normal operating temperatures and continue normal operation.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Wood Burning

Bistro Home Oven Installation and Operation Manual



Wood and Ash

Wood should be stored and handled in accordance with the recommendations outlined in NFPA 96. The interior floor and dome of the appliance do not require creosote or soot removal. The appliance flue and exhaust system will require inspection and cleaning. The exhaust system should be inspected and cleaned per the manufacturer's and or local code official's recommendations.

Dispose of ash per the following:

1. Place ashes into a metal container with a tight fitting lid.
2. Place the closed container of ashes on a non-combustible floor or on the ground.
3. Place the closed container of ashes well away from all combustible materials, pending final disposal.
4. Retain the ashes in the closed container until all the cinders have thoroughly cooled. Ashes can then be disposed of safely.

NOTE: Wood Stone's stainless steel ash shovel and double compartment ash dolly offer a safe and convenient way to dispose of ash. See the Tools and Accessories section of woodstonehome.com for details.

Removal of Creosote and Soot

Only RFG-W models are intended to allow the additional burning of wood. As with all cooking equipment and solid fuel exhaust systems, a regular inspection and cleaning schedule is needed to prevent the possibility of a hood or duct fire. The frequency of inspection and cleaning will depend on hours of use and type and quality of wood used as fuel. Only use hardwood species dried to a moisture content of 20% or less. See **Fuelwood Facts** section for details.

When wood is burned slowly, it produces tar and other organic vapors, which combine with expelled moisture to form creosote. The creosote vapors condense in the relatively cool appliance flue of a slow-burning fire. As a result, creosote residue accumulates in the duct. When ignited, this creosote makes an extremely hot fire.

The duct serving this appliance should be inspected at least twice a month during the first two months of operation to establish a rate of creosote buildup and necessary cleaning schedule. If creosote or soot has accumulated, it should be removed to reduce the risk of a flue fire.



double
compartment
ash dolly

Never store or use flammable liquids near or inside this appliance. Never use gasoline, gasoline-type lantern fuel, kerosene, charcoal lighter fluid or similar liquids to start or freshen-up a fire in this appliance.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



Troubleshooting Guide

Bistro Home Oven Installation and Operation Manual



Problem	Cause/Solution
Controller will not turn on	<ol style="list-style-type: none"> 1. Incoming power to appliance turned off. Check circuit breaker for circuit supplying the appliance. Check that any wall switches external to the appliance that control appliance power are turned on. Check that any interlocks external to the appliance are turned on. 2. If control still does not turn on, please contact Wood Stone for assistance.
Flame does not light	<ol style="list-style-type: none"> 1. Check gas is turned on to the appliance, and gas shut-off valve is turned all the way on. 2. Debris in burner. Burner may require cleaning. Contact Wood Stone for assistance. 3. Damaged igniter or gas valve. Contact Wood Stone for assistance. <p>If the appliance is being started for the first time:</p> <ul style="list-style-type: none"> • Has all air been bled from the gas line? • Is the switch on the SV-2 valve in the ON position? <p>Note: Valve is located on the back of the control box, beneath the appliance.</p>
Flame cuts out	<ol style="list-style-type: none"> 1. Debris in burner. 2. Fan is turned on too high 3. Wind blowing into the appliance, or other venting issues. 4. Appliance is not vented properly - Call Wood Stone
Display reads "OPEN"	<ol style="list-style-type: none"> 1. Thermocouple is not plugged into control box. 2. Damaged thermocouple - call Wood Stone.
Flame and controller turn off. Unit will not turn back on.	Temp Limit switch has tripped. Allow the cooking chamber to cool and then turn the controller back on.

Please contact Wood Stone at (800) 578-6836 should service be necessary, or if you have any questions about your appliance. Our office hours are 8AM to 5PM (PST), with service hours until 4:30PM.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.


tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015



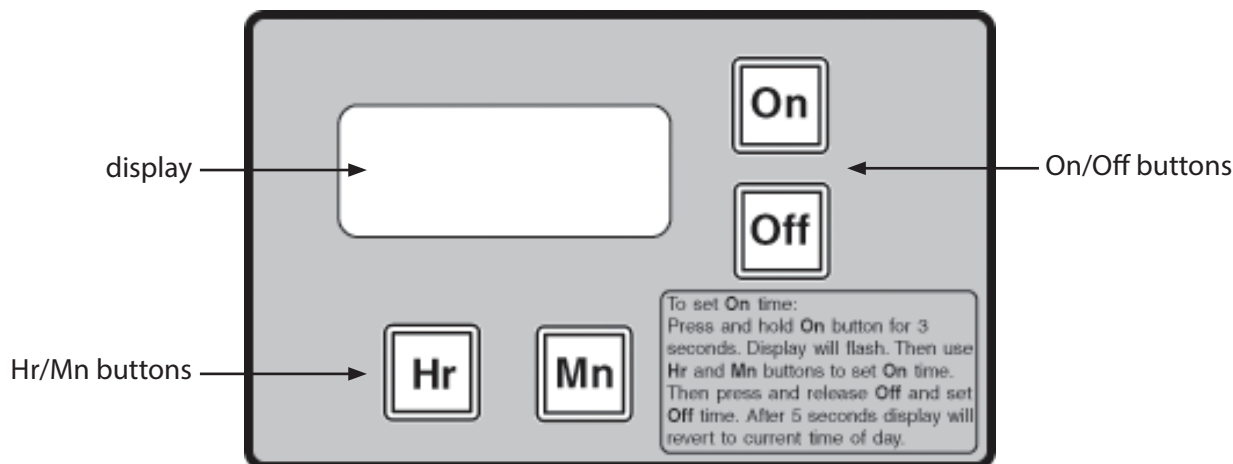

Clock/Timer Programming

NOTE: If an exhaust fan is installed on the appliance ventilation system, it must be interlocked to the appliance. An unsafe condition will result if the appliance is programmed to start automatically without the exhaust fan running. If an exhaust fan is installed it must be running whenever the appliance is turned on. See the **Interlock Relay** section for a diagram.

Initial Power Up/Clock Set Up for Correct Time

When the appliance is connected to power for the first time, or after a power outage lasting more than several hours, it will be necessary to reset the time on the clock, which will be flashing "AM 12:00".

Press and hold both the Hr (hour) and Mn (minute) buttons together for 3 seconds until the display starts flashing rapidly. Now use the Hr and Mn buttons to set the correct time of day. After making the adjustment, wait 5 seconds for the display to stop flashing. The time is now set.

Programming ON/OFF Timer Mode

When setting the timer, it is necessary to program both ON start time and OFF stop time. To set the timer, press and hold the ON button for 3 seconds until the display shows "PM 0:00" and the clock face icon appears and flashes in the display. Use the Hr/Mn buttons to set the ON time. Then press and release the OFF button. The display will show "0:00", and then will show the previously set ON time. Use the Hr/Mn buttons to set the OFF time. After the OFF time is set, wait 5 seconds and the display will show the current time of day. The clock icon will come on, indicating the timer is set and active.

The timer function can be canceled by holding both the ON and OFF buttons down for 5 seconds, until the clock icon disappears.

The ON and OFF settings can be reviewed by holding the respective button for 5 seconds. The time will be displayed for 5 seconds and then revert back to the current time of day.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015





Timer Mode Operation

When the timer is programmed for “ON/OFF” mode operation and the time of day reaches the programmed 'ON' time, the appliance controls will be switched on and the clock face icon will flash until the off time is reached, at which time the clock face icon will go off.

- If the appliance is turned on manually while the timer is set, the clock face icon will start flashing indicating the “OFF” function is still enabled, and the appliance will still shut off at the preset time.
- If the appliance is manually turned off before the preset time is reached, the preset time will be overridden and the clock face icon will go out.

Minute (Countdown) Timer Operation

To set the countdown time

- Press and hold either the Hr or Mn button for 5 seconds. The display will start flashing “0:00”.
- Use the Hr and Mn button to set the desired countdown time. The display will continue to flash the countdown time.
- To start the countdown timer, press the ON button once. The display will show solid with only the colon flashing at a rate of once per second, showing the timer is running.
- When the timer counts down to “0:00”, the beeper will sound 1 second on and one second off for 30 seconds. The timer will then beep once every 10 seconds until it is reset by pressing the OFF button.
- Pressing the OFF button will silence the beeper and the display will revert to clock mode showing the time of day.
- The timer function can be canceled by holding the ON and OFF buttons down at the same time for 5 seconds.

Clock/Timer Operation During a Power Outage

In the event of a power outage, the clock will continue to display the correct time for several hours. The minute timer may be used during a power outage, but the beeper will not sound. Programmed ON/OFF times will remain active unless the programmed ON time is reached before power is restored, in which case the program will be canceled and the clock face icon will go out. If power is restored before the programmed ON time is reached, the appliance will work normally at the preset times.

If the power remains off for an extended period the clock will eventually turn off (go blank) and will flash “AM 12:00” once the power is restored and must be reset per the instructions in the **Initial Power Up/Clock Set Up** section above.

External Control

If the appliance is turned on manually when the timer is programmed for ON/OFF times, the ON time will be canceled, but the OFF time will remain programmed. The clock face icon will blink to indicate this. If the appliance is then turned off manually the OFF time will be canceled and the clock face icon will go out.

Setting the Flame Height

When programming the oven to turn on automatically it is also important to consider the proper setting of the flame height. If the flame is turned up all of the way you may get the oven too hot too fast. If the flame is set too low, the oven may not reach the desired temperature. As a starting point, we'd recommend programming the oven to turn on three hours before you are planning to use it with the flame height control knob set to 3.

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015





What type of wood should you use to fire your solid fuel cooking equipment?

The answer to this question depends on several considerations: geographical location, availability and relative cost of various fuelwood species and individual preferences regarding the flavor qualities of various wood types. There are a wide variety of good fuelwood species in all geographic locations. Each species of wood has different characteristics. The table below should help weigh the pros and cons of various types of wood. Wood from conifers (pine trees) is not recommended due to its poor fuelwood characteristics (low weight, low-med heat, poor coaling, high sparking and high residual creosote). **Do not use pressed wood products in Wood Stone food service equipment, they may damage the ceramics.**

Wood type	Heat	Lb/Cord	Lighting	Coaling	Sparks	Fragrance*
Alder	Med-Low	2500	Fair	Good	Moderate	Slight
Apple	High-Med	4400	Fair	Excellent	Few	Excellent
Ash	High	3500	Fairly difficult	Good-Excellent	Few	Slight
Beech	High	3800	Difficult	Excellent	Few	Good
Birch (white)	Medium	3000	Easy	Good	Moderate	Slight
Cherry	Medium	2000	Fair	Excellent	Few	Excellent
Elm	High	2300	Very difficult	Good	Very Few	Fair
Hickory	Very high	4200	Fairly difficult	Excellent	Moderate	Excellent
Maple (red)	High-Med	3200	Fairly difficult	Excellent	Few	Good
Maple (sugar)	High	3700	Difficult	Excellent	Few	Good
Mesquite	Very high		Very difficult	Excellent	Many	Excellent
Oak (live)	Very high	4600	Very difficult	Excellent	Few	Fair
Oak (red)	High	3700	Difficult	Excellent	Few	Fair
Oak (white)	Very high	4200	Fairly difficult	Excellent	Few	Fair
Pecan	High		Fair	Good	Few	Good

*The desirability of various fragrances is largely a matter of personal preference.

Whichever type of wood you use, **MAKE SURE YOU KNOW THE MOISTURE CONTENT**. Properly seasoned wood contains 20% moisture or less. If wood contains more than 20% moisture, it should not be accepted for use. Wood should be stored off the ground and out of the rain in an environment that allows good air circulation so that the drying process can continue. Wet wood is the most common operational difficulty associated with wood-fired cooking equipment. Wood Stone's optional Mini-Ligno E Wood Moisture Meter can save you from paying for water when you thought you were paying for wood (see the Tools & Accessories section of woodstonehome.com, contact your dealer or Wood Stone).

When burned, a pound of wood releases approximately 6,500 BTU/hr, so it is better to compare the price of wood by the pound rather than by the cord. A full cord of wood measures 4' x 4' x 8' when stacked.

$$\text{Cost per lb} = \frac{\text{Cost per cord}}{\text{Lbs per cord (from above table)}}$$

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015




Electrical Diagram

Bistro Home Oven Installation and Operation Manual



Bistro with hot surface ignition and timer

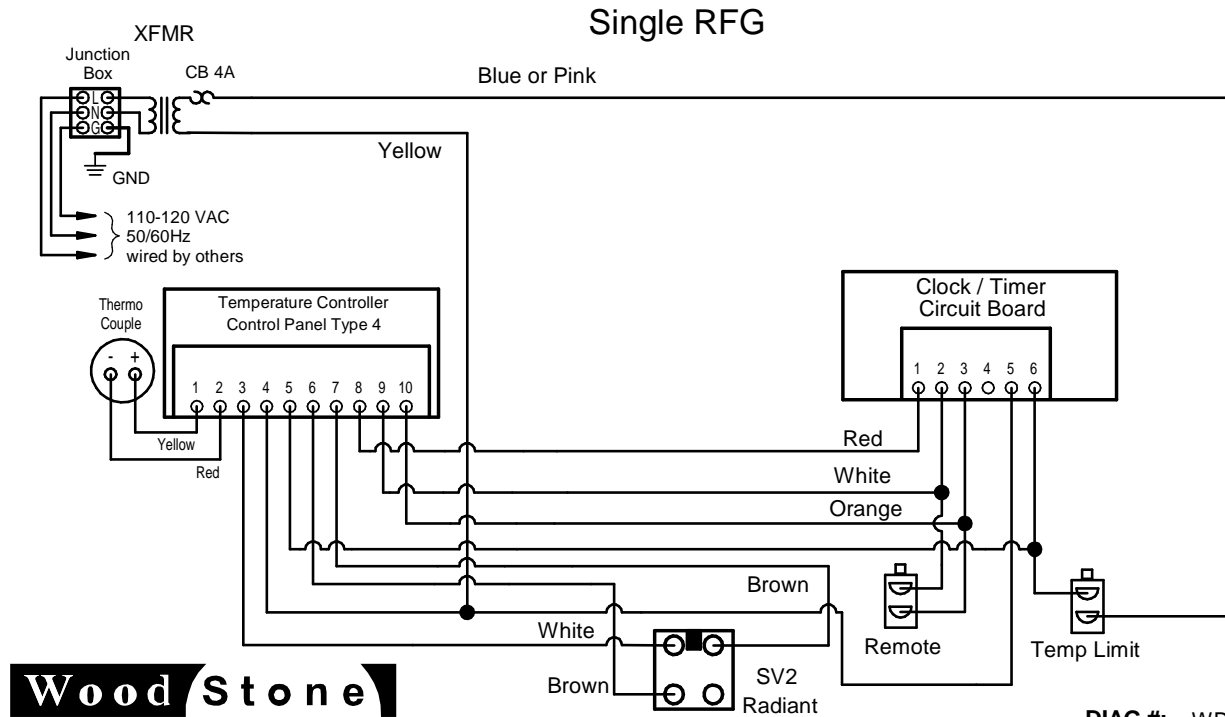

Wood Stone

Bellingham, WA +1(360)650-1111 www.woodstone-corp.com

DIAG #: WD084 Rev. 0
DATE: 11/17/2014

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015

WOOD STONE
Home

Limited Warranty

Bistro Home Oven Installation and Operation Manual



ALL WARRANTY SERVICE MUST BE PRE-APPROVED BY WOOD STONE PLEASE CONTACT THE FACTORY FIRST

Please call 800.578.6836 or 360.650.1111. Our normal business hours are 8am to 5pm (PST) with service hours until 4:30pm, Monday through Friday. Wood Stone warrants its equipment to the original purchaser against defects in material or manufacture for a period of one year from the original date of purchase, subject to the following exclusions and limitations.

EXCLUSIONS

The warranties provided by Wood Stone do not apply in the following instances:

1. In the event that the equipment is improperly installed. Proper installation is the responsibility of the installer; proper installation procedures are prescribed by the Wood Stone Installation and Operation manual.
2. In the event the equipment is improperly maintained. Proper maintenance is the responsibility of the user; proper maintenance procedures are prescribed in the Wood Stone installation manual. Burner problems resulting from debris or ash in the burner well will not be covered by the warranty. Call with questions regarding maintenance frequency.
3. In the event that the failure or malfunction of the appliance, or any part thereof, is caused by abnormal or improper use or is otherwise not attributable to defect in material or manufacture.
4. In the event that the appliance, by whatever cause, has been materially altered from the condition in which it left the factory.
5. In the event that the rating plate has been removed, altered or obliterated.
6. On parts that would be normally worn or replaced under normal conditions.
7. Normal cracking due to expansion and contraction stress relief in either the dome or appliance deck.
- 8. In the event that pressed log products of any type have been burned in the equipment.**
9. Damage resulting from the use of chemical cleaning products in the oven, as well as any damage from liquids or chemicals, including water, being poured or sprayed into the oven.

If any oral statements have been made regarding this appliance, such statements do not constitute warranties and are not part of the contract of sale. This Limited Warranty constitutes the complete, final and exclusive statement with regard to warranties.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE OR WARRANTY AGAINST LATENT DEFECTS

LIMITATIONS OF LIABILITY

In the event of warranty claim or otherwise, the sole obligation of Wood Stone shall be the repair and/or replacement, at the option of Wood Stone, of the appliance or component or part thereof. Such repair or replacement shall be at the expense of Wood Stone with the exception of travel over 100 miles or two hours, overtime, and holiday charges which shall be at the expense of the purchaser. Any repair or replacement under this warranty does not constitute an extension of the original warranty for any period of the appliance or for any component or part thereof. Parts to be replaced under this warranty will be repaired or replaced at the option of Wood Stone with new or functionally operative parts. The liability of Wood Stone on any claim of any kind, including claims based on warranty, expressed or implied, contract, negligence, strict liability or any other theories shall be solely and exclusively the repair or replacement of the product as stated herein, and such liability shall not include, and purchaser specifically renounces any rights to recover, special, incidental, consequential or other damages of any kind whatsoever, including, but not limited to, injuries to persons or damage to property, loss of profits or anticipated profits, or loss of use of the product.

TO SECURE WARRANTY SERVICE:

If you claim a defect covered by this Limited Warranty, direct your claim to:

Wood Stone Corporation
1801 W. Bakerview Rd.
Bellingham, WA 98226 USA
Attn: Service Department
Phone: 1.800.988.8103 or 1.360.650-1111

An ongoing program of product improvement may require us to change specifications without notice.

Wood Stone Corporation

1801 W. Bakerview Rd.
Bellingham, WA 98226 U.S.A.

tf. 800.578.6836
f. 360.734.0223

woodstonehome.com
info@woodstonehome.com



M0003.05
Rev. February 2015

