



PrintServer II

User and Reference Guide



© 2005 ZIH Corp.

The copyrights in this manual and the label print engine described therein are owned by Zebra Technologies Corporation. Unauthorized reproduction of this manual or the software in the label print engine may result in imprisonment of up to one year and fines of up to \$10,000 (17 U.S.C.506). Copyright violators may be subject to civil liability.

This product may contain ZPL[®], ZPL II[®], and ZebraLink[™] programs; Element Energy Equalizer[®] Circuit; E3[®]; and AGFA fonts. Software © ZIH Corp. All rights reserved worldwide.

ZebraLink and all product names and numbers are trademarks, and Zebra, the Zebra logo, ZPL, ZPL II, Element Energy Equalizer Circuit, and E3 Circuit are registered trademarks of ZIH Corp. All rights reserved worldwide.

CG Triumvirate is a trademark of AGFA Monotype Corporation. All rights reserved worldwide. CG Triumvirate[™] font © AGFA Monotype Corporation. Intellifont[®] portion © AGFA Monotype Corporation. All rights reserved worldwide. UFST is a registered trademark of AGFA Monotype Corporation. All rights reserved worldwide.

All other brand names, product names, or trademarks belong to their respective holders.

Part Number: 45537L-002 Rev. A

Your Feedback Is Important

Your feedback helps us improve our documents to better serve you!

Please take a few minutes to evaluate your experience using this document.

Product and Personal Information

1. What printer are you using? _____
2. What document are you using? _____
3. Have you ever worked with our product before? Yes No
If Yes, how many ____years? ____months?
4. What is your education level? _____

Document Usability

Check the rating that applies to your experience using this document:

Content	Excellent	Good	Poor
The information I needed was available.			
The information I needed was easy to find.			
The information and directions were clear.			
The illustrations were helpful.			
The document was arranged logically.			
The Table of Contents and Index were helpful.			
The Glossary was helpful.			
The level of information was appropriate for my technical expertise.			

Additional Comments

Write any additional comments on the lines provided on the next page.

[illegible]

 Fax: 1.847.821.1795 **Attention:** TechPubs — CTC

 **E-mail:** techpubs@zebra.com

Warranty Information

ZebraNet® PrintServer II

Zebra warrants the ZebraNet PrintServer II against defects in material or workmanship for a period of three years from either (i) the date of shipment to you by Zebra, or (ii) the date of any resale by you to an end user, whichever is later. Proof of shipment date may be required to validate the warranty period. This warranty does not cover normal wear and tear, and shall be null and void if the equipment is modified, improperly installed or used, damaged by accident or neglect, or improperly installed or replaced by the user. To qualify for this warranty, the ZebraNet PrintServer II must be returned to the factory or other authorized service center.

ZEBRA'S SOLE OBLIGATION UNDER THIS WARRANTY SHALL BE TO FURNISH PARTS AND LABOR FOR THE REPAIR OR REPLACEMENT OF PRODUCTS FOUND TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP DURING THE WARRANTY PERIOD, OR ZEBRA MAY, AT ITS DISCRETION, ISSUE A CREDIT FOR ANY SUCH DEFECTIVE PRODUCTS IN SUCH AMOUNT AS IT DEEMS REASONABLE.

As a condition of this warranty, the user must: (a) obtain a Zebra Return Materials Authorization (RMA), which will include an RMA number that must be prominently displayed on the outside of the shipping container (returns without an RMA number will be rejected by Zebra and immediately returned to you, freight collect); (b) ship the Product being returned freight prepaid, to the authorized service location; and (c) include with the Product a written description of the claimed defect. Products returned

should be packaged in the original packing and shipping container or comparable container. In the event the Product is not so packaged or if shipping damage is evident, it will not be accepted for service under warranty. Surface transportation charges for the return of the Product to the customer shall be paid by Zebra within the 48 contiguous states and the District of Columbia. The customer shall pay shipping costs, customs clearance, and other related charges outside the designated area. If Zebra determines that the Product returned to it for warranty service or replacement is not defective as herein defined, the customer shall pay all costs of handling and transportation.

Warranty Exclusions and Conditions

The above warranty is in lieu of all other warranties, expressed or implied, oral or written, statutory or otherwise, including any implied warranty of merchantability or fitness for a particular purpose. Zebra shall not be responsible for the specific application to which any Products are applied, including but not limited to compatibility with other equipment. All statements, technical information, and recommendations relating to Zebra Products are based on tests believed to be reliable but do not constitute a guarantee or warranty.

ZEBRA SHALL NOT, UNDER ANY CIRCUMSTANCES WHATSOEVER, BE LIABLE TO THE BUYER OR ANY OTHER PARTY FOR LOST PROFITS, DIMINUTION OF GOOD WILL, OR ANY OTHER SPECIAL OR CONSEQUENTIAL DAMAGES WHATSOEVER WITH RESPECT TO ANY CLAIM HEREUNDER. IN ADDITION, ZEBRA'S LIABILITY FOR WARRANTY CLAIMS SHALL NOT, IN ANY EVENT, EXCEED THE INVOICE PRICE OF THE PRODUCT CLAIMED DEFECTIVE, NOR SHALL ZEBRA BE LIABLE FOR DELAYS IN REPLACEMENT OR REPAIR OF PRODUCTS.

No salesperson, representative, or agent of Zebra is authorized to make any guarantee, warranty, or representation in addition to the foregoing warranty.

NO WAIVER, ALTERATION, ADDITION, OR MODIFICATION OF THE FOREGOING WARRANTY SHALL BE VALID UNLESS MADE IN WRITING AND SIGNED BY AN EXECUTIVE OFFICER OF ZEBRA.

Software License Agreement

Software and documentation provided by Zebra are protected by the United States copyright law and international treaty, and therefore you must treat them like a book,



with the exception that you may make copies of the software to protect yourself against loss of the original.

Your right to use the software and documentation as described below is non-exclusive and non-transferable. Zebra retains ownership of the software and documentation and all other rights, title, and interest. The software and documentation may be used by any number of people and may be freely moved from one computer to another as long as there is no possibility of their being used by more than one person on more than one computer at the same time.

Machine readable files representing graphics or fonts that you have created independently may be converted to ZPL format files using the software, and such files may be used, copied onto diskettes or font cards, given away, or sold without paying license fees to Zebra. Pictorial or graphic images and any machine readable files representing them may be protected by United States copyright law and international treaty provisions, which prohibit you from transcribing or scanning such images or using, copying, or converting such files without permission of the copyright owner. You may not use this software in violation of U.S. copyright law or international treaty. By using this software, you agree to be bound by these terms.

Zebra warrants the software diskettes to be free of defects in material and workmanship for a period of 60 days from the date of purchase. In the event of notification within the warranty period of defects in material and workmanship, Zebra will replace the defective diskette or documentation. Zebra specifically disclaims all other warranties, expressed or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose. IN NO EVENT WILL ZEBRA BE LIABLE FOR LOST PROFITS, LOST DATA, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ABUSE OR MISAPPLICATION OF THE SOFTWARE OR BY ITS USE IN VIOLATION OF THE U.S. COPYRIGHT LAW OR INTERNATIONAL TREATY.

This product document refers to hardware and software products by their trade names. ZebraNet[®] is a trademark of Zebra. The PrintServer II is a product of Zebra. All other designations are trademarks or registered trademarks of their respective companies.

Table of Contents

Your Feedback Is Important	3
Warranty Information	i
ZebraNet® PrintServer II	i
Software License Agreement	ii
Preface	ix
Contacts	x
Support	x
Feedback	x
About this Document	xi
Document Conventions	xiii
Related Documents	xv
1 • Introduction	1
Overview	2
Illustration	3
Requirements	6
Software	6
Browser Support	6
Hardware	7
Compatibility	8
Installation Types	9

PSII Specifications	10
2 • Installation	11
External PSII	12
Illustration	12
Internal PSII	16
Install	16
ZebraNet Utilities	26
ZebraNet View Java Applet	30
3 • Getting Started	35
Before you begin	36
Assigning an IP Address	38
With Dynamic Host Configuration Protocol (DHCP)	38
Without DHCP	38
In a non-Windows environment	41
Setting Alerts	45
ZebraNet View	45
ZebraLink	47
Checking PSII Configuration Settings	53
ZebraNet View	53
Browser	54
Setting up a ZebraNet Connect IP	58
Windows NT 4.0/Windows 2000	58
Windows 95/98/Me	59
IPX (NetWare)	60
Enabling Protocols	62
WebView	62
ZebraNet View	65
Defaulting the PSII	68
WebView	68
ZebraNet View	69
Test Button	70
4 • NetWare Print Configuration	71
Printing in PServer Mode	72
5 • Printing Configurations	75
BSD (Berkeley Software Distribution)-Style Print Queue	76

Configuring the Print Queue	76
System V Queue Installation	78
Configuring Operating System V Queue for ZebraNet Printing	78
Prerequisites	78
UNIX Configuration	78
6 • Using Printing Protocols.....	81
IPP	82
FTP	83
A • PrintServer II	85
PSII Features	86
Status and Configuration	86
Print Server Status	94
Reset	96
Restore	97
B • ZebraLink	99
WebView	100
Home Page	100
Alert Setup	110
C • ZebraNet Utilities	117
ZebraNet View	118
ZebraNet Alert	121
ZebraNet Alert Using SNMP	122
Sending Email to Your Zebra Printer	123
Open Alert	127
ZebraNet Connect	129
ZebraNet View Java Applet	130
Hardware Troubleshooting	133
Troubleshooting the PSII	134
Frequently Asked Questions	137
FAQs	138
Glossary.....	143
Index	149

Preface

The Preface discusses the topics and illustrates standards that are used throughout this guide.

Contents

Contacts	x
About this Document.....	xi
Document Conventions.....	xiii
Related Documents.....	xv

Contacts

You can contact Zebra, USA at any of the following:

Visit us at: <http://www.zebra.com>

Our Mailing Address:

Zebra Technologies Corporation

333 Corporate Woods Parkway
Vernon Hills, Illinois 60061.3109 U.S.A
Telephone +1 847.634.6700
Facsimile +1 847.913.8766

Zebra Technologies Europe Limited

Zebra House
The Valley Centre, Gordon Road
High Wycombe
Buckinghamshire HP13 6EQ, UK
Telephone +44 (0)1494 472872
Facsimile +44 (0) 1494 450103

Support

You can contact Zebra support with any questions or problems with your ZebraNet PrintServer II (PSII):

Support email: <http://support.zebra.com>

Telephone: +1.847.913.2259

Feedback

Be sure to complete the feedback form located at the beginning of this guide. For details see, [*Your Feedback Is Important on page 3.*](#)

About this Document

The *ZebraNet PrintServer II User and Reference Guide* consists of these chapters:

Title	Content Description
<i>Introduction</i>	This chapter provides a high-level overview of the ZebraNet PrintServer II (PSII), installation instructions, standard network configurations, and how to work with PSII.
<i>Installation</i>	This chapter provides information on how to install PSII (external and internal) and the ZebraNet Utilities.
<i>Getting Started</i>	This chapter provides you with information on how to work with the most frequently used PSII features.
<i>NetWare Print Configuration</i>	This chapter provides you with instructions on how to configure Novell's NetWare for printing to PSII.
<i>Printing Configurations</i>	This chapter provides information and instructions on configuring your printer for remote BSD-style LPD printing on the UNIX operating system.
<i>Using Printing Protocols</i>	This chapter provides information and steps to set up your PSII to support Internet Printing Protocol (IPP).
<i>PrintServer II</i>	This appendix provides you with details on the most commonly used PSII features.
<i>ZebraLink</i> <i>For ZebraLink-enabled printers.</i>	This appendix provides you with detailed information that allows you to use the enhanced functionality of your ZebraLink-enabled printer with the PSII.
<i>ZebraNet Utilities</i>	This appendix provides you with details on ZebraNet Utilities, the software suite of printer administration tools that complements and enhances both ZebraLink and the ZebraNet family of connectivity products.

<i>Hardware Troubleshooting</i>	This section provides you with solutions to known issues.
<i>Frequently Asked Questions</i>	This section is a compiled group of frequently asked questions (FAQs) about PSII.
<i>Glossary</i>	This section is a glossary of terms that are specific to the PSII.

Document Conventions

The following conventions are used throughout this document to convey certain information:

About this Chapter Sections These sections list and describe each main section of the chapter, including the initial page numbers of those sections. These sections primarily serve as hyperlink components for the Adobe Acrobat .pdf version of this guide.

Alternate Color (online only) Cross-references contain hot links to other sections in this guide. If you are viewing this guide online in .pdf format, you can click the cross-reference (royal blue text) to jump directly to its location.

Command Line Examples All command line examples appear in `Courier` font. For example, you would type the following to get to the Post-Install scripts in the `bin` directory:

```
Ztools
```

Files and Directories All file names and directories appear in `Courier` font. For example, the `Zebra<version number>.tar` file and the `/root` directory.

Caution, Caution, Important, Note, Tools, and Example These topics are defined in the following example:

Caution • Advises you that failure to take or avoid a specified action could result in loss of data.



Caution • Turn OFF (O) the printer and disconnect it from the power source before performing the following maintenance.



Caution • Advises you that failure to take or avoid a specified action could result in personal injury.



Important • Provides information that is essential to the completion of a task.



Note • Indicates neutral or positive information that emphasizes or supplements important points of the main text.



Tools • Identifies the tools you need to accomplish a task.



Example • Provides an example, often a scenario, to better clarify a section of text.

Illustration Callout Instruction Illustration callout instructions are used when an illustration contains either information about a dialog box or step(s) to accomplish in a dialog box.

This illustration callout instruction identifies a section of the dialog box, and the other callout shows steps to follow:

In the Set Permanent text-box, type in the print server's IP address.

When you are finished, click OK.

Related Documents

In addition to the *ZebraNet PrintServer User and Reference Guide*, the following documents might be helpful references while using PSII:



Note • Most of these documents are available on our Web site.

- *Wireless Card Socket Option (WCSO) Install and Users Guide*
- *The ZebraLink Solution Application White-paper*
- *ZPL II® Programming Guide Volume One: Command Reference*
- *ZPL II® Programming Guide Volume Two: The X.10 Environment*
- *EPL2 Programmer's Manual*
- *Line Mode Programmer's Manual*



Preface

Related Documents

CHAPTER 1

Introduction

This chapter provides a high-level overview of the PSII device, installation instructions, standard network configurations, and how to work with PSII.

Contents

Overview	2
Requirements	5
Compatibility	7
Installation Types.....	8
PSII Specifications.....	9

Overview


The PSII is an optional factory- or field-installed device that connects the network and your Zebra printer is ZebraLink-enabled, PSII provides you with a browser user-interface for printer and PSII settings. If your printer also has ZebraNet Utilities, you have even more functionality. For details, see *[ZebraNet Utilities on page 4](#)*.



Important • You can download the most recent version of ZebraNet Utilities from our Web site: www.zebra.com.

Illustration

This illustration shows the flow of all the components that work with PSII. The table that follows identifies the components and how they enhance each respective device:

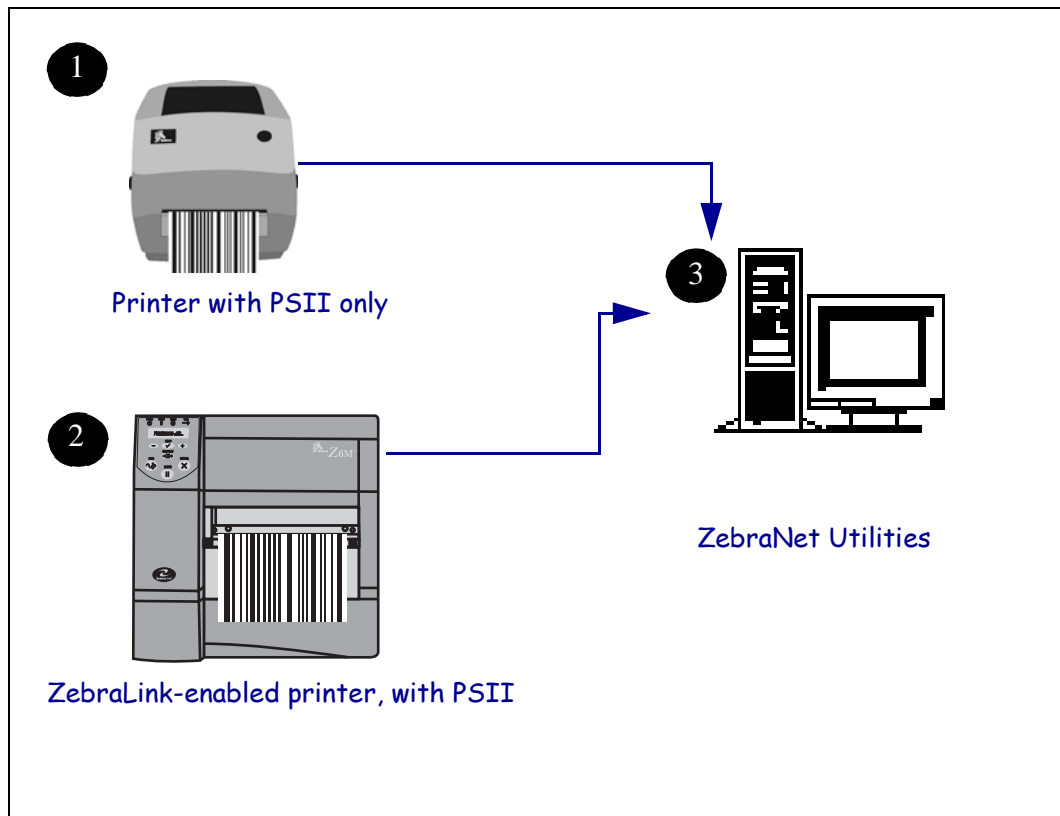

Components	Description
Printer with PSII only <div>1</div>	<p>PSII gives your printer these features:</p> <ul style="list-style-type: none"> • allows the remote monitoring and configuration capability of the PSII using a browser. • allows you to send unsolicited printer status messages via email-enabled devices.
ZebraLink-enabled printer with PSII <div>2</div>	<p>A ZebraLink-enabled printer with PSII gives you all the above-mentioned features (WebView and Alert).</p> <p>NOTE • PSII can be either field- or factory-installed for additional features. For details, see Installation Types on page 8.</p>
ZebraNet Utilities <div>3</div>	<p>ZebraNet® Utilities is a suite of software programs that work with PSII and enhance the features of ZebraLink resident within ZPL-based printers. The features include</p> <ul style="list-style-type: none"> • <i>ZebraNet Alert</i> lets you configure multiple event alerts per device with different alerts going to different people. You are notified of alerts from either visual or audio cues. You can also generate advanced alert reports. • <i>ZebraNet Connect IP</i> lets you, with Windows, enable simple printer selection of an IP addressable printer. • <i>ZebraNet View</i> allows you to locate printers automatically. ZebraNet View searches on parameters such as IP address, subnet, printer model, printer status, and many other user-defined characteristics. It also offers powerful device management capabilities. • <i>ZebraNet View Java Applet</i> is a Java-based version of the popular ZebraNet View. It gives you ZebraNet View capabilities in a non-Windows environment.



Requirements

This section lists the minimum requirements for PSII, which include software, browser support, and hardware.

Software

These are the platforms supported by ZebraNet Utilities:

Windows™ NT®, 95, 98, 2000, Me

Novell® versions 3 and 4 Netware®

The ZebraNet View Java Applet is supported by any Java-enabled browser:

UNIX®

Linux

Browser Support

Internet Explorer 4.0+

Netscape Navigator 4.08+

Any browser that is HTML 1.1
compliant

Hardware

These are the minimum hardware requirements:

Printers	External	Internal Field Upgrade	Internal Factory
<i>Xi</i> Series (<i>XiII</i> and <i>XiIII</i>)	•	•	•
R140	•	•	•
PAX Series (excluding <i>PAX4</i>)	•	•	•
Z-Series®	•		
Stripe® Series	•		
Z4Mplus™	•	•	•
Z6Mplus™	•	•	•
105SL	•	•	•
105 <i>Se</i> /160S	•		
2746	•		
2746e	•		•
2684	•		
DA402, T402	•		
2844 (EPL)	•		•
2844 (ZPL)	•		•*
Ht-146	•		•*
2824	•		•

* future releases



Compatibility

This section identifies the various components that are compatible with PSII.

ZebraNet Wireless Card Socket Option (WCSO) PSII is fully compatible with WCSO.

Software HP JetAdmin, HP Web JetAdmin™, and HP OpenView™ all work with PSII.

Installation Types

PSII can be factory- or field-installed, as follows:

Factory Factory-installations are for new Zebra printers that are built with the internal PSII option.

Field Field-installations are for Zebra printers already in the field that do not have the PSII device installed. The PSII option can be installed on existing printers, as follows:

- External PSII — attaches to the printer parallel port



Important • This installation must be performed by a qualified service technician.

- Internal PSII — for the appropriate Zebra printers, this option connects directly to the main logic board

PSII Specifications

Network Connection 10BASE-T UTP RJ45 connection. Auto senses IEEE- 802.3, Ethernet II, IEEE- 802.2, and IEEE 802.2/SNAP frame formats

Printer Connection Bi-directional, IEEE- 1284 Centronics parallel port

User Interface Activity indicator: bi-color display of operational status; test button: diagnostic test and configuration printing

Size (external ZebraNet PrintServer II) Length: 3.6" / 91.4 mm, Width: 2.5" / 63.5 mm, Height: 0.8" / 20.3 mm

Weight (external ZebraNet PrintServer II) .5 oz / 71 g

Power Maximum 250mA at 5.25VDC; power provided by the printer (Centronics pin 18, 5VDC at 200mA)

Environment Operating Temperature: 0° to 104°F (0° to 40°C); Storage Temperature: -4° to 140°F (-20° to 60°C); Operating Humidity: 25 to 85% non-condensing

Agency Approvals FCC Class B, Canadian ICES-003 “Class B”, EN55022 Class B, EN55024, AS/NZS3548

Warranty Three years

CHAPTER 2

Installation

This chapter provides information on how to install PSII (external and internal) and the ZebraNet Utilities.

Contents


External PSII	12
Internal PSII.....	16
ZebraNet Utilities.....	26
ZebraNet View Java Applet.....	30

External PSII

This section provides you with an illustration of the external PSII and the steps required for its installation.

Illustration

This illustration shows a visual of an external PSII. The callouts identify the important components:

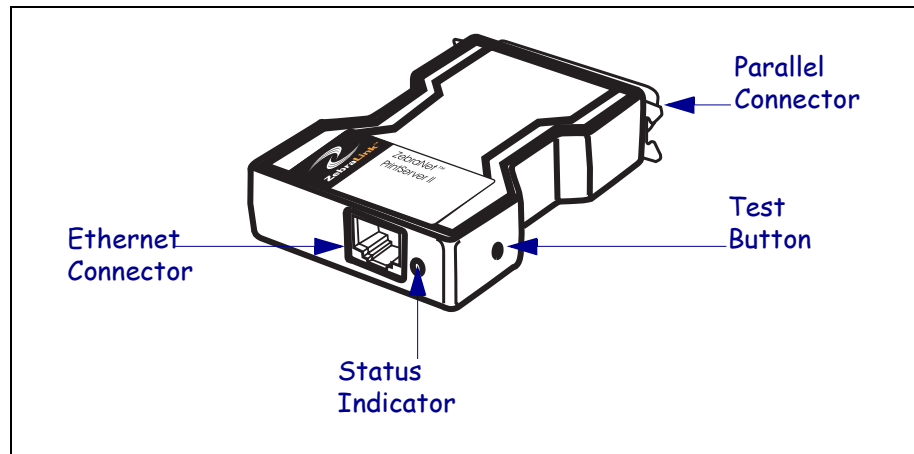


Note • When necessary, refer back to this illustration during the installation steps.

To install an external PS II, complete these steps:

- 1 Turn off (O) the printer.
- 2 On the back of the printer, insert the PSII device into the parallel port.

This illustration calls out the location of the parallel port and provides an enlarged illustration of the parallel port:

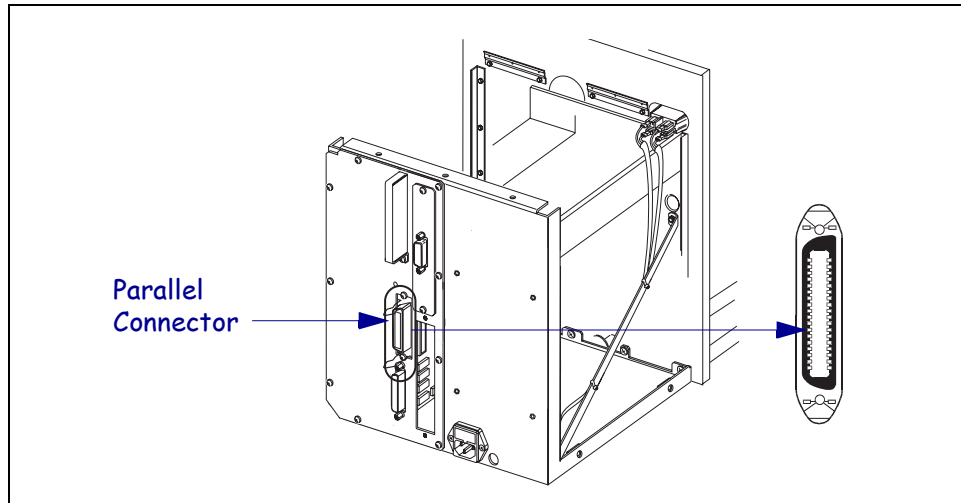

- 3 Secure the wire locks.
- 4 On the back of the PSII, insert a live 10BASE-T cable into the Ethernet connector.
- 5 Turn on the printer.

A red status indicator blinks during the Power On Self Test (POST) and changes to green when the initialization is finished.

The **Test** button is a small hole on the PSII device. To press it, you need to insert something small into the hole, like a paperclip.

- 6 Press the **Test** button located on the side of the PSII. This prints out a PSII configuration label.



Important • DPI and your firmware version:

- For printers with firmware version 7.01 and higher, regardless of the dpi, a 2-inch (5 cm) label prints
- For printers with firmware version 7 and lower, see the table that follows.

This table shows you how to determine the minimum label width needed to print a PSII configuration label for printers with firmware version 7 or lower:

DPI	Inches
600	1.25
300	2.50
200	3.69
150	5.0

This is an example of a PSII configuration label. The callouts identify the settings you need to know. The table following the illustration callout provides a description of each callout.

The image shows a sample configuration label for a ZebraNet™ Print Server. The label is divided into several sections with their respective settings. Three callouts are present on the right side, each with a blue arrow pointing to a specific section of the label:

- Callout 1:** Points to the TCP/IP status and address information.
- Callout 2:** Points to the NETWORK status and frame format.
- Callout 3:** Points to the GENERAL serial number and hardware address.

The configuration details shown on the label are as follows:

Section	Setting	Value
TCP/IP	ENABLED	ENABLED
	ADDRESS	10.3.4.102
	SUBNET MASK	255.255.255.0
	DEFAULT GATEWAY	10.3.4.1
NETWORK	ENABLED	ENABLED
	Ethernet	802.3
	Unknown	Unknown
	Mode	Unknown
GENERAL	Serial Number	1928107
	Hardware Address	0040681D6BAB
	Firmware Version	6.30 (A021A)
	Status	ENABLED
ERROR	None	None
	Error reading from Telnet	Error reading from Telnet
	None	None
	Status	ENABLED
JET ADMIN	ENABLED	ENABLED
	Status	ENABLED
	Port Configuration	Online
	Port Name	ZTC 140XiIII-200dpi
PORT CONFIGURATION	Online	Online
	ZTC 140XiIII-200dpi	ZTC 140XiIII-200dpi
	None	None
	Status	ENABLED

At the bottom of the label, there is a footer section containing the text: ZebraNet™ PRINT SERVER CONFIGURATION and FIRMWARE IN THIS PRINTER IS COPYRIGHTED.



Callout	Description
1	This shows the IP address, subnet mask, and default gateway of the PSII device. If the IP address is set at 0.0.0.0, you need the serial number (in callout 3) to set the IP address.
2	This shows all the Novell settings.
3	This shows the serial number, hardware address (MAC address), and firmware version of the PSII device.

Internal PSII

This section provides you with an illustration of the internal PSII and installation steps. The printer model you have determines the instruction you need to go to:


- If you have an *XII*, *XIII*, *105SL*, and *PAX-Series* printers, see [XII](#), [XIII](#), [105SL](#), and [PAX-Series on page 16](#).
- If you have an *Z4Mplus* or *Z6Mplus* printer, see [Z4Mplus/Z6Mplus on page 20](#).

Install

This section provides you with instructions on how to install a PSII into the supported Zebra printers.

XII*, *XIII*, *105SL*, and *PAX-Series

This illustration shows you the internal PSII that can be installed into *XII*, *XIII*, *105SL*, and *PAX-Series* printers. The callouts identify the important components:

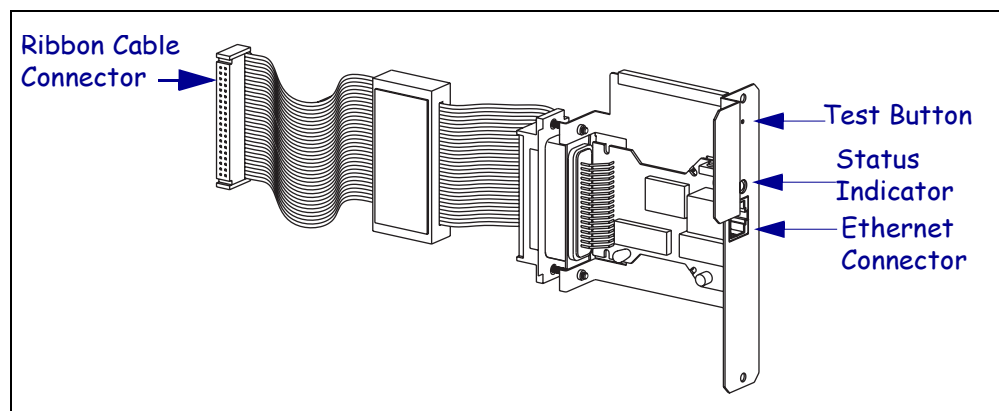



Caution • This installation must be performed by a qualified service technician.



Caution • Turn Off **(O)** the printer and disconnect it from the power source before performing these procedures.



Caution • Observe proper electrostatic safety precautions when handling any static-sensitive components such as circuit boards and printheads.


To install an internal PSII into a *XII*, *XIII*, *105SL* and *PAX-Series* printer, complete these steps:




Tools • These are the tools you need for the installation:

- #1 Phillips screwdriver
- 3/32 in. Allen wrench

- 1 Turn off **(O)** the printer and disconnect the AC power cord.
- 2 On the back of the printer, remove the two screws and the blank cover plate positioned next to the main RS-232 and parallel interface connectors.
- 3 To remove the side panel:
 - For the *XII*-, *XIII*-Series, and *105SL*, remove the screws and remove the left side panel.

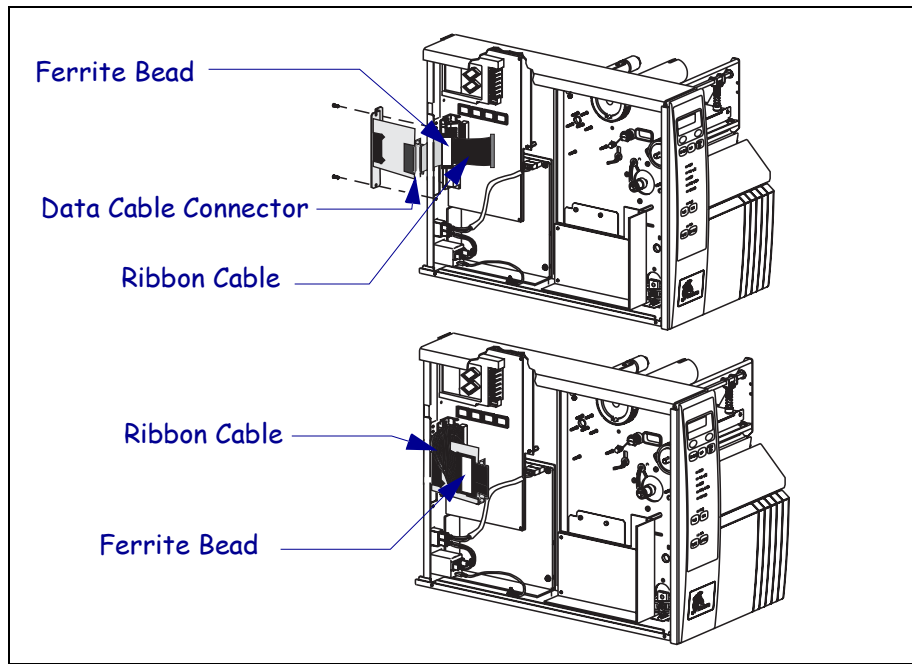

- For the PAX-Series, access the electronics by removing the mounting screws from the printer's PCB access panel and sliding the panel out.

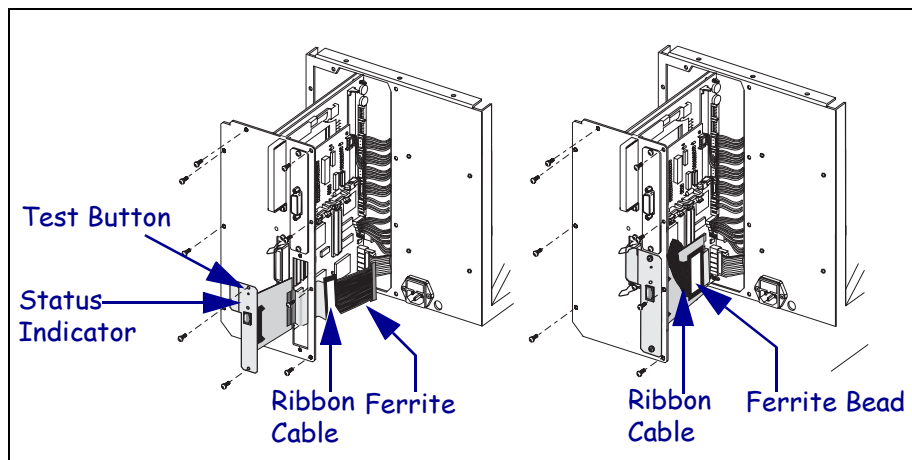

Note • The parallel port on the back of the printer is not operational when the internal PSII is installed. The hardware of the PSII mounting bracket covers the parallel port.


- 4 Through the mounting slot, insert the ribbon cable and PSII.



- 5** Fold the cable and the ferrite bead back over the mounting bracket, and connect the ribbon cable connector into the keyed Interface Data Cable Connector (J4) on the main logic board. Secure the PSII interface board in place with the cover plate screws that you removed early in this step sequence.
- 6** Confirm that all small cable connectors are tight.
- 7** Reinstall the PAX-Series PCB access panel or the left side-panel of the *XiII* and *XiIII*-Series printers that you removed earlier in this step sequence.
- 8** This kit includes a label printed with the Ethernet MAC hardware address for the PSII. Remove the backing from the label and affix it to the back of the printer.
- 9** Reconnect the AC power cord and turn the printer on.
- 10** Consult your System Administrator before configuring the PSII for your network! To establish the network connection, refer to the section applicable to your network type.

Z4Mplus/Z6Mplus

This illustration shows you the internal PSII that can be installed into Z4Mplus and Z6Mplus printers. The callouts identify the components you need to be familiar with:

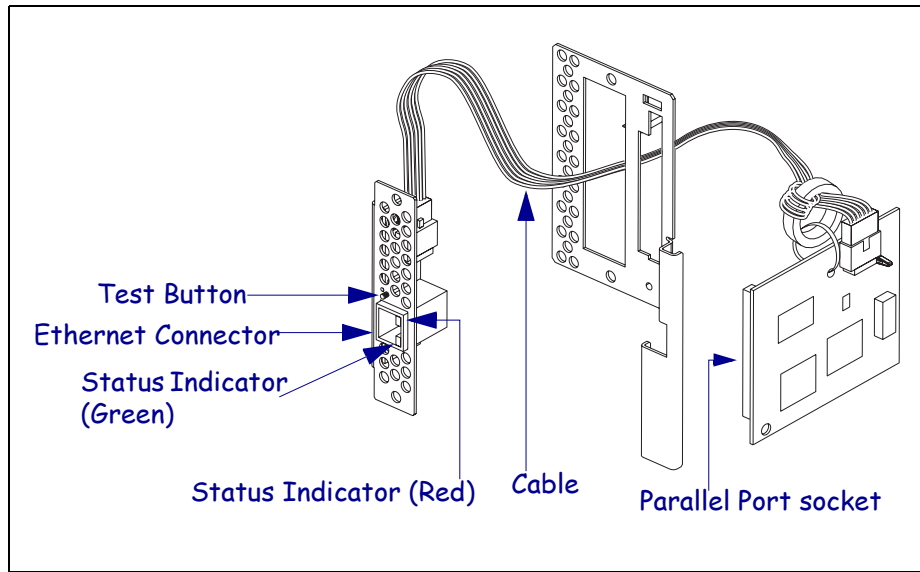



Caution • This installation must be performed by a qualified service technician.



Caution • Turn Off (O) the printer and disconnect it from the power source before performing these procedures.



Caution • Observe proper electrostatic safety precautions when handling any static-sensitive components such as circuit boards and printheads.


To install an internal PSII into a Z4Mplus printer, complete these steps:




Tools • These are the tools you need for the installation:

- 7 mm nutdriver
- Flat blade screwdriver

- 1 Turn off (O) the printer and disconnect the AC power cord.
- 2 Lift the media door and find the screw in the upper-middle area of the printer frame.
- 3 As shown in this illustration, remove the screw and the lock washer:

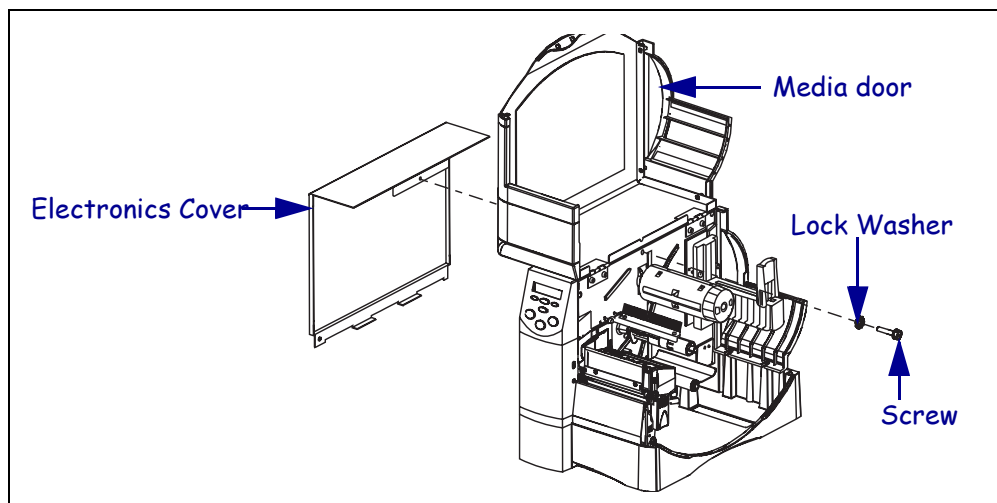

- 4 Close the media door.
- 5 As shown in this illustration to remove the electronics cover, push in and pull up.

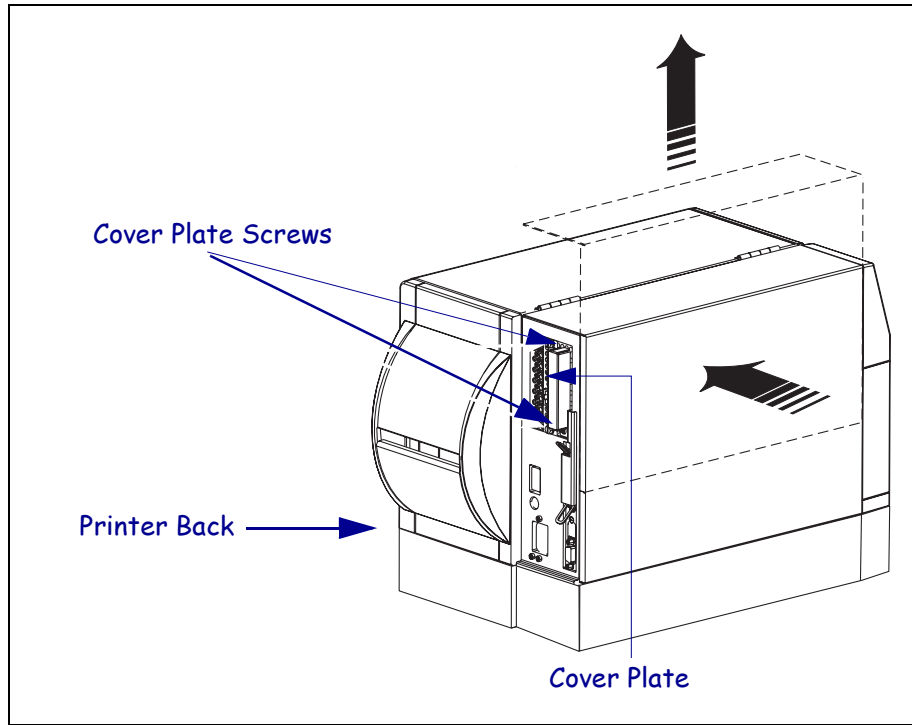


- 6 On the back of the printer, use the flat blade screwdriver to remove the screws and the cover plate.

This opens the mounting slot on the back of the printer.


- 7 Take the PSII and disconnect it as noted in this illustration:



Note • This illustration identifies the components you will be working with in the upcoming steps:

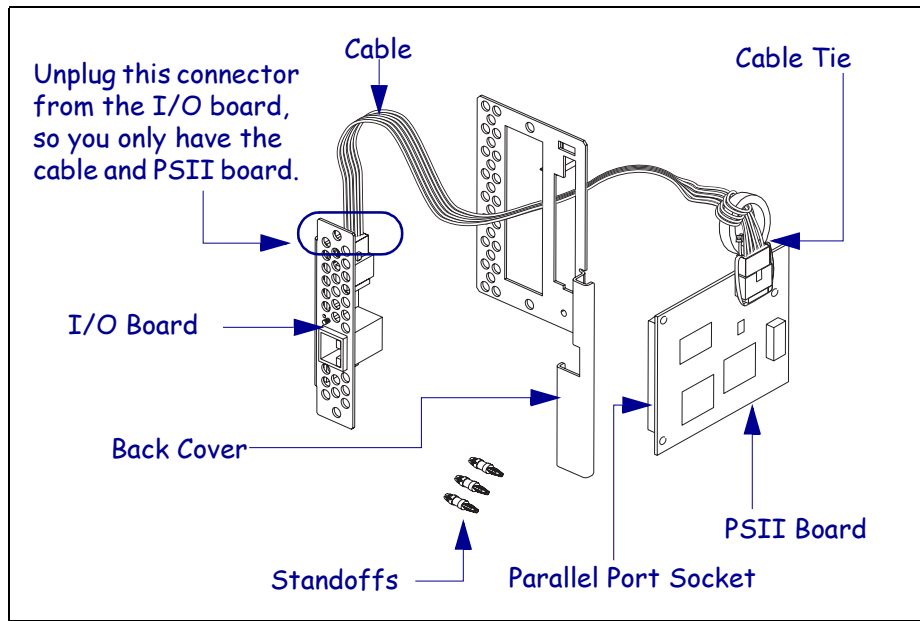

- 8 As shown in this illustration, insert the short ends of each standoff into the holes on the main logic board until you hear a click.

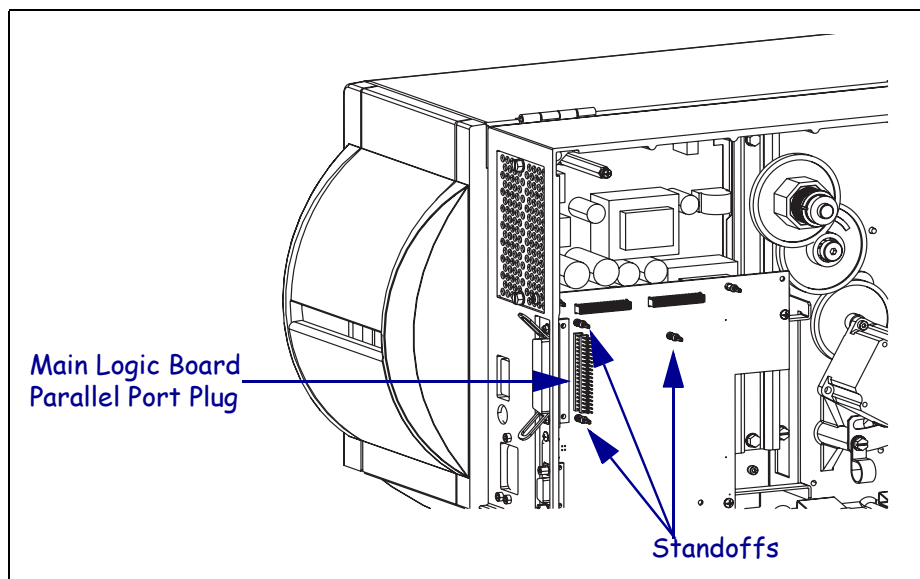


- 9 With the PSII device, take the cable and PSII board, go to the electronics side of the printer and plug the parallel port socket of the PSII board into the parallel port plug on the main logic board.
- 10 Snap the standoffs through the holes on the PSII board.
Be sure the PSII is in securely.



Note • Does your printer have a PCMCIA card installed? If so, step 11 requires you to feed the connector over the PCMCIA card, then through the mounting slot on the back of the printer.

- 11 With the PSII board connected onto the main logic board, feed the connector through the mounting slot on the back of the printer.
- 12 As shown in this illustration, put the I/O board and plate together, then connect the cable into the plug on the I/O board:

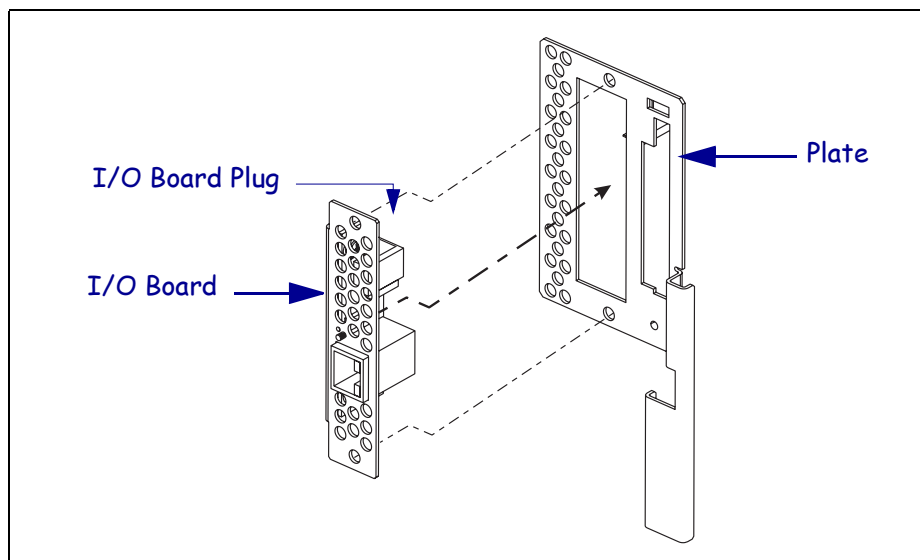

Note • The parallel port on the back of the printer cannot be used when the internal PSII is installed. The hardware of the PSII mounting bracket covers the parallel port.

- 13 Use the screws from step 6 to screw the plate onto the back of the printer.
- 14 Reinstall the electronics cover.
- 15 Reconnect the AC power cord and turn the printer on.

If the **green** status indicator is solid (not blinking), you have power to the PSII.



- 16** Consult your System Administrator before configuring the PSII for your network. To establish the network connection, refer to the section applicable to your network type.

ZebraNet Utilities

The ZebraNet Utilities is a software suite consisting of tools to assist you with the configuration of the PSII device, which gives you the flexibility to make changes to settings, track errors, and more.

If you want to be certain you have the most recent version of the ZebraNet Utilities, you can visit our Web site and download the most recent version.

For more details, see [Overview on page 2](#) or [ZebraNet Utilities on page 117](#).



Note • Contact your System Administrator before installing this software. You must have Administrator rights on your network to install most of these utilities.

To install the ZebraNet Utilities, complete these steps:

The steps that follow reflect the steps and dialogs for a *typical* installation. If you plan to conduct a *custom* installation, the dialogs you encounter or see will differ from those in this step sequence.

- 1 Insert the CD-ROM into the drive.




Important • Is AutoPlay enabled on your computer?

- **Yes.** Your computer automatically launches the installation.
- **No.** You need to navigate to the Software>ZebraNet Util>setup.exe on the CD-ROM and manually launch the installation.

- 2 Click Next>.


This illustration shows the dialog box that lets you select the utilities that you want to install:

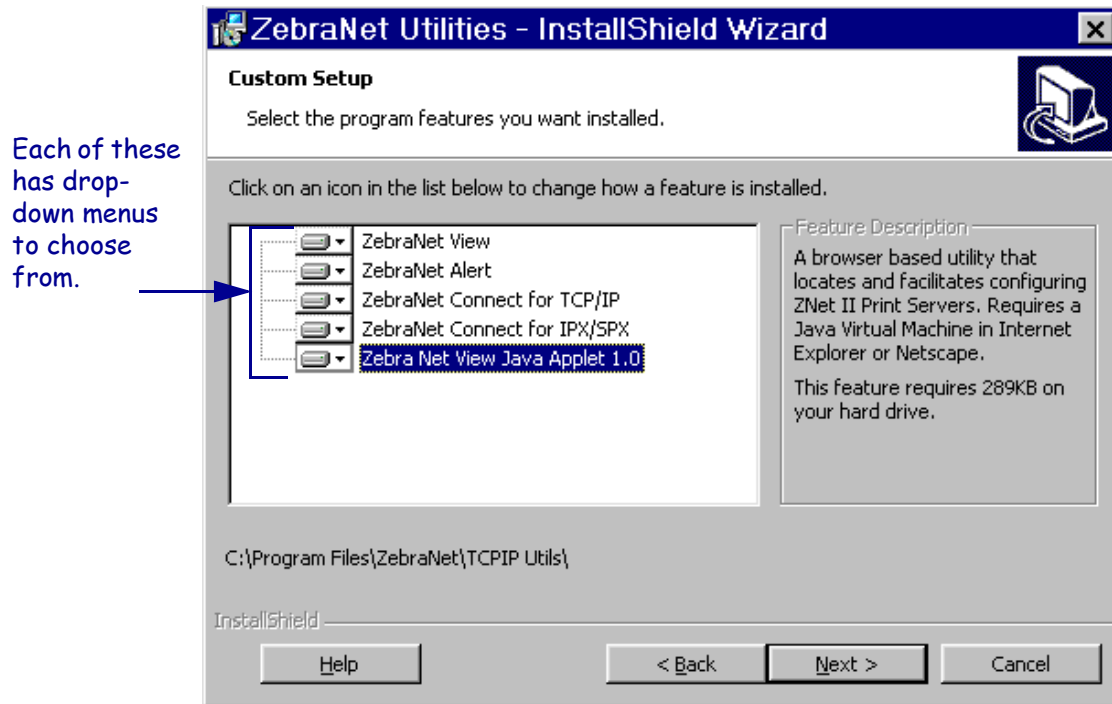

Important • If you installed ZebraNet View Java Applet, you must complete the installation steps for [ZebraNet View Java Applet on page 30](#).


- 3 In the *ZebraNet Utilities* dialog, select the features you want to install and click Next>.

This illustration gives you the chance to reset your installation settings:

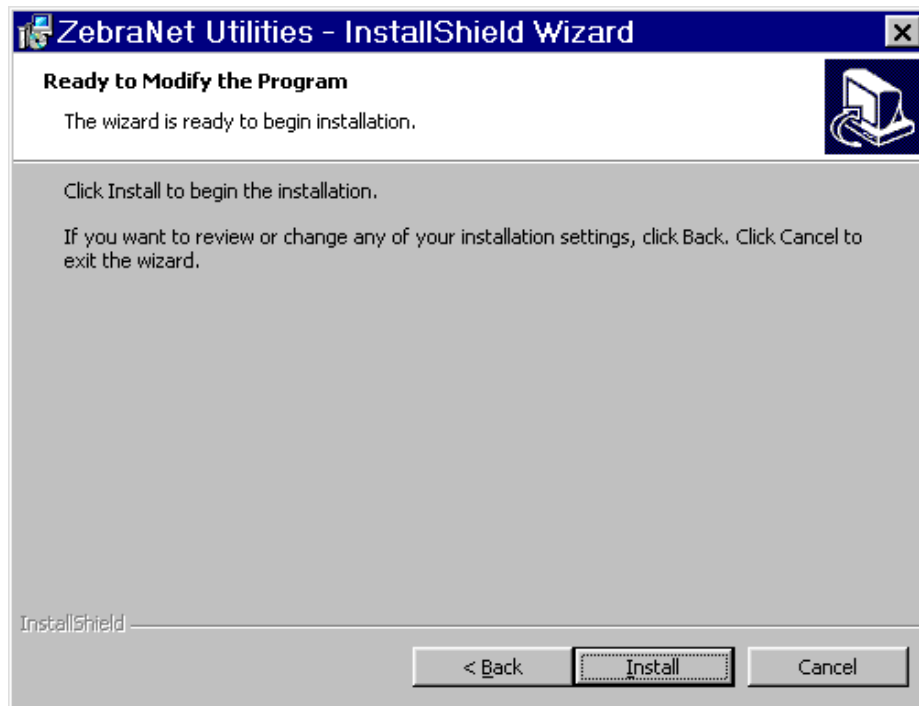

- 4 In the *ZebraNet Utilities* dialog, you have the option to review and make any changes to your installation settings. When you are satisfied with your installation settings, click Install.

When the installation is complete, this dialog opens:

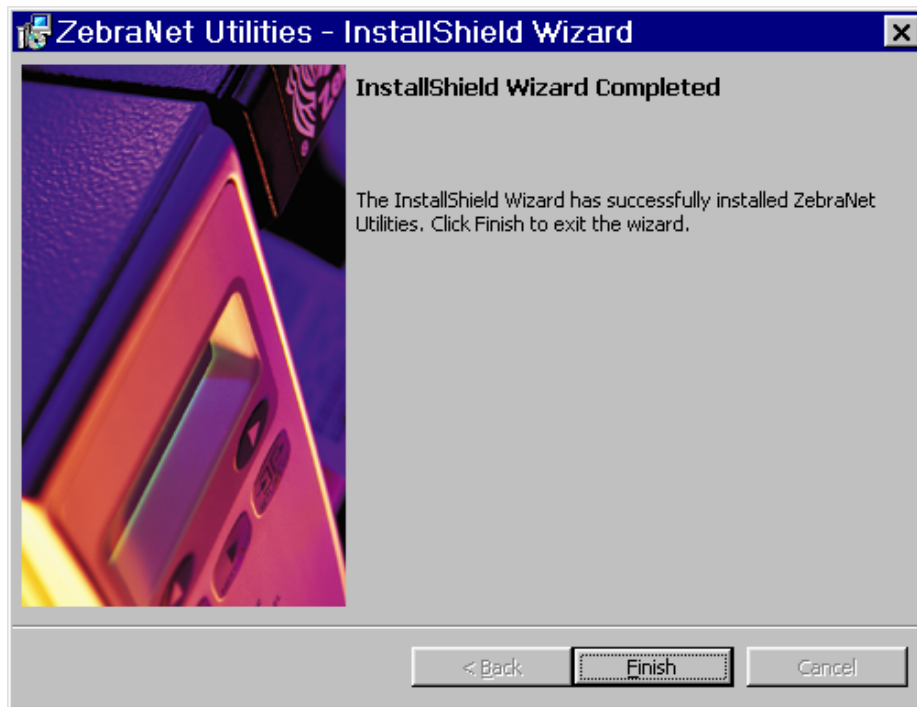

5 Click Finish.



Important • When the installation is complete, you need to restart your system for the changes to take place.

ZebraNet View Java Applet

If you selected ZebraNet View Java Applet when you were installing the ZebraNet Utilities, you need to complete a few installation steps to work with this utility.

To install ZebraNet View Java Applet, complete these steps:


- 1 From the task bar, select Programs>ZebraNet Utilities>ZebraNet View Java Applet 1.0.

This *Security Warning* dialog opens:




- 2 To begin the installation, click Yes.

The *Select Java Plugin Installation* dialog opens:

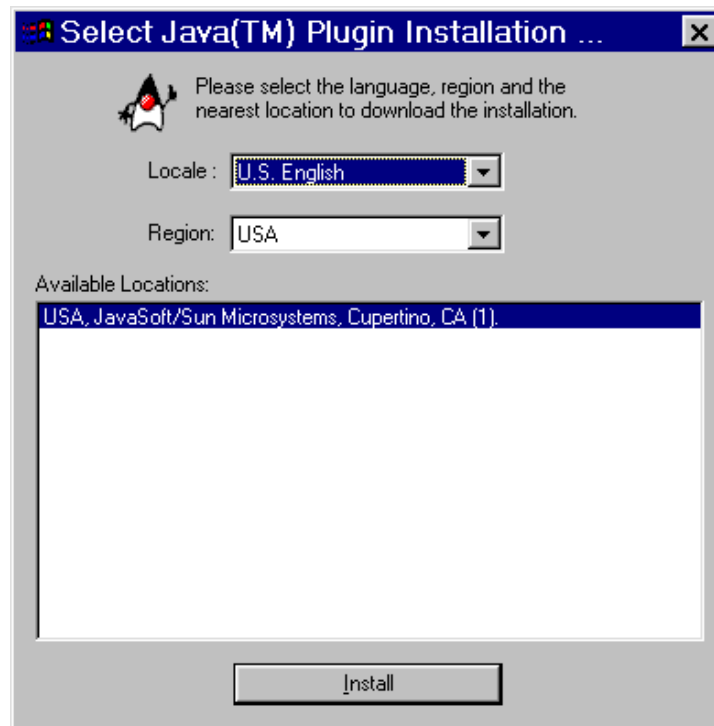


- 3 Make the selections that apply to your environment, and click **Install**.

The *Software License Agreement* opens.

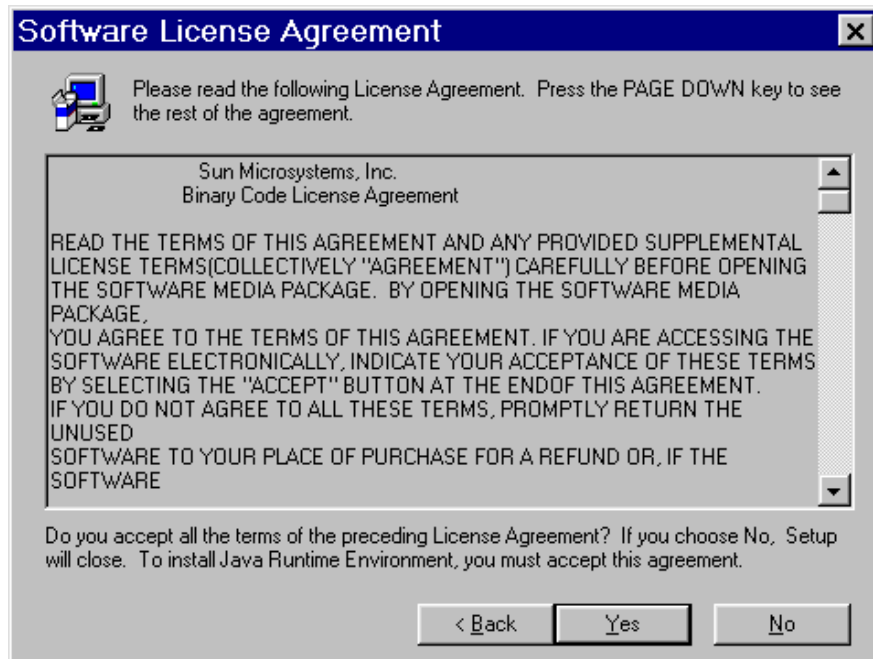

- 4 Read the License Agreement.
- 5 To continue with the installation, click Yes.
- 6 When the installation is complete, click OK.

The Java page opens:

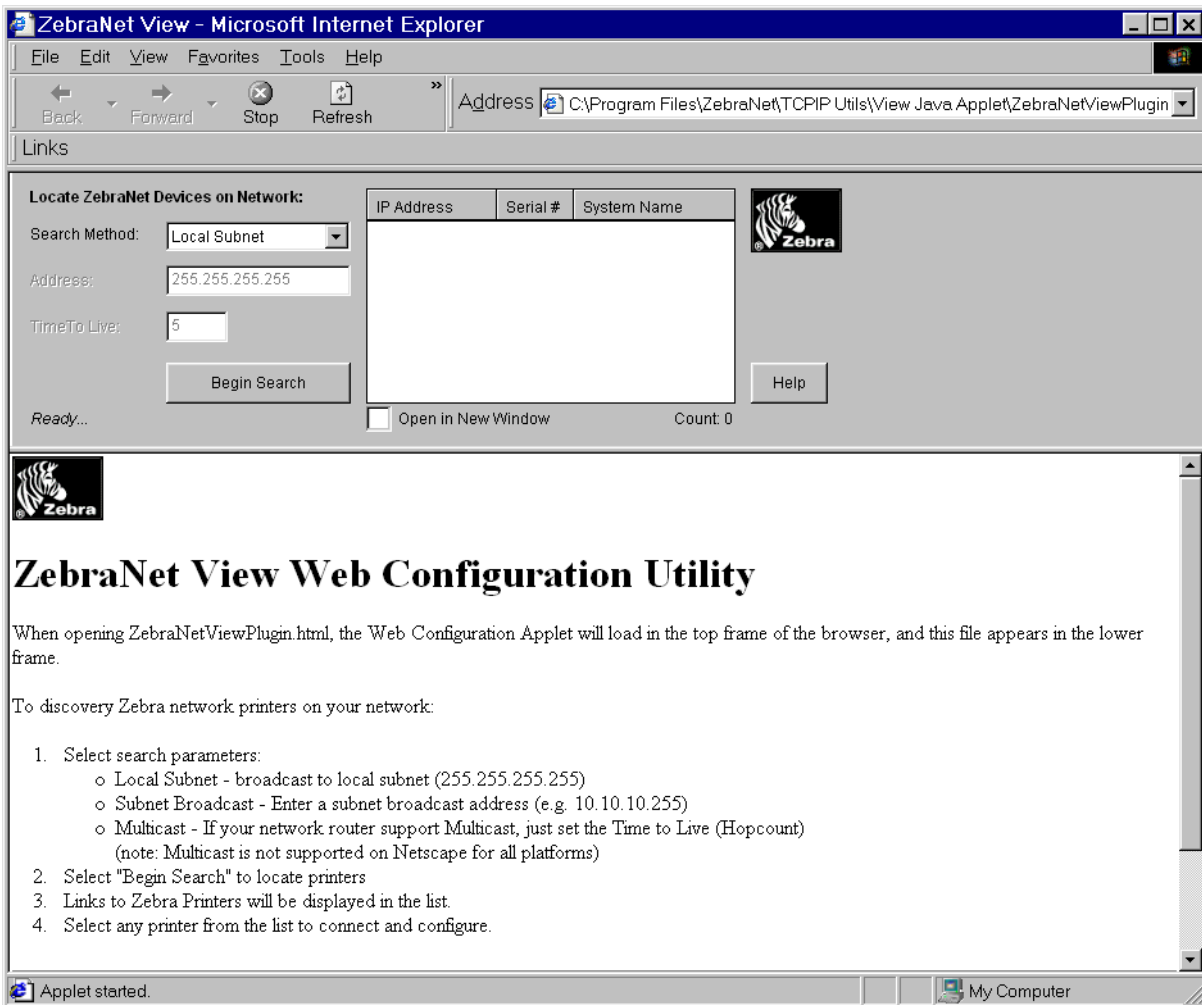

7 You have these options:

- To work with this utility, see [ZebraNet View Java Applet on page 130](#).
- To close the utility, click the **X**.



Installation

ZebraNet View Java Applet

CHAPTER 3

Getting Started

This chapter provides you with information and procedures for working with the most frequently used PSII features.

Contents

Before you begin	36
Assigning an IP Address	38
Setting Alerts	45
Checking PSII Configuration Settings	53
Setting up a ZebraNet Connect IP	58
Enabling Protocols	62
Defaulting the PSII	68

Before you begin

PSII offers many features, but how you access and work with them is dependent on your environment. Before you begin, you need to get information from the PSII configuration label.



Important • Make sure the printer is turned off (O).

To print a PSII configuration label, complete these steps:

- 1 Turn on the printer and let it complete its power-up cycle.
- 2 Let the PSII complete its POST cycle.



Note • Running the POST cycle requires you to access the PSII Test button on the PSII device. On the:

- Z4Mplus and Z6Mplus, the Test button on the PSII device is a little white button. For more details, see the illustration under the heading *XIII, XIII, 105SL, and PAX-Series on page 16*.
 - On any other printer, the Test button on the PSII device is a small hole. For more details, see the illustration under the heading *Z4Mplus/Z6Mplus on page 20*.
- 3 When the above steps are complete, press the Test button and hold it in for a few seconds before you release it.

A PSII configuration label prints. Your configuration label looks similar to this:

TCP/IP	
ENABLED	STATUS
10.3.4.102	ADDRESS
255.255.255.0	SUBNET MASK
10.3.4.1	DEFAULT GATEWAY
Enabled	TIMEOUT CHECKING
NETWARE	
ENABLED	STATUS
Ethernet 802.3	FRAME FORMAT
Unknown	MODE
GENERAL	
1928107	SERIAL NUMBER
0040681D6BAB	HARDWARE ADDRESS
6.30 (A021A)	FIRMWARE VERSION
ERROR	
None	GENERAL
Error reading from Telnet	TCP/IP
None	NETWARE
JET ADMIN	
ENABLED	STATUS
PORT CONFIGURATION	
Online	PORT NAME
ZTC 140XiIII-200dpi	PRINTER STATUS
None	CONNECTED TO
	ERROR
<div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 80%;"> ZebraNet™ PRINT SERVER CONFIGURATION </div>	
FIRMWARE IN THIS PRINTER IS COPYRIGHTED	

- 4 From the configuration label, you need to get these numbers:

For details on getting these numbers, see [page 15](#).

- ADDRESS (IP address)
- SUBNET MASK
- DEFAULT GATEWAY
- SERIAL NUMBER
- HARDWARE ADDRESS (MAC address)

- 5 On the configuration label that prints out for your PSII device, circle the above-mentioned settings. You can now proceed to [Assigning an IP Address on page 38](#).

Assigning an IP Address

Before you can begin working with PSII, you must get or assign an IP address for the PSII device.



Important • Throughout the step sequence in this chapter, there are some features that require the default User ID and/or default password. If you are prompted, these are the defaults:

- **User ID:** admin
- **Password:** 1234

With Dynamic Host Configuration Protocol (DHCP)

If your network uses DHCP, your PSII device is assigned a temporary IP address. This is important to know, because you have the option to make the temporary IP address the permanent IP address.



Note • Check with your Network Administrator to see whether your network uses DHCP.

Without DHCP

If your network does not use a dynamic IP addressing system (such as DHCP), you need to set a permanent IP address of the PSII device.

ZebraNet View

ZebraNet View is the Windows-based print server management and configuration utility that came with your PSII.



Important • The remaining sections are dependent on the successful installation of ZebraNet Utilities, which you should have completed on [page 26](#).


To assign an IP address using ZebraNet View, complete these steps:

- 1 From the task bar, select Start>Programs>ZebraNet Utilities>ZebraNet View.



Important • On the illustration that follows, take note of the H/W address column and Serial # column. Compare what you see in ZebraNet View with the configuration label you printed out.

The *ZebraNet View* dialog opens:

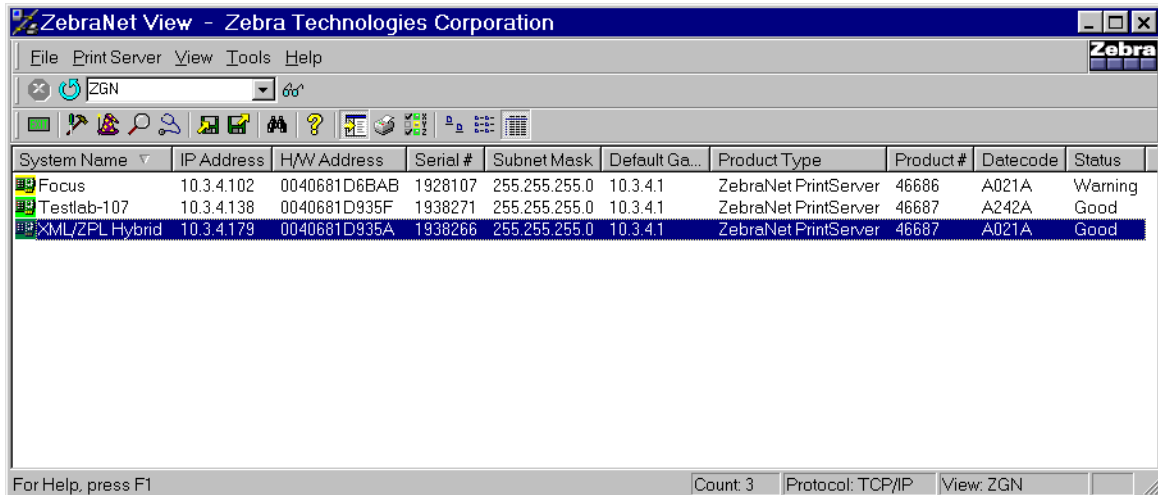

- 2 Compare the H/W Address or Serial Number on the PSII configuration label with the H/W Address column on the screen to find the PSII you are working with.
- 3 When you locate your PSII, select it.
- 4 From the menu bar, select PrintServer>Configuration.




Important • If the PSII does not have an IP address, it shows in the main screen with an IP of **0.0.0.0**. If, after 2 minutes, you do not assign an IP Address, the PSII defaults to IP Address **192.168.254.254** or **198.102.102.254** (this depends on your firmware version).

- 5 If your PSII does not have an IP address, complete these steps:
 - Find your PSII and right-click it.
 - In the small dialog that opens, enter an IP Address, click OK.
 - The *ZebraNet View* dialog opens.

To set the subnet, complete these steps:

- 6 From the ZebraNet View menu bar, select PrintServer>Configuration.
- 7 Click the *TCP/IP* tab.
- 8 From the *Print Server Configuration>TCP/IP* tab, in the *Subnet Mask* text-box, type in your subnet mask.
- 9 Confirm it is accurate, and click OK.

The *Print Server Configuration* dialog opens:

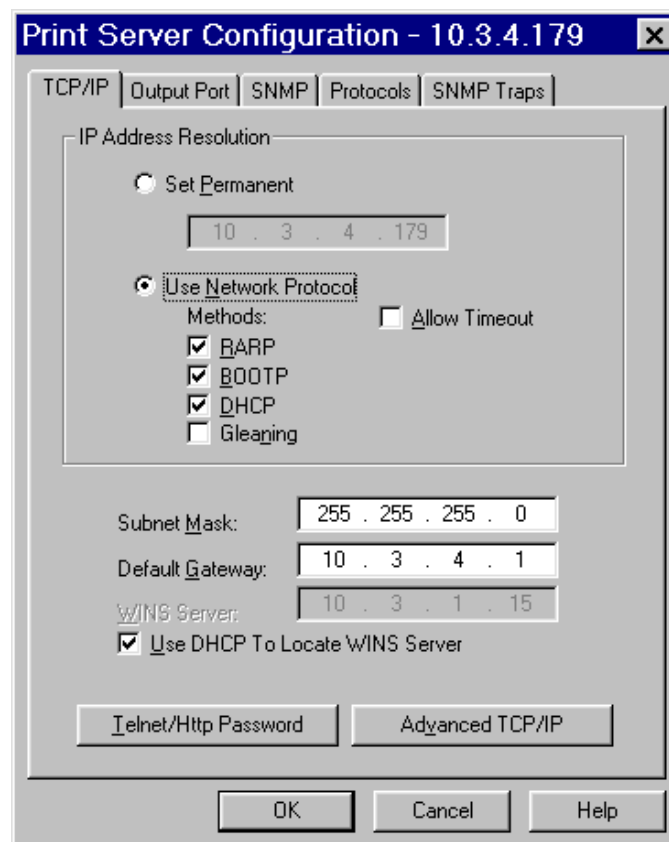

- 10 To set a permanent IP address, enable the **Set Permanent** radio button.
- 11 In the **Set Permanent** text-box, type a new IP address and click OK.

To set the default gateway, complete these steps:

These steps are Optional.

- 1 From the ZebraNet View menu bar, select PrintServer>Configuration.
- 2 Click the *TCP/IP* tab.
- 3 From the *Print Server Configuration>TCP/IP* tab, in the *Default GateWay* text-box, type in your default gateway.
- 4 Confirm it is accurate, and click OK.

In a non-Windows environment

These steps can be used with all printers. However, the liquid crystal display (LCD) instructions are for printers with an LCD.

To assign an IP address from the printer LCD, complete these steps:



Important • Your PSII must have firmware 6.3 and higher and your Zebra printer must have firmware x.10 or higher with an LCD.

- 1 Turn on the printer and allow 2 minutes for all systems to complete the self test. If you do not have a network cable in the port, the PSII prints the configuration label when it is ready.
- 2 On the printer front panel, press **SETUP/EXIT**.
- 3 On the printer front panel, press **PREVIOUS** twice until you reach the network settings menu item.
- 4 You can edit any of the following network settings in order to communicate with any PSII in your network environment.



Important • To change any of these settings, you need to use the default password: 1234.

- `ip resolution` (dynamic, permanent) The printer menu item **IP RESOLUTION** must be set to **PERMANENT** if attempting to assign the IP address from the front panel.
- `default gateway` (default setting of 000.000.000.000)

- `subnet mask` (default setting 255.0.0.0)
- `ip address` (if initial default setting is 0.0.0.0, after 2 minutes this defaults to 198.102.102.254 or 192.168.254.254 — depends on firmware version)
- `ip protocol` (gleaning only, rarp bootp, dhcp, dhcp and bootp, all)

Assigning an IP address via a Telnet session

If your environment is not Windows-based, this section is for you. However, this method can be used in a Windows environment, too.

The methods used for assigning an IP address with a Telnet session are **Static Route** and **Gleaning**.



Important • This applies to any TCP/IP capable workstation/ host networked with the Zebra printer. Both the workstation/host and the PSII must be on the same network segment.

Before you can Telnet to the PSII and configure it, you must first assign the PSII a temporary IP address.

Static Route: To use this method, complete these steps:

- 1 Turn on the printer and wait for 2 minutes to allow for the device self test.

During this time, the PSII performs an address broadcast. If no address is assigned to the unit (via DHCP or Bootp), it uses a default address. The default address used varies with the version of firmware the PSII is using. Print the PSII configuration label to confirm the address; for details see [page 36](#).

- 2 You can use the `route add` command to place the default IP address into the workstation's network routing table.



Example • In the next step, **** is the IP address on the PSII configuration label.

- 3 At the workstation/host command prompt (in Windows, go the DOS prompt), type:

```
route add **** "IP address of the workstation" 0
```



Note • The zero (0) placed at the end of the "route add" command is optional on some systems.

- 4 Telnet to the PSII by typing:

```
"Telnet xxx.xxx.xxx.xxx"
```

The password is 1234.

- 5 When finished, you can alter the appropriate settings. When complete, do a reset and allow the PSII self test to complete before proceeding with any communications activity.

Gleaning: To use this method, complete these steps:



Note • Gleaning works **only** on local subnets at routers. It does not pass Address Resolution Protocol (ARP) broadcasts.

A method by which the PSII uses the IP address of the first ping packet that is sent to its Hardware address.

- 1 Add an entry to the ARP table that assigns an IP address to an Ethernet (Hardware) address.

The syntax for this command is: `arp -s "temporary ipaddress of print server" "MAC Address (print server hardware address)"` `arp -s <temporary ip address> <MAC Address>`



Example • You would type: `arp -s 10.3.50.59 00-40-68-1D-B9-86`

- 2 Power cycle the printer.
- 3 As the printer reboots, begin a continuous ping to the address assigned previously.



Note • Most UNIX systems use a continuous ping.

To use a continuous ping from a Windows host, you must issue the command: `ping -t "ipaddress"`.

- 4 When the PSII begins to respond, stop the ping activity.

In Windows, **Ctrl + C** halts the pinging.

- 5 Telnet to the PSII and assign the appropriate IP address, subnet mask, and gateway if applicable.
- 6 Once this is complete, reset the PSII.

For details on resetting the PSII, see [Reset on page 96](#).



Setting Alerts

It is important to understand the relationship between the PSII and the printer when you are establishing alerts. Here are the relationships you need to be aware of:

- Non-ZebraLink-enabled printers — can send alerts on only a specific set of printer errors that are reported in the IEEE 1284 protocol.
- ZebraLink-enabled printers — ZebraLink allows for the printer to send alerts *not* in the IEEE 1284 protocol.


ZebraNet View

In this section are step-by-steps instructions on how to set up an alert using ZebraNet View. For information on setting up alerts using ZebraLink, see [ZebraLink on page 47](#).

To set alerts (traps) using ZebraNet View, complete these steps:


- 1 In the ZebraNet View dialog, from the menu bar select Print Server>Configuration.
- 2 Click the *SNMP Traps* tab.

The Printer Traps check boxes are the alerts you can set from ZebraNet View.

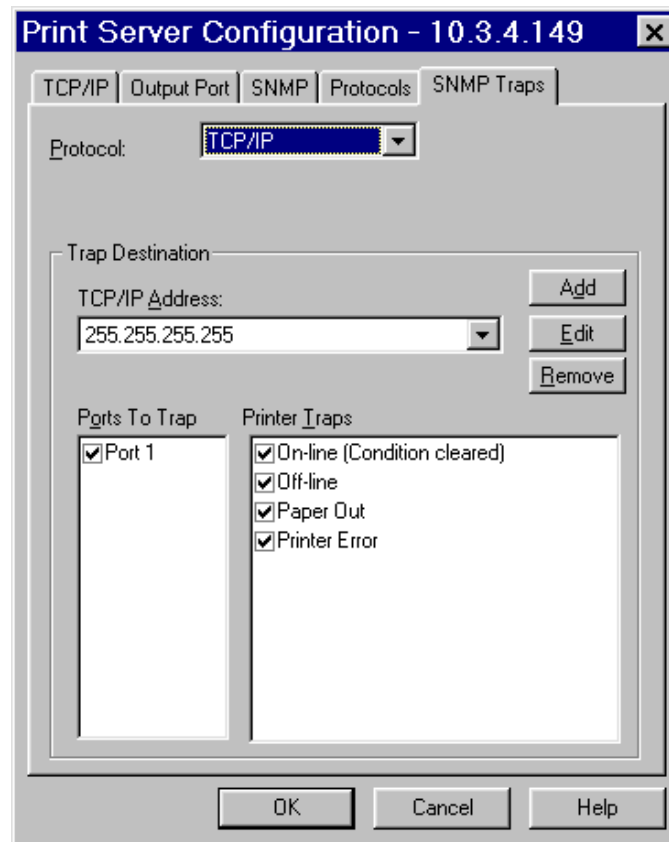

- 3** Enable the alerts (printer traps) you want to set here and click OK.
- 4** To monitor the alerts you established, from the task bar select Start>ZebraNet Utilities>ZebraNet Alert.

The *ZebraNet Alert* dialog opens:

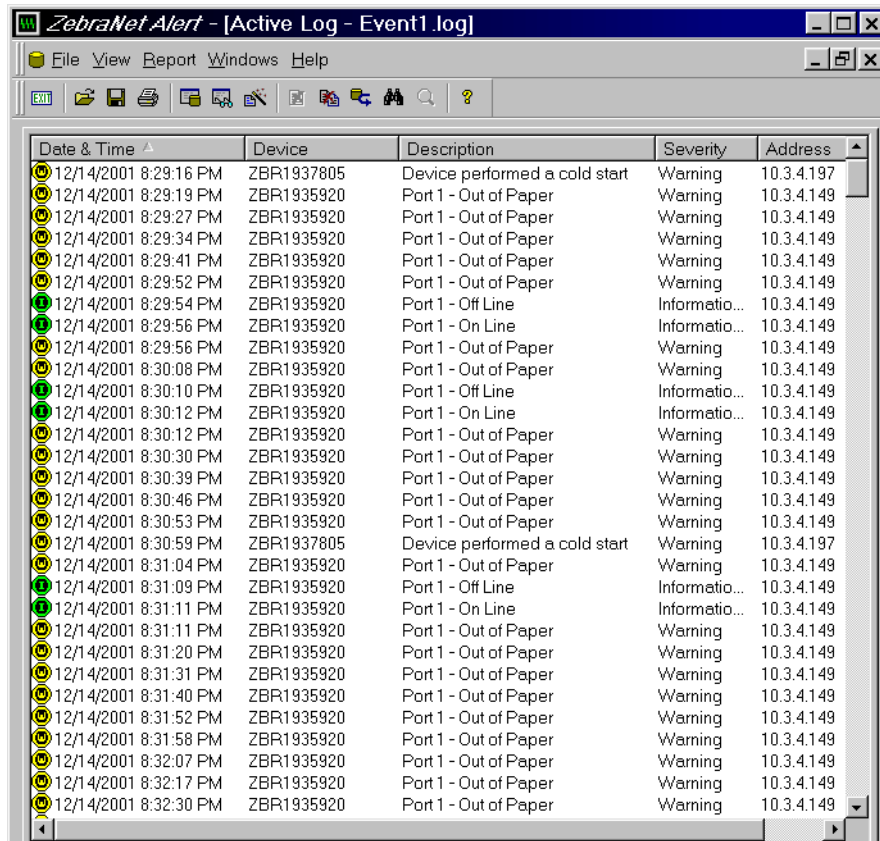

The screenshot shows the 'ZebraNet Alert - [Active Log - Event1.log]' window. It contains a table with the following columns: Date & Time, Device, Description, Severity, and Address. The log entries show various events such as 'Device performed a cold start', 'Port 1 - Out of Paper', and 'Port 1 - Off Line' with corresponding severity levels like 'Warning' and 'Information'.

Date & Time	Device	Description	Severity	Address
12/14/2001 8:29:16 PM	ZBR1937805	Device performed a cold start	Warning	10.3.4.197
12/14/2001 8:29:19 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:29:27 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:29:34 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:29:41 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:29:52 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:29:54 PM	ZBR1935920	Port 1 - Off Line	Information...	10.3.4.149
12/14/2001 8:29:56 PM	ZBR1935920	Port 1 - On Line	Information...	10.3.4.149
12/14/2001 8:29:56 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:30:08 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:30:10 PM	ZBR1935920	Port 1 - Off Line	Information...	10.3.4.149
12/14/2001 8:30:12 PM	ZBR1935920	Port 1 - On Line	Information...	10.3.4.149
12/14/2001 8:30:12 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:30:30 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:30:39 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:30:46 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:30:53 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:30:59 PM	ZBR1937805	Device performed a cold start	Warning	10.3.4.197
12/14/2001 8:31:04 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:31:09 PM	ZBR1935920	Port 1 - Off Line	Information...	10.3.4.149
12/14/2001 8:31:11 PM	ZBR1935920	Port 1 - On Line	Information...	10.3.4.149
12/14/2001 8:31:11 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:31:20 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:31:31 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:31:40 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:31:52 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:31:58 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:32:07 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:32:17 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149
12/14/2001 8:32:30 PM	ZBR1935920	Port 1 - Out of Paper	Warning	10.3.4.149

In this dialog you can view the log of errors and monitor the activity of your printer(s).

ZebraLink

In this section are step-by-step instructions on how to set up an alert using ZebraLink. For information on setting up alerts using ZebraNet View, see [ZebraNet View on page 53](#).




Important • If you do not have a ZebraLink-enabled printer, these steps will not work.

To view Alert Setup using ZebraLink, complete these steps:

- 1 Open a Web browser.
- 2 In the *Address* text-box, type your printer's IP address, and press Enter.
- 3 From the *Printer Home Page*, click [Alert Setup](#).

The *Alert Messaging System* dialog opens:

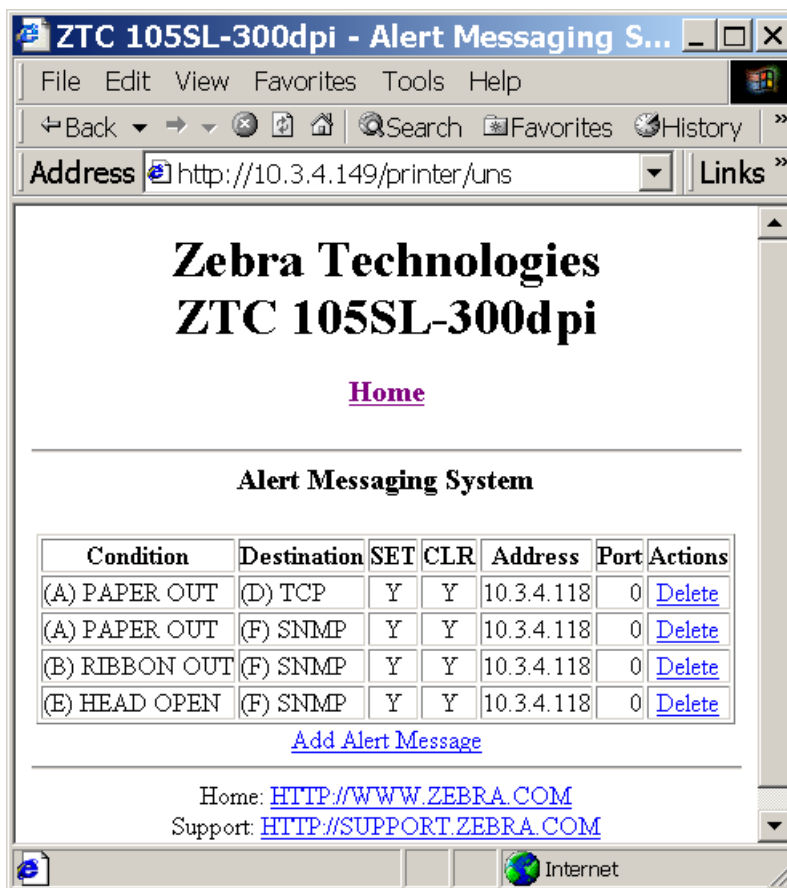

To add an alert, you need the default user ID and password.

- 4 To add an alert, click [Add Alert Message](#).
- 5 Select accordingly.
- 6 You can use ZebraNet Alert to monitor alerts set through a ZebraLink-enabled printer.

From this Web page you can add alert messages to notify you when a printer is out of paper, needs a ribbon, and so on.


Establishing Email Alert Messaging

ZebraNet Alert supports email notification of printer errors sent directly to any valid email address. You can have multiple email addresses set up for routing different error messages, or split notifications between email and other network management tools.

To begin receiving email notification of errors, complete these steps:

- 1 From the browser view, in the *Address* text-box type in the printer's IP address.

The *Printer Home Page* opens.

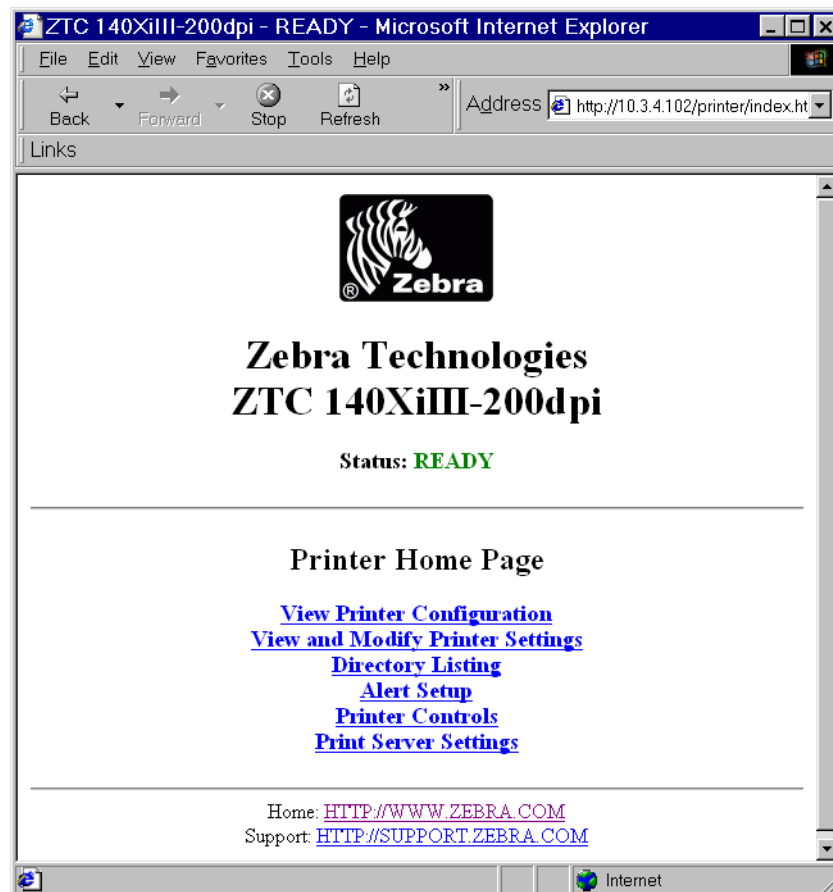

- 2 From the *Printer Home Page*, click [Alert Setup](#).

The Alert Setup page shows a list of message notifications and their respective destinations (if no notifications are listed).

- 3 To set up email notification, go to the *Alert Setup* page and click [Add Alert Message](#).

The *Add Alert Message* page opens:

Zebra Technologies
ZTC 140XiIII-200dpi

[Home](#)

Add Alert Message

Condition: PAPER OUT
Destination: SERIAL
SET: YES
CLR: YES
Address:
Port:

Add Alert Message

Password

[Alert Setup](#)

Home: [HTTP://WWW.ZEBRA.COM](http://www.zebra.com)
Support: [HTTP://SUPPORT.ZEBRA.COM](http://support.zebra.com)



Important • The printer accepts only the last configuration made.

- 4 Specify the condition to send over email, such as **HEAD ELEMENT BAD** or **PAPER OUT**.
- 5 Set destination to Email.
- 6 Enter a valid email address for the messages to be sent to.



Example • admin@yourcompany.net (The Port field can be ignored for email setup.)



Warning • A password is required. If you forget to enter the password, the alerts you just set are deleted.

7 Click Add Alert Message.

To receive email alert you must give PSII the IP address of your mail server that is running SMTP.

8 To save current settings, click [Save Printer Setting](#).

9 Enter the password and click Save Current Configuration.

10 You can continue to add more settings or, if finished:

- From the Printer Home Page, select PrintServer Settings>Network Communications Setup.
- Click [SMTP Email Alerts](#).



Note • The *SMTP Server* address might be referred to as *Mail Server* address.


- Specify your SMTP server address.

When these steps are done, you can begin receiving email notification messages.

To monitor alerts, complete these steps:

1 From the task bar, select Start>Programs>ZebraNet Utilities>ZebraNet Alert.

The *Active Log* dialog opens, displaying a list of all the logged alerts:

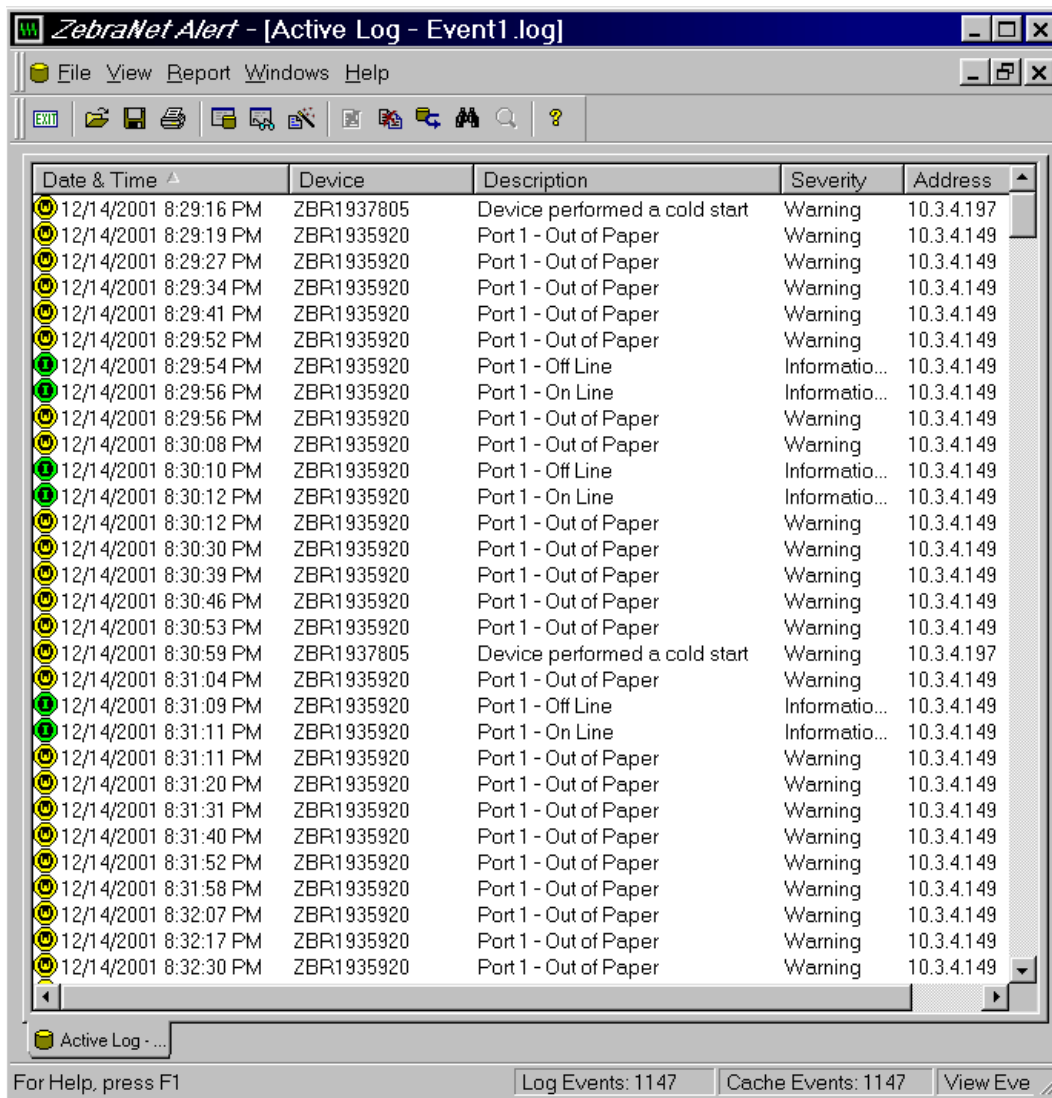

- 2 From this dialog, you can track the printer(s) activity and status.
- 3 From the menu bar, you can explore all the other features, such as Reports.

Checking PSII Configuration Settings


This section provides steps on how to check PSII's configuration settings using ZebraNet View and a browser.

ZebraNet View

To check configuration settings, complete these steps:


- 1 From the task bar, select Start>Programs>ZebraNet Utilities>ZebraNet View.

The *ZebraNet View* dialog opens:

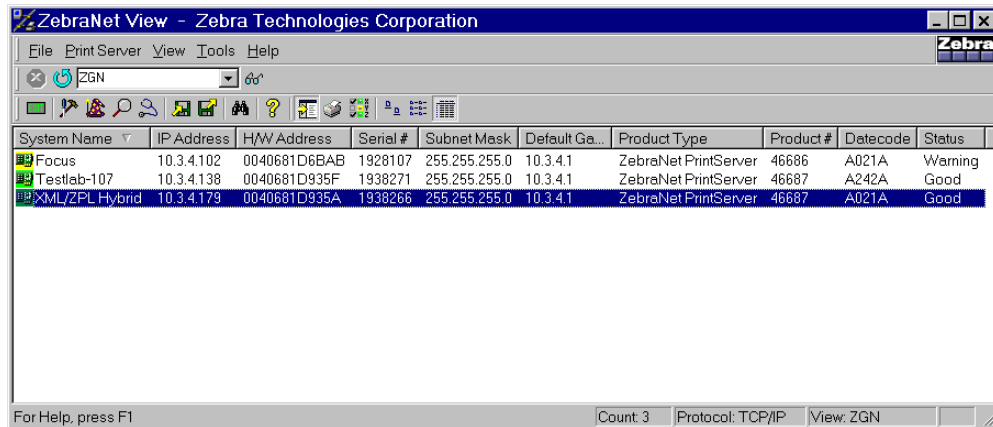

- 2 From the menu bar, select Print Server>Configuration.

The *Print Server Configuration* dialog opens:

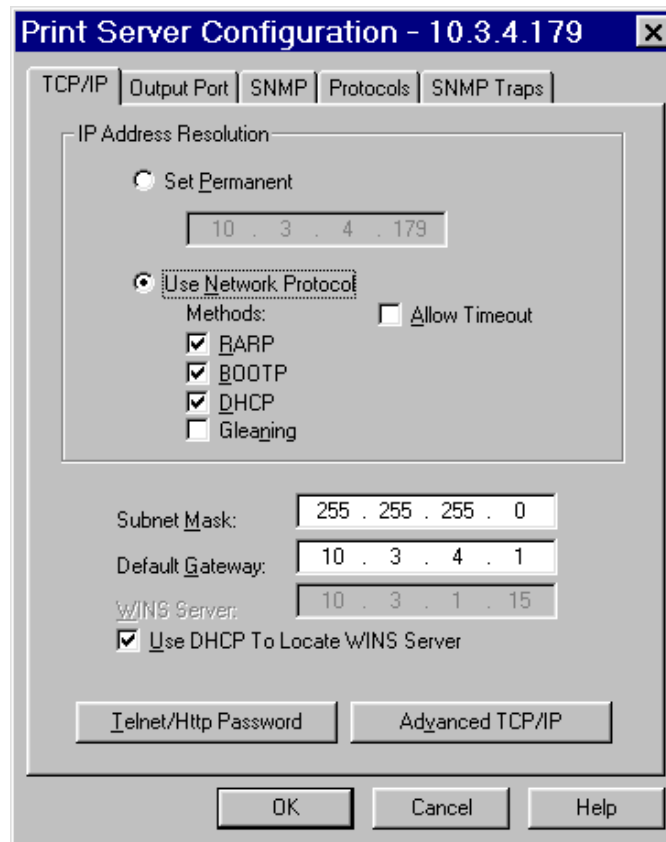

This dialog offers multiple tabs to choose from. Each tab contains various configuration settings that you can change.

For details on the configurations, see [page 118](#).

Browser

This section provides steps on how to check PSII's configuration settings using its Web pages.


To access the PSII settings, complete these steps:

- 1 Open a Web browser.
- 2 In the *Address* text-box, type your printer's IP address, then press Enter.

Your browser page looks similar to this:



Note • Your printer firmware determines how this page looks. This page is from a printer with firmware x.10 and above.

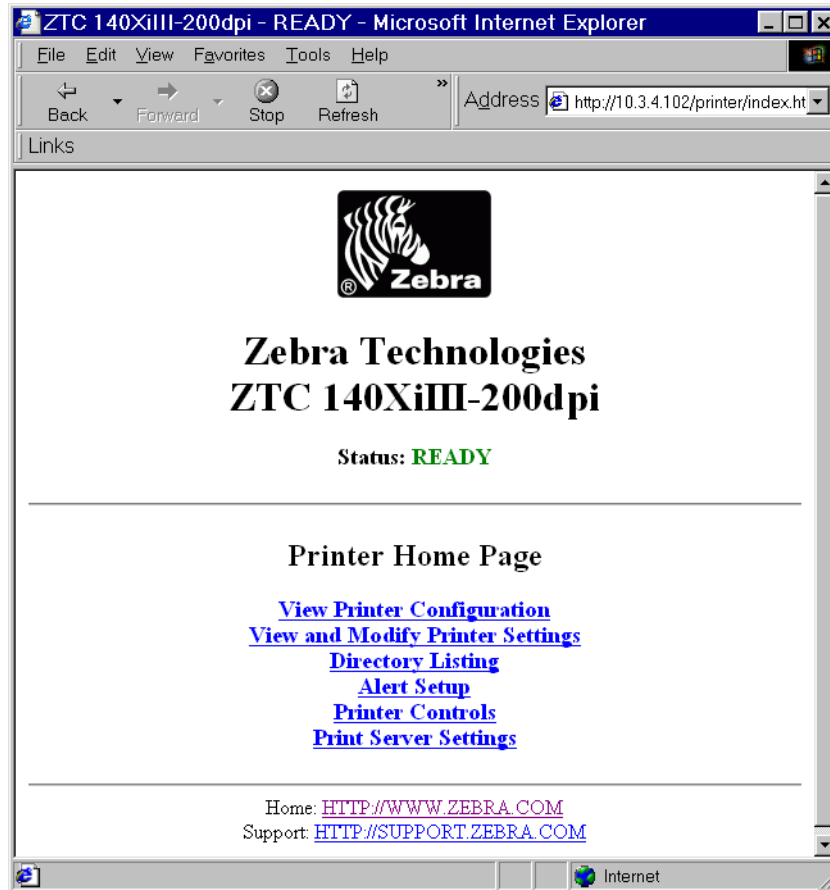

- 3 From the *Printer Home Page*, click [Print Server Settings](#).

The default User ID and password are required.



Important • The illustration of the [Printer Server Settings](#) page is based on a ZPL printer. If you have an EPL printer, the menu options on the Print Server page are slightly different.


Getting Started

Checking PSII Configuration Settings

The *Print Server Configuration Page* opens:




Note • Your printer firmware determines how this page looks. This page is from a printer with firmware x.10 and below.

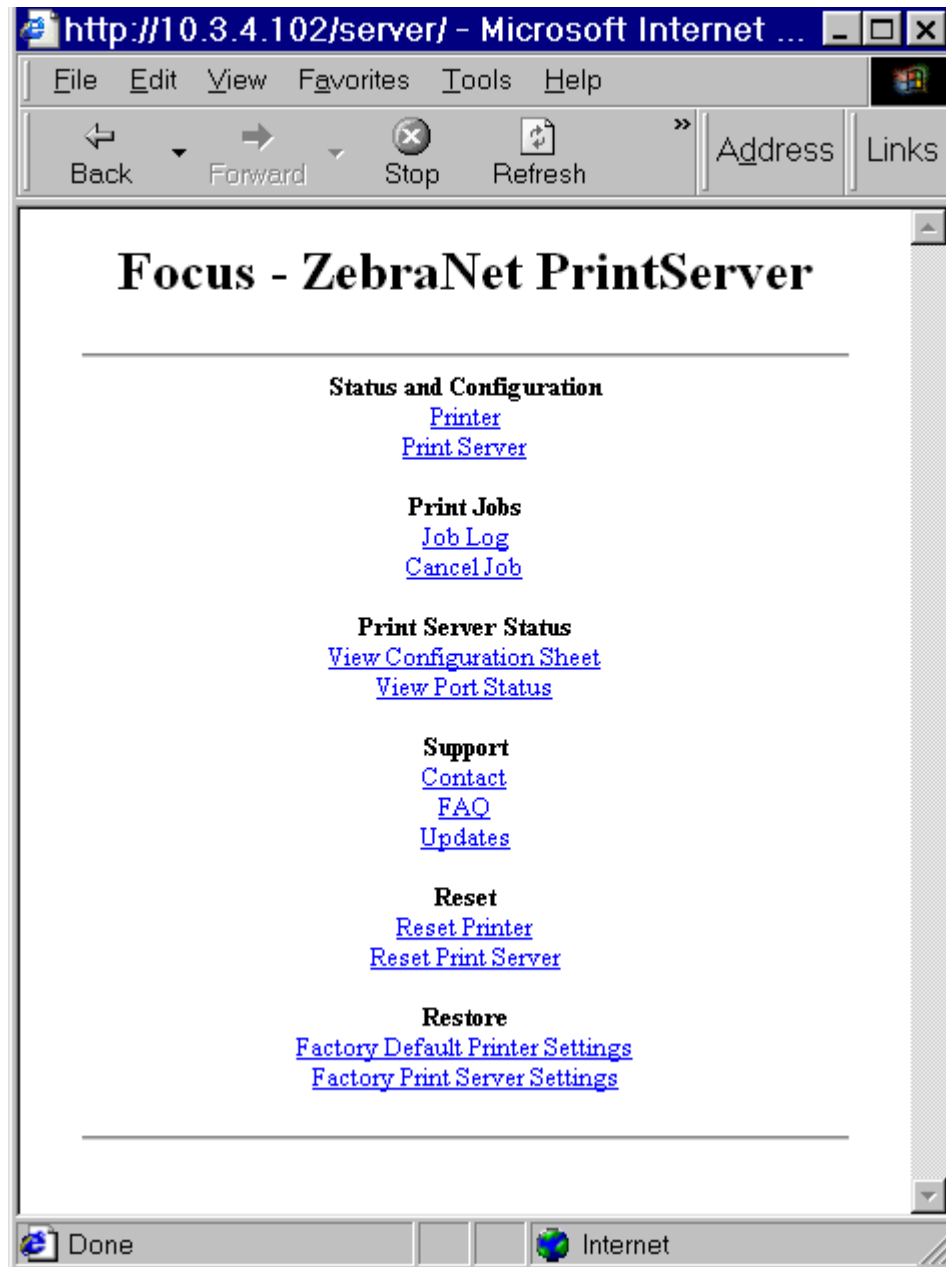

To access the PSII settings, complete these steps:

- 1 From the *Print Server* page, click [Print Server](#).

The *Print Server Configuration* page opens:

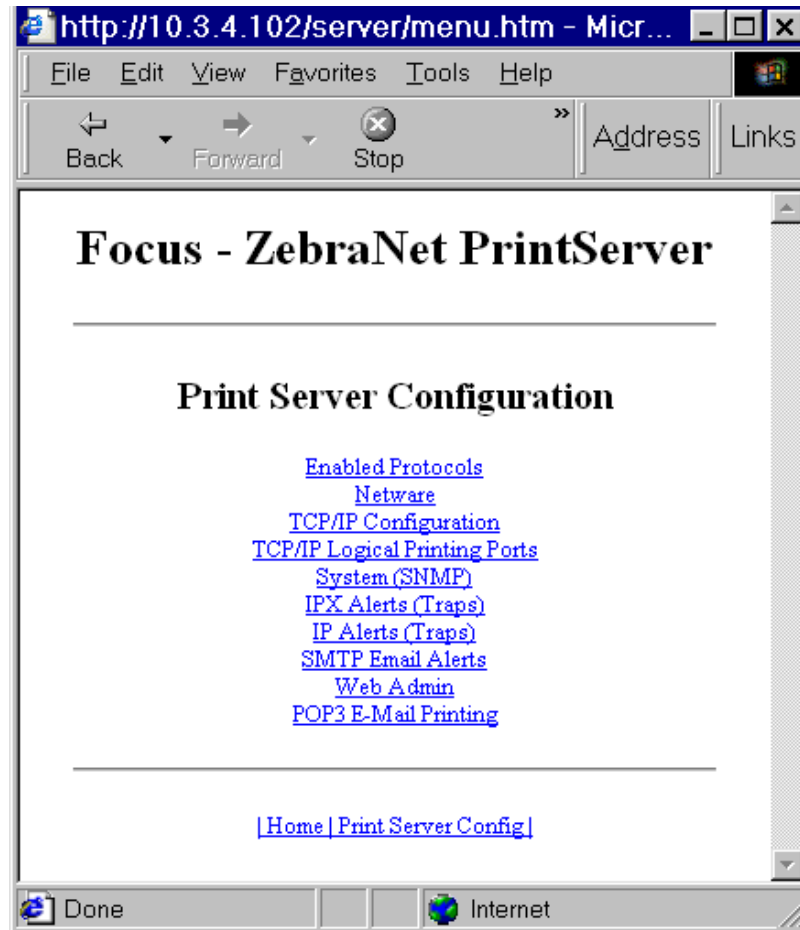

- 2 For details on the configuration choices, see *To check configuration settings, complete these steps: on page 53*.

Setting up a ZebraNet Connect IP

ZebraNet Connect IP allows you to send jobs to PrintServers that use Dynamic IP addresses (DHCP). It also notifies you of printer errors, such as ***paper out*** or ***head open***. When print jobs are printed through ZebraNet Connect IP, they are sent directly to PSII and are not routed through a network server, resulting in a reduction of network traffic.



Note • The DHCP feature of ZebraNet Connect IP can rediscover a PSII on the local subnet, even when its IP address might be changing (e.g., when using DHCP for IP address resolution). The PSII is relocated by its port name as configured through ZebraNet View (the default name is Serial Number-Port Number). This feature is enabled on the local subnet only. A non-local PSII device is not rediscovered if the IP address changes.

If you have printing problems while using the ZebraNet Connect IP printing port, you may check the status of the port or change its settings through the printer Properties dialog.

- For Windows 95/98, select Port Settings under the Details tab.
- For Windows NT 4.0 or Windows 2000, select Configure Port under the Ports tab.

Windows NT 4.0/Windows 2000

If you are using the Windows NT 4.0 or Windows 2000 operating system, use the following procedure to set up a printer port for the PSII.

- 1 From the task bar, select **Start>Settings>Printers**.
- 2 Select the Windows printer to use when printing with the PSII.
- 3 From the menu bar, select **File>Properties**.
- 4 To add a ZebraNet Connect IP port, in the Ports tab select **Add Port**.
- 5 From the list of Available Printer Ports, select *ZebraNet Connect Monitor* as the type of port to add, and click **New Port**.



Note • If ZebraNet Connect IP monitor is not listed, verify that the ZebraNet Connect IP software has been properly installed. To do this, you need to reinstall the software and choose **Modify**.

You enter into the Add ZebraNet Connect Port screen, where there is a list of all PSII devices available on the local subnet.

- The TCP/IP monitor searches only the local subnet.
 - The IPX/SPX monitor retrieves all devices found in the NetWare bindery.
- 6** If the port you want to add is listed in the Ports Available on Local Subnet window, select the port name. If the port you want to use is not listed, you can:
- Select **Cancel** and repeat step 5 to rediscover the print servers.
 - In ZebraNet Connect for IPX/SPX, click **Search** and enter the PrintServer's Network Number and Hardware Address.
 - In ZebraNet Connect, click the **Locate Non-local Device** button and enter the static TCP/IP Address used for the PSII.



Note • The ZebraNet Connect for TCP/IP DHCP discovery feature relocates a PSII device on the local subnet by its port name, even if the IP address changes. This feature is enabled on the local subnet only. A non-local PSII device is not rediscovered if the IP address changes.

- 7** Click **Add**.
- 8** To close the *Printer Ports* dialog, click **Cancel**.
- 9** To save the configuration, click **OK**.

Now you can use ZebraNet Connect. Whenever you print to the Windows printer configured with ZebraNet Connect, your print job will go directly to the ZebraNet PSII port.

Windows 95/98/Me

To set up a PSII port using Windows 95/Windows 98/Me, complete these steps:

- 1** From the task bar, select **Start>Settings>Printers**.
- 2** Select the Windows printer that you want to print with ZebraNet Connect IP.



Note • Under Windows 95, you have to set up the printer for a local port first, then open **Properties** from the **File** menu and continue with the configurations.

- 3** From the file menu, select **File>Properties**.

- 4 To add a ZebraNet Connect IP port, in the *Details* tab select **Add Port**.
- 5 From the *Add Port* dialog, select **Other**, then select the ZebraNet Connect Monitor as the type of port to add.
- 6 Click **OK**.



Note • If ZebraNet Connect IP is not listed, verify that the software has been properly installed.

The Add ZebraNet Connect Port screen opens. There is a list of all PSII devices discovered on the network.

- The TCP/IP monitor searches only the local subnet.
 - The IPX/SPX monitor retrieves all devices found in the NetWare bindery.
- 7 If the port you want to add is listed in the Ports Available on Local Subnet window, select the port name. If the port you want to use is not listed, you can:
 - Select **Cancel** and repeat step 5 to rediscover the PSII devices.
 - In ZebraNet Connect IP for IPX/SPX, click **Search** and enter the PSII's network number and hardware address.
 - In ZebraNet Connect IP, click the **Locate Non-local Device** button and enter the static TCP/IP address used for the PSII.
 - 8 Click **Add**.
 - 9 To save the configuration, click **OK**.

Now you can use ZebraNet Connect IP. Whenever you print to the Windows printer configured with ZebraNet Connect IP, your print job will go directly to the PSII port.

IPX (NetWare)

ZebraNet Connect for IPX/SPX is a utility that allows simple, direct, IPX/SPX printing from your computer to a printer attached to a ZebraNet PSII. Print jobs printed through the ZebraNet Connect utility are sent directly to the PSII and do not require a NetWare server, resulting in a reduction of network traffic.

If you have printing problems while using the PSII Connect printing port, you can check the status of the port or change its settings under the printer Properties window.

- For Windows 95/98, select **Port Settings** under the **Details** tab.
- For Windows NT 4.0 or Windows 2000, select **Configure Port** under the **Ports** tab.



Notify on Printer Error — This feature checks the printer status prior to printing the job. If a printer error is detected (e.g., printer off-line), the error description is given.

Notify When Printed — This feature provides an alert when your job is active on the printer. This is useful if the printer is unusually busy.

Description — An optional field in which you can list any useful information about the printer port, such as location.

Enabling Protocols

You can enable protocols with WebView or ZebraNet View. This section provides you with directions for accessing and enabling protocols using both WebView and ZebraNet View.


WebView

This section contains directions for accessing protocols using WebView. The browser illustrations were captured from a ZebraLink-enabled printer.

To enable protocols using WebView, complete these steps:


- 1 Open a Web browser.
- 2 In the *Address* text-box, type your printer's IP address, then press Enter.

Your browser page looks similar to this:

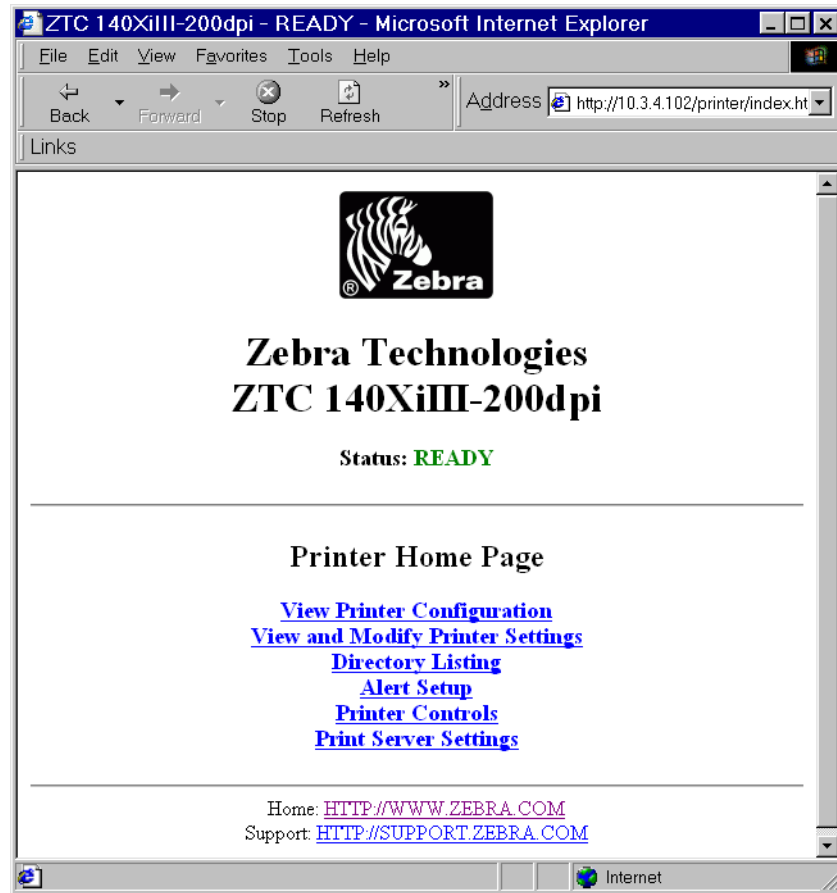


- 3 From the *Printer Home Page*, click [Print Server Settings](#).
The default User ID and password are required.
- 4 From the *Print Server* page, click [Print Server](#).

The *Print Server Configuration* page opens:

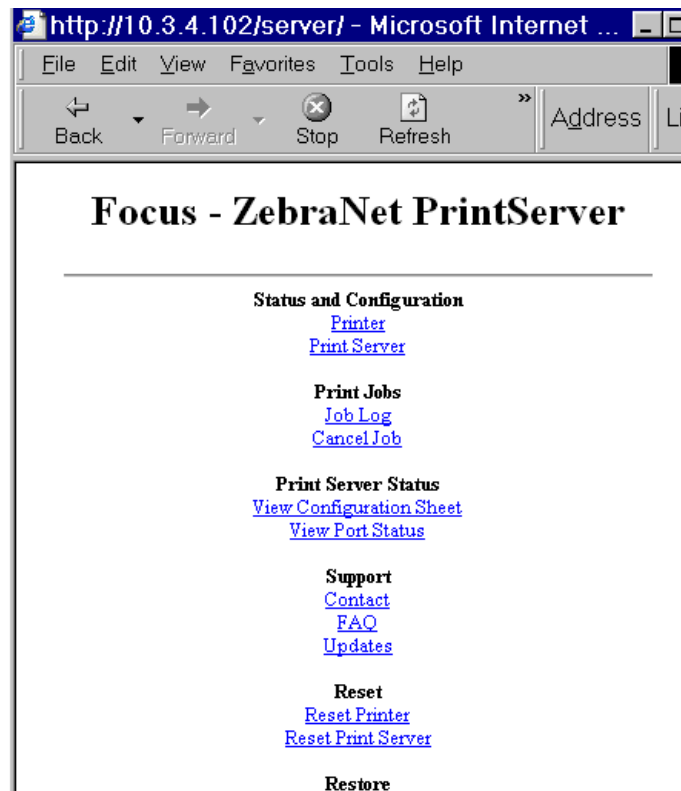

- 5 From the *Print Server Configuration* page, click [Enabled Protocols](#).

The *Protocol Configuration* page opens:

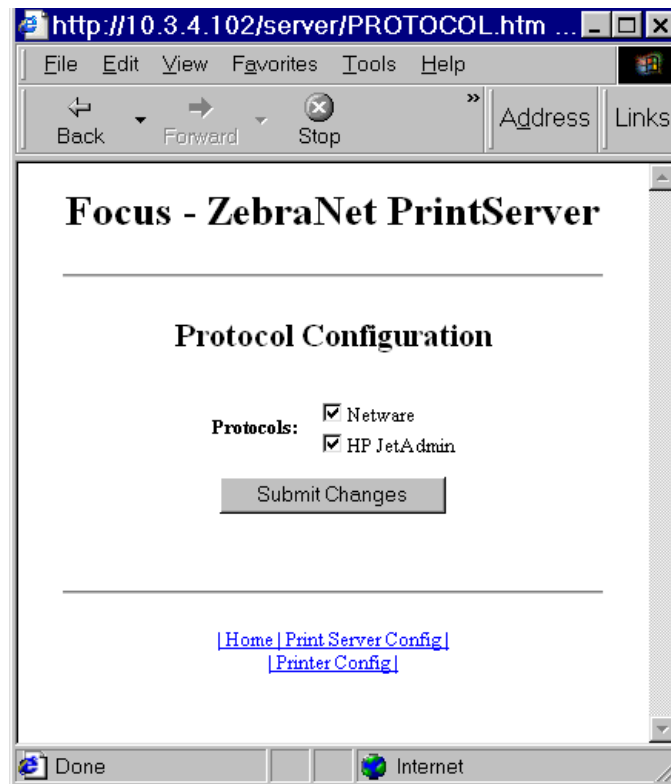

- 6 Select the protocols you want to enable, then click **Submit Changes**.

You get a confirmation to reset the unit for changes to take place.


ZebraNet View

This section contains directions for accessing protocols using ZebraNet View.

To enable protocols using WebView, complete these steps:


- 1 From the task bar, select **Start>Programs>ZebraNet Utilities>ZebraNet View**.

The *ZebraNet View* dialog opens:

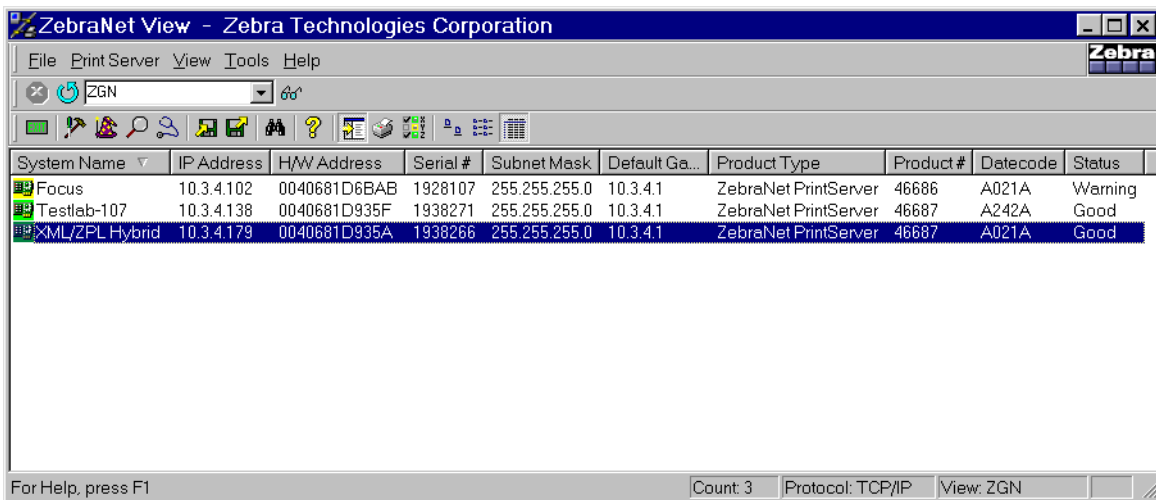

- 2 From the menu bar, select Print Server>Configuration.
- 3 Click the *Protocols* tab.

The *Protocols* tab opens:

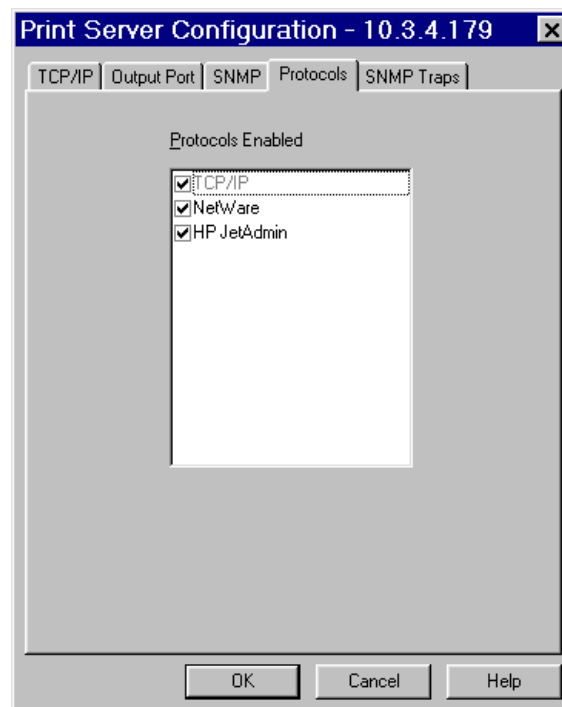



- 4** Select the protocols you want to enable, then click **OK**.
A confirmation message opens.
- 5** To accept changes, click **OK**.

Defaulting the PSII


This section provides you with instructions for defaulting the PSII to factory settings using WebView, ZebraNet View, and the Test button.

WebView

To default the PSII to factory settings using WebView, complete these steps:

- 1 From the *ZebraNet PrintServer* view, click [Factory Print Server Settings](#).

The *Restore to Factory Defaults* page opens:

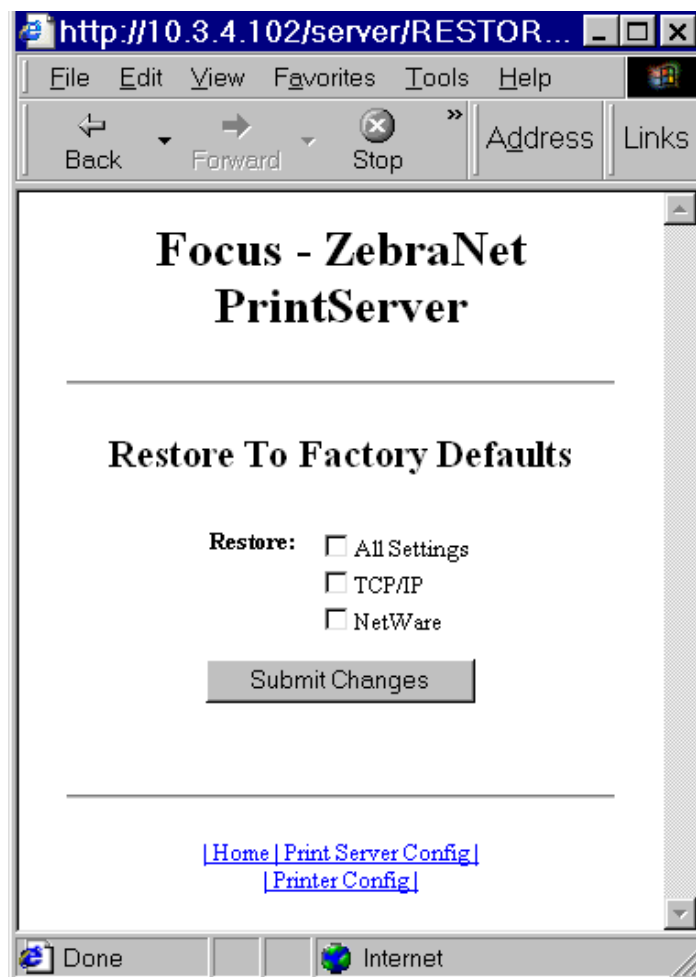

- 2 Enable the check box of the settings you want to reset, and click **Submit Changes**.




Important • With the reset command on its way to the PSII, the HTTP connection is unavailable while the PSII re-initializes. You need to wait a few seconds before trying to reestablish a connection.

ZebraNet View

To default PSII to factory settings using ZebraNet View, complete these steps:


- 1 From the task bar, select **Start>Programs>ZebraNet Utilities>ZebraNet View**.

The *ZebraNet View* dialog opens:

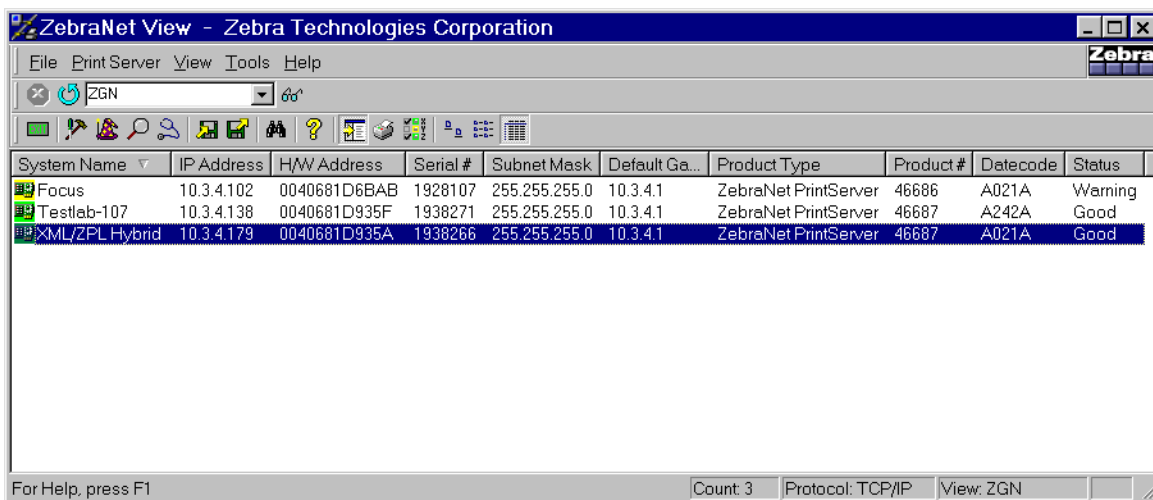

- 2 From the menu bar, select **Print Server>Reset**.

The *Reset Print Server* dialog opens:

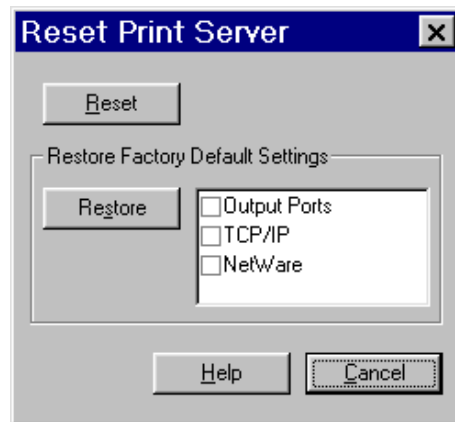

- 3 Select the settings you want to reset, then click **Restore**.

Test Button

To default the PSII to factory settings using the Test button, complete these steps:

- 1 The printer is turned off **(O)**.
The **Test** button is a small hole on the PSII device. To press the **Test** button, you need to insert something small into the hole, like a paperclip.
- 2 With the printer turned off, press and hold the **Test** button on the PSII device and turn on the printer.
- 3 The status indicator tells you when PSII has been reset to factory defaults, as follows:
 - If an active network cable is connected to the PSII, the status indicator turns solid **green**. When this happens, you can release the **Test** button.
 - If there is **not** an active network cable connected to the PSII, the status indicator flashes **green**. When this happens, you can release the **Test** button.
 - For more details on status indicators, see [Status Indicator on page 134](#).

CHAPTER 4

NetWare Print Configuration

This chapter provides you with instructions for configuring Novell's NetWare for printing to PSII.

Contents

Printing in PServer Mode72

Printing in PServer Mode

You *must* have Zebra's snap-in for Novell installed to complete these steps.

To configure in Novell's NetWare for printing to the PSII, complete these steps:



Important • Some important items to keep in mind before you proceed with these steps:

- You must have PSII installed before you proceed with these steps.
- Snap-in for Novell only works with Windows 9X operating systems.

- 1 From the task bar, select Start>Programs>ZebraNet Utilities>ZebraNet View.
- 2 Create a ZebraNet object by completing the following steps:
 - From Novell's NetWare Administrator, select the container in which you want the object created.



Example • To create an object that is subordinate to sales, choose SALES.

- From the menu bar, select Object>Create.
If the Create option is gray, you do not have sufficient rights, or you selected a leaf object.
- Find *Zebra Print Server*, select it, and click OK.
If the class of the object you want to create is not listed, you cannot create it in the container you selected.
- Define filter and sort devices for displaying a list of PSII devices to choose from, and click OK.
- Type in a name for the new PSII object, and click **Create**.
Wait for the print server to reset.
- (*optional*) To rename one of the PSII devices, select the one you want to rename, and click **Create**.

- 3 In the *Directory Tree*, find your object, and double-click.
- 4 Select Assignments>Assign>New.
- 5 Next to the *Context* text-box, click the *Directory Tree* icon, then double-click the browse arrow.



- 6 Find the *Contexts* container you want, and double-click.
It auto-fills into the *Context* text-box.
- 7 Enter the printer name you want, and click **Create**.
- 8 Next to the *Print Queues* section, click **New**.
- 9 Next to the *Context* text-box, click the *Directory Tree*, and double-click the Browse arrow.
- 10 Select the Context you want.
It auto-fills the text-box.
- 11 In the *Print Queue Name* text-box, type in the name you want.
- 12 Next to the *Print Queue Volume* text-box, click the *Directory Tree* icon.
- 13 Double-click the *Volume* you want, and click **Create**.
Your *Print Queue Name* is listed with the name of your *Context* as the extension.
- 14 Click **OK**, and then click **OK** again.
Wait for the print server to reset.
- 15 To refresh your Directory Tree, double-click on your context twice.
You now see the Object, Printer Name, and Print Queue that you created.

To attach a generic text driver to print to the PSII configured in NetWare, complete these steps:

- 1 On Add Printer double-click, and click **Next**.
- 2 Select Network Printer, and click **Next**.
- 3 Click **Browse** and click on the context.
You can see the queue and printer that you created.
- 4 Select the queue, and click **OK**.
The Network path (queue name) auto-fills.
- 5 Click **Next**.
- 6 Select Generic for Manufacturer of printer, and click **Next**.
- 7 Select *Keep Existing Driver*, and click **Next**.
- 8 Enter the printer name you want and click **Next**.
- 9 Select *No* for printing a Test Page, and click **Finish**.

- 10** From the *Printers* dialog, double-click on your new printer and set it as the default printer.
- 11** Open a text editor, create ZPL (Zebra Programming Language) file, and print.

CHAPTER 5

Printing Configurations

This chapter provides information and instructions on configuring your printer.

Content

BSD (Berkeley Software Distribution)-Style Print Queue	76
System V Queue Installation.....	78

BSD (Berkeley Software Distribution)-Style Print Queue

BSD is a version of the UNIX OS that distributes software that includes TCP/IP.

Configuring the Print Queue

For remote BSD-style LPD printing, add the PSII as a remote printer in the `/etc/printcap` database to each host printing to the PSII. You can add printcap options as needed. If you are unfamiliar with these options, consult the printer documentation.



Important • You must be logged in as root.

The entry looks similar to this:

```
local_print_queue_name|[printer_model_and_manufacturer]
:\
:lp=:mx#0:rm=ZebraNet_name:\
:rp=remote_print_queue_name:\
:sd=path_to_spool_directory:lf=just_log_file_name
```

`local_print_queue_name` — This defines the name of the printcap entry. It is used by the LPR/LPD utilities to specify which printcap entry is being referenced. Additional printcap entries can be added as needed for different queue types. Each entry must have a unique `local_print_queue_name` and a different spool directory to work properly. When you are ready to print, use the `local_print_queue_name` that matches the data type of the file to be printed.

`ZebraNet_name` — This is the name (alias) of the ZebraNet PSII. This must be the same name as entered in the `/etc/hosts` file or your NIS or DNS system. An IP address may also be used here.

`remote_print_queue_name` — This entry determines the ZebraNet port where the print job will be printed and optionally specifies ASCII printing that must end for LF1.

`path_to_spool_directory` — This is the path to a directory where the print jobs will be spooled for this queue. You must create a unique spool directory for each printcap entry.

`log_file_name` — This is the path to a file where error information from the LPD will be logged.



Example • Your printcap entries might look similar to this:

```
Ascii_files|form.feed.Queue_on_Port_1:\n:lp=:mx#0:rm=pserver1:rp=MYQUEUELF1:\n:sd=/usr/spool/myqueueelf1:\n:lf=/usr/spool/myqueueelf1/queue.log
```



Important • Each printcap entry must have a different spool directory to work properly.

System V Queue Installation

Configuring Operating System V Queue for ZebraNet Printing

This section describes the configuration of the printing system on the UNIX operating system. For clarity and brevity, the following specific names are used to represent general devices or concepts.

`lj4` — The local queue name on the UNIX system to which you want PSII print jobs directed.

`ZEBRAPRINTER` — The host name or IP address of the remote system that is the PSII device. For example, to Telnet to the PSII and invoke the PSII configuration utility, you would enter:

```
Telnet ZEBRAPRINTER
```

A host name is not required for the PSII — the IP address can be used.

`yourqueueName` — This is the name of the queue on the ZebraNet and must end with `LF1`.

Prerequisites

Before you proceed, the following prerequisites must be met:

- The name `ZEBRAPRINTER` and the IP address assigned to the PSII are in the `/etc/hosts` file on the UNIX system.
- The LPD must be running on the UNIX system.

UNIX Configuration

To configure the UNIX machine so users can spool print jobs to the PCL print queue on the ZebraNet named `ZEBRAPRINTER`, complete these steps:

- 1 Log in to the UNIX machine as root.
- 2 Type :

```
lpsystem -t bsd ZEBRAPRINTER
```



- 3** Type:
`lpadmin -p lj4 -s ZEBRAPRINTER!yourqueueusername - I any`
- 4** Type:
`accept lj4`
- 5** Type:
`enable lj4`
- 6** Try printing by typing the command:
`lp -d lj4 [filename]`

CHAPTER 6

Using Printing Protocols

In this chapter you are given steps to set up your PSII to support **I**nternet **P**rinting **P**rotocol (IPP). Also, an exercise is provided to experiment with **F**ile **T**ransfer **P**rotocol (FTP) support.

Content

IPP	82
FTP	83

IPP



Important • You must have IPP support on your system.

IPP is an application-level protocol used for distributed printing over the Internet. Using IPP from any standard IPP client, you can transfer jobs to a printer that is connected to your ZebraNet PSII device and the Internet.



Important • IPP support is not available on all PSII printers. To be certain you are running the latest version of firmware, visit our Web site:

www.zebra.com

To set up your PSII to support IPP, complete these steps:

- 1 Open a browser.
- 2 Enter the PSII IPP URL as follows:

```
http://xxx.xxx.xxx.xxx:631/ipp/port1
```

xxx.xxx.xxx.xxx = the IP address of the PrintServer II device

:631 = a fixed value

/ipp = a fixed string designating IPP

/port1 = a fixed value



Example • Your address might look like this:

```
http:198.60.248.120:631/ipp/port1
```



Note • Because IPP does not have an official standard, usage depends entirely on the quality of the IPP client and server.

FTP

Embedded within the PSII is an FTP server application that processes file transfers from a host computer to the printer.

If the printer is on a network, label formats can be generated and data can be transferred without setting up a print queue.

To send information to the printer in a Windows environment, try this alternative exercise:

- 1 In a text editor, generate the following ZPL II code:

```
^XA
^FO100,100
^CF0,55^FDZebra Technologies^FS
^XZ
```

- 2 Save the file and name it `test.txt`.
- 3 Open the MS-DOS Command Prompt and type:
`ftp <IP of PrintServer II>`

➡ **Example** • If the IP address of your PSII device is `12.3.4.123`, you would type:

```
ftp 12.3.4.123
```

This opens a session with the FTP server.



Note • The default user name is blank.

- 4 Type your user name and press Enter.
- 5 Type:

```
put test.txt
```

This transfers `test.txt` to the printer, and the printer generates a label.

- 6** To terminate the FTP session, type:
`quit`

APPENDIX A

PrintServer II

This appendix provides you with details on the PSII features that were not covered in the chapter *Getting Started on page 35*.

Contents

PSII Features	86
---------------------	----

PSII Features

This section covers features available for the **PSII only**, not the printer's features. Some of the features you access in this section prompt you to enter the default user ID and password, as follows:

- **User ID:** admin
- **Password:** 1234

The options on the [Print Server](#) page vary. ZPL and EPL printers print server settings vary slightly.



Note • The difference between **ZPL** and **EPL** is this:

- **ZPL** — If you have a ZPL printer, you are initially prompted to the *Printer Home* page, and from there, you select [Print Server Settings](#).
- **EPL** — If you have an EPL printer, you are immediately prompted to the *Print Server* page.

Status and Configuration

The steps that follow are based on the navigation of a ZPL printer using firmware X.10 or higher.




Important • You can upgrade your firmware by visiting our Web site:

<http://www.zebra.com>

To access the print server settings, complete these steps:

- 1 Open a Web browser.
- 2 In the *Address* text-box, type your printer's IP address, and press Enter.

The *Printer Home Page* opens:

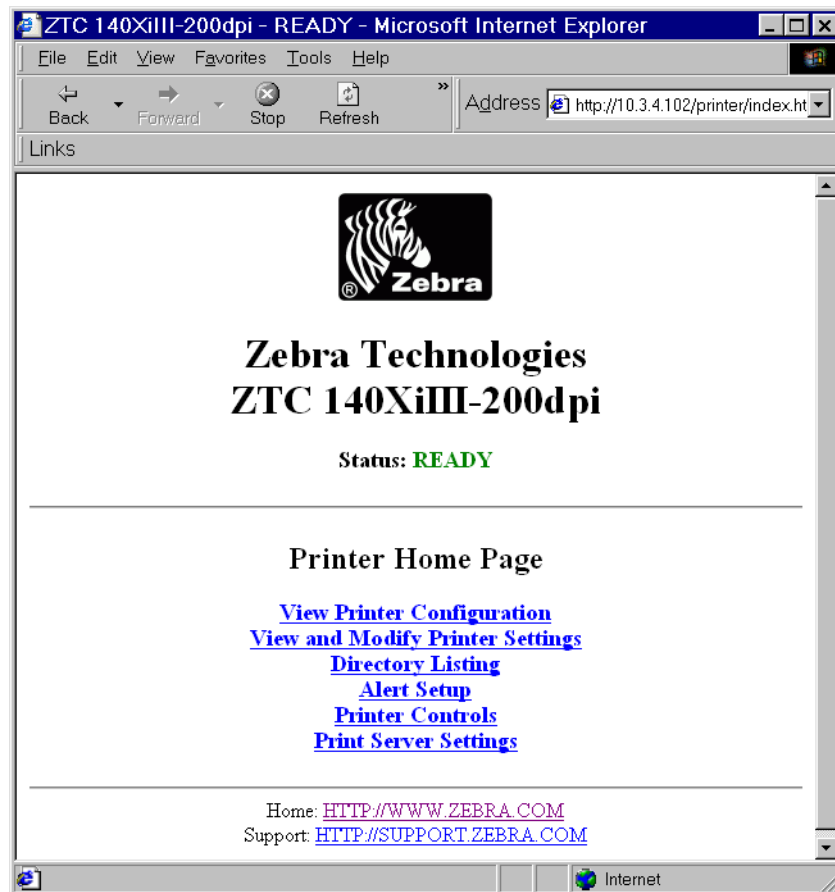


- 3 From the *Printer Home Page*, click [Print Server Settings](#).




Important • The illustration of the [Printer Server Settings](#) page is based on a ZPL printer. If you have an EPL printer, the menu options on the Print Server page are slightly different.

The *PrintServer* page opens:

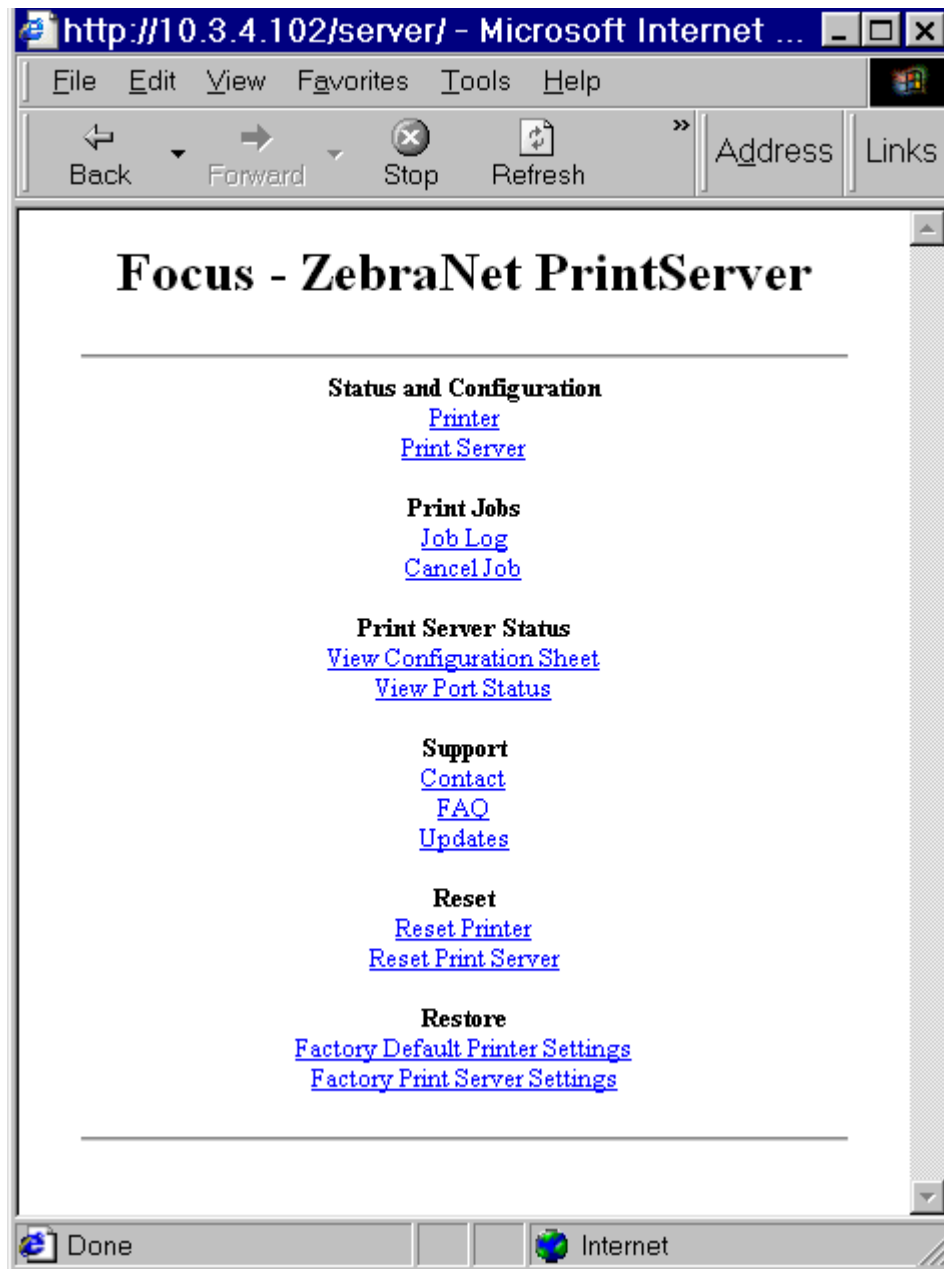

- 4 From the *PrintServer* page, click [Print Server](#).

The *Print Server Configuration* page opens:

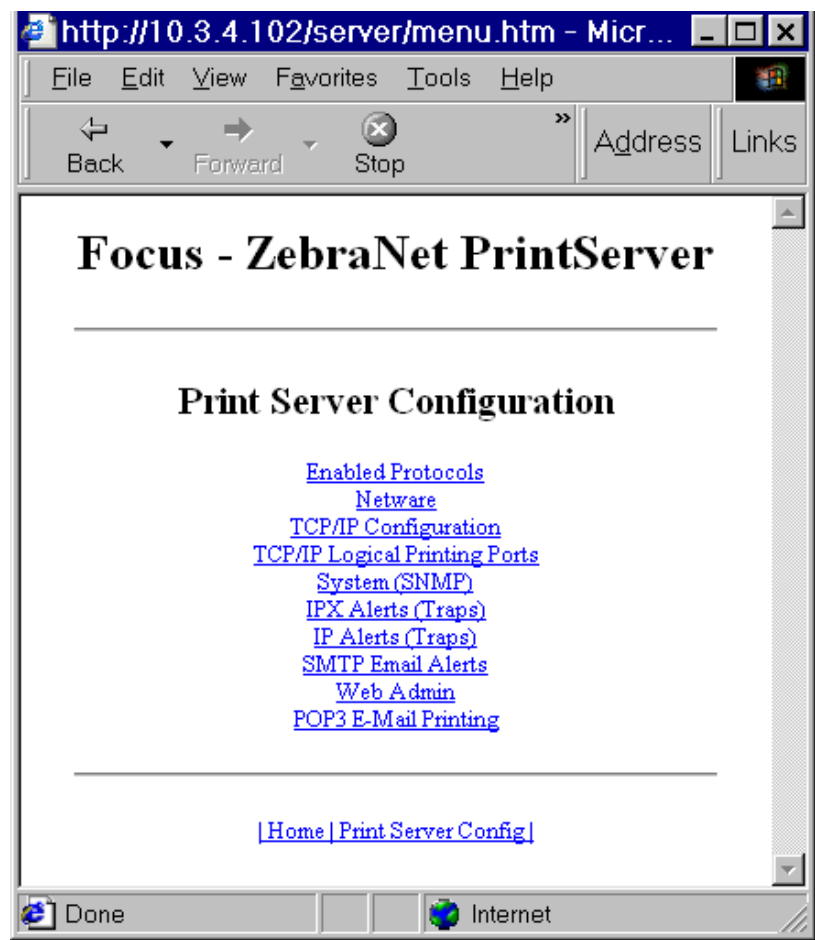


- 5 In the *Print Server Configuration* page, you have a menu to choose from. The table that follows identifies what each menu option page looks like:

Enabled Protocols

Modifies the protocols to be used.
NetWare, HP JetAdmin, or both.

Enabling HP JetAdmin Support allows status from the Zebra device to display in Hewlett-Packard's HP JetAdmin utility.

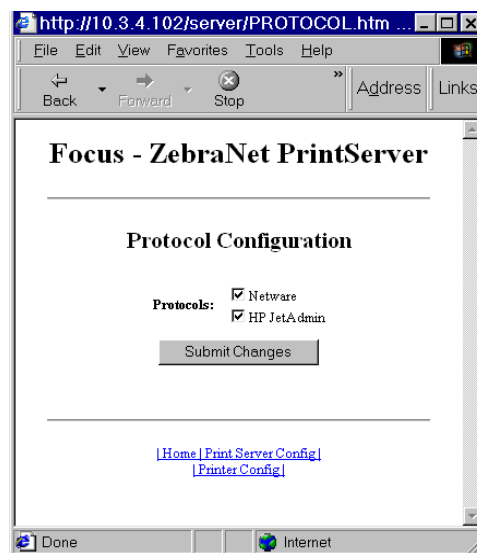

Netware


Preferred Tree — Enter the tree that the printer is in.

Print Server Name — Enter the name of the printer.

Disable NetWare SAP — Enables or disables the broadcast SAP (Service Advertising Protocol) messages. Typically, SAP is enabled. If SAPs are disabled, the print server does not appear in the bindery and is not discovered by ZebraNet View. Disabling SAPs reduces network traffic, however, SAPs should be disabled, only on networks using NDPS exclusively or NetWare 5 over the IP protocol.

NetWare Frame Format — You can select how the frames for the data packets are assembled. The default is Automatic Sensing.

For details, see Help.

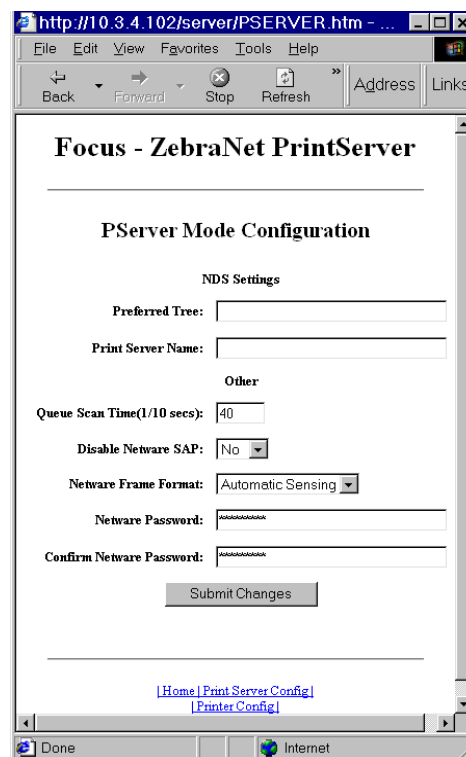

TCP/IP Configuration

You can change the TCP/IP Configuration of the PSII.

For details, see Help.

The screenshot shows a web browser window with the address bar displaying `http://10.3.4.102/server/TCIPGEN.htm`. The browser's menu bar includes File, Edit, View, Favorites, Tools, and Help. The toolbar contains Back, Forward, Stop, Refresh, Address, and Links buttons. The main content area is titled "Focus - ZebraNet PrintServer" and contains a "TCP/IP Configuration" section. This section includes several input fields and checkboxes for network settings. At the bottom of the configuration area is a "Submit Changes" button. Below the configuration fields are two links: [\[Home\]](#) and [\[Printer Config\]](#). The browser's status bar at the bottom shows "Done" and "Internet".

TCP/IP Configuration	
IP Address:	10.3.4.102
IP Address Resolution:	Dynamic
Dynamic Protocols:	<input checked="" type="checkbox"/> RARP <input checked="" type="checkbox"/> BootP <input checked="" type="checkbox"/> DHCP <input type="checkbox"/> Clearing <input type="checkbox"/> Default Address
Subnet Mask:	255.255.255.0
Default Gateway:	10.3.4.1
WINS Server IP Address:	10.3.1.15
Connection Timeout Checking:	Yes
Timeout Value (secs):	300
ARP Broadcast Interval (mins):	0
Base Raw Port Number:	9100
Submit Changes	

[\[Home\]](#) [\[Printer Config\]](#)

TCP/IP Logical Printing Ports

Logical printers allow you to set up multiple pre- and post-processing configurations for each output port. Each logical port configuration can do the following:

- Add user-configured strings before and after the print data.
- Remove unwanted characters from the beginning of the print data.
- Four logical printer configurations are supported for each output port on the printer. The configurations can be assigned to any port, and all of these configurations can be assigned to a single output port.

The screenshot shows a web browser window with the address bar displaying `http://10.3.4.102/server/MLP.htm`. The page title is "Focus - ZebraNet PrintServer". The main heading is "Logical Printer Port Configuration". Below this, there are two sections: "Logical Port 1 Configuration" and "Logical Port 2 Configuration". Each section contains the following fields: "Logical Port Name(FTP, LP):", "TCP Logical Port Number (Raw):", "Pre String:", "Post String:", and "Delete Bytes:". The "Delete Bytes" field has a value of "0". The browser's status bar at the bottom shows "Done" and "Internet".

System (SNMP)

This feature gives you the ability to manage multiple devices on a network, be it printers, computers, or other network-attached devices.

On this page you can define the SNMP system name, system location (PSII description), and other SNMP settings for your PSII.

The screenshot shows a web browser window with the address bar displaying `http://10.3.4.102/server/SYSINFO.htm`. The page title is "Focus - ZebraNet PrintServer". The main heading is "System Information Configuration". Below this, there are several fields: "System Name:" (with the value "Focus"), "System Contact:", "System Location:", "Get Community Name:" (with a masked value), "Confirm Get Community Name:", "Set Community Name:" (with a masked value), "Confirm Set Community Name:", "Trap Community Name:" (with the value "public"), and "Confirm Trap Community Name:" (with the value "public"). At the bottom, there is a "Submit Changes" button. The browser's status bar at the bottom shows "Done" and "Internet".

IPX Alerts (Traps)



Internetwork Packet Exchange (IPX) is Netware's network-layer protocol that handles networking addressing, routing, and packets.

This feature has you enter the IPX Network Address and IPX Node Address to which traps will be sent.

- To broadcast traps to all addresses on all networks, enter FFFFFFFF in the IPX Network address field and FFFFFFFFFFFFFFFF in the IPX Node Address field.
- To broadcast traps to all addresses on a specific local network, enter the network number in the IPX Network Address field and then FFFFFFFFFFFFFFFF in the IPX Node Address field.
- To disable traps, set all destination addresses to 0.

SMTP Email Alert Configuration

This feature allows you to enter data regarding System Information on the network that is being used. Typically, a Network Administrator would use this.

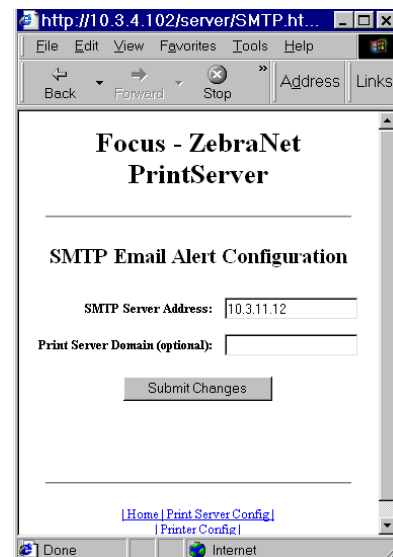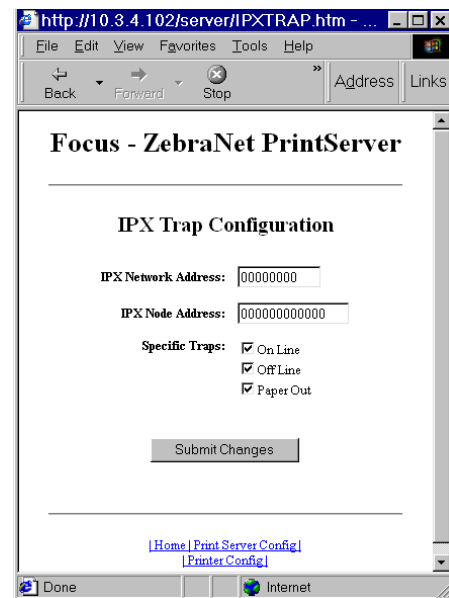

Web Admin

This page allows you to configure the Admin name and password. Links to upgrades and support information can also be altered.

http://10.3.4.102/server/ADMIN.htm - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Forward Stop Refresh Address http://10.3.4.102/s Links

Focus - ZebraNet PrintServer

Web Admin Configuration

Admin Name:

Admin Password:

Confirm Admin Password:

HTTP Port:

FAQ URL:

Updates URL:

Custom Link Title:

Custom Link URL:

Done Internet

POP3 Email Printing

This feature helps you set up the print server to receive email messages containing formats that can be printed. The POP3 settings must be set to retrieve emails from the email server.

Warning • Setting the POP3 polling interval (seconds) below 30 can cause communication problems with the POP3 server.

http://10.3.4.102/server/POP3.htm - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Forward Stop Refresh Address Links

Focus - ZebraNet PrintServer

POP3 Printing Configuration

POP3 Server Address:

POP3 User Name:

POP3 User Password:

POP3 Polling Interval (seconds):

[Home] [Print Server Config] [Printer Config]

Done Internet


Print Server Status

From the *Print Server* page, in the **Print Server Status** section you can access PSII's configuration sheet and port status.

To open PSII's configuration sheet, complete this step:

- 1 From the *PrintServer* page, click [View Configuration Sheet](#).

This page opens:

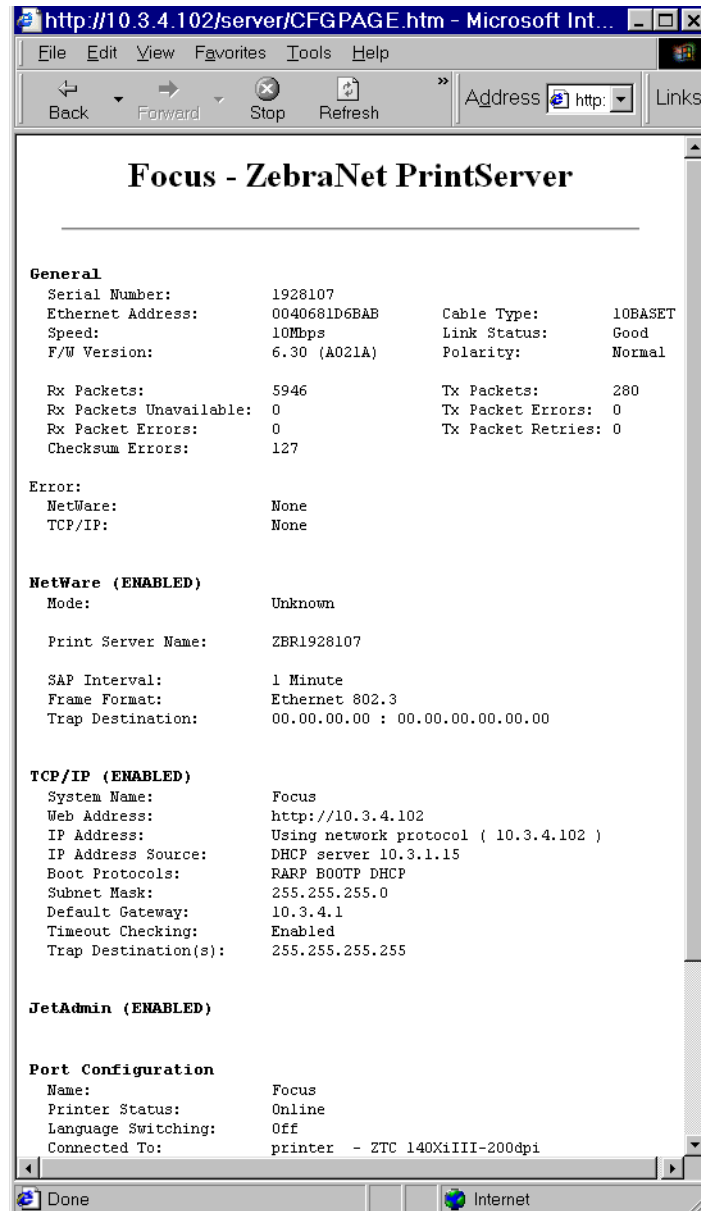


To view the port status, complete this step:



Important • The default user ID and password is required to access this page.

- 1 From the *Print Server* page, click [View Port Status](#).

The port status page opens:

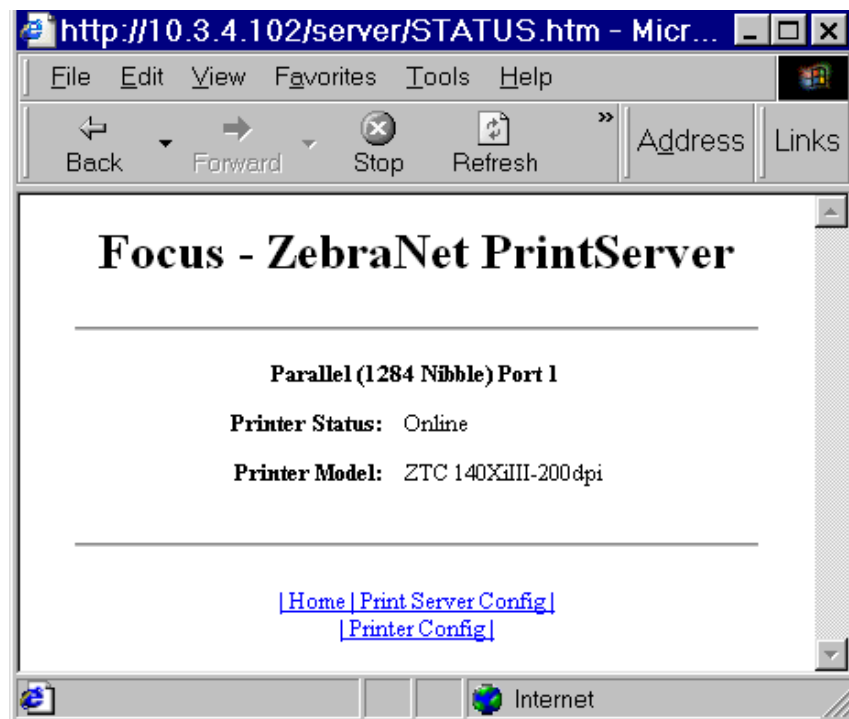

Reset

From the *Print Server* page, in the **Reset** section you can reset PSII's configuration settings to what they were before you made the most recent changes.

To reset the PSII, complete these steps:

- 1 From the *Print Server* page, click [Reset Print Server](#).

The *Reset Device* page opens:



- 2 To reset PSII, click Yes.


Restore

From the *Print Server* page, in the **Restore** section you can restore PSII's to the default factory settings:

To restore PSII to the default factory settings, complete these steps:

- 1 From the *Print Server* page, click [Factory Print Server Settings](#).

The *Restore To Factory Defaults* page opens:

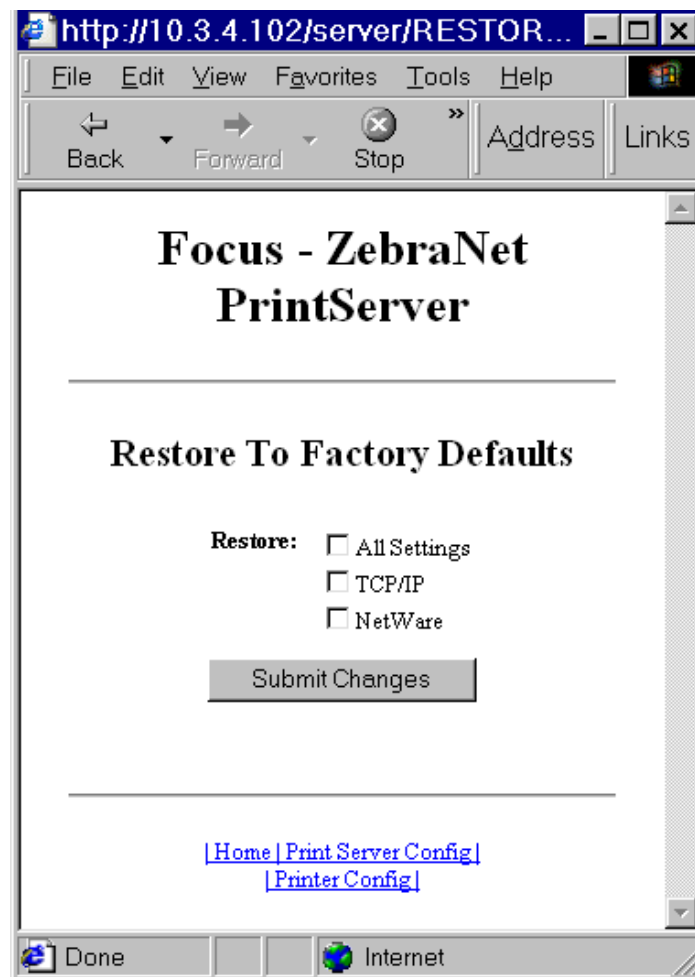

- 2 Make the selections you want, and click **Submit Changes**.

APPENDIX B

ZebraLink

The appendix provides you with detailed information that allows you to use the enhanced functionality of your ZebraLink-enabled printer with the PSII.

Contents

WebView	100
---------------	-----

WebView

WebView gives the System Administrator or user who needs complete, easy, one-step control over the printing environment exactly what is needed. It provides real-time configuration, control, and monitoring capabilities with the convenient graphic interface of a Web browser.

The Web pages returned by Zebra printers are not static. They contain real-time information about the printer's present state of operation, including on-line status, error conditions, and all printing parameters.

Home Page



Note • To access the printer's Web page, you need the IP address. For instructions on getting the IP address, see [Assigning an IP Address on page 38](#).


The Home Page is the first Web page that opens. It is a page with a menu of hyperlinks. Each hyperlink allows you to make modifications to the printer, PSII, and network settings; the other changeable settings through the Home Page include:

- Network Status, Error, and Warning reports
- ZebraNet PSII configuration
- Printer settings
- Directories of objects stored in Flash memory and RAM devices
- Objects, stored fonts, images, programs, and ZPL II formats
- Zebra Technologies support and home pages

To open the WebView of your printer, complete these steps:

- 1 Open a Web browser.
- 2 In the *Address* text-box, type your printer's IP address, and press Enter.

The *Printer Home Page* opens:

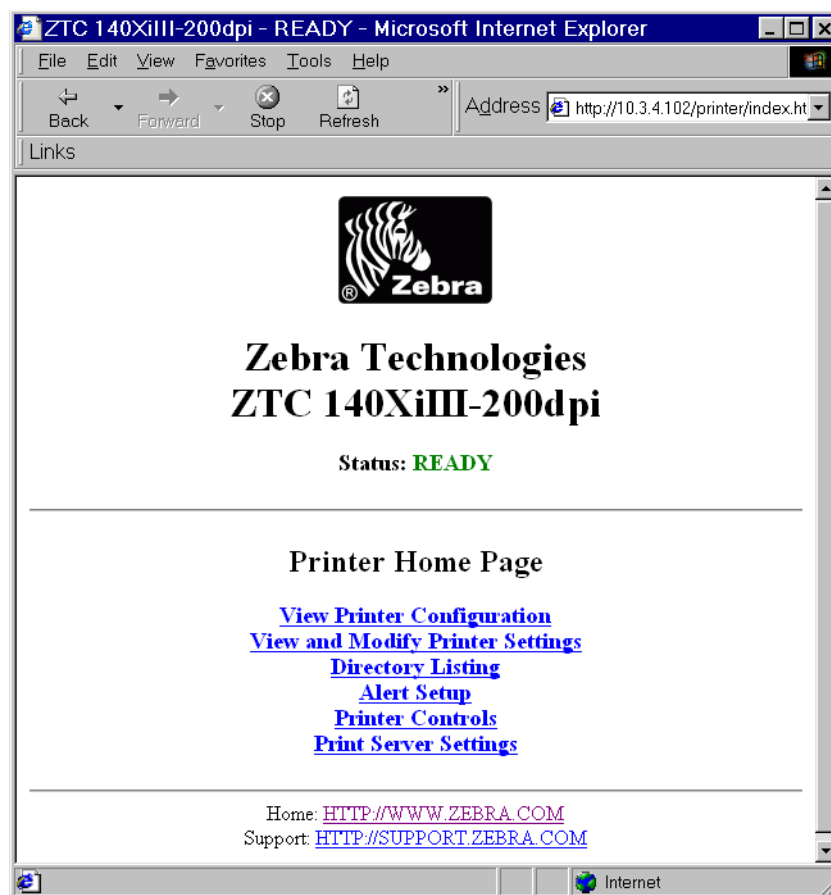


View Printer Configuration

The View Printer Configuration menu option provides accurate, up-to-the-minute information on the printer's current state. An administrator can conveniently find any information on the Virtual Configuration Label and also check on the status of printer ports.

To see the View Printer Configuration menu option, complete these steps:

- 1 From the *Printer Home Page*, click [View Printer Configuration](#).

The WebView displays the configuration settings:

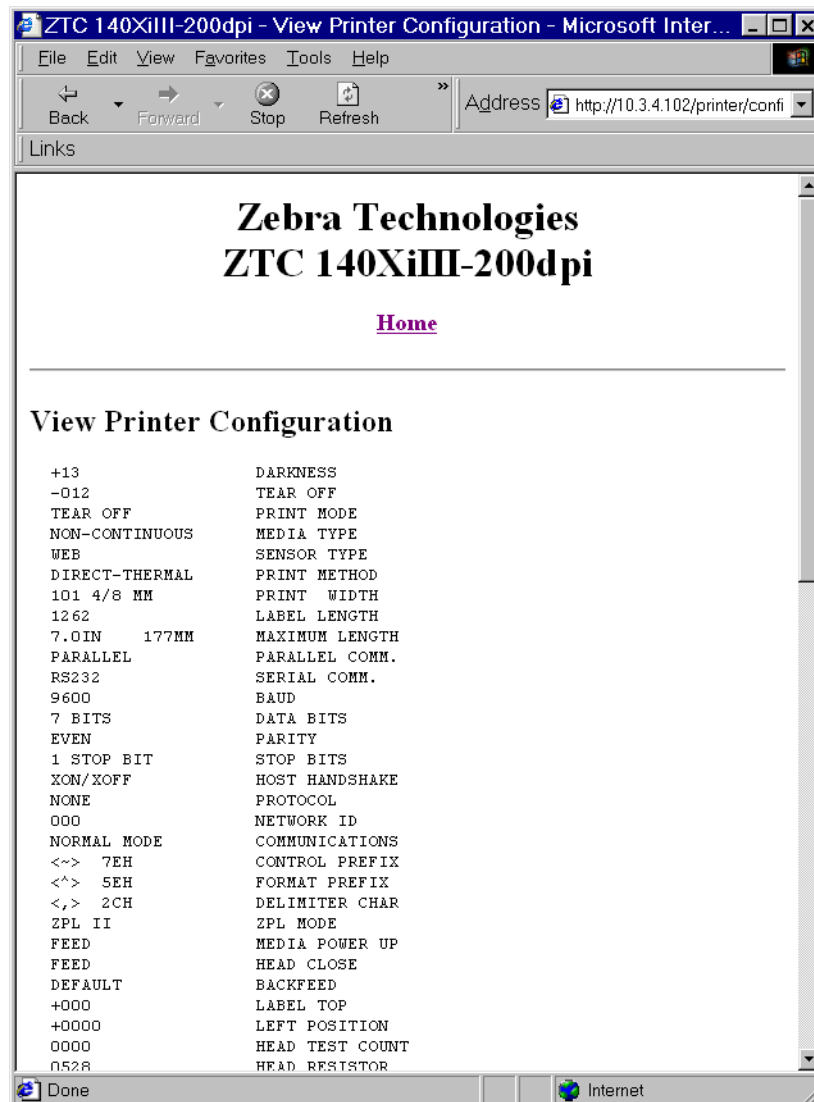

- 2 To update the printer information from this view:
 - For Netscape, select Reload and the printer sends current information to the Web browser.
 - For IE, click Refresh and the printer sends current information to the Web browser.
- 3 When you are finished reviewing:
 - To return to the Home page, click the [Home](#) link.
 - To print the label, scroll to the bottom of this page and click Print Label.

View and Modify Printer Settings

This section provides you with steps for accessing and modifying printer settings with a ZebraLink-enabled printer. It also provides illustrations of the various pages you can access.



Important • To apply changes made in this section, you need to use the default user ID and password:


User ID: admin

Password: 1234

To view the View and Modify Printer Settings, complete these steps:


- 1 From the *Printer Home Page*, click [View and Modify Printer Settings](#).

The *View and Modify Printer Settings* page opens:

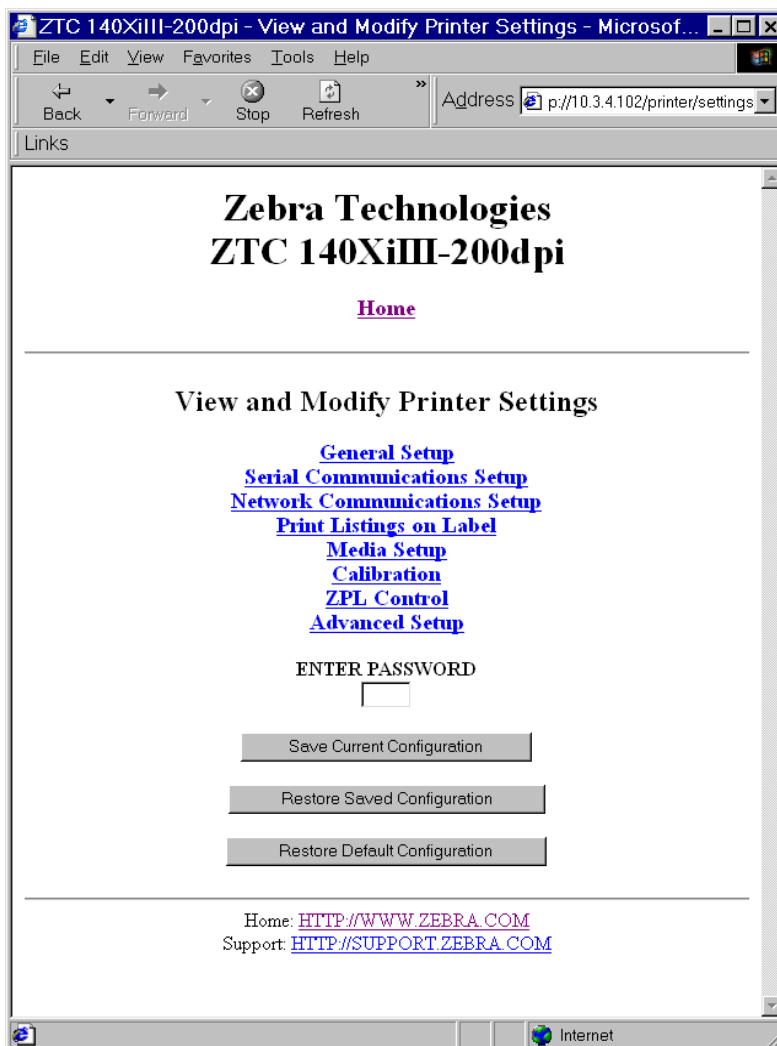


- 2 In the View and Modify Printer Settings page, you have a menu to choose from. The section that follows identifies what each menu option page looks like:

General Setup

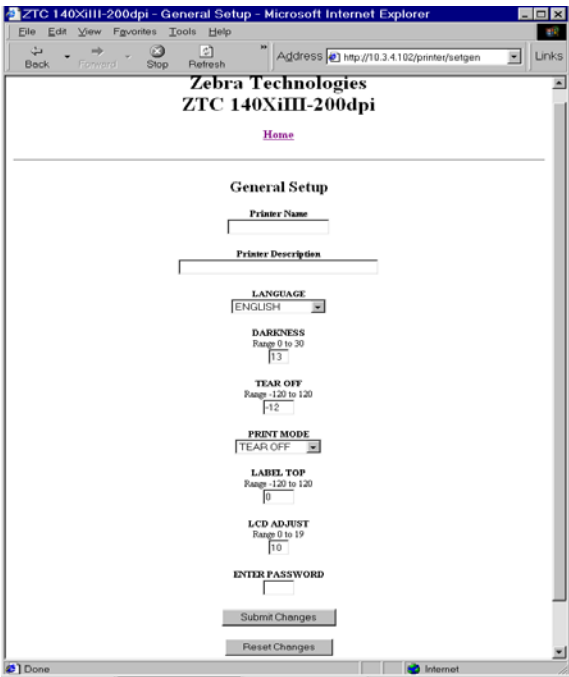

Serial Communications Setup

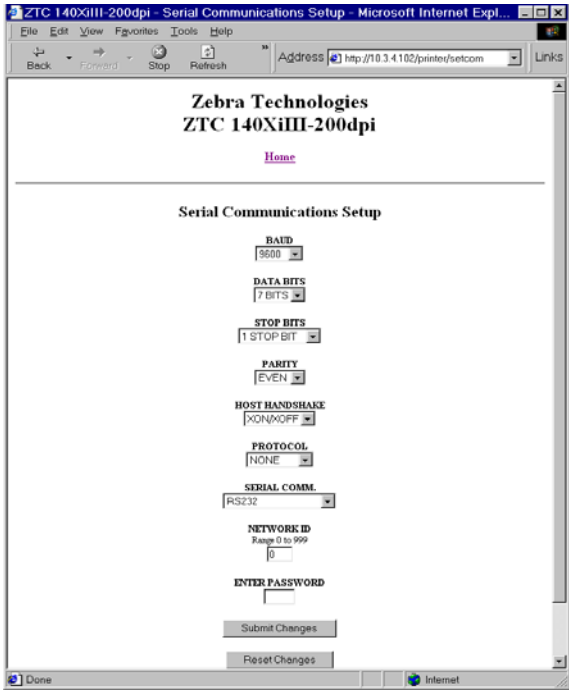

Network Communications Setup

The screenshot shows a web browser window titled "http://10.3.4.102/server/TCP/IPGEN.htm - Microsoft Internet Explorer". The address bar shows "http://10.3.4.102". The page content is titled "Focus - ZebraNet PrintServer" and "TCP/IP Configuration". It contains several input fields and checkboxes for network settings:

- IP Address: 10.3.4.102
- IP Address Resolution: Dynamic (dropdown)
- Dynamic Protocols: ☒ RARP, ☒ BootP, ☒ DHCP, ☐ Clearing, ☐ Default Address
- Subnet Mask: 255.255.255.0
- Default Gateway: 10.3.4.1
- WINS Server IP Address: 10.3.1.15
- Connection Timeout Checking: Yes (dropdown)
- Timeout Value (secs): 300
- ARP Broadcast Interval (mins): 0
- Base Raw Port Number: 9100

At the bottom of the form is a "Submit Changes" button. Below the form, there are two links: [\[Home | Print Server Config | Printer Config\]](#). The browser's status bar at the bottom shows "Done" and "Internet".

Print Listings on Label

The screenshot shows a web browser window titled "ZTC 140XiIII-200dpi - Print Listings on Label - ...". The address bar shows "http://10.3.4.102/server/PrintListings.htm". The page content is titled "Zebra Technologies ZTC 140XiIII-200dpi" and "Print Listings on Label". It features a "Home" link and a list of buttons for different print listings:

- LIST FONTS
- LIST BAR CODES
- LIST IMAGES
- LIST FORMATS
- LIST SETUP
- LIST ALL

At the bottom of the page, there are two links: [Home: HTTP://WWW.ZEBRA.COM](http://www.zebra.com) and [Support: HTTP://SUPPORT.ZEBRA.COM](http://support.zebra.com). The browser's status bar at the bottom shows "Done" and "Internet".

Media Setup

ZTC 140XiIII-200dpi - Media Setup - Micro

File Edit View Favorites Tools Help

Back Forward Stop Refresh Address Links

Zebra Technologies
ZTC 140XiIII-200dpi

Home

Media Setup

MEDIA TYPE

NON-CONTINUOUS

SENSOR TYPE

WEB

PRINT METHOD

DIRECT-THERMAL

PRINT WIDTH

Range 2 to 2000

812

MAXIMUM LENGTH

Range 406 to 7917

1421

ENTER PASSWORD

Submit Changes

Reset Changes

Home: [HTTP://WWW.ZEBRA.COM](http://www.zebra.com)
Support: [HTTP://SUPPORT.ZEBRA.COM](http://support.zebra.com)

Done Internet

Calibration

ZTC 140XiIII-200dpi - Calibration - Micr

File Edit View Favorites Tools Help

Back Forward Stop Refresh Address Links

Zebra Technologies
ZTC 140XiIII-200dpi

Home

Calibration

MEDIA POWER UP

FEED

HEAD CLOSE

FEED

Web Sensor

Range 0 to 100

73

Media Sensor

Range 0 to 100

75

Ribbon Sensor

Range 0 to 100

69

Mark Sensor

Range 0 to 100

0

Mark Media Sensor

Range 0 to 100

0

Media LED Brightness

Range 0 to 255

2

Ribbon LED Brightness

Range 0 to 255

2

Done Internet

ZPL Control

The screenshot shows a web browser window with the title "ZTC 140XiIII-200dpi - ZPL Control". The address bar shows "http://www.zebra.com". The page content includes the Zebra Technologies logo and the product name "ZTC 140XiIII-200dpi". Below this is a "Home" link. The main section is titled "ZPL Control" and contains several configuration options, each with a range and a text input field:

- CONTROL PREFIX**: Range 0 to FF Hex, input field contains "7E".
- FORMAT PREFIX**: Range 0 to FF Hex, input field contains "5E".
- DELIMITER CHAR**: Range 0 to FF Hex, input field contains "2C".
- ZPL MODE**: Dropdown menu set to "ZPL II".
- ENTER PASSWORD**: Empty text input field.

At the bottom of the form are two buttons: "Submit Changes" and "Reset Changes". At the very bottom of the page, there are links for "Home: [HTTP://WWW.ZEBRA.COM](http://www.zebra.com)" and "Support: [HTTP://SUPPORT.ZEBRA.COM](http://support.zebra.com)".

Advanced Setup

The screenshot shows a web browser window with the title "ZTC 140XiIII-200dpi - Advanced Set...". The address bar shows "http://www.zebra.com". The page content includes the Zebra Technologies logo and the product name "ZTC 140XiIII-200dpi". Below this is a "Home" link. The main section is titled "Advanced Setup" and contains several configuration options, each with a range and a dropdown or text input field:

- BACKFEED**: Dropdown menu set to "DEFAULT".
- LEFT POSITION**: Range 9999 to 9999, input field contains "0".
- FORMAT CONVERT**: Dropdown menu set to "NONE".
- HEAD TEST COUNT**: Range 0 to 9999, input field contains "0".
- HEAD RESISTOR**: Range 483 to 2415, input field contains "528".

Below these options are two buttons: "INITIALIZE CARD" and "Initialize Flash Memory". Further down are two more dropdown menus:

- VERIFIER**: Dropdown menu set to "OFF".
- APPLICATOR**: Dropdown menu set to "OFF".

At the bottom of the form are two buttons: "Submit Changes" and "Reset Changes". At the very bottom of the page, there is a link for "ENTER PASSWORD" followed by an empty text input field.

Directory Listing

The directory page provides a listing of all file system devices (B:, E:, R:, Z:). The size, name, and location of each stored object appears.


Buttons are available to perform file management operations on the objects. The file management operations include:

- Delete object — Not available for objects in read-only memory (Z:).
- Copy object to a new name and/or device — Not available for objects that have the “protected” attribute set.

To view the Directory Listing, complete these steps:

- 1 From the *Printer Home Page*, click [Directory Listing](#).

This page opens:

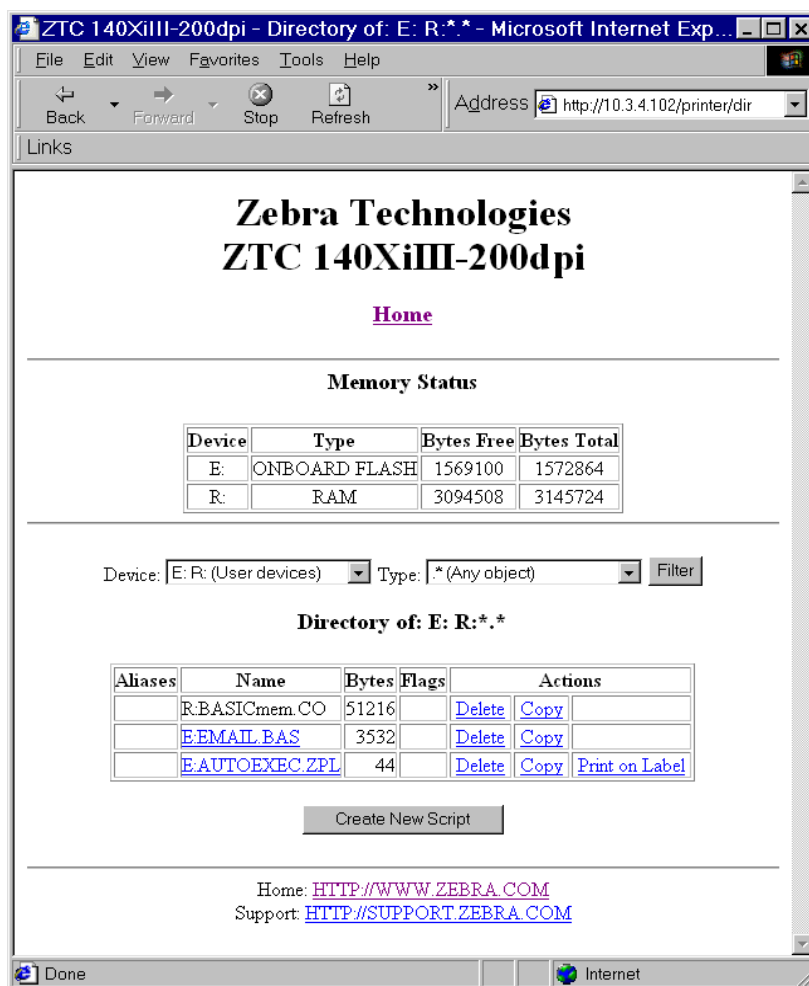

- 2 There are several links to select in this view.
- 3 To create a script, click **Create New Script**.

Alert Setup

To configure the printer's interaction with ZebraNet Alert to be completely functional, SNMP settings must be established in these areas:

- The printer, via the WebView interface.
- The Alert Printer Management Utility for logging SNMP traps.


The ZebraLink messaging system provides for more than SNMP notification. Alert can be routed to various destinations:

- TCP
- UDP
- email
- serial port
- parallel port destinations

To view Alert Setup, complete these steps:

- 1 From the *Printer Home Page*, click [Alert Setup](#).

The *Alert Messaging System* page opens:

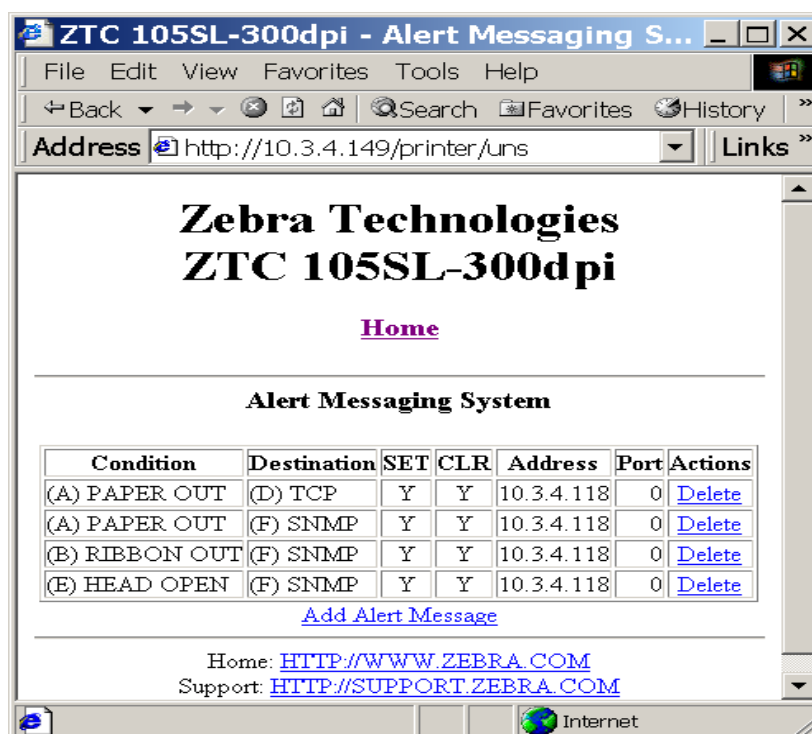

- 2 To add an alert, click [Add Alert Message](#).
- 3 Select accordingly.

Establishing Email Alert Messaging

ZebraNet Alert supports email notification of printer errors sent directly to any valid email address. You can have multiple email addresses set up for routing different error messages, or split notifications between email and other network management tools.

To begin receiving email notification of errors, complete these steps:

- 1 From the browser, in the address text-box type in the printer's address.
The printer's home page opens.
- 2 From the *Printer Home Page*, click [Alert Setup](#).
The Alert Setup page shows a list of message notifications and their respective destinations.
- 3 From the *Alert Setup* page, email notification can be set up. Click [Add Alert Message](#).

The *Add Alert Message* page opens:



Important • The printer accepts only the last configuration made.

- 4 Specify the condition to send over email, such as **HEAD ELEMENT BAD** or **PAPER OUT**.
- 5 Enter a valid email address for the messages to be sent.



Example • admin@yourcompany.net (The Port field can be ignored for email setup.)

Warning • You must type in a password. If you forget to enter the *default* password, the alerts you just set are deleted.

- 6 Click **Add Alert Message**. Here you can continue to add more settings or, if finished, save the current settings.
- 7 From the **Printer Home Page**, select **PrintServer Settings>Network Communications Setup**.
- 8 Click [SMTP Email Alerts](#).
- 9 Specify your SMTP server address.

When these steps are done, you can begin receiving email notification messages.

Printer Controls

This page offers control over basic printer functions.


Other functions are also accessible from this page. These include:

- **Feed** — causes printer to feed one label.
- **Cancel One Format** — cancels the currently printing format.
- **Cancel All Formats** — cancels all formats.
- **Reset Printer** — causes printer to perform its standard reset without cycling power.

To view Printer Controls, complete these steps:

- 1 From the *Printer Home Page*, click [Printer Controls](#).

This *Printer Controls* page opens:

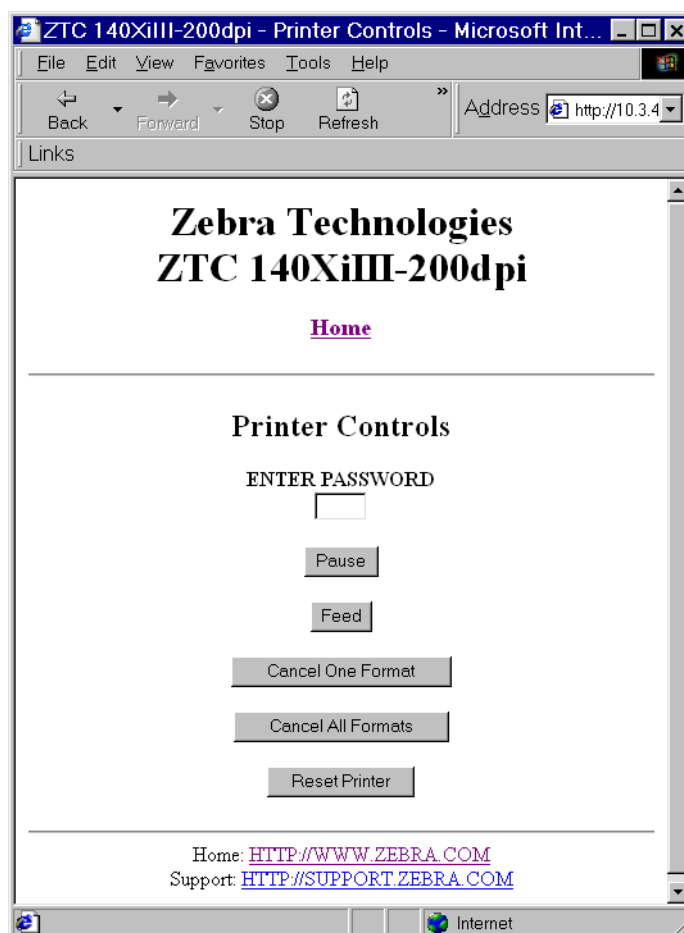

Important • In this view, you must have administrative rights to make changes to the printer controls.


Print Server Settings

This section provides you with instructions for viewing the current printer settings.

To view the print server menu, complete these steps:

- From the *Printer Home Page*, click [Print Server Settings](#).

The *PrintServer* page opens:

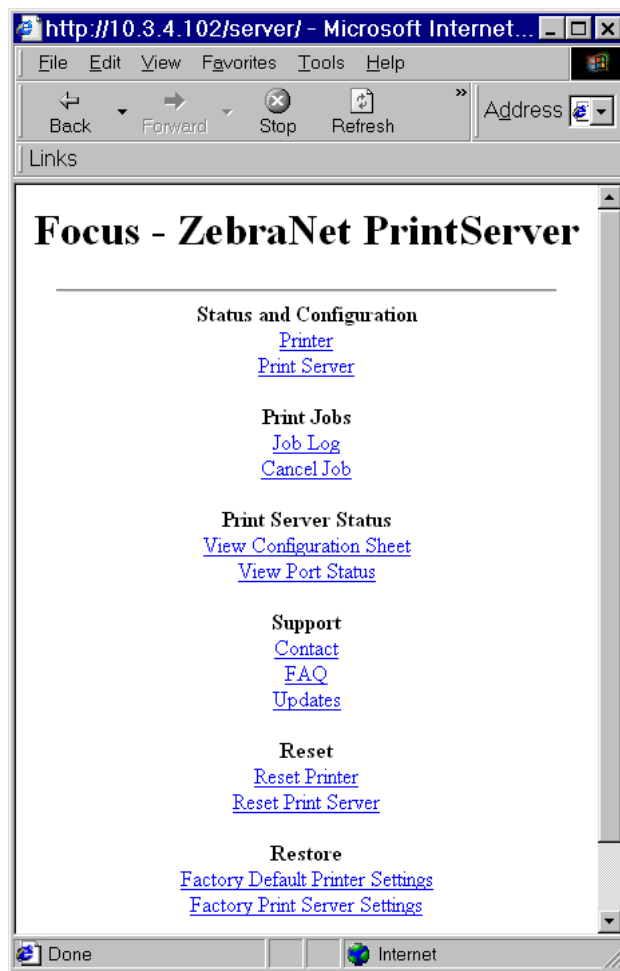

For more details on PSII, see *PrintServer II on page 85*.

APPENDIX C

ZebraNet Utilities

The appendix provides you with details on ZebraNet Utilities, the software suite of printer administration tools that complements and enhances both ZebraLink and the ZebraNet family of connectivity products.

Contents

ZebraNet View.....	118
ZebraNet Alert	121
ZebraNet Connect.....	129
ZebraNet View Java Applet	130


ZebraNet View

ZebraNet View allows you to locate printers automatically. It can search on parameters such as IP address, subnet, printer model, printer status, and many other user-defined characteristics. It also offers powerful device management capabilities.

To open ZebraNet View Utilities, complete these steps:


- 1 From the task bar, select Start>Programs>ZebraNet Utilities>ZebraNet View.

The *ZebraNet View* dialog opens:

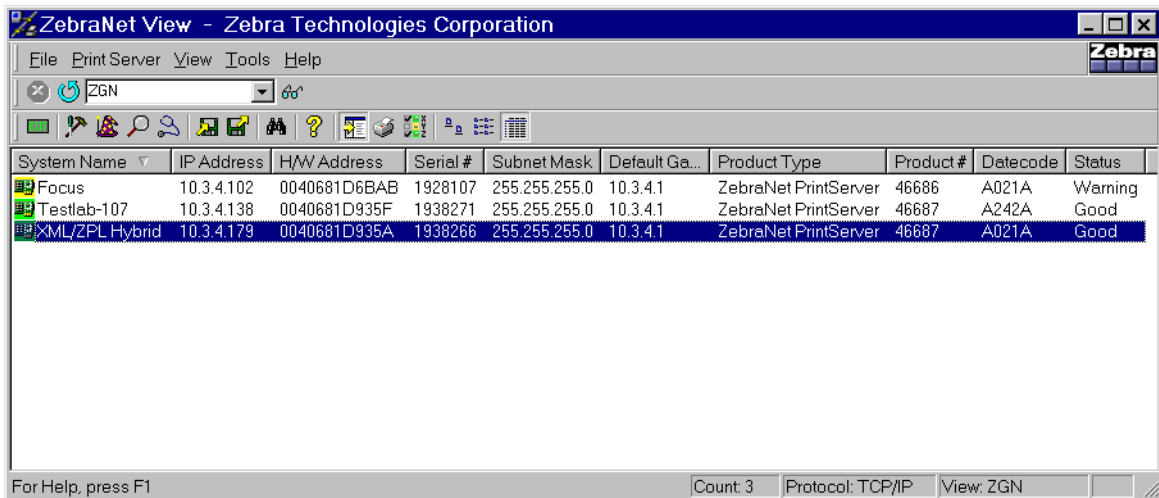

- 2 Select your printer.
- 3 From the menu bar, select PrintServer>Configuration.

The *Print Server Configuration* dialog opens:

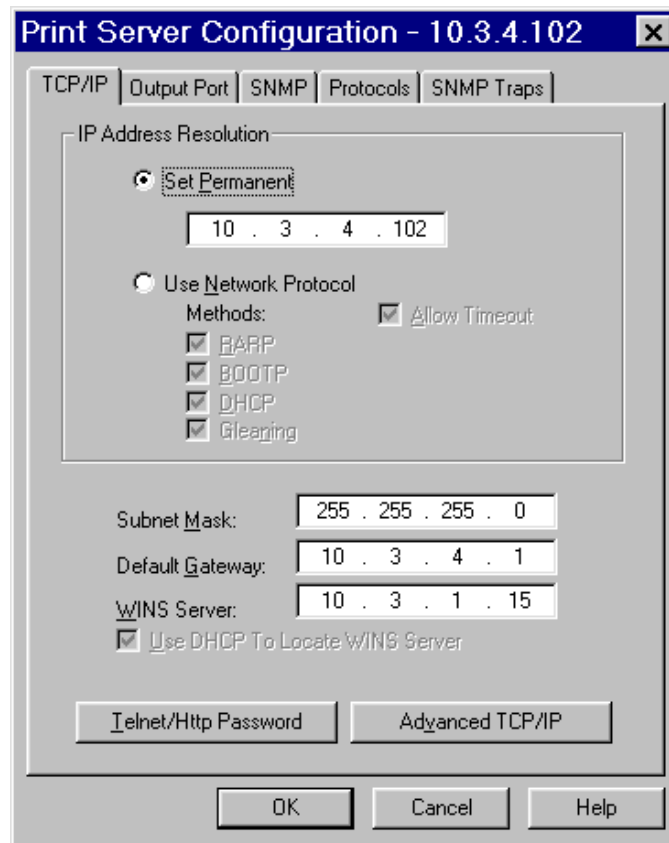

There are multiple tabs that you can access to make changes to current settings.

To set alerts in ZebraNet View, complete these steps:

- 4** From the *Print Server Configuration* dialog, click the *SNMP Traps* tab.

The *SNMP Traps* tab shows the alerts you can set.

The image shows a Windows-style dialog box titled "Print Server Configuration - 10.3.4.149". It has five tabs: "TCP/IP", "Output Port", "SNMP", "Protocols", and "SNMP Traps". The "SNMP Traps" tab is selected. Inside the dialog, there is a "Protocol:" dropdown menu set to "TCP/IP". Below this is a "Trap Destination" section with a "TCP/IP Address:" field containing "255.255.255.255" and buttons for "Add", "Edit", and "Remove". At the bottom of the dialog are "OK", "Cancel", and "Help" buttons. The main area of the dialog is divided into two panes. The left pane, titled "Ports To Trap", contains a list with one item: "Port 1" with a checked checkbox. The right pane, titled "Printer Traps", contains a list with four items: "On-line (Condition cleared)", "Off-line", "Paper Out", and "Printer Error", all with checked checkboxes. A blue arrow points from the text "The check boxes in Printer Traps are the alerts." to the "Printer Traps" list.

The check boxes in Printer Traps are the alerts.

- 5 To monitor the set alerts (printer traps), see [ZebraNet Alert on page 121](#).



ZebraNet Alert

ZebraNet Alert gives you the ability to manage your Zebra printers by immediately notifying System Administrators of printer error or warning conditions. Using Web-based configuration tools, selected errors or warning conditions can be routed to a variety of services such as email messages, wireless pagers, or the ZebraNet Alert.

The following tables show the conditions that can trigger alerts:

PSII Alerts

-
- On-line (condition clear)
 - Off-line
 - Paper out
 - Printer error
-

ZebraLink Alerts

-
- Media out
 - Ribbon out
 - Printhead over-temp warning
 - Printhead under-temp warning
 - Head open
 - Power supply over-temp
 - Ribbon warning (in direct-thermal mode)
 - Rewind full
 - Cut error
 - Printer paused
 - PQ job completed
-

-
- Label taken
 - Head element out
 - Power on
-

ZebraNet Alert Destinations

Unsolicited Alert messages can be directed to the following destinations:

- Email (PSII-specific)
- Serial (ZebraLink-specific)
- Parallel (ZebraLink-specific)
- TCP (PSII-specific)
- UDP (ZebraLink-specific)
- SNMP (PSII-specific)

ZebraNet Alert Using SNMP

You can send notifications over SNMP only, for use with ZebraNet Alert or a similar network management utility.

To configure the PSII to send alerts across a TCP/IP Network to ZebraNet Alert, complete these steps:



Important • If you did not install ZebraNet Alert during the ZebraNet Utilities installation, see [ZebraNet Utilities on page 26](#).

- 1 From the task bar, select Start>Programs>ZebraNet Utilities>ZebraNet View.
- 2 Select the printer you want.
 - If a DHCP server is present, the PSII will already have an IP address.
 - If no DHCP server is present, you might need to assign the printer an IP address.
- 3 To assign your printer an IP address, from the menu bar, select Print Server>Configuration.
- 4 For PrintServer SNMP Traps, select the *SNMP Traps* tab.
- 5 Enter the trap destination and options.

This tells the PSII what TCP/IP address to send the alerts to, and under what circumstances to send error and log reports. Entering 255.255.255.255 broadcasts the message to every host on the network with an SNMP program running.

- 6 For ZebraNet Alert to get and display the messages, you need to open ZebraNet Alert. To do this, follow these steps:
 - From the task bar, select **Start>Programs>ZebraNet Utilities>ZebraNet Alert**.



Important • The SNMP trap settings must be established to communicate with PSII if messages are sent to the ZebraNet Alert.

- In the *ZebraNet Alert* dialog, from menu bar, select **View>Filter Settings**.
- From the *View Filter - Devices* tab, choose your settings accordingly.



Note • If you select **No device filtering**, messages from every printer are caught; **Device Address** allows you to specify which IP address data will come from.

- The **View Filter - Events** tab allows you to select individual events you want the program to be aware of.



Important • Now PSII's SNMP Alert messages can be set up in WebView. From the printer's home page, activate the link to Alert Setup. You can add messages that are sent to the ZebraNet Alert for Windows by choosing SNMP as a destination.

Sending Email to Your Zebra Printer

To easily transfer instructions and data to your printer from a remote location, PSII allows you to send email to the printer. This is set up under the link POP3 Email Printing. You need to provide the address of the network POP3 server, a user name, and a password.

With this option, you can create a text-based email containing ZPL II code and transfer it to the printer.




Note • Email attachments sent to the printer are not supported.

By using the proper ZPL II commands, files can be saved, loaded, printed, copied, and deleted, just as if the data were transferred from a serial or parallel port.

To access POP3, complete these steps:


- 1 From the Printer Home page, click [Print Server Settings](#).

The *PrintServer* page opens:

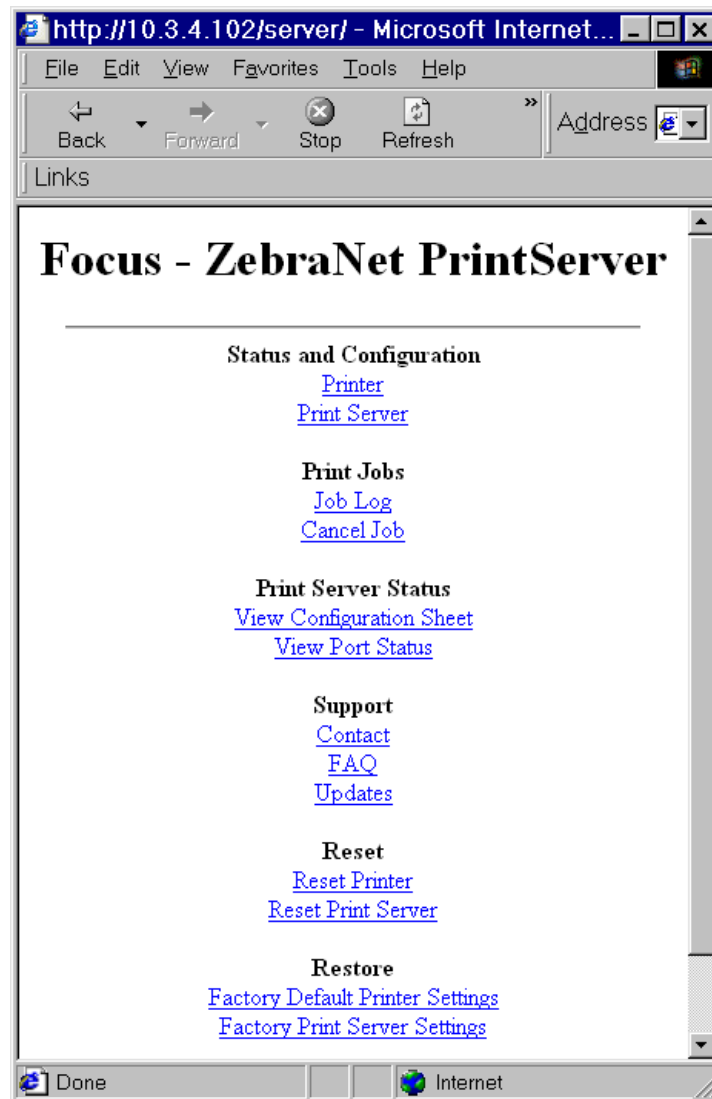

- 2 From the *PrintServer* page, click [Print Server](#).

The *Print Server Configuration* page opens:

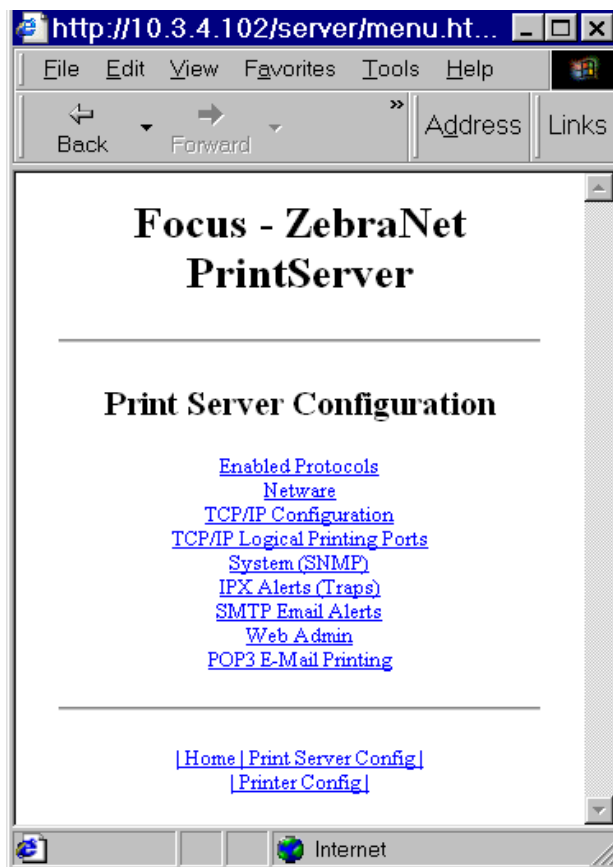

- 3 From the *Print Server Configuration* page, click [POP3 E-mail Printing](#).

The *POP3 Printing Configuration* page opens:

- 4 Make the necessary changes, and click **Submit Changes**.


ZebraNet Alert monitors status and activity of all Zebra printers on the network. It alerts the administrator when there is an error condition, which reduces printer downtime and increases application efficiency.

Open Alert

To open ZebraNet Alert, complete these steps:

- 1 From the task bar, select **Start>ZebraNet Utilities>ZebraNet Alert**.
- 2 In the *ZebraNet Alert* dialog, from the menu bar select **Report>**. The report menu option has multiple report selections.
- 3 Select the type of report you want to generate.

This is an example of the *Event Summary* report. Notice it generates a .log file:

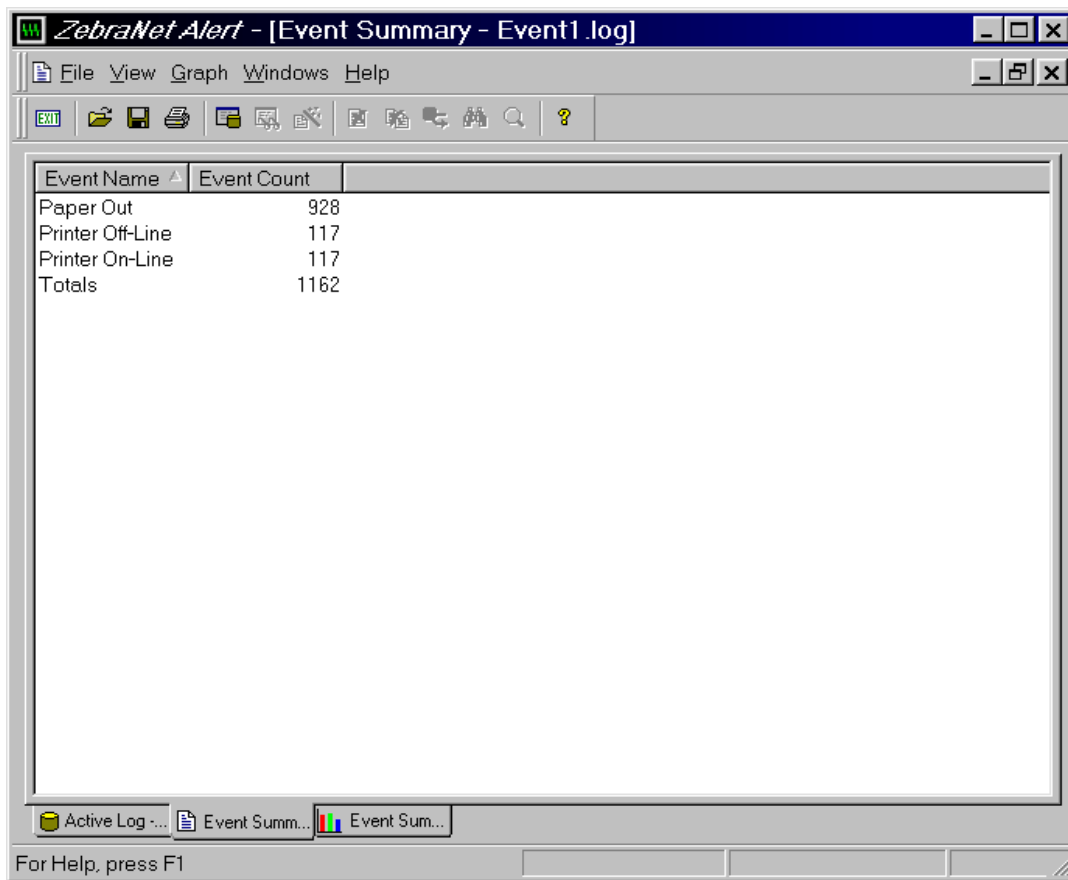



ZebraNet Connect

For details, see [*Setting up a ZebraNet Connect IP on page 58.*](#)

ZebraNet View Java Applet

ZebraNet View Java Applet is a Java-based version of ZebraNet View. This can run on any enabled platform that can run a Java virtual machine, such as Windows, UNIX, Linux, and many others.




Important • To use this, you must have installed it with ZebraNet Utilities and then installed this application. For installation instructions for ZebraNet Utilities, see [ZebraNet View Java Applet on page 30](#).

To access ZebraNet View Java Applet, complete these steps:

- 1 From the task bar, select Start>Programs>ZebraNet Utilities>ZebraNet View Java Applet 1.0.

This view opens:

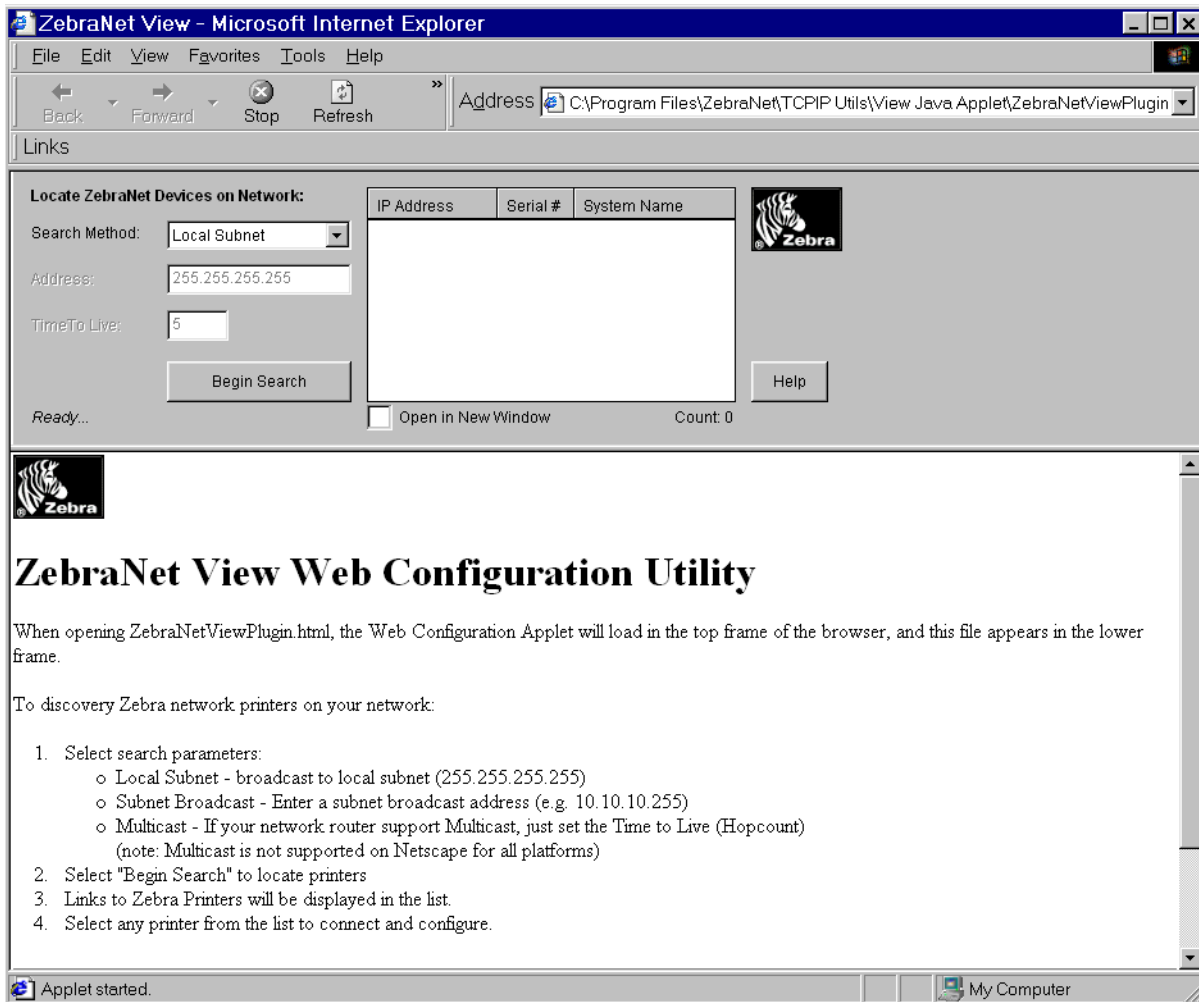

2 In the *Search Method* drop-down list box, select the search method you want.

3 Click **Begin Search**.

It searches your network for all networked Zebra printers, discovers them, and lists them.

4 When you select a device from the list that is discovered, the selected device's *Home Page* displays in the lower portion of the view (it replaces the *ZebraNet View Web Configuration Utility* content).



Hardware Troubleshooting

This provides you with solutions to known issues.

Contents

Resetting to Factory Defaults	134
Status Indicator	134
ZebraNet View Utility Discovery or Configuration Problems	135
Unable to Print	135
Unable to Configure Device	136
HP JetAdmin or HP Web JetAdmin	136

Troubleshooting the PSII

Resetting to Factory Defaults

To reset the PSII configuration parameters to the factory defaults, press the **Test** button and hold it in while turning the printer power on. Keep the test button pressed until the Status Indicator light turns green, then release the test button. After approximately 20 seconds, a configuration label prints automatically.

Status Indicator

A bi-color Status Indicator displays the operational status of the PSII. The following conditions might occur:

- During normal operation, the LED is solid green for more than 30 seconds. This indicates all the hardware is functioning properly and it has detected the presence of the network. It does not mean the PSII has an IP address or is attached to a printer queue.
- If the LED is rapidly flashing green (9 times/sec), the PSII has not detected the presence of a network cable. To solve the problem:
 - Turn the printer power off. Remove the network cable from the PSII. Plug the network cable back in until you hear a positive click. Check the other end of the cable in the same manner. Turn the printer power on. If the PSII still does not detect a cable, continue.



Important • Cables with a rating higher than CAT-5 have **not** been tested.

- Verify that the network cable is 10BASE-T and has an RJ-45 connector.
- Connect the PSII to a network drop that is a known good network connection. If the PSII is still unable to detect the network cable, contact Technical Support for assistance.
- If the LED is slowly flashing green (1 time/sec), the PSII is trying to print a job. If the job does not print, check the following:
 - Verify that the printer has media and ribbon (if in thermal transfer mode). If the printer is showing any errors, it is unlikely that the PSII can send data to the printer. The LED continues to blink until the printer malfunction is resolved or until the printer is turned off.



- Flashing red indicates the Power On Self Test (POST) is in progress.
- If the LED is solid red for more than 30 seconds, the PSII has failed the POST. If the failure is not severe, the PSII attempts to print a configuration label on the printer. A failed POST can be caused by any of the following:
 - The printer attached to the PSII device is malfunctioning. Turn the printer power off, wait 10 seconds, then turn the printer back on.
 - If the PSII still fails the POST, continue below. The PSII has a hardware problem that can be fixed only by replacing or returning the unit. Contact Technical Support for repair or replacement information.
- If the LED is alternately flashing red and green for longer than 2 minutes, the PSII is in firmware-download mode. This means it is waiting for new firmware data to be sent before it continues normal functioning. Perform the following:
 - If the PSII was purposely put into firmware-download mode, finish the download with the proper update utility. Contact the Zebra Web site at <http://www.zebra.com> to download this utility.
 - Contact Technical Support for help recovering this unit.

ZebraNet View Utility Discovery or Configuration Problems

If you are having problems using the ZebraNet View utility to discover or configure the unit, check the following:

- Verify there is not a router between the workstation running ZebraNet View and the PSII. Because the PSII does not have an IP address, TCP/IP communication cannot be started across a router. Run ZebraNet View on the same subnet as the PSII. This is not a limitation when using ZebraNet View for HP JetAdmin in IPX/SPX Discovery Mode.
- Verify the PSII has a solid green light. If the LED shows a rapidly flashing green light, check the network cable that is attached.

Unable to Print

- If you are having problems printing, verify that there is communication between the PSII and the printer. Check the following:
 - Print a configuration label by pressing the test button on the PSII. If a configuration label does not print, verify the printer has media and ribbon (if used) and is not paused.
 - If problems persist, contact Technical Support.

Unable to Configure Device

To assign an IP address to a ZebraNet PSII using ZebraNet View, you must be on the same subnet. If ZebraNet View has Multicast enabled, you might be able to view the ZebraNet PSII on another subnet, but you will not be able to configure the device.

HP JetAdmin or HP Web JetAdmin

The ZebraNet PSII might be set up and managed using HP JetAdmin or HP Web JetAdmin products.



Frequently Asked Questions

This is a group of frequently asked questions (FAQs) about PSII.

FAQs

This table provides frequently asked questions (FAQs) on PSII:

Question	Answer
Are there any differences in functionality between a ZebraNet PSII with an EPL-based printer and with a ZebraLink-enabled ZPL printer?	<p>Yes.</p> <ul style="list-style-type: none"> • In a ZebraLink environment, with either a Web browser or with the ZebraNet View Utilities, there are a variety of Web pages that display a wealth of status information regarding both the ZebraLink printer and its ZebraNet PSII. However, when used with an EPL printer, such as the LP/TLP 2844, the Web pages for printer status are not available at this time, only the Web pages showing status of the PSII are displayed. The PSII can be easily configured. However, printer configuration information regarding the EPL printer is not available via the ZebraNet Utilities. • Error conditions: Using ZebraNet Alert, an EPL printer can be configured to use different IP addresses to report the following Alert status conditions: on-line, off-line, paper out. • For EPL: only two destinations can be configured to report error messages (online, offline, and paper out) using SMTP email alert – serial and parallel port destinations are not supported.
Can the internal ZebraNet PSII option work on a computer network that is running both TCP/IP and IPX protocols simultaneously?	<p>Yes.</p> <p>The ZebraNet PSII runs all of its available protocols simultaneously. This means that the ZebraNet PSII can run on mixed networks such as a network using Microsoft, UNIX, and Novell NetWare operating systems.</p>

Question	Answer
Will the ZebraNet PSII allow connectivity to anything other than a PC network?	<p>Yes.</p> <p>The ZebraNet PSII allows connectivity to systems such as IBM's AS400, provided that it is configured using TCP/IP. Other network protocols can be used with third-party adapters that are converted to 10BASE-T.</p>
Will the ZebraNet PSII option work on a 10BASE-T per second network?	<p>No.</p> <p>The ZebraNet PSII option is a 10BASE-T print server. This means that the data cannot travel any faster than 10 megabits per second. The ZebraNet PSII can be deployed on a network that is utilizing 10/100 hubs, but the ZebraNet PSII operates at only 10 megabits per second.</p>
What if a print job makes it to the queue, but never leaves the queue? The label does not print.	<p>These are the things to check:</p> <ul style="list-style-type: none">• Confirm that the printer is turned on and receiving power.• Confirm that the network cable is plugged in and that you can ping the printer. <p>If the above bullets do not change the outcome, it is likely that there was a misconfiguration while creating the queue. The queue must be recreated verifying the following:</p> <ul style="list-style-type: none">• Confirm that you use the print server's valid IP address.• If you are using a UNIX or AS/400 host, there is an option for the remote queue name. There is only one valid response to use: PORTLF1.• If Windows does not have LPR installed, the above required option should be left blank.• See the documentation for other operating system specific queue creation.

Question	Answer
What are the minimum requirements to network a printer?	<ul style="list-style-type: none"> • Cat-5 network cable with 10BASE-T connectors • PSII • Hub or Switch • If a hub or switch is NOT used, you need a cross-over cable. • Workstation running a TCP stack with print services installed
What do the activity lights on the PSII mean?	<ul style="list-style-type: none"> • Fast blinking (9 times/second) — no link status • Slow blinking (1 time/second) — no IP address, or the unit is sending data to the parallel port • Blinking red — unit is still in POST • red-green-red-green — unit is in Netware firmware update mode • red-red-green-green — unit is in IP firmware update mode • Solid red — unit has failed POST. Remove network cable and restart printer
What is the default User ID and password for the print server?	<ul style="list-style-type: none"> • The User ID is admin and the password is 1234.

Question	Answer
What ports are open on PSII and related software?	<p>TCP Ports:</p> <ul style="list-style-type: none">• 21 FTP• 23 Telnet• 80 HTTP Server• 515 Printer port• 631 IPP port• 9100 Raw socket connection <p>UDP Ports:</p> <ul style="list-style-type: none">• 161 SNMP broadcast from PSII• 162 SNMP trap on ZebraNet Alert• 4201 discovery destination on PSII• (dynamic) SNMP get request from ZebraNet View• (dynamic) discovery broadcast from ZebraNet view• (dynamic) discovery broadcast from ZebraNet view Java

Question	Answer
What are my network connectivity options based on when using a PSII?	<p>It depends on your environment, but the print server accepts print jobs in any of the following ways:</p> <ul style="list-style-type: none">• <i>FTP</i> — ZPL/EPL files can be sent to the printer via a FTP client as standard ASCII files• <i>HTTP</i> — (ZebraLink-enabled printers <i>only</i>) Using the script option of the print server's homepage, you can type ZPL into a specified location of the Web browser and send it to the printer• <i>IPP</i> — Using third-party IPP clients, print jobs can be sent via the internet• <i>LPR/LPD</i> — Sometimes referred to as queue based printing. LPR/LPD is the standard in network printing. Most TCP/IP operating systems are compatible with this option• <i>Raw socket connection</i> — You can connect to the printer directly via the network, bypassing <i>everything in-between</i>. This option is commonly used to integrate ZPL/EPL into existing programs, such as VB scripts• <i>POP3</i> — With proper configuration, you can place ZPL/EPL files into the body of an email, and it will print. The print server periodically checks this email box at the specified intervals and prints the body of the message. IMPORTANT: attachments and subject line are not supported

Glossary

10BASE-T A type of Ethernet that uses unshielded twisted pair cable.

arp The standard TCP/IP method for determining the actual network address of a device based on its IP address.

ASCII A standard for the binary representation of characters.

BOOTP BOOTP (Bootstrap Protocol) is a protocol that lets a network client configure automatically. It can automatically configure any of the following information: IP address, gateway, subnet, system name, name server, and more. It automatically assigns the necessary settings from a pool of pre-determined addresses for a certain duration of time. BOOTP is the basis for a more advanced network manager protocol, the DHCP (Dynamic Host Configuration Protocol).

broadcast In a network, a situation when all destinations on the network receive a given packet.

client A workstation or PC in a client/server environment.

community For SNMP, a relationship between an agent and a set of SNMP managers that defines security characteristics. The community concept is a local one, defined at the agent. Each community is given a unique community name.

DHCP (Dynamic Host Configuration Protocol) DHCP is an alternative to another network IP management protocol, Bootstrap Protocol (BOOTP). Like BOOTP, DHCP can configure an IP address, gateway, subnet, system name, and name server. When speaking about the PSII, BOOTP, and DHCP configure the same options.

delete bytes This number is used to remove characters from the beginning of every job sent to the logical printer. The value for delete bytes can range from 0 to 255.

dynamic A dynamic configuration, as the name implies, means that it changes. BOOTP and DHCP offer time-based leases for the configurations they assign. Their changes depend on the time-based lease, and how often the printer itself is offline and online again. A dynamic configuration includes BOOTP or DHCP.

EPL Eltron Programming Language.

Ethernet A widely used local area network system based on the IEEE 802.3 standard.

firmware Software routines that are stored in ROM (Read Only Memory). This is typically part of a device, such as a printer or PSII.

FTP File Transfer Protocol, a TCP/IP-related protocol for transferring files between devices on a network.

Flash memory A type of memory that allows read-and-write operations, but permanently stores data when the power is turned off. Useful for storing firmware because it can be easily updated by downloading new code.

gateway A device that converts one higher-level network protocol to a different higher level protocol.

gleaning A temporary, local configuration option. Gleaning lets you add the address of the device you want to configure to your local workstation's arp table. This configuration is not permanent and is valid only from the workstation from which you entered the arp information. After the information is entered into the workstation's arp table, the user follows up with a Telnet session to enter the information permanently. This configuration option is used mostly by non-Windows workstations that cannot run the ZebraNet View configuration utility.

IP Internet Protocol, one of the main protocols of the TCP/IP protocol suite.



IP address A network address used by the TCP/IP protocol.

IPP Internet Printing Protocol. Allows you to associate a printer with a URL address that is used for printing over the Internet.

IPX Internetwork Packet Exchange, one of the NetWare protocols.

JetAdmin A Hewlett-Packard printer management program available for NetWare and TCP/IP.

logical Refers to conceptual rather than physical. For example, a computer might have a single physical connection to the network (an Ethernet adapter card), but could have logical connections to several other devices on the network.

MAC Address Media Access Control. Ethernet address that corresponds to the assigned IP address.

name server A workstation on a TCP/IP network that provides a list of all workstations on the network.

NetWare A network operating system developed by Novell.

node A device connected to a network, such as a computer or print server.

parallel port A port on a device that sends information in groups of bits over multiple wires, one wire for each bit in a group.

ping A TCP/IP command that determines whether a device is accessible on the network.

POP3 Post Office Protocol, the protocol used to retrieve email from the server.

port A physical connector, such as the parallel port, or a logical connection to a device.

post string A string that is sent at the end of every job going to the logical printer. Maximum 64 characters long.

pre string A string that is sent at the beginning of each job that goes to the logical printer. Max 64 characters long.

print server A device in a network that changes a network protocol into a printer protocol.

protocol A method of sending and receiving data between two or more workstations on a network, and insuring that the data is received without errors.

rarp Reverse Arp, a standard TCP/IP method of determining a device's IP address based on its Ethernet address.

raw TCP port A type of TCP port in which data is passed unmodified to the receiving node.

RJ45 A type of modular jack connector similar to a telephone connector with up to eight wires. Used for 10BASE-T Ethernet connections and for serial port connections.

serial port On a printer or print server, a port that transfers data one bit at a time. Serial ports usually have either a 25-pin, 9-pin "D", or RJ45 connector.

server A device on a local area network that provides services to client computers on the network.

SMTP Simple Mail Transfer Protocol, a protocol used to send email messages over the Internet.

SNMP Simple Network Management Protocol, a protocol for monitoring and controlling devices on a network.

spooling In printing applications, spooling is the transfer of data to a temporary storage area on disk (the print queue) prior to printing. Spooling allows many jobs to be queued to a single printer.

static Refers to a static IP address. All information is provided by the network administrator.

subnet mask A TCP/IP method of dividing a network into several smaller subnetworks.

TCP/IP Transmission Control Protocol/Internet Protocol, the de facto standard for Internet communications that is widely used on local area networks.

TCP Port A method of accessing a TCP/IP service, where a device with a single IP address can have multiple TCP ports.



Telnet A TCP/IP protocol that allows two devices to communicate over a LAN.

trap An unsolicited message sent by an SNMP agent to an SNMP management station. It notifies the management station of some unusual event.

UNIX A general-purpose computer operating system used on many different kinds of computers.

WCSO Wireless Card Socket Option. Zebra's wireless Ethernet option.

Windows 95 and Windows 98 Microsoft's PC operating systems that feature built-in peer-to-peer networking.

Windows NT Microsoft's multitasking operating system that can be used either as a client or as a server.

Windows 2000 Microsoft's multitasking operating system that replaces Windows NT; can be used as either as a client or as a server.

ZebraNet PrintServer II An Ethernet connectivity solution.

ZebraLink Allows you to connect and control your bar code printers anywhere and anytime.

ZPL II Zebra Programming Language II is a powerful label-definition and printer-control language.

Index

A

- about this document xi
- address
 - configuration label 37
- alerts
 - establishing email messaging 49
 - monitoring with ZebraNet Alert 51
 - setting 45
 - setting in ZebraLink 47
 - setting in ZebraNet View 45
- assigning an IP address 38
 - from printer LCD 41
 - using gleaning
 - how to 43
 - using static route
 - how to 42
 - with DHCP 38
 - without DHCP 38
 - ZebraNet View 38

B

- before you begin
 - getting started 36
- browser support
 - requirements 6
- BSD-Style

print configuration 76

C

- configuration label 14
 - address 37
 - default gateway 37
 - fields to know 37
 - hardware address 37
 - how to print 36
 - MAC address 37
 - serial number 37
 - subnet mask 37
 - with callouts 14
- configuration setting
 - browser 54
 - with a browser 54
- configuration settings
 - ZebraNet View 53
- contacts
 - mailing address x
 - Web address x

D

- default
 - password 86
 - user ID 86
- default factory settings
 - PSII
 - ZebraNet View 69
- default gateway
 - configuration label 37
 - how to set 41
- default PSII factory settings
 - test button 70
 - with WebView 68

document conventions xiii
caution xiii
command line xiii
example xiv
hot links xiii
illustration callout instruction xiv
important xiii
note xiii, xiv

E

email messaging
alerts 49
external PSII
how to install 12
illustration 12
installation 12

F

factory installation 9
feedback form x
field installation 9
File Transfer Protocol 83
FTP 83

G

gleaning 43

H

hardware
requirements 7

how to install
external PSII 12
internal PSII 16, 21
HP JetAdmin
troubleshooting 136
HP Web JetAdmin
troubleshooting 136

I

illustration
external PSII 12
installation
external PSII 12
internal PSII 16
ZebraNet Utilities 26
ZebraNet View Java Applet 30
installation types 9
factory 9
field 9
internal PSII
how to install 17, 21
installation 16
tools to install 16, 20
IP address
assigning in telnet session 42
how to assign 39
IP address assigning
in a non-Windows environment 41
IPP
support 82
IPX 60

M

MAC address
configuration label 37

N

NetWare

- attach generic text driver 73
- NetWare print configuration 71

O

- overview 2
 - illustration 3
- overview illustration
 - explanation 4

P

- parallel port locations
 - illustration 13
- password
 - default 86
- prerequisites
 - System V 78
- print configuration
 - BSD-Style 76
 - System V 78
- print problems
 - troubleshooting 135
- print protocol
 - Internet printing protocol 82
 - IPP 82
- printing
 - configuration label 36
 - PServer mode 72
- protocols
 - how to enable with WebView 62
 - how to enable with ZebraNet View 65
- PServer mode
 - printing 72
- PSII
 - settings 57
 - specifications 10

PSII settings

- how to access 86

R

- related documents xv
- requirements
 - browser support 6
 - hardware 7
 - software 6
- resetting to factory defaults
 - troubleshooting 134

S

- serial number
 - configuration label 37
- setup PSII port
 - Windows 95/98 59
- software
 - requirements 6
- software license agreement ii
- specifications 10
- static route 42
- status indicator
 - troubleshooting 134
- subnet mask
 - configuration label 37
 - how to set 40
- System V
 - prerequisites 78
 - print configuration 78
 - UNIX configuration 78

T

- test button
 - default PSII factory settings 70

troubleshooting
 HP JetAdmin 136
 HP Web JetAdmin 136
 resetting to factory defaults 134
 status indicator 134
 unable to configure device 136
 unable to print 135
 ZebraNet View Utility 135

U

unable to configure device
 troubleshooting 136
user ID
 default 86

W

warranty i
 exclusions and conditions ii
 PSII i
 software license agreement ii
WebView
 default PSII factory settings 68
 directory listing 109

home page 100
how to enable protocols 62
printer configuration 101
view and modify printer settings 103
Windows 95/98
 setup PSII port 59

Z

ZebraLink
 setting alerts 47
ZebraNet Alerts
 monitoring alerts 51
ZebraNet Connect IP 58
 Windows NT 4.0 / Windows 2000 58
ZebraNet Utilities
 how to install 26
 installation 26
ZebraNet View
 configuration settings 53
 how to enable protocols 65
 PSII
 default factory settings 69
 setting alerts 45
ZebraNet View Java Applet
 how to install 30
 installation 30



Zebra Technologies Corporation

333 Corporate Woods Parkway
Vernon Hills, Illinois 60061.3109 U.S.A.
Telephone: +1 847.634.6700
Facsimile: +1 847.913.8766

Zebra Technologies Europe Limited

Zebra House
The Valley Centre, Gordon Road
High Wycombe
Buckinghamshire HP13 6EQ, UK
Telephone: +44 (0) 1494 472872
Facsimile: +44 (0) 1494 450103

Part Number: 45537L-002 Rev. A