

**SAMSUNG**

# **SyncMaster 755DFG Color Monitor**



**Owner's  
Instructions**

**Information in this document is subject to change without notice.  
© 2000 Samsung Electronics Co., Ltd. All rights reserved.**

Reproduction in any manner whatsoever without the written permission of Samsung Electronics Co., Ltd. is strictly forbidden.

Samsung Electronics Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

The *Samsung logo* and *SyncMaster* are registered trademarks of Samsung Electronics Co., Ltd.; *Microsoft*, *Windows*<sup>®</sup> and *Windows*<sup>®</sup> *NT* are registered trademarks of Microsoft Corporation; *VESA*, *DPMS* and *DDC* are registered trademarks of Video Electronics Standard Association; the *ENERGY STAR* name and logo are registered trademarks of the U.S. Environmental Protection Agency (EPA). As an ENERGY STAR Partner, Samsung Electronics Co., Ltd. has determined that this product meets the ENERGY STAR guidelines for energy efficiency. All other product names mentioned herein may be the trademarks or registered trademarks of their respective owners.



# Table of Contents

---

|                                    |                   |
|------------------------------------|-------------------|
| Safety Instructions                | 2                 |
| Unpacking Your Monitor             | 3                 |
| Your New Monitor                   | 4                 |
| Speaker Assembly                   | 4                 |
| Connecting Your Monitor & Speakers | 5                 |
| Control Viewing Angle              | 6                 |
| Multimedia Speakers                | 7                 |
| Front Panel                        | 8                 |
| Direct Access Buttons              | 9                 |
| Operation                          | 10                |
| On Screen Display (OSD)            | 10                |
| Monitor function control           | 11                |
| Brightness                         | 11                |
| Contrast                           | 11                |
| Horizontal Position                | 11                |
| Vertical Position                  | 11                |
| Horizontal Size                    | 11                |
| Vertical Size                      | 11                |
| Pincushion                         | 12                |
| Geometry                           | 12                |
| Trapezoid                          | 12                |
| Parallelogram                      | 12                |
| Rotation                           | 12                |
| Pinbalance                         | 12                |
| V-Linearity                        | 12                |
| Language                           | 13                |
| Advanced                           | 13                |
| H- Moiré                           | 13                |
| V- Moiré                           | 13                |
| Video Input Level                  | 13                |
| Color Temperature                  | 13                |
| Halftone                           | 13                |
| Zoom                               | 13                |
| Video control                      | 14                |
| Contrast                           | 14                |
| Brightness                         | 14                |
| Sharpness                          | 14                |
| Color                              | 14                |
| Tint                               | 14                |
| Degauss                            | 14                |
| Recall                             | 14                |
| Display Timing                     | 14                |
| Troubleshooting                    | 15                |
| PowerSaver                         | 16                |
| Display Modes                      | 16                |
| Specifications                     | 17                |
| Index                              | 18                |
| Regulatory Information             | inside back cover |

# Safety Instructions

- 1** Before connecting the AC power cord to an outlet, make sure the voltage designation on your monitor corresponds to the local electrical supply.
- 2** Never insert anything metallic into the monitor openings. Doing so may create the danger of electric shock.
- 3** To avoid electric shock, never touch the inside of the monitor. Only a qualified technician should open the monitor's case.
- 4** Never use your monitor if the power cord has been damaged. Do not allow anything to rest on the power cord, and keep the cord away from areas where people can trip over it.
- 5** Be sure to hold the plug, not the cord, when disconnecting the monitor from an electric socket.
- 6** Openings in the monitor cabinet are provided for ventilation. To prevent overheating, these openings should not be blocked or covered. Also, avoid using the monitor on a bed, sofa, rug, or other soft surface. Doing so may block the ventilation openings in the bottom of the cabinet. If you put the monitor in a bookcase or some other enclosed space, be sure to provide adequate ventilation.
- 7** Put your monitor in a location with low humidity and a minimum of dust.
- 8** Do not expose the monitor to rain or use it near water (in kitchens, near swimming pools, etc.). If the monitor accidentally gets wet, unplug it and contact an authorized dealer immediately. You can clean the monitor with a damp cloth when necessary, but be sure to unplug the monitor first.
- 9** Place the monitor on a solid surface and treat it carefully. The screen is made of glass and can be damaged if dropped, hit or scratched.
- 10** Locate your monitor near an easily accessible AC outlet.
- 11** If your monitor does not operate normally – in particular, if there are any unusual sounds or smells coming from it – unplug it immediately and contact an authorized dealer or service center.
- 12** High temperatures can cause problems. Don't use your monitor in direct sunlight, and keep it away from heaters, stoves, fireplaces, and other sources of heat.
- 13** Unplug the monitor when it is going to be left unused for an extended period of time.
- 14** Unplug your monitor from the AC outlet before any service.

|   |   |   |
|---|---|---|
|    | <b>CAUTION</b><br>RISK OF ELECTRIC SHOCK<br>DO NOT OPEN |  |
| <b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK,<br>DO NOT REMOVE COVER (OR BACK).<br>NO USER-SERVICEABLE PARTS INSIDE.<br>REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. |   |   |


# Unpacking Your Monitor

---

Please make sure the following items are included with your monitor. If any items are missing, contact your dealer.



Monitor

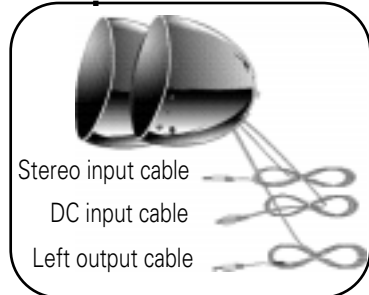

Speaker Assembly



Manual




Warranty Card  
(Not available in all locations)



Driver Installation Diskette  
(Not available in all locations)



Stand Feet




Power Cord



Stereo-Stereo Cable

# Your New Monitor


## Speaker Assembly

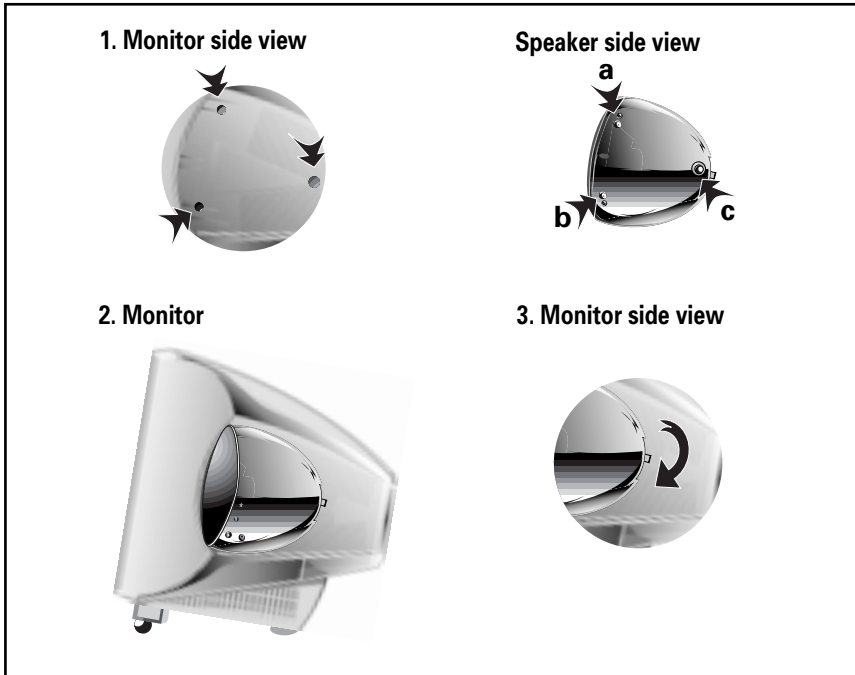

- 1** Prepare left and right speakers for each side of the monitor.  
(Note: Left and right speakers are not identical.)
- 2** Install the two retainers ( a , b ) at the two front-most holes on left and right side of the monitor and then put a third retainer ( c ) in the rear-most hole on left and right side of the monitor.
- 3** Verify proper speakers fit and then lock the speakers onto both sides of the monitor by pushing down on the rear lever.
- 4** When disassembling, lift the lever up and take the speakers off the monitor.

# Your New Monitor

## Connecting Your Monitor & Speakers

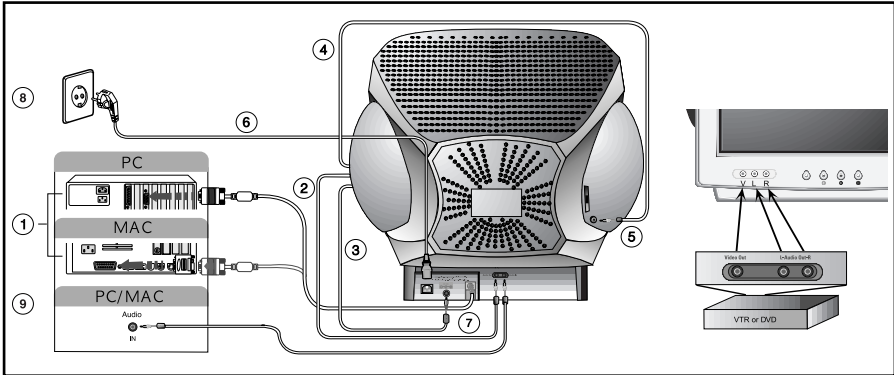

**Caution :** Turn the power off to the monitor, computer and speakers before connecting or disconnecting the speakers.

### 1 Signal cable

Connect the end of the signal cable to your computer's video port. If you are using a Macintosh computer, connect the cable to a Macintosh adapter, and set the pins on your adapter (adapter not included). A PC-compatible computer does not need an adapter.

### 2 Stereo cable

Connect the stereo cable to the audio output port on the back of your monitor.

### 3 DC input cable

Connect this cable to DC output port on the back of your monitor.

### 4 Left output cable

Connect this cable to L- input port on the back of the left side speaker.

### 5 L-input port

Connect the left output cable from right speaker here.

### 6 Power port

Connect the power cord for your monitor to the power port on the back of the monitor.

### 7 DC output port

Connect DC input cable here.

### 8 Power cords

Plug the power cord for the monitor and the power cord for your computer into a nearby outlet.

### 9 Stereo- Stereo cable

Connect the stereo-stereo cable to the sound card on the your computer.

### 10 Turn on your computer and monitor.

If your monitor displays an image, installation is complete.


### 11 Install the monitor driver

- Insert the provided diskette into the A drive.
- Double click the "install.exe" file.

# Your New Monitor

---

## Control Viewing Angle

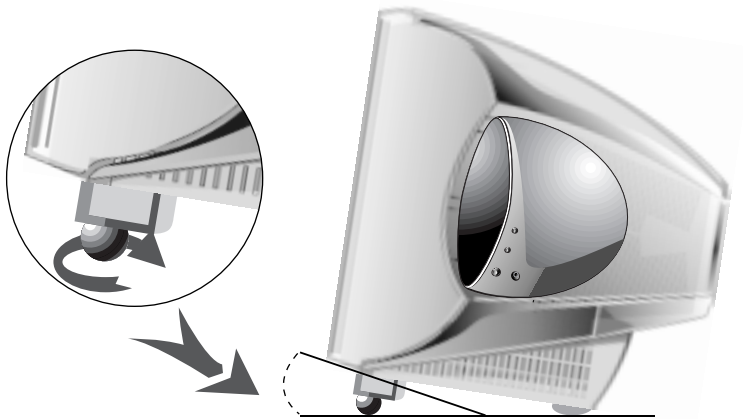

Control the viewing angle to allow the user optimum viewing. (This monitor can tilt up and down from 4 to 11 degrees.)

### Control

- 1** Turn the stand feet underneath the monitor to control viewing angle. Refer to the illustrations above.
- 2** Turn left to lower viewing angle and turn right to raise viewing angle.



# Your New Monitor

---

## Multimedia Speakers



### Right Speaker

**1**

#### Power button

Push the power button to turn sound on/off for the multimedia speakers.

**2**

#### BBS button

Push the BBS (Bass Boost Sound) button to amplify a specific frequency band for audio. (The BBS purpose is to amplify 6-8 dB at 100 Hz band. Therefore, the amplification provided by the BBS is dependant on input signal.)

**3**

#### Volume

Use this button to control the sound volume when speakers are on.

**4**

#### Headphone port

To listen in privacy, connect headphones here.

**5**

#### Stereo input cable

**6**

#### DC input cable

**7**

#### Left output cable



### Left Speaker


**8**








#### L - input port

Connect the left output cable from right speaker here.

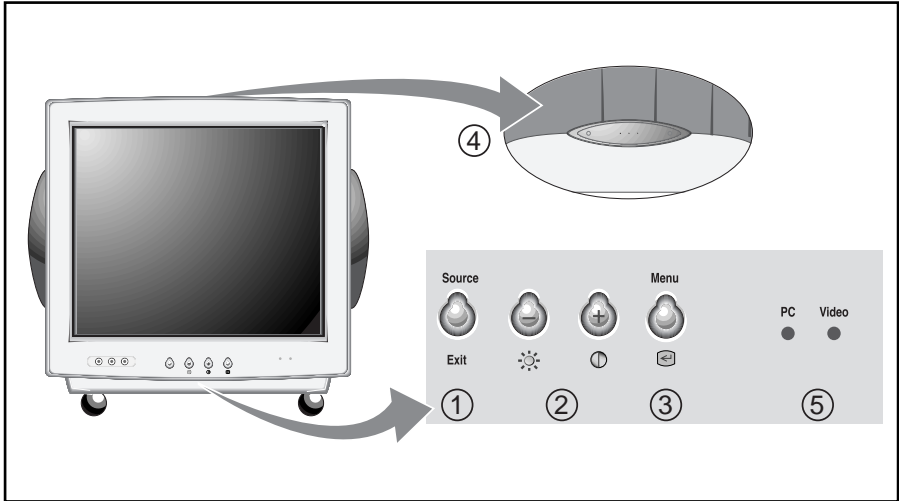

# Your New Monitor

## Front Panel




- 1 Exit / Source (  ) button**  
**[Exit]**  
Closes the OSD.  
It is also used to return to the previous menu when using the OSD.  
**[Source]**  
With the menu off, selects PC or Video source. Two source indicator LEDs on the right of the control button indicate currently active PC or Video source.
- 2 The  /  (  /  ) buttons**  
These buttons allow you to select and adjust items using the OSD. When adjusting an item using the OSD, the  button lowers the value of the selected function. The  button raises the value of the selected function. These buttons are

also direct access buttons for the Contrast and Brightness feature controls. (See the section below on Direct Access Buttons.)



- 3 Menu (  ) button**  
Opens the OSD. It is also used to select a highlighted function, open a sub-menu, or move between menus when using the OSD.
- 4 Power button **  
The power button turns the monitor on and off. The power indicator light glows green during normal operation, see page 16.

# Your New Monitor
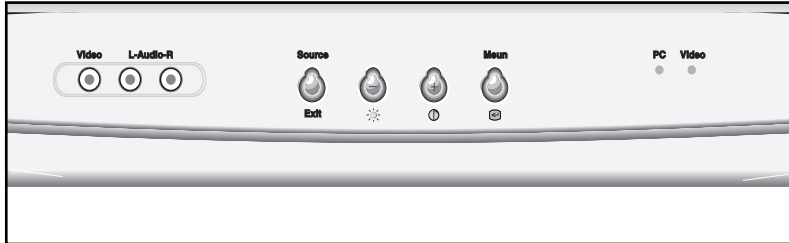
## Direct Access Buttons
















Most of the adjustments you make to your monitor will be accessed through the OSD described in the next section. The Contrast and Brightness features can also be accessed directly from the front of your monitor.


- 1** With the menu off, press the ☀ or ● button on the front of your monitor. The ☀ button accesses the Brightness feature. The ● button accesses the Contrast feature.
- 2** Push the ⊕ button to increase or the ⊖ button to decrease the value of the selection.
- 3** Press the Exit button  twice to exit the OSD.
- 4** With the menu off, press the Source button  to select PC or Video.

# Operation

## On Screen Display (OSD)

Your monitor has an OSD, accessed by the buttons on the front of your monitor, that allows you to adjust characteristics of the screen image. Display changes are indicated by on-screen adjustment icons. Some functions have sub-menus.

- 1** Push the menu button  to display the main menu. Function icons are arranged across the top of the OSD.
- 2** Push the  or  button to move through the icons. The name of the function will appear below the rows of function icons.
- 3** To select a function or open a sub-menu, push the  button. The screen will display the options for adjustment. If there is a sub-menu, use the  or  button to highlight the feature you want to adjust, then push the  button to select it.
- 4** Use the  and  buttons to make adjustments.  increases values and  decreases values. On-screen calibration numbers show the effect of your adjustment. If you are in a sub-menu, use the Exit button  to return to the previous menu.
- 5** Push the Exit button  to exit and save your changes

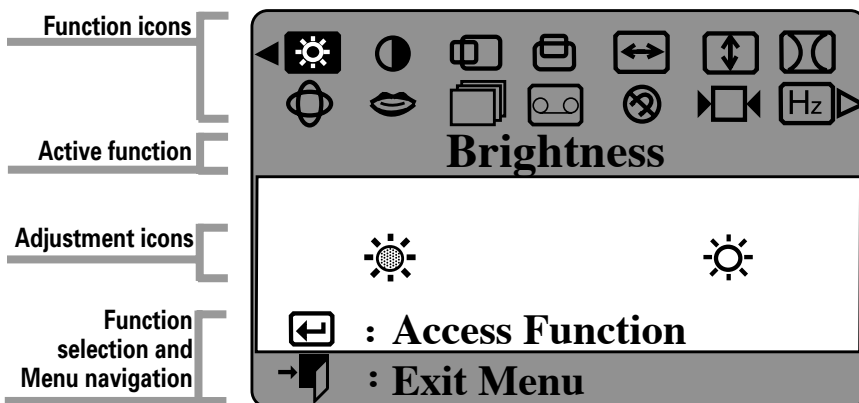

# Operation

## Icon Monitor Function Control



### Brightness

- Background brightness of screen.
- Decreases brightness
  - + Increases brightness

### Brightness



### Contrast

- Contrast of screen image.
- Decreases contrast
  - + Increases contrast

### Contrast



### Horizontal Position

- Horizontal screen position.
- Moves screen left
  - + Moves screen right

### H-Position



### Vertical Position

- Vertical screen position.
- Moves screen down
  - + Moves screen up


### V-Position



### Horizontal Size

- Horizontal screen size.
- Decreases size
  - + Increases size


### H-Size



### Vertical Size

- Vertical screen size.
- Decreases size
  - + Increases size

### V-Size



# Operation

## Icon Monitor Function Control



### Pincushion

- Straightens screen vertical edges.
- Curves image inward
  - + Curves image outward

### Pincushion



### Geometry



#### Trapezoid

- Width of top and bottom of screen.
- Widens bottom of screen
  - + Widens top of screen



#### Parallelogram

- Skews screen image left
- + Skews screen image right



#### Rotation

- Rotates entire screen left
- + Rotates entire screen right



#### Pinbalance

- Curves vertical lines to left
- + Curves vertical lines to right




#### V-Linearity


- Compresses image at top of screen
- + Compresses image at bottom of screen

### Geometry

1.



2.

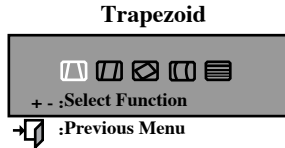

# Operation


## Icon Monitor Function Control



### Language

- and + scroll through on-screen language options.  
(English/ Deutsch/ Français/ Italiano  
Português/ Español/ Svenska/ Korean  
(한글))

### Language

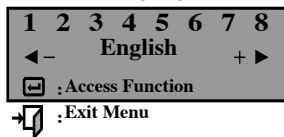

### Advanced



#### H- Moiré

Corrects for on-screen moiré pattern.  
- and + clear Horizontal Moiré

1.

### Advanced



#### V- Moiré

Corrects for on-screen moiré pattern.  
- and + clear Vertical Moiré

2.

### H-Moiré



#### Video Input Level

Selects the video signal level  
- Select 0.7 V  
+ Select 1.0 V



#### Color Temperature

- 9300k more blue  
+ 6500k more red



#### Halftone

- Off  
+ On



#### Zoom

- Reduces view of display area  
+ Enlarges view of display area

# Operation

## Icon Monitor Function Control



### Video control



#### Contrast

Adjust the contrast of video without affecting PC RGB's contrast.



#### Brightness

Adjust the brightness of video without affecting PC RGB's brightness.



#### Sharpness

Adjust the sharpness of video image.



#### Color

Change the richness of color.



#### Tint

Change the tone of color.



### Degauss

Removes color distortion caused by magnetic fields. Do not use more than once in 30 minutes.

### Degauss



### Recall

Returns monitor to original settings.  
- No  
+ Yes


### Recall



### Display Timing

Monitor display settings.  
- Factory timing  
+ User timing

### Display Timing





# Troubleshooting

---

Before calling for service, check the information in this section to see if you can solve the problem yourself. If you do need assistance, please call the phone number on the warranty card, the phone number on the back cover of this manual, or contact your dealer.

## **There is no screen image**

- Check to see that both the monitor and the computer are plugged in and turned on.

## **“No Connection, Check Signal Cable” appears**

- Check the signal cable connection between the computer and the monitor.

## **“Sync. Out of Range” appears**

- The input signal frequency is over or under the synchronization range of the monitor, see “Specifications” on page 17.

## **The screen image is too light or too dark**

- Adjust the brightness or contrast settings, see page 11.

## **The screen image is too large or too small**

- Adjust the size settings, see H-size and V-Size on page 11.
- Adjust the Zoom setting, see page 13.

## **The colors are distorted with dark or shadowed areas**

- Activate the degauss feature, see page 14.
- Adjust the color temperature, see page 13.

## **The power indicator light is blinking green**

- The monitor is using its power management system, see “PowerSaver” on page 16.

## **You need the monitor driver software**

- Download the driver from the internet at  
<http://www.samsung-monitor.com>  
<http://www.samsungmonitor.com>(USA only)

# PowerSaver

This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal operation when you move the computer's mouse or press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPMS compliant video card installed in your computer. Use a software utility installed on your computer to set up this feature.

| State             | Normal Operation                  | Power-off Mode (EPA/ENERGY 2000)  |
|-------------------|-----------------------------------|-----------------------------------|
| PowerIndicator    | Green                             | Green, Blinking (1 sec. interval) |
| Power Consumption | 100 W (Maximum)<br>90 W (Nominal) | Less than 3 W                     |

**NOTE:** This monitor is EPA ENERGY STAR® compliant and ENERGY 2000 compliant when used with a computer equipped with VESA DPMS functionality.

## Display Modes

| Display Mode         | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Pixel Clock (MHz) | Sync. Polarity (H/V) |
|----------------------|----------------------------|-------------------------|-------------------|----------------------|
| IBM, VGA2, 720 x 400 | 31.469                     | 70.087                  | 28.322            | -/+                  |
| IBM, VGA3, 640 x 480 | 31.469                     | 59.940                  | 25.175            | -/-                  |
| VESA, 640 x 480      | 43.269                     | 85.008                  | 36.000            | -/-                  |
| VESA, 800 x 600      | 46.875                     | 75.000                  | 49.500            | +/+                  |
| VESA, 800 x 600      | 53.674                     | 85.061                  | 56.250            | +/+                  |
| VESA, 1024 x 768     | 60.023                     | 75.029                  | 78.750            | +/+                  |
| VESA, 1024 x 768     | 68.677                     | 84.997                  | 94.500            | +/+                  |
| VESA, 1280 x 1024    | 79.976                     | 75.025                  | 135.00            | +/+                  |

# Specifications

| Specifications               | Model: SyncMaster 755DFG   |
|------------------------------|--|
| Picture Tube                 | <ul style="list-style-type: none"> <li>• 17" (43 cm) DynaFlat [16" (40.6 cm) Viewable]</li> <li>• 90° Deflection</li> <li>• Dot pitch: 0.20 mm (H) / 0.14 mm (V)</li> <li>• Silica coated with anti-electrostatic properties (TCO: Multilayer coating)</li> <li>• Medium-short persistence phosphor</li> </ul>   |
| Synchronization              | <ul style="list-style-type: none"> <li>• Horizontal: 30 kHz to 85 kHz</li> <li>• Vertical: 50 Hz to 160 Hz</li> </ul>  |
| Display Color                | <ul style="list-style-type: none"> <li>• Unlimited</li> </ul>  |
| Maximum Resolution           | <ul style="list-style-type: none"> <li>• 1600 Dots x 1200 Lines</li> </ul>   |
| Active Display               | <ul style="list-style-type: none"> <li>• Horizontal: 12.3 ± 0.16 inch (312.0 ± 4 mm)</li> <li>• Vertical: 9.2 ± 0.16 inch (234.0 ± 4 mm)</li> </ul>  |
| Input Signal, Terminated     | <ul style="list-style-type: none"> <li>• Analog: 0.7 Vpp positive at 75 ohms</li> <li>• Separate Sync.: TTL level, positive or negative</li> </ul>   |
| Maximum Pixel Clock          | <ul style="list-style-type: none"> <li>• 135 MHz</li> </ul>  |
| Video signal                 | <ul style="list-style-type: none"> <li>• 1.0 Vpp, 75 Ω, NTSC/ PAL/ SECAM</li> </ul>  |
| Audio signal                 | <ul style="list-style-type: none"> <li>• 500 mVrms over than 47 kΩ</li> </ul>  |
| Power Supply                 | <ul style="list-style-type: none"> <li>• AC 100-240 V ± 10%, 60 Hz / 50 Hz ± 3 Hz</li> </ul>   |
| Power Consumption            | <ul style="list-style-type: none"> <li>• 100 W maximum</li> </ul>  |
| Dimensions/Weight (WxDxH)    | <ul style="list-style-type: none"> <li>• Unit (Without Speakers): 16.53 x 16.81 x 15.04 inch / 37.5 lbs. (420 x 427 x 382 mm / 17.0 kg) (Without feet)</li> <li>• (With Speakers): 20.19 x 16.81 x 15.04 inch / 39.7 lbs. (513 x 427 x 382 mm / 18.0 kg)</li> <li>• Carton (With Speakers): 20.19 x 22.51 x 21.02 inch / 46.3 lbs. (513 x 572 x 534 mm / 21.0 kg)</li> </ul> |
| Tilt                         | <ul style="list-style-type: none"> <li>• Min: 4°</li> <li>• Max: 11°</li> </ul>  |
| Environmental Considerations | <ul style="list-style-type: none"> <li>• Operating temperature: 32°F to 104°F (0°C to 40°C)</li> <li>• Humidity: 10% to 80%</li> <li>• Storage temperature: -4°F to 113°F (-20°C to 45°C)</li> <li>• Humidity: 5% to 95%</li> </ul>  |

*Design and specifications are subject to change without notice.*

# Index

---

## A

Access, 9  
Advanced, 13

## B

Brightness, 8, 11,14

## C

Color, 14  
Color temperature, 13  
Connecting your monitor & Speakers, 5  
Contrast, 8, 11,14

## D

Degauss, 14  
Dimension, 17  
Display modes, 16  
Display timing, 14  
Driver software, 15

## F

Frequency, 16  
Front panel, 8

## G

Geometry, 12

## H

Halftone, 13  
H- Moiré, 13  
Horizontal position, 11  
Horizontal size, 11  
Humidity, 17

## I

Install, 5

## L

Language, 13

## M

Menu, 8  
Monitor function control, 11, 12, 13,14

## O

Operation, 10, 11, 12, 13, 14  
On Screen Display, 10

## P

Parallelogram, 12  
Pinbalance, 12  
Pincushion, 12  
Picture tube, 17  
Power button , 8  
Power consumption, 16, 17  
Power cord, 5  
Power port, 5  
Power Saver, 16

## R

Recall, 14  
Resolution, 17  
Rotation, 12

## S

Sharpness, 14  
Speaker, 4, 7  
Specification, 17  
Synchronization, 17

## T

Temperature, 17  
Tilt, 6, 17  
Tint, 14  
Trapezoid, 12  
Troubleshooting, 15

## V

Vertical position, 11  
Vertical size, 11  
Video control, 14  
Video input level, 13  
Viewing angle, 4  
V-linearity, 12  
V- Moiré, 13

## W

Weight, 17

## Z

Zoom, 13

# Regulatory Information

---

## FCC Information

### User Instructions

The Federal Communications Commission Radio Frequency Interference Statement includes the following warning:

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### User Information

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If necessary, consult your dealer or an experienced radio/television technician for additional suggestions. You may find the booklet called How to Identify and Resolve Radio/TV Interference Problems helpful. This booklet was prepared by the Federal Communications Commission. It is available from the U.S. Government Printing Office, Washington, DC 20402, Stock Number 004-000-00345-4.

### Warning

User must use shielded signal interface cables to maintain FCC compliance for the product.

### Declaration of conformity for products Marked with FCC Logo

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The party responsible for product compliance:

SAMSUNG ELECTRONICS CO., LTD

America QA Lab of Samsung

85 West Tasman Drive

San Jose, CA 95134 USA

Tel) 408-544-5124

Fax) 408-544-5191

Provided with this monitor is a detachable power supply cord with IEC320 style terminations. It may be suitable for connection to any UL Listed personal computer with similar configuration. Before making the connection, make sure the voltage rating of the computer convenience outlet is the same as the monitor and that the ampere rating of the computer convenience outlet is equal to or exceeds the monitor voltage rating.

For 120 Volt applications, use only UL Listed detachable power cord with NEMA configuration 5-15P type (parallel blades) plug cap. For 240 Volt applications use only UL Listed Detachable power supply cord with NEMA configuration 6-15P type (tandem blades) plug cap.

## IC Compliance Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations of ICES-003.

Cet appareil Numérique de classe B respecte toutes les exigences du Règlement ICES-003 sur les équipements produisant des interférences au Canada.

## MPR II Compliance

This monitor complies with SWEDAC(MPR II) recommendations for reduced electric and magnetic fields.

## European Notice

Products with the CE Marking comply with both the EMC Directive (89/336/EEC), (92/31/EEC), (93/68/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms:

- EN55022:1998 – Radio Frequency Interference
- EN55024:1998 – Electromagnetic Immunity
- EN61000-3-2:1995 + A1 + A2 – Power Line Harmonics
- EN61000-3-3:1995 – Voltage Fluctuations
- EN60950 – Product Safety.

**U.S.A.:**

Samsung Electronics America (SEA)  
 One Samsung Place  
 Ledgewood, NJ 07852  
 Tel.: 1-800-SAMSUNG (1-800-726-7864)

**CANADA:**

Samsung Electronics Canada Inc.  
 7037 Financial Drive  
 Mississauga, Ontario L5N 6R3  
 Tel.: 1-800-SAMSUNG (1-800-726-7864)  
 Fax.: (905) 542-1199

**GERMANY:**

Samsung Electronics GmbH  
 Samsung-Haus, Am Kronberger Hang 6  
 65824 Schwalbach/Ts.  
 Tel. 49 (0180) 5121213 \*  
 Fax. 49 (0180) 5121214 \*  
 \*DM 0,24/Min.

**AUSTRALIA:**

Samsung Electronics Australia Pty Ltd.  
 Unit G, 10-16 South Street,  
 Rydalmere, N.S.W. 2116  
 P.O. BOX 368  
 Tel.: (02) 638 5200

**ITALIA:**

Samsung Electronics Italia SpA  
 Via C. Donat Cattin,  
 5-20063 Cernusco sul Naviglio (Mi)  
 Tel.: 167-010740

**PANAMA:**

Servicios Samsung (Zona Libre), S.A.  
 50 and 61 Streets Sta, Cecilia  
 Bdl. Don Camilo, Panama City  
 Tel.: (507) 264-0195 or 269-5571  
 Fax: (507) 269-5568

**MEXICO:**

Samsung Electronics Mexico S.A. de C.V.  
 Saturno 44 Col. Nva. Industrial Vallejo  
 Del. Gustavo A. Madero C.P. 07700  
 Mexico D.F. Tel. 5747-5100  
 RFC: SEM950215S98

**ESPAÑA:**

Samsung Electrónica Comercial Ibérica, S.A. Ciencies, 55-  
 65 (Polígono Pedrosa) 08908 Hospitalet de Llobregat  
 (Barcelona)  
 Tel.: (93) 261 67 00  
 Fax.: (93) 261 67 50

**UK:**

Samsung Electronics (UK) Ltd.  
 Samsung House, 225 Hook Rise South  
 Surbiton, Surrey KT6 7LD  
 Tel.: (0181) 391 0168  
 Fax.: (0181) 397 9949  
 <European Service Center & National Service>  
 Stafford Park 12 Telford, Shropshire, TF3 3BJ  
 Tel.: (01952) 292 262  
 Fax.: (01952) 292 033

**THAILAND:**

Samsung Service Center  
 729-729/1 JSP Tower Rachadapisek RD.,  
 Bangpongpan, Yannawa, Bangkok 10120  
 Tel: (662) 2954508-14  
 Fax: (662) 2954267

**SOUTH AFRICA:**

Samsung Electronics South Africa  
 Somerset Office Park 5 Libertas Road  
 Bryanston, South Africa  
 Tel: (27)-11-463-5678  
 Fax: (27)-11-463-5215

**BRASIL:**

Samsung Eletrônica da Amazonia Ltda.  
 R. Prof. Manoelito de Ornellas, 303-2º Andar  
 Chácara Sto. Antônio • cep: 04719-040  
 São Paulo • SP  
 Tel.: (011) 541-8500  
 Fax: (011) 523-3995, 522-0726

**SWEDEN:**

Samsung Electronics Svenska, AB  
 Box 713, S-194 27 Upplands Vasby  
 Tel: (468) 590-966-00  
 Fax: (468) 590-966-50

IMPORTADO POR: SAMSUNG ELECTRONICS MEXICO S.A. DE C.V.  
 SATURNO 44 COL. NVA. INDUSTRIAL VALLEJO  
 DEL. GUSTAVO A. MADERO C.P. 07700  
 MEXICO D.F. TEL. 5747-5100  
 RFC: SEM950215S98  
 EXPORTADO POR: SAMSUNG ELECTRONICS CO.,LTD.  
 JOONG-ANG DAILY NEWS BLDG.  
 7 SOON-WHA-DONG CHUNG-KU,  
 C.P.O BOX 2775, 1144 SEOUL, KOREA



"As an ENERGYSTAR® Partner, SAMSUNG has determined that this product meets the ENERGYSTAR® guidelines for energy efficiency."

P/N : BH68-00420A-00



Printed on recyclable paper