


5222/5227

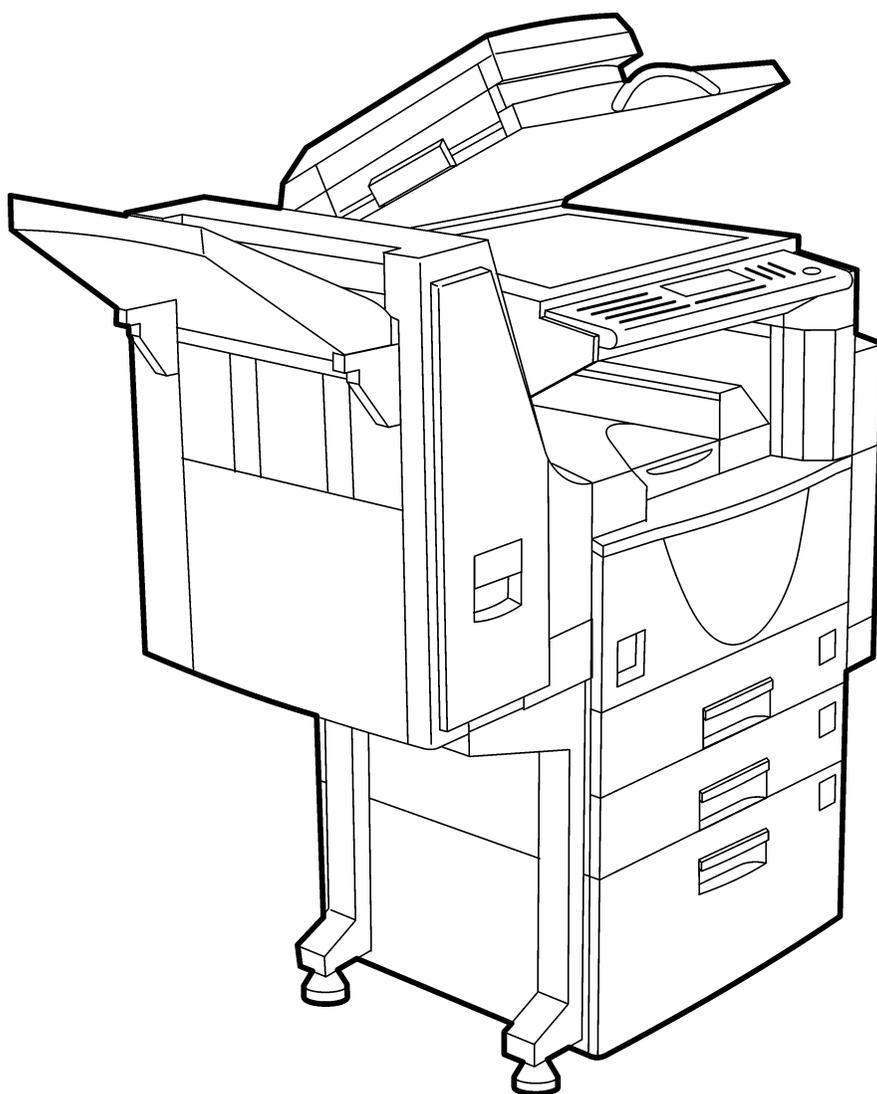

Printer

When ordering supplies or requesting service for your copier, you will need to provide the model and serial number of your machine.

Please take a moment to enter your model and serial numbers here.

MODEL NUMBER: _____

SERIAL NUMBER: _____

To order supplies, call: () _____

To request service, call: () _____

Information Statement:

Layout and contents of this document are based on the information available at the time of this CD-ROM production.



Customer Vision® -
Our commitment to your
complete satisfaction

Important:

Please read and understand this manual prior to using it. Pay special attention to the Safety Information. Parts of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Trademarks:

Microsoft™, Windows™, and MS-DOS™ are registered trademarks of Microsoft Corporation.

PostScript™ is a registered trademark of Adobe Systems Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those areas.



As an Energy Star Partner, Lanier Worldwide, Inc. has determined that this product meets the Energy Star guidelines for energy efficiency.

Table of Contents

Introduction

Connecting to the Printer	1-1
Printer Requirements	1-1
Connecting the Printer to the Host Using Parallel Interface Cable	1-2
Connecting the Printer Using the Network Interface Board 185	1-3
Printer Drivers for this Printer	1-6
Operation Panel	1-8
Message Display	1-9
Online and Offline	1-10

Printer Configuration

Configuring the Printer for the Network	2-1
---	-----

Installing Printer Driver

Auto Run	3-1
Installing by Auto Run	3-1
Software and Utilities Included on the CD-ROM	3-3
Installing the PCL 6/5e Printer Driver	3-4
Windows 95/98 - Installing the PCL 6/5e Printer Driver	3-4
Windows NT 4.0 - Installing the PCL 6/5e Printer Driver	3-5
Windows 3.1x - Installing the PCL 6/5e Printer Driver	3-6
Installing the PostScript Printer Driver	3-8
Windows 95/98 - Installing the PostScript Printer Driver	3-8
Windows NT 4.0 - Installing the PostScript Printer Driver	3-8
Windows 3.1x - Installing the PostScript Printer Driver	3-9
Using Adobe PageMaker Version 6.0 or 6.5	3-11
Macintosh	3-12
Macintosh - Installing the PostScript Printer Driver	3-12
Setting Up the PPD File	3-13
Setting Up Options	3-13

Uninstalling the Printer Driver

Uninstalling the PCL 6/5e Printer Driver	4-1
Windows 95/98 - Uninstalling the PCL 6/5e Printer Driver	4-1
Windows NT 4.0 - Uninstalling the PCL 6/5e Printer Driver	4-1
Windows 3.1x - Uninstalling the PCL 6/5e Printer Driver	4-2
Uninstalling the PostScript Printer Driver	4-3
Windows 95/98 - Uninstalling the PostScript Printer Driver	4-3
Windows NT 4.0 - Uninstalling the PostScript Printer Driver	4-3
Windows 3.1x - Uninstalling the PostScript Printer Driver	4-4
Macintosh - Uninstalling the PostScript Printer Driver	4-4

Setting Up Printer Driver

PCL 6/5e - Accessing the Printer Properties	5-1
Windows 95/98 - Accessing the Printer Properties	5-1
Windows NT 4.0 - Accessing the Printer Properties	5-2

Windows 3.1x - Accessing the Printer Setting Dialog Box	5-3
PostScript - Setting Up for Printing	5-5
Windows 95/98 - Accessing the Printer Properties	5-5
Windows NT 4.0 - Accessing the Printer Properties	5-6
Windows 3.1x - Accessing the Printer Setting Dialog Box	5-7
Macintosh - Setting Up for Printing	5-9
Canceling a Print Job	5-10
Windows 95/98 - Canceling a Print Job	5-10
Windows NT 4.0 - Canceling a Print Job	5-10
Windows 3.1x - Canceling a Print Job	5-11
Macintosh - Canceling a Print Job	5-12

Troubleshooting

Error and Status Messages	6-1
Error and Status Messages on the Message Display Panel	6-1
Getting Printer Information over the Network	6-5
Printer Does Not Print	6-11
Additional Printing Problems	6-14

Using the Control Panel

Adjusting Printer Features	7-1
Printer Features Menu	7-1
Accessing the Main Menu	7-4
Making Printer Settings with the Operation Panel	7-5
Proof Print Menu	7-6
Proof Print Parameters	7-6
Job Control Menu	7-7
Job Control Parameters	7-7
Network Setup Menu	7-10
Maintenance Menu	7-11
Maintenance Parameters	7-11
List Print Menu	7-12
List Print Parameters	7-12
Specifying the Custom Paper Size for the Bypass Tray	7-13
Printer Condition	7-15
Printing with the Operation Panel	7-16
Using the Proof Print	7-16

PostScript3 Kit Type 185

Installable Options	8-1
Setting Up Options	8-1
Printing a Document	8-3
Collate, Staple, Print Mode	8-6
Proof Print	8-8

Specifications

Specifications	9-1
Memory Capacity and Printer Function	9-2
Agency Certifications	9-3

Index

Index of Scanner Topics	I-1
-------------------------------	-----

Warranty

New Machine Warranty and Limitation of Liability	inside back cover
--	-------------------

Introduction


Chapter Overview

This Chapter covers:

- “Printer Requirements” on page 1-1
- “Connecting the Printer to the Host Using Parallel Interface Cable” on page 1-2
- “Connecting the Printer Using the Network Interface Board 185” on page 1-3
- “Printer Drivers for this Printer” on page 1-6
- “Message Display” on page 1-9

Connecting to the Printer

Confirm that the shape and the position of the connector are as shown in the illustration.

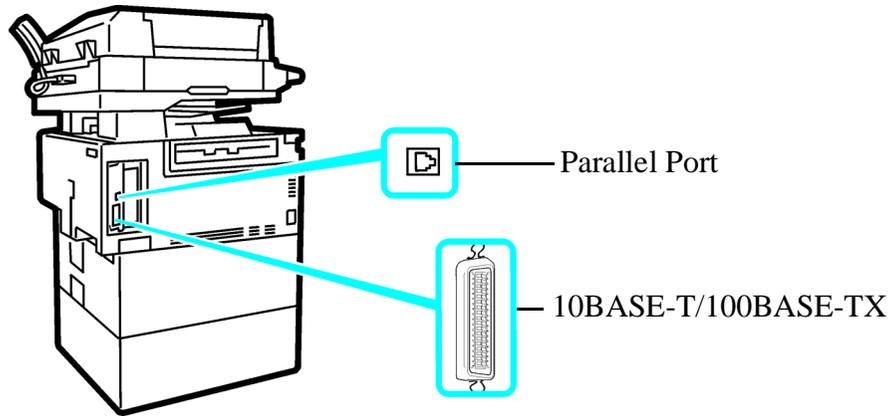

Printer Requirements

Requirements

Before using the printer, confirm that all the environmental and electrical requirements have been met. Connect the unit to your host computer using the parallel port, optional Network Interface Board 185, or both.

Confirm that all the cables, connectors, and electrical outlets necessary to attach the printer to your host computer or network are present.

- The interface cable is not supplied in the box. It is your responsibility to provide the interface cable appropriate for the computer that you are using.

Parallel Cable Requirements

Connect the printer to your host computer using a parallel port. The parallel cable to connect the printer to the host computer is not included with the printer.

The printer's parallel interface is a standard bidirectional interface. It requires a standard 36-pin parallel cable compliant with IEEE 1284 and a parallel port available on the host computer.

- Do not use a parallel cable that is longer than 3 meters (10 feet).

Network Cable Requirements

The optional Network Interface Board 185 can be installed to allow direct connection to an Ethernet network.

The Network Interface Board supports 10BASE-T or 100BASE-TX connections.

You can use the machine in the following network environments:

- Using the appropriate network management software and printer driver.
- Attaching the machine to a networks computer set up as a server.

Client	Windows 95, 98, NT 4.0, 3.1x, Macintosh (optional PostScript 3 Kit Type 185 is required)
Driver	PCL 6/5e, PostScript 3
File Server	NetWare 3.x, NetWare 4.x, NetWare 5
Protocol	TCP/IP, IPX/SPX, NetBEUI, AppleTalk

With the Windows NT4.0 by the computer based x86 only.

Under the Windows 95/98/NT 4.0 only.

In a mixed network environment, the protocol switches automatically.

- Consult your network administrator before connecting your machine to a network.
- In a 100BASE-TX environment, be sure to use properly shielded and grounded cable (STP, Category/Type5) for the connection to your host computer (and/or HUB) in order to meet FCC and EMC Directive 89/336/EEC emission guidelines.

Connecting the Printer to the Host Using Parallel Interface Cable

Use a parallel interface cable compliant with IEEE 1284 (supplied by you) to connect your printer to the host computer.

Follow these steps to connect the printer to your host computer.


- 1 Confirm that you have the correct cable.
- 2 Confirm that both the machine and the host computer are turned off.
- 3 Plug the 36-pin end of the parallel cable into the parallel port at the right side of the back cover of the machine.
- 4 Squeeze the wire clips on each side of the connector together until they snap into place. The clips hold the cable securely in place.
- 5 Plug the other end of the parallel cable into the computer's parallel port.

Connecting the Printer Using the Network Interface Board 185

Connect the printer to the network using the Network Interface Board 185.


Follow these steps to connect the printer.

- 1 Confirm that you have the correct cable.
- 2 Confirm that the machine is turned off.
- 3 Loop the network cable. The loop should be about 10cm (4") from the end of the cable on the end closest to the printer.
- 4 Attach the ferrite core to the loop.

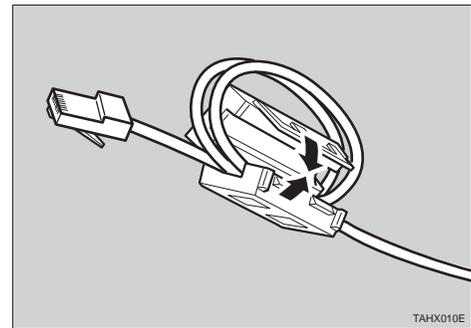

- 5 Attach the network cable to the 10BASE-T/100BASE-TX port on the machine.
 - Confirm that the cable is connected to the 10BASE-T/100BASE-TX port.
 - Do not connect the cable into the fax port.
- 6 Connect the other end of the cable into the network.

Button and Indicators on the Network Interface Board

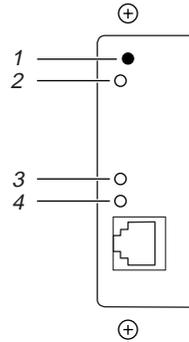

1 Button:

Press this button for more than 2 seconds to print “Network Configuration Page”. Press this button more than 5 seconds to print “System Log Information”.

2 Indicator (orange):

Stays on while the network interface board is working.

3 Indicator (green):

Stays on while 100BASE-TX is working. Stays off while 10BASE-T is working.

4 Indicator (green):

Stays on while the machine is in a network environment.

Features of the Printer

This printer is designed especially for office workgroups, both for shared usage within network environment, and for one-to-one usage by being connected directly to your computer.

High Productivity

As this printer comes with a 27 pages per minute (ppm) engine and offers a variety of paper handling options, handling documents will be more efficient. Proof print function is one of the supporting feature for making multiple original printing which allows you to confirm that the document prints as expected before printing many.

Optional Printer Hard Disk Type 185 is required.

Versatile Paper Handling Options

This printer offers both versatile input and output paper handling options. Input capacity can be raised to 3,100 with the optional paper bank (PS420) and the bypass tray (Bypass Tray Type 270) to reduce the inconvenience of reloading paper. For an output device, collating and stapling capability is available with the optional finisher (SR720).

Optional Printer Feature Expander Type 185 (32MB or 64MB) or Printer Hard Disk Type 185 is required.

Variety of Paper Media Support

Standard Tray 2 and optional Bypass Tray Type 270 support variety of paper media such as thick paper, transparency and some envelopes.

For more information on supported paper and other media, see “Copy Reference”.

Network Connectivity

Your printer is network ready with the optional network interface board.

Network Utility

PRINTER MANAGER, software consisting of Administration and Client versions, is provided. With this software, multiple print devices can be utilized effectively together on a network. This software offers several convenient functions such as parallel printing and recovery printing.

For the name of the PRINTER MANAGER you use, see the “Operating Instructions” for the Network Interface Board which is included in the CD-ROM.

Major Specifications

Printing Speed	22/27ppm (A4<IconCo1>K, 8 ¹ / ₂ " <FmSymbol>¥ 11" <IconCo1>L, simplex) 22ppm (A4<IconCo1>K, 8 ¹ / ₂ " <FmSymbol>¥ 11" <IconCo1>L, duplex)
Engine Resolution	600dpi / 300dpi resolution Enhanced resolution with edge smoothing
Printer Language	PCL 5e, PCL 6 Adobe PostScript Level 3
Memory	16MB Max. up to 80MB
Interface	10BASE-T or 100BASE-TX <FmSymbol>¥ 1 IEEE1284 <FmSymbol>¥ 1

*1 Printing speed depends on machine

*2 Option

Printer Drivers for this Printer

Printing requires installation of a printer driver for your operating system. The following drivers are included in the CD-ROM that comes with this machine.

Printer Language	PCL 5e	PCL 6	PostScript 3
Operating system			
Windows 95	X	X	W
Windows 98	X	X	S
Windows 3.1x	X	X	S
Windows NT 4.0	X	X	X
Macintosh			X

PCL Printer Drivers


Printer drivers allow the computer to communicate with the printer via a printer language. Two kinds of PCL printer drivers, PCL 6 and PCL 5e, are included in the CD-ROM that comes with this machine. We recommend the PCL 6 as your first choice. However, some of your applications might require the installation of the PCL 5e printer driver. In this case, you might configure to install and print by using PCL 5e in addition to the PCL 6.

Adobe PostScript Printer Drivers and PPD Files

The Adobe PostScript printer drivers and the PPD files are included in the CD-ROM that comes with this unit. Adobe PostScript printer driver allows the computer to communicate with the printer by means of a printer language. The PPD files allow the printer driver to enable the printer specific functions.

Operation Panel

This panel display is for installed Facsimile and Printer.

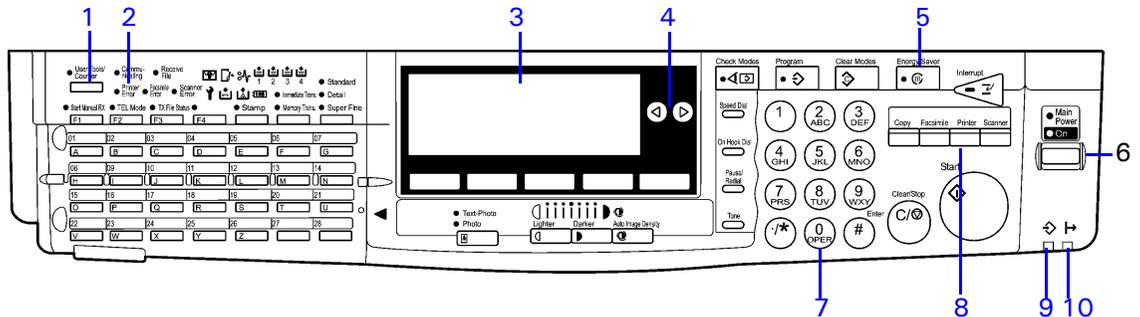

1 {User Tools} key:

Press to change the default settings and conditions to meet your requirements.

2 Error Indicator:

Lights up whenever a printer error occurs. A message describing the cause of the error also appears on the panel display.

3 Panel Display:

Shows the operation status, error messages, and function menus. Press selection keys to select the function on the panel display.

4 Cursor keys

Press either arrow to move the cursor in the message display

5 {Energy Saver} key:

Press this key for about 1 second to switch to and from Energy Saver mode.

6 Operation Switch:

Press this switch to turn the power on (the On indicator lights up). To turn the power off, press this switch again (the On indicator goes off).

7 Number keys

8 Function keys:

Press to change the functions (Copy, Facsimile, Printer) shown on the panel display. To use the printer function, press the {Printer} key.

9 Data In Indicator:

Shows if a print job is being sent from the host computer. If the indicator is blinking, a job is being sent. If the indicator stays on the data is printing.


10 On Line Indicator:

Stays on while the printer is online.

Message Display

The Message Display shows operational status, error messages, and function menus.

- Do not apply a strong shock or a force of about 30N (about 3kgf) or more to the panel display. Otherwise, the display might be damaged.

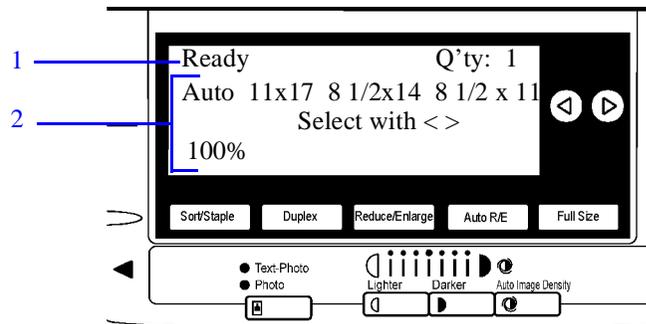

1 Operation and Error Messages are displayed.

2 Cursor keys.

Items can be selected or specified. These keys correspond to the keys that are in the bottom line of the display.

- The selected item is highlighted on the panel display.

Basic Key Operations


The following table shows basic key operations.

[Enter #] key	Press this key to set the function or numeric value, and the previous display appears.
[Escape] key	Press this key to cancel the function or numeric value, and the previous display appears.
[Up and Down Arrow] keys	If all functions cannot be displayed, press these keys to switch to the previous or next page. Increase or decrease the counter on the display panel.
[Cancel] key	Press this key to cancel the function, and previous display appears.
[Exit] key	Press this key to set the function or numeric value, and normal display screen appears.

Online and Offline

Online

Online is the state in which the printer can receive data from the computer.

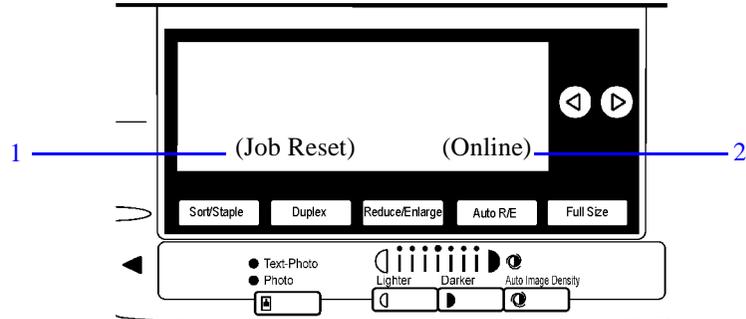

1 [Job Reset] key:


Press this key when the printer is online to cancel the current print job.

2 [Online] key:

Press this key to change the online status, the printer offline conditions.

Offline

Offline is a state in which the printer cannot receive data from the computer.

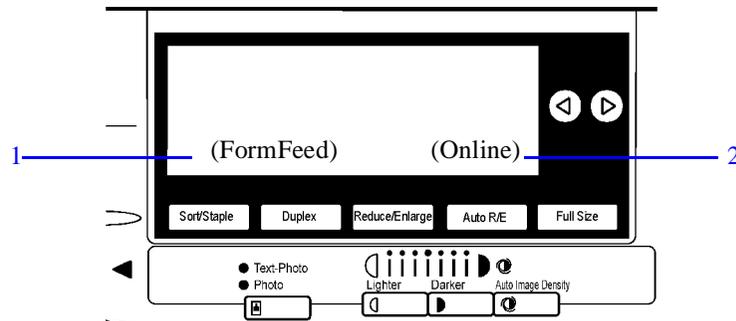

1 [FormFeed] key:

Press this key when the printer is offline to print out all the data left in the printer's input buffer.

2 [Online] key:

Press this key to change the online status, the printer offline conditions.

Printer Configuration

Chapter Overview

This chapter covers:

- “Configuring the Printer for the Network” on page 2-1
- “Subnet Mask” on page 2-5
- “Gateway Address” on page 2-5
- “Access Control Address and Access Control Mask” on page 2-5


Configuring the Printer for the Network

After installing the optional network interface card, configure it for the network using the printer's Control Panel.

The following table shows the operation panel settings and their default settings. These are included in the "Main Menu".

Items		Default
32	IP Address	011.022.033.044
33	Subnet Mask	000.000.000.000
34	Gateway Address	000.000.000.000
35	Access Control (Access Control Address)	000.000.000.000
36	Access Mask (Access Control Mask)	000.000.000.000
37	Network Boot	None
38	Frame Type(NW) (Frame Type NetWare)	Auto Select
39	ActiveProtocols	All Active

- 1 Press [User Tools].
- 2 Press [4] on the number keys.
- 3 Press the Up or Down Arrow keys until the following message appears.
- 4 Press [Enter #].

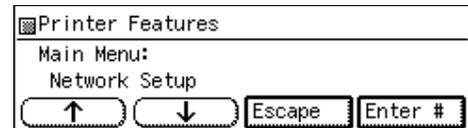

5 Select the protocol you want to use. You can select one of the items on the following table.

Menu item on the panel display	Active Protocol			
	TCP/IP	NetWare	AppleTalk	NetBEUI
All Active (Default Setting)	X	X	X	X
None				
TCP/IP Only	X			
NetWare Only		X		
TCP/IP & NetW	X	X		
ATalk Only			X	
TCP/IP & ATalk	X		X	
NetWare & ATalk		X	X	
TCP & ATK & NW	X	X	X	
NetBEUI only				X
TCP/IP & NB	X			X
NetBEUI & NetW		X		X
TCP & NB & NW	X	X		X
NetBEUI & ATalk			X	X
TCP & NB & ATK	X		X	X
NB & NW & ATalk		X	X	X


Note: <IconSt1>' means that this protocol is active.

Blank cell means that this protocol is not active.

You should not select protocols that are not used on your network.


If you want to select AppleTalk, you should install the optional PostScript kit Type 185.

1. Press the Up or Down Arrow keys until the following message appears.

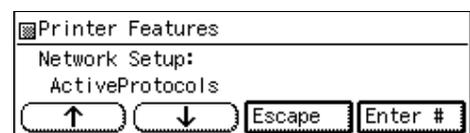

2. Press [Enter #].

The current settings appear on the panel display.

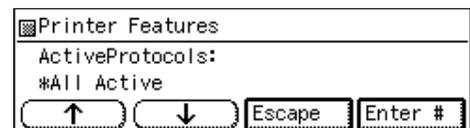


3. Press the Up or Down Arrow keys until the protocol you want to use appears.

4. Press [Enter #].


The actual procedure may differ depending on the protocol you use. If you use

TCP/IP, you should assign the IP Address to your printer.


- To get the IP Address for your printer, contact your network administrator.
- The IP Address is shown by Byte on the panel display.

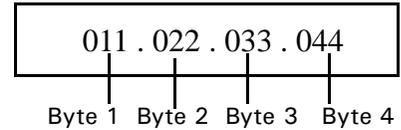

1. Press the Up or Down Arrow keys until the following message appears.

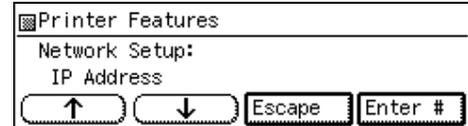


2. Press [Enter #].
The current Byte 1 of the IP Address appears on the panel display.

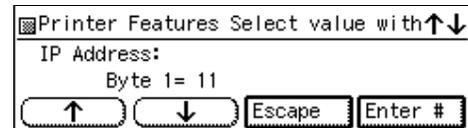


3. Use the Up or Down Arrow keys to specify the IP Address.

4. Press [Enter #].
The current Byte 2 of the IP Address appears.

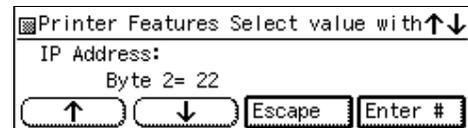

5. Use the Up or Down Arrow keys to specify the Byte 2 of the IP Address.
Repeat steps 3 and 4 to specify the rest of the IP Address.

6. Press [Enter #] to register the IP Address you specified.

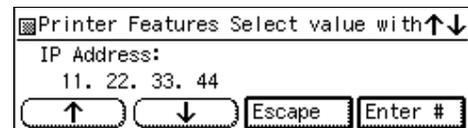

6 If you use TCP/IP, you should assign the “Subnet Mask” and “Gateway Address” following the same procedure for specifying the IP Address.

7 If you use TCP/IP, set the “Access Control” and “Access Mask” following the same procedure for specifying the IP Address, if necessary.

8 If you use TCP/IP, you can make settings for “Network Boot”.


- You can select how to assign the printer's address using the computer. Select one of the items on the following table.

Menu item on the panel display	Available method			
	ARP+ING	RARP_TFTP	BOOTP	DHCP
ARP + PING	<IconSt1 >'			
ARP & RARP	<IconSt1 >'	<IconSt1 >'		
ARP & BOOTP	<IconSt1 >'		<IconSt1 >'	
ARP&RARP&BO OTP	<IconSt1 >'	<IconSt1 >'	<IconSt1 >'	


Menu item on the panel display	Available method			
	ARP+ING	RARP_TFTP	BOOTP	DHCP
None (Default Setting)				
RARP + TFTP		X		
BOOTP			X	
RARP & BOOTP		X	X	
DHCP				X

- You should set up your server, if you want to use “RARP + TFTP”, “BOOTP”, or “DHCP”.

1. Press the Up or Down Arrow keys until the following message appears.
2. Press [Enter #].

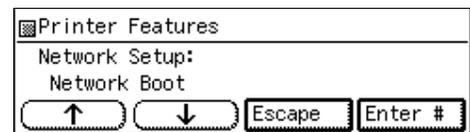

- The current setting appears on the panel display.
3. Press the Up or Down Arrow keys until the method you want to use appears.

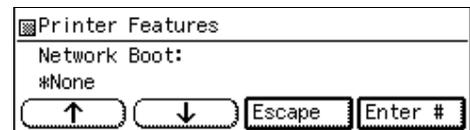

4. Press [Enter #].


9 If you use NetWare, select the frame type for NetWare.

Select one of the items below if necessary.

- Auto Select (Default)
- Ethernet 802.3
- Ethernet 802.2
- Ethernet II
- Ethernet SNAP


Note: Usually, you can use the default setting (“Auto Select”). With “Auto Select”, the frame type detected by the printer first is adopted. If your network can use more than two frame types, the printer may fail to select the correct frame type. In this case, select the appropriate frame type.

1. Press the Up or Down Arrow keys until the following message appears.
2. Press [Enter #].

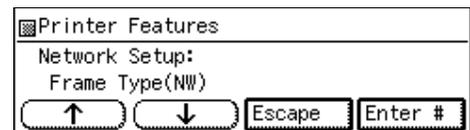

The current setting appears on the panel display.

3. Press the Up or Down Arrow keys until the frame type you want to use appears.

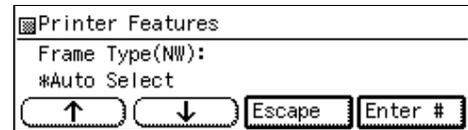


4. Press [Enter #].

10 Exit from the setup menu to the available function settings.


1. Press [Escape].
2. Press [Escape].
3. Press [Exit].

11 When printing a configuration page, confirm of your printer's configuration.

1. Press {User Tools}.
2. Press {4} on the number keys.
3. Press the Up or Down Arrow keys to display "List Print", and then press [Enter #].

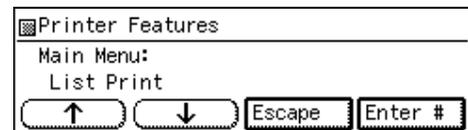


4. After confirming that "Config. Page" is displayed, press [Enter #].

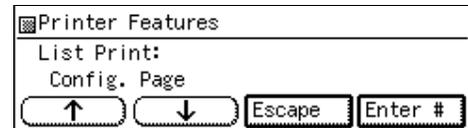

5. Press [Enter #].

Confirm of your printer's configuration by printing a configuration page.

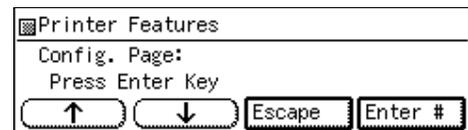

Subnet Mask

A number used to mathematically "mask" or hide IP Address on the network by eliminating those parts of the address that are alike for all the machines on the network.

Gateway Address

A gateway is a connection or interchange point that connects two networks. A gateway address is for the router or host computer used as a gateway.

- To get the addresses, contact your network administrator.

Access Control Address and Access Control Mask

Access Control Address and Access Control Mask are used to control the IP Address that have access to the computer used for printing, with the IP Address. If it is not necessary for you to control the access rights, select "0.0.0.0".

Configuring the Printer for the Network

- When the Access Control Address settings coincide with the masked result of the IP Address of the computer, print jobs from that IP Address can be accepted by the network interface board.
- For example, if you assign 192.168.15.16 as the Access Control Address to the network interface board, the combination of the Access Control Mask and IP Address that can have access are as follows. (xxx: for any numerical value)

Access Control Mask	IP Address that have access
0 . 0 . 0 . 0	xxx . xxx . xxx . xxx
255 . 0 . 0 . 0	192 . xxx . xxx . xxx
255 . 255 . 0 . 0	192 . 168 . xxx . xxx
255 . 255 . 255 . 0	192 . 168 . 15 . xxx
255 . 255 . 255 . 255	192 . 168 . 15 . 16

Installing Printer Driver

Chapter Overview

This Chapter covers:

- “Auto Run” on page 3-1
- “Software and Utilities Included on the CD-ROM” on page 3-3
- “Installing the PCL 6/5e Printer Driver” on page 3-4
- “Installing the PostScript Printer Driver” on page 3-8
- “Using Adobe PageMaker Version 6.0 or 6.5” on page 3-11
- “Macintosh” on page 3-12

Auto Run

You can install the printer driver by using Auto Run.

Auto Run is available for the following operating systems:

- Windows 95/98
- Windows NT 4.0

If your system is Windows 3.1x or Macintosh, see information on installing the printer driver.

See “Windows 95/98 - Installing the PCL 6/5e Printer Driver” on page 3-4.

See “Windows 3.1x - Installing the PCL 6/5e Printer Driver” on page 3-6.

See “Macintosh - Installing the PostScript Printer Driver” on page 3-12.

- Before starting this installation, close all documents and applications. In a network environment, confirm that users who are logged on are disconnected. Be sure to do this when it will create the least interference with other users.
- After installing a printer driver, you must restart the computer.
- If your system is Windows NT 4.0, installing a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you install a printer driver, log on under Full Control permission.
- If your system uses Windows NT 4.0 and Service Pack 4 is installed, you might not install the PCL 6/5e printer driver using Auto Run. In this case, use [Add Printer Wizard] in the [Printers] window to install the printer driver or install Service Pack 5 in the computer before installing the printer driver.
- Auto Run might not automatically work with certain OS settings. In this case, start "SETUP.EXE" to install printer driver on the root.
- If you want to cancel Auto Run, insert the CD-ROM while pressing the {SHIFT} key until your computer finishes accessing the CD-ROM.

Using the Shared Printer on Windows NT 4.0 for Windows 95/98 Client

If you want to share the printer on Windows NT 4.0, you must not install the printer driver using Auto Run. Install the printer driver of the Windows 95/98 for alternate driver.

For more information on installing the printer driver as an alternate driver: See “Uninstalling the PCL 6/5e Printer Driver” on page 4-1.

Installing by Auto Run

Follow these steps to install the printer driver on Windows 95/98/NT 4.0.

- Never have two versions of the same printer driver installed on your system at the same time. When upgrading to a new version of the printer driver, uninstall the old version, and then install the new one. For more information on uninstalling the printer driver and software, see “Uninstalling the PCL 6/5e Printer Driver” on page 4-1.

- If the "plug and play" function is started by Auto Run, click [Cancel] of the [New Hardware Found] dialog box or [Device Driver Wizard], and then insert the CD-ROM. [New Hardware Found] or [Device Driver Wizard] appears depending on the system version of the Windows 95/98.
- The appropriate language name is used in the CD-ROM folder: ENGLISH (English), DEUTSCH (German), FRANCAIS (French), ITALIANO (Italian), ESPANOL (Spanish), NEDRLNDS (Dutch), NORSK (Norwegian), DANSK (Danish), SVENSKA (Swedish), POLSKI (Polish), PORTUGUS (Portuguese), SUOMI (Finnish), MAGYAR (Hungarian), CESKY (Czechoslovakian)

- 1 Close all applications that are currently running.
- 2 Insert the CD-ROM in the CD-ROM drive.
- 3 Follow the instructions on the screen.
- 4 Restart your computer after installation is complete.
- 5 You should set up the options with the printer driver.

Software and Utilities Included on the CD-ROM

Agfa Font Manager

Helps you to install new fonts, or organize and manage fonts already installed on your system.

PRINTER MANAGER FOR ADMINISTRATOR

A utility for the system administrator to manage printers on the network.

For the name of the PRINTER MANAGER FOR ADMINISTRATOR you use, see the “Operating Instruction” for the optional Network Interface Board which is on the CD-ROM.

See the PRINTER MANAGER FOR ADMINISTRATOR Online Help for details on using the PRINTER MANAGER FOR ADMINISTRATOR.

PRINTER MANAGER FOR CLIENT

A utility for users to manage their own print jobs on the network.

For the name of the PRINTER MANAGER FOR CLIENT you use, see the “Operating Instruction” for the optional Network Interface Board which is included in the CD-ROM.

- See the PRINTER MANAGER FOR CLIENT Online Help for details on using the PRINTER MANAGER FOR CLIENT.

Multidirect Print

A utility for printing on a "Peer-to-Peer" network.

- For more information on Multidirect Print, see the “Operating Instructions” for the optional Network Interface Board which is included in the CD-ROM.

PortNavi

A utility that helps you to use network printers effectively. It is useful in environments where two or more network printers are used.

- For more information on PortNavi, see the “Supplement” for the Network Interface Board which is included in the CD-ROM.

Acrobat Reader

A utility that allows you to read PDF (Portable Document Format).

- Documentation on using the printer is included on the CD-ROM in PDF format.

Installing the PCL 6/5e Printer Driver

Windows 95/98 - Installing the PCL 6/5e Printer Driver

Installing the Printer Driver

Install the driver in accordance with the steps explained. See “Installing by Auto Run” on page 3-1.

Setting Up Options

- When setting up options, you should access the Printer Properties from Windows. You cannot access the Printer Properties from an application.
- 1** Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
 - 2** Click the icon of the printer you want to use. On the [File] menu, click [Properties].
 - 3** Click the [Accessories] tab.
 - 4** Select any options you have installed from the [Options] group.
 - 5** Click [OK].

Windows NT 4.0 - Installing the PCL 6/5e Printer Driver

Installing the Printer Driver

- If your system uses Windows NT 4.0 and Service Pack 4 is installed, you might not install the PCL 6/5e printer driver using Auto Run. In this case, use [Add Printer Wizard] in the [Printers] window to install the printer driver or install Service Pack 5 in the computer before install the printer driver.
- Install the driver in accordance with the steps explained in “Installing by Auto Run” on page 3-1.
- If you want to share the printer on Windows NT 4.0, you must not install the printer driver using Auto Run. In this case, cancel Auto Run and install the printer driver using [Add Printer Wizard] in the [Printers] window.
- When prompted for Windows NT 4.0 alternate driver location, specify the following folder in the CD-ROM.
PCL 5e:
 \DRIVERS\PCL5E\NT4\(\Language)\DISK1\
PCL 6:
 \DRIVERS\PCL6\NT4\(\Language)\DISK1\
• When prompted for Windows 95/98 alternate driver location, specify the following folder in the CD-ROM.
PCL 5e:
 \DRIVERS\PCL5E\WIN95_98\(\Language)\DISK1\
PCL 6:
 \DRIVERS\PCL6\WIN95_98\(\Language)\DISK1\

Setting Up Options

Changing the setting of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on under Full Control permission.

When setting up options, you should access the Printer Properties from Windows. You cannot access the Printer Properties from an application.

- 1 Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2 Click the icon of the printer you want to use. On the [File] menu, click [Properties].
- 3 Click the [Accessories] tab.
- 4 Select any options you have installed from the [Options] group.
- 5 Click [OK].

Windows 3.1x - Installing the PCL 6/5e Printer Driver

Installing the Printer Driver

We recommend you to install the PCL 5e printer driver on your Windows 3.1x system. Under Windows 3.1x system, you might get some unexpected print results with the PCL 6 printer driver.

- 1 Close all the applications that are currently running.
- 2 Insert the CD-ROM in the CD-ROM drive.
- 3 From [Program Manager], click [Run] on the [File] menu.
- 4 In the [Run] window, click [Browse].
- 5 Select the CD-ROM drive in the [Drives:] list.
- 6 Open [PCL5E] or [PCL6].
- 7 Open [WIN31].
- 8 Open the folder of the language you use.
- 9 Open [DISK1].

- 10 Double-click "SETUP.EXE".
- 11 Follow the instructions on the screen.

Setting Up Options

When setting up options, you should access the Printer Setting dialog box from Windows. You cannot access the Printer Setting dialog box from an application.

- 1 From the [Main] group of [Program Manager], double-click [Control Panel].
- 2 Double-click the [Printers] icon.
- 3 In the [Installed Printers:] list, click the name of the printer you want to set up.
- 4 Click [Setup].
- 5 Click the [Accessories] tab.
 - The [Options] group appears.
- 6 Select any options you have installed from the [Options] group.
- 7 Click [OK] to close the Printer Setting dialog box.
- 8 Click [Close] to close the [Printers] dialog box.

Installing the PostScript Printer Driver

Windows 95/98 - Installing the PostScript Printer Driver

Installing the Printer Driver

Install the driver in accordance with the steps explained in “Installing by Auto Run” on page 3-1.

Setting Up Options

When setting up options, you should access the [Device Options] tab from Windows. You cannot set up options when accessing the [Device Options] tab from an application.

- 1 Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2 Click the icon of the printer you want to use. On the [File] menu, click [Properties].
- 3 Click the [Device Options] tab.
 - The [Installable options] group appears.
- 4 From the [Installable options] box, select the option you have installed.
 - The current setting is displayed in the [Change settings for:] list.
- 5 Use the [Change setting for:] list to select the appropriate setting for the selected option.
- 6 Click [Apply] to apply the settings you made.
- 7 After making all settings you want, click [OK].

Windows NT 4.0 - Installing the PostScript Printer Driver

Installing the Printer Driver

Install the driver in accordance with the steps explained in “Installing by Auto Run” on page 3-1.

Setting Up Options

Changing the setting of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on under Full Control permission.

When setting up options, you should access the Printer Properties from Windows. You cannot set up options when accessing the Printer Properties from an application.

- 1 Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2 Click the icon of the printer you want to use. On the [File] menu, click [Properties].
- 3 Click the [Device Settings] tab.
- 4 Use the [Installable Options] group to specify the options.
- 5 Click [OK] to close the Printer Properties.

Windows 3.1x - Installing the PostScript Printer Driver

Installing the Printer Driver

- 1 Close all the applications that are currently running.
- 2 Insert the CD-ROM in the CD-ROM drive.
- 3 From the [Program Manager], click [Run] from the [File] menu.
- 4 In the [Run] window, click [Browse].
- 5 Select the CD-ROM drive in the [Drives:] list.
- 6 Open [PS].
- 7 Open [WIN31].
- 8 Open the folder of the language you use.
- 9 Open [DISK1].
- 10 Double-click "SETUP.EXE".
- 11 Follow the instructions on the screen.

Setting Up Options

- 1 From the [Main] group of [Program Manager], double-click [Control Panel].
- 2 Double-click the [Printers] icon.

- 3 In the [Installed Printers:] list, click the name of the printer you want to set up.
- 4 Click [Setup].
- 5 Click the [Features] tab.
 - The [Printer Features] group appears.
- 6 Use the [Printer Features] group to specify the options.
- 7 Click [OK] to close the Printer Setting dialog box.
- 8 Click [Close] to close the [Printers] dialog box.

Using Adobe PageMaker Version 6.0 or 6.5

If you use the printer under Windows 95/98/NT 4.0 with Adobe PageMaker, you need to copy the PPD file to the PageMaker folder.

- The PPD file is the file with extension ".ppd". It is in the folder "\PS\WIN95_98\<Language>\DISK1\" on the CD-ROM.
- The [WIN95_98] folder, inside the [PS] folder is for the Windows 95/98 operating system. Use the folder at this level that is appropriate for the operating system you are using.
- The third folder, "(Language)" may be substituted by appropriate language name.
- Copy this file to the PageMaker folder.
- For the PageMaker 6.0 default installation, the folder is "C:\PM6\RSRC\PPD4", and for the PageMaker 6.5 default installation, the directory is "C:\PM65\RSRC\USENGLISH\PPD4". The "USENGLISH" may be different, depending on your language selection.
- For more information on the language name, see "Installing by Auto Run" on page 3-1.

Macintosh

Macintosh - Installing the PostScript Printer Driver

It is necessary to install a printer driver and a PPD file to print from a Macintosh.

Follow these steps to install a printer driver and a PPD file into a Macintosh using a system 7.1 or later operating system.

- You cannot use LaserWriter 8.5.0 or later with Mac OS 8.1 or later until you do the following procedure. Copy the “PrintingLib” file from the [Extensions] folder in [System Folder] to your desktop before installing the PostScript printer driver. After installing the PostScript printer driver, drag the “PrintingLib” file from your desktop back into the [Extensions] folder.
- If you forgot to copy the “PrintingLib” file, please reinstall the Macintosh operating system again.

- 1 Insert the CD-ROM in the CD-ROM drive.
- 2 Double-click the CD-ROM icon.
- 3 Double-click the [PS] folder.
- 4 Double-click the folder of the language you use.
- 5 Open [DISK1] and double-click the installer icon.
- 6 Follow the instructions on the screen.
- 7 Move the “PrintingLib” file from your desktop back to [Extensions] in [System Folder].
- 8 Double-click [Extensions].
- 9 Double-click [Printer Descriptions].
- 10 Double-click the CD-ROM icon on the desktop.
- 11 Double-click [DISK1] in the folder of the language you use.
- 12 Click and drag the PPD file into [Printer Descriptions].
- 13 Click and drag the “Proof Print” file into [Printer Descriptions] in [Extensions] in [System Folder].
- 14 Restart the Macintosh.

Setting Up the PPD File

Confirm that the printer is connected to an AppleTalk network before performing the following procedure.

- 1 On the [Apple] menu, select [Chooser].
- 2 Click the [Adobe PS] icon.
- 3 In the [Select a PostScript Printer:] list, click the name of the printer you want to use.
- 4 Click [Create].
- 5 Click the printer you want to use, and then click [Select].
 - The PPD file is set up, and the [Adobe PS] icon appears at the left of the printer name in the list. Next, make the option settings, or close the [Chooser] dialog box.

Setting Up Options

- 1 On the [Apple] menu, select [Chooser].
- 2 Click the [Adobe PS] icon.
- 3 In the [Select the PostScript Printer:] list, click the name of the printer you want to use, and then click [Setup].
- 4 Click [Configure].
 - A list of options appears.
- 5 Select the option you want to set up and select the appropriate setting for it.
 - If the option you want to set up is not displayed, the PPD file might not be set up correctly. Check the name of the PPD file shown in the dialog box.
- 6 Click [OK].
 - The list of options closes.
- 7 Click [OK].
 - The [Chooser] dialog box appears.
- 8 Close the [Chooser] dialog box.

Notes:

Uninstalling the Printer Driver

Chapter Overview

This Chapter covers:

- “Windows 95/98 - Uninstalling the PCL 6/5e Printer Driver” on page 4-1
- “Windows NT 4.0 - Uninstalling the PCL 6/5e Printer Driver” on page 4-1
- “Windows 3.1x - Uninstalling the PCL 6/5e Printer Driver” on page 4-2
- “Windows 95/98 - Uninstalling the PostScript Printer Driver” on page 4-3
- “Windows NT 4.0 - Uninstalling the PostScript Printer Driver” on page 4-3
- “Windows 3.1x - Uninstalling the PostScript Printer Driver” on page 4-4
- “Macintosh - Uninstalling the PostScript Printer Driver” on page 4-4

Uninstalling the PCL 6/5e Printer Driver

This section describes how to uninstall the printer driver. The actual procedure may differ depending on your operating system.

Follow the appropriate procedure.

Windows 95/98 - Uninstalling the PCL 6/5e Printer Driver

- 1 Close all the applications that are currently running.
- 2 Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 3 Click the icon of the printer you want to remove.
- 4 On the [File] menu, click [Delete].
 - A confirmation dialog box appears.
- 5 Click [Yes] to uninstall the printer driver.

Windows NT 4.0 - Uninstalling the PCL 6/5e Printer Driver

Uninstalling the printer driver requires Full Control access Permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default.

When you uninstall a printer driver, log on under Full Control permission.

- 1 Close all the applications that are currently running.
- 2 Click [Start] on the task bar, point to [Settings], and click [Printers].
 - The [Printers] window appears.
- 3 Click the icon of the printer you want to remove.
- 4 On the [File] menu, click [Delete].
 - A confirmation dialog box appears.
- 5 Click [Yes] to uninstall the printer driver.

Windows 3.1x - Uninstalling the PCL 6/5e Printer Driver

- 1 Close all applications that are currently running.
- 2 Insert the CD-ROM in the CD-ROM drive.
- 3 From [Program Manager], select [Run] from the [File] menu.
- 4 In the [Run] window, click [Browse].
- 5 Select the CD-ROM drive in the [Drives:] list.
- 6 Open [PCL5E] or [PCL6].
- 7 Open [WIN31].
- 8 Open the folder of the language you use.
- 9 Open [DISK1].
- 10 Double-click "UNSETUP.EXE".
- 11 Click [OK].
- 12 Click [OK].
- 13 Follow the instructions on the screen.
- 14 If you are asked if you want to restart Windows, select [Restart Windows Now].
 - If you are not asked, restart Windows after completing the uninstallation.

Uninstalling the PostScript Printer Driver

This section describes instructions for uninstalling the PostScript printer driver. The actual procedure may differ depending on your operating system.

Follow the appropriate one of the following procedures below.

Windows 95/98 - Uninstalling the PostScript Printer Driver

- 1 Close all applications that are currently running.
- 2 Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 3 Click the icon of the printer you want to remove.
- 4 On the [File] menu, click [Delete].

A confirmation dialog box appears.
- 5 Click [Yes] to uninstall the printer driver.

Windows NT 4.0 - Uninstalling the PostScript Printer Driver

Uninstalling the printer driver requires Full Control access Permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you uninstall a printer driver, log on under Full Control permission.

- 1 Close all applications that are currently running.
- 2 Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 3 Click the icon of the printer you want to remove.
- 4 On the [File] menu, click [Delete].
 - A confirmation dialog box appears.
- 5 Click [Yes] to uninstall the printer driver.

Windows 3.1x - Uninstalling the PostScript Printer Driver

- 1 Open [Control Panel].
- 2 Double-click the [Printers] icon.
- 3 Select the printer you want to delete and click [Remove].
 - A confirmation dialog box appears.
- 4 Click [Yes] to uninstall the printer driver.
- 5 Click [Close] to close the [Printers] dialog box.

Macintosh - Uninstalling the PostScript Printer Driver

- 1 Drag the “AdobePS” file inside the [Extensions] folder in [System Folder] to [Trash].
- 2 Drag the “Proof Print” file inside the [Printer Descriptions] folder in the [Extensions] folder in [System Folder] to [Trash].

Setting Up Printer Driver

Chapter Overview

This chapter covers:

- “Windows 95/98 - Accessing the Printer Properties” on page 5-1
- “Windows NT 4.0 - Accessing the Printer Properties” on page 5-2
- “Windows 3.1x - Accessing the Printer Setting Dialog Box” on page 5-3
- “Windows 95/98 - Accessing the Printer Properties” on page 5-5
- “Windows NT 4.0 - Accessing the Printer Properties” on page 5-6
- “Windows 3.1x - Accessing the Printer Setting Dialog Box” on page 5-7
- “Macintosh - Setting Up for Printing” on page 5-9
- “Windows 95/98 - Canceling a Print Job” on page 5-10
- “Windows NT 4.0 - Canceling a Print Job” on page 5-10
- “Windows 3.1x - Canceling a Print Job” on page 5-11
- “Macintosh - Canceling a Print Job” on page 5-12

PCL 6/5e - Accessing the Printer Properties

Windows 95/98 - Accessing the Printer Properties

There are two methods you can use to open the Printer Properties.

Making Printer Default Settings

To make the printer default settings, first open the Printer Properties from the [Printers] window.

- 1 Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2 Click the icon of the printer whose default settings you want to change.
- 3 On the [File] menu, click [Properties].
 - The Printer Properties appears.
- 4 Set desired settings and click [OK].

Making Printer Settings From an Application

To make the printer settings for a specific application, open the Printer Properties from that application. The following example describes how to make settings for the WordPad application that comes with Windows 95/98.

- The actual procedures you should follow to open the Printer Properties may differ depending on the application. For details, see the documentation that comes with the application you are using.
 - When you use some applications, the driver's initial default settings of the applications might be applied over the printer driver's setting.
 - Any settings you make in the following procedure are valid for the current application only.
- 1 On the [File] menu, click [Print].
 - The [Print] dialog box appears.
 - 2 From the [Name:] list, select the printer you want to use, and then click [Properties].
 - The Printer Properties appears.
 - 3 Set desired settings and click [OK].
 - 4 Click [OK] to start your printing.

Windows NT 4.0 - Accessing the Printer Properties

Making Printer Default Settings - Printer Properties

Changing the settings of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on under Full Control permission.

- 1** Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2** Click the icon of the printer whose default setting you want to change.
- 3** On the [File] menu, click [Properties].
 - The Printer Properties appears.
- 4** Set desired settings and click [OK].
 - Settings you make here are used as the default settings for all applications.

Making Printer Default Settings – Default Document Properties

Changing the settings of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on under Full Control permission.

- 1** Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2** Click the icon of the printer whose default settings you want to change.
- 3** On the [File] menu, click [Document Defaults].
 - The Default Document Properties appears.
- 4** Set desired settings and click [OK].
 - Settings you make here are used as the default settings for all applications.

Making Printer Settings From an Application

To make the printer settings for a specific application, open the Document Properties from that application. The following example describes how to make settings for the WordPad application that comes with Windows NT 4.0.

- The actual procedures you should follow to open the Document Properties may differ depending on the application. For details, see the documentation that comes with the application you are using.
- Any settings made in the following procedure are valid for the current application only.

- 1 On the [File] menu, click [Print].
 - The [Print] dialog box appears.
- 2 From the [Name:] list, select the printer you want to use, and then click [Properties].
 - The Document Properties appears.
- 3 Set desired settings and click [OK].
- 4 Click [OK] to start your printing.

Windows 3.1x - Accessing the Printer Setting Dialog Box

There are two methods you can use to open the Printer Setting dialog box.

Making Printer Default Settings

To make the printer default settings, open the Printer Setting dialog box from [Control Panel].

- 1 From [Program Manager], open the [Main] group.
- 2 Double-click [Control Panel].
- 3 Double-click the [Printers] icon.
- 4 In the [Installed Printers:] list, click the name of the printer you want to set up.
- 5 Click [Setup].
- 6 Set desired settings and click [OK].
- 7 Click [Close] to close the [Printers] dialog box.

Making Printer Settings from an Application

To make the printer settings for a specific application, open the Printer Setting dialog box from that application. The following example describes how to make settings for the Write application that comes with Windows 3.1x.

- The actual procedures you should follow to open the Printer Setting dialog box may differ depending on the application. For details, see the documentation that comes with the application you are using.
- When you use some applications, the driver's initial default settings of the applications might be applied over the printer driver's setting.
- Any settings you make in the following procedure are valid for the current application only.

- 1 On the [File] menu, click [Print Setup].
 - The [Print Setup] dialog box appears.
- 2 From the [Printer] group, select the printer you want to use.
 - If the printer you want to use is not specified as the default printer, click [Specific Printer:], and then find the printer you want to use in the list box.
- 3 Click [Options].
 - The Printer Setting dialog box appears.
- 4 Set desired settings and click [OK].
- 5 Click [OK] to close the [Print Setup] dialog box.
- 6 Start your printing.

PostScript - Setting Up for Printing

Windows 95/98 - Accessing the Printer Properties

There are two methods you can use to open the Printer Properties.

Making Printer Default Settings

To make the printer default settings, first open the Printer Properties from the [Printers] window.

- 1** Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2** Click the icon of the printer whose default settings you want to change.
- 3** On the [File] menu, click [Properties].
 - The Printer Properties appears.
- 4** Set desired settings and click [OK].

Making Printer Settings from an Application

To make the printer settings for a specific application, open the Printer Properties from that application. The following example describes how to make settings for the WordPad application that comes with Windows 95.

- The actual procedures you should follow to open the Printer Properties may differ depending on the application. For details, see the documentation that comes with the application you are using.
 - When you use some applications, the driver's initial default settings of the applications might be applied over the printer driver's setting.
 - Any settings you make in the following procedure are valid for the current application only.
- 1** On the [File] menu, click [Print].
 - The [Print] dialog box appears.
 - 2** From the [Name:] box, select the printer you want to use, and then click [Properties].
 - The Printer Properties appears.
 - 3** Set desired settings and click [OK].
 - 4** Click [OK] to start your printing.

Windows NT 4.0 - Accessing the Printer Properties

Making Printer Default Settings - Printer Properties

Changing the settings of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on under Full Control permission.

- 1** Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2** Click the icon of the printer whose default settings you want to change.
- 3** On the [File] menu, click [Properties].
 - The Printer Properties appears.
- 4** Set desired settings and click [OK].
 - Settings you make here are used as the default settings for all applications.

Making Printer Default Settings - Default Document Properties

Changing the settings of the printer requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you set up options, log on under Full Control permission.

- 1** Click [Start] on the task bar, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2** Click the icon of the printer whose default settings you want to change.
- 3** On the [File] menu, click [Document Defaults].
 - The Default Document Properties appears.
- 4** Set desired settings and click [OK].
 - Settings you make here are used as the default settings for all applications.

Making Printer Settings from an Application

To make the printer settings for a specific application, open the Document Properties from that application. The following example describes how to make settings for the WordPad application that comes with Windows NT 4.0.

- The actual procedures you should follow to open the Document Properties may differ depending on the application. For details, see the documentation that comes with the application you are using.
 - Any settings made in the following procedure are valid for the current application only.
- 1 On the [File] menu, click [Print].
 - The [Print] dialog box appears.
 - 2 From the [Name:] box, select the printer you want to use, and then click [Properties].
 - The Document Properties appears.
 - 3 Set desired settings and click [OK].
 - 4 Click [OK] to start your printing.

Windows 3.1x - Accessing the Printer Setting Dialog Box

There are two methods you can use to open the Printer Setting dialog box.

Making Printer Default Settings

To make the printer default settings, open the Printer Setting dialog box from [Control Panel].

- 1 From [Program Manager], open the [Main] group.
- 2 Double-click [Control Panel].
- 3 Double-click the [Printers] icon.
- 4 In the [Installed Printers:] box, click the name of the printer you want to set up.
- 5 Click [Setup].
- 6 Set desired settings and click [OK].
- 7 Click [Close] to close the [Printers] dialog box.

Making Printer Settings from an Application

To make the printer settings for a specific application, open the Printer Setting dialog box from that application. The following example describes how to make settings for the Write application that comes with Windows 3.1x.

- The actual procedures you should follow to open the Printer Setting dialog box may differ depending on the application. For details, see the documentation that comes with the application you are using.
- When you use some applications, the driver's initial default settings of the applications might be applied over the printer driver's setting.
- Any settings you make in the following procedure are valid for the current application only.

- 1 On the [File] menu, click [Print Setup].
 - The [Print Setup] dialog box appears.
- 2 From the [Printer] group, select the printer you want to use.
 - If the printer you want to use is not specified as the default printer, click [Specific Printer:], and then find the printer you want to use in the list box.
- 3 Click [Options].
 - The Printer Setting dialog box appears.
- 4 Set desired settings and click [OK].
- 5 Click [OK] to close the [Print Setup] dialog box.
- 6 Start your printing.

Macintosh - Setting Up for Printing

Making Paper Settings from an Application

- 1 Open the file you want to print.
- 2 On the [File] menu, click [Page Setup].
- 3 [AdobePS Page Setup] appears.
- 4 Confirm that the printer you want to use is shown in the [Format for:] box.
 - If your printer is now shown in the [Format for:] box, use the pop-up menu to display a list of available printers.
 - The actual appearance of the Page Setup depends on the application you are using. See the documentation that comes with your Macintosh for details.
- 5 From the [Paper:] box, select the paper size.
- 6 Set desired settings and click [OK].

Setting up for Printing from an Application

- 1 Open the file you want to print.
- 2 On the [File] menu, click [Print].
 - The Printer Settings appears.
- 3 Confirm that your printer is selected in the [Printer:] box.
- 4 Set desired settings and click [Print].

Canceling a Print Job

Windows 95/98 - Canceling a Print Job

- 1 Double-click the printer icon on the task bar.
 - This opens a window that shows all the print jobs that are currently queued for printing. Check the current status of the job you want to cancel.
- 2 Click the name of the job you want to cancel so that it is highlighted.
- 3 On the [Document] menu, click [Cancel Printing].
 - You can also open the print job queue window by double-clicking the printer icon in the [Printers] window.
- 4 Press the printer's [Job Reset] key.

The message appears on the panel display indicating that the print job is being cancelled.

- When your printer is being shared by multiple computers, be careful not to accidentally cancel someone else's print job.
- You cannot stop printing the data that has already been processed internally by the printer. Because of this, printing might continue for a few pages after you press [Job Reset].
- A print job that contains a large volume of data might take considerable time to stop.
- It takes about 5 minutes to reset the print job, after 5 minutes the printer returns to the ready condition.

Windows NT 4.0 - Canceling a Print Job

- 1 Double-click the printer icon on the task bar.
 - This opens a window that shows all the print jobs that are currently queued for printing. Check the current status of the job you want to cancel.
- 2 Click the name of the job you want to cancel so that it is highlighted.
- 3 On the [Document] menu, click [Cancel].
 - You can also open the print job queue window by double-clicking the printer icon in the [Printers] window.
- 4 Press the printer's [Job Reset] key.
 - The message appears on the panel display indicating that the print job is being cancelled.

- When your printer is being shared by multiple computers, be careful not to accidentally cancel someone else's print job.
- You cannot stop printing data that has already been processed internally by the printer. Because of this, printing might continue for a few pages after you press **[Job Reset]**.
- A print job that contains a large volume of data might take considerable time to stop.
- It takes about 5 minutes to reset the print job, after 5 minutes the printer returns to the ready condition.

Windows 3.1x - Canceling a Print Job

- 1 In the [Main] group, double-click the [Print Manager] icon.
 - This opens a window that shows all the print jobs that are currently queued for printing.
- 2 Click the name of the job you want to cancel so it is highlighted.
- 3 On the [Document] menu, click [Delete Document].
- 4 Click [Close] to close the dialog box.
- 5 Press the printer's [Job Reset] key.

The message appears on the panel display indicating that the print job is being cancelled.

- When your printer is being shared by multiple computers, be careful not to accidentally cancel someone else's print job.
- You cannot stop printing data that has already been processed internally by the printer. Because of this, printing might continue for a few pages after you press **[Job Reset]**.
- A print job that contains a large volume of data might take considerable time to stop.
- It takes about 5 minutes to reset the print job, after 5 minutes the printer returns to the ready condition.

Macintosh - Canceling a Print Job

- 1 Double-click the printer icon on the desktop.
 - This opens a window that shows all the print jobs that are currently queued for printing. Check the current status of the job you want to cancel.
- 2 Click the name of the job you want to cancel so that it is highlighted.
- 3 Click the pause icon, and then click the trash icon.
- 4 Press the printer's [Job Reset] key.
 - The message appears on the panel display indicating that the print job is being cancelled.
 - When your printer is being shared by multiple computers, be careful not to accidentally cancel someone else's print job.
 - You cannot stop printing data that has already been processed internally by the printer. Because of this, printing might continue for a few pages after you press [Job Reset].
 - A print job that contains a large volume of data might take considerable time to stop.
 - It takes about 5 minutes to reset the print job, after 5 minutes the printer returns to the ready condition.

Troubleshooting

Chapter Overview

This chapter covers:

- “Error and Status Messages” on page 6-1
- “Printer Does Not Print” on page 6-11
- “Additional Printing Problems” on page 6-14

Error and Status Messages

Error and Status Messages on the Message Display Panel

This section describes instructions for error and status message of the printer function. To use the printer function, press [Printer].

Messages	Description	Comments
Add Staples	The stapler is empty.	Replace the staple refill with a new one.
Cannot Output To Selected Tray	The paper can not be printed to the output tray that you selected.	The paper is printed to another tray that selected by printer.
Dup. Unit In Use Please Wait	AD370 (duplex unit) is used by the other application.	Wait until the other application finished to use AD370 (duplex unit).
Error 1	An error with the optional RAM has occurred.	Turn the printer power off and on. If the message appears again, contact your sales or service representative.
Error 2	An error with the parallel interface board has occurred.	Turn the printer power off and on. If the message appears again, contact your sales or service representative.
Error 3	An error with the NV-RAM has occurred.	Turn the printer power off and on. If the message appears again, contact your sales or service representative.
Error 4	An error with the DIMM has occurred.	Turn the printer power off and on. If the message appears again, contact your sales or service representative.
Error 5	An error with the HDD has occurred.	Install the HDD again. If the message appears again, contact your sales or service representative.
Error 6	An error with the Resident font ROM has occurred.	Turn the printer power off and on. If the message appears again, contact your sales or service representative.
Error 7	An error with the ASIC has occurred.	Turn the printer power off and on. If the message appears again, contact your sales or service representative.

Error and Status Messages

Messages	Description	Comments
Error 30711	AD370 (duplex unit) cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30721	PS420 (paper feed unit) cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30722	Tray 1 cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30723	Tray 2 cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30724	Tray 3 cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30725	Tray 4 cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30740	The staple tray of SR720 (finisher) cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30743	The shift tray cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30744	SR720 (finisher) cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 40711	SR370 (duplex unit) cannot be used.	Press [Job Reset]. Contact your sales or service representative.
Error 40740	The staple tray of SR720 (finisher) cannot be used.	Press [Job Reset]. Contact your sales or service representative.
Error 40744	SR720 (finisher) cannot be used.	Press [Job Reset]. Contact your sales or service representative.
Error Bypass xx	Bypass Tray is out of paper. xx: Paper Size	Load paper of the indicated paper size into the bypass tray.
Error: Finisher SC###	An error with SR720 (finisher) has occurred.	Turn the printer power off and on. If the message appears again, contact your sales or service representative.
Finisher In Use Please Wait	SR720 (finisher) is used by the other application.	Wait until the other application finished to use SR720 (finisher).
Form Feeding...	Doing form feed.	Wait for a while.

Messages	Description	Comments
Load Bypass xx	The bypass tray is out of paper. xx: Paper Size	Load paper of the indicated paper size into the bypass tray.
Load Tray ** xx	There is out of paper. **: Number Tray xx: Paper Size	Load paper of the indicated paper size into the paper tray.
Load *** XX	There is no paper tray of the indicated. ***: Paper Type XX: Paper Size	Load paper onto the tray of the indicated.
No Files Exist	There is no proof print file.	Specify correct proof print file. See "Deleting a Proof Print File" on page 7-17.
Offline	Printer is offline. The printer cannot accept or print out data.	If you want to put the printer online, press the [Online].
Printing...	Doing print job.	Wait for a while.
Processing...	Print data is being processed.	Wait for a while.
Processing... Please Wait	The user tries to print the Proof Print data while writing the data to HDD.	Wait until the printer returns to the ready condition.
Ready	The printer is ready for printing.	—
Remove Paper from Duplex Unit	There is still paper in AD370 (duplex unit).	Remove paper from AD370 (duplex unit).
Remove Paper from Staple Tray	There is paper in the stack unit of SR720 (finisher).	Remove paper from the stack unit of SR720 (finisher). Remove the paper from the output tray before it becomes full. If you leave paper in the output tray, it can cause a paper misfeed.
Remove Paper Shift Tray	The shift tray of SR720 (finisher) is full.	Remove paper from the SR720 (finisher) tray. Remove the paper from the output tray before it becomes full. If you leave paper in the output tray, it can cause a paper misfeed.

Error and Status Messages

Messages	Description	Comments
Remove Paper Standard Tray	The standard output tray is full.	Remove paper from the output tray. Remove the paper from output tray before it becomes full. If you leave paper in the output tray, it can cause a paper misfeed.
Remove Paper 1Bin Tray	The PT270 (1bin tray) is full.	Remove the paper from the PT270 (1bin tray). Remove the paper from the output tray before it becomes full. If you leave paper in the tray, it can cause a paper misfeed.
Reset Duplex Unit Correctly	The AD370 (duplex unit) is not set correctly.	Set the AD370 (duplex unit) correctly.
Resetting Job...	Resetting Print job.	Wait for while.
Reset Tray XX Correctly	There is no paper tray, or Tray XX is not set correctly. This message appears only for the default tray. See "Job Control Parameters" on page 7-7.	Set the tray correctly.
Setting Changed Cannot Print	The paper feed unit setting has been changed, and the proof print failed.	Configure the paper feed unit correctly, and try again.
Waiting...	Printer is waiting for the next data to print.	Wait for a while.
Warming Up...	The printer is now preparing for printing.	Wait until the printer is warmed up.

Note: If you cannot solve the problem by taking above actions, turn the main power switch off and then back on again. If this does not clear the error message, write down the error message, and contact your sales or service representative.

Getting Printer Information over the Network

Printer Current Status

You can check the printer's current status using the "Telnet (mshell)".

mshell

Use status command.

Messages	Description	Resolution
Add Staples	The staple is empty.	Replace the staple refill with a new one.
Add Toner	The printer is out of toner.	Replace a new toner bottle.
Call Service Power Off On	The Service Code or SC number identifies the failure.	Contact your sales or service representative.
Call Service SC_XXX	The Service Code or SC number identifies the failure.	Turn the printer off and on. If the message appears again, contact your sales or service representative.
Close Bridge Unit Cover	The cover of Bridge Unit Type 270 is open.	Close the cover of Bridge Unit Type 270.
Close Finisher Cover	The cover of SR720 (finisher) is open.	Close the cover of SR720 (finisher).
Close Interchange Unit Cover	The Interchange Unit Type 280 cover is open.	Close the interchange unit cover.
Close Right Cover	The right cover of the printer is open.	Close the right cover of the printer.
Close R-Cover at Paper Tray	Lower right cover 1 or 2 is open.	Close lower right cover 1 or 2.
Close Upper Right Cover	The upper right cover is open.	Close the upper right cover.
Dup. Unit In Use Please Wait	AD370 (duplex unit) is used by the other application.	Wait until the other application finished to use AD370 (duplex unit).
Energy Saver 1	In Energy Save Mode level 1.	Press the operation key or send a job from the computer to turn the power on.
Energy Saver 2	In Energy Save Mode level 2.	Press the operation key or send a job from the computer to turn the power on.
Error 30711	AD370 (duplex unit) cannot be used.	Another tray is used to print. Contact your sales or service representative.

Error and Status Messages

Messages	Description	Resolution
Error 30721	PS420 (paper feed unit) cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30722	Tray 1 cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30723	Tray 2 cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30724	Tray 3 cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30725	Tray 4 cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30740	The staple tray of SR720 (finisher) cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30743	The shift tray cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 30744	SR720 (finisher) cannot be used.	Another tray is used to print. Contact your sales or service representative.
Error 40711	AD370 (duplex unit) cannot be used.	Press [Job Reset] . Contact your sales or service representative.
Error 40740	The staple tray of SR720 (finisher) cannot be used.	Press [Job Reset] . Contact your sales or service representative.
Error 40744	SR720 (finisher) cannot be used.	Press [Job Reset] . Contact your sales or service representative.
Finisher In Use Please Wait	SR720 (finisher) is used by the other application.	Wait until the other application finished to use SR720 (finisher).
Load Bypass xx	Bypass Tray is out of paper. xx : Paper Size	Load paper of the indicated paper size into the bypass tray.
Load Tray ** xx	There is out of paper. ** : Tray Number xx : Paper Size	Load paper of the indicated paper size into the paper tray.

Messages	Description	Resolution
Load *** xx	There is no paper tray of the indicated. *** : Paper Type xx : Paper Size	Load paper onto the tray of the indicated.
Low On Toner	The toner bottle is almost empty.	Prepare a new toner bottle. If the image density is too light, replace the old toner bottle with a new one.
Misfeed:{location} Open Front Cover	There is a misfeed in the printer.	Remove the misfed paper from {location}.
Offline	Printer is offline. The printer cannot accept or print out data.	If you want to put the printer online, press [Online].
Ready	The printer is ready for printing.	—
Remove Misfeed from Duplex Unit	There is a misfeed in AD370 (duplex unit).	Remove the misfed paper from AD370 (duplex unit).
Remove Misfeed From Finisher	There is a misfeed in SR720 (finisher).	Remove the misfed paper from SR720(finisher).
Remove Paper from Duplex Unit	There is still paper in AD370 (duplex unit).	Remove the paper from AD370 (duplex unit). Remove paper from the output tray before it becomes full. If you leave paper in the output tray, it can cause a paper misfeed.
Remove Paper Shift Tray	The shift tray of SR720 (finisher) is full.	Remove paper from the shift tray of SR720 (finisher). Remove paper from the output tray before it becomes full. If you leave paper in the tray, it can cause a paper misfeed.
Remove Paper from Staple Tray	There is still paper in the staple tray of SR720 (finisher).	Remove paper from the staple tray of SR720 (finisher). Remove paper from the output tray before it becomes full. If you leave paper in the output tray, it can cause a paper misfeed.

Error and Status Messages

Messages	Description	Resolution
Remove Paper Standard Tray	The standard output tray is full.	Remove paper from the standard output tray Remove paper from the output tray before it becomes full. If you leave paper in the output tray, it can cause a paper misfeed.
Remove Paper 1Bin Tray	The PT270 (1bin tray) is full.	Remove the paper from the PT270 (1bin tray). Remove the paper from the output tray before it becomes full. If you leave paper in the output tray, it can cause a paper misfeed.
Reset Duplex Unit Correctly	AD370 (duplex unit) is not set correctly.	Set AD370 (duplex unit) correctly.
Reset Fusing Unit Correctly	There is no fusing unit, or the fusing unit is not installed properly.	Contact your sales or service representative.
Reset PCU Correctly	There is no Photo Conductor Unit Type 270, or Photo Conductor Unit Type 270 is not installed properly.	Contact your sales or service representative.
Reset Tray XX Correctly	There is no paper tray, or Tray XX is not set correctly. This message appears only for the default tray. See "Job Control Parameters" on page 7-7.	Set the tray correctly.
Warming Up...	The printer is now preparing for printing.	Wait until the printer is warmed up.

Printer Configuration

You can check the printer configuration using the "mshell".

mshell

Use info command.

Item	Description
Input Tray No.	ID number of the paper tray
Name	Name of the paper tray ^{*1}
Page Size	Paper size loaded in the paper tray ^{*2}
Status	Current status of the paper tray ^{*3}

Item	Description
Output Tray No.. Name Status	ID number of the output tray Name of the output tray *4 Current status of the output tray *5
Emulation No.. Name Version	ID number of the emulation used which the printer Name of the emulation used which the printer Version of the emulation
Program	No Entries

Note: “*” (asterisk) is displayed with the current setting.
Regarding *1–*5, see the attached tables.

***1 Input Tray: Name**

Name	Description
Tray 1	Tray 1
Tray 2	Tray 2
Tray 3	PS400, PS420, PS440 (upside)
Tray 4	PS440 (downside)
Bypass Tray	Bypass Tray

***2 Input Tray: Page Size**

Paper Size	Description
A3(297 x 420)	A3
B4 JIS(257 x 364)	B4
A4(210 x 297)	A4
A4(297 x 210)	A4
B5 JIS(182 x 257)	B5
B5 JIS(257 x 182)	B5
A5(148 x 210)	A5
A5(210 x 148)	A5
A6(105 x 148)	A6
11 x 17	Ledger
8 1/2 x 14	Leger
8 1/2 x 11	Letter
11 x 8 1/2	Letter R
7 1/4 x 10 1/2	Executive
10 1/2 x 7 1/4	Executive

Error and Status Messages

Paper Size	Description
5 1/2 x 8 1/2	Statement
8 1/2 x 5 1/2	Statement
8 1/4 x 13	8 ¹ / ₄ " x 13"
8 1/2 x 13	Foolscap
8 x 13	8" x 13"
4 1/8 x 9 1/2	Com10 Env.(4.125" x 9.5")
3 7/8 x 7 1/2	Monarch Env.(3.875" x 7.5")
C6 Env(114 x 162)	C6 Env.(114 x 162mm)
C5 Env(162 x 229)	C5 Env.(162 x 229mm)
DL Env(110 x 220)	DL Env.(110 x 220mm)
8K(267 x 390)	8K
16K(195 x 267)	16K
16K(267 x 195)	16K
FRE	Custom Paper Size

*3 Input Tray: status

Status	Description
Normal	Normal
NoTray	There is no paper tray.
PaperEnd	There is no paper in the paper tray.

*4 Output Tray: Name

Name	Description
Standard Tray	Standard tray
Internal 1Bin Tray	Output tray (upside)
Finisher Tray	SR720 tray
Shift Unit Tray	Shift tray

*5 Output Tray: status

Status	Description
Normal	Normal
Paper Exist	Paper exists in output tray.

Printer Does Not Print

Possible Cause	Solutions
Is the power on?	If not, confirm that the cord is securely plugged into the power outlet and the machine. Turn on the machine power.
Does the On Line indicator stay on?	If not, press [Online] to make it light up.
Does the Error indicator stay red?	Press {Printer}. If not, check the error message on the panel display and take the required action.
Is the paper set?	Load paper into the paper tray.
Is your specified paper size correct?	Set the specified paper in any of the input trays. Adjust the paper size dial to match the size and feed direction of the paper in the paper tray.
Is your specified paper type correct?	Set the specified paper in any of the input trays. Adjust the paper type to use the operation panel.
Can you print a configuration page?	If you cannot print a configuration page, it probably indicates printer malfunction. You should contact your sales or service representative. If you can print a configuration page but cannot get the printer to print when you issue a print command from your computer, it probably means there is a problem with your computer. Also keep it in mind that large, complex data might take long time for printer process.
Is the network cable between the machine and your computer connected securely?	Connect the network cable correctly. If there are any connectors or screws, confirm they are fastened securely.
Are you using a correct network cable?	The type of network cable you should use depends on your computer. Be sure to use the correct one. See "Connecting to the Printer" on page 1-1 If the cable is damaged or worn, replace it with new one.
Did you connect the interface cable after turning on the main switch?	Confirm of connecting the interface cable before turning on the main switch.

Possible Cause	Solutions
<p>If you print using the PostScript driver in a network, data is received by the printer, but is not printed.</p>	<p>Windows 95/98 On the [PostScript] tab of the Printer Properties, click [Advanced] and then clear both [Send CTRL+D before job] and [Send CTRL+D after job].</p> <p>Windows NT 4.0 Open the [Advanced] tab of the Printer Properties. From [PostScript Options], select [No] for both [Send CTRL-D Before Each job:] and [Send CTRL-D After Each job:].</p> <p>Windows 3.1x Click the [PostScript] tab of the Printer Setting dialog box. From [Protocol Options], select [None].</p>
<p>If you print using the PostScript driver, printing does not start or is interrupted.</p>	<p>The data is cleared when the Job Timeout period is exceeded.</p> <p>Windows 95/98 Set a longer [Job Timeout] period with the [PostScript] tab of the Printer Properties.</p> <p>Windows NT 4.0 Set a longer [Job Timeout] period with the [Device Settings] tab of the Printer Properties.</p> <p>Windows 3.1x Set a longer [Job Timeout] period with the [PostScript] tab of the Printer Setting dialog box.</p> <p>A PostScript error might occur if there is not enough memory in the printer, or there are errors in the print data sent to the printer. Print a configuration page to configure the memory size and confirm the memory size is max or not. If the memory size is max, increasing the memory may solve this problem. You should contact your sales or service representative..</p> <p>The print job might be reset. Do the following. Confirm that you have selected the correct printer driver. Try printing again. Set a longer Wait Timeout.</p> <p>Windows 95/98 Set a longer [Wait Timeout] period with the [PostScript] tab of the Printer Properties.</p> <p>Windows NT 4.0 Set a longer [Wait Timeout] period with the [Device Settings] tab of the Printer Properties.</p> <p>Windows 3.1x Set a longer [Wait Timeout] period with the [PostScript] tab of the Printer Setting dialog box.</p> <p>Macintosh You can specify a longer [I/O Timeout] period on the printer's operation panel. See "Making Printer Settings with the Operation Panel" on page 7-5</p>

Possible Cause	Solutions
Is the Data In indicator blinking or lit after starting the print job, when using the PCL printer?	<p>If not, the data is not being sent to the printer, or the printer may be resetting the print job because there was a long delay in receiving the data from the computer.</p> <p>If the printer is using "I/O Timeout"</p> <p>Increase the value of the "I/O Timeout" setting of the "System" menu of the "Job Control". See "Making Printer Settings with the Operation Panel" on page 7-5</p> <p>If your machine is connected to the computer using the parallel cable</p> <p>Confirm that the printer port settings are correct. For a parallel port connection, port LPT1 or LPT2 should be set. For more information on the printer port settings, see the Note after this table.</p> <p>Network Connection</p> <p>Contact your network administrator.</p>

The following procedure describes the printer port settings.

Windows 95/98

1. Click [Start], point to [Settings], and then click [Printers].
2. Click the icon of the printer. Next, on the [File] menu, click [Properties].
3. Click the [Details] tab.
4. Check the [Print to the following port:] list to confirm the correct port is selected.

Windows NT 4.0

1. Click [Start], point to [Settings], and then click [Printers].
2. Click the icon of the printer. Next, on the [File] menu, click [Properties].
3. Click the [Port] tab.
4. Confirm that the correct port is selected.

Windows 3.1x

1. On [Control Panel], double-click the [Printers] icon.
2. Confirm that this printer is specified as the default printer.
3. Click [Connect].
4. Check the [Ports] list to confirm the correct port is selected.

Macintosh

1. Click [Apple Menu], point to [Control Panels], and then select [Apple Talk].
2. Confirm that [Ethernet] is selected in the [connect via:] list.

Additional Printing Problems

Problem	Action
It takes a long time for the printer to start printing.	The machine might be in Energy Saver mode or Low Power mode, which requires more time for warming up and resuming the print job. If you can't wait, change the settings of Low Power, Shift Time and Low Power Timer.
It takes too much time to complete the print job.	The data is so large or complex that it takes time to process it. If the Data In indicator is blinking, the data processing is being done. Just wait until it is finished.
Windows 95/98, NT 4.0 : The computer doesn't recognize the installed printer options.	If the connection to the printer is not bi-directional, the computer does not recognize the installed printer options. Setting of the options might not be specified correctly. In this case, specify which options you have installed using the printer driver. For more information on the setting options with installing the printer driver. See "Installing the PCL 6/5e Printer Driver" on page 3-4 and, "Installing the PostScript Printer Driver" on page 3-8
Windows 3.1x: The print job can't be sent.	The memory buffer might be full. Remove the check mark from the [Use Print Manager] check box, or make the time out setting longer.

Using the Control Panel

Chapter Overview

This Chapter covers:

- “Proof Print Menu” on page 7-6
- “Job Control Menu” on page 7-7
- “Network Setup Menu” on page 7-10
- “Maintenance Menu” on page 7-11
- “List Print Menu” on page 7-12
- “Specifying the Custom Paper Size for the Bypass Tray” on page 7-13
- “Printer Condition” on page 7-15
- “Printing with the Operation Panel” on page 7-16

Adjusting Printer Features

This section describes the information on adjusting the printer settings using the System Settings and the Printer Features menus.

- After using [User Tools], be sure to return to Printer mode.
- The settings are not canceled even if the operation switch is turned off or the [Escape] key is pressed.

For more information on specifying the network system, see “Configuring the Printer for the Network” on page 2-1.

Printer Features Menu

There are 5 menu items in the “Printer Features” menu.

- Proof Print
- Job Control
- Network Setup
- Maintenance
- List Print

You can select functions in following table.

Adjusting Printer Features

Category	Function Menu	
Proof Print	Print File	
	Delete File	
	Show Error Log	
Job Control	Paper Input	Tray Priority
		Tray Locking
		Bypass Size
	Print Quality	Edge Smoothing
		Resolution
		Toner Saving
	System	Print PS Errors
		I/O Timeout
		I/O Buffer
	PCL Menu	Orientation
		Form Lines
		Font Source
		Font Number
		Point Size
		Font Pitch
Symbol Set		
Network Setup	IP Address	
	Subnet Mask	
	Gateway Address	
	Access Control	
	Access Mask	
	Network Boot	
	Frame Type(NW)	
	ActiveProtocols	
Maintenance See "Maintenance Menu" on page 7-11	Restart Printer	
	Menu Reset	
	Hex Dump	

Category	Function Menu
List Print See "List Print Parameters" on page 7-12	Config. Page
	Menu List
	PCL Font List
	PS Font List
	Disk Directory

Accessing the Main Menu

- 1 Confirm that the printer is offline. If not, take the printer offline.
- 2 Press [User Tools] and press [4] on the number key to display the “Main Menu” on the panel display.
The “Main Menu” has the following five menus, which can be displayed one by one using the Up or Down Arrow keys.
 - Proof Print
 - Job Control
 - Network Setup
 - Maintenance
 - List Print

Notes:

- [Down Arrow]: Press to go to the next page.
- [Up Arrow]: Press to go back to the previous page.
- After making the printer's settings, be sure to return to the previous menu by pressing [Escape].
- After making the printer's settings, press [Online] to return to the ready condition.
- The revised settings are not canceled even if the machine power is turned off.

Making Printer Settings with the Operation Panel

- 1 Press {User Tools}.
- 2 Press {4} on the number keys.
- 3 Search for the desired menu with [Down Arrow] or [UP Arrow] keys.
 - The desired menu appears.
- 4 Press [Enter #].
- 5 Search for the desired menu with [Down Arrow] or [UP Arrow] keys.
 - The desired menu or parameter appears.
 - “p” shown in front of a item indicates that the item is currently selected.
- 6 Press [Enter #].
 - The specified item appears.
- 7 If necessary, repeat steps 5 and 6 until you complete the desired settings.
 - [Escape]: Press to return to the previous menu. If you press this key before pressing [Enter #], the adjusted data is canceled.

Proof Print Menu

There are 3 menus in the “Proof Print” menu.

- Print File
- Delete File
- Show Error Log
- For more information on “Proof Print”, see “Using the Proof Print” on page 7-16.

Proof Print Parameters

Proof Print

Menu	Description
Print File	Select a proof print file and print it.
Delete File	Select a proof print file and delete it.
Show Error Log	Show the error log in the proof print job.

Job Control Menu

There are 4 menus in the "Job Control" menu.

- Paper Input
- Print Quality
- System
- PCL Menu

Job Control Parameters

Paper Input

Menu	Description
Tray Priority	<p>You can specify the default tray. The tray selection specified with the printer driver overrides the one specified here. In DOS printing, the tray specified here is used, when no tray is specified for a print job. Tray1, Tray2, Tray3, Tray4</p> <p>Default: <i>Tray1</i></p> <p>Only the installed trays appear on the panel display.</p> <p>It is recommended that you load paper having the size and direction you frequently use in the tray selected with the "Tray Priority".</p>
Tray Locking	<p>If you use several different kinds of paper, you can lock a tray to prevent printing on wrong paper. When you want to use the locked tray, specify it using the printer driver.</p> <p>None, Tray1, Tray2, Tray3, Tray4</p> <p>Default: <i>None</i></p> <p>Only the installed trays appear on the panel display.</p> <p>You cannot lock multiple trays at once.</p> <p>When a locked tray is specified using the printer driver, the printer does not search for any other tray.</p>
Bypass Tray	<p>You can specify the paper size for the bypass tray.</p> <p>Default: <i>A4 (Metric version), 8 1/2" x 11" (Inch version)</i></p> <p>width: 90mm (3.53") to 297mm (11")</p> <p>length: 148mm (5.83") to 432mm (17")</p>

Print Quality

Menu	Description
Edge Smoothing	<p>You can specify whether the Edge Smoothing feature is enabled.</p> <p>On</p> <p>Off</p> <p>Default: <i>On</i></p> <p>If "Edge Smoothing" is "On", "Toner Saving" is ignored even if it is "On".</p>

Menu	Description
Resolution	You can specify the print resolution in dots per inch. 600 dpi (PCL 5e, PCL 6, PS) 300 dpi (PCL 5e, PS) Default: <i>600 dpi</i> The resolution specified with the printer driver overrides the one specified here.
Toner Saving	You can specify whether or not the Toner Saving feature is enabled. Off On Default: <i>Off</i> If "Edge Smoothing" is "On", "Toner Saving" is ignored even if it is "On".

System^{1/2}

Menu	Description
Print PS Errors	You can specify whether the PS error sheet should be printed out. Off On Default: <i>Off</i>
I/O Timeout	You can specify how many seconds the printer should wait before ending a print job. If data from other ports often appear in the middle of your print job, you should increase the timeout value. 15 seconds, 30 seconds, 60 seconds, 180 seconds, 300 seconds Default: <i>30 seconds</i>

System^{2/2}

Menu	Description
I/O Buffer	You can specify the size of the I/O Buffer. Normally it is not necessary to change this setting. 16KB, 32KB, 64KB, 128KB, 256KB, 512 KB, Default: <i>32KB</i>

PCL Menu^{1/2}

Menu	Description
Orientation	You can specify the page orientation. The tray selection specified with the printer driver overrides the one specified here. Portrait Landscape Default: <i>Portrait</i>
Form Lines	You can specify the number of lines per page. 5-128 Default: <i>64</i> (Metric version), <i>60</i> (Inch version)

Menu	Description
Font Source	You can specify the location of the default font. Internal Download Default: <i>Internal</i> When you select "Download", you can select only downloaded fonts on the RAM.
Font Number	You can specify the ID for the default font you want to use. 1 to 52 (for Internal) 1 to N (for Download source) Default: 0 "N" depends on how many fonts you have downloaded.

PCL Menu ²/₂

Menu	Description
Point Size	You can specify the value for the point size you want to use for the selected font. 4.00 to 999.75 by 0.25 Default: 12.00 This setting is effective only for a variable-space font.
Font Pitch	You can specify the number of characters per inch you want to use for the selected font. 0.44 to 99.99 by 0.01 Default: 10.00 This setting is effective only for a fixed-space font.
Symbol Set	You can specify the set of print characters for the selected font. The available options are as follows. Roman-8, Win L1, Win L2, Win L5, Win 3.0, Legal, ISO L1, ISO L2, ISO L5, ISO 4, ISO 6, ISO 11, ISO 15, ISO 17, ISO 21, ISO 60, ISO 69, PC-8, PC-850, PC-852, PC-8 D/N, PC8-TK, VN Math, VN US, VN Intl, MS Publ, Pifont, Desktop, Math-8, PS Text, PS Math Default: <i>Roman-8</i>

Network Setup Menu

For more information on “Network Setup”, see “Configuring the Printer for the Network” on page 2-1.

Network Setup

Menu	Description
IP Address	You can specify the IP Address. Default: <i>All zero</i>
Subnet Mask	You can specify the Subnet Mask. Default: <i>All zero</i>
Gateway Address	You can specify the Gateway Address. Default: <i>All zero</i>
Access Control	You can specify the Access Control Address. Default: <i>All zero</i>
Access Mask	You can specify the Access Mask. Default: <i>All zero</i>
Network Boot	You can specify the Network Boot of TCP/IP. None, RARP + TFTP, BOOTP, RARP & BOOTP, DHCP, ARP + PING, ARP & RARP, ARP & BOOTP, ARP&RARP&BOOTP Default: <i>None</i>
Frame Type(NW)	You can specify the Fream Type of Netware. Auto, Ethernet II, Ethernet 802.3, Ethernet 802.2, Ethernet SNAP Default: <i>Auto</i>
ActiveProtocols	You can specify the Active Protocols. All Active, None, TCP/IP Only, NetWare Only, TCP/IP & NetW, ATalk Only, TCP/IP & ATalk, NetWare & ATalk, NetBEUI & ATalk, TCP & NW & ATK, NetBEUI only, TCP/IP & NB, NetBEUI & NetW, TCP & NB & NW, NetBEUI & ATalk, TCP & NB & ATK, NB & NW & ATalk Default: <i>All Active</i>

Maintenance Menu

There are 3 menus in the “Maintenance” Menu.

- Restart Printer
- Menu Reset
- Hex Dump

Maintenance Parameters

Restart Printer

Menu	Description
Restart Printer	You can restart the printer.

Menu Reset

Menu	Description
Menu Reset	You can reset the menu settings to the factory default except "I/O Buffer" and "Network Setup" settings.

Hex Dump

Menu	Description
Hex Dump	You can choose to print the Hex Dump or not. With this feature "On", all data sent to the printer is printed in hexadecimal character representation. On Off Default: <i>Off</i>

List Print Menu

There are 5 menus in the “List Print” Menu.

- Config. Page
- Menu List
- PCL Font List
- PS Font List
- Disk Directory


List Print Parameters

List Print


Menu	Description
Config. Page	You can print the current configuration of the printer. For more information on printing a configuration page, see “Printer Condition” on page 7-15.
Menu List	You can print the Menu List which shows the function menu of this printer.
PCL Font List	You can print a list of the installed PCL font.
PS Font List	You can print a list of the installed PS font.
Disk Directory	You can print a list of the HDD directory.

Specifying the Custom Paper Size for the Bypass Tray


- 1 Press {User Tools}.
- 2 Press {4} on the number keys.
- 3 Press [Up Arrow] or [Down Arrow] keys until “Job Control” appears, and then press [Enter #].

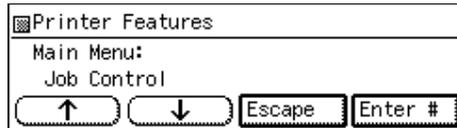

- 4 Press [Up Arrow] or [Down Arrow] keys until “Paper Input” appears, and then press [Enter #].

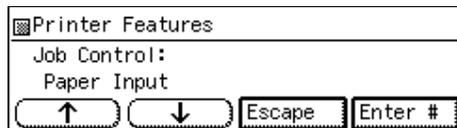

- 5 Press [Up Arrow] or [Down Arrow] keys until “Bypass Size” appears, and then press [Enter #].

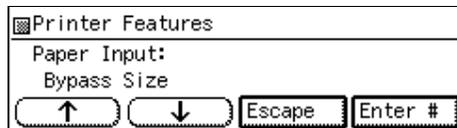


- 6 Specifying the standard size.

1. After confirming that “Standard Size” is displayed, press [Enter #].



2. Press [Up Arrow] or [Down Arrow] keys until “Custom Size” is displayed, and then press [Enter #].

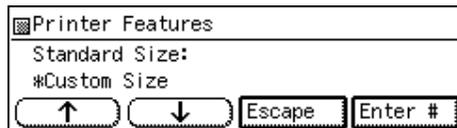


- 7 Specify the Custom Size.


1. Press [Up Arrow] or [Down Arrow] until “Custom Size” is displayed, press

Specifying the Custom Paper Size for the Bypass Tray

[Enter #].

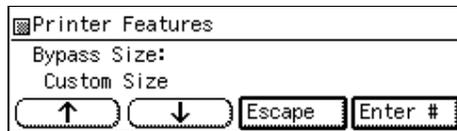


2. Press [Up Arrow] or [Down Arrow] to set the vertical value, and then press [Enter #].

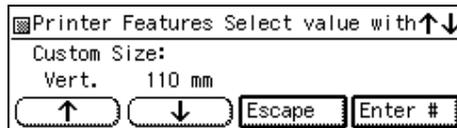


- The vertical size and horizontal size are described as follow.

1

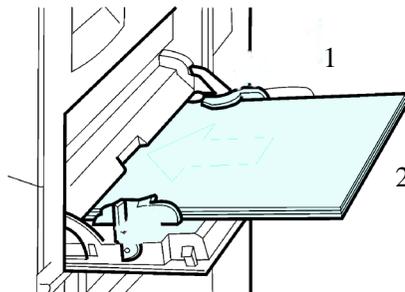

- 1 Horizontal size
- 2 Vertical size

3. Press [Up Arrow] or [Down Arrow] to set the horizontal value, and then press [Enter #].

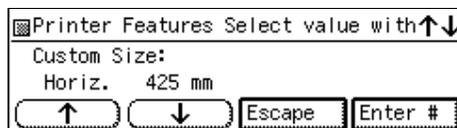


Printer Condition


We recommend that you print the configuration page and check its settings, before changing settings of your machine.

The following example describes how to print a Configuration Page.


- 1 Press {User Tools}.
- 2 Press {4} on the number keys.
- 3 Press [Up Arrow] or [Down Arrow] until “List Print” appears, and then press [Enter #].

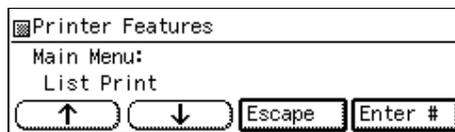

- The following message appears on the panel display.

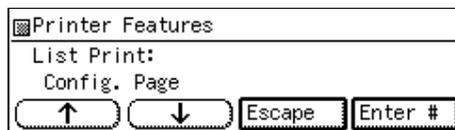

- 4 After confirming that, “Config. Page” on display, press [Enter #].
 - You can specify the Print List items on the panel display.
 - The following message appears on the panel display.

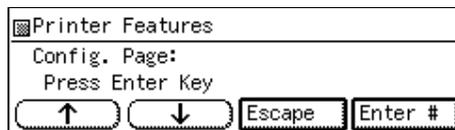

- 5 Press [Enter #].
 - This starts printing the configuration page.

Printing with the Operation Panel


Using the Proof Print

Use this function to print only one printing of a multiple print job. The other printings are saved on the optional hard disk. The saved job can be printed from the machine's operation panel.


- To use this function, the optional hard disk must be installed.
- If the application has a collate option, confirm that it is not selected before sending a print job. By default, proof print jobs are automatically collated by the printer driver. If the collate option is selected from the application print dialog box, more printings than intended may be printed.
- You can identify the file you want to print by the User IDs and the time when the job was stored.
- The actual number of pages the printer can save depends on the contents of the print images. As an example, the printer can save up to 30 jobs or 2,000 pages. It depends on the data volume.
- If the first printing of the proof print file is not what you expected and you do not want to print the remaining printings, delete the proof print file using the operation panel. If you print the remaining printings of the proof print file, the job in the printer is deleted automatically.

Printing a Proof Print File


- 1 Press the {User Tools} key of the machine's operation panel.
- 2 Press {4} on the number keys.
- 3 After confirming that “Proof Print” is displayed, press [Enter #].

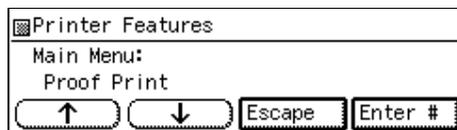


- 4 After confirming that “Print File” is displayed, press [Enter #].

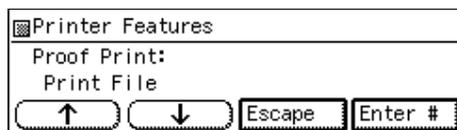

- 5 Press [Up Arrow] or [Down Arrow] to display a file you want to print, and then press [Enter #].

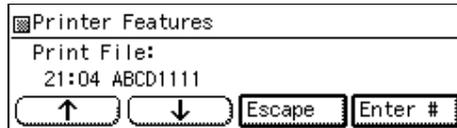


- The following message appears on the panel display.

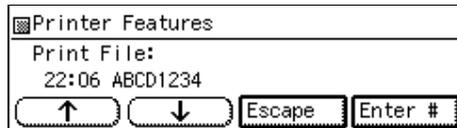

- 6 Press [Up Arrow] or [Down Arrow] to set the number of copy printings.

- You can set the number up to 999.

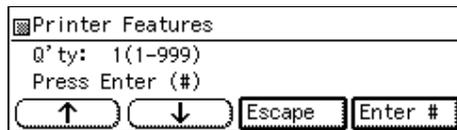


- 7 Press [Enter #].


Deleting a Proof Print File

If the printed document is not what you expected, you can delete the proof print file. You can then revise it and print again until the settings become OK.


- 1 Press the {User Tools} key of the machine's operation panel.
- 2 Press {4} on the number keys.
- 3 After confirming that "Proof Print" is on the display, press [Enter #].

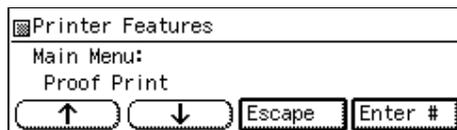


- 4 Press [Up Arrow] or [Down Arrow] until "Delete File" appears, and then press [Enter #].

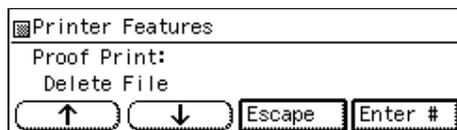


- 5 Press [**FmSymbol**>Ø] or [**FmSymbol**>!] to display the file you want to delete, and then press [**Enter #**].

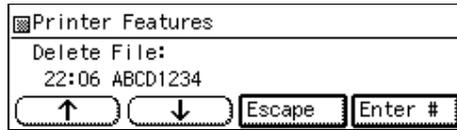

- The following message appears on the panel display.

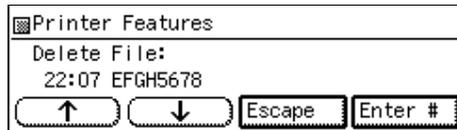


- 6 Press [**Enter #**].

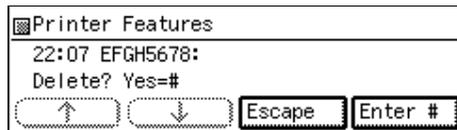


- 7 Press [**Enter #**].


- This starts deleting a proof print file after the following message appears on the panel display.

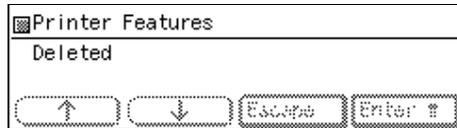

- 1 Checking the Error Log
- 2 Press the {**User Tools**} key of the machine's operation panel.
- 3 Press {**4**} on the number keys.
- 4 After confirming that "Proof Print" is displayed, press [**Enter #**].

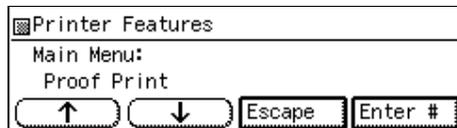

- 5 Press [Up Arrow] or [Down Arrow] until “Show Error Log” appears, and then press [Enter #].

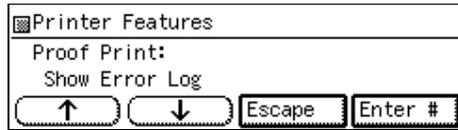

- The following message appears on the panel display.



Notes:

PostScript3 Kit Type185

Chapter Overview

This chapter covers:

- “Setting Up Options” on page 8-1
- “Collate, Staple, Print Mode” on page 8-6
- “Proof Print” on page 8-8

Installable Options

The following items are installable options.

Tray 3

- PS400:
500-sheet paper feed unit. It consists of 1 tray.
- PS420:
2000-sheet paper feed unit. It consists of 1 tray.

Tray 3 and 4

- PS440:
1000-sheet paper feed unit. It consists of 2 trays.

Bypass Tray

- Bypass Tray Type 270

Duplex Unit

- AD370 (duplex unit)

Finisher

- SR720 (finisher)
- The staple function is available with the finisher.

Mail Box

- PT270 (1-bin tray)

Total Printer Memory

- Printer Feature Expander Type 185 (32MB/64MB)
- Up to 64 megabytes of optional memory can be installed in this machine.
(Set the total memory to 80 megabytes.)

Setting Up Options

To use the installed options correctly, you have to set up the printer driver. If the options are not recognized, you cannot use them even though they are physically installed on your printer. The method of setting up the printer driver may differ depending on your operating system.

Windows

You can set up any of the options with the following tabs.

Operating System	Tab's name
Windows 95/98	[Device Options] tab
Windows 3.1x	[Features] tab
Windows NT 4.0	[Device Settings] tab

- You should access the printer driver from Windows to set up the options. You cannot set up options when accessing the printer driver from an application.
- If your system is Windows NT 4.0, changing a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you change a printer driver, log on under Full Control permission.
- If you use Adobe Page Maker 6.0 or 6.5 with Windows 95/98 or Windows NT 4.0, you have to set up options in Adobe PageMaker's print dialog box.

Macintosh

You can set up all of the options in the [Chooser] dialog box.

For more information on setting up options, see the "Operating Instructions" that comes with the machine.

Printing a Document

This section describes how to print a document using printer specific functions.

Paper Source

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Paper] tab
Windows NT 4.0	[Page Setup] tab
Windows 3.1x	[Paper] tab
Macintosh	[General] in the print dialog box

Destination Tray

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[More Options] in the [Paper] tab
Windows NT 4.0	[Printer features] in [Document Options] in the [Advanced] tab
Windows 3.1x	[Features] tab
Macintosh	[Printer Specific Options] in the print dialog box

Duplex Printing

Use this function to select duplex printing.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[More Options] in the [Paper] tab
Windows NT4.0	[Page Setup] tab
Windows 3.1x	[Features] tab
Macintosh	[General] in the print dialog box

Resolution

Use this function to set the resolution in dots per inch. The available options are 300dpi and 600dpi.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Graphics] tab
Windows NT 4.0	[Graphic] in the [Advanced] tab
Windows 3.1x	[Features] tab
Macintosh	[Printer Specific Options] in the print dialog box

Collate

Use this function to enable the collation feature. With this feature, the printer can efficiently print collated sets of a multiple-page document.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer features] in the [Device Options] tab
Windows NT4.0	[Collate Copies] in the [Page Setup] tab
Windows 3.1x	[Features] tab
Macintosh	[Printer Specific Options] in the print dialog box

Print Mode

Use this function to improve the print quality of text and graphics, and to reduce the amount of toner used when printing.

The available options are as follows:

- Through
Both “Edge Smoothing” and” Toner Saving” appear dimmed.
- Edge Smoothing
Indentations in curved lines are automatically smoothed to produce a cleaner appearance.
- Toner Saving
The amount of toner used in a print job will be reduced by about half. While this increases the life of the toner, the output will appear slightly lighter.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer features] in the [Device Options] tab
Windows NT 4.0	[Printer features] in [Document Options] in the [Advanced] tab
Windows 3.1x	[Features] tab
Macintosh	[Printer Specific Options] in the print dialog box

Staple

Use this function to have the output stapled. When you turn staple on, the printed document is collated automatically. You should switch off collation from the Print window of your application to prevent the entire job from being stapled together.

To use this function, SR720 (finisher) must be installed on your printer.

- Off
Disables stapling.
- Top Left Slant
Places a staple on the top left side of the document. The staple is placed at a 45 degree angle to the left side.

- **Top Right Slant**
Places a staple on the top right side of the document. The staple is placed at a 45 degree angle to the left side.
- **Bottom Left Slant**
Places a staple on the bottom left side of the document. The staple is placed at a 45 degree angle to the left side.
- **Bottom Right Slant**
Places a staple on the bottom right side of the document. The staple is placed at a 45 degree angle to the left side.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer features] in the [Device Options] tab
Windows NT 4.0	[Printer features] in [Document Options] in the [Advanced] tab
Windows 3.1x	[Features] tab
Macintosh	[Printer Specific Options] in the print dialog box

Edge Smoothing

Use this function to improve the print quality of text and graphics when printing. Indentations in curved lines are automatically smoothed to produce a cleaner appearance.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer features] in the [Device Options] tab
Windows NT 4.0	[Printer features] in [Document Options] in the [Advanced] tab
Windows 3.1x	[Features] tab
Macintosh	[Printer Specific Options] in the print dialog box

Toner Saver

Use this function to reduce the amount of toner used when printing. While this will increase the life of the toner, the output will appear slightly lighter.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Printer features] in the [Device Options] tab
Windows NT 4.0	[Printer features] in [Document Options] in the [Advanced] tab
Windows 3.1x	[Features] tab
Macintosh	[Printer Specific Options] in the print dialog box

Proof Printing

Use this function to print only the first printing of a multiple print job.

The other printings are saved on the optional hard disk. The saved job can be printed or canceled from the operation panel of the printer.

- To use this function, Printer Hard Disk Type 185 is required.
- This function is not available on computers running Windows 3.1x or Windows NT 4.0.

The following table shows the tabs or menus where you can select this function.

Windows 95/98	[Proof Print] tab
Windows NT 4.0	-
Windows 3.1x	-
Macintosh	[Proof Printing] in the print dialog box

Collate, Staple, Print Mode

Follow the steps below to print a document using “Collate”, “Staple” or “Print Mode”.

Windows 95/98

- 1 From an application, select the menu command to print.
 - The print dialog box appears.
- 2 Open the Printer Properties.
- 3 Click the [Device Options] tab.
- 4 In the [Printer features] box, select the function you want to use.
 - The current setting is displayed in the [Change setting for:] list.
- 5 Use the [Change setting for:] list to select the appropriate setting.
- 6 Click [Apply] to apply the settings you made.
- 7 After making all of the settings you want, click [OK] to close the Printer Properties.
- 8 Start printing from the application's print dialog box.

Windows NT 4.0

- 1 From an application, select the menu command to print.
 - The print dialog box appears.
- 2 Open the Printer Properties.
- 3 If you want to collate, select [Collate] from the [Page Setup] tab.
- 4 Click the [Advanced] tab.
- 5 From [Document Options], select the function you want to use.
 - The current setting is displayed in the [Change settings] box in the lower part of the tab.
- 6 Use the [Change settings] box to select the appropriate setting.
- 7 Click [Apply] to apply the settings you made.
- 8 After making all of the settings you want, click [OK] to close the Printer Properties.
- 9 Start printing from the application's print dialog box.

Windows 3.1x

- 1 From an application, select the menu command to print.
 - The print dialog box appears.
- 2 Open the Printer Setting dialog box.
- 3 Click the [Features] tab.
- 4 In the [Features] box, the available functions are displayed. Use the [Selection] list to select the appropriate setting.
- 5 After making all of the settings you want, click [OK] to close the Printer Setting dialog box.
- 6 Start printing from the application's print dialog box.

Macintosh

- 1 From an application, select the menu command to print.
 - The print dialog box appears.
- 2 Use the list box to select [Printer Specific Options].
- 3 Use the list box to select the appropriate setting.
- 4 After making all of the settings you want, click [OK].

Proof Print

Follow the steps below to print a document using “Proof Print”. To use this function, Printer Feature Expander Type 185 is required. This function is not available on computers running Windows 3.1x or Windows NT 4.0.

Windows 95/98

If the application has a collate option, confirm that it is not selected before sending a print job. By default, proof print jobs are automatically collated by the printer driver. If a collate option is selected from the application print dialog box, more printings than intended may be printed.

- 1 From an application, select the menu command to print.
 - The print dialog box appears.
- 2 Open the Printer Properties.
- 3 Click the [Proof Print] tab, and select [Proof Printing].
- 4 In the [User ID] box, type your User ID using up to 8 alphanumeric characters.
 - This is used to identify the user associated with a job.
 - “User ID” consists of up to 8 alphanumeric (a-z, A-Z, 0-9) characters.
- 5 Click [OK] to close the Printer Properties.
- 6 Start printing from the application's print dialog box.
 - The proof print job is sent to the printer and one printing set is printed.
- 7 Check the output to confirm whether the settings are OK or not.
 - If the settings are OK, go to step 8 to print the rest of the print job.
 - If not, you can delete the rest of the print job. See “Deleting a Proof Print File” on page 8-10.

- 8 On the machine's operation panel, press [User Tool].
- 9 Press [4] on the number keys.
- 10 From “Main Menu”, select “Proof Print “and press [Enter #].
- 11 From “Proof Print “, select “Print File” and press [Enter #].
- 12 Select the file you want to print and press [Enter #].
 - You can identify the file you want to print by the User ID you entered in step 4 and the time when the job was saved.
- 13 Press [Enter #] to start printing.

Macintosh

You have to install the plug-in module. For more information on installing the plug-in module to your computer, see the “Operating Instructions” that comes with the machine.

- 1 From an application, select the menu command to print.
 - The print dialog box appears.
- 2 Use the list box to select [Proof Print].
- 3 Use the list box to select the appropriate setting.
- 4 In the [User ID] box, type your User ID using up to 8 alphanumeric characters.
 - This is used to identify the user associated with a job.
 - “User ID” consists of up to 8 alphanumeric (a-z, A-Z, 0-9) characters.
- 5 After making all of the settings you want, click [Print].
 - The proof print job is sent to the printer and one printing set is printed.
- 6 Check the output to confirm whether the settings are OK or not.
 - If the settings are OK, go to step 7 to print the rest of the print job.
 - If not, you can delete the rest of the print job. See “Deleting a Proof Print File” on page 8-10.
- 7 On the machine's operation panel, press [User Tool].
- 8 Press [4] on the number keys.
- 9 From “Main Menu”, select “Proof Print “and press [Enter #].

- 10 From “Proof Print”, select “Print File” and press [Enter #].
- 11 Select the file you want to print and press [Enter #].
 - You can identify the file you want to print by the User ID you entered in step 4 and the time when the job was saved.
- 12 Press [Enter #] to start printing.

Deleting a Proof Print File

If the settings are incorrect, you can delete the rest of the print job. Follow these steps.

- 1 On the operation panel of the printer, press [User Tool].
- 2 Press [4] on the number keys.
- 3 From “Main Menu”, select “Proof Print “and press [Enter #].
- 4 From “Proof Print”, select “Delete File” and press [Enter #].
- 5 Select the file you want to cancel and press [Enter #].
 - You can identify the file you want to cancel by the User ID and the time when the job was saved.
- 6 Press [Enter #] to delete the file.

Specifications

Chapter Overview

This chapter covers:

- “Specifications” on page 9-1
- “Memory Capacity and Printer Function” on page 9-2
- “Agency Certifications” on page 9-3

Specifications

This section contains the electrical and hardware specifications for the printer, including the information on the options.

Component	Specification
Resolution	600dpi; PCL 5e, PCL 6, PostScript 3 300dpi; PCL 5e, PostScript 3
Printing Speed	22/27 * pages per minute (A4 <IconCo1 >K, 8 ¹ / ₂ " <FmSymbol >¥ 11" <IconCo1 >K)
Parallel Interface	Standard 36-pin printer cable and a parallel port on the host computer. IEEE1284B Do not use a parallel cable that is longer than 3 meters (10 feet).
Printer Language	PCL 5e , PCL 6, Post Script 3 (option)
Fonts	PCL 5e, PCL 6 35 Intellifonts, 10 TrueType fonts, and 1 Bitmap font Font Manager available. PostScript 136 Adobe Type 1 fonts
Memory	Standard: 16MB Optional Printer Feature Expander Type 185: Up to 80MB
Hard Disk (option)	Storage capacity: approximately. 1.6GB
Operation System Supported by this printer	Windows 95/98 Windows NT 4.0 Windows 3.1x Macintosh 7.1 (required the optional PostScript 3 and Network Interface Board Type 185)
Network (option)	Topology: Ethernet 10BASE-T/100BASE-TX
	Protocol: TCP/IP, IPX/SPX, NetBEUI, AppleTalk
Network Cable (option)	10BASE-T/100BASE-TX shielded twisted-pair (STP, Category/Type5) cable.

- * Printing Speed depends on using machine.

Memory Capacity and Printer Function

The following table shows the typical memory requirements for each printer function.

- Memory requirements depend on the complexity of the print data and the printing environment.

Functions	Required Options
Collating	Printer Feature Expander Type 185 or Printer Hard Disk Type 185
Stapling	SR720 (finisher)
Duplex Printing	Printer Feature Expander Type 185, AD370 (duplex unit)
Proof Printing	Printer Hard Disk Type 185

Moving and Transporting the Printer

CAUTION

When lifting the machine, use the grips on both sides of the machine. If you drop the machine, it could break or cause an injury.

When you move the machine, remember to unplug the power cord from the outlet. When you pull the plug out of the socket, hold it by the plug. If the cord is pulled out of the socket abruptly, it could become damaged. Damaged plugs or cords can cause an electrical or fire hazard.

When transporting paper, repack it with its original packing materials.

- Be sure to disconnect all cables from the printer before transporting it.
- The printer is a precision piece of machinery. Take care to avoid damage during shipment.

Agency Certifications

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:
**CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED
BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD
VOID THE USER'S AUTHORITY TO OPERATE THE
EQUIPMENT.**

CAUTION
**When installed in a 100BaseTX environment, properly shielded and
grounded cables (STP) and connectors must be used for connections to
host computer (and/or peripheral) in order to meet FCC emission limits.**

Declaration of Conformity

Product Name: Printer Controller

Model Number: Type 450 E

Responsible Party: Ricoh Corporation

Address: 5 Dedrick Place, West Caldwell, NJ 07006

Telephone number: 973-882-2000

This device complies with part 15 of FCC Rules.



Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme a la norme NMB-003 du Canada.

Notes:

Index

Chapter Overview

Use the index to quickly locate specific information about different topics.

A

Access Control Address 2-1, 2-5
 Access Control Mask 2-1, 2-5
 ActiveProtocols 2-1
 Agency certifications 9-3
 Auto Run 3-1

C

Collate 8-4
 Config. Page 7-12

D

Data In Indicator 1-8
 Delete File 7-6

E

Energy Saver key 1-8
 Error Indicator 1-8
 Error indicator 6-11
 Error Messages 6-1

F

Frame Type NetWare 2-1
 Function keys 1-8

G

Gateway Address 2-1, 2-5

H

Hex Dump 7-11

I

IP Address 2-1

J

Job Control 7-7
 FormFeed key 1-10
 Job Reset key 1-10

L

List Print 7-12

M

Macintosh 5-9, 5-12
 plugin File, uninstalling 4-4
 setting up options 3-13
 Maintenance 7-11
 memory 9-2
 menu 7-4
 Menu key 7-4
 Menu List 7-12
 Menu Reset 7-11

N

Network Boot 2-1
 Network Connections 1-2
 Network Interface Board 185 1-3
 Network Setup 7-10
 Number keys 1-8

O

On Line Indicator 1-8
 On Line indicator 6-11
 On Line key 6-11, 7-4
 Online and Offline 1-10
 Online key 1-10

Operation Switch 1-8
 Operational Panel 1-8
 options, setting up
 Macintosh 3-13

P

PageMaker 6.0 or 6.5 3-11
 Panel Display 1-8, 1-9
 Paper Input 7-7
 Parallel Cable 1-1, 1-2
 PCL 5e 1-7, 5-1
 Windows 3.1x, uninstalling 4-2
 Windows 95/98, uninstalling 4-1
 Windows NT 4.0, uninstalling 4-1
 PCL 6 1-7, 5-1
 Windows 3.1x, uninstalling 4-2
 Windows 95/98, uninstalling 4-1
 Windows NT 4.0, uninstalling 4-1
 PCL 6/5e
 Windows 3.1x - Install 3-6
 Windows 95/98 - Install 3-4
 Windows NT 4.0 - Install 3-5
 PostScript
 Windows NT 4.0 - Install 3-8
 PCL Font List 7-12
 PCL Menu 7-7
 PostScript 5-5
 Windows 3.1x - Install 3-9
 Windows 95/98 - Install 3-8
 Windows 95/98, uninstalling 4-3
 Windows NT 4.0, uninstalling 4-3
 PostScript Printer Driver
 Macintosh, uninstalling 4-4
 Windows 3.1x - Uninstall 4-4
 PostScript3
 collate 8-4, 8-6
 destination tray 8-3
 duplex printing 8-3
 edge smoothing 8-4, 8-5
 paper source 8-3
 print mode 8-4, 8-6
 printing a document 8-3
 proof print 8-8
 proof printing 8-4, 8-5
 resolution 8-3
 setting up options 8-1
 staple 8-4, 8-6

toner saver 8-4
tonersaver 8-5
PostScript
 Macintosh - Install 3-12
PPD 3-13
Print File 7-6
Print Quality 7-7
Printer Driver 3-4, 3-5, 3-6, 3-8,
 3-9
printer driver 1-6
Printer Features 7-1
Printing Problems 6-14
Proof Print 7-6, 7-16
PS Font List 7-12

R

Restart Printer 7-11

S

Scroll key 1-8
Show Error Log 7-6
Status Messages 6-1
Subnet Mask 2-1, 2-5
System 7-7

U

User Tools key 1-8

W

Windows 3.1x 5-3, 5-7, 5-11
 PCL 5e, uninstalling 4-2
 PCL 6, uninstalling 4-2
Windows 95/98 5-1, 5-5, 5-10
 PCL 5e, uninstalling 4-1
 PCL 6, uninstalling 4-1
 PostScript, uninstalling 4-3
Windows NT 4.0 5-2, 5-6, 5-10
 PCL 5e, uninstalling 4-1
 PCL 6, uninstalling 4-1
 PostScript, uninstalling 4-3

New Machine Warranty and Limitation of Liability

Warranty — 90 days

Lanier warrants that its equipment and accessories will be free from defective parts and workmanship for a period of ninety (90) days from the date of first installation by Lanier's Authorized Dealer. Customers must notify a Lanier servicing dealer or Lanier of a warranty claim within the warranty period. For a listing of authorized Lanier servicing dealers or to notify Lanier of a warranty claim, write to Lanier Worldwide, Inc., 2300 Parklake Drive, N.E., Atlanta, Georgia 30345-2979.

Warranty Exclusions

THE FOREGOING EXPRESS WARRANTY IS MADE IN LIEU OF ALL OTHER PRODUCT WARRANTIES, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS AND THOSE ARISING FROM A COURSE OF DEALING OF USAGE OF TRADE. The Express Warranty will not apply to drums, cleaning blades, fuser cleaning felts, toner, developer or paper or to defects of damage incurred in transportation, or due to accident; neglect; misuse such as use of harmful or unapproved supplies; alterations; operator error; power surges; failure to properly install, clean, maintain, or repair; improper operating environment; or failure to provide proper utilities. The Express Warranty also will not apply to used or refurbished Lanier equipment unless Lanier expressly authorizes resale with its original equipment warranty.

Limitation of Liability

Fulfillment of Lanier's warranty obligation shall be the Customer's exclusive remedy and Lanier's and the Lanier Dealer's limit of liability for any breach of warranty or otherwise. In no event will Lanier or Lanier's Dealers be responsible or liable for special, incidental or consequential losses or damages.



Customer Vision® –
our commitment to your
complete satisfaction



www.lanier.com

next level document solutions

Lanier Worldwide, Inc. | 2300 Parklake Drive, N.E. | Atlanta, GA USA 30345

T12012332