

# DAQ

---

## 6527 User Manual

Isolated Digital I/O Interface  
for PCI, PXI, and CompactPCI

## **Worldwide Technical Support and Product Information**

www.ni.com

### **National Instruments Corporate Headquarters**

11500 North Mopac Expressway Austin, Texas 78759-3504 USA Tel: 512 794 0100

### **Worldwide Offices**

Australia 03 9879 5166, Austria 0662 45 79 90 0, Belgium 02 757 00 20, Brazil 011 284 5011,  
Canada (Calgary) 403 274 9391, Canada (Ontario) 905 785 0085, Canada (Québec) 514 694 8521,  
China 0755 3904939, Denmark 45 76 26 00, Finland 09 725 725 11, France 01 48 14 24 24,  
Germany 089 741 31 30, Greece 30 1 42 96 427, Hong Kong 2645 3186, India 91805275406,  
Israel 03 6120092, Italy 02 413091, Japan 03 5472 2970, Korea 02 596 7456, Mexico (D.F.) 5 280 7625,  
Mexico (Monterrey) 8 357 7695, Netherlands 0348 433466, Norway 32 27 73 00, Poland 48 22 528 94 06,  
Portugal 351 1 726 9011, Singapore 2265886, Spain 91 640 0085, Sweden 08 587 895 00,  
Switzerland 056 200 51 51, Taiwan 02 2377 1200, United Kingdom 01635 523545

For further support information, see the *Technical Support Resources* appendix. To comment on the documentation, send e-mail to [techpubs@ni.com](mailto:techpubs@ni.com)

# Important Information

---

## Warranty

The 6527 device is warranted against defects in materials and workmanship for a period of one year from the date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace equipment that proves to be defective during the warranty period. This warranty includes parts and labor.

The media on which you receive National Instruments software are warranted not to fail to execute programming instructions, due to defects in materials and workmanship, for a period of 90 days from date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace software media that do not execute programming instructions if National Instruments receives notice of such defects during the warranty period. National Instruments does not warrant that the operation of the software shall be uninterrupted or error free.

A Return Material Authorization (RMA) number must be obtained from the factory and clearly marked on the outside of the package before any equipment will be accepted for warranty work. National Instruments will pay the shipping costs of returning to the owner parts which are covered by warranty.

National Instruments believes that the information in this document is accurate. The document has been carefully reviewed for technical accuracy. In the event that technical or typographical errors exist, National Instruments reserves the right to make changes to subsequent editions of this document without prior notice to holders of this edition. The reader should consult National Instruments if errors are suspected. In no event shall National Instruments be liable for any damages arising out of or related to this document or the information contained in it.

EXCEPT AS SPECIFIED HEREIN, NATIONAL INSTRUMENTS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CUSTOMER'S RIGHT TO RECOVER DAMAGES CAUSED BY FAULT OR NEGLIGENCE ON THE PART OF NATIONAL INSTRUMENTS SHALL BE LIMITED TO THE AMOUNT THEREFORE PAID BY THE CUSTOMER. NATIONAL INSTRUMENTS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF. This limitation of the liability of National Instruments will apply regardless of the form of action, whether in contract or tort, including negligence. Any action against National Instruments must be brought within one year after the cause of action accrues. National Instruments shall not be liable for any delay in performance due to causes beyond its reasonable control. The warranty provided herein does not cover damages, defects, malfunctions, or service failures caused by owner's failure to follow the National Instruments installation, operation, or maintenance instructions; owner's modification of the product; owner's abuse, misuse, or negligent acts; and power failure or surges, fire, flood, accident, actions of third parties, or other events outside reasonable control.

## Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

## Trademarks

ComponentWorks™, CVI™, LabVIEW™, MITE™, National Instruments™, ni.com™, NI-DAQ™, and PXI™ are trademarks of National Instruments Corporation.

Product and company names mentioned herein are trademarks or trade names of their respective companies.

## WARNING REGARDING USE OF NATIONAL INSTRUMENTS PRODUCTS

(1) NATIONAL INSTRUMENTS PRODUCTS ARE NOT DESIGNED WITH COMPONENTS AND TESTING FOR A LEVEL OF RELIABILITY SUITABLE FOR USE IN OR IN CONNECTION WITH SURGICAL IMPLANTS OR AS CRITICAL COMPONENTS IN ANY LIFE SUPPORT SYSTEMS WHOSE FAILURE TO PERFORM CAN REASONABLY BE EXPECTED TO CAUSE SIGNIFICANT INJURY TO A HUMAN.

(2) IN ANY APPLICATION, INCLUDING THE ABOVE, RELIABILITY OF OPERATION OF THE SOFTWARE PRODUCTS CAN BE IMPAIRED BY ADVERSE FACTORS, INCLUDING BUT NOT LIMITED TO FLUCTUATIONS IN ELECTRICAL POWER SUPPLY, COMPUTER HARDWARE MALFUNCTIONS, COMPUTER OPERATING SYSTEM SOFTWARE FITNESS, FITNESS OF COMPILERS AND DEVELOPMENT SOFTWARE USED TO DEVELOP AN APPLICATION, INSTALLATION ERRORS, SOFTWARE AND HARDWARE COMPATIBILITY PROBLEMS, MALFUNCTIONS OR FAILURES OF ELECTRONIC MONITORING OR CONTROL DEVICES, TRANSIENT FAILURES OF ELECTRONIC SYSTEMS (HARDWARE AND/OR SOFTWARE), UNANTICIPATED USES OR MISUSES, OR ERRORS ON THE PART OF THE USER OR APPLICATIONS DESIGNER (ADVERSE FACTORS SUCH AS THESE ARE HEREAFTER COLLECTIVELY TERMED "SYSTEM FAILURES"). ANY APPLICATION WHERE A SYSTEM FAILURE WOULD CREATE A RISK OF HARM TO PROPERTY OR PERSONS (INCLUDING THE RISK OF BODILY INJURY AND DEATH) SHOULD NOT BE RELIANT SOLELY UPON ONE FORM OF ELECTRONIC SYSTEM DUE TO THE RISK OF SYSTEM FAILURE. TO AVOID DAMAGE, INJURY, OR DEATH, THE USER OR APPLICATION DESIGNER MUST TAKE REASONABLY PRUDENT STEPS TO PROTECT AGAINST SYSTEM FAILURES, INCLUDING BUT NOT LIMITED TO BACK-UP OR SHUT DOWN MECHANISMS. BECAUSE EACH END-USER SYSTEM IS CUSTOMIZED AND DIFFERS FROM NATIONAL INSTRUMENTS' TESTING PLATFORMS AND BECAUSE A USER OR APPLICATION DESIGNER MAY USE NATIONAL INSTRUMENTS PRODUCTS IN COMBINATION WITH OTHER PRODUCTS IN A MANNER NOT EVALUATED OR CONTEMPLATED BY NATIONAL INSTRUMENTS, THE USER OR APPLICATION DESIGNER IS ULTIMATELY RESPONSIBLE FOR VERIFYING AND VALIDATING THE SUITABILITY OF NATIONAL INSTRUMENTS PRODUCTS WHENEVER NATIONAL INSTRUMENTS PRODUCTS ARE INCORPORATED IN A SYSTEM OR APPLICATION, INCLUDING, WITHOUT LIMITATION, THE APPROPRIATE DESIGN, PROCESS AND SAFETY LEVEL OF SUCH SYSTEM OR APPLICATION.

# Contents

---

## About This Manual

How To Use the Manual Set .....	ix
Conventions .....	x
Related Documentation.....	x

## Chapter 1

### Introduction

About the 6527 Device .....	1-1
Using PXI with CompactPCI.....	1-2
What You Need to Get Started .....	1-2
Unpacking .....	1-3
Software Programming Choices .....	1-3
National Instruments Application Software .....	1-3
NI-DAQ Driver Software .....	1-4
Optional Equipment .....	1-5
Custom Cabling .....	1-6
Safety Information .....	1-6

## Chapter 2

### Installation and Configuration

Software Installation .....	2-1
Hardware Installation.....	2-1
Board Configuration .....	2-2

## Chapter 3

### Signal Connections

I/O Connector .....	3-1
Cable Assembly Connectors.....	3-3
I/O Connector Signal Descriptions.....	3-5
Power Connections .....	3-6
Isolation Voltages .....	3-7
Optically Isolated Inputs.....	3-7
Input Channels.....	3-7
Sensing DC Voltages.....	3-8
Signal Connection Example .....	3-8
Reducing the Forward Current for High Voltages .....	3-9

Solid-State Relay Outputs .....	3-9
Output Channels.....	3-9
Overcurrent Protection.....	3-12
Power-on and Power-off Conditions.....	3-12

## **Chapter 4**

### **Device Overview**

Functional Overview .....	4-1
PCI Interface Circuitry.....	4-2
Digital I/O Circuitry.....	4-2
Optical Isolation Circuitry .....	4-3
Digital Filtering .....	4-3
Change Notification.....	4-5

## **Appendix A**

### **Specifications**

## **Appendix B**

### **Technical Support Resources**

## **Glossary**

## **Index**

## **Figures**

Figure 1-1. The Relationship between the Programming Environment, NI-DAQ, and Your Hardware.....	1-5
Figure 3-1. 6527 Device Connector Pin Assignments.....	3-2
Figure 3-2. Cable-Assembly Connector Pinout for the R1005050 Ribbon Cable.....	3-4
Figure 3-3. Signal Connection Example for Isolated Input.....	3-8
Figure 3-4. Reducing Input Current for High Voltage Signals .....	3-9
Figure 3-5. Signal Connections for Solid-State Relays .....	3-10
Figure 3-6. Signal Connections for Driving TTL Voltages.....	3-11
Figure 4-1. 6527 Block Diagram .....	4-2
Figure 4-2. Digital Filter Timing .....	4-5

## Tables

Table 3-1.	Port Functionality for 6527 Devices .....	3-3
Table 3-2.	Signal Descriptions for 6527 Device I/O Connectors .....	3-5
Table 4-1.	Digital Filter Characteristics .....	4-4
Table 4-2.	Change Notification Example .....	4-6

# About This Manual

---

This manual describes the electrical and mechanical aspects of the 6527 devices, and contains information concerning their operation and programming.

Unless otherwise noted, the text applies to all devices in the 6527 family, which includes the PCI-6527 and PXI-6527.

## How To Use the Manual Set

---

The *6527 User Manual* is one piece of the documentation set for your data acquisition system. You could have any of several types of manuals, depending on the hardware and software in your system. Use the manuals you have as follows:

- Your DAQ hardware user manuals—These manuals have detailed information about the DAQ hardware that plugs into or is connected to your computer. Use these manuals for hardware installation and configuration instructions, specification information about your DAQ hardware, and application hints.
- Software documentation—Examples of software documentation you may have are the LabVIEW, LabWindows/CVI, or ComponentWorks documentation sets and the NI-DAQ documentation. After you set up your hardware system, use either the application software or the NI-DAQ documentation to help you write your application. If you have a large and complicated system, it is worthwhile to look through the software documentation before you configure your hardware.
- Accessory installation guides or manuals—If you are using accessory products, read the terminal block and cable assembly installation guides or accessory board user manuals. They explain how to physically connect the relevant pieces of the system. Consult these guides when you are making your connections.

## Conventions

---

The following conventions appear in this manual:



Angle brackets that contain numbers separated by an ellipsis represent a range of values associated with a bit or signal name—for example, DIG+0.<3..0>.



The ♦ symbol indicates that the text following it applies only to a specific product, a specific operating system, or a specific software version.



This icon denotes a note, which alerts you to important information.



This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash.



This icon denotes a warning, which advises you of precautions to take to avoid being electrically shocked.

*italic*

Italic text denotes variables, emphasis, a cross reference, or an introduction to a key concept. This font also denotes text that is a placeholder for a word or value that you must supply.

monospace

Text in this font denotes text or characters that you should enter from the keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories, programs, subprograms, subroutines, device names, functions, operations, variables, filenames and extensions, and code excerpts.

## Related Documentation

---

The following documents also contain information that you may find helpful as you read this manual:

- Your computer's technical reference manual
- *PCI Local Bus Specification, Revision 2.0*
- National Instruments *PXI Specification, Revision 1.0*
- *PICMG 2.0 R2.1 CompactPCI*

---

# Introduction

This chapter describes the 6527 devices; lists what you need to get started, software programming choices, and optional equipment; describes custom cabling options; and explains how to unpack your board.

## About the 6527 Device

---

Thank you for purchasing a National Instruments 6527 device. The 6527 devices are 48-bit, parallel, isolated digital I/O interfaces for PCI bus computers and PXI or Compact PCI chassis. The 6527 devices offer 48 channels of isolated digital data acquisition. Twenty-four of the channels are optocoupler inputs and 24 are solid-state relay outputs. You can sense digital levels up to 28 VDC and switch currents of up to 120 mA. Digital filtering is available to eliminate glitches on the input lines. All input lines can also generate interrupts on rising or falling edges to notify you of changing data.

The PCI-6527 and PXI-6527 devices are completely jumperless DAQ devices for PCI buses and PXI or CompactPCI chassis, respectively. All devices in this family contain the National Instruments PCI MITE interface.

The 6527 devices are ideal for low-voltage isolation and switching in both industrial and laboratory environments. You can use the optically isolated digital input lines to read the status of external digital logic at TTL and non-TTL levels. You can use the solid-state relay outputs to switch external devices, including those requiring high input currents, and to control digital logic levels at both TTL and non-TTL levels. Because of the isolated nature of the 6527 devices, you can decouple the noise and harsh ground of the computer from external signals, and vice versa.

Detailed 6527 device specifications are in Appendix A, [Specifications](#).

## Using PXI with CompactPCI

---

Using PXI-compatible products with standard CompactPCI products is an important feature provided by the *PXI Specification*, Revision 1.0. If you use a PXI-compatible plug-in device in a standard CompactPCI chassis, you will be unable to use PXI-specific functions, but you can still use the basic plug-in device functions. All 6527 device functions are available in a CompactPCI chassis.

The CompactPCI specification permits vendors to develop sub-buses that coexist with the basic PCI interface on the CompactPCI bus. Compatible operation is not guaranteed between CompactPCI devices with different sub-buses nor between CompactPCI devices with sub-buses and PXI. The standard implementation for CompactPCI does not include these sub-buses. Your 6527 device will work in any standard CompactPCI chassis adhering to the *PICMG 2.0 R2.1 CompactPCI* core specification.

## What You Need to Get Started

---

To set up and use your 6527 device, you will need the following:

- One of the following devices:
  - PCI-6527
  - PXI-6527
- 6527 User Manual*
- One of the following software packages and documentation:
  - LabVIEW for Windows
  - LabWindows/CVI for Windows
  - ComponentWorks
  - NI-DAQ for PC Compatibles
- Your computer, or PXI or CompactPCI chassis and controller

# Unpacking

---

Your 6527 device is shipped in an antistatic package to prevent electrostatic damage to the board. Electrostatic discharge can damage several components on the board. To avoid such damage in handling the board, take the following precautions:

- Ground yourself via a grounding strap or by holding a grounded object.
- Touch the antistatic package to a metal part of your computer chassis before removing the board from the package.
- Remove the board from the package and inspect the board for loose components or any other sign of damage. Notify National Instruments if the board appears damaged in any way. Do *not* install a damaged board into your computer.
- *Never* touch the exposed pins of connectors.

## Software Programming Choices

---

There are several options to choose from when programming your National Instruments DAQ hardware. You can use LabVIEW, LabWindows/CVI, ComponentWorks, or other application development environments with the NI-DAQ driver software.

### National Instruments Application Software

LabVIEW features interactive graphics, a state-of-the-art user interface, and a powerful graphical programming language. The LabVIEW Data Acquisition VI Library, a series of VIs for using LabVIEW with National Instruments DAQ hardware, is included with LabVIEW. The LabVIEW Data Acquisition VI Library is functionally equivalent to the NI-DAQ software.

LabWindows/CVI features interactive graphics and a state-of-the-art user interface, and uses the ANSI standard C programming language. The LabWindows/CVI Data Acquisition Library, a series of functions for using LabWindows/CVI with National Instruments DAQ hardware, is included with the NI-DAQ software kit. The LabWindows/CVI Data Acquisition Library is functionally equivalent to the NI-DAQ software.


ComponentWorks contains tools for data acquisition and instrument control built on NI-DAQ driver software. ComponentWorks provides a higher-level programming interface for building virtual instruments through standard OLE controls and DLLs. With ComponentWorks, you can use all of the configuration tools, resource management utilities, and interactive control utilities included with NI-DAQ.

Using LabVIEW, LabWindows/CVI, or ComponentWorks software will greatly reduce the development time for your data acquisition and control application.

## NI-DAQ Driver Software

The NI-DAQ driver software is included with most National Instruments DAQ hardware. NI-DAQ has an extensive library of functions that you can call from your application programming environment. These functions allow you to use all features of your 6527 device.

NI-DAQ addresses many of the complex issues between the computer and the DAQ hardware such as programming interrupts. NI-DAQ maintains a consistent software interface among its different versions so that you can change platforms with minimal modifications to your code. Whether you are using LabVIEW, LabWindows/CVI, ComponentWorks, or other programming languages, your application uses the NI-DAQ driver software, as illustrated in Figure 1-1.

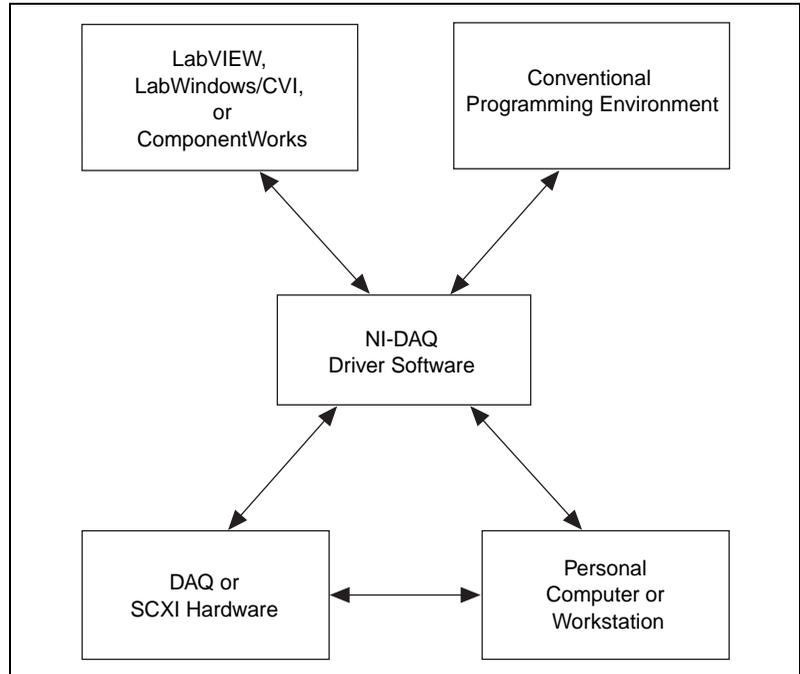

**Figure 1-1.** The Relationship between the Programming Environment, NI-DAQ, and Your Hardware

## Optional Equipment

National Instruments offers a variety of products to use with your 6527 device, including cables, connector blocks, and other accessories, as follows:

- Cables and cable assemblies, shielded and ribbon
- Connector blocks, unshielded and shielded 50- and 100-pin screw terminals

For more information about optional equipment available from National Instruments, refer to your National Instruments catalogue or web site or call the office nearest you.

## Custom Cabling

---

National Instruments offers cables and accessories for you to prototype your application or to use if you frequently change board interconnections.

If you want to develop your own cable, note that the 6527 device uses a 100-pin female cable header. AMP Corporation part number 749621-9 may be used for the mating connector. Backshells available for use on a cable with this connector include the following:

- AMP 749081-1
- AMP 749854-1

These backshells have a different thread width than the I/O connector on the 6527. A jackscrew to adapt the different thread widths is available from National Instruments; the part number is 745444-01.

## Safety Information

---



**Cautions** Do *not* operate the 6527 in an explosive atmosphere or where there may be flammable gases or fumes.

Do *not* operate the 6527 in a manner not specified in the manual.

Clean the 6527 and accessories by brushing off light dust with a soft nonmetallic brush. Remove other contaminants with a stiff nonmetallic brush. The unit must be completely dry and free from contaminants before returning it to service.

Connections, including power-signal-to-ground and ground-to-power-signal, that exceed any of the maximum signal ratings for the 6527 can damage any or all of the modules in the same PXI or CompactPCI chassis, or PCI-bus computer. National Instruments is *not* liable for any damages or injuries resulting from incorrect signal connections.

All signal wiring must be properly insulated. National Instruments is *not* liable for damage to equipment or injuries caused by improper signal wiring.

The 6527 must be used in a CE-marked PXI or CompactPCI chassis, or PCI-bus computer.

---

# Installation and Configuration

This chapter describes how to install and configure your 6527 device.

## Software Installation

---



**Note** Install your software before you install your 6527 device.

Refer to the appropriate release notes indicated below for specific instructions on the software installation sequence.

If you are using NI-DAQ, refer to your NI-DAQ release notes. Find the installation section for your operating system and follow the instructions given there.

If you are using LabVIEW, LabWindows/CVI, or other National Instruments application software packages, refer to the appropriate release notes. After you have installed your application software, refer to your NI-DAQ release notes and follow the instructions given there for your operating system and application software package.

## Hardware Installation

---



**Note** Install your software before you install your 6527 device.

The following are general installation instructions for each device. Consult your computer or chassis user manual or technical reference manual for specific instructions about installing new devices in your computer or chassis.

- ◆ PCI-6527  
You can install a PCI-6527 in any available 5 V PCI expansion slot in your computer:
  1. Turn off and unplug your computer.
  2. Remove the top cover or access port to the expansion slots.

3. Remove the expansion slot cover on the back panel of the computer.
  4. Touch a metal part inside your computer to discharge any static electricity that might be on your clothes or body.
  5. Insert the PCI-6527 in a 5 V PCI slot. It may be a tight fit, but do *not* force the device into place.
  6. Screw the mounting bracket of the PCI-6527 to the back panel rail of the computer.
  7. Visually verify the installation.
  8. Replace the top cover of your computer.
  9. Plug in and turn on your computer.
- ◆ **PXI-6527**  
You can install a PXI-6527 in any available 5 V peripheral slot in your PXI or CompactPCI chassis:
1. Turn off and unplug your PXI or CompactPCI chassis.
  2. Choose an unused PXI or CompactPCI 5 V peripheral slot.
  3. Remove the filler panel for the peripheral slot you have chosen.
  4. Touch a metal part of your chassis to discharge any static electricity that might be on your clothes or body.
  5. Insert the PXI-6527 in the selected 5 V slot. Use the injector/ejector handle to fully inject the device into place.
  6. Screw the front panel of the PXI-6527 to the front panel mounting rails of the PXI or CompactPCI chassis.
  7. Visually verify the installation.
  8. Plug in and turn on the PXI or CompactPCI chassis.

Your 6527 is now installed. You are now ready to configure your hardware and software.

## Board Configuration

---

Your 6527 device is completely software configurable. The PCI-6527 is fully compliant with the *PCI Local Bus Specification*, Revision 2.0, and the PXI-6527 is fully compliant with the *PXI Specification*, Revision 1.0. Therefore, all board resources are automatically allocated by the PCI system, including the base address and interrupt level. The board's base address is mapped into PCI memory space. You do not need to perform any configuration steps after the system powers up.

---

# Signal Connections

This chapter describes the pin arrangement, signal names, and signal connections on your 6527 device.



**Caution** Connections that exceed any of the maximum ratings of input or output signals on your 6527 device can damage the board and your computer. The description of each signal in this chapter includes information about maximum input ratings. National Instruments is *not* liable for any damages resulting from signal connections that exceed these maximum ratings.

## I/O Connector

---

The I/O connector for the 6527 device has 100 pins that you can connect to 50-pin accessories with the R1005050 cable or to 100-pin accessories with the shielded SH100100-F cable. Figure 3-1 shows the pin assignments for the 6527 device digital I/O connector. A signal description follows the figures.



**Note** For input ports, connect the higher voltage to the DIG+ pin and the lower voltage to the DIG– pin. For output ports, you can connect signals to the two pins of each line without regard to which voltage is higher. The output lines consist of solid-state relays and act as bidirectional switches.

DIG+2.7	1	51	DIG+5.7
DIG–2.7	2	52	DIG–5.7
DIG+2.6	3	53	DIG+5.6
DIG–2.6	4	54	DIG–5.6
DIG+2.5	5	55	DIG+5.5
DIG–2.5	6	56	DIG–5.5
DIG+2.4	7	57	DIG+5.4
DIG–2.4	8	58	DIG–5.4
DIG+2.3	9	59	DIG+5.3
DIG–2.3	10	60	DIG–5.3
DIG+2.2	11	61	DIG+5.2
DIG–2.2	12	62	DIG–5.2
DIG+2.1	13	63	DIG+5.1
DIG–2.1	14	64	DIG–5.1
DIG+2.0	15	65	DIG+5.0
DIG–2.0	16	66	DIG–5.0
DIG+1.7	17	67	DIG+4.7
DIG–1.7	18	68	DIG–4.7
DIG+1.6	19	69	DIG+4.6
DIG–1.6	20	70	DIG–4.6
DIG+1.5	21	71	DIG+4.5
DIG–1.5	22	72	DIG–4.5
DIG+1.4	23	73	DIG+4.4
DIG–1.4	24	74	DIG–4.4
DIG+1.3	25	75	DIG+4.3
DIG–1.3	26	76	DIG–4.3
DIG+1.2	27	77	DIG+4.2
DIG–1.2	28	78	DIG–4.2
DIG+1.1	29	79	DIG+4.1
DIG–1.1	30	80	DIG–4.1
DIG+1.0	31	81	DIG+4.0
DIG–1.0	32	82	DIG–4.0
DIG+0.7	33	83	DIG+3.7
DIG–0.7	34	84	DIG–3.7
DIG+0.6	35	85	DIG+3.6
DIG–0.6	36	86	DIG–3.6
DIG+0.5	37	87	DIG+3.5
DIG–0.5	38	88	DIG–3.5
DIG+0.4	39	89	DIG+3.4
DIG–0.4	40	90	DIG–3.4
DIG+0.3	41	91	DIG+3.3
DIG–0.3	42	92	DIG–3.3
DIG+0.2	43	93	DIG+3.2
DIG–0.2	44	94	DIG–3.2
DIG+0.1	45	95	DIG+3.1
DIG–0.1	46	96	DIG–3.1
DIG+0.0	47	97	DIG+3.0
DIG–0.0	48	98	DIG–3.0
+5 V	49	99	+5 V
GND	50	100	GND

**Figure 3-1.** 6527 Device Connector Pin Assignments

Table 3-1 shows the functionality of each port.

**Table 3-1.** Port Functionality for 6527 Devices

<b>Port</b>	<b>Function</b>
0	Input
1	Input
2	Input
3	Output with readback
4	Output with readback
5	Output with readback

## Cable Assembly Connectors

The optional R1005050 cable assembly you can use with the 6527 device is an assembly of two 50-pin cables and three connectors. Both cables are joined to a single connector on one end and to individual connectors on the free ends. The 100-pin connector that joins the two cables plugs into the I/O connector of the 6527 device. The other two connectors are 50-pin connectors, one of which is connected to pins 1 through 50 and the other to pins 51 through 100 of the 6527 device connector. Figures 3-2 and 3-3 show the pin assignments for the 50-pin connectors on the cable assembly.

DIG+2.7	1	2	DIG-2.7	DIG+5.7	51	52	DIG-5.7
DIG+2.6	3	4	DIG-2.6	DIG+5.6	53	54	DIG-5.6
DIG+2.5	5	6	DIG-2.5	DIG+5.5	55	56	DIG-5.5
DIG+2.4	7	8	DIG-2.4	DIG+5.4	57	58	DIG-5.4
DIG+2.3	9	10	DIG-2.3	DIG+5.3	59	60	DIG-5.3
DIG+2.2	11	12	DIG-2.2	DIG+5.2	61	62	DIG-5.2
DIG+2.1	13	14	DIG-2.1	DIG+5.1	63	64	DIG-5.1
DIG+2.0	15	16	DIG-2.0	DIG+5.0	65	66	DIG-5.0
DIG+1.7	17	18	DIG-1.7	DIG+4.7	67	68	DIG-4.7
DIG+1.6	19	20	DIG-1.6	DIG+4.6	69	70	DIG-4.6
DIG+1.5	21	22	DIG-1.5	DIG+4.5	71	72	DIG-4.5
DIG+1.4	23	24	DIG-1.4	DIG+4.4	73	74	DIG-4.4
DIG+1.3	25	26	DIG-1.3	DIG+4.3	75	76	DIG-4.3
DIG+1.2	27	28	DIG-1.2	DIG+4.2	77	78	DIG-4.2
DIG+1.1	29	30	DIG-1.1	DIG+4.1	79	80	DIG-4.1
DIG+1.0	31	32	DIG-1.0	DIG+4.0	81	82	DIG-4.0
DIG+0.7	33	34	DIG-0.7	DIG+3.7	83	84	DIG-3.7
DIG+0.6	35	36	DIG-0.6	DIG+3.6	85	86	DIG-3.6
DIG+0.5	37	38	DIG-0.5	DIG+3.5	87	88	DIG-3.5
DIG+0.4	39	40	DIG-0.4	DIG+3.4	89	90	DIG-3.4
DIG+0.3	41	42	DIG-0.3	DIG+3.3	91	92	DIG-3.3
DIG+0.2	43	44	DIG-0.2	DIG+3.2	93	94	DIG-3.2
DIG+0.1	45	46	DIG-0.1	DIG+3.1	95	96	DIG-3.1
DIG+0.0	47	48	DIG-0.0	DIG+3.0	97	98	DIG-3.0
+5 V	49	50	GND	+5 V	99	100	GND

**Figure 3-2.** Cable-Assembly Connector Pinout for the R1005050 Ribbon Cable

## I/O Connector Signal Descriptions

Table 3-2 lists the signal descriptions for the 6527 device I/O connector pins.

**Table 3-2.** Signal Descriptions for 6527 Device I/O Connectors

Pin	Signal Name	Description
33, 35, 37, 39, 41, 43, 45, 47	DIG+0.<7..0>	Isolated input port 0, positive terminals—Take measurements at these terminals. These terminals should be positive relative to their corresponding DIG– lines. A logic high (data bit of 1) indicates input voltage and current are present.
34, 36, 38, 40, 42, 44, 46, 48	DIG–0.<7..0>	Isolated input port 0, negative terminals—Each of these terminals serves as the reference terminal from which the corresponding DIG+ line is measured. A logic high (data bit of 1) indicates input voltage and current are present.
17, 19, 21, 23, 25, 27, 29, 31	DIG+1.<7..0>	Isolated input port 1, positive terminals—Take measurements at these terminals. These terminals should be positive relative to their corresponding DIG– lines. A logic high (data bit of 1) indicates input voltage and current are present.
18, 20, 22, 24, 26, 28, 30, 32	DIG–1.<7..0>	Isolated input port 1, negative terminals—Each of these terminals serves as the reference terminal from which the corresponding DIG+ line is measured. A logic high (data bit of 1) indicates input voltage and current are present.
1, 3, 5, 7, 9, 11, 13, 15	DIG+2.<7..0>	Isolated input port 2, positive terminals—Take measurements at these terminals. These terminals should be positive relative to their corresponding DIG– lines. A logic high (data bit of 1) indicates input voltage and current are present.
2, 4, 6, 8, 10, 12, 14, 16	DIG–2.<7..0>	Isolated input port 2, negative terminals—Each of these terminals serves as the reference terminal from which the corresponding DIG+ line is measured. A logic high (data bit of 1) indicates input voltage and current are present.
49, 99	+5 V	+5 Volts—These pins are fused for up to 1 A total of +4.5 to +5.25 V from the computer power supply. <i>These pins are not isolated.</i>
50, 100	GND	Ground—These pins are connected to the computer ground reference. <i>These pins are not isolated.</i>

**Table 3-2.** Signal Descriptions for 6527 Device I/O Connectors (Continued)

Pin	Signal Name	Description
83, 85, 87, 89, 91, 93, 95, 97	DIG+3.<7..0>	Isolated output port 3, first terminals—Each of these is the first of two terminals of a bidirectional solid-state relay. A logic low (data bit of 0) closes the relay.
84, 86, 88, 90, 92, 94, 96, 98	DIG–3.<7..0>	Isolated output port 3, second terminals—Each of these is the second of two terminals of a bidirectional solid-state relay. A logic low (data bit of 0) closes the relay.
67, 69, 71, 73, 75, 77, 79, 81	DIG+4.<7..0>	Isolated output port 4, first terminals—Each of these is the first of two terminals of a bidirectional solid-state relay. A logic low (data bit of 0) closes the relay.
68, 70, 72, 74, 76, 78, 80, 82	DIG–4.<7..0>	Isolated output port 4, second terminals—Each of these is the second of two terminals of a bidirectional solid-state relay. A logic low (data bit of 0) closes the relay.
51, 53, 55, 57, 59, 61, 63, 65	DIG+5.<7..0>	Isolated output port 5, first terminals—Each of these is the first of two terminals of a bidirectional solid-state relay. A logic low (data bit of 0) closes the relay.
52, 54, 56, 58, 60, 62, 64, 66	DIG–5.<7..0>	Isolated output port 5, second terminals—Each of these is the second of two terminals of a bidirectional solid-state relay. A logic low (data bit of 0) closes the relay.

## Power Connections

Four of the pins on the I/O connector are not isolated. Pin 50 and pin 100 connect to GND, the computer ground reference. Pin 49 and pin 99 of the I/O connector supply +5 V from the computer power supply via a self-resetting fuse. The fuse resets automatically within a few seconds after an overcurrent condition is removed. The +5 V pins are referenced to the GND pins and can be used to power external digital circuitry that does not require isolation.

- Power rating: 1 A at +4.5 to +5.25 V



**Warning** The power pins, +5 V and GND, are *not* isolated; they connect to your computer power supply. Never connect a +5 V power pin directly to GND. Never connect a +5 V or GND pin to any other voltage source; doing so can lead to injury. National Instruments is *not* liable for any damages or injuries resulting from such a connection.

## Isolation Voltages

---

The positive and negative (DIG+ and DIG–) terminals of each channel are isolated from the other input and output channels, from the +5 V and GND pins, and from the computer power supply. Isolation barriers provide isolation up to 60 VDC or 30 VAC (42 V peak) between any two terminals, except between the two terminals making up a single digital I/O channel.

Do not exceed 60 VDC or 30 VAC between any two terminals of the 6527 device, including:

- any two digital I/O (DIG+ or DIG–) lines of separate channels
- any DIG+ or DIG– line and the GND or +5 V lines
- the DIG+ line and the DIG– line of any output channel

Do not exceed 28 VDC or apply any negative or AC voltage between the DIG+ and DIG– terminals of any input channel.



**Warning** You must not exceed the isolation voltage limits. Exceeding the voltage limits can lead to injury. National Instruments is *not* liable for any damages resulting from signal connections that exceed these limits.

## Optically Isolated Inputs

---

On a 6527 device, I/O connector pins 1 through 48, shown in Figure 3-1, represent the optically isolated input signal pins.

## Input Channels

The optically isolated inputs of a 6527 device contain a light-emitting diode (LED), a resistor for current limiting, and digital filtering and change-detection circuitry. The 6527 boards offer 24 channels of isolated digital input. Each channel has its own positive and negative terminals. Always apply the higher voltage, if any, to the positive terminal. The maximum input voltage ( $V_{IN}$ ) on these channels is +28 VDC.



**Caution** Never apply a voltage to the positive (DIG+) terminal of any input channel that is lower than the voltage on the channel's negative (DIG–) terminal. National Instruments is *not* liable for any damages resulting from incorrect signal connection.

## Sensing DC Voltages

When you apply a DC voltage of at least 2 V across the two input terminals, the 6527 device registers a logic high for that input. If no voltage is present (a voltage difference of 1 V or less), the 6527 device registers a logic low for that input. DC voltages between 1 V and 2 V are invalid and register an indeterminate value. Thus, you can use the 6527 device to sense a wide range of DC signals—from TTL logic levels to DC power supply levels up to 28 V.

## Signal Connection Example

Figure 3-3 shows signal connections for a supply and load connected to an isolated input. In this figure, the 6527 device is being used to sense that a load is being powered. The load is connected to the power supply by means of a switch. This power supply can be any DC voltage within the 6527 device range. When the switch is open, no current flows through the load and no voltage is applied to the load or to the 6527 device input. The digital logic of the 6527 device then registers a logic low for the channel. When the switch is closed, current flows through the LED and the 6527 device registers a logic high for the channel.

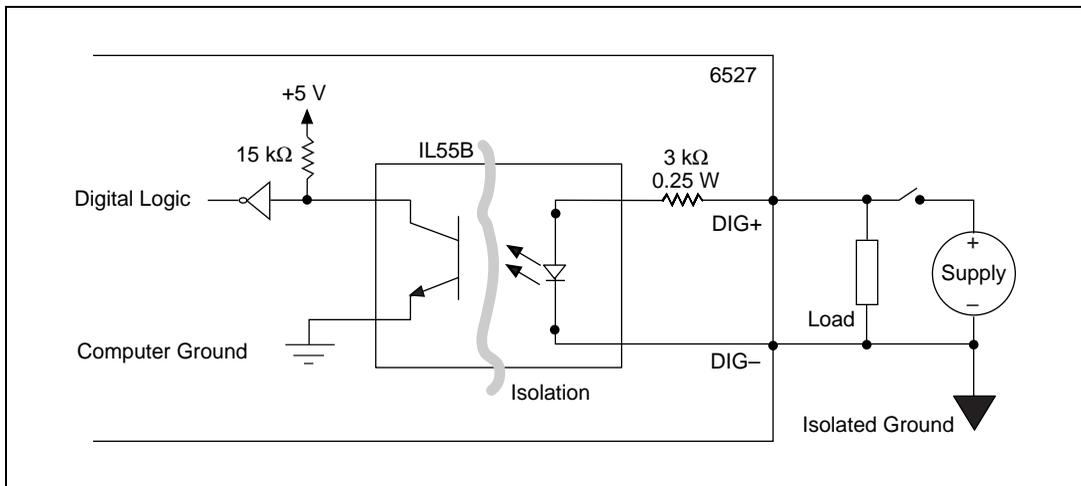


Figure 3-3. Signal Connection Example for Isolated Input

## Reducing the Forward Current for High Voltages

As input voltage increases above 5 V, the input current drawn by the 6527 (forward current  $I_f$ ) also rises. At 24 V, for example, current is approximately  $(24\text{ V} - 1.5\text{ V})/3\text{ k}\Omega = 7.5\text{ mA}$  per line.

If you wish to reduce the current and power the 6527 draws—to reduce the impact on a circuit you are monitoring, for example—you can add another resistor in series with the 3 k $\Omega$  current-limiting resistor on the 6527. It is recommended you choose a resistance value allowing at least 1 mA to flow through the LED. Assume a maximum drop across the LED of 1.5 V. For example, for 24 V inputs you could use a resistance of up to  $(24\text{ V} - 1.5\text{ V})/1\text{ mA} - 3\text{ k}\Omega \approx 20\text{ k}\Omega$  for  $R_s$ .

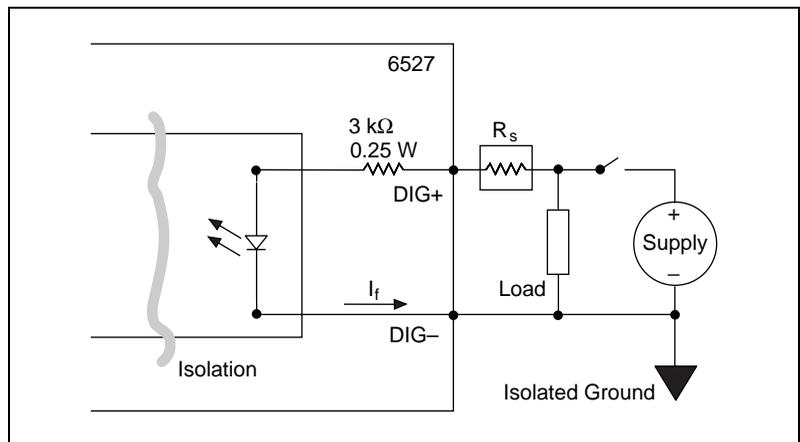


Figure 3-4. Reducing Input Current for High Voltage Signals


## Solid-State Relay Outputs

On a 6527 device, I/O connector pins 51 through 98 shown in Figure 3-1 represent the terminals of the solid-state relays.

### Output Channels

The output channels of a 6527 device are solid-state relays containing an LED and two MOSFETs connected together to form a bidirectional switch. Depending on how the load is connected to the terminals, an output can either source or sink currents.

Figure 3-5 shows two signal connection examples for driving a load with these solid-state relays.

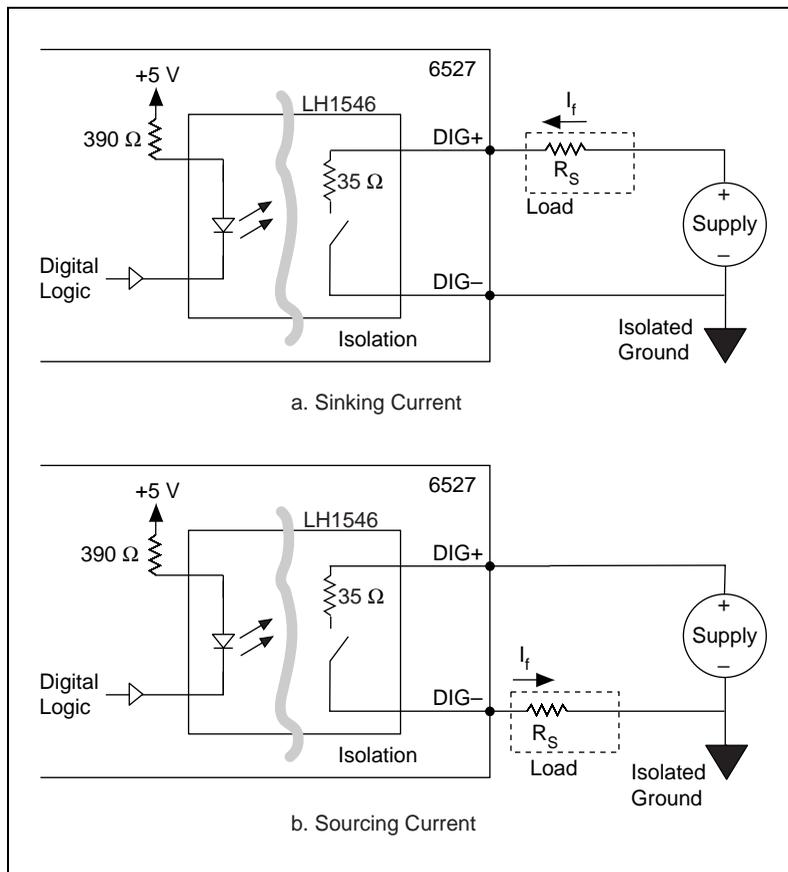

**Figure 3-5.** Signal Connections for Solid-State Relays

Writing a 0 (logic low) to an output bit closes the relay, and writing a 1 (logic high) opens the relay.


To both sink and source current with one channel requires an external resistor. You can use the solid-state relays of a 6527 device with external resistors to drive voltages at TTL or non-TTL levels, from -60 to 60 VDC or 30 VAC (42 V peak).

For isolated power, total current on all channels exceeding 1 A, or voltages other than +5 V, you can provide an external power supply. For driving non-isolated +5 V outputs totaling less than 1 A—for example, when using the 6527 as a TTL-level output device—you can use the +5 V line from the 6527 device as your voltage source.

Figure 3-6 shows a signal connection example for both sinking and sourcing current. The example shows a TTL-level application with a supply voltage of +5 V. The 6527 provides sink current when the relay is closed. Resistor  $R_L$  provides source current when the relay is open.

When the relay is open, little current flows through the resistor and the output voltage is close to 5 V, a logic high. When the relay is closed, current flows through the load and the output voltage is close to 0 V, a logic low. If isolation is not a concern, you can use the +5 V line from the 6527 device in place of the external +5 V supply.

Choose a value of  $R_L$  small enough to provide the source current you need but large enough to avoid reducing sink current or consuming unnecessary power. For many TTL-level applications, a value of approximately  $R_L = 5\text{ k}\Omega$  works well. This gives a source current at 2.8 V of  $(5\text{ V} - 2.8\text{ V})/5\text{ k}\Omega = 440\text{ }\mu\text{A}$ . The sink current at 0.5 V is then at least  $(0.5\text{ V} / 35\text{ }\Omega) - (5\text{ V} - 0.5\text{ V})/5\text{ k}\Omega = 13.4\text{ mA}$ .

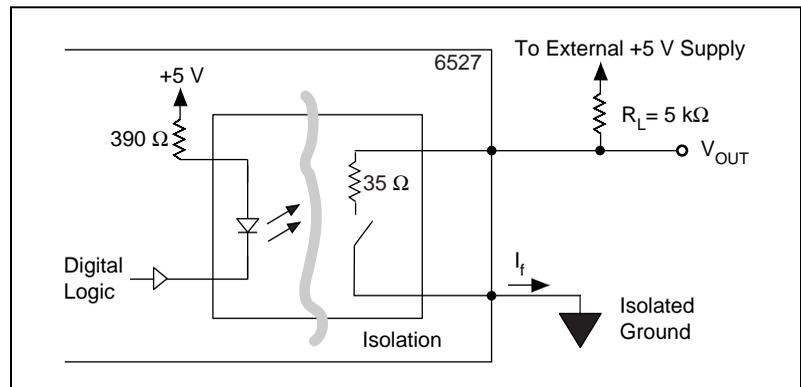

**Figure 3-6.** Signal Connections for Driving TTL Voltages

The maximum power ratings for the output channels on a 6527 device are as follows:

- Maximum DC voltage across the terminals ( $V_{OUT}$ ) = 60 VDC
- Maximum AC voltage across the terminals ( $V_{OUT}$ ) =  $30 V_{RMS}$  ( $42 V_{Peak}$ )
- Maximum current ( $I_f$ ) = 120 mA<sup>1</sup>

<sup>1</sup> With all relays carrying 120 mA and all inputs driven to 28 V, the total power dissipation can approach 20 W. The maximum switching capacity in PCI and CompactPCI systems must be derated according to the ambient temperature. (The PXI chassis has built-in fans to handle 25 W per slot.)

## Overcurrent Protection

The 6527 device outputs include circuitry to protect them from currents over the specified range. When excessive current flows through the relay, the relay increases resistance. Once the current level drops back under the specified range, the relays return to normal operation.

The overcurrent protection ratings for a 6527 device are as follows (typical at 25 °C):

- Overcurrent protection limit = 260 mA
- Current limit time = 1  $\mu$ s at 7 V
- Duration of current above operating current (120 mA): 1 s max at 7 V



**Caution** Overcurrent protection is for protection against transient fault conditions only. The 6527 should not normally be operated above 120 mA. National Instruments is *not* liable for any damages resulting from signal connections that exceed 120 mA.

## Power-on and Power-off Conditions

At power-up, the initial state of the digital output lines are logic high and the solid-state relays are open. The solid-state relays are also open when the computer and the 6527 device are powered off.

---

# Device Overview

This chapter contains a functional overview of the 6527 device and explains the operation of each functional unit. The digital filter and change detection options are also described.

## Functional Overview

---

The block diagram in Figure 4-1 illustrates the key functional components of your 6527 device.

The major components making up your 6527 device include the following:

- PCI interface circuitry
- Digital I/O circuitry
- Optical isolation circuitry

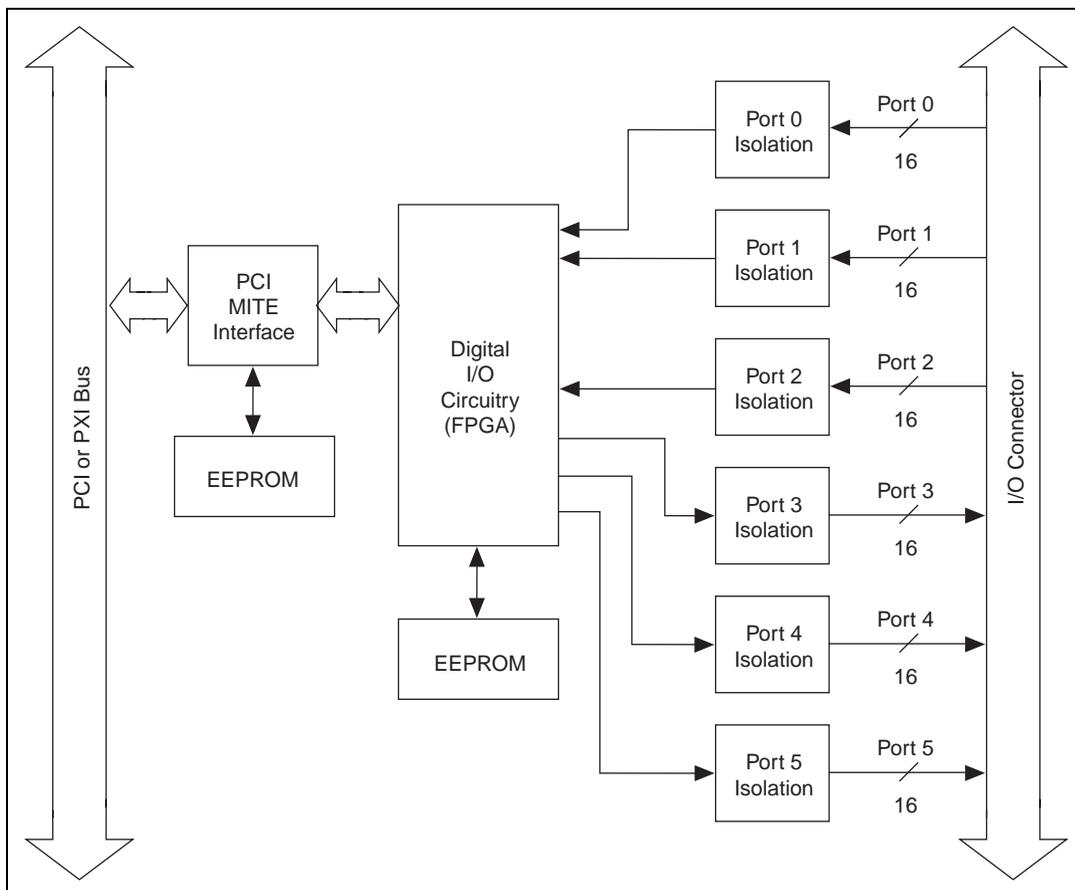


Figure 4-1. 6527 Block Diagram

## PCI Interface Circuitry

Your 6527 board uses the PCI MITE ASIC to communicate with the PCI bus. The PCI MITE was designed by National Instruments specifically for data acquisition. The PCI MITE is fully compliant with *PCI Local Bus Specification 2.0*.

## Digital I/O Circuitry

You can use your 6527 board as follows:

- Output ports
  - Write
  - Read back

- Input ports
  - Read
  - Apply digital filtering (software programmable)
  - Detect changes on selected lines (software programmable)

Table 3-1, *Port Functionality for 6527 Devices*, contains a summary of port functions.

## Optical Isolation Circuitry

The digital input ports of a 6527 device are optically isolated using Infineon IL55B optocouplers. Each IL55B provides optical isolation for one channel of input.

Isolation on the output is provided by Infineon LH1546 solid-state relays. One solid-state relay is used for isolation at each channel of output.

For diagrams of the complete input and output circuitry, see Chapter 3, *Signal Connections*.

## Digital Filtering

---

All of the inputs on the 6527 device contain a digital filter option. Filtering can help eliminate glitches on input data. When used with change notification, filtering can also reduce the number of changes for you to examine and process.

You can configure any of the digital input channels from the optocouplers to pass through a digital filter. You can also control the timing interval used by the filter. The filter blocks pulses shorter than the specified timing interval, treating them as glitches. The filter passes pulses longer than twice the specified interval. Intermediate-length pulses—pulses longer than the interval but less than twice the interval—may or may not pass the filter.

The filter operates on the inputs from the optocouplers. The optocouplers turn on faster than they turn off, passing rising edges faster than falling edges. The optocouplers can therefore add up to 100  $\mu$ s to a high pulse or subtract up to 100  $\mu$ s from a low pulse (a 100  $\mu$ s change is typical at  $I_F = 5$  mA,  $R_L = 100$   $\Omega$ ). As a result, the pulse widths guaranteed to be passed and blocked are those shown in Table 4-1.

**Table 4-1.** Digital Filter Characteristics

Filter Interval	Pulse Width Passed		Pulse Width Blocked	
	Low Pulse	High Pulse	Low Pulse	High Pulse
$t_{\text{interval}}$	$t_{\text{interval}} + 100 \mu\text{s}$	$t_{\text{interval}}$	$t_{\text{interval}} / 2$	$(t_{\text{interval}} / 2) - 100 \mu\text{s}$

You can enable filtering on as many input lines as you wish. All filtered lines share the same timing interval. The interval ranges from 100 ns to 100 ms. However, as shown in Table 4-1, an interval of 200  $\mu\text{s}$  or less does not guarantee blocking of high pulses. Therefore, an interval greater than 200  $\mu\text{s}$  is recommended.

Internally, the filter uses two clocks. The first, a sample clock, has a 100 ns period. The second, a filter clock, is generated by a counter and has a period equal to one half your specified timing interval. The input signal from the optocoupler is sampled on each rising edge of the sample clock—every 100 ns. However, a change in the input signal is recognized only if it maintains its new state for at least two consecutive rising edges of the filter clock.

The two clocks serve different functions. The filter clock, which is programmable, lets you control how long a pulse must last to be recognized. The sample clock provides a fast sample rate to ensure that input pulses remain constant between filter clocks.

Figure 4-2 shows a filter configuration with an 800 ns filter interval (400 ns filter clock). In practice, a much slower filter interval is recommended. In periods A and B the filter blocks the glitches because the external signal does not remain steadily high from one filter clock to the next. In period C, the filter passes the transition because the external signal does remain steadily high. Depending on when the transition occurs, the filter may require up to two filter clocks—one full filter interval—to pass a transition. The figure shows a rising 0-to-1 transition; the same filtering applies to falling 1-to-0 transitions.

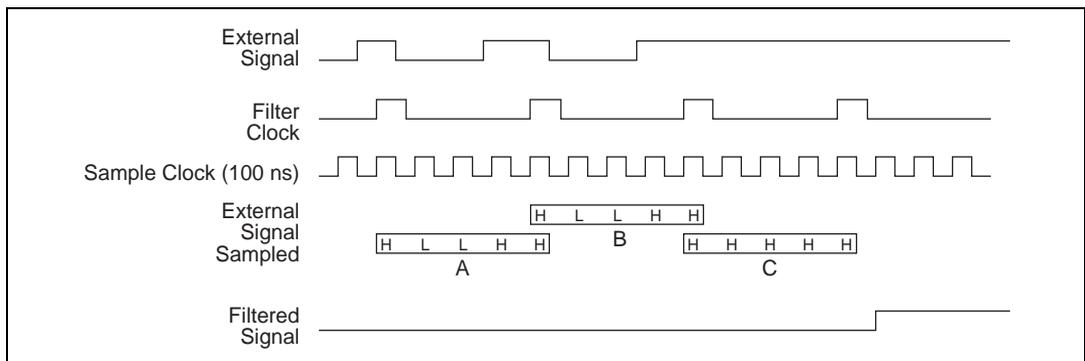


Figure 4-2. Digital Filter Timing

## Change Notification

You can program the 6527 to notify you of changes on input lines. Change notification can reduce the number of reads your software must perform to monitor inputs. Instead of reading the inputs continuously, your software reacts only to transitions.

You can monitor changes on selected input lines or on all lines. You can monitor for rising edges (0-to-1), falling edges (1-to-0), or both. When an input change occurs matching your criteria, the 6527 generates an interrupt. The NI-DAQ driver can then notify your software using a DAQ event, message, or LabVIEW occurrence. See your software documentation for information about support for event notification in your software environment.

The 6527 notifies you when any one of the changes you are monitoring occurs; the 6527 does not report which line changed or whether the line rose or fell. After a change, you can read the input lines to determine the current line states. The maximum rate of change notification is therefore limited by software response time and varies from system to system.

If you anticipate noisy or rapidly changing input lines, use digital filtering to reduce the changes to a manageable number; excessive notifications can hurt system performance. For example, if you want to limit the rate of notifications (and interrupts) to a maximum of one change per line every 10 ms, set a filter interval of 10 ms.

Table 4-2 shows configuring change notification for five bits of one port. This example assumes the following line connections:

- Bits 7, 6, 5, and 4 are connected to data lines from a four-bit TTL input device. The 6527 detects any change in the input data so you can read the new data value.
- Bit 1 is connected to a limit sensor; the 6527 detects rising edges on the sensor, which correspond to over-limit conditions.
- Bit 0 is connected to a switch. Your software can react to any switch closure, represented by a falling edge. If the switch closure is noisy, you should also enable digital filtering for at least this line.

In this example, the 6527 reports rising and falling edges on bits 7, 6, 5, and 4; rising edges only on bit 1; and falling edges only on bit 0. The 6527 reports no changes for bits 3 and 2. After receiving notification of a change, you can read the port to determine the current values of all eight lines.

**Table 4-2.** Change Notification Example

	Bit							
	7	6	5	4	3	2	1	0
<b>Changes to detect</b>	↕	↕	↕	↕	—	—	↑	↓
<b>Enable rising-edge detection</b>	yes	yes	yes	yes	no	no	yes	no
<b>Enable falling-edge detection</b>	yes	yes	yes	yes	no	no	no	yes

## Specifications

This appendix lists the specifications for the 6527 devices. These specifications are typical at 25 °C unless otherwise noted.

### Digital I/O

PCI/PXI-6527..... 24 optically isolated digital input channels and  
24 solid-state relay output channels

### Isolated Inputs

Number of input channels ..... 24, each with its own ground reference isolated from other channels

Max input voltage ..... 28 VDC

#### Digital logic levels

Level	Min	Max
Input low voltage	0 VDC	1 VDC
Input high voltage	2 VDC	28 VDC

#### Input current

5 V inputs ..... 1.5 mA/channel max

24 V inputs ..... 8 mA/channel max

Isolation ..... 60 VDC channel-to-channel and from computer ground and  $V_{CC}$

## Relay Outputs

Number of channels .....	24, each with two terminals that are isolated from other channels
Relay type .....	Normally open form A solid-state relays
Max switching voltage	
AC.....	30 V <sub>RMS</sub> (42 V peak)
DC.....	60 VDC
Max switching capacity .....	120 mA <sup>1</sup>
Common-mode isolation .....	60 VDC 30 V <sub>RMS</sub> (42 V peak) (channel-to-channel and channel-to-computer)
On resistance (see Figure A-2) .....	35 Ω max; 25 Ω typ
Output capacitance .....	55 pF at 1 V
Off leakage current (max).....	200 nA
Relay set time (max).....	3.0 ms
Relay reset time (max).....	3.0 ms
Power-on state .....	Relays open
Overcurrent protection on outputs, typical at 25 °C, V <sub>relay</sub> = 7 V	
Current limit .....	260 mA
Shutdown time.....	1 μs
Overcurrent duration (max).....	1 second

## Power Requirement

+5 VDC (±5%) .....	500 mA max
Power available at I/O connector.....	+4.5 to +5.25 VDC, fused at 1 A

<sup>1</sup> With all relays carrying 120 mA and all inputs driven to 28 V, the total power dissipation can approach 20 W. The maximum switching capacity in PCI and CompactPCI systems must be derated according to the ambient temperature. (The PXI chassis has built-in fans to handle 25 W per slot.)

## Physical

Dimensions (not including connectors)	
PCI-6527 .....	17.5 × 10.7 cm (6.9 × 4.2 in.)
PXI-6527 .....	16 × 10 cm (6.3 × 3.9 in.)
I/O connector.....	100-pin keyed female ribbon-cable connector

## Environment

Operating temperature.....	0 to 50 °C
Storage temperature .....	–20 to 70 °C
Relative humidity .....	10% to 90% noncondensing
Functional shock (PXI-6527).....	MIL-T-28800 E Class 3 (per Section 4.5.5.4.1); half-sine shock pulse, 11 ms duration, 30 g peak, 30 shocks per face
Operational random vibration (PXI-6527) .....	
	5 to 500 Hz, 0.31 g <sub>rms</sub> , 3 axes
Nonoperational random vibration (PXI-6527) .....	
	5 to 500 Hz, 2.5 g <sub>rms</sub> , 3 axes



**Note** Non-operational random vibration profiles were developed in accordance with MIL-T-28800E and MIL-STD-810E Method 514. Test levels exceed those recommended in MIL-STD-810E for Category 1 (Basic Transportation, Figures 514.4-1 through 514.4-3).

## Safety

Designed in accordance with IEC/EN 61010-1, UL 3111-1, and CAN/CSA C22.2 No. 1010.1 for electrical measuring and test equipment.	
Maximum altitude .....	2000 m
Pollution degree .....	2
Overvoltage category .....	CAT I
Indoor use only	

---

# Technical Support Resources

This appendix describes the comprehensive resources available to you in the Technical Support section of the National Instruments Web site and provides technical support telephone numbers for you to use if you have trouble connecting to our Web site or if you do not have internet access.

## NI Web Support

---

To provide you with immediate answers and solutions 24 hours a day, 365 days a year, National Instruments maintains extensive online technical support resources. They are available to you at no cost, are updated daily, and can be found in the Technical Support section of our Web site at [www.ni.com/support](http://www.ni.com/support)

### Online Problem-Solving and Diagnostic Resources

- **KnowledgeBase**—A searchable database containing thousands of frequently asked questions (FAQs) and their corresponding answers or solutions, including special sections devoted to our newest products. The database is updated daily in response to new customer experiences and feedback.
- **Troubleshooting Wizards**—Step-by-step guides lead you through common problems and answer questions about our entire product line. Wizards include screen shots that illustrate the steps being described and provide detailed information ranging from simple getting started instructions to advanced topics.
- **Product Manuals**—A comprehensive, searchable library of the latest editions of National Instruments hardware and software product manuals.
- **Hardware Reference Database**—A searchable database containing brief hardware descriptions, mechanical drawings, and helpful images of jumper settings and connector pinouts.
- **Application Notes**—A library with more than 100 short papers addressing specific topics such as creating and calling DLLs, developing your own instrument driver software, and porting applications between platforms and operating systems.

## Software-Related Resources

- **Instrument Driver Network**—A library with hundreds of instrument drivers for control of standalone instruments via GPIB, VXI, or serial interfaces. You also can submit a request for a particular instrument driver if it does not already appear in the library.
- **Example Programs Database**—A database with numerous, non-shipping example programs for National Instruments programming environments. You can use them to complement the example programs that are already included with National Instruments products.
- **Software Library**—A library with updates and patches to application software, links to the latest versions of driver software for National Instruments hardware products, and utility routines.

## Worldwide Support

---

National Instruments has offices located around the globe. Many branch offices maintain a Web site to provide information on local services. You can access these Web sites from [www.ni.com/worldwide](http://www.ni.com/worldwide)

If you have trouble connecting to our Web site, please contact your local National Instruments office or the source from which you purchased your National Instruments product(s) to obtain support.

For telephone support in the United States, dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 03 9879 5166, Austria 0662 45 79 90 0, Belgium 02 757 00 20,  
Brazil 011 284 5011, Canada (Calgary) 403 274 9391,  
Canada (Ontario) 905 785 0085, Canada (Québec) 514 694 8521,  
China 0755 3904939, Denmark 45 76 26 00, Finland 09 725 725 11,  
France 01 48 14 24 24, Germany 089 741 31 30, Greece 30 1 42 96 427,  
Hong Kong 2645 3186, India 91805275406, Israel 03 6120092,  
Italy 02 413091, Japan 03 5472 2970, Korea 02 596 7456,  
Mexico (D.F.) 5 280 7625, Mexico (Monterrey) 8 357 7695,  
Netherlands 0348 433466, Norway 32 27 73 00, Poland 48 22 528 94 06,  
Portugal 351 1 726 9011, Singapore 2265886, Spain 91 640 0085,  
Sweden 08 587 895 00, Switzerland 056 200 51 51,  
Taiwan 02 2377 1200, United Kingdom 01635 523545

# Glossary

---

Prefix	Meanings	Value
n-	nano-	$10^{-9}$
$\mu$ -	micro-	$10^{-6}$
m-	milli-	$10^{-3}$
k-	kilo-	$10^3$

## Numbers/Symbols

°	degrees
-	negative of, or minus
$\Omega$	ohms
/	per
%	percent
$\pm$	plus or minus
+	positive of, or plus
+5 V	+5 Volts signal

## A

A	amperes
AC	alternating current
ANSI	American National Standards Institute
ASIC	Application-Specific Integrated Circuit—a proprietary semiconductor component designed and manufactured to perform a set of specific functions

## C

C	Celsius
CAT I	installation category (overvoltage category) I—equipment for which measures are taken to limit transient overvoltages to an appropriate low level. Examples include signal-level, telecommunications, and electronic equipment with transient overvoltages smaller than local-level mains supplies.
cm	centimeters
CompactPCI	refers to the core specification defined by the PCI Industrial Computer Manufacturer's Group (PICMG)

## D

DAQ	data acquisition—a system that uses the personal computer to collect, measure, and generate electrical signals
DC	direct current
DIG+	positive data terminal
DIG–	negative data terminal
DIO	digital input/output
DMA	direct memory access—a method by which data can be transferred to or from computer memory from or to a device or memory on the bus while the processor does something else. DMA is the fastest method of transferring data to or from computer memory.

## G

GND	ground reference
-----	------------------

## H

Hz	hertz
----	-------

**I**

$I_{IH}$	current, input high
$I_{IL}$	current, input low
in.	inches
I/O	input/output
$I_{OH}$	current, output high
$I_{OL}$	current, output low
isolation	signal conditioning to break ground loops and reject high common-mode voltages to protect equipment and users and to ensure accurate measurements

**L**

LED	light-emitting diode
LSB	least significant bit

**M**

m	meters
max	maximum
MB	megabytes of memory
min	minimum
MOSFET	metal-oxide semiconductor field-effect transistor
MSB	most significant bit

## O

optocoupler	a device that transfers electrical signals by utilizing light waves to provide coupling with electrical isolation between input and output
optical isolation	the technique of using an optocoupler to transfer data without electrical continuity, to eliminate high-potential differences and transients

## P

PCI	Peripheral Component Interconnect—a high-performance expansion bus architecture originally developed by Intel to replace ISA and EISA.
port	a digital port, consisting of four or eight lines of digital input and/or output
PXI	PCI eXtensions for Instrumentation—an open specification that builds on the CompactPCI specification by adding instrumentation-specific features

## R

rms	root mean square
-----	------------------

## S

S	samples
s	seconds
SCXI	Signal Conditioning eXtensions for Instrumentation—the National Instruments product line for conditioning low-level signals within an external chassis near sensors so only high-level signals are sent to DAQ boards in the noisy PC environment
signal conditioning	the manipulation of signals to prepare them for digitizing

**T**

TTL transistor-transistor logic, or 5 V digital voltage levels originally used with transistor-transistor logic

typ typical

**V**

V volts

$V_{cc}$  supply voltage; for example, the voltage a computer supplies to its plug-in devices

VDC volts direct current

VI virtual instrument—a combination of hardware and/or software elements, typically used with a PC, that has the functionality of a classic standalone instrument

$V_{IH}$  volts, input high

$V_{IL}$  volts, input low

$V_{IN}$  input voltage

$V_{OH}$  volts, output high

$V_{OL}$  volts, output low

**W**

W watts

# Index

---

## Numbers

- +5 V signal
  - description (table), 3-5
  - power connections, 3-6
- 6527 devices
  - block diagram, 4-2
  - change notification, 4-5 to 4-6
  - custom cabling, 1-6
  - digital filtering, 4-3 to 4-5
  - features, 1-1
  - functional overview, 4-1 to 4-3
  - optional equipment, 1-5
  - requirements for getting started, 1-2
  - safety information, 1-6
  - software programming choices, 1-3 to 1-5
    - National Instruments application software, 1-3 to 1-4
    - NI-DAQ driver software, 1-4 to 1-5
  - unpacking, 1-3
  - using PXI with CompactPCI, 1-2

## B

- block diagram of 6527 devices, 4-2
- board configuration, 2-2

## C

- cable assembly connectors
  - overview, 3-3 to 3-4
  - pinout for R1005050 ribbon cable (figure), 3-4
- cabling, custom, 1-6
- change notification
  - example, 4-6
  - purpose and use, 4-5 to 4-6
- clocks, for digital filtering, 4-4 to 4-5

- CompactPCI, using with PXI, 1-2
- ComponentWorks software, 1-4
- configuration, 2-2
- connector. *See* I/O connector.
- conventions used in manual, *x*
- custom cabling, 1-6

## D

- DC voltages, sensing, 3-8
- diagnostic resources, online, B-1
- DIG+0 .<7..0> signal (table), 3-5
- DIG-0 .<7..0> signal (table), 3-5
- DIG+1 .<7..0> signal (table), 3-5
- DIG-1 .<7..0> signal (table), 3-5
- DIG+2 .<7..0> signal (table), 3-5
- DIG-2 .<7..0> signal (table), 3-5
- DIG+3 .<7..0> signal (table), 3-6
- DIG-3 .<7..0> signal (table), 3-6
- DIG+4 .<7..0> signal (table), 3-6
- DIG-4 .<7..0> signal (table), 3-6
- DIG+5 .<7..0> signal (table), 3-6
- DIG-5 .<7..0> signal (table), 3-6
- digital filtering, 4-3 to 4-5
  - characteristics (table), 4-4
  - clocks, 4-4 to 4-5
  - timing (figure), 4-5
- digital I/O circuitry
  - functional overview, 4-2 to 4-3
  - specifications, A-1
- documentation
  - conventions used in manual, *x*
  - how to use manual set, *ix*
  - related documentation, *x*

## E

environment specifications, A-3  
equipment, optional, 1-5

## F

filtering. *See* digital filtering.  
forward current for high voltages, reducing,  
    3-8 to 3-9  
fuse, self-resetting, 3-6

## G

GND signal  
    description (table), 3-5  
    power connections, 3-6

## H

hardware installation, 2-1 to 2-2

## I

input channels, 3-7  
inputs, optically isolated. *See* optically  
    isolated inputs.  
installation  
    board configuration, 2-2  
    hardware installation, 2-1 to 2-2  
    software installation, 2-1  
    unpacking 6527 devices, 1-3  
I/O connector, 3-1 to 3-6  
    cable assembly connectors, 3-3 to 3-4  
    pin assignments (figure), 3-2  
    port functionality (table), 3-3  
    signal descriptions (table), 3-5 to 3-6  
isolated inputs. *See* optically isolated inputs.  
isolation voltages, 3-7

## L

LabVIEW software, 1-3  
LabWindows/CVI software, 1-3

## M

manual. *See* documentation.

## N

National Instruments application software,  
    1-3 to 1-4  
National Instruments Web support, B-1 to B-2  
NI-DAQ driver software, 1-4 to 1-5

## O

online problem-solving and diagnostic  
    resources, B-1  
optical isolation circuitry, 4-3  
optically isolated inputs, 3-7 to 3-9  
    input channels, 3-7  
    reducing forward current for high  
        voltages, 3-8 to 3-9  
    sensing DC voltages, 3-8  
    signal connection example, 3-8  
    specifications, A-1  
output channels, 3-9 to 3-11  
    driving a load (example), 3-9 to 3-10  
    sinking and sourcing current  
        (example), 3-11  
overcurrent protection, 3-12

## P

PCI interface circuitry, 4-2  
PCI MITE ASIC, 4-2  
physical specifications, A-3  
pin assignments for I/O connector (figure), 3-2  
port functionality (table), 3-3  
power connections, 3-6

power rating, 3-6  
 power requirement specifications, A-2  
 power-on and power-off conditions, 3-12  
 problem-solving and diagnostic resources,  
 online, B-1  
 PXI, using with CompactPCI, 1-2

## R

R1005050 cable assembly. *See* cable assembly  
 connectors.  
 reducing forward current for high voltages,  
 3-8 to 3-9  
 relay outputs. *See* solid state relay outputs.  
 requirements for getting started, 1-2

## S

safety information, 1-6  
 safety specifications, A-3  
 self-resetting fuse, 3-6  
 sensing DC voltages, 3-8  
 signal connections, 3-1 to 3-12  
   exceeding maximum ratings  
   (warning), 3-1  
 I/O connector, 3-1 to 3-6  
   cable assembly connectors, 3-3 to 3-4  
   pin assignments (figure), 3-2  
   port functionality (table), 3-3  
   signal descriptions (table), 3-5 to 3-6  
 isolation voltages, 3-7  
 optically isolated inputs, 3-7 to 3-9  
   input channels, 3-7  
   reducing forward current for high  
   voltages, 3-8 to 3-9  
   sensing DC voltages, 3-8  
   signal connection example, 3-8  
 power connections, 3-6  
 solid-state relay outputs, 3-9 to 3-12  
   output channels, 3-9 to 3-11  
   overcurrent protection, 3-12

  power-on and power-off  
   conditions, 3-12  
 software installation, 2-1  
 software programming choices, 1-3 to 1-5  
   National Instruments application  
   software, 1-3 to 1-4  
   NI-DAQ driver software, 1-4 to 1-5  
 software-related resources, B-2  
 solid-state relay outputs, 3-9 to 3-12  
   output channels, 3-9 to 3-11  
   driving a load (example), 3-9 to 3-10  
   sinking and sourcing current  
   (example), 3-11  
   overcurrent protection, 3-12  
   power-on and power-off conditions, 3-12  
   specifications, A-2  
 specifications, A-1 to A-3  
   digital I/O, A-1  
   environment, A-3  
   isolated inputs, A-1  
   physical, A-3  
   power requirements, A-2  
   relay outputs, A-2  
   safety, A-3

## T

technical support resources, B-1 to B-2

## U

unpacking 6527 devices, 1-3

## W

Web support from National Instruments,  
 B-1 to B-2  
   online problem-solving and diagnostic  
   resources, B-1  
   software-related resources, B-2  
 Worldwide technical support, B-2