



ELX4-60

User's Guide (CCTV Monitor User)

v 1.0

FCC Compliance Statement

Caution : Any changes or modifications in construction of this device which are not expressly approved the party responsible for compliance could void the user's authority to operate the equipment.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

Dispose of used batteries according to the general recommendations against the environmental pollution.

Important Notice

1. Do not place heavy objects on the top of the ELX4-60.
2. ELX4-60 is for indoor use. It is not weatherproof. Use ELX4-60 with referring to its environmental specifications (Temperature & Humidity). To clean the ELX4-60, gently wipe the outside with a clean dry cloth.
3. Be sure to use a DC adapter that is provided by Rugged CCTV Connecting ELX4-60 directly to an AC current will cause electric damages to ELX4-60.
4. Be careful not to drop the ELX4-60. Physical shocks may harm the product. In addition, be sure the ELX4-60 is secured after installation.
5. If ELX4-60 does not operate properly, please contact the closest Rugged CCTV distributor for after sales service. Tampering or disassembling the product will void the warranty.
6. Security surveillance laws may differ for each country. Therefore, please contact the local region first to avoid any surveillance law violations.

OVERVIEW	7
1. Introduction.....	7
2. Product Description.....	9
2.1. Front Panel	9
2.2. Rear Panel	10
2.3. Installation Summary.....	11
Basic Configuration.....	12
3. Monitoring	12
3.1. Viewing basic screen (quad-split)	12
3.2. Viewing single full screen	12
3.3. Viewing multi screen	12
3.4. Viewing all channels with sequence mode	13
3.5. Viewing an alarm triggered channel.....	14
3.6. Viewing images with Digital Zoom	14
3.7. Viewing with connected PTZ	14
3.8. Using Relay	16
3.9. Using Screen Lock	16
4. Playback.....	16
4.1. Playback via various mode	16
4.1.1. Playback via basic screen (full screen).....	16
4.1.2. Playback via split screen.....	17
4.1.3. Playback with Digital Zoom	17
4.1.4. Various playback modes	17
4.2. Using Search Mode	18
4.3. Copy / Backup / Delete Data Manager	19
4.3.1. Copy Image	19
4.3.2. Backup Manager	20
4.3.3. Delete Data	21
5. Configuration	21

5.1. Quick Setup.....	21
5.1.1. Date/Time	21
5.1.2. Recording	23
5.2. Camera – Analog Camera Channels (Ch. 1 ~ Ch. 4).....	25
5.3. Normal Rec. - Analog Camera Channels (Ch. 1 ~ Ch. 4)	28
5.4. Alarm Rec. – Analog Camera Channels (Ch. 1 ~ Ch. 4)	31
5.5. Relay	34
5.6. Monitor.....	35
5.7. System.....	36
5.7.1. Audio	36
5.7.2. Text	37
5.7.3. Time Schedule	39
5.7.4. Special Time.....	40
5.7.5. Security	41
5.7.6. Disk Setup.....	42
5.7.7. Network	43
5.7.8. Serial Setup.....	49
5.7.9. Miscellaneous	50
5.8. Utility	52
5.8.1. Disk Manager	53
Advanced Configuration	55
6. Using IP Cam	55
6.1. Activating IP Cam menus	55
6.2. Camera Setting – IP Camera Channels (Ch. 5 ~ Ch. 16)	56
6.2.1. Configuration	56
6.2.2. Local IP Cam List.....	58
6.3. Normal Rec. – IP Camera Channels (Ch. 5 ~ Ch. 16)	59
6.4. Alarm Rec. - IP Cam Channel (Ch. 5 ~ Ch. 16).....	60
7. Connecting External Device	61
7.1. Using Text Device.....	61
7.1.1. Setting at Text menu.....	61
7.1.2. Setting at Serial Setup's RS232 menu.....	62

7.1.3. Setting at Alarm Rec. menu	62
7.1.4. Setting at Normal Rec. menu	63
7.2. Using Keyboard.....	64
7.2.1. Setting at Serial Setup's RS232 menu.....	64
7.2.2. Setting at Serial Setup's PTZ menu	64
APPENDIX	65
Appendix #1 Technical Specification.....	66
Appendix #2 Utilizing IP Addresses on Local Network.....	69
#2.1 Introduction.....	69
#2.2 IP construction and Network class	69
#2.3 C-class Network	70

OVERVIEW

1. Introduction

What is ELX4-60?

ELX4-60 supports 4 analog video channels and 12 IP video channels simultaneously. Video, Audio, and Text Event-Logs are digitized and stored on two internal hard-drives. Using a 'Proprietary Wavelet Algorithm,' average file size is 1-5KB while still maintaining clarity high enough for facial-recognition. In addition, Wavelet-compressed images are impossible to manipulate.

Due to our proprietary Wavelet Algorithm, the ELX4-60 processes analog video into crisp, clear, and court-admissible pictures that are up to 500% smaller than comparable JPEG images. With this efficiency, ELX4-60 records over 30 days on a 200GB hard disk drive when recording 4 channels at the speed of 10ips per channel. ELX4-60 also allows users to record and playback audio for one channel.

Setting-up ELX4-60 is as easy as setting up a VCR. ELX4-60 starts to record as soon as power is supplied and CCTV cameras are connected. ELX4-60 offers an easy setup, as well as advanced menus. With 'Quick Setup', ELX4-60 can be setup and begin recording in as little as 5 minutes. The default settings offer quality and efficiency without the hassle of confusing menus.


Equipped with (3) IEEE 1394 ports (Fire-Wire) and (3) USB ports, ELX4-60 can expand its recording capacity to up to 4TB easily. For easy backup, Windows (FAT32) formatted HDD is compatible with ELX4-60. Simply back up the desired data and connect the HDD to your PC to review critical images.

Key features

- Expandable up to 16 channels (4 analog video channels + 12 IP video channels)
- 1 channel audio recording & playback
- Recording, Playback, Back-up images and Networking at the same time (Quadplex)
- Total 120 ips recording speed (Analogue video 60ips + IP video 60ips)
- Total 120 ips display speed (Max 60ips over Network)
- Displaying live and recorded images on PC as well as CCTV Monitor
- Built-in hardware Quad Splitter for analog video
- Built-in software multiplexer for all 16 live monitoring channels
- (1 / 4 / 9 / 13 / 16Ch Mode on CCTV Monitor as well as PC)
- Maximum 4TB storage capacity (IEEE 1394 for external HDD)
- Various configuration with recording and playback conditions
- Intelligent file system for managing event triggered video data
- ATM/POS transaction information text recording and search with corresponding video (Text search function is supported through DVR Manager program)
- 4 pairs of sensor inputs and alarm outputs
- Built-in hardware motion detection with search function (64-division comparison)
- Back-up with IEEE 1394(FiWi).
- PTZ Control (Preset support) via RS 232 and RS 485/RS422
- User-friendly 32bit True-colored Graphic OSD Menu
- Dynamic IP (DHCP, Floating IP) support (when xDSL and Cable Modem are used)
- Wavelet compression: 1-5KB (Average file size with standard image quality)
- Embedded Linux OS for excellent stability and reliability
- IR remote controller (User controls PTZ with remote controller)
- DVR Manager (User Interface of PC) is to be listed with 16 units of ELX4-60 on a program (256chnnels (16 sets of ELX4-60 x 16channel) are controllable through a program)

2. Product Description

2.1. Front Panel

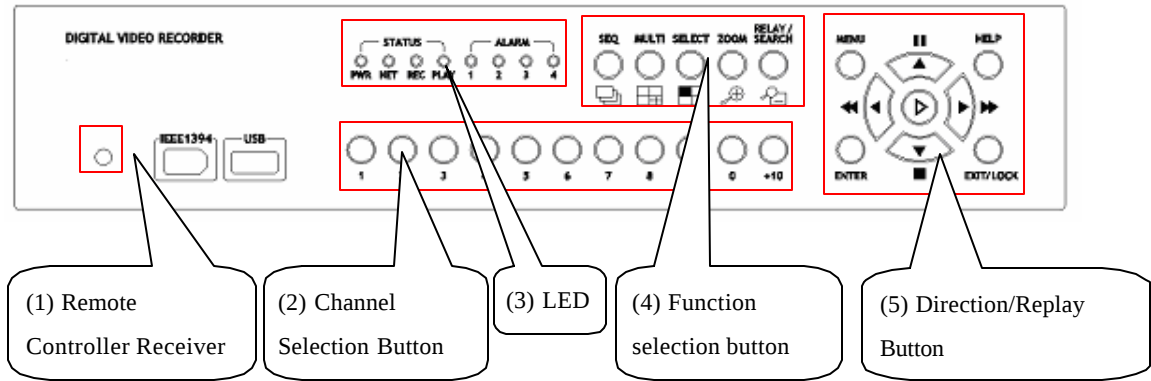

(1) Remote Controller Receiver

(2) Channel Selection Button

- To select video input channel in monitoring and playback mode

(3) LED

- **PWR** : Displays power status. When lit, power is supplied.
- **NET** : Displays the status of Ethernet connection and rate of communication. When blinking, data being transmitted or received over the Ethernet.
- **REC** : Displays image recording status. The rate of blinking indicates the speed of recording. (i.e. When blinking rapidly, ELX4-60 is recording at a high rate; when blinking slower, the ELX4-60 is recording at a lower rate.)
- **PLAY** : Displays playback status. The rate of blinking indicates the speed of playback. (i.e. When blinking rapidly, ELX4-60 is playing back at a high rate; when blinking slower, the ELX4-60 is playing back at a lower rate.)
- ALARM 1~4


(4) Function selection button

- **SEQ** : To select Sequencing Mode. ELX4-60 will automatically display all connected channels in successive order.
- **MULTI** : To select the multi-channel display (4-9-16-13 divided screen).
- **SELECT** : To select video channel for PTZ control.
- **ZOOM** : To activate the digital zoom (single channel mode only).
- **SEARCH/RELAY** : To search the recorded image in Playback mode or to toggle the Relay On/Off function in Monitoring mode

(5) Direction/Replaying Button

- **MENU**: To set PTZ and access Configuration menu.
- **ENTER**: To enter and confirm the selected menu.
- **HELP**: To change the image information display (Date, Transfer speed, etc).
- **EXIT/LOCK**: To exit from the selected menu or lock current screen.
- **Arrow key**: Replay function or to move inside the Configuration menu.

2.2. Rear Panel

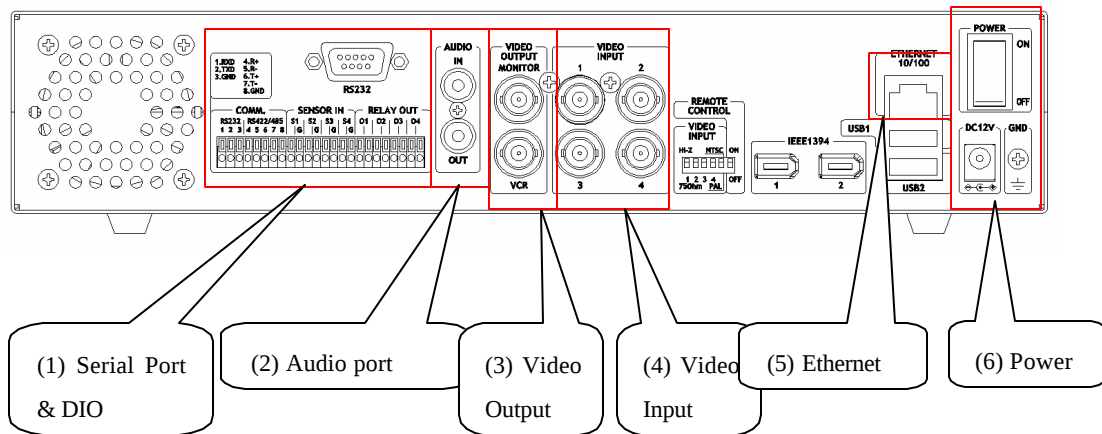

(1) Serial Port & DIO

- **Serial**: RS232 9Pin D-Sub Connector & RS232/422/485 terminal block
- **Sensor In**: 4 sensor inputs
- **Relay Out**: 4 Alarm Relay outputs

(2) Audio port

- 1 audio input & 1 output

(3) Video Output

- 1 monitor output & 1 VCR output

(4) Video Input

- 4 video inputs

(5) Ethernet

(6) Power

2.3. Installation Summary

- Connect Camera
- Connect Monitor
- Connect Ethernet.

(This is optional to view image on remote location or to add IP channel to ELX4-60)

- Connect Audio
- Connect Power & Run

Basic Configuration

3. Monitoring

Once power is supplied to ELX4-60, default quad-split monitoring mode (analog channels 1~4) will be displayed. The following steps apply for all ELX4-60's monitoring menus.

<Button control>

- Press the [MULTI] button on the front panel of ELX4-60 to change the split configuration (4, 9, 16, 13).
- For sequence mode, press the [SEQ] button on the front panel of ELX4-60. To configure the sequential cycle, access the "Monitor" tab of Configuration Menu.


3.1. Viewing basic screen (quad-split)

- Insert AC cord's plug in a wall outlet and turn the power switch "On."
 - LED is on and ELX4-60 starts booting.
 - After start-up, the basic screen (quad-split) is displayed.
- * If user password is set, a dialogue box for entering the password will appear.



3.2. Viewing single full screen

- Press the desired channel number button on the front panel of ELX4-60.
- When selecting channels between channel 10 and 16, press the [+10] button first, then the second number.
- To return to the multi-view screen, press the [MULTI] button.

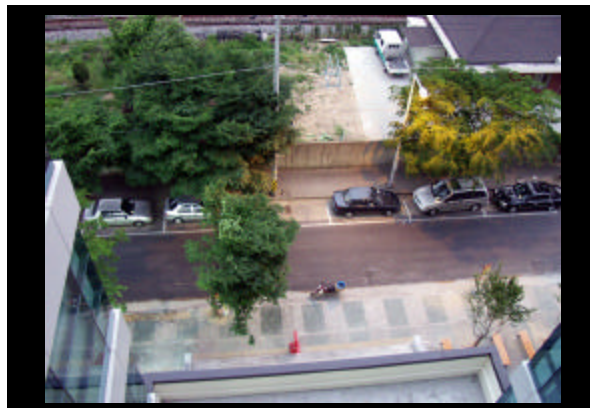

3.3. Viewing multi screen

- Press the [MULTI] button to view several channels simultaneously.
- To change the split screen configuration, press the [MULTI] button. 4, 9, 16, or 13 split screens will be displayed.
- In quad-split mode, images of channels 1 to 4 are displayed. Channels 1 to 9 are displayed in 9-split mode, channels 1 to 16 in 16-split mode, and channels 1 to 13 in 13-split mode.

3.4. Viewing all channels with sequence mode

- All channels can be viewed in successive order automatically using the [SEQ] button.
- Press the [MENU] button on the front panel to set-up the sequential cycle. (The default value is 3 seconds per channel for display.)
- Select "Monitor" tab of Configuration menu.
- Move to "Configuration" below "Monitor" using the down arrow button on ELX4-60 front panel.
- Press the [ENTER] button to enter the menu
- Select "Seq. Switching(sec)" and press the [ENTER] button.
- Set any value between 1 and 60 seconds.



- Then press the [SEQ] button from any viewer mode (except 16/13 -split screen).

<Note>

Sequence mode can run only when connected and activated cameras are more than split screen. With single full screen mode, activated cameras should be two or more. With quad-split screen mode, there should be five or more activated cameras. With 9split screen mode, there should be ten or more activated cameras. (SEQUENCE MODE ONLY SUPPORTS 4 AND 9 SPLIT SCREENS). Channel order cannot be changed. For example, with quad-split screen, Ch. 1/2/3/4 are displayed and then Ch.5/6/7/8 are displayed.

- To end sequence function, press the [SEQ] button.

3.5. Viewing an alarm triggered channel

- When an alarm is triggered, the related channel will pop-up full screen automatically.
- Set 'Alarm Pop-up Screen' function to "On" in "Configuration" under the "Monitor" tab, and set the display duration in "Pop-up Hold (sec)"
- If more than one channel is triggered by an alarm, the related channels will be displayed simultaneously in a split-screen. In order to move current screen, press any button.


3.6. Viewing images with Digital Zoom

- In Single Full Screen mode, live and recorded images can be expanded using the Digital Zoom feature.
- To enable the digital zoom, press the [ZOOM] button.
- Digital Zoom will expand the image to twice its normal size.
- Default location of the digital zoom is in the center of screen. The zoom box can be moved each 10th step to left and right and 4th step up and down.
- To move the zoom box, use the [Arrow] button.
- To cancel the zoom box, press the [ZOOM] button once more.

3.7. Viewing with connected PTZ

- Pan/Tilt/Zoom (PTZ) devices can be controlled through the ELX4-60 when a PTZ device is connected and properly configured under "Serial Setup."
- While in Monitor mode, press the [SELECT] button.
- Channel selection icon will be displayed.
- Move the icon to the channel to control with the [Arrow] button.
- Press the [MENU] button.
- PTZ menu (Pan/Tilt, Zoom/Focus, Load Preset, Save Preset) will appear
- Press the [ENTER] button after selecting the desired function.



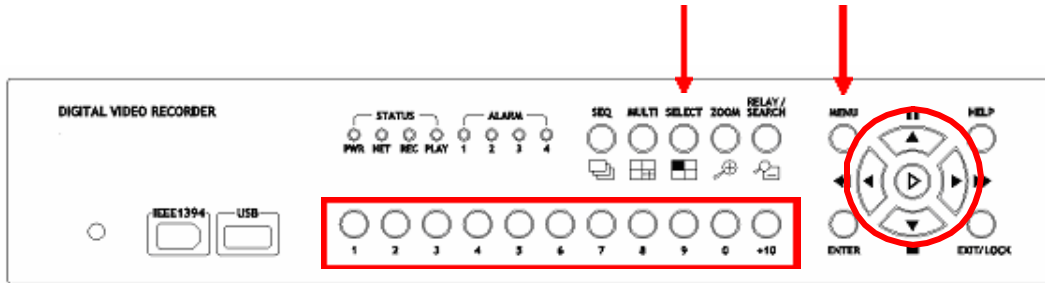

Pan/Tilt Control

To control Pan and Tilt during live image monitoring mode.

- Press the [SELECT] button. Move the “Select” icon to the desired channel.
- Press the [MENU] button.
- Select ‘Pan/Tilt’ from the PTZ Menu.
- Control pan and tilt function using the up, down, left and right arrows.

Zoom/Focus Control

To control Zoom and Focus during live image monitoring mode.

- Press the [SELECT] button. Move the “Select” icon to the desired channel.
- Press the [MENU] button.
- Select ‘Zoom/Focus’ from the PTZ Menu.
- Control zoom and focus functions using the up, down, left and right arrows of front panel.

Load Preset

To load preset for dome camera during live monitoring mode.

- Press the [SELECT] button. Move the “Select” icon to the desired channel.
- Press the [MENU] button.
- Select ‘Load Preset’ from the PTZ Menu.
- Press number button for desired preset on the front panel.

Save Preset

To set a new preset point for dome camera during live monitoring mode

- Move dome camera to the desired position using the ‘Pan/Tilt’ and ‘Zoom/Focus’ menus.
- Press the [SELECT] button.
- Press the [MENU] button.
- Select ‘Save Preset’ from the PTZ Menu
- Designate a number for the preset position by pressing a number button on the front panel.

3.8. Using Relay

- To set relay on/off. (ELX4-60 supports four relay outputs.)
- Press the [SEARCH/RELAY] button.
- The icon of “Relay On” shows.
- Press the relay number button between 1 and 4, and then the related relay out signal will be transmitted.
- In order to set relay off, press the [SEARCH/RELAY] button again.
- Then “Relay On” shows because relay keeps being set as on.
- Press the [SEARCH/RELAY] button again, and then the icon of “Relay Off” will show.
- Press the relay a number button to set off.

3.9. Using Screen Lock

- To set screen lock.
- For this function, user password should be set at first.
- If pressing the [EXIT/LOCK] button for 2~3 seconds, lock mode will run with showing “Screen Locked” message.
- If lock mode runs, any function button will not be operated.
- In order to cancel lock mode, user password should be entered.

4. Playback

To replay recorded images in full screen or quad split screen modes

4.1. Playback via various mode

4.1.1. Playback via basic screen (full screen)

- Press the Play [] button during monitoring mode.
- Play [] button will begin playback of the last 1 minute, 45 seconds of recorded video at 1X speed.

<Note>

When pressing the play button in multi-monitoring mode, channel 1 is always the channel displayed. More specifically, images recorded on Channel 1 during the last 30 seconds are always displayed. However pressing the playback button in single-channel monitoring mode, will display the selected channel. To display another channel, press the corresponding number button on the front of ELX4-60.

4.1.2. Playback via split screen

- Press the [MULTI] button during basic (single-channel) playback mode.
- Channels 1 to 4 will be displayed in the quad-split screen.
- To display a single channel, press the corresponding number button on the front of the ELX4-60.

4.1.3. Playback with Digital Zoom


- Press the [ZOOM] button during the basic (single-channel) playback mode.
- Digital Zoom will expand the image to twice its normal size.
- Default location of the digital zoom is in the center of screen. The zoom box can be moved each 10th step to left and right and 4th step up and down.
- To move the zoom box, use the [Arrow] button.
- To cancel the zoom box, press the [ZOOM] button once more.

4.1.4. Various playback modes

- (PLAY) : To begin playback mode and replay at 1x speed. After pressing PAUSE (), PLAY will advance recorded images frame by frame.
- (STOP) : To stop replaying
- (PAUSE) : To pause replaying
- (FAST FORWARD) : Each press of the button will increase playback speed gradually (x1, x2, x4, x8, x16)
- (FAST REWIND) : Each press of the button will increase playback speed gradually (x1, x2, x4, x8, x16)
- STEP FORWARD : Pressing [, PLAY] or [, FAST FORWARD] button from PAUSE status, will replay image frame by frame. In order to go back to normal playback mode, press [, STOP] button then press [, PLAY] or [, FAST FORWARD] button.
- STEP REWIND : Pressing [, FAST REWIND] button from PAUSE status, will replay image frame by frame. In order to go back to normal playback mode, press [, STOP] button then press [, PLAY] or [, FAST FORWARD] button.

4.2. Using Search Mode

Search Mode is used to search and play specific data directly during playback mode. Data can be searched by specific Time and Date or by the Event Log browser.

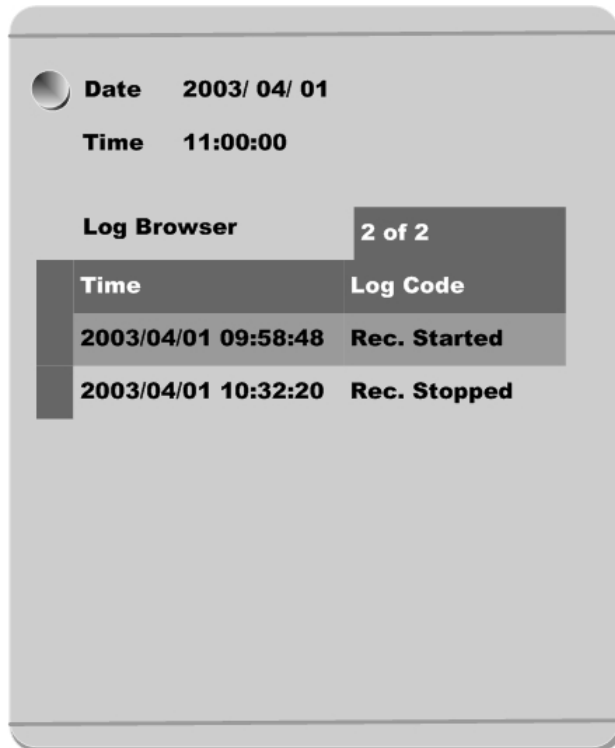

Button control


- Press the [SEARCH] button during playback mode.
- Search for data by entering Date/Time or by selecting an event from the Event Log browser.
- Press the [ENTER] button after entering the desired Date/Time or selecting Event from log.
- The selected images will begin to playback.
- To exit from search mode, press the [EXIT] button.

<Note> Using Log Browser

1. To move to the previous/next page, press the "Left" or "Right" buttons.
2. To move to previous log entry, press the "Up" button.
3. To move to next log entry, press the "Down" button.

4.3. Copy / Backup / Delete Data Manager


To copy/backup/delete the recorded data. This menu is activated during playback mode.

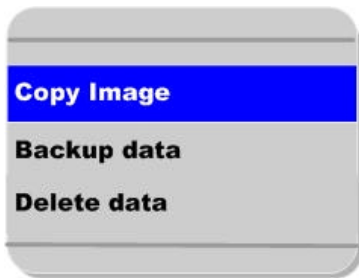

- Press the [SELECT] button and [MENU] button in Playback mode.

4.3.1. Copy Image

To copy a specific data with USB memory stick.

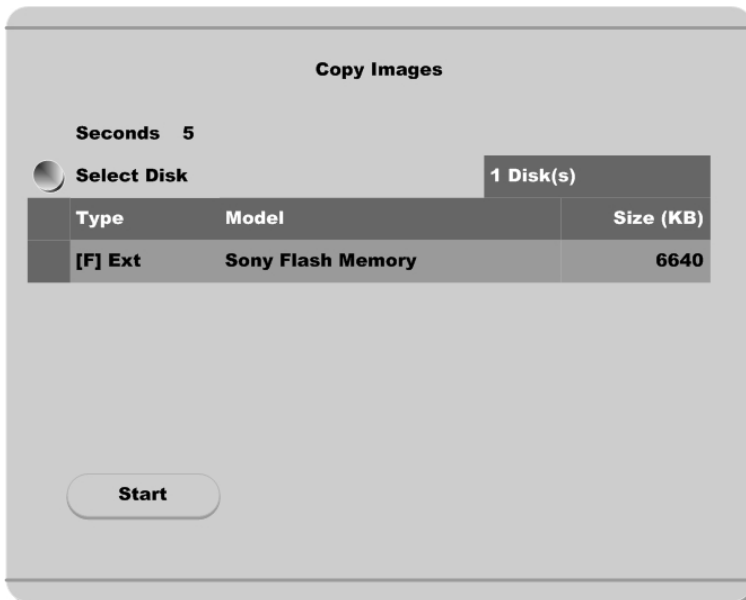

Seconds

To designate copy range between 1 and 60 seconds.

Select Disk

Select copy disk.

4.3.2. Backup Manager

Backup Manager

Start Date 2003/04/01 **Time** 10:12

End Date 2003/04/01 **Time** 10:45

 **Select Disk** **1 Disk(s)**

Type	Model	Size (KB)
[V] Ext	Maxtor 4R08010	80043264

Start

Start Date & Time / End Date & Time

To designate backup range.


Select Disk

To select which storage will be used as backup device. To change the disk status, use the “Disk Manager” menu under the “System” tab.

<Note>

Backup Manager does not support USB devices. Backup Manager will ONLY work with devices connected through IEEE1394 / FireWire ports.

4.3.3. Delete Data

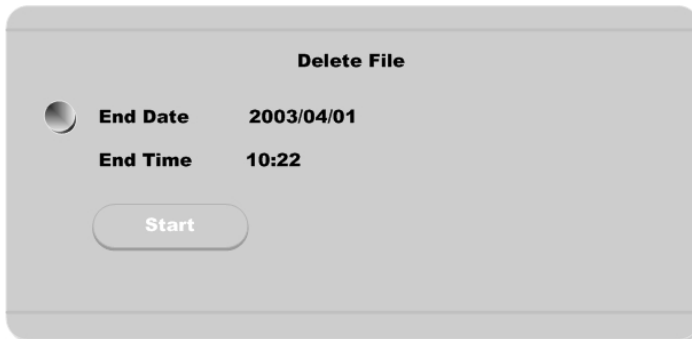

To delete a specific file range from the current recording HDD. This menu does not affect backup disk. The beginning of the range is always the beginning of the recording on the HDD.

5. Configuration

5.1. Quick Setup

There are three menus for recording setup; Quick Setup, Normal Recording, Alarm Recording menu in Configuration Menu. Quick Setup is the easiest set-up, activating all four analog cameras to record with the same settings and conditions. Normal recording is the standard recording settings and can be customized based on time and channel. Alarm recording is the recording schedule based on alarm conditions (Motion Detection, Sensors, etc.) Also, Quick Setup has time setting menu.

5.1.1. Date/Time

When ELX4-60 is manufactured in factory, time zone will be set as "GMT + 9:00".

Set the time to local time zone

Changing ELX4-60 time may cause time conflict with recorded images. In this case, it is strongly recommended to re-format the hard drives after making changes

Button control

- Press [MENU] button on ELX4-60 front panel.
- Move to "Quick Setup" menu (First tab on the Configuration menu).
- Move to "Date/Time" below "Quick Setup" using downward arrow button on ELX4-60 front panel.
- Press the [ENTER] button on ELX4-60 front panel.
- Set time. (The following picture will be displayed when setting time menu)
 - **In order to access each menu, press [ENTER] button after selecting it with upward/downward arrow button on ELX4-60 front panel.**



Time Zone

Set the time zone using the left/right arrow button on ELX4-60 front panel. Every time you press left/right arrow button, time zone will change. Select the desired time zone. (To move to the previous menu, press [EXIT] button on ELX4-60 front panel.)

Daylight Saving

The Daylight Savings option is linked to Time Zone. Daylight Savings is only activated for time zones that use Daylight Savings. For example, selecting GMT – 7:00 Arizona will disable the option for Daylight Savings because Daylight Savings is not used in Arizona. This menu is linked with “Time Zone” menu. Namely, if selecting daylight saving area in time zone, this menu will be activated. Oppositely if selected time zone is not enforced, it will not be. It is based on MS Windows. So this menu is for setting whether you apply ON/OFF (with left/right arrow button on ELX4-60 front panel) in daylight saving area.

Time Format

Set the time format between “MM/DD/YYYY” and “YYYY/MM/DD” using the left/right arrow button on ELX4-60 front panel.

Date/Time

Set date and time. To move from Month to Day to Year/Hour to Minute, use the left/right arrow buttons. To select each month, each day, etc, use the up/down arrow buttons.

Apply Date/Time

Press this button to confirm the above settings. Windows will pop-up warning of the possibility of time

conflict with recorded images. It is strongly recommended to format the HDD after making changes to the time menu.




<Note>

Most setting values are applied automatically, when exiting from the related menu page. But "Date" & "Time" settings are not applied automatically because they may critically affect the file system of the recorded HDD. To apply Date/Time settings confirm settings with [Apply Date/Time] button.

5.1.2. Recording

Its recording values are applied to all 4 channels for all time periods

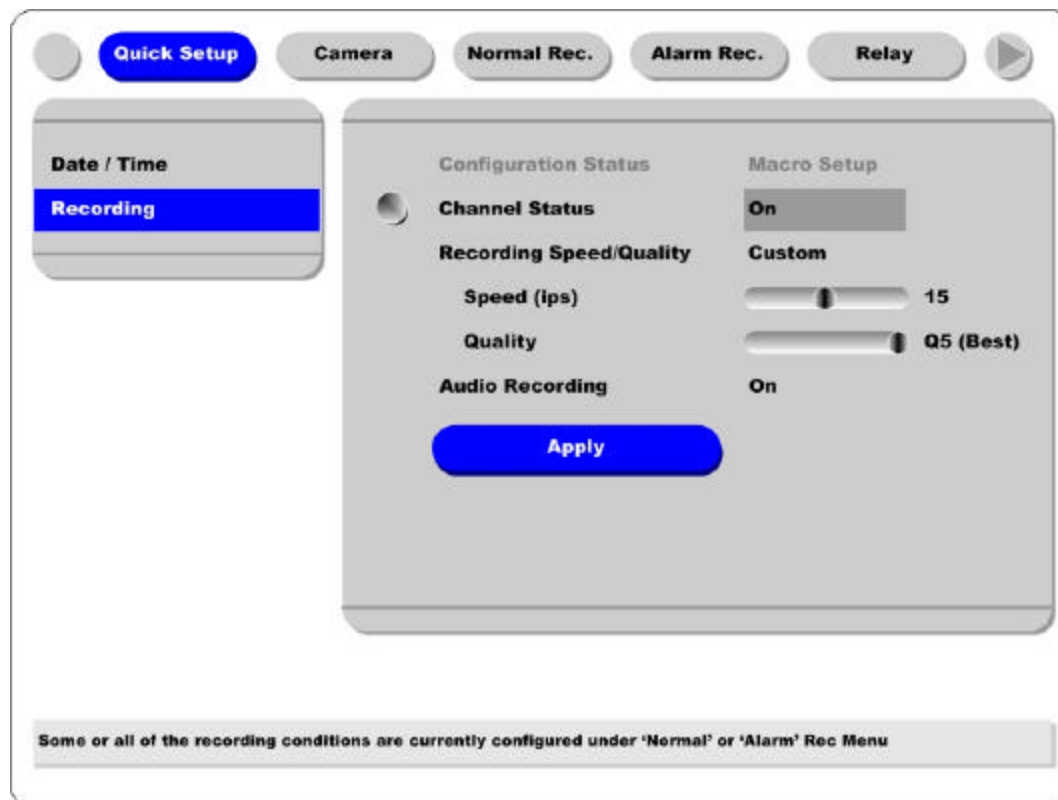

Button control

- Press [MENU] button and select to “Recording “ from the “Quick Setup” tab.

Configuration Status

Displays the recording set up status. If recording is configured with the Quick Setup, “Macro Setup” will be displayed. If recording is configured with the “Normal” and “Alarm” recording, “Custom Setup” will be displayed.

<Note>

1. When IP channel is 'Off' and all 4 analog cameras' normal recording conditions are set identically, the status is marked as 'Macro Setup'. Otherwise, it is marked as 'Custom Setup'.
2. When IP channel is 'On' and all 16 cameras' normal recording conditions are set identically, the status is marked as 'Macro Setup'. Otherwise, it is marked as 'Custom Setup'.

Channel Status

When “On,” all four analog channels will record based on the Quick Setup settings.

Recording Speed/Quality

There are four conditions (Low/Standard/High/Custom).

All conditions except “Custom” will synchronize “Speed (ips)” and “Quality” automatically; “Low” setting is 1ips/Q5; “Standard” setting is 5ips/Q5; “High” setting is 15ips/Q5. When using the “Custom” setting, Speed (ips) and Quality can be set separately.

Audio Recording


Enables the audio recording feature. If audio is set as “On,” and “Audio Synch with” is set as “All” (in the “Audio” menu under the “System” tab) audio will be available in Playback Mode with all channels.

Apply

Confirms the Quick Setup Recording settings. ELX4-60 will begin recording after pressing the “Apply” button and exiting from the recording menu.

5.2. Camera – Analog Camera Channels (Ch. 1 ~ Ch. 4)

This menu is for configuring individual cameras. In Quick Setup, camera status is automatically set as “On.” Settings such as Brightness and Contrast can be set for each channel. The values assigned will apply for both monitoring and playback modes.

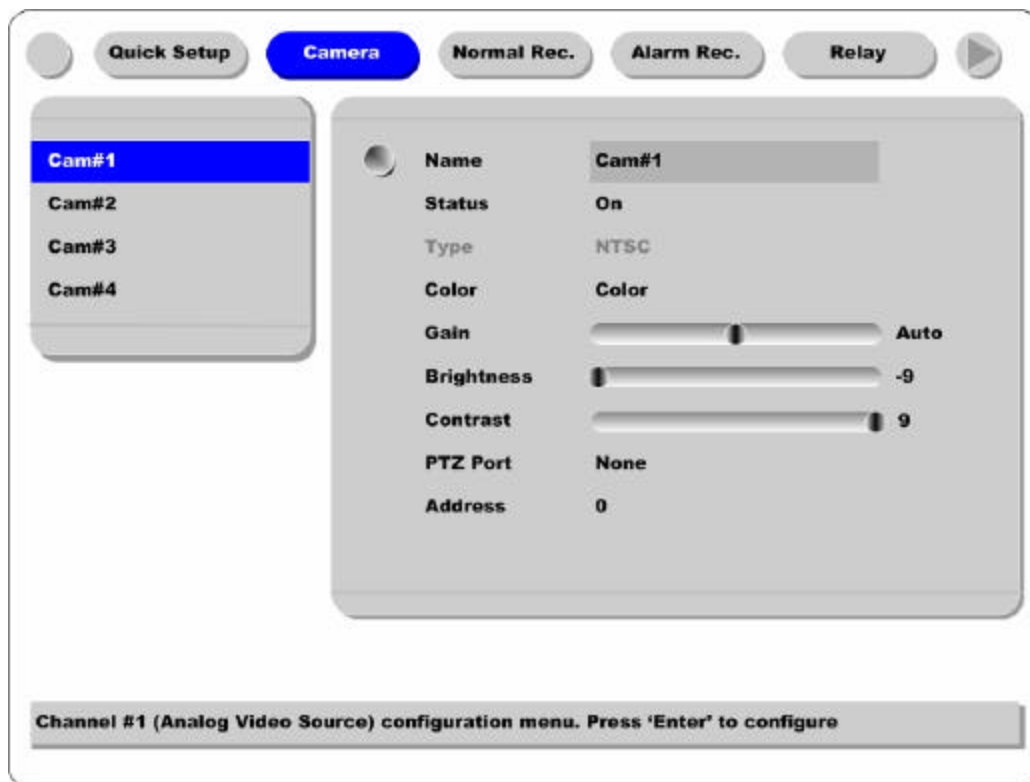

Button control

- Press [MENU] button and use the [ARROW] keys to move to each channel below the “Camera” tab.


Name

Assign a customized name to the channel.

Press [ENTER] to open the necessary dialogue box.

<TIP>

When assigning a name to a channel, the following dialogue box will appear. This box is also used later in the system, but the method is always the same.

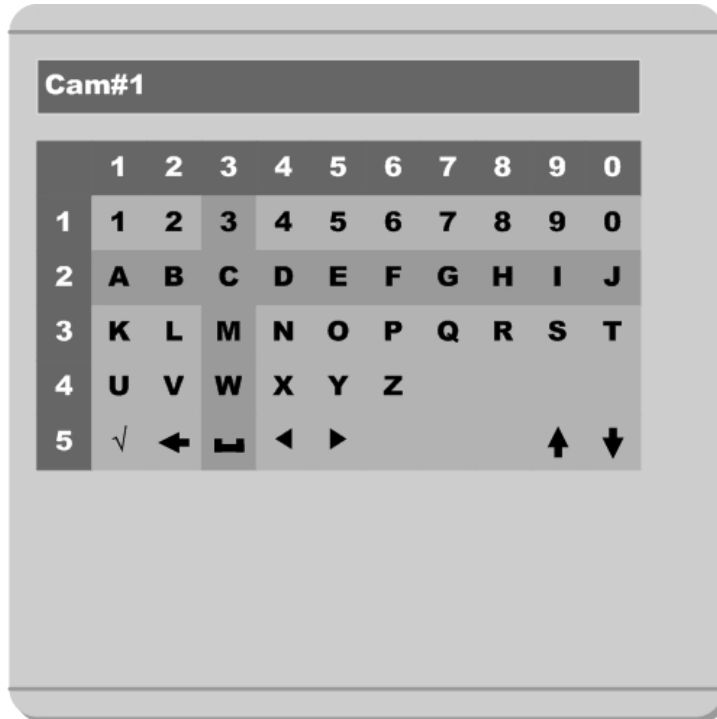

- To select a letter, use the [ARROW] () and () buttons or the number buttons on ELX4-60 front panel; "0" to "9". When using the [ARROW] buttons, use the [PLAY] () button to select each choice.
- The intersection between the horizontal and the vertical bar is the selected choice.
- Press the button to confirm the selected value.
- Or enter the related numbers in order of horizontal/vertical. (For example, in order to select "C", press [3] and [2] button.)
- After setting all values, press the [Exit] button.
- Function Key
 - ✓ : Enter
 - ← : Back Space & delete
 - ␣ : Space
 - ← : Left
 - : Right
 - ↑ : Previous Code Page
 - ↓ : Next Code Page

Status

Set “On/Off” using the or buttons after pressing the [ENTER] button.

Type

Displays the video-input signal. NTSC is the signal used in North America. To toggle the setting, use dip switch on the rear panel of ELX4-60.

For each of the following settings, use the [ENTER] button to access the setting, then the [ARROW] buttons to change the values.

Color

Set “Color/ B/W” using the or buttons.

Gain/Brightness/Contrast

Set the value between -9 and +9 using the or buttons.

PTZ Port


Set the value using the or buttons.

Address

Press the [ENTER] button to open the dialogue box

5.3. Normal Rec. - Analog Camera Channels (Ch. 1 ~ Ch. 4)

This menu is for configuring the normal recording settings based on channel and timetable. If this menu is configured Quick Setup, the previous Quick Setup values will be replaced by the Normal Recording settings.

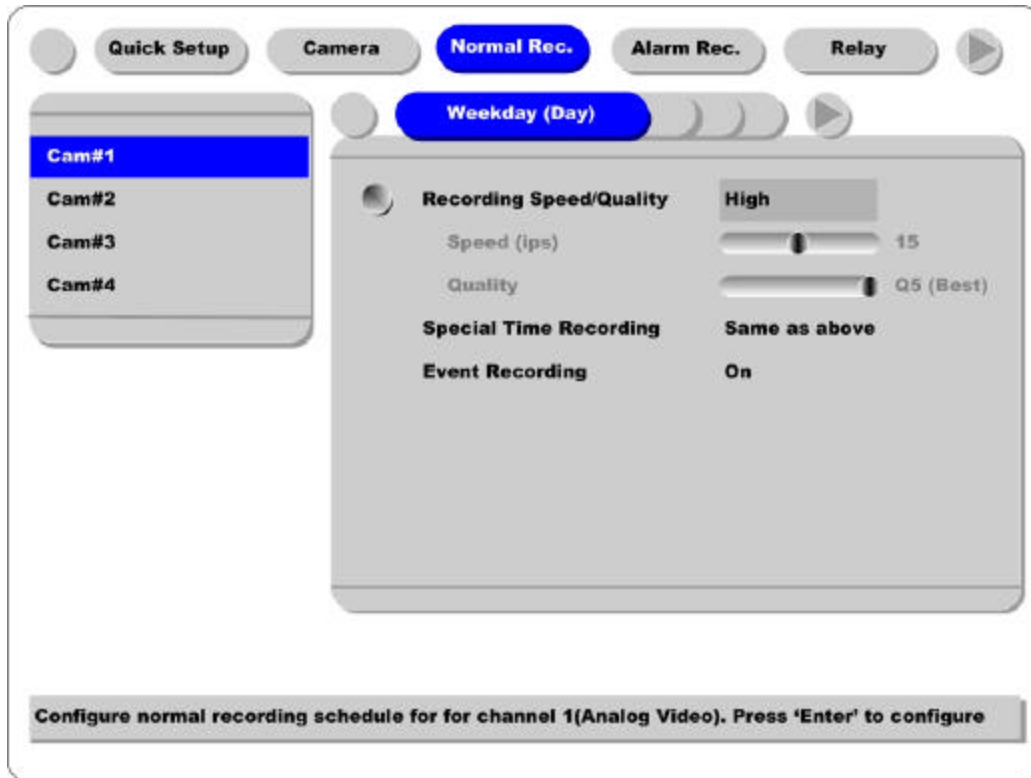


Time Schedule

Each camera can be set to record based on four time schedules; Weekday (Day) / Weekday (Night) / Weekend (Day) / Weekend (Night). Each schedule can be configured under the "System" tab.

< Setting Time Schedule >

In order to set time schedule, move to "System" menu.

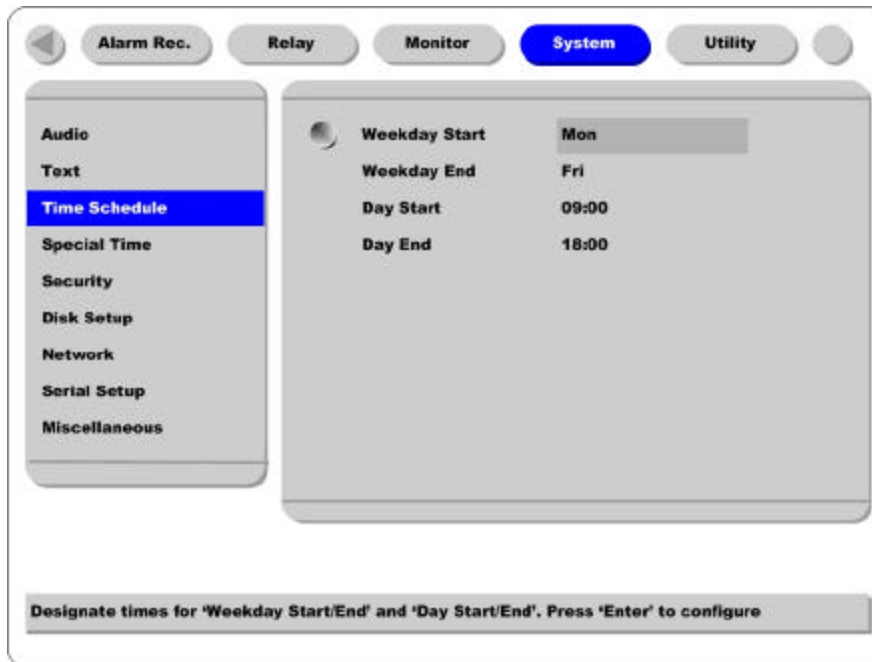**Weekday Start/End**

Press [ENTER] to access the Time Setting. Set the range for "Weekday" between Monday and Sunday using the or buttons. "Weekend" is set automatically based on "Weekday" range.

Day Start/End

Set the range for "Day" using the up/down buttons. The "Night" range is set automatically based on "Day" range.

Recording Speed/Quality

There are four conditions; Low/Standard/High/Custom.

All conditions except "Custom" synchronize "Speed (ips)" and "Quality" automatically; "Low" setting is 1ips/Q5; "Standard" setting is 5ips/Q5; "High" setting is 15ips/Q5. When using the "Custom" setting, Speed(ips) and Quality can be set separately.

Special Time Recording

This menu is to designate different recording conditions during "Special Times." "Special Time" is designated under the "System" tab.

There are four conditions; Low/Standard/High/Same as above.

< Setting Special Time >

To set "Special Time," move to "System" tab.

Zone	Start Time	End Time
Zone1	00:00	00:00
Zone2	00:00	00:00
Zone3	00:00	00:00
Zone4	00:00	00:00

Special times are exceptions to normal recording and relay output Schedule. Press 'Enter' to configure

Up to four zones can be designated as "Special Time."

Event Recording

Press the [ENTER] button to access the Event Recording feature. Set "On/Off" using the buttons.

Event recording condition is set under the "Alarm Recording" tab.

This setting is used to configure the ELX4-60 to record data according to an alarm condition, such as Motion Detection (MD), sensors, etc.

5.4. Alarm Rec. – Analog Camera Channels (Ch. 1 ~ Ch. 4)

This menu is to configure for the settings for alarm recording condition s. To activate this schedule, set “Event Recording” under the “Normal Recording” tab to “On.”

Quick Setup Camera Normal Rec. **Alarm Rec.** Relay

Cam#1
Cam#2
Cam#3
Cam#4

MD **Low**

MD Area Select Area **Custom Area**

S1 On S2 Off

S1 On S2 Off Text Off

Recording Speed/Quality High

Speed (ips) 15

Quality Q5 (Best)

Pre Alarm(sec) 5

Post Alarm(sec) 60

Configure Alarm recording schedule for for channel 1(Analog Video). Press 'Enter' to configure

MD

Choose from among four sensitivity conditions; Off, Low, Standard, High.

MD Area

Customize the MD area.


Default value is “Select All”. Select “Custom Area” to remove certain blocks from detecting motion.

Sensor 1/2/3/4

The ELX4-60 will only work with NO (Normal Open) sensors. If sensors are connected, turn each sensor “On.”

< Setting MD Area >

Designate a specific area for motion detection triggered event.

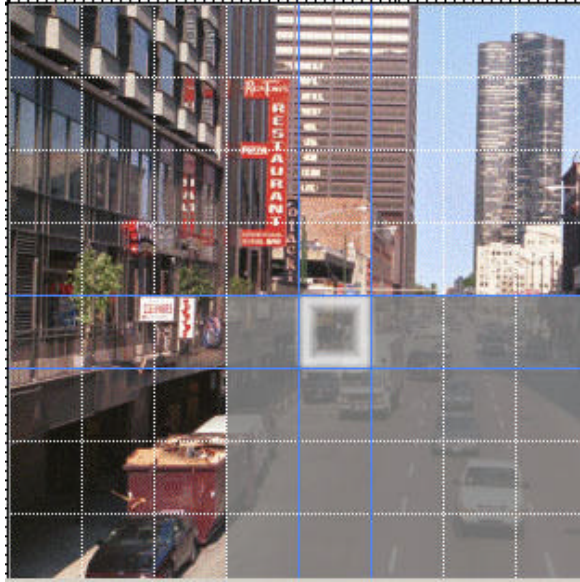

Press the “Custom Area” button, to customize the motion detection area. The area is divided into 64 blocks (8 X 8).

Selected MD area is indicated in dark gray. To remove blocks from motion detection, select the block using the [ARROW] buttons and press the [ENTER] button. Press the [EXIT] button when finished

Text

In order to display or record text with image, it should be set as “On”. (For more detail setting methods, please refer to “Using Text Data”.)

Recording Speed/Quality

There are four conditions; Low/Standard/High/Custom.

All conditions except “Custom” synchronize “Speed (ips)” and “Quality” automatically; “Low” setting is 1ips/Q5; “Standard” setting is 5ips/Q5; “High” setting is 15ips/Q5. When using the “Custom” setting, Speed (ips) and Quality can be set separately.

Pre Alarm (sec)


Set a value up to 10 seconds to record video Pre-Alarm.

Post Alarm (sec)

Set a value up to 60 seconds to maintain recording conditions Post-Alarm.

5.5. Relay

This menu is to set the relay commands according to each time schedule. Relay commands are only used with events triggered with the four analog channels.

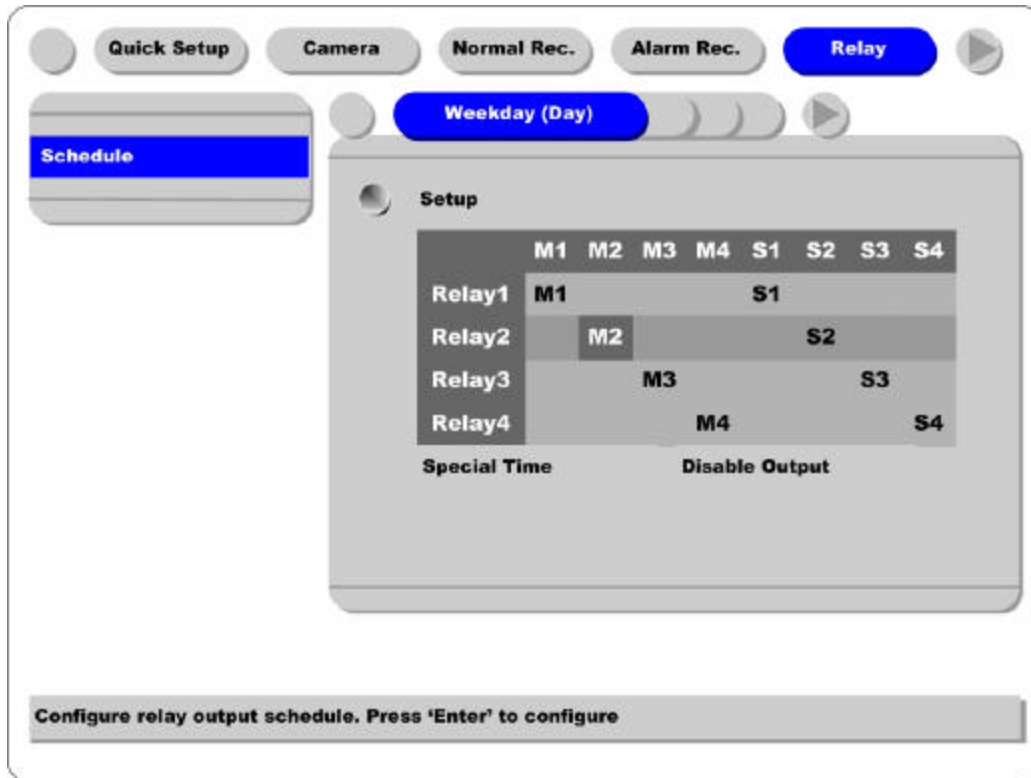


Setup

Alarm triggered events (MD or Sensors) can be set to trigger Relays 1 through 4. When set, the event will trigger the corresponding digital output.

Special Time

Enable “Special Time” to apply the relay schedule to the Special Time Zone.

5.6. Monitor

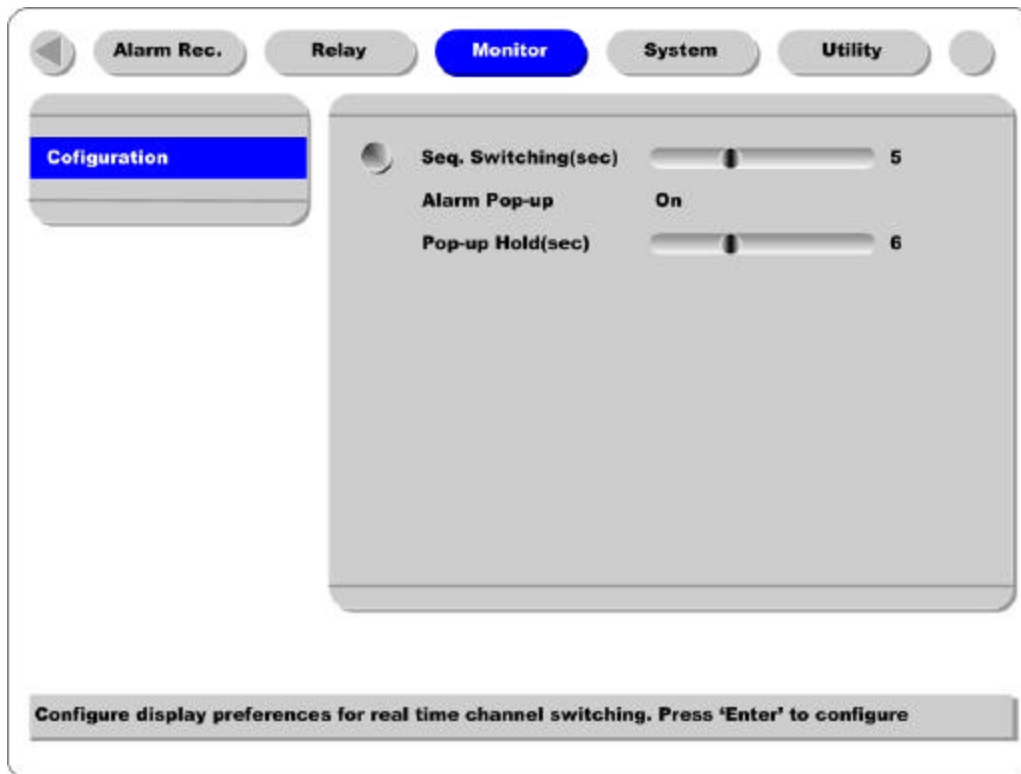

Seq. Switching(sec)

To set sequence time between 1 and 60 seconds.


Alarm Pop-up/Pop-up Hold(sec)

To set alarm pop-up screen. Pop-up duration time can be set between 5 and 10 seconds. If setting as "Keep", pop-up screen keeps holding. In order to cancel Keep mode, press another channel button.

5.7. System

5.7.1. Audio

ELX4-60 supports one channel audio input. This single audio channel can be replayed with any connected channel or with all of them.

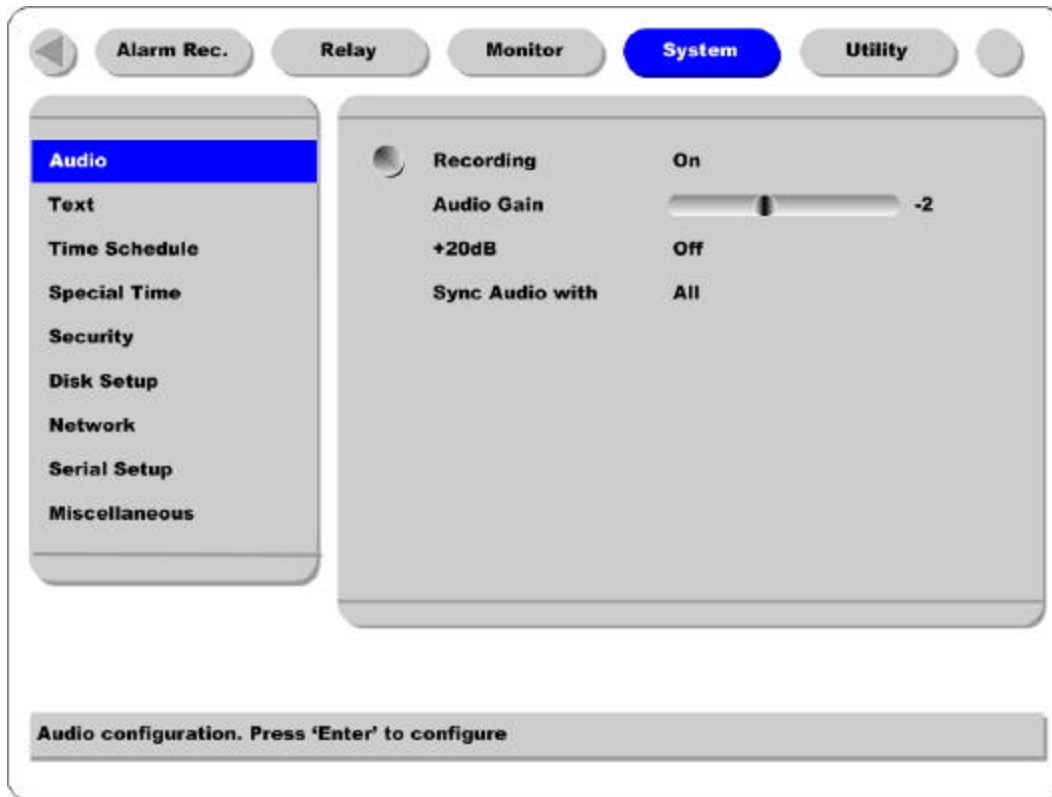

Recording

Set to "On" using the [ENTER] button and the [ARROW] buttons to record audio.

Audio Gain

Increases or decreases the sensitivity to the audio signal. Can be set between -7 and +8.

+20dB


To amplify the audio input signal. Should ONLY be used when using an external microphone.

Sync Audio with

Designate which channel(s) to synchronize audio with during playback.

5.7.2. Text

ELX4-60 can display and playback text data of Access Control/POS/ATM with relevant video.

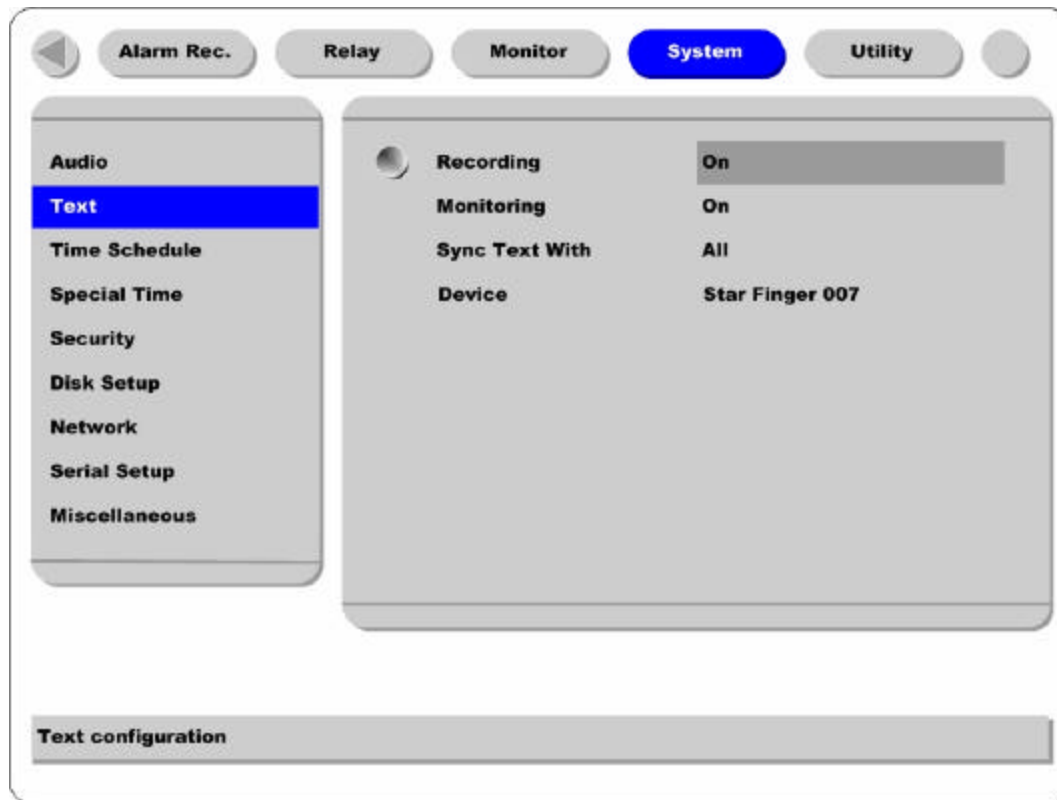

Recording / Monitoring


In order to make ELX4-60 input text data, both of menus should be set as "On".

Sync Text With

To set channel to synchronize with text.

Device

Currently the protocol of Star Finger 007(Access control model) is built in ELX4-60 as text device. Rugged CCTV will keep updating such protocols. When connecting another text device, set as "Manual". Then manual mode setting menu will be displayed. Set each value with referring the manual of connected device.

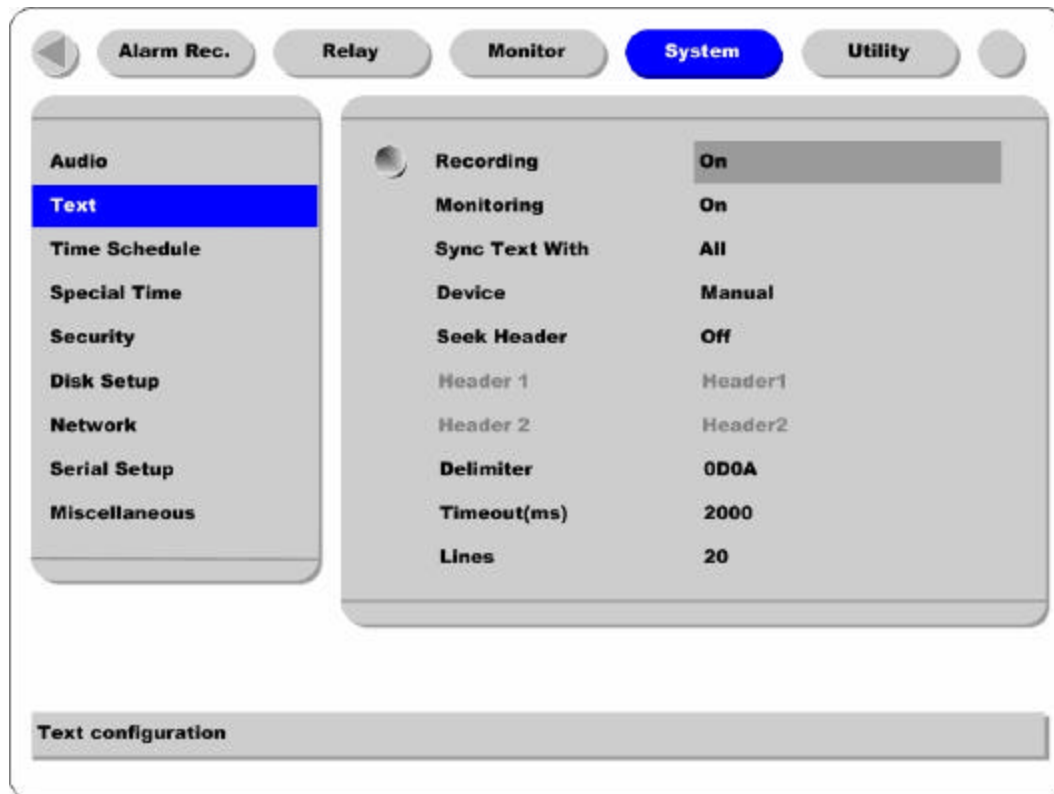

Seek Header

If a protocol is built in ELX4-60 like Star Finger 007, this setting is needless. Otherwise, ELX4-60 can't recognize which parameter value is input to ELX4-60. Namely, all information has starting point and ending point. Header means starting point that is always inserted. So when this header data is transmitted to ELX4-60, ELX4-60 can recognize it as starting point. Two headers can be set maximally.

Delimiter

Because delimiter value may be different, refer to the manual of related device.

Timeout (ms)

The following "Lines" means maximal text line that can be included within a data. However length of each data may be different. Because ELX4-60 can't recognize it automatically, timeout menu is needed. Namely, if specific time passes after ELX4-60 receives the last line, ELX4-60 will regard it as normal data and decide to record.

Lines

To set maximal line of a data.

5.7.3. Time Schedule

To designate Weekday/Weekend and Day/Night.

Alarm Rec. Relay Monitor **System** Utility

Audio
Text
Time Schedule
Special Time
Security
Disk Setup
Network
Serial Setup
Miscellaneous

Weekday Start Mon
Weekday End Fri
Day Start 09:00
Day End 18:00

Designate times for "Weekday Start/End" and "Day Start/End". Press "Enter" to configure

Weekday Start/End

Press [ENTER] to access the Time Setting. Set the range for "Weekday" between Monday and Sunday using the or buttons. "Weekend" is set automatically based on "Weekday" range.

Day Start/End

Set the range for "Day" using the up/down buttons. The "Night" range is set automatically based on "Day" range .

5.7.4. Special Time

The screenshot displays the configuration interface for the ELX4-60 device. At the top, there are five tabs: 'Alarm Rec.', 'Relay', 'Monitor', 'System' (which is highlighted in blue), and 'Utility'. On the left side, there is a vertical menu with the following options: 'Audio', 'Text', 'Time Schedule', 'Special Time' (highlighted in blue), 'Security', 'Disk Setup', 'Network', 'Serial Setup', and 'Miscellaneous'. The main area on the right shows a table for configuring special times for four zones. Each zone has a radio button, a label, a start time, a 'to' separator, and an end time. All times are currently set to '00:00'. At the bottom of the interface, a message states: 'Special times are exceptions to normal recording and relay output Schedule. Press 'Enter' to configure'.

Zone	Start Time	End Time
Zone1	00:00	00:00
Zone2	00:00	00:00
Zone3	00:00	00:00
Zone4	00:00	00:00

Special times are exceptions to normal recording and relay output Schedule. Press 'Enter' to configure

Up to four zones can be designated as “Special Time.”

5.7.5. Security

The screenshot shows the 'System' menu of the ELX4-60 interface. At the top, there are five tabs: 'Alarm Rec.', 'Relay', 'Monitor', 'System' (highlighted in blue), and 'Utility'. On the left side, there is a vertical list of menu items: 'Audio', 'Text', 'Time Schedule', 'Special Time', 'Security' (highlighted in blue), 'Disk Setup', 'Network', 'Serial Setup', and 'Miscellaneous'. The main area displays the 'Security' settings. It includes a 'User Password' section with a toggle switch set to 'On', followed by 'Password' and 'Re-Enter' fields, both containing four asterisks. Below this is an 'Admin Password' section with a toggle switch set to 'Off', followed by 'Password' and 'Re-Enter' fields, also containing four asterisks. At the bottom, there are two settings: 'Remote Setup' set to 'Enable' and 'Remote Relay' set to 'Disable'. A footer bar at the bottom of the window contains the text: 'Configure access levels for system playback and menu. Press 'Enter' to configure'.

Setting	Value
User Password	On
Password	****
Re-Enter	****
Admin Password	Off
Password	****
Re-Enter	****
Remote Setup	Enable
Remote Relay	Disable

Configure access levels for system playback and menu. Press 'Enter' to configure

User Password

Designate a User's Password for access to monitoring and playback. Default password is "0000".

Admin Password

Designate an Administrator's Password to control access to Configuration Menu and full system control authority. Default password is "9999"

Remote Setup

When set to "Enable," users can configure ELX4-60 through the S/W interface from a remote site via network.

Remote Relay

Enables access to the "Relay" menu from a remote site.

5.7.6. Disk Setup

Option	Value
Auto Del. (Normal)	On
Auto Del. (Alarm)	On
Backup Reminder	Weekly
Day/Date	Mon
Time	13:00

Configure options for disk management. Press 'Enter' to configure

Auto Del. (Normal)

Images and data recorded under the “Normal” condition are automatically deleted as the hard-drive(s) reaches capacity. Images are written over based on a first-in first-out basis. Images recorded based on “Alarm” conditions are not written over.

Auto Del. (Alarm)

If enabled, all images, “Normal” and “Alarm,” will be written over based on a first-in first-out basis.

Backup Reminder

A Backup Reminder can be set to remind users to backup the HDD. The reminder can be set to appear daily, weekly, or monthly.

Day/Date/Time

To set the time for the Backup Reminder.

5.7.7. Network

There are four sub-menus; Network, xDSL, HRS, and Port Setting.

5.7.7.1. Network

This page is to define network type and set network addresses for ELX4-60.

Type	Ethernet
DHCP	Off
IP Addr	192.168.0.92
Net Mask	255.255.255.0
Gateway	192.168.0.1
DNS1	0.0.0.0
DNS2	0.0.0.0
DNS3	0.0.0.0

Type

This is to select proper network interface (Ethernet/xDSL) with which ELX4-60 is connected. If ELX4-60 is connected with Internet dedicated line, cable modem line or on LAN environment, select network interface as 'Ethernet.'

If ELX4-60 is connected on xDSL line that needs PPPoE process to connect to the Internet, administrator should select 'xDSL.' However, if the xDSL line does not need PPPoE process, administrator should select 'Ethernet,' even though ELX4-60 is connected on xDSL line.

DHCP

Basically, this menu is for the lines that have Ethernet interfaces such as Internet dedicated line, cable modem line and LAN. If administrator activates 'DHCP' menu, all addresses are set automatically by ELX4-60 detecting them from DHCP server of your ISP. The detected addresses are not displayed on the screen. The addresses do not need to be entered manually unless 'DHCP' is disabled.

DHCP can also be used for xDSL (PPPoE) interface. Sometimes, all computers on a Local Area Network (LAN) share a single Floating / Dynamic IP address. In this case, the ELX4-60 should be assigned a private IP address and have DHCP enabled. Users on the LAN can connect to the ELX4-60 using the private IP address and outside users can connect to the ELX4-60 over the Internet.

IP Address, NetMask, and Gateway Address


Administrator may configure IP address, subnet mask, gateway address, and DNS addresses of ELX4-60.

DNS Server IP Address

The DNS server address is the address of the RUGGED CCTV Registration Server (HRS). If using dynamic IP registration, the DNS Server IP address should be the address of the HRS, 210.116.114.37.

5.7.7.2. xDSL

If ELX4-60 is connected on xDSL line and needs PPPoE process, the network administrator should configure the user ID and password for PPPoE. ID. The password may be acquired from the ISP that installed the line. Once configured, the ELX4-60 will receive an IP address when it is connected on xDSL line.

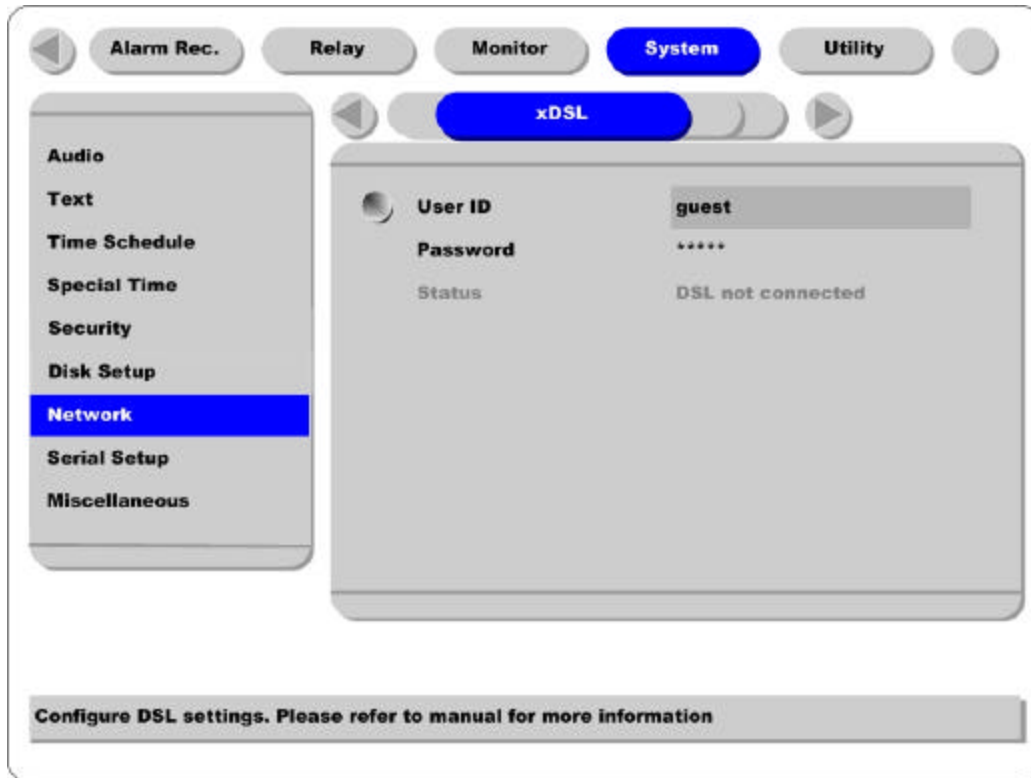

User ID/Password

When ELX4-60 is connected to xDSL, access ID and Password should be entered


Status

Displays the ELX4-60 connection status.

5.7.7.3. HRS

When a ELX4-60 is installed under the environment of Cable Modem or xDSL Modem connection, its IP address changes whenever it reconnects to the Internet Service Provider (the ELX4-60 has a Dynamic or Floating IP address). In this case users who don't know the changed IP address cannot get access to the ELX4-60. ELX4-60 with dynamic IP should be registered to the RUGGED CCTV Registration Server (HRS) server in order to make it easy for users to find the changed IP address, when they want to access the ELX4-60.

To register dynamic IP address to HRS, configure the descriptions below. If using xDSL modem or Cable modem, configuration should be the same.

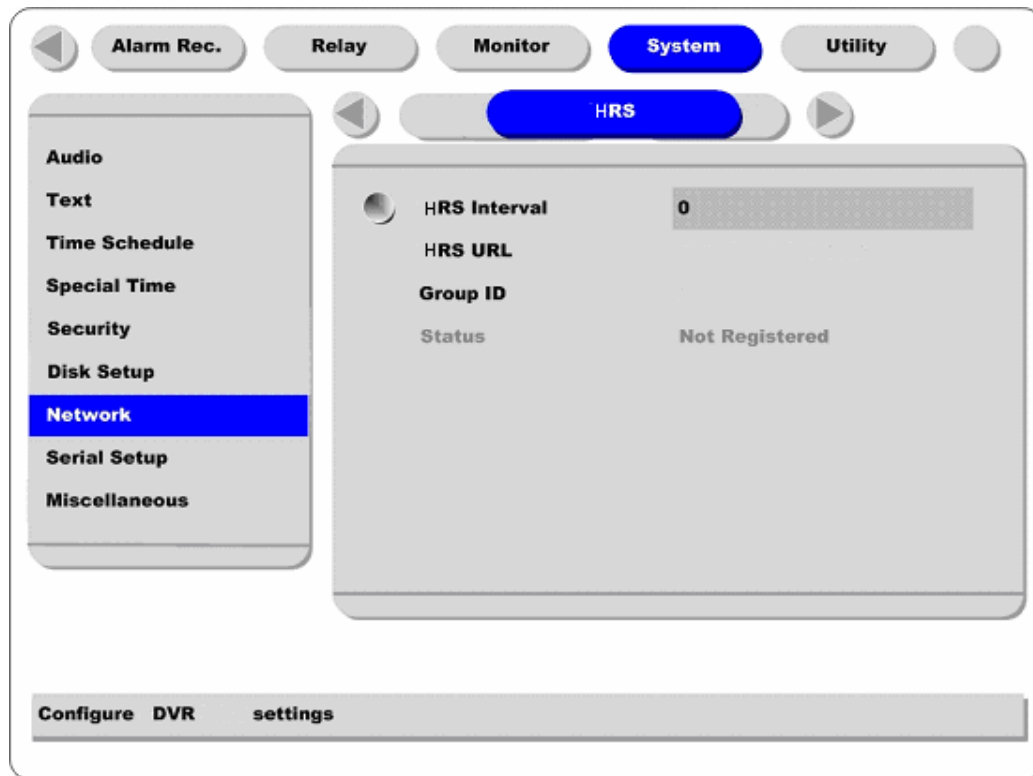

HRS Interval


HRS Interval should be set at 3600 seconds. This designates the frequency the ELX4-60 will update information to the HRS. If the interval is set lower than 3600 seconds, RUGGED CCTV cannot guarantee connectivity. If the HRS received too many updates, it may close the connection to the unit. The HRS maintains registered units on the server list for two days. If no signal is received before two days, the HRS will delete the unit from the register.

HRS URL

This is to configure a server address for registration. HRS address of Rugged CCTV is "www.rugged-cctv.com".

Group ID

Group ID is for discriminating and managing the information received by the HRS from the ELX4-60 belonging to group. The group ID should be unique to avoid unauthorized access to the ELX4-60. Unauthorized users will not be able to access the ELX4-60 unless they have a login name and password, but they will be able to see the unit on their registration list.

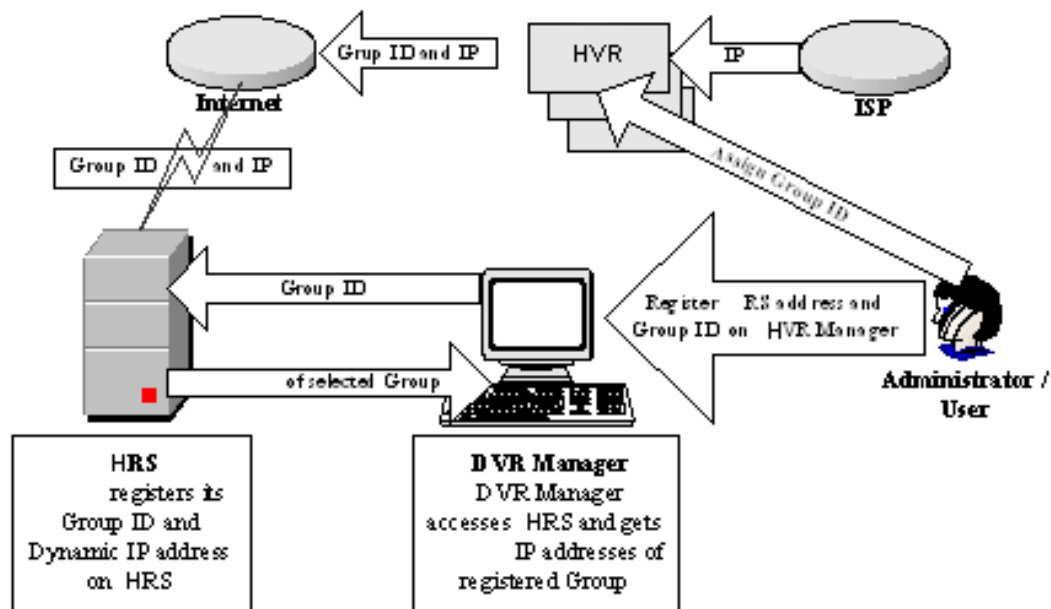

Status

Displays the registration status of the ELX4-60.

5.7.7.4. Port Setting

Monitoring Port	8001
Playback Port	8105
TP Server Port	7119
Firewall	Disable
Port	80

Configure port setting

Monitoring Port / Playback Port

ELX4-60 uses port 8001 for Monitoring and port 8105 for Playback. To change the port number to an open port (some firewalls and/or ISPs block certain ports), press the [ENTER] button and use the dialogue box.

TP Server Port


The port used for Transparent Protocol server.

Firewall / Port

If there is a firewall on the network and a unique port is available, user may configure the Monitor and Playback ports as one port. In order to change a port, select "Port" menu, and configure a suitable port value.

5.7.8. Serial Setup

There are two RS232 menus (One for external devices connected via the DB-9 pin, and the other for PTZ setting) and one RS 422/485 menu.

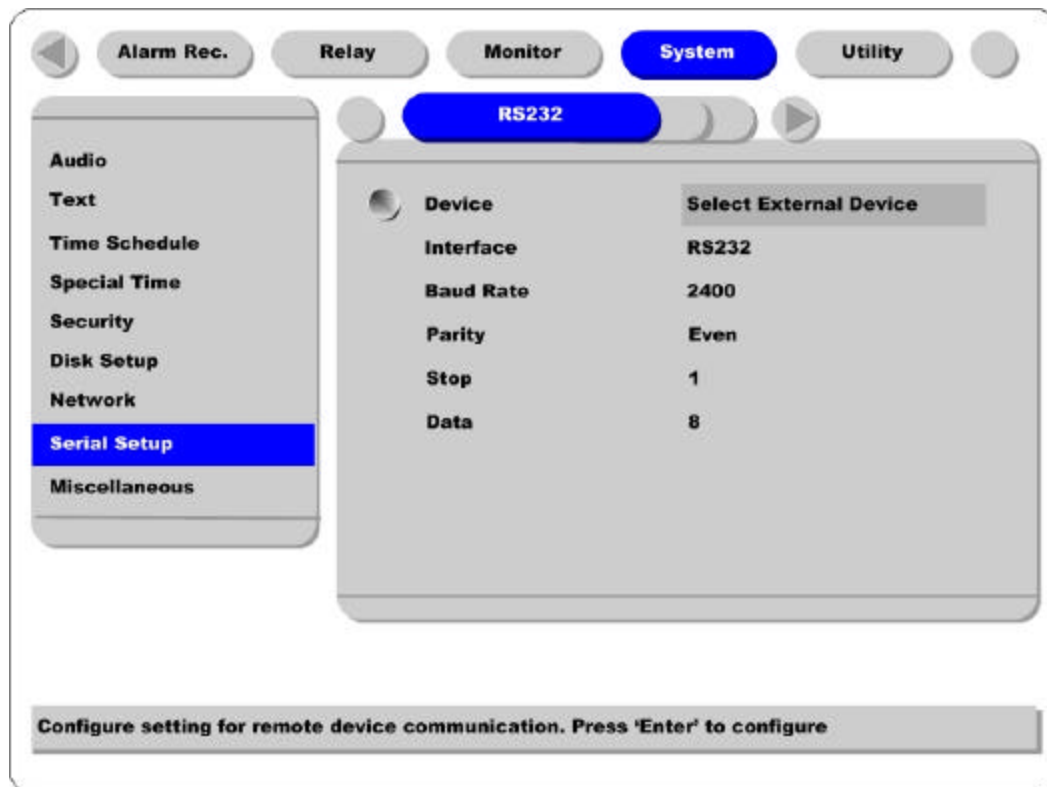

Device

Designate the connected external device.

Interface

Used to designate the protocol on the RS422/RS485 Menu.

Baud rate/Parity/Stop (bit)/Data (bit)

Each value should be set according to the specifications of the connected external device.

5.7.9. Miscellaneous

The screenshot shows a configuration interface with a top navigation bar containing buttons for 'Alarm Rec.', 'Relay', 'Monitor', 'System' (highlighted), and 'Utility'. On the left, a vertical menu lists various settings: 'Audio', 'Text', 'Time Schedule', 'Special Time', 'Security', 'Disk Setup', 'Network', 'Serial Setup', and 'Miscellaneous' (highlighted). The main area displays the 'Miscellaneous' settings, which include a 'Remote Control ID' field set to 'ID#1', 'Keyboard Control Addr' set to '32', 'Keyboard PTZ Addr' set to '1', 'DVR ID' (empty), 'IPCam Menu' set to 'Enable', 'Alarm Buzzer' set to 'Off', and 'Languages' set to 'English'. A 'Reset Values' button is located below these settings. At the bottom of the screen, a message reads 'Press 'Enter' to configure'.

Button control

- Press [MENU] button and select “Miscellaneous” below the “System” tab.

Remote Control ID

Up to sixteen ELX4-60s can be controlled with a single IR Remote Control. Designate each unit with a unique number under the ‘Remote Control ID’ menu.

< How to register remote controller >

- Aim remote controller at the ELX4-60.
- Press the “ID” button of remote controller until ELX4-60 reacts.
- If remote controller’s ID agrees with ELX4-60’s, all the LEDs on the front panel of the ELX4-60 will light up and a buzzer will sound.
- OSD menus can now be set with the remote controller.

Keyboard Control Addr

To set keyboard's control address in order to operate all ELX4-60's menus with keyboard. Default value is "32". If several ELX4-60 are connected with one keyboard, it can be collided. Then the default value should be changed.

Keyboard PTZ Addr

To set keyboard's PTZ address in order to operate each PTZ camera with keyboard. If setting just first camera's address of each ELX4-60, another cameras' are designated automatically. For example, 1st ELX4-60 has five cameras and 2nd ELX4-60 has six cameras, keyboard PTA address of 1st ELX4-60 should be set as "1" and one of 2nd ELX4-60 be set as "6". Be cautious that PTZ addressed are assigned to all cameras automatically in spite of non PTZ camera.

DVR ID

For use with the DVR Manager to control and manage several ELX4-60.

IP Cam Menu

To enable the IP camera options for the "Camera," "Normal Recording," and "Alarm Recording" tabs.

Alarm Buzzer

Enables an alarm buzzer when an alarm (MD or sensor) is triggered.

Language


To select the language used for the OSD Menu.

Reset Values

To reset current configured values. To reset DVR, press the "Reset Values" button.

5.8. Utility

The following description is how to add/format internal or external HDD. ELX4-60 supports various external storages.

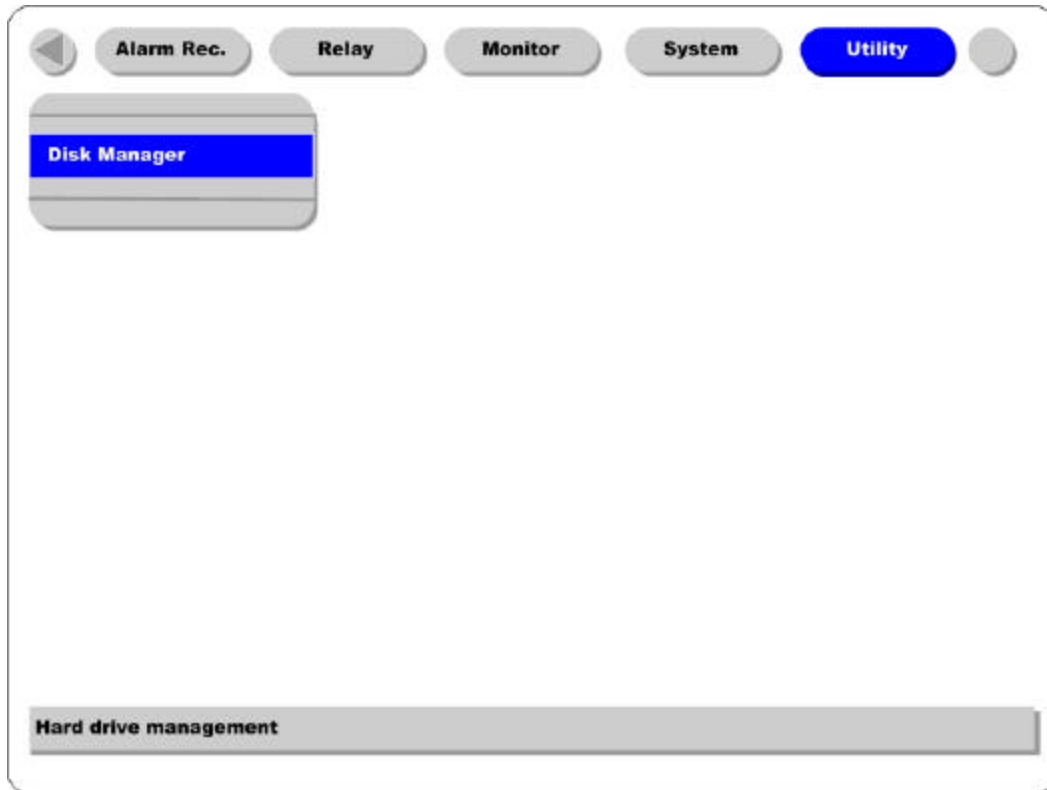

Button control

Press [MENU] button and move to "Utility" below the "System" tab.

5.8.1. Disk Manager

A connected HDD is detected automatically.



Select Disk

To select a Disk.

Action

Select from “Add/Remove/Format/Confirm Removed/Add used”.

[Add] : To add disk

[Remove] : To remove current HDD formatted for use.

[Format] : To set format. In this case, “Alarm Partition” menu is activated.

[Confirm Removed] : Removed HDDs are still listed in the system and can be re-added (“Add Used”) without losing data. “Confirm Removed” will permanently remove the drive and all data will be lost.

[Add used] : It is to add a HDD that has been previously used. The disk does not need to be re-formatted.

Type

There are several symbols to indicate HDD status.

[R] : Available for recording

[V] : Connected and formatted as ELX4-60 file system.

If using 'Add used' command, it will be changed to [R]. There is no need to format again.

[F] : Connected but not available file system. After using 'Add', need to format to make HDD available for recording [R].

[*] : Connected and undergone the 'Add' command. HDD needs to be formatted to be available for recording [R].

[X] : HDD cable is not connected or HDD has a problem. It is recommended to delete from list using 'Confirm Removed'.

Advanced Configuration

ELX4-60 has the default settings of IP camera channels disabled. ELX4-60 can support 12 IP channels and 4 analog cameras simultaneously. And current system can be expandable easily with connecting text or keyboard device.

6. Using IP Cam

6.1. Activating IP Cam menus

To setup the IP cam menu, first enable the IPCam Menu under the “System” tab.

Tab	Value
Remote Control ID	ID#1
Keyboard Control Addr	32
Keyboard PTZ Addr	1
DVR ID	
IPCam Menu	Enable
Alarm Buzzer	Off
Languages	English

Reset Values

Press 'Enter' to configure

Button control

- Move to “Miscellaneous” below “System” tab.
- Set “IP Cam Menu” to “Enable.” This will activate the IP cam menus for the Configuration Menu.

6.2. Camera Setting – IP Camera Channels (Ch. 5 ~ Ch. 16)

Setting up the IP Cameras is similar to setting up the analog channels. However there are specific menus only for IP cam; for example, the ‘Configuration’ menu and ‘Network’ menu in the IP cam setting menu.

6.2.1. Configuration

Menu	Value
Name	IPCam#5
Status	On
User ID	guest
Password	*****
Type	
CH	#1
IP Address(URL)	192.168.0.1
Port	8080
Band Width Limit(KB/s)	50

Configure information to access IP video source

Button control

- Press [MENU] button and move to each “IPCam #5 to #16” below “Camera” menu. Then select “Configuration” menu by pressing the [ENTER] button and using the or buttons.

Name

Press the [ENTER] button to open the related dialogue box and change the camera name.

Status

Press the [ENTER] button and use the or buttons to set the camera to “On” or “Off.” Unlike the analog channels, the IP cam’s default value is “Off.” After registering the IP camera, set the status to “On.”

User ID/Password

The related IP camera's ID/Password should be entered. Default value is "guest/guest." To change the ID/Password, press [ENTER] to open the dialogue box (similar to the "Name" box.)

Type

Set "I-Rec" by pressing the [ENTER] button and using the or buttons.

CH

Designate the channel for the IP camera. For example, the B106 has 6 possible channels, the I-Rec B104 has 4 possible channels, etc.

IP Address(URL)

Press the [ENTER] button to open related dialogue box to manually enter an IP address. To register an IP cam, there are two methods; manually enter the IP using the dialog box (similar to the box for "Name") or select an IP from the Local IP Cam List. To use the Local IP Cam List, please refer to the next page.

Port

Press the [ENTER] button to open the related dialogue box to manually enter the Port Address. The default values are different according to IP camera type; "8080" is the default and "8001" is the "i-Rec" default.

Band Width Limit(KB/s)

To control transfer speed with data size. Basically ELX4-60 can also control it with ips control. It can be set between 10KB and 100KB against the overload of network bandwidth. When setting 1ips at network camera menu and 10KB at this menu, ELX4-60 receives video data of 1ips within 10KB. If data size is 9KB, it will not be problem. But if it is 11KB, one image will not be able to be transmitted per second

6.2.2. Local IP Cam List

This menu is for easy registering of local IP cameras. If ELX4-60 is connected to network and IP cameras are connected to the same local network, they are listed in this menu.

Search

Select Cam 1 of 32

Model	IP Address	MAC Address
	192.168.0.1	00:30:A1:FF:00:01
	192.168.0.2	00:30:A1:C0:00:2A
	192.168.0.3	00:30:A1:00:23:19
	192.168.0.4	00:30:A1:00:11:85

IP Address(URL) 192.168.0.1

Press 'Enter' to search for local IP cameras

Search

Select this button and press the [ENTER] button to refresh the list of local IP cameras.

Select Cam

Select "Select Cam" by pressing the [ENTER] button and select the desired IP camera from the list. When using this method, the IP Address, Type, and Port are automatically configured on the previous screen.

6.3. Normal Rec. – IP Camera Channels (Ch. 5 ~ Ch. 16)


This menu is for configuring the normal recording settings based on channel and timetable. IP Cams cannot be setup with Quick Setup menu. All conditions for recording IP camera channels are set only by Normal recording and Alarm recording menus.

The screenshot shows a configuration interface with a top navigation bar containing buttons for 'Quick Setup', 'Camera', 'Normal Rec.', 'Alarm Rec.', and 'Relay'. The 'Normal Rec.' button is selected. Below this is a sub-menu bar with 'Weekday (Day)' selected. On the left is a list of camera channels: Cam#1, Cam#2, Cam#3, Cam#4, IPCam#5 (highlighted in blue), IPCam#6, IPCam#7, IPCam#8, IPCam#9, and IPCam#10. The main area displays settings for the selected channel (IPCam#5):
- Recording Speed/Quality: Custom
- Speed (ips): 1
- Quality: Q5 (Best)
- Special Time Recording: No Rec.
- Event Recording: Off
At the bottom, a message bar states: 'Configure normal recording schedule for for channel 5(IP Video). Press 'Enter' to configure'.

These settings are same as with the analog channels .

6.4. Alarm Rec. - IP Cam Channel (Ch. 5 ~ Ch. 16)

The difference between the analog cam's and IP cam's menu is that IP cam's event signal depends on IP cam's own function. The MD or sensor menu cannot be set like analogue camera because only the i-Rec series can transmit event signals to ELX4-60.

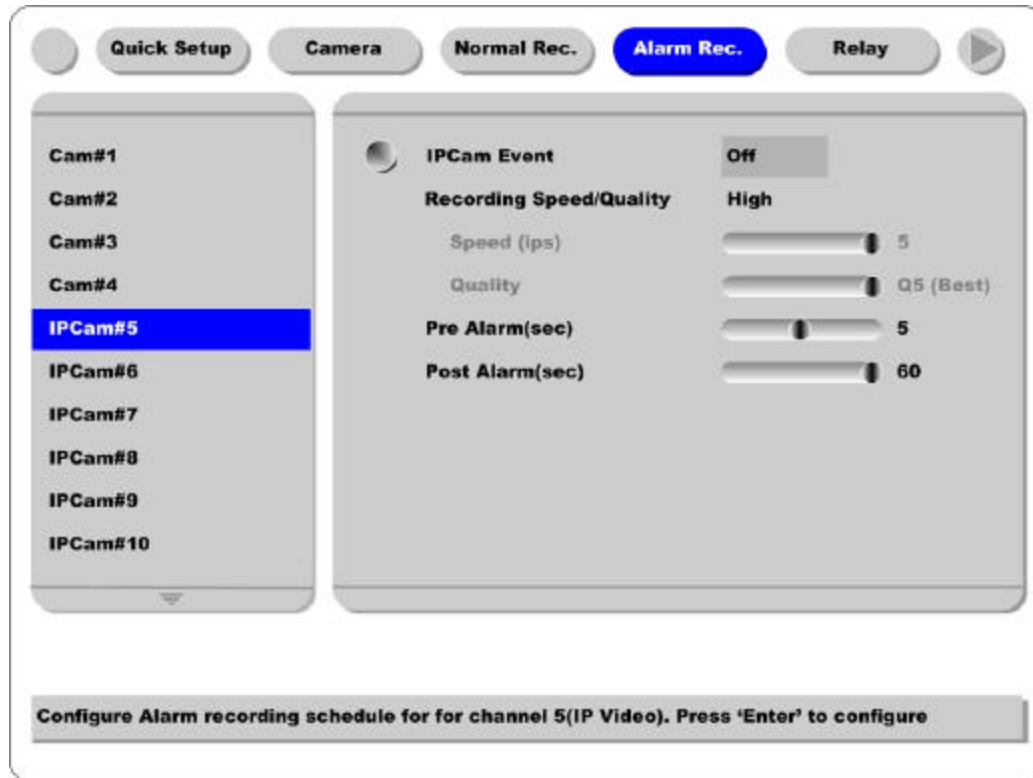

IP Cam Event

Currently, only the i-Rec series is compatible with the ELX4-60 for IP cam events. Setting IPCam Event to "On" when an i-Rec channel is registered enables event data to be received based on the i-Rec Admin Menu (ConfigStation) settings.

Recording Speed/Quality & Pre Alarm & Post Alarm

These settings are same as with the analog channels.

7. Connecting External Device

7.1. Using Text Device


In order to use text device, the following four menus should be set; Text menu, Serial Setup's RS232 menu, Alarm Rec. menu, Normal Rec. menu

7.1.1. Setting at Text menu



- Set both Recording and Monitoring as "On"
- Set "Sync. Text with" value.
- If the connected device is Star Finger 007, select it at "Device" menu. If not, set "Manual" and each sub-menus.

7.1.2. Setting at Serial Setup's RS232 menu

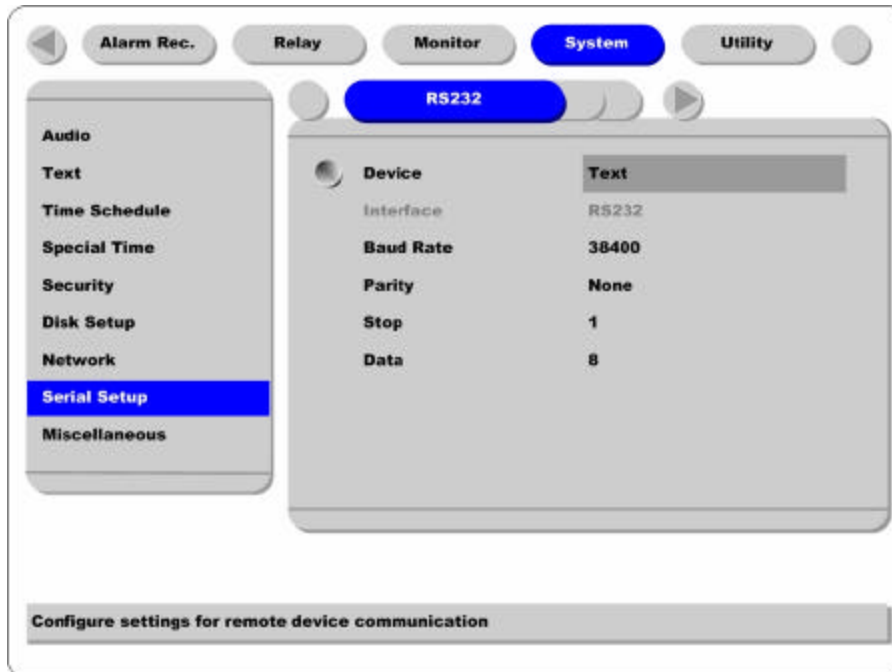


- Set RS232's device menu as "Text". And set baud rate, parity, stop, and data.

7.1.3. Setting at Alarm Rec. menu



- Set text event as "On".

7.1.4. Setting at Normal Rec. menu

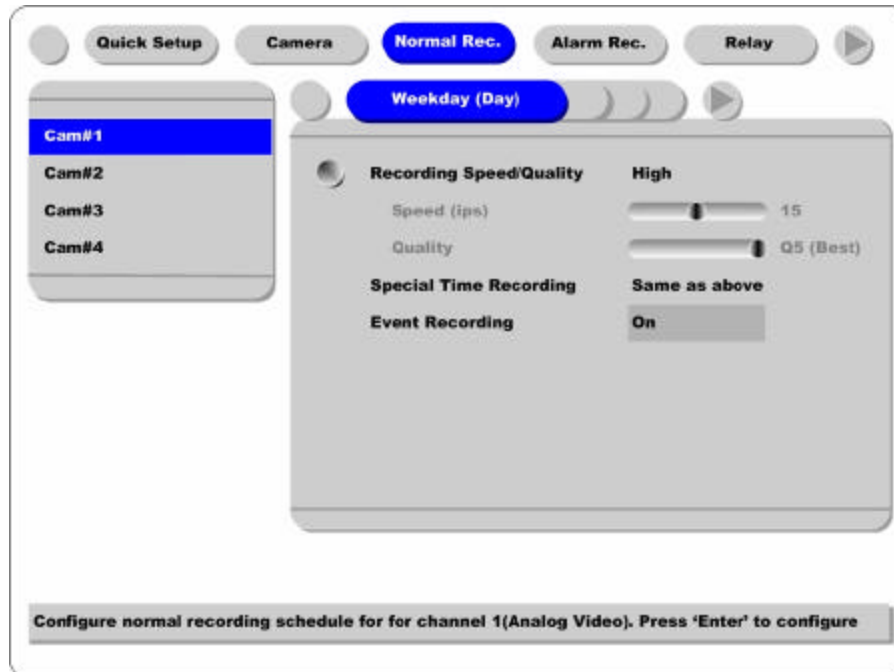

Set event recording as “On” at each time schedule.

<Note>

Whenever pressing the “Help” button, information of displayed image is different.

The default value of Monitoring mode is to show just channel number. Then next step is to show channel name and text, event status, and HDD status.


The default value of Playback mode is to show all information. The next level is to show channel name and text, event status, and channel number.

So in order to view text data, press the “Help” button once at both Monitoring and Playback modes.

7.2. Using Keyboard

In order to use keyboard, the following two menus should be set; Serial Setup's RS232 menu, Serial Setup's PTZ menu

7.2.1. Setting at Serial Setup's RS232 menu

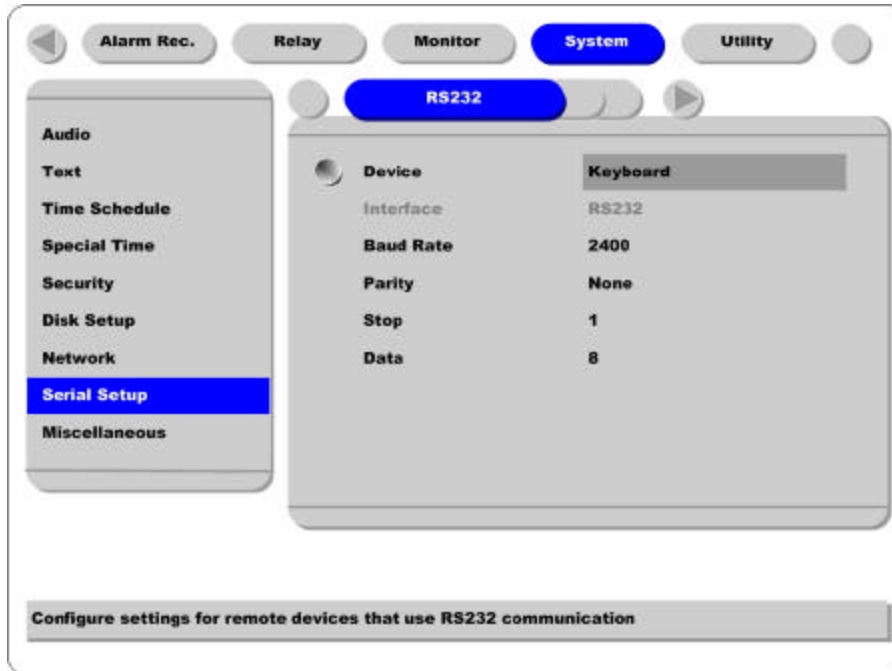

- Set RS232's device menu as "Keyboard". And set baud rate, parity, stop, and data.

7.2.2. Setting at Serial Setup's PTZ menu

- Set PTZ camera to control with keyboard. For more detailed technical solution, please contact the closest local Rugged CCTV distributor.

APPENDIX

Appendix #1 Technical Specification

Hardware	32bit RISC Embedded processor (200MIPS) Flash memory: 8Mbyte RAM: 32Mbyte OS: Embedded Linux
Storage Device	Int.: 2 HDD bays Ext: 3 IEEE 1394 (FireWire) connection ports Supports Disk Management Tool for all disks (Reboot is required when HDD changed) Total manageable capacity: 2 TB
Image Quality Control	5 Levels (Q1-Q5)
Image Compression	Compression Algorithm: Differential Wavelet Compression Rate: 20:1 ~500:1 Average file size: 3 ~ 5KB (Standard Quality)
Video Channel	NTSC or PAL video format are supported 4Ch. analog video inputs via BNC connector
Recording Performance (on 360X243) Analog Ch	Max. 60fps(NTSC) / 50fps(PAL) in total Max 30 fps (NTSC) per channel if 2ch used Max. 15fps (NTSC) per channel if 4ch used
Schedule Recording	Daily: Day / night / Four-segment time frame Weekly: Weekdays / Weekends Status: Normal / Event
Matrix Digital Output Schedule	Daily: Day / night / Four-segment time frame Weekly: Weekdays / Weekends Conditions: MD, sensor input
Configurable Recording Conditions	Recording speed: None to 30 fps Image quality: 5 Levels Event conditions: MD & sensor inputs

Pre / Post Alarm Recording	Pre Alarm Recording: 1 ~ 10 seconds Post Alarm Recording: 1 ~ 60 seconds
Intelligent file system	Data-loss protection against power failure
Event Triggered Video Data Preservation	Overwrite prevention of Event triggered data
Event Log Recording	Log archiving on HDD Log search & monitoring via Network
Data (Video & Audio Clip) Back-up	External HDD: IEEE1394 (FireWire) or USB PnP Memory Stick: USB port
Data Copy (Max. 1 minute's video clip)	VHS Video Tape: Video output port for VCR Backup Notification: Daily / Weekly / Monthly PnP USB storage(Compact Flash, Smart Media, Memory Stick, SD Card)
Displaying Performance	Frame Rate on CCTV Monitor: Max. 120fps Frame Rate on PC: Max. 60ips Display Channel: Quad, Auto Sequential Misc. Play speed: 1x, 2x, 4x, 8x, 16x (FDW & REV) Supports Step-Forward, Step-Reverse. Instant data access based on time and event log
Digital Zoom	2 times digital zoom (Live & Playback Mode)
Event Triggered Pop-up Video	Triggered by motion detection or sensor input
PTZ Control	Ports: RS232, RS485/RS422
Local User :	Front panel push button & IR Remote (controls IP video channels as well)
Remote User :	On-the-screen PTZ control on PC Preset: 8 points per channel Group: 1 group per channel Return Home Position' support
Sensor Inputs and Alarm Outputs	Software-controlled 4 sensor inputs Software-controlled 4 alarms outputs

Audio Recording and Playback	Input: 1Ch, line-in, 1Vpp Output: 1Ch, line-out, 1Vpp Level: -7 ~ 8 Recording level control Support 20dB Amp. for low level audio recording Supports local and remote audio monitoring
Network	Protocol: TCP/IP, ARP, ICMP, DHCP, PPPoE Line: 10/100Mbps Ethernet (RJ-45)
Simultaneous User Support over Network	Monitoring: Max. 5 users Playback: Max. 5 users
Management and Firmware Upgrades	Firmware upgrades via Network
Security	Password (User or Administrator Authentication) Watermarking (For image copying)
Power Supply (included)	Input: AC 100~240V, 50~60 Hz Output: DC 12V, 5A
Power Consumption(with 2HDD)	Booting: Max. DC 12V $\pm$ 10%, 4.5A (54W) Normal: DC 12V $\pm$ 10%, 3.9A (35W)
Environmental Spec	Operating: 41 ~ 113 degrees F. Storage: -49 ~ 149 degrees F.

Appendix #2 Utilizing IP Addresses on Local Network

#2.1 Introduction

Most of our businesses are done via Internet, lately. We play with information by transmitting through e-mails and searching the world of Internet. IP address is what we utilize to access to the Internet.

Currently used IP addresses are limited. And there are 5 classes' networks in the world for now, and a network contains lots of IP addresses. A network can hold limited IP addresses. The numbers depend on network class. 5 classes are from A to E, and the most common one is C class network.

#2.2 IP construction and Network class

1) IP construction

xxx	xxx	xxx	xxx	((xxx: 0 – 255)
X1	X2	X3	X4	e.g. 192.168.1.1

2) Network class

A class A network that contains IP addresses from 0 to 127 at room 'X1'.

Network ID: X1

Host ID: X2, X3, X4

Total number of A-class networks is 128 in the world.

B class: A network that contains IP addresses from 128 to 191 at room 'X1'.

Network ID: X1, X2

Host ID: X3, X4

Total number of B-class networks is 65,534 in the world.

C class A network that contains IP addresses from 192 to 223 at room 'X1'.

Network ID: X1, X2, X3

Host ID: X4

It is the most common network in the world, and the total number of C-class networks is 2,097,152

D class A network that contains IP addresses from 224 to 239 at room 'X1'. D-class network is for multicasting, and it is not allowed to use for common users.

E class: A network that contains IP addresses from 240 to 255 at room 'X1'. E-class network is reserved.

#2.3 C-class Network

1) Features of Addresses

IP address: Three digits number in room 'X4' are for Host ID, and the numbers are from 0 to 255. Among the numbers, 0 is used for Network ID, 1 is used for Router IP (Gateway address) and 255 is used for Broadcast address. Therefore the numbers from 2 to 244 are IP addresses that can be assigned to, i-Rec B104, PC etc.

Network ID: It is to identify a network. Generally the first number is assigned as Network ID.

Gateway address: It is an IP address of router that is connecting Internet and local network. Remote users can access local network over Internet through the gateway (router). Generally the second number is assigned as Gateway address.

Broadcast address: It is to broadcast to all devices that are connected on local network. Broadcast address is a destination for broadcasting and it is determined by calculating. All devices connected on local network have a same Broadcast address.

Subnet Mask: It is to divide a local network into two remote networks. Subnet mask shows the IP quantity in a certain network. The numbers that can be used as subnet mask are limited (0, 4, 8, 16, 32, 64, 128)

2) Network configuration

(1) To use as one network

Network ID: xxx.xxx.xxx.0

Gateway Address: xxx.xxx.xxx.1

Subnet Mask: 255.255.255.0

Broadcast Address: xxx.xxx.xxx.255

IP Addresses: xxx.xxx.xxx.2 – xxx.xxx.xxx.254

(2) To use as two sub-networks (1/2 + 1/2)

Sub-Network ID: xxx.xxx.xxx.0

Gateway Address: xxx.xxx.xxx.1

Subnet Mask: 255.255.255.128

Broadcast Address: xxx.xxx.xxx.127

IP Addresses: xxx.xxx.xxx.2 – xxx.xxx.xxx.126

Sub-Network ID: xxx.xxx.xxx.128

Gateway Address: xxx.xxx.xxx.129

Subnet Mask: 255.255.255.128

Broadcast Address: xxx.xxx.xxx.255

IP Addresses: xxx.xxx.xxx.130 – xxx.xxx.xxx.254

(3) To use as three sub-networks (1/4 + 1/4 + 1/2)

Sub-Network ID: xxx.xxx.xxx.0

Gateway Address: xxx.xxx.xxx.1

Subnet Mask: 255.255.255.192

Broadcast Address: xxx.xxx.xxx.63

IP Addresses: xxx.xxx.xxx.2 – xxx.xxx.xxx.62

Sub-Network ID: xxx.xxx.xxx.64

Gateway Address: xxx.xxx.xxx.65

Subnet Mask: 255.255.255.192

Broadcast Address: xxx.xxx.xxx.127

IP Addresses: xxx.xxx.xxx.66 – xxx.xxx.xxx.126

Sub-Network ID: xxx.xxx.xxx.128

Gateway Address: xxx.xxx.xxx.129

Subnet Mask: 255.255.255.128

Broadcast Address: xxx.xxx.xxx.255

IP Addresses: xxx.xxx.xxx.130 – xxx.xxx.xxx.254

(4) To use as four sub-networks ($1/4 + 1/4 + 1/4 + 1/4$)

Sub-Network ID: xxx.xxx.xxx.0

Gateway Address: xxx.xxx.xxx.1

Subnet Mask: 255.255.255.192

Broadcast Address: xxx.xxx.xxx.63

IP Addresses: xxx.xxx.xxx.2 – xxx.xxx.xxx.62

Sub-Network ID: xxx.xxx.xxx.64

Gateway Address: xxx.xxx.xxx.65

Subnet Mask: 255.255.255.192

Broadcast Address: xxx.xxx.xxx. 127

IP Addresses: xxx.xxx.xxx.66 – xxx.xxx.xxx.126

Sub-Network ID: xxx.xxx.xxx.128

Gateway Address: xxx.xxx.xxx.129

Subnet Mask: 255.255.255.192

Broadcast Address: xxx.xxx.xxx.191

IP Addresses: xxx.xxx.xxx.130 – xxx.xxx.xxx.190

Sub-Network ID: xxx.xxx.xxx.192

Gateway Address: xxx.xxx.xxx.193

Subnet Mask: 255.255.255.192

Broadcast Address: xxx.xxx.xxx.255

IP Addresses: xxx.xxx.xxx.194 – xxx.xxx.xxx.254

**Rugged CCTV****5327 Cedar Creek Dr.****Kemp, Texas 75143****Tel : (866) 301-2288****Fax : (903) 498-8989****Technical Support: 1-866-301-CCTV****URL: www.rugged-cctv.com****E-mail: sales@rugged-cctv.com**