



Renesas Starter Kit for H8S/2472

Tutorial Manual

RENESAS SINGLE-CHIP MICROCOMPUTER
H8S FAMILY

Table of Contents

Chapter 1. Preface	1
Chapter 2. Introduction.....	2
Chapter 3. Tutorial Project Workspace	3
Chapter 4. Project Workspace	4
4.1. Introduction.....	4
4.2. Creating a new Project Workspace	4
4.3. Build Configurations and Debug Sessions	5
4.3.1. Build Configuration	5
4.3.2. Debug Session.....	5
Chapter 5. Building the Tutorial Project	6
5.1. Building Code	6
5.2. Connecting the debugger	7
5.3. Connecting to the target with the E10A.....	7
Chapter 6. Downloading and Running the Tutorial	9
Chapter 7. Project Files.....	14
7.1. Standard Project Files	14
7.1.1. Initialisation code (resetprg.c / resetprg.h)	14
7.1.2. Board initialisation code (hwsetup.c / hwsetup.h).....	14
7.1.3. Main tutorial code (main.c / main.h).....	15
Chapter 8. Additional Information.....	16

Chapter 1. Preface

Cautions

This document may be, wholly or partially, subject to change without notice.

All rights reserved. Duplication of this document, either in whole or part is prohibited without the written permission of Renesas Technology Europe Limited.

Trademarks

All brand or product names used in this manual are trademarks or registered trademarks of their respective companies or organisations.

Copyright

© Renesas Technology Europe Ltd. 2008. All rights reserved.

© Renesas Technology Corporation. 2008. All rights reserved.

© Renesas Solutions Corporation. 2008. All rights reserved.

Website: <http://www.eu.renesas.com/>

Glossary

CPU Central Processing Unit

LCD Liquid Crystal Display

HEW High-performance Embedded Workshop

ADC Analog to Digital Converter

LED Light Emitting Diode

CD Compact Disc

PC Program Counter

E10A On-chip debugger module

RSK Renesas Starter Kit

Chapter 2. Introduction

This manual is designed to answer, in tutorial form, the most common questions asked about using a Renesas Starter Kit (RSK): The tutorials help explain the following:

- How do I compile, link, download, and run a simple program on the RSK?
- How do I build an embedded application?
- How do I use Renesas' tools?

The project generator will create a tutorial project with two selectable build configurations

- 'Debug' is a project built with the debugger support included.
- 'Release' build demonstrating code suitable for release in a product.

Files referred to in this manual are installed using the project generator as you work through the tutorials. The tutorial examples in this manual assume that installation procedures described in the RSK Quick Start Guide have been completed. Please refer to the Quick Start Guide for details of preparing the configuration.

NOTE: These tutorials are designed to show you how to use the RSK and are not intended as a comprehensive introduction to the High-performance Embedded Workshop (HEW) debugger, the compiler tool-chains or the E10A Emulator – please consult the relevant user manuals for more in-depth information.

Chapter 3. Tutorial Project Workspace

The workspace includes all of the files for two build configurations. The tutorial code is common to both the Debug and the Release build configurations. The tutorial is designed to show how code can be written, debugged then downloaded in a 'Release' situation.

The build configuration menu in High-performance Embedded Workshop (HEW) allows the project to be configured such that certain files may be excluded from each of the build configurations. This allows the inclusion of the debug monitor within the Debug build, and its exclusion in the Release build. Contents of common C files are controlled with defines set up in the build configuration options and #ifdef statements within the same files.

Maintaining only one set of project files means that projects are more controllable.

Chapter 4. Project Workspace


4.1. Introduction

HEW is an integrated development tool that allows the user to write, compile, program and debug a software project on any of the Renesas Microcontrollers. HEW will have been installed during the installation of the software support for the RSK product. This manual will describe the stages required to create and debug the supplied tutorial code.

4.2. Creating a new Project Workspace

To look at the program, start High performance Embedded Workshop from the Windows Start Menu.

Open a new tutorial workspace from the [File -> New Workspace...] menu or select 'Create a new project workspace' when presented with the 'Welcome!' dialog.

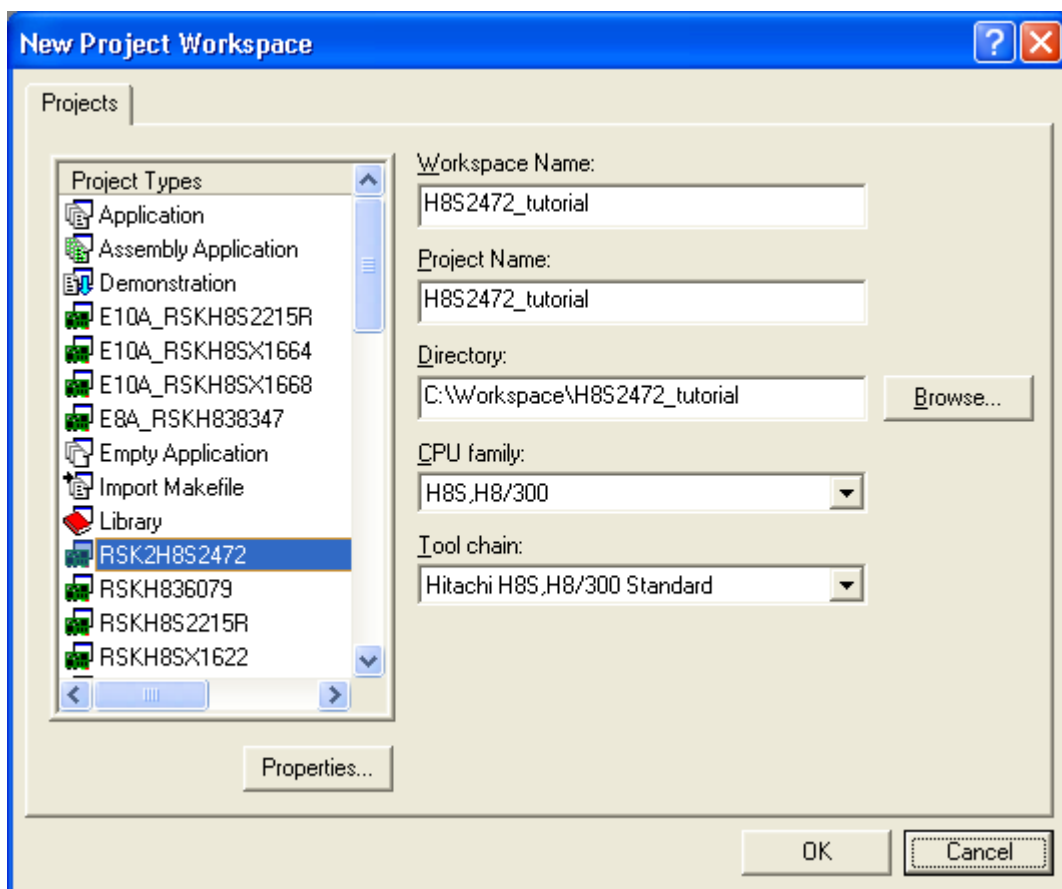

The example above shows the New Project Workspace dialog with the RSK2H8S2472 selected.

- Select the 'H8S, H8/300' CPU family and 'Hitachi H8S, H8/300 Standard' Tool-chain for the RSK.
- Select the 'RSK2H8S2472' Project type for the RSK from the project list.
- Enter a name for the workspace; all your files will be stored under a directory with this name.
- The project name field will be pre-filled to match the workspace name above; this name may be changed.

Note: HEW allows you to add multiple projects to a workspace. You may add the sample code projects later so you may wish to choose a suitable name for the Tutorial project now.

- Click <OK> to start the RSK Project Generator wizard.

The next dialog presents the example projects available. Choose the Tutorial code which will be explained later in this manual. There is also an option for Sample code which provides examples for using various peripherals. This will open a new dialog allowing the selection of many code examples for the peripheral modules of the device. The final option is for an application build where the debugger is configured but there is no program code. This project is suitable for the user to add code without having to configure the debugger.

- Select "Tutorial" as the type of project to generate and then click "Next".
- Click "Finish" to create the project

The project generator wizard will display a confirmation dialog. Press 'OK' to create the project and insert the necessary files.

A tree showing all the files in this project will appear in HEW.

- To view the file 'main.c', double click on the file in the Workspace window. A new window will open showing the code.

4.3. Build Configurations and Debug Sessions


The workspace that has been created contains two build configurations and two debug sessions. The Build Configuration allows the same project to be built but with different compiler options. The options available to the user are described fully in the HEW Users Manual.

4.3.1. Build Configuration

The build configurations are selected from the left hand drop down list on the toolbar. The options available are Debug and Release. The debug build is configured for use with the debugger. The Release build is configured for final ROM-able code.

A common difference between the two builds may be the optimisation settings. With Optimisation turned on the Debugger may seem to execute code in an unexpected order. To assist in debugging it is often helpful to turn off optimisation on the code being debugged.


- Select the 'Debug Build' Configuration.



4.3.2. Debug Session

The debug sessions are selected from the right hand drop down list on the toolbar. The options vary between RSK however one will always start Debug and include the type of debug interface. The alternate selection will be 'DefaultSession'. The purpose of the debug sessions is to allow the use of different debugger tools or different debugger settings on the same project.

Select 'SessionH8S_2472_E10A_USB_SYSTEM' debug session.



Chapter 5. Building the Tutorial Project


The tutorial project build settings have been pre-configured in the tool-chain options. To view the tool chain options select the 'Build' Menu item and the relevant tool-chain. This should be the first option(s) on the drop down menu.

The dialog that is displayed will be specific to the tool-chain selected.

The configuration pane on the left hand side will exist on all the tool-chain options. It is important when changing any setting to be aware of the current configuration that is being modified. If you wish to modify multiple or all build configurations this is possible by selecting 'All' or 'Multiple' from the 'Configuration' drop down list.

- Review the options on each of the tabs and 'Category' dropdown lists to be aware of the options available.

When complete close the dialog box by clicking <OK>.

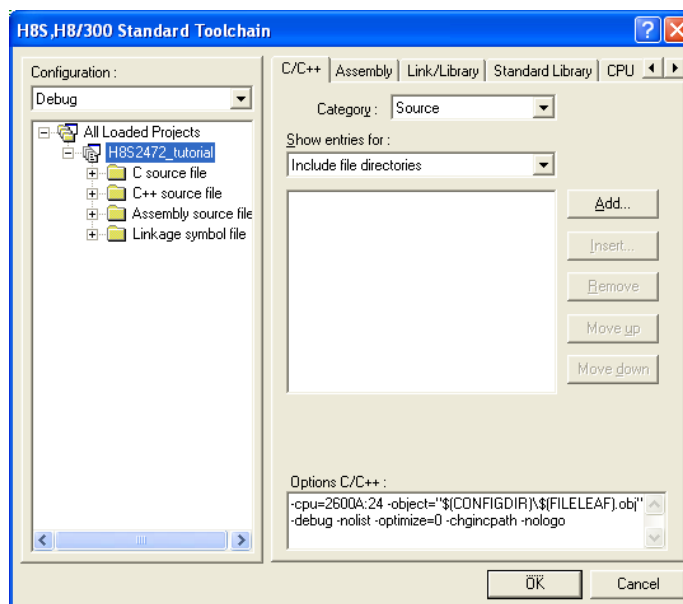

5.1. Building Code

There are three shortcuts available for building the project.

1. Select the 'Build All' toolbar button. 

This will build everything in the project that has not been excluded from the build. This includes the standard library.

2. Select the 'Build' toolbar button. 

This will build all files that have changed since the last build. The standard library will not be built unless an option has been changed.

3. Press 'F7'

This is equivalent to pressing the 'Build' button described above.

Build the project now by pressing 'F7' or pressing one of the build icons as shown above.

During the build each stage will be reported in the Output Window.

The build will complete with an indication of errors and warnings encountered during the build.

5.2. Connecting the debugger

For this tutorial it is necessary for you to power the RSK from the supplied PSU. The E10A module will be powered via the USB cable. Please be aware that if you have too many devices connected to your USB port it may be shut down by Windows. If this happens remove some devices and try again. Alternatively you can provide an external power source, taking care to ensure the correct polarity and voltage.



The Quick Start Guide provided with the RSK board gives detailed instructions on how to connect the E10A to the host computer. The following assumes that the steps in the Quick Start Guide have been followed and the E10A drivers have been installed.

- Fit the LCD module to LCD on the RSK, so it lies above U13. Ensure all the pins of the connector are correctly inserted in the socket.
- Connect the E10A debugger to the USB port on your computer.
- Connect the E10A debugger to the target hardware ensuring that it is plugged into the connector marked E10A.
- Fit jumper E10A_EN to enable E10A debugger (if any of the applications should work without E10A the jumper must be removed).
- An external power to the board can be turned on now.


5.3. Connecting to the target with the E10A

This section will take you through the process of connecting to the device, programming the Flash and executing the code.


- Select the 'SessionH8S_2472_E10A_USB_SYSTEM' debug session.
- Click the <Connect> button  on the debug toolbar
- Select the correct Microcontroller type (H8S/2472 illustrated)
- Select 'E10A-USB Emulator'
- Press <OK>
- Type '8.5' in MHz field and press <OK>

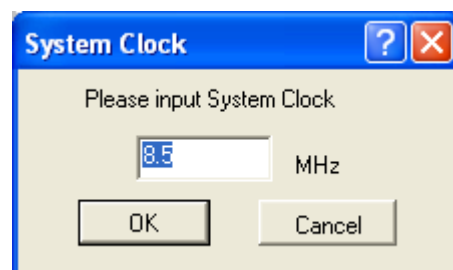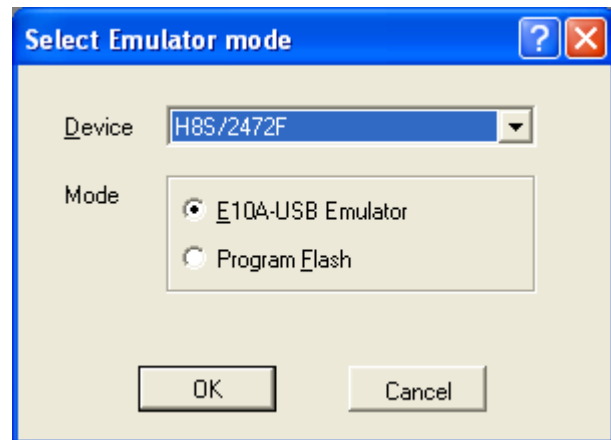

- Enter ID code as '0000E10A'.

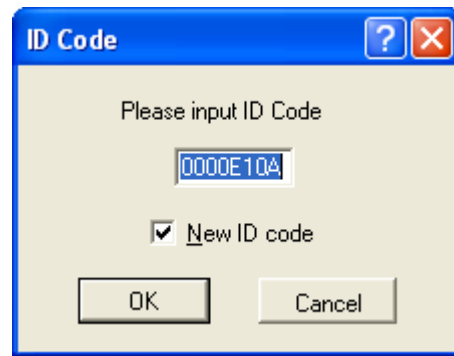

- The Flash Memory write program is downloaded.
- The Output window in HEW will state 'Connected'

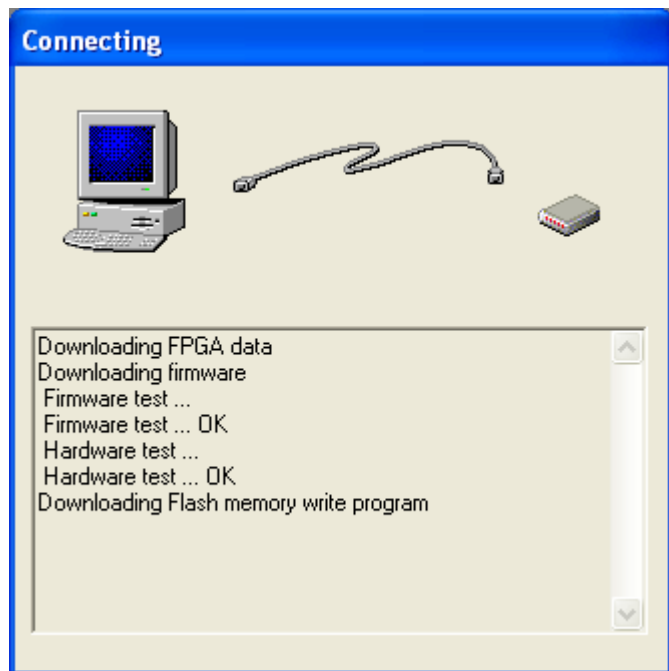

Now is a good time to save the HEW session.

- Select 'File' | 'Save Session'.

If you have changed any workspace settings now is a good time to save the workspace.


- Select 'File' | 'Save Workspace'.

Chapter 6. Downloading and Running the Tutorial

Once the code has been built in HEW it needs to be downloaded to the RSK.

There will now be an additional category in the workspace view for 'Download Modules'


- Right click on the download module listed and select 'Download'.

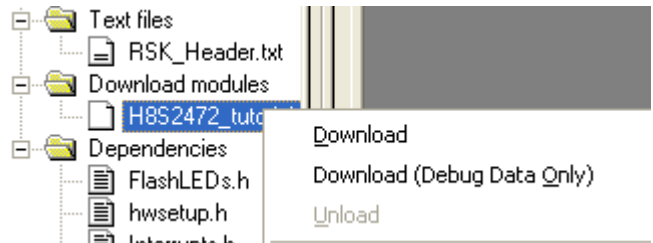


On completion the debugger and code are ready to be executed.

To start debugging we need to reset the debugger and target.

- Press 'Reset CPU' on the Debug Toolbar.



The File window should open the Tutorial code at the entry point. An arrow marks the current position of the program counter.

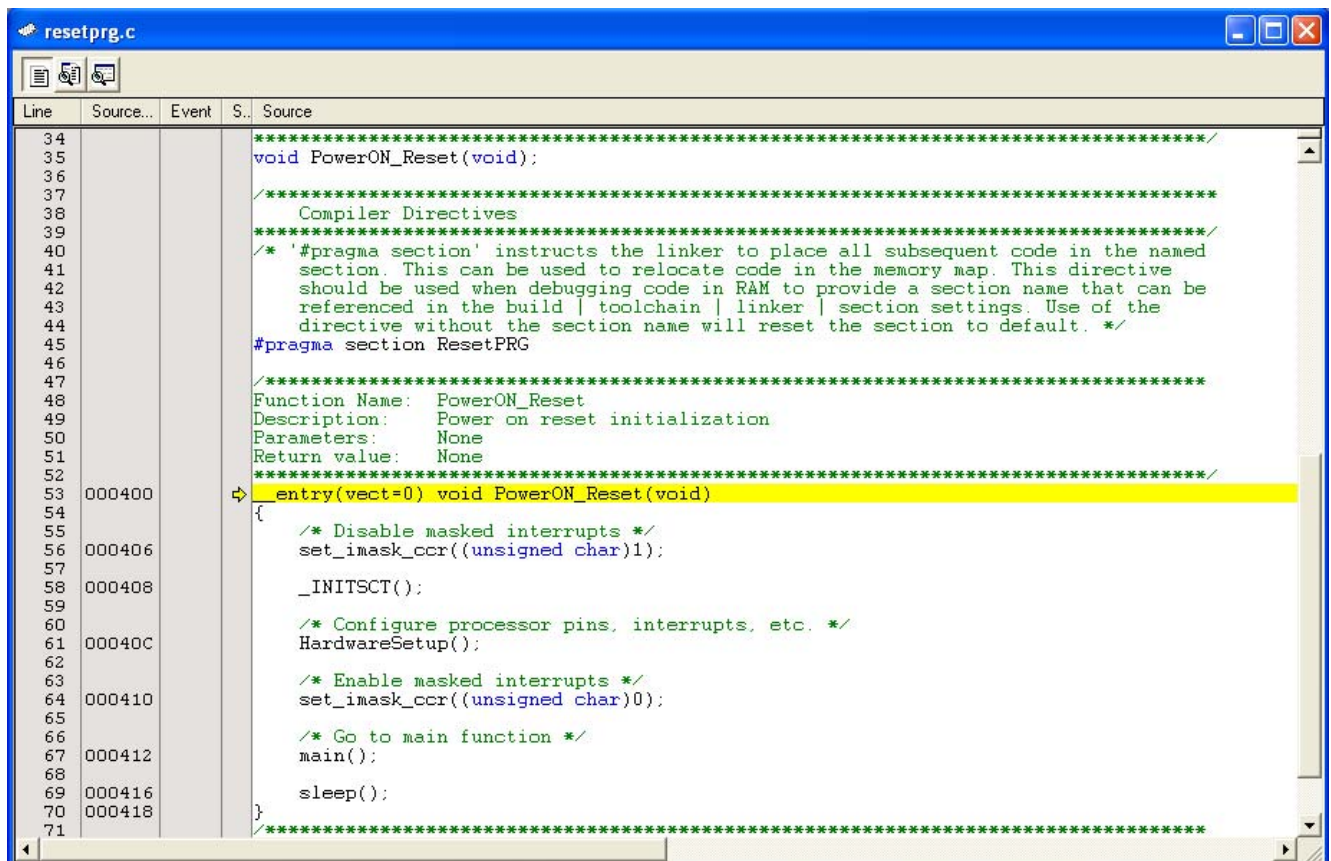


We will now skip over the initialisation code and proceed to the main tutorial.

- Open the file called 'resetprg.c' by double clicking it in the project navigator.
- Place a breakpoint at the call to main();
Breakpoints can be set by double clicking in the column containing the PC arrow next to the line to break at; or selecting the line and pressing F9; or right click on the line and select 'Toggle breakpoint'. Alternatively set an eventpoint, by clicking in


the column to the left of the breakpoint column. Eight eventpoints can be set. Eventpoints do not require programming the flash memory, and thus are faster to use.

- Press 'Reset Go' on the Debug Toolbar.



The code will execute to the breakpoint. At this point all the device initialisation will have been completed.

- Press 'Step In' on the Debug Toolbar.




The code window will open 'main.c' and show the new position of the program counter.

Line	Source...	Event	S..	Source
66				/****** Function Name: main Description: Main function Parameters: None Return value: None ***** void main(void) { /* Variables initialization */ 75 000D6C flFlagLed = 0; 76 000D74 gucKeyPressed = 0x00; 77 000D7C count = 0xFF; 78 /* Transmit to System Medium Clock mode (clock / 16) */ 80 000D84 SYSTEM.SBYCR.BIT.SCK = 4; 81 82 000D8C SYSTEM.MSTPCRL = 0x00; 83 /* Reset the LCD module */ 84 000D90 InitialiseDisplay(); 85 86 /* Display Renesas Splash Screen */ 87 000D94 DisplayString(LCD_LINE1, "Renesas"); 88 000DA0 DisplayString(LCD_LINE2, NICKNAME); 89 90 /* Flash the user LEDs for some time or until a key is pressed. */ 91 000DAC FlashLEDs(); 92 93 /* Flash the user LEDs at a rate set by the user potentiometer (ADC) using 94 000DB0 interrupts. */ 95 TimerADC(); 96 97 /* Demonstration of initialised variables. Use this function with the debugger. */ 98 000DB4 Statics_Test(); 99 100 /* End of the user program. This function must not exit. */ 101 000DB6 while (1) 102 { 103 } 104 000DCA } 105 ***** End of function main


- Insert a breakpoint on the call to the 'TimerADC' function.

- Right click on the 'FlashLEDs();' function and select 'Go to cursor'.

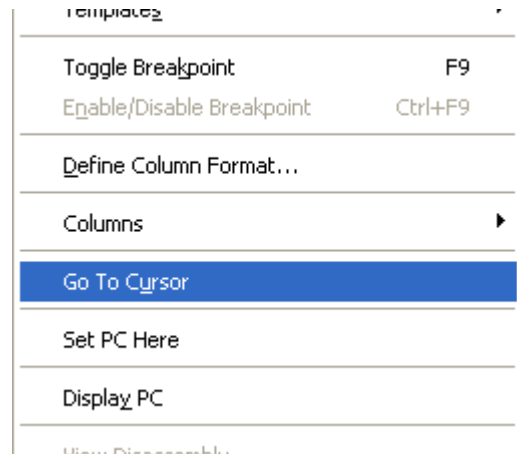

The code will execute to the selected line and stop. An automatic breakpoint was inserted in the code and then removed after calling the break.

- Press 'Step Over' on the Debug Toolbar.



The code will run and flash the LEDs 200 times. The debugger will not exit until all 200 flashes have completed or a button is pressed on the RSK.


- If the LEDs are still flashing press the SW1 button on the RSK to exit the FlashLEDs() function.

The code will run to the breakpoint we previously set on the TimerADC function.

The TimerADC function initialises an interrupt on an available internal timer. On a compare match in the timer module an interrupt is generated. In the TimerADC code version the interrupt reads the last ADC conversion for the external potentiometer and uses the result to set the next compare match value. The ADC conversion is then re-started.


The interrupt initialisation is completed as part of the hardware setup. This is contained in the file 'interrupts.c'.

- Open the file 'interrupts.c' by double clicking on the file in the workspace view.
- Review this file and find the interrupt function that changes the LED pins, INT_OCIB_FRT(void).
- Set a breakpoint on the line where the LED pins are modified.
- Press <Go> or <F5> to run the code from the current PC position.



The code will stop in the interrupt routine. It is now possible to step through the interrupt function.

- Remove the breakpoint in the interrupt by double clicking again before exiting the function.
- Press <Go> to run the code from the current PC position.




The code will now run to the infinite loop at the end of main() function. The user LEDs should now be flashing. You can modify the flashing rate by adjusting the potentiometer on the board.

- Press <Stop> on the debug toolbar.




- Press 'CTRL-B' to open the breakpoint window.
- Select 'Remove All'
- Press <OK>.

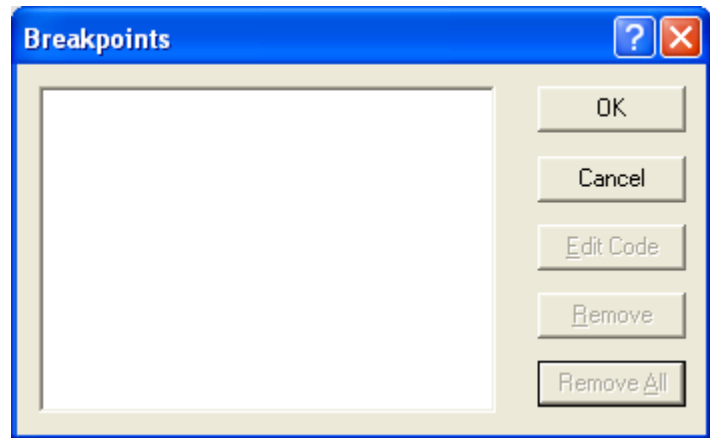

- Open the file 'main.c'
- Insert a breakpoint on 'Statics_Test();'.


The statics test is used to demonstrate that the initialisation has successfully copied all initialised variables from storage in flash to RAM.

- Press <Reset Go> on the Debug Toolbar.



The code will stop at the breakpoint. (Press a button to bypass the flashing LED test.)

- Press <Step In> on the Debug Toolbar.



It is possible to monitor variables during debugging of the code. To set up a 'watch' on a variable place the mouse over the variable. If the variable is available in the current context a tool-tip will be displayed with the current value of the variable.

- Hover the mouse over the 'ucStr' variable to see the tooltip value. Then Right click on the variable name and select 'Instant Watch'.


A dialog will open showing the variable and allowing further details to be explored.

- Press <Add>

The dialog will close and a new pane will open in the workspace containing the variable.

It is possible to see that the string has been successfully initialised to 'STATIC '.

- Set a breakpoint on the call to 'DisplayString();' inside the for loop.
- Press 'Go' to run the code from the current PC position.



When the program stops you can see the modified string displayed on the second line of the LCD.

Inspection of the watch pane will show that the first character of the variable string has been replaced with the first character of the constant

replacement string.

- Remove the breakpoint
- Right click on the 'DisplayString();' function call after the loop and select 'Go to cursor'.

This shows that the variable was initialised at program start up and can be overwritten with 'TESTTEST'.

You have now run the tutorial code and used many of the common features of the debugger. We suggest that you review the rest of the tutorial code as many functions have important information on the operation of the code, the compiler directives and comments on when they should or must be used. Please refer to Chapter 7 for more information on the project files.

Chapter 7. Project Files

7.1. Standard Project Files

The RSK tutorials are configured so that it is possible to provide the same tutorial code on multiple RSK products. This allows the evaluation of the different processor cores using equivalent code. To achieve this, the following files are common between all device cores and Tool-chains.

Each of the tutorial files has detailed comment text describing the function of each code entry. Please refer to the source code for greater detail on the purpose and operation of the compiler specific details.

7.1.1. Initialisation code (resetprg.c / resetprg.h)

This is the entry point of the main tutorial code.

```
#pragma section ResetPRG

/*****
Function Name:   PowerON_Reset
Description:    Power on reset initialization
Parameters:     None
Return value:   None
*****/
__entry(vect=0) void PowerON_Reset(void)
{
    /* Disable masked interrupts */
    set_imask_ccr((unsigned char)1);

    _INITSCT();

    /* Configure processor pins, interrupts, etc. */
    HardwareSetup();

    /* Enable masked interrupts */
    set_imask_ccr((unsigned char)0);

    /* Go to main function */
    main();

    sleep();
}
/*****
End of function PowerON_Reset
*****/
```

Initialisation of the variables used in the C compilers and initialisation of stack pointers are completed in the `_INITSCT` function for the H8 and SH compilers. The call to `HardwareSetup()` will initialise the device hardware and peripherals ready for the tutorial software.

The call to `'main()'` will start the main demonstration code.

7.1.2. Board initialisation code (hwsetup.c / hwsetup.h)

There are four common stages to the configuration of the microcontroller device. The code to demonstrate this is therefore split into four functions. Each function is written specifically for the device supported. The function calls are shown below.


```

void HardwareSetup(void)
{
    ConfigureOperatingFrequency();
    ConfigurePortPins();
    EnablePeripheralModules();
    ConfigureInterrupts();
}

```

7.1.3. Main tutorial code (main.c / main.h)

The main tutorial code is common to all tutorial projects. The display initialisation and string display functions operate on the LCD display module. Check compatibility with ks0066u controller and pin connection on the schematic before connecting a LCD module not supplied by Renesas.

```

/*****
Function Name:   main
Description:     Main function
Parameters:     None
Return value:   None
*****/
void main(void)
{
    /* Variables initialization */
    flFlagLed = 0;
    gucKeyPressed = 0x00;
    count = 0xFF;

    /* Transmit to System Medium Clock mode (clock / 16) */
    SYSTEM.SBYCR.BIT.SCK = 4;

    SYSTEM.MSTPCRL = 0x00;
    /* Reset the LCD module */
    InitialiseDisplay();

    /* Display Renesas Splash Screen */
    DisplayString(LCD_LINE1, "Renesas");
    DisplayString(LCD_LINE2, NICKNAME);

    /* Flash the user LEDs for some time or until a key is pressed. */
    FlashLEDs();

    /* Flash the user LEDs at a rate set by the user potentiometer (ADC) using
    interrupts. */
    TimerADC();

    /* Demonstration of initialised variables. Use this function with the debugger. */
    Statics_Test();

    /* End of the user program. This function must not exit. */
    while (1)
    {
    }
}

```

Chapter 8. Additional Information

For details on how to use High-performance Embedded Workshop (HEW), refer to the HEW manual available on the CD or from the web site.

Further information available for this product can be found on the Renesas website at:

http://www.renesas.com/renesas_starter_kits

General information on Renesas Microcontrollers can be found at the following website.

Global: <http://www.renesas.com/>

Regional (English language) sites can be accessed from the Global site, or directly by going to:

Europe: <http://renesas.eu>

Americas: <http://america.renesas.com>

Asia: <http://sg.renesas.com>

Renesas Starter Kit for H8S/2472

Tutorial Manual


Publication Date Rev.1.00 28.08.2008

Published by: Renesas Technology Europe Ltd.

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, UK

©2008 Renesas Technology Europe and Renesas Solutions Corp., All Rights Reserved.

Renesas Starter Kit for H8S/2472
Tutorial Manual

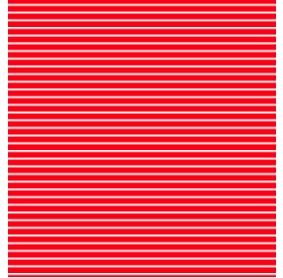

Renesas Technology Europe Ltd.

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, UK