

# Earlex® SprayPort

**HV7000A / HV7000P**



## OPERATING INSTRUCTIONS

**Thank you for purchasing the Earlex Spray Port.**

**This is a highly versatile spray kit and can be used on a variety of applications.**

**BEFORE USE - PLEASE READ THE SAFETY & OPERATING INSTRUCTIONS.**

**Please retain for future reference**



## SAFETY INSTRUCTIONS

WARNING! FIRE AND EXPLOSION HAZARD.

- **CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK OR INJURY, USE INDOORS ONLY.**
- The substances used with this spray applicator (paint, thinners etc) may contain hazardous, harmful, explosive or corrosive materials. ALWAYS COMPLY WITH THE SAFETY INSTRUCTIONS ISSUED WITH THIS PRODUCT AND THE MATERIAL BEING USED.
- The spray applicator must only be used with paints and solvents that have a suitable flash point for spraying. If in doubt, consult the paint or solvent manufacturer's data
- Always ensure there is adequate ventilation when spraying.
- NEVER spray near an open flame, including an appliance pilot flame.
- NEVER smoke when spraying.
- Always disconnect the unit from the mains supply when re-filling the paint container.
- Always disconnect the unit from the mains supply when cleaning the spray applicator.
- Always ensure the spray area is safe and free from all debris that may present a fire or trip hazard.
- NEVER, under any circumstances, point the spray gun at another person or animal. In the event of injury occurring, seek expert medical advice immediately.
- NEVER allow children or unauthorised users to operate or play with the spray equipment. This equipment is for professional use only.
- Always read the paint manufacturer's thinning instructions before use.
- Always wear the correct protective face mask when spraying. We also recommend wearing gloves, goggles and overalls.
- After every use ensure that you clean the spray gun thoroughly & grease the gland washer.
- Use only genuine manufacturer replacement parts.
- Only use the spray equipment as detailed in these instructions.
- Do not use the air hose or mains cable to pull the turbine unit.
- Check the hoses, hose connectors & mains cable daily. Any worn or damaged parts should be replaced immediately.

## IMPORTANT ELECTRICAL INFORMATION

### EXTENSION CORDS

Your Earlex Spray Port is supplied with a power cord that is 6 feet long. If you need an extension cord, use only a 3 wire extension cord that has a 3 blade grounding plug, and a 3 slot receptacle that will accept the plug on the product. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. For lengths less than 25 feet, No 16AWG extension cords should be used. For lengths between 25 feet and 50 feet, No 12 AWG extension cords should be used.


### GROUNDING INSTRUCTIONS

This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER :- Improper installation of the grounding plug can result in a risk of electric shock.** If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either of the flat blade terminals. The wire with insulation having an outer surface that is green with, or without, yellow stripes is the grounding wire and this must be connected to the plug's grounding pin.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded. Do not modify the plug provided if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

This product is for use on a nominal 120 volt circuit and has a grounding plug that looks like the plug illustrated in Fig.1. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

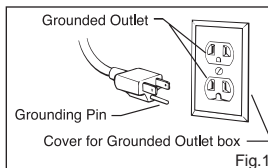

## INTRODUCTION

The Earlex HV7000 "Spray Port" is an industrially rated, portable, paint spraying system and is intended for use by professionals. HVLV stands for High Volume, Low Pressure. This is a type of spraying that allows you to spray extremely accurately but without all the overspray that occurs with high pressure tank equipment. In some parts of the world the high pressure systems are banned by law on environmental grounds and HVLV type systems are the only alternative for professional type spraying. This system is extremely easy to use, very safe and reduces the amount of paint used.

The Earlex Spray Port (model no. HV7000US) is a portable system that is made up as a trolley unit that can be broken down into two separate parts, the main Turbine Unit and the Carrier Stand. These two parts connect together via two quick release clips allowing the complete system to be wheeled from a vehicle to the workplace or around the workshop. They are easily separated so they can be stored in the back of a van or truck. The Carrier Stand holds the Air Hose and spray applicator and also has space for a cleaning kit. The Earlex Spray Port (model no. HV7000 USNF) is supplied with the main turbine unit, hose and gun. Your Spray Port can be supplied with a plastic spray applicator Type P or, an aluminium spray applicator Type A. Both types will give identical excellent results.

**PLEASE NOTE:** We have done all we can to ensure that used correctly and according to these instructions, this spray applicator will give long and trouble free life. We accept no responsibility for damage caused by the use of incorrect or unsuitable substances, paints or fluids which have not been thinned correctly or are unsuitable for the surfaces to which they are applied, health hazards arising from lack of ventilation when working in confined spaces or failure of the equipment due to inadequate cleaning of the components after use. If in doubt, always test a small inconspicuous area first. Always read the paint manufacturer's instructions first. Neither our guarantee nor the above statement affects your statutory rights.

## IMPORTANT BASIC INFORMATION

### SELECTING PAINT

This is a highly versatile spray kit that can be used with several different spray mediums including varnishes, wood preservatives, enamels, oil and water based paints and cellulose. However some materials cannot be sprayed so please check the recommendation of the manufacturer before buying the paint. If a material refers to brush application only then it usually cannot be sprayed.

**THIS UNIT SHOULD NOT BE USED FOR TEXTURED PAINTS. THESE MATERIALS CONTAIN PARTICLES OF GRIT THAT WILL CAUSE PREMATURE AND EXCESSIVE WEAR. USE OF SUCH MATERIALS WILL INVALIDATE THE WARRANTY. TO OBTAIN THE BEST RESULTS FROM YOUR SPRAY KIT PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE.**

### SURFACE PREPARATION

Preparation of the surface and thinning of the paint are the two most important areas to be concerned with to obtain the best results from your spray kit. Ensure all surfaces are free from dust, dirt, rust and grease. If necessary smooth with sandpaper, or similar. Taping of areas is important to ensure you do not spray those areas you wish to remain untouched.

### THINNING

Your spray kit is supplied with a viscosity cup. Viscosity is a technical term used to indicate if a product is very thin or very thick. If thin, the viscosity is said to be low, while if very thick the viscosity is said to be high. Viscosity is measured in seconds. In order to spray some materials they need to be "thinned" (diluted). Thinning is very important when spraying. Most paints are supplied ready for brush application and *may need to be thinned (diluted)* for spraying purposes.


Follow the manufacturers guide for thinning in conjunction with a spray applicator. If in doubt please contact the manufacturers of the paint. The viscosity cup supplied will help you determine the correct thickness of the paint. Paint is "thinned" by adding the substance which the paint is based upon. If a water based paint then water is added, if oil based then white spirit, if cellulose then a cellulose thinner is added.

As some paints, wood preservatives and other sprayable materials contain particles that have differing qualities, please ensure that when filling the paint container of the spray applicator, that the paint is filtered through either a funnel with a filter on it or through nylon tights or stockings. This will ensure that no large particles enter the paint container, so preventing blockages and providing you with trouble free spraying. Ensure that a face mask, gloves and goggles are worn at all times when spraying.

## IDEAL VISCOSITY

<p><b>Water based paints and emulsions</b>      45 - 60 seconds</p> <p><b>Oil based paints</b>                      45 - 50 seconds</p> <p><b>Wood preservatives</b>                  No dilution</p> <p><b>Primers</b>                                      45 - 50 seconds</p>	<p><b>Varnishes</b>                                  Manufacturers ratio</p> <p><b>Aluminium paints</b>                      Manufacturers ratio</p> <p><b>Wood stains</b>                              Manufacturers ratio</p> <p><b>Cellulose</b>                                  Manufacturers ratio</p>	
--	--	--

This spray applicator can be used with products having a viscosity ranging from 10 to a maximum of 60 *seconds*. Dip the viscosity cup into the material and fill up. Time how long it takes for the viscosity cup to empty (Fig.3).

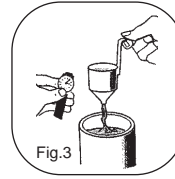

Using the above chart (or manufacturer's instructions) as a guide determine if the material requires further thinning, if so then thin accordingly.

## OPERATION

### PREPARATION

- Fill the paint container with the material to be sprayed. **DO NOT OVERFILL** above MAX level indicator. Push the Feed Tube firmly into the base of the spray applicator body and re-fit the paint container into the spray applicator body. (See exploded view on page 8 to show the fitting detail for the different spray applicator types.)
- Unwind the hose from the Carrier Stand & screw the motor end of the hose to the outlet port at the front of the turbine unit. Connect the spray applicator end of the hose to the spray applicator using the quick release connector. Uncoil the power cord and plug it in to a suitable power outlet.

**ALWAYS KEEP THE MOTOR UNIT AS FAR AWAY FROM THE SPRAYING AREA AS POSSIBLE TO PREVENT PAINT CONTAMINATING THE MOTOR.**

**TAPE ANY AREA YOU DO NOT WISH TO SPRAY.**

Once you have set up ready to spray, switch on the unit. No paint will be sprayed until the trigger on the spray applicator is gently pulled. Before starting any work on spraying actual objects we suggest you spend some time practicing on cardboard or newspaper until you have got used to how the spray applicator works.

### SETTING UP YOUR SPRAY APPLICATOR


- Choose the best Needle & Fluid Tip for your application.

Your Spray Port is supplied to you with a 0.08" diameter Needle & Fluid Tip. This is a good size for most applications. However, there are other sets available to cater for a wider range of materials that you may want to spray. In general, the larger the diameter of the Needle & Fluid Tip, the more suitable it is for higher viscosity materials. The larger diameters also allow a greater volume of material to be applied. The smaller diameters are more suitable for low viscosity materials & lighter application. For the Spray Port type "P", Needle & Fluid Tip sets are available at 0.04" and 0.06" diameter. For the Spray Port type "A", Needle & Fluid Tip sets are available at 0.04", 0.06" and 0.10" diameter. See page 8 for details.

<b>NEEDLE SELECTION GUIDELINES</b>	
<b>Needle/Fluid Tip Size</b>	<b>Material</b>
0.04/0.06"	Cellulose, Acrylics, Synthetics, Polyurethane, Lacquers, Fluorescents, Wood Stains
0.06/0.08"	Oil base, Hammers, Oxides, Primers, Air Drying, Enamels, Varnish, Marine Paint, Multi-Colour, Industrial Synthetics, Latex Oils, Polyurethane, Aluminium
0.08/0.10"	Emulsions, Chlorinated rubber, Oxides, Zinc Rich Primers, Epoxy Plastic Adhesives, Polyurethane, Floor Paving Paints

### SPRAY PATTERNS

The spray applicator has 3 different spray patterns – Horizontal, Vertical and Round (Fig.4)  
 The horizontal and vertical are recommended for large surfaces.  
 The round spray is used for small objects or for areas - such as corners – that are difficult to reach.

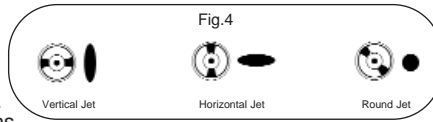

To adjust the spray pattern, loosen the Air Cap Ring (1), adjust the position of the Air Cap (2) to obtain either a vertical, horizontal or round pattern then re-tighten the aircap ring.

### PAINT VOLUME

The volume of paint sprayed is easily adjustable. (Fig.5(a))  
 Completely close Fluid Adjusting Screw (8) by turning this clockwise as far as it will go. Whilst pulling the trigger, begin turning the adjustment screw counter-clockwise until the volume of paint you require is obtained.  
 If the paint spray is too wide or contains too much paint turn the Fluid Adjusting Screw clockwise again. Once the correct spray pattern & paint volume is obtained, you are ready to begin spraying.




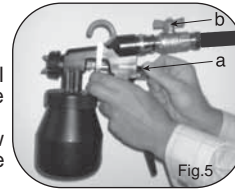


Fig.5(b) shows the Air Volume Control Valve set for 'FULL' air flow. Rotate clockwise to reduce air flow.

## SPRAYING


### SPRAYING TECHNIQUE

1. To obtain the best results always keep your spray applicator level and spray equally from side to side or up or down 10"-12" (25-30cm) from the surface. Avoid spraying at an angle as this will lead to runs on the surface (Fig.6a).
2. Let your arm control the left to right movement rather than your wrist as this will aid even paint distribution over the whole area (Fig.6b).
3. Do not tip the sprayer to more than 45° angle (Fig.6c).

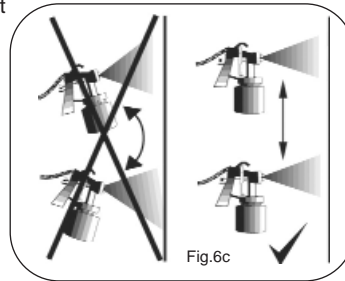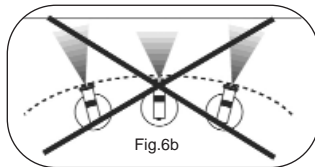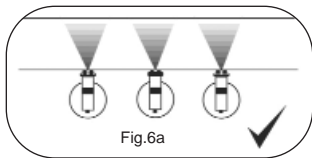

## HELPFUL HINTS

1. Evenly control the speed of movement of the spray applicator. A fast speed will give a thin coat and a slow speed will give a thick coat.
2. Only apply one coat at a time. If a further coat is required follow the paint manufacturer's instructions for drying times.
3. If spraying small areas or objects keep the output setting low as this will avoid excessive use of paints and will minimise overspray.
4. When spraying large areas or objects, it is best to use a criss-cross pattern, either from left to right then up or down or vice-versa. This will ensure maximum coverage (Fig.7).
5. Avoid stopping and starting when spraying as this can lead to too much or not enough material on a surface.
6. To ensure edges are covered, commence spraying just to the side of area being sprayed.
7. CLEAN SPRAYER AFTER EVERY USE (SEE CLEANING INSTRUCTIONS)

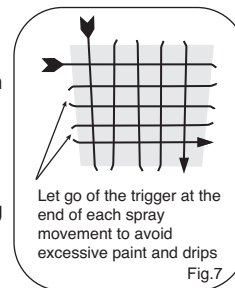

## CLEANING INSTRUCTIONS

Remember to disconnect the unit from the mains power when undertaking any cleaning of the Spray Port. **THE SPRAY APPLICATOR MUST BE THOROUGHLY CLEANED IMMEDIATELY AFTER USE. IF THE PAINT DRIES INSIDE THE GUN, CLEANING WILL BECOME MUCH MORE DIFFICULT AND MAY RENDER THE GUN INOPERABLE. THIS IS NOT COVERED BY WARRANTY.**

The spray applicator is the same as a paintbrush, if it is not cleaned it will go hard and can become useless. You must therefore clean this out after use.

### SPRAY APPLICATOR

1. Remove the gun container.
2. Pour any leftover paint into its container so that it can be used for the future.
3. Pour a quantity of the respective thinner into container, shake the spray applicator lightly, reassemble the gun, then spray this liquid through the gun. Repeat this until the thinner being sprayed is coming through with no traces of paint.
4. Clean any traces of paint off the outside of the spray applicator.
5. Clean the container Seal inside the spray applicator body for Type P or inside the spray applicator body for Type A.

### FLUID TIP & NEEDLE (Type P)

1. Unscrew Air Cap Ring (1)
2. Remove the Air Cap (2)
3. Completely remove Fluid Adjusting Screw (8)
4. Remove the Spring (7)
5. Remove the Fluid Tip Needle (6) by gently pulling the trigger
6. Remove Direction Plate noting the position of notches (3)
7. Remove the Fluid Tip (4)
8. Remove Fluid Tip Seal (5)
9. Remove Paint Container Seal (12)
10. Place all of these items into a container and clean them using a brush and clean thinners
11. Clean the inside of the body of the gun
12. Thoroughly dry these parts before reassembling
13. Grease the Gland (10)
14. Reassemble parts in reverse order

It is recommended fitting the Fluid Tip (4) prior to the needle

### FLUID TIP & NEEDLE (Type A)

1. Remove the Air Cap Ring (1)
2. Remove the Air Cap (2)
3. Remove Direction Plate & Spring Assembly (3)
4. Unscrew Adjusting Screw (12) & pull out the Needle (9) & Needle Spring (11).
5. Use the spanner supplied to remove the Fluid Tip (4) & Fluid Tip Seal (5)
6. Immerse all of the parts above in thinners & clean them thoroughly using the cleaning kit supplied with the gun.
7. Before refitting the Needle, dip its end into some vasaline. This will automatically lubricate the gland washer as it is inserted.
8. The external surfaces of the spray applicator can be wiped clean with a cloth soaked in thinners.

**NEVER DISPOSE OF PAINTS OR SOLVENTS INTO DRAINS. CONTACT YOUR LOCAL COUNCIL TO ARRANGE COLLECTION OR FOR DETAILS OF NEAREST REGISTERED DISPOSAL SITE.**

### TURBINE UNIT AND CARRIER STAND

- The Turbine unit and the Carrier and Stand can be cleaned using a damp cloth and a little thinners to remove paint stains.

## MAINTENANCE

### SPRAY APPLICATOR

- Keep the internal workings of the spray applicator clean. The spray applicator should be thoroughly cleaned after each use. Follow the cleaning instructions on page 6 with reference to the drawings on page 8
- Check the needle and fluid tip on a regular basis for excessive wear, and replace as necessary. See the cleaning instructions for the correct procedure for removing these parts. Replacement needle sets are available from Earlex Inc.
- Keep all moving parts lubricated with a light smear of '*silicone free*' grease.
- Lubricate the gland washer, after each time you clean it, with a light smear of '*silicone free*' grease.
- Check there is no leakage from the gland washer. If there is, tighten the gland nut a little to ensure a seal with the needle. Do not over-tighten this nut, also ensure the gland washer has not dried out. If it has, lubricate it as above.


### TURBINE UNIT

- Check the condition of the cartridge filter that is housed in the front cover. This is easily removed by sliding it upwards. If it is clogged, remove it and blow out using an airline or washed out using a mild detergent if necessary.
- Keep the outer surface of the air hose free from harmful substances such as petrol, cellulose thinners, paint strippers & oil. Prolonged exposure to such substances may cause irreparable damage. Always check and clean off any excess immediately.
- Check the condition of the power cord regularly. If there are any cuts or serious abrasions to the outer sheath, replace it immediately. When the unit is not in use, keep the power cord coiled around the brackets at the back of the turbine case. When the unit is being used, protect the power cord and any extension cord from damage that could be caused, for example, by traffic or hazardous substances.

**The turbine unit can only be fully serviced by authorised service agents.**

## SPRAY APPLICATOR SPARE PARTS DRAWINGS

### TYPE P

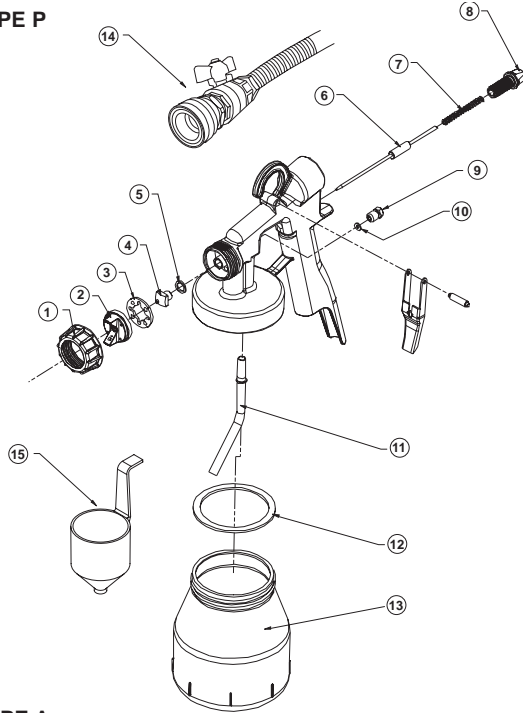


#### Key Description

No.	Description	Part
01.	Air Cap Ring	L0215
02.	Air Cap	L0238
03.	Spray Direction Plate	L0206
04.	0.08" (2.0mm) Fluid Tip	L0237
05.	Fluid Tip Seal	L0211
06.	0.08" (2.0mm) Fluid Needle	L0236
07.	Spring	L0216
08.	Fluid Adjusting Screw	L0210
09.	Gland Nut	L0208
10.	Gland	L0272
11.	Paint Feed Tube	L0214
12.	Paint Container Seal	L0212
13.	Paint Container (Clear)	L0201
14.	Hose Assembly	N0099
15.	Viscosity Cup	SG243

**Optional Extras:** Nozzles & Fluid Tips of different sizes can be obtained as sets under the following accessory numbers. Please call our Toll Free helpline to order these on 800 252 1288.

0.04" dia Fluid Tip, Needle & seal	HVACC10R
0.06" dia Fluid Tip, Needle & seal	HVACC15R
0.08" dia Fluid Tip, Needle & seal	HVACC20R

### TYPE A

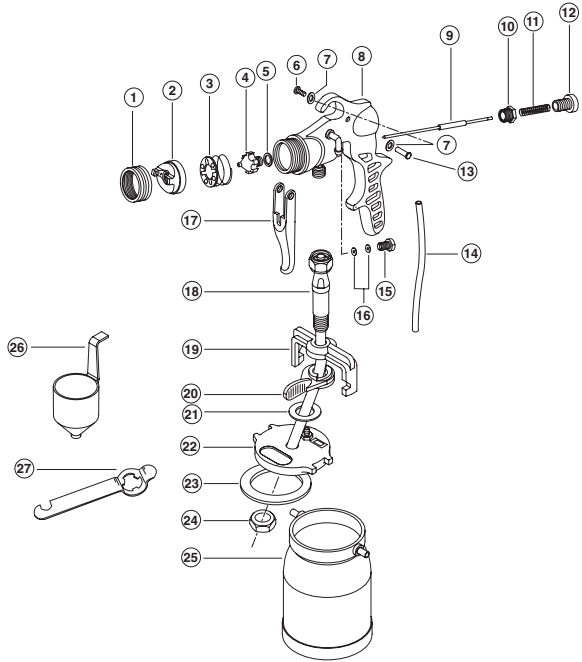

#### Key Description


No.	Description	Part No.
1.	Air Cap Ring	L0151
2.	Air Cap	L0517
3.	Air Direction Plate Assy	L0162
4.	0.08" (2.0mm) Fluid Tip	L0157
5.	Fluid Tip Seal	L0159
6.	Pivot Screw	L0179
7.	Washer	L0195
8.	Main Body Assy	L0180
9.	0.08" (2.0mm) Fluid Needle	L0166
10.	Adaptor	L0174
11.	Spring	L0175
12.	Adjusting Screw	L0176
13.	Pivot	L0178
14.	Air Feed Tube	L0182
15.	Gland Nut	L0173
16.	Gland Washer (2 pcs)	L0168
17.	Operating Lever	L0177
18.	Centre Bolt & Pick Up Tube Assy	L0183
19.	Yoke	L0184
20.	Clamp Lever	L0185
21.	Shim	L0186
22.	Lid Assy	L0187
23.	Gasket	L0188
24.	Centre Bolt Nut	L0189
25.	Paint Container	L0190
26.	Viscosity Cup	SG243
27.	Spanner	L0191

**Optional Extras:** Nozzles & Fluid Tips of different sizes can be obtained as sets under the following accessory numbers. Please call our Toll Free helpline to order these on 800 252 1288.

0.04" dia Fluid Tip, Needle & seal	HV5ACC10R
0.06" dia Fluid Tip, Needle & seal	HV5ACC15R
0.08" dia Fluid Tip, Needle & seal	HV5ACC20R
0.10" dia Fluid Tip, Needle & seal	HV5ACC25R



## TURBINE UNIT & CARRIER STAND PARTS DRAWINGS

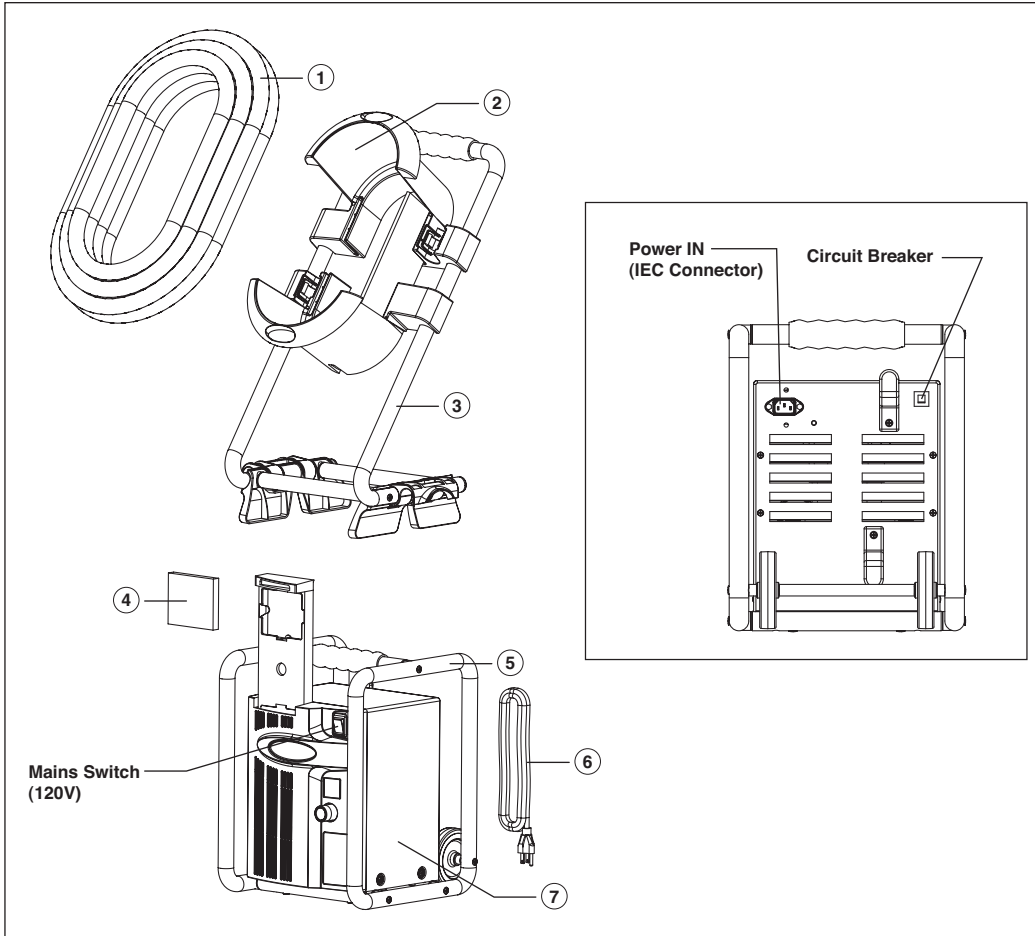

### SPARE PARTS LIST

1. Hose Connector Assembly (29ft 10")	N0099	5. Main Frame Assembly	N0161
2. Semi Hose Reel Moulding	N0116	6. Power Cord	D42
3. Carrier Frame Assembly	N0162	7. Motor Unit Assembly	N0158
4. Filter Media x 2	N0087		

FOR INFORMATION ON ALL SPARE PARTS FOR THIS UNIT PLEASE CONTACT PMC ON OUR TOLL FREE HELPLINE: 800 252 1288




### TECHNICAL SPECIFICATION

Volts	120V	Length of mains cable	16AWG, 3 wire	6ft 10"
Amps	10A	Length of hose		29ft 6"
Unrestricted Airflow	90cfm	Container capacity		1 Quart
Turbine Stages	3			

## TROUBLE SHOOTING

PROBLEM	CAUSE	ACTION REQUIRED
<b>The paint drips on item being painted</b>	Paint too diluted	Add undiluted material
	Paint volume too high	Reduce the paint flow by turning Fluid Adjusting Screw
	Moving too slowly	Increase speed of application
	Spray gun trigger being held for too long	Release trigger earlier
	Spray gun too close	Increase the distance between gun and workpiece
<b>Paint is thin or irregular</b>	Paint too diluted	Add undiluted material
	Paint volume too low	Increase the paint flow by turning Fluid Adjusting Screw
	Moving too fast	Reduce speed of application
	Spray gun clogged	Clean the gun
	Spray gun too far away	Reduce the distance between gun and work piece
<b>No spray pattern being produced</b>	Paint too thick	Add thinner
	Gun clogged	Clean the spray gun
	Pick up pipe clogged	Clean Paint Feed Tube
	Air hose split	Replace air hose
	Gritty paint	Filter the paint
	Container almost empty	Refill container
	Spray gun at an angle	Ensure Paint Feed Tube is angled towards paint
	Air intake blocked	Check the condition of the Filter and clean as necessary
<b>Unit will not start</b>	Circuit breaker tripped (HV7000 unit)	Check the back of the unit. If the circuit breaker has tripped, a white push button indicator will appear. Push in to reset. If this does not cure the problem, please refer to your nearest service agent.
	House circuit breaker	Check and reset if required.

## NOTES



Copyright & Design Right Reserved © 2005  
Design Registration UK 3015591

**WARRANTY**

This product is guaranteed for a period of 12 months for ordinary use and 6 months for hire purposes or where the unit is lent to other users. The guarantee is against faulty manufacture and materials. Whilst every possible care is taken by Earlex to ensure that our products leave the factory in good working order, Earlex cannot under any circumstances accept liability for problems or damage caused by their subsequent use. It is the responsibility of the user to ensure that surfaces to be treated or cleaned are suitable for spraying. The guarantee does not affect your statutory rights.



Distributed by:

PMC Marketing & Sales Inc, 8261 Hyw 73, Suite F, Stanley, N.C. 28164, USA

**Customer Service:** Toll Free 800 252 1288

**E.mail:** onepmc@aol.com **Website:** www.wallpaperstripper.com