

Makita

アメリカ

Cordless Rotary Hammer


Equipped with electric brake

16 mm (5/8") MODEL HR160DH

16 mm (5/8") MODEL HR160DWH

With Fast Charger

INSTRUCTION MANUAL

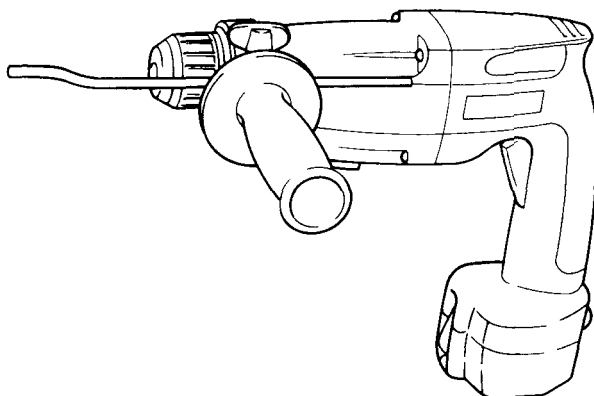

SPECIFICATIONS

• Model HR160DH

Capacities			No load speed (RPM)	Blows per minute	Dimensions (L x W x H)	Net weight
Steel	Wood	Concrete				
13 mm (1/2")	20 mm (3/4")	16 mm (5/8")	0 — 950	0 — 3,600	296 mm x 70 mm x 232 mm (11-5/8" x 2-3/4" x 9-1/8")	2.5 kg (5.5 lbs)

• Battery Cartridge 1201

• Model DC1201 Fast Charger

Voltage	Input	Output	Charging time
12 V	A.C. only 50 Hz — 60 Hz	D.C. 7.2 V — 12 V	1 hour

* Manufacturer reserves the right to change specifications without notice.

• Note: Specifications may differ from country to country.

WARNING: For your personal safety, READ and UNDERSTAND before using.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

(For All Tools)

WARNING: WHEN USING ELECTRIC TOOLS, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, AND PERSONAL INJURY, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS.

1. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite injuries.
2. **CONSIDER WORK AREA ENVIRONMENT.** Don't use power tools in damp or wet locations. Keep work area well lit. Don't expose power tools to rain. Don't use tool in presence of flammable liquids or gases.
3. **KEEP CHILDREN AWAY.** All visitors should be kept away from work area. Don't let visitors contact tool or extension cord.
4. **STORE IDLE TOOLS.** When not in use, tools should be stored in dry, and high or locked-up place — out of reach of children.
5. **DON'T FORCE TOOL.** It will do the job better and safer at the rate for which it was intended.
6. **USE RIGHT TOOL.** Don't force small tool or attachment to do the job of a heavy-duty tool. Don't use tool for purpose not intended; for example, don't use circular saw for cutting tree limbs or logs.
7. **DRESS PROPERLY.** Don't wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
8. **USE SAFETY GLASSES.** Also use face or dust mask if cutting operation is dusty.
9. **DON'T ABUSE CORD.** Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
10. **SECURE WORK.** Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.
11. **DON'T OVERREACH.** Keep proper footing and balance at all times.
12. **MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and if damaged, have repaired by authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean, and free from oil and grease.
13. **DISCONNECT TOOLS.** When not in use, before servicing, and when changing accessories, such as blades, bits, cutters.

14. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
15. **AVOID UNINTENTIONAL STARTING.** Don't carry tool with finger on switch. Be sure switch is OFF when plugging in.
16. **EXTENSION CORDS.** Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table 1 shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

TABLE 1 MINIMUM GAGE FOR CORD SETS

			Total Length of Cord in Feet			
			0 – 25	26 – 50	51 – 100	101 – 150
Ampere Rating More Than	—	Not More Than	A W G			
0	—	6	18	16	16	14
6	—	10	18	16	14	12
10	—	12	16	16	14	12
12	—	16	14	12	Not Recommended	

17. **OUTDOOR USE EXTENSION CORDS.** When tool is used outdoors, use only extension cords intended for use outdoors and so marked.
18. **STAY ALERT.** Watch what you are doing, use common sense. Don't operate tool when you are tired.
19. **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Don't use tool if switch does not turn it on and off.
20. **GUARD AGAINST ELECTRIC SHOCK.** Prevent body contact with grounded surfaces. For example; pipes, radiators, ranges, refrigerator enclosures.
21. **REPLACEMENT PARTS.** When servicing, use only identical replacement parts.
22. **POLARIZED PLUGS.** To reduce the risk of electric shock, this equipment has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

VOLTAGE WARNING: Before connecting the tool to a power source (receptacle, outlet, etc.) be sure the voltage supplied is the same as that specified on the nameplate of the tool. A power source with voltage greater than that specified for the tool can result in **SERIOUS INJURY** to the user — as well as damage to the tool. If in doubt, **DO NOT PLUG IN THE TOOL**. Using a power source with voltage less than the nameplate rating is harmful to the motor.

IMPORTANT SAFETY INSTRUCTIONS FOR CHARGER & BATTERY CARTRIDGE

1. **SAVE THESE INSTRUCTIONS** — This manual contains important safety and operating instructions for battery charger.
2. Before using battery charger, read all instructions and cautionary markings on (1) battery charger, (2) battery, and (3) product using battery.
3. **CAUTION** — To reduce risk of injury, charge only MAKITA Battery Cartridge 1200, 1201 & 1201A. Other types of batteries may burst causing personal injury and damage.
4. Do not expose charger to rain or snow.
5. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
6. To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting charger.
7. Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
8. An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire and electric shock. If extension cord must be used, make sure:
 - a. That pins on plug of extension cord are the same number, size, and shape as those of plug on charger;
 - b. That extension cord is properly wired and in good electrical condition; and
 - c. That wire size is at least as large as the one specified in the table below.

TABLE 1
RECOMMENDED MINIMUM AWG SIZE FOR
EXTENSION CORDS FOR BATTERY CHARGERS

Length of Cord (Feet)	25	50	100	150
AWG Size of Cord	18	18	18	16

9. Do not operate charger with damaged cord or plug — replace them immediately.
10. Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceman.
11. Do not disassemble charger or battery cartridge; take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
12. To reduce risk of electric shock, unplug charger from outlet before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.

ADDITIONAL SAFETY RULES FOR CHARGER & BATTERY CARTRIDGE

- 1. Do not charge Battery Cartridge when temperature is BELOW 10°C (50°F) or ABOVE 40°C (104°F).**
- 2. Do not attempt to use a step-up transformer, an engine generator or DC power receptacle.**
- 3. Do not allow anything to cover or clog the charger vents.**
- 4. Always cover the battery terminals with the battery cover when the battery cartridge is not used.**
- 5. A battery short can cause a large current flow, overheating, possible burns and even a breakdown.**
 - (1) Do not touch the terminals with any conductive material.**
 - (2) Avoid storing battery cartridge in a container with other metal objects such as nails, coins, etc.**
 - (3) Do not expose battery cartridge to water or rain.**
- 6. Do not store the tool and Battery Cartridge in locations where the temperature may reach or exceed 50°C (122°F).**
- 7. Do not incinerate the Battery Cartridge even if it is severely damaged or is completely worn out. The battery cartridge can explode in a fire.**


ADDITIONAL SAFETY RULES

1. Wear a hard hat (safety helmet), safety glasses and/or face shield. It is also highly recommended that you wear a dust mask, ear protectors and thickly padded gloves.
2. Be sure the bit is secured in place before operation.
3. Under normal operation, the tool is designed to produce vibration. The screws can come loose easily, causing a breakdown or accident. Check tightness of screws carefully before operation.
4. In cold weather or when the tool has not been used for a long time, let the tool warm up for several minutes by operating it under no load. This will loosen up the lubrication. Without proper warm-up, hammering operation is difficult.
5. Always be sure you have a firm footing.
Be sure no one is below when using the tool in high locations.
6. Hold the tool firmly with both hands.
7. Keep hands away from moving parts.
8. Do not leave the tool running. Operate the tool only when hand-held.
9. Do not point the tool at any one in the area when operating. The bit could fly out and injure someone seriously.
10. When drilling or chipping into walls, floors or wherever "live" electrical wires may be encountered, **DO NOT TOUCH ANY METAL PARTS OF THE TOOL!** Hold the tool by the insulated grasping surfaces to prevent electric shock if you drill or chip into a "live" wire.
11. Do not touch the bit or parts close to the bit immediately after operation; they may be extremely hot and could burn your skin.

SAVE THESE INSTRUCTIONS.


Installing or removing the battery cartridge

- Always switch off the tool before insertion or removal of the battery cartridge.
- To remove the battery cartridge, pull out the set plate on the tool and grasp both sides of the cartridge while withdrawing it from the tool.
- To insert the battery cartridge, align the tongue on the battery cartridge with the groove in the housing and slip it into place. Snap the set plate back into place. Be sure to close the set plate fully before using the tool to prevent the battery cartridge from accidentally falling out of the tool.
- Do not use force when inserting the battery cartridge. If the cartridge does not slide in easily, it is not being inserted correctly.

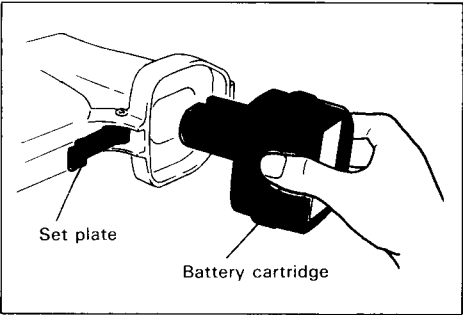

Charging

- Your new battery cartridge is not charged. You will need to charge it before use. Use the fast charger Model DC1201 to charge the battery cartridge.
- Plug the fast charger into the proper A/C voltage source. The charging light will flash in green color.
- Insert the battery cartridge so that the plus and minus terminals on the battery cartridge are on the same sides as their respective markings on the fast charger. Insert the cartridge fully into the port so that it rests on the charger port floor.
- When the battery cartridge is inserted, the charging light color will change from green to red and charging will begin. The charging light will remain lit steadily during charging.
- When charging is completed, the charging light color will change from red to green and a tone will sound steadily for about 5 seconds.
- After charging, unplug the charger from the power source. Refer to the table below for the charging time.

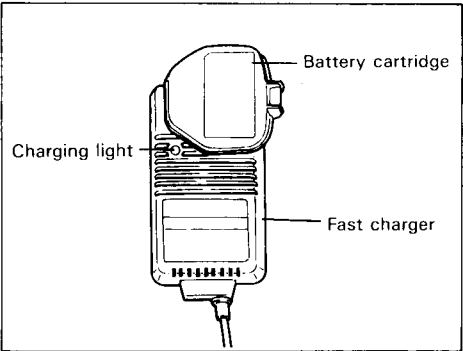


Fast charger	
Battery cartridge	DC1201
1200	Approx. 45 min.
1201 or 1201A	Approx. 60 min.

CAUTION:

- The fast charger Model DC1201 is specifically designed to charge only Makita battery cartridges. Never use it for other purposes or for other manufacturer's batteries.
- When you charge a new battery cartridge or a battery cartridge which has not been used for a long period of time, it may not accept a full charge. This is a normal condition and does not indicate a problem. You can recharge the battery cartridge fully after discharging it completely and recharging a couple of times.
- If you charge a battery cartridge from a just-operated tool or a battery cartridge which has been left in a location exposed to direct sunlight or heat for a long time, the charging light may flash in red color. If this occurs, wait for a while. Charging will begin after the battery cartridge cools.
- If the charging light flashes alternately in green and red color and a tone sound "beep, beep, beep,..." for about 20 seconds, a problem exists and charging is not possible. The terminals on the charger or battery cartridge are clogged with dust or the battery cartridge is worn out or damaged.
- If you wish to charge two battery cartridges, allow 15 minutes between chargings on the fast charger.

Side grip (auxiliary handle)

The side grip swings around to either side, allowing easy handling of the tool in any position. Loosen the side grip by turning it counterclockwise, swing it to the desired position and then tighten it by turning clockwise.

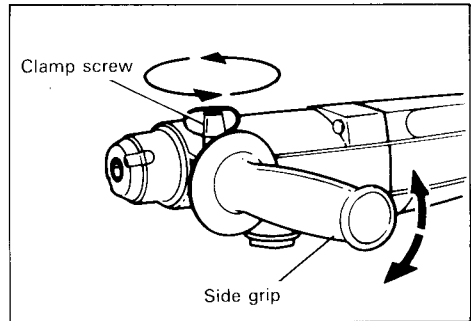




Installing or removing the drill bit


CAUTION:

Always be sure that the tool is switched off and unplugged before installing or removing the bit.

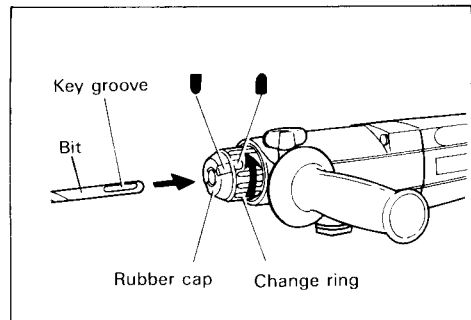To install the bit, turn the change ring in the direction of the arrow until the ■ mark on the change ring is aligned with the ■ mark on the rubber cap. Align the key groove on the bit shank with the ■ mark on the rubber cap and insert the bit.




Turn the change ring in the direction of the arrow until the  mark on the change ring is aligned with  mark on the rubber cap to secure the bit.

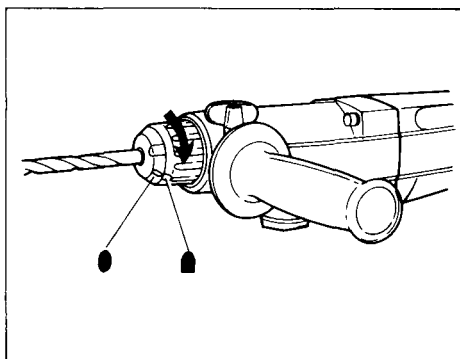

Depth gauge

The depth gauge is convenient for drilling holes of uniform depth. Insert the depth gauge into the hole in the grip base. Adjust the depth gauge to the desired depth and then tighten the clamp screw to secure the depth gauge.

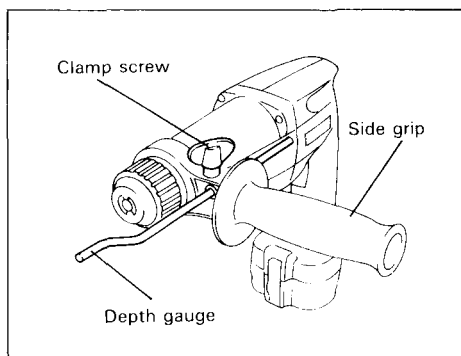


NOTE:

The depth gauge cannot be used at the position where the depth gauge strikes against the gear housing.

Switch action

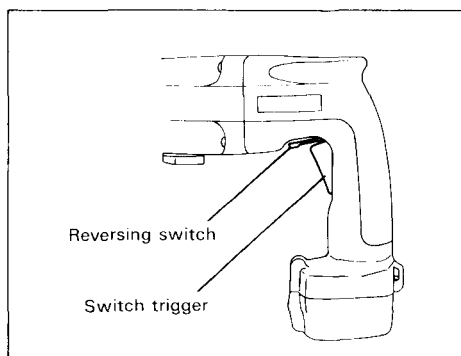

To start the tool, simply pull the trigger. Tool speed is increased by increasing pressure on the trigger. Release the trigger to stop.




CAUTION:

Before plugging in the tool, always check to see that the switch trigger actuates properly and returns to the "OFF" position when released.

Reversing switch action




This tool has a reversing switch to change the direction of rotation. Move the lever to the  position for clockwise rotation or the  position for counterclockwise rotation.

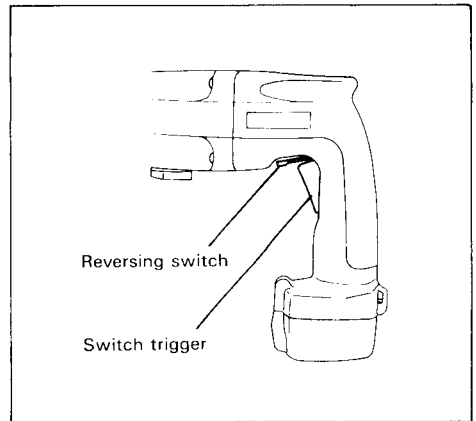


CAUTION:

- Always check the direction of rotation before operation.
- Use the reversing switch only after the tool comes to a complete stop. Changing the direction of rotation before the tool stops may damage the tool.
- Do not pull the switch trigger when the reversing switch lever is in the neutral position. If you pull the trigger forcibly, the switch may be damaged.

Selecting the action mode

This tool employs an action mode changing knob. Select one of three modes suitable for your work needs by using this knob. For rotation only, turn the knob so that the arrow on the knob points toward the  mark on the tool body. For hammering only, turn the knob so that the arrow on the knob points toward the  mark on the tool body. For rotation with hammering, turn the knob so that the arrow on the knob points toward the  mark on the tool body.

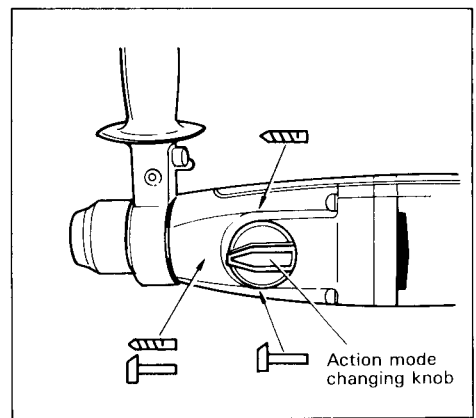

CAUTION:

- The action mode changing knob may not be turned to your desired mode mark when the tool is not running. In this case, pull the switch trigger half-way and turn the knob while the tool is running under no load at low speed.
- Always set the knob fully to your desired mode mark. If you operate the tool with the knob positioned half-way between the mode marks, the tool may be damaged.

Torque limiter

The torque limiter will actuate when a certain torque level is reached. The motor will disengage from the output shaft. When this happens, the bit will stop turning.

CAUTION:

- As soon as the torque limiter actuates, switch off the tool immediately. This will help prevent premature wear of the tool.
- Hole saws, core bits, diamond core bits, etc. cannot be used with this tool. They tend to pinch or catch easily in the hole. This will cause the torque limiter to actuate too frequently.

Hammer drilling operation

Position the bit at the desired location for the hole, then pull the trigger. Do not force the tool. Light pressure gives best results. Keep the tool in position and prevent it from slipping away from the hole. Do not apply more pressure when the hole becomes clogged with chips or particles. Instead, run the tool at an idle, then remove the bit partially from the hole. By repeating this several times, the hole will be cleaned out and normal drilling may be resumed.

CAUTION:

There is a tremendous and sudden twisting force exerted on the tool/bit at the time of hole breakthrough, when the hole becomes clogged with chips and particles, or when striking reinforcing rods embedded in the concrete. Always use the side grip (auxiliary handle) and firmly hold the tool by both side grip and switch handle during operations. Failure to do so may result in the loss of control of the tool and potentially severe injury.


Bit grease

Coat the bit shank head beforehand with a small amount (about 0.5 - 1 g; 0.02 - 0.04 oz.) of bit grease. This chuck lubrication assures smooth action and longer service life.

Using the cold chisel or bull point

When using optional cold chisel or bull point, proceed as follows.

1. Unplug the tool.
2. Remove the side grip from the tool.
3. Set the action mode changing knob to "rotation with hammering".
4. Install the chisel on the tool. Refer to "installing or removing the drill bit" described on the previous page.
5. Install the chisel adapter (optional accessory) on the tool so that the chisel is inserted through the chisel adapter.

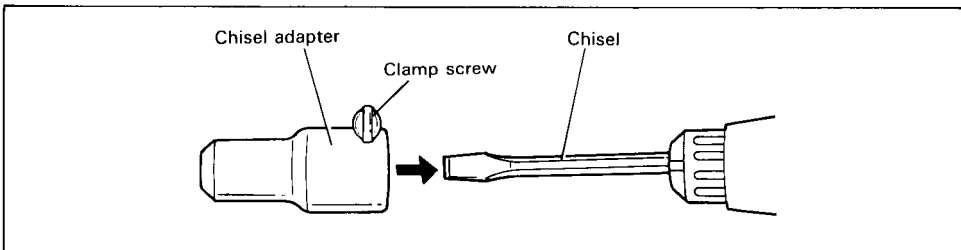


6. Rotate the chisel so that the chisel faces toward the direction suitable for your work.
Then secure the chisel and chisel adapter to the tool using the clamp screw on the chisel adapter.
7. Set the action mode changing knob to "hammering only". Now you can use the chisel.
8. To remove the chisel, follow the installation procedures in reverse.

CAUTION:

Always use "hammering only" action when the chisel adapter is installed on the tool. If you use "rotation with hammering" or "rotation only", a malfunction and damage to the tool will result.


Blow-out bulb

Use the blow-out bulb to clean out the hole.

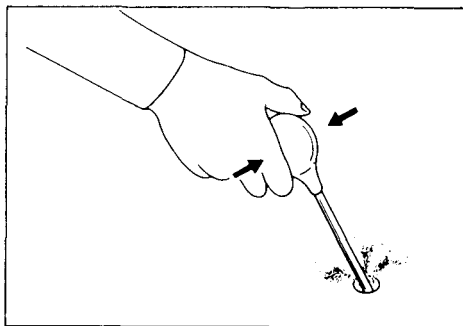


Dust cup

Use the dust cup to prevent dust from falling over the tool and on yourself when performing overhead drilling operations. Attach the dust cup to the bit as shown in the figure. The dust cup can be attached to the bit up to 14.5 mm (9/16") in diameter.

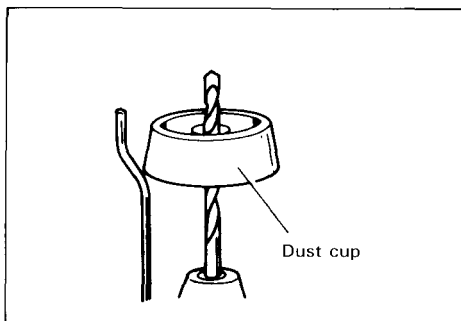

Drilling in wood or metal

Use the optional drill chuck assembly (consisting of drill chuck and chuck adapter assembly). When installing it, refer to "installing or removing drill bit" described on the previous page. Set the action mode changing knob to "rotation only". You can drill up to 13 mm (1/2") diameter in metal and up to 18 mm (11/16") diameter in wood.

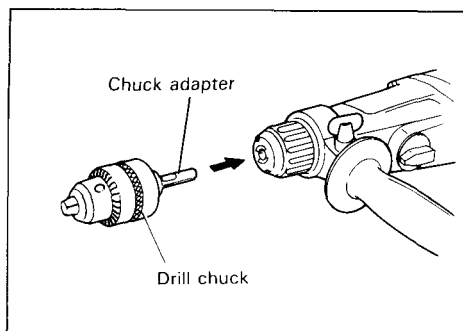


CAUTION:

Never use “rotation with hammering” when the drill chuck assembly is installed on the tool. The drill chuck assembly may be damaged. Also, the drill chuck will come off when reversing the tool.

NOTE:


If you need assembled the drill chuck and chuck adapter assembly, proceed as follows.

Secure the drill chuck in a vise or similar securing device. Place the chuck key in one of the three holes so that the chuck body will not turn.

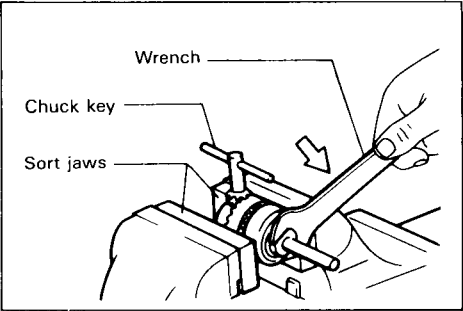

Remove the screw from the chuck adapter assembly and screw the chuck adapter into the drill chuck. Use a wrench to tighten the chuck adapter securely, applying about 300 - 400 kgf . cm (21.6 - 28.9 lb . ft) torque. [Note: you can obtain 300 - 400 kgf . cm (21.6 - 28.9 lb . ft) torque by applying pressure of 30 - 40 kg (66 - 88 lbs) to the wrench while holding the portion 10 cm (4'') from the wrench head.]

Open the chuck jaws fully and insert the screw through the chuck opening. Tighten the screw counterclockwise with a screw-driver.

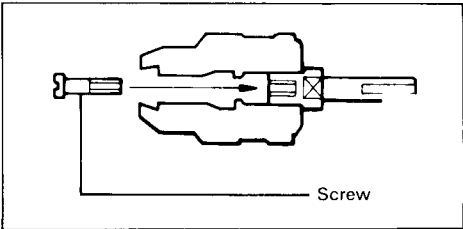

Hammer drilling performance

The following reference table indicates the approximate hammer drilling capacities from a single charge. It may differ under some conditions.

Bit diameter	Hole depth	No. holes
6.5 mm (1/4'')	30 mm (1-1/8'')	About 50
8.5 mm (21/64'')	30 mm (1-1/8'')	About 40
10.5 mm (13/32'')	40 mm (1-5/8'')	About 20
14.5 mm (9/16'')	40 mm (1-5/8'')	About 13

Compressive strength of concrete: 240 kg/cm² (3,400 lbs/inch²)

CAUTION:

If the tool is operated continuously until the battery cartridge has discharged, allow the tool to rest for 15 minutes before proceeding with a fresh battery.

MAINTENANCE

CAUTION:

Always be sure that the tool is switched off and the battery cartridge is removed before attempting to perform inspection or maintenance.

To maintain product SAFETY and RELIABILITY, repairs, maintenance or adjustment should be performed by Makita Authorized or Factory Service Centers, always using Makita replacement parts.

ACCESSORIES

CAUTION:

These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. The accessories or attachments should be used only in the proper and intended manner.

• SDS plus Carbide-tipped bits



Part No.	Diameter	Overall length
711140-A	5/32"	4"
711141-A	5/32"	6"
711142-A	3/16"	4"
711143-A	1/16"	6"
711144-A	3/16"	8"
711145-A	3/16"	12"
711146-A	3/16"	14"
711147-A	1/4"	4"
711148-A	1/4"	6"
711149-A	1/4"	8"
711150-A	1/4"	10"
711151-A	1/4"	14"
711152-A	5/16"	6"
711153-A	5/16"	12"
711155-A	3/8"	6"
711156-A	3/8"	12"
711157-A	3/8"	24"
711158-A	7/16"	6"
711159-A	7/16"	12"
711160-A	7/16"	18"
711161-A	1/2"	6"
711162-A	1/2"	12"
711163-A	1/2"	18"
711164-A	1/2"	24"
711165-A	9/16"	6"
711166-A	9/16"	12"
711167-A	9/16"	18"
711168-A	5/8"	8"
711169-A	5/8"	12"
711170-A	5/8"	18"
711171-A	5/8"	24"
711172-A	1 1/16"	8"
711173-A	3/4"	8"
711174-A	3/4"	12"
711175-A	3/4"	18"
711176-A	7/8"	8"
711177-A	7/8"	12"
711178-A	7/8"	18"

• Cold chisel (For gouging)

Part No. 798379-8




• Bull point (For demolishing)

Part No. 798380-3




• Chisel adapter

Part No. 122460-7

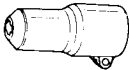

• SDS to A-Taper adapter

Allows use of A-Taper bits with SDS hammers
Part No. 752118-A

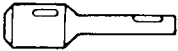

• Cotter (Drift key)

Part No. 765010-1




• Chuck key S13

Part No. 763411-7




• Drill chuck S13

Part No. 763047-2

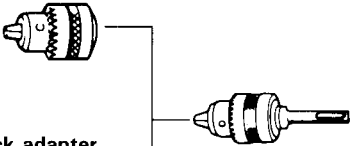


• Chuck adapter

Part No. 122331-8

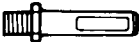

• Blow-out bulb

Part No. 765009-6

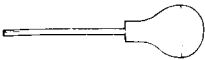


- **Bit grease 100 g; 3.5 oz**

Part No. 181573-3




- **Dust cup**

Part No. 421342-3

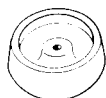


- **Dust extractor attachment**

Part No. 192176-8

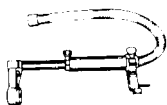

- **Plastic carrying case**

Part No. 824445-6

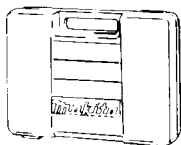

- **Stopper pole**

Part No. 321144-6



- **Safety goggle**

Grey lens: Part No. 191684-A


Clean lens: Part No. 191685-A



- **Fast charger**

Model DC1201

Part No. 113126-0

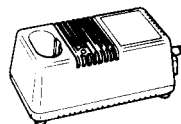


- **Battery cartridge 1200**

Part No. 192271-4

- **High capacity battery 1201**

Part No. 192296-8

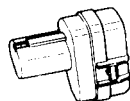

- **Power display battery (High cap.) 1201A**

Part No. 192407-5




- **Battery cover**

Part No. 414938-7




- **Grip**

Part No. 273634-4

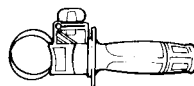

CORDLESS ROTARY HAMMER **Model HR160DH**

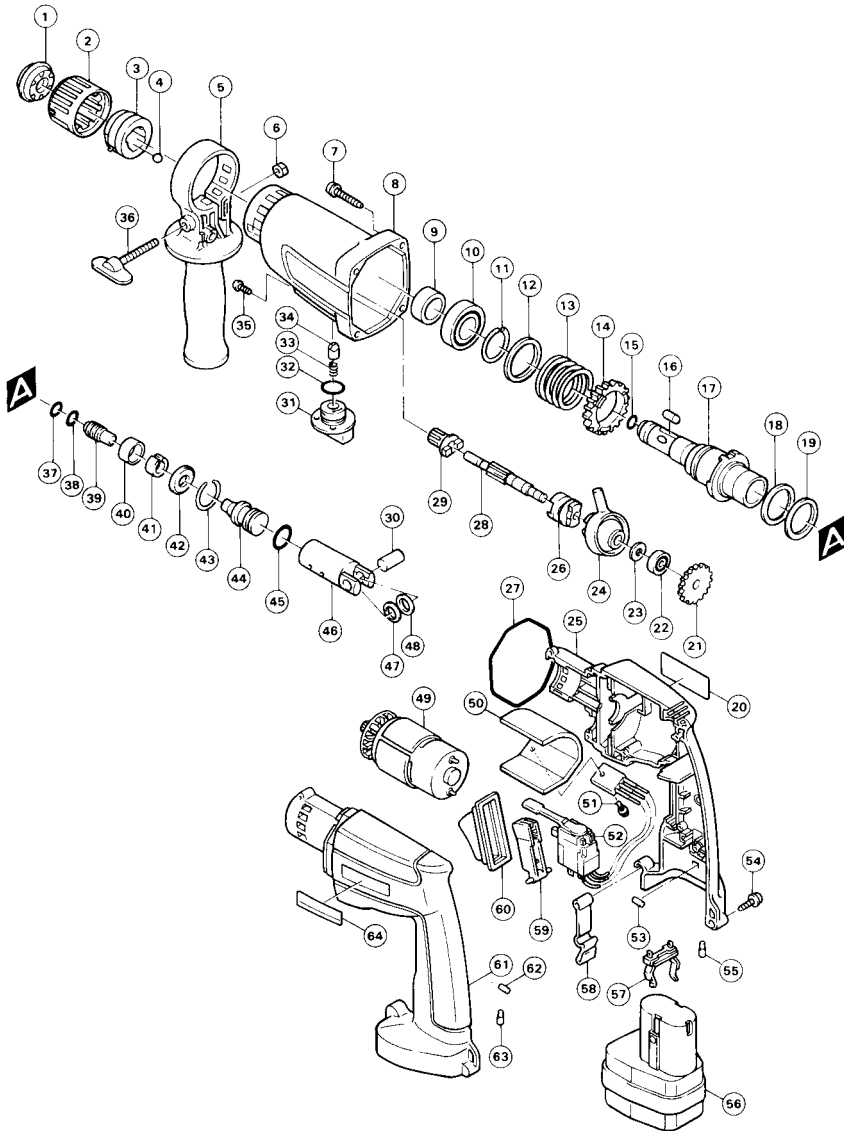


Note: The switch and other part configurations may differ from country to country.

ITEM NO.	NO. USED	DESCRIPTION	ITEM NO.	NO. USED	DESCRIPTION
MACHINE			MACHINE		
1	1	Cap 37	33	1	Compression Spring 6
2	1	Change Ring Cover	34	1	Push Cone
3	1	Change Ring Complete	35	1	Pan Head Screw M4
4	1	Steel Ball 7.1	36	1	Screw 6x40
5	1	Grip 33	37	1	O Ring 10
6	1	Hex. Nut M6	38	1	O Ring 10
7	4	Tapping Screw, Flange, 5x35	39	1	Impact Bolt
8	1	Gear Housing	40	1	Rubber Ring 17
9	1	Ring 20	41	1	Idler
10	1	Ball Bearing 6904LLU	42	1	Flat Washer 13.5
11	1	Ring Spring 28	43	1	Ring Spring 23
12	1	Flat Washer 31	44	1	Striker
13	1	Compression Spring 32	45	1	O Ring 16
14	1	Spur Gear 46	46	1	Piston Cylinder
15	1	O Ring 10	47	1	Flat Washer 12
16	2	Roller 7	48	1	Flat Washer 12
17	1	TOOL HOLDER ASSEMBLY (With Item 11, 15 & 37 43)	49	1	DC Motor 12 V
18	1	Flat Washer 29	50	1	Radiating Plate
19	1	Flat Washer 29	51	1	Pan Head Screw M3x10
20	1	Name Plate	52	1	Switch
21	1	Spur Gear 49	53	1	Rubber Pin 4
22	1	Ball Bearing 6072Z	54	8	Tapping Screw 4x18
23	1	Flat Washer 7	55	1	Rubber Pin 4
24	1	Swash Bearing 9	56	1	High Capacity Battery 1201
25	1	Motor Housing Set (With Item 61)	57	1	Battery Holder
26	1	Clutch	58	1	Set Plate
27	1	O Ring 67	59	1	Switch Lever
28	1	Cam Shaft	60	1	Dust Cover
29	1	Spur Gear 10	61	1	Motor Housing Set (With Item 25)
30	1	Piston Joint	62	1	Rubber Pin 4
31	1	Change Lever	63	1	Rubber Pin 4
32	1	O Ring 17	64	1	Makita Label

Note: The switch and other part specifications may differ from country to country.

Recycling the Battery

The only way to dispose of a Makita battery is to recycle it. The law prohibits any other method of disposal.

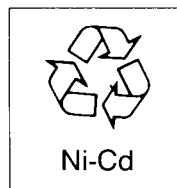

To recycle the battery:

1. Remove the battery from the tool.
 2. a). Take the battery to your nearest Makita Factory Service Center
or
b). Take the battery to your nearest Makita Authorized Service Center or Distributor that has been designated as a Makita battery recycling location.
- *Call your nearest Makita Service Center or Distributor to determine the location that provides Makita battery recycling. See your local Yellow Pages under "Tools-Electric".*

MAKITA LIMITED ONE YEAR WARRANTY

Warranty Policy

Every Makita tool is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from the date of original purchase. Should any trouble develop during this one-year period, return the COMPLETE tool, freight prepaid, to one of Makita's Factory or Authorized Service Centers. If inspection shows the trouble is caused by defective workmanship or material, Makita will repair (or at our option, replace) without charge.

This Warranty does not apply where:

- repairs have been made or attempted by others;
- repairs are required because of normal wear and tear;
- The tool has been abused, misused or improperly maintained;
- alterations have been made to the tool.

IN NO EVENT SHALL MAKITA BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM THE SALE OR USE OF THE PRODUCT. THIS DISCLAIMER APPLIES BOTH DURING AND AFTER THE TERM OF THIS WARRANTY.

MAKITA DISCLAIMS LIABILITY FOR ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF "MERCHANTABILITY" AND "FITNESS FOR A SPECIFIC PURPOSE," AFTER THE ONE-YEAR TERM OF THIS WARRANTY.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Makita Corporation

3-11-8, Sumiyoshi-cho,
Anjo, Aichi 446 Japan

883900 — 069

PRINTED IN JAPAN

1994 — 12 — N