


# **KOBE®** KOBE Brand Range Hood

**Model No. CX1830GS-8 (30")**  
**CX1836GS-8 (36")**  
**CX1842GS-8 (42")**

**CX-183 SERIES – 4" HEIGHT STAND ALONE**  
**“GLASS CANOPY WITH LED SCREEN”**

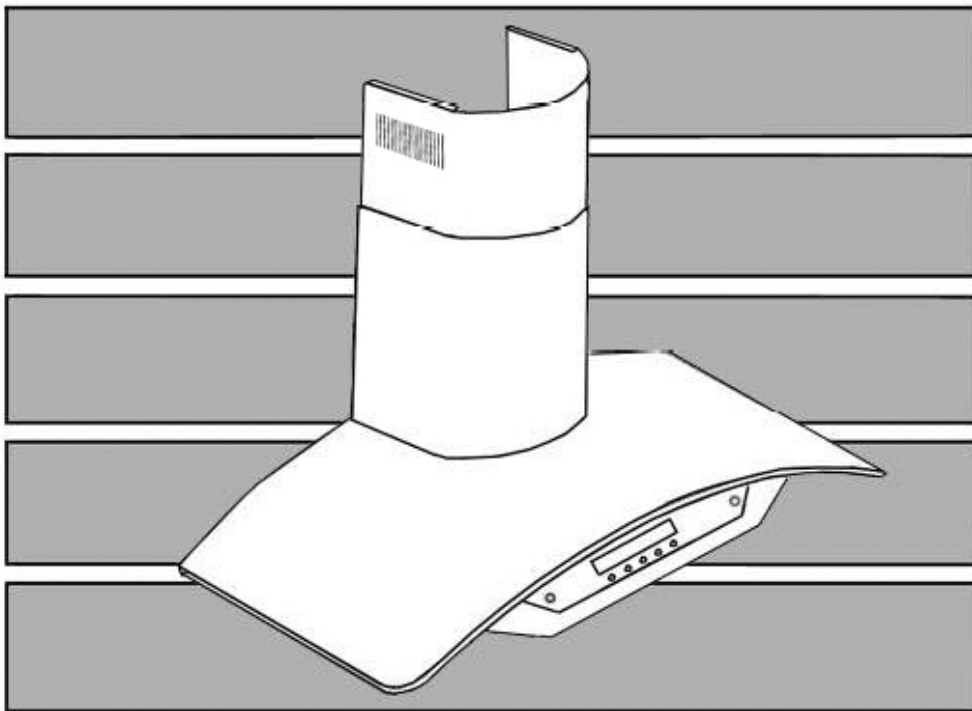

**INSTALLATION INSTRUCTIONS**  
**AND OPERATION MANUAL**

- READ AND SAVE THESE INSTRUCTIONS -

## CONTENTS

IMPORTANT SAFETY INSTRUCTIONS .....	1
COMPONENTS OF PACKAGE .....	3
INSTALLATION .....	5
Preparations before Installation .....	5
Hood Installation .....	6
Wiring to Power Supply .....	8
Recirculating Conversion .....	8
Ductwork Installation .....	9
Duct Cover Installation .....	9
Final Assembly .....	9
OPERATING INSTRUCTION .....	10
MAINTENANCE .....	12
SPECIFICATIONS .....	14
MEASUREMENTS & DIAGRAMS .....	15
PARTS LIST .....	16
CIRCUIT DIAGRAM .....	18
DISCLAIMER .....	19
WARRANTY .....	20
PRODUCT REGISTRATION .....	22

- READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING -

ALL WIRING MUST BE DONE BY A PROFESSIONAL AND IN  
ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.

Ver. 032106



## IMPORTANT SAFETY INSTRUCTIONS

- PLEASE READ THIS SECTION CAREFULLY BEFORE INSTALLATION -

**WARNING** – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY, OBSERVE THE FOLLOWING:

- 1) Installation and electrical wiring must be done by qualified professionals and in accordance with all applicable codes and standards, including fire-rated construction.
- 2) When cutting or drilling into wall or ceiling, be careful not to damage electrical wiring or other hidden utilities.
- 3) Ducted hood must be vented to the outside.
  - a) Before servicing or cleaning unit, SWITCH POWER OFF AT SERVICE PANEL.
  - b) Clean fan, filter, if any, and grease laden surfaces frequently. To reduce the risk of fire and properly disperse air, make sure to vent air outside. DO NOT vent exhaust air into wall spaces, attics, crawl spaces or garages.

**NOTE** - This warranty is invalid without an authorized agent's receipt or if unit is damaged due to misuse, poor installation, improper use, mistreatment, negligence or any other circumstances beyond the control of KOBE RANGE HOODS authorized agents. Any repair carried out without the supervision of KOBE RANGE HOODS authorized agents will automatically void the warranty.

- KOBE RANGE HOODS will not be held responsible for any damages to personal property or real estate or any bodily injuries whether caused directly or indirectly by the range hood.

**WARNING** – TO REDUCE THE RISK OF PERSONAL INJURY IN THE EVENT OF A RANGE TOP GREASE FIRE:

- Keep fan, filter, if any, and grease-laden surfaces clean.
- Always turn hood ON when cooking at high heat.
- Use high settings on cooking range ONLY when necessary. Heat the oil slowly on low to medium setting.
- Do not leave cooking range unattended when cooking.
- Always use cookware and utensils appropriate for the type and amount of food prepared.
- Use this unit only in the manner intended by the manufacturer.
- Before servicing, switch power off at service panel and lock service panel (if possible) to prevent power from switching on accidentally.
- Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.

### What to Do In The Event Of a Range Top Grease Fire

- SMOTHER FLAMES with a close fitting lid, cookie sheet, or metal tray, and then turn off the burner. KEEP FLAMMABLE OR COMBUSTIBLE MATERIAL AWAY FROM FLAMES. If the flames do not go out immediately, EVACUATE THE AREA AND CALL THE FIRE DEPARTMENT or 911.
- NEVER PICK UP A BURNING PAN – You may get burned.
- DO NOT USE WATER, including wet dishcloths or towels – a violent steam blast will result.
- Use an extinguisher ONLY if:
  - a) You have a Class A, B, C extinguisher and know how to operate it.
  - b) The fire is small and contained in the area where it started.
  - c) The fire department has been called.
  - d) You can fight the fire with your back to an exit.

### What to Do If You Smell Gas

- Extinguish any open flame.
- Do not try to turn on the lights or any type of appliance.
- Open all doors and windows to disperse the gas. If you still smell gas, call the Gas Company and Fire Department right away.

### **CAUTION**

- 1) For general ventilation use only. Do not use to exhaust hazardous or explosive materials and vapors.
- 2) To reduce the risk of fire, use only metal ductwork. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting.
- 3) Follow the heating equipment manufacturer's guideline and safety standards such as those
- 4) published by the National Fire Protection Association (NFPA), and the American Society for
- 5) Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and code authorities.
- 6) Two installers are recommended because of the large size and weight of this hood.
- 7) Activating any switch may cause ignition or an explosion.

#### **WARNING**



**ELECTRICAL SHOCK HAZARD** – Can result in serious injury or death. Disconnect appliance from electric power before servicing. If equipped, the fluorescent light bulb contains small amounts of mercury, which must be recycled or disposed of according to Local, State, and Federal Codes.

## COMPONENTS OF PACKAGE


( Must keep all material for returns or refunds )

### Box 1 Of 2


{A} LED Screen And Control Panel

{B} Glass Canopy

{A}

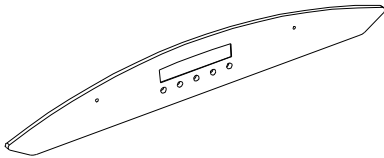

{B}

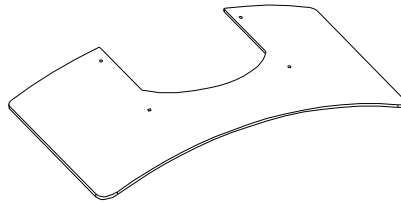

### Box 2 Of 2

{A} KOBE Range Hood with Two-Piece Duct Cover

{B} Duct Cover-Mounting Bracket

{C} Hood-Mounting Bracket

{D} Warranty Registration Card

{E} Instructions Manual

{F} Plastic Damper


{G} Screws Package

{H} Rubber Seal

{I} Glass Canopy Screws Set

{J} Oil Container

{A}

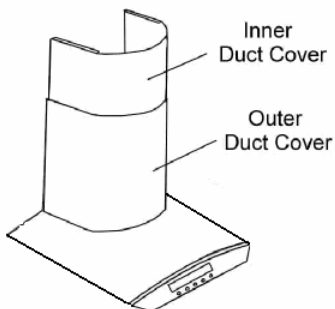

{B}




{C}




{D}




{E}

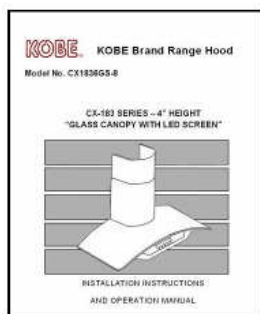


{F}

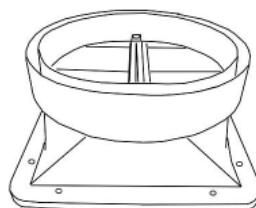


{G}

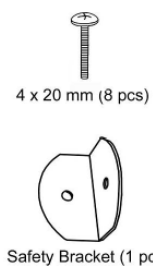



{H}

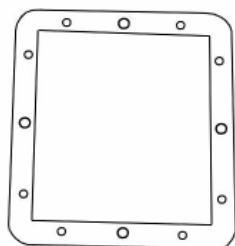

{I}

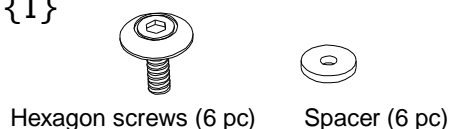

{J}

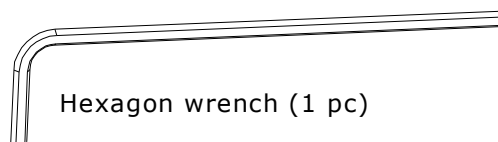

## INSTALLATION


PLEASE READ ENTIRE INSTRUCTIONS BEFORE PROCEEDING

### Calculation before Installation

To calculate installation, please refer to Table 1. (All calculation in inches.)

**TABLE 1**

A = Height of Floor to Ceiling  
B = Height of Floor to Counter  
Top (Standard: 36")  
**C = Preferred Height of Counter Top to  
Hood Bottom (Recommended 27"  
to 30")**  
D = Height of Hood  
E = Height of the Hood  
Installation  $[A - (B + C)]$   
F = Height of Duct Cover  $[E - D]$

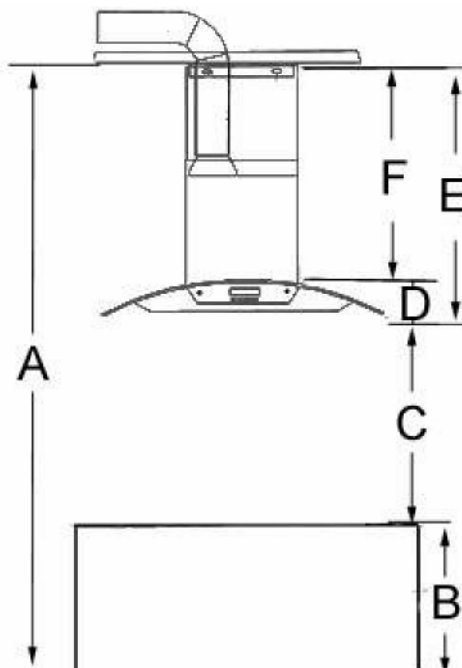

### **SAFETY WARNING**

**HOOD MAY HAVE VERY SHARP EDGES; PLEASE WEAR PROTECTIVE GLOVES IF REMOVING ANY PARTS FOR INSTALLING, CLEANING OR SERVICING.**

### Preparations before Installation

**NOTE: TO AVOID DAMAGE TO YOUR HOOD, PREVENT DEBRIS FROM ENTERING THE VENT OPENING.**

- Decide the location of the venting pipe from the hood to the outside. Refer to Figure 1.
- A straight, short venting run will allow the hood to perform more efficiently.
- Try to avoid as many transitions, elbows, and long run as possible. This may reduce the performance of the hood.
- Use duct tape to seal the joints between pipe sections.
- If necessary, prepare back wall frame with cross framing lumber for secure installation. Using references in Table 1 and measurements on page 15, decide the level of the lumber. Refer to Figure 2.
- Important: peel protective film off the duct cover and the hood (if any).

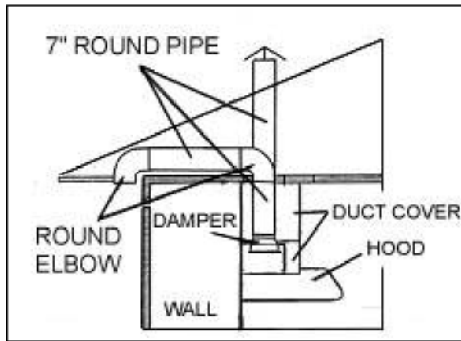


Figure 1

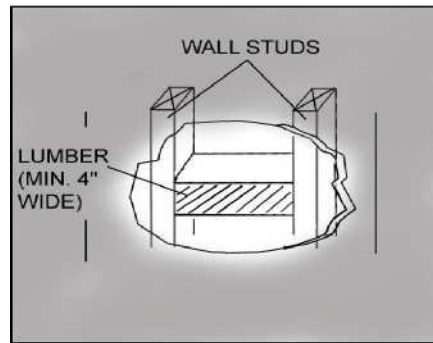


Figure 2

## Hood Installation

**CAUTION:** If required to move the cooking range to install the hood, turn off the power in an electric range at the main electrical box. **SHUT OFF THE GAS BEFORE MOVING A GAS RANGE.**

1. Peel protective film off duct cover and hood, if any. Pull out duct cover (inner and outer) from range hood. Shown in Figure 3



Figure 3

2. Align glass canopy to hood body. Shown in Figure 4. Attach the glass canopy to body with four hexagon screws and four spacers (provided). Tighten with hexagon wrench (provided). Shown in Figure 5



Figure 4



Figure 5

3. Attach the LED screen and control panel with two hexagon screws and two spacers (provided). Tighten with hexagon wrench (provided). Shown in Figure 6



Figure 6



4. Place rubber seal on hood venting area; make sure the openings on rubber seal are aligned with openings in vent area. Shown in Figure 7. Align plastic damper on rubber seal and attach to hood using eight 4x20 mm screws (provided). Refer to Figure 8



Figure 7



Figure 8

5. If necessary, remove the two rubber stands at the back of the hood. For a more secure installation, KOBE recommends not removing the rubber stands.
6. Using references in Table 1 and Measurement & Diagrams on page 15, mark the leveling line for hood-mounting bracket. Secure hood-mounting bracket to wall with screws (not provided). Refer to Figure 9.



Figure 9

7. Align hood to the hood-mounting bracket on the wall and hook hood into place as shown in Figure 10 & 11. CAUTION: MAKE SURE THE HOOD IS SECURE BEFORE RELEASING.



Figure 10



Figure 11

8. For safety purposes, install the safety bracket (provided) with one screw (not provided) to the wall as shown in Figure 12.

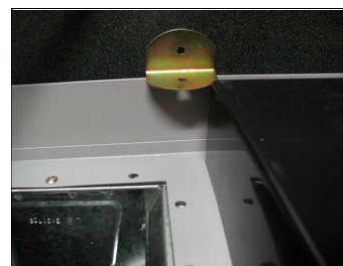


Figure 12

## Wiring to Power Supply

### **⚠ SAFETY WARNING**

RISK OF ELECTRICAL SHOCK. THIS RANGE HOOD MUST BE PROPERLY GROUNDED. MAKE SURE THIS IS DONE BY SPECIALIZED ELECTRICIAN IN ACCORDANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL CODES. BEFORE CONNECTING WIRES, SWITCH POWER OFF AT SERVICE PANEL AND LOCK SERVICE PANEL TO PREVENT POWER FROM BEING SWITCHED ON ACCIDENTALLY.

9. Connect three wires (black, white and green) to house wires.
10. Connect according to color: black to black, white to white, and green to green and cap with wire connectors.
11. Test the operation of the hood before moving on to the next step. Make sure power is supplied to the hood.
12. If venting outside, skip to Step 19, Ductwork Installation.

### Recirculating Conversion

Requires Purchase of Recirculating Kit Model No. RD-0183.

13. For the recirculating installation, replace the duct cover-mounting bracket with the T-Box. Using references in Table 1 and Measurement & Diagrams on page 15 to mark the leveling line for the T-Box. Secure the T-Box with 3 screws (not provided) to the wall. Use duct tape to seal joints from plastic damper to T-Box. (Recirculating Duct Cover will hook onto T-Box.) Refer to Figure 13.



Figure 13

14. Measure the distance from the top of the plastic damper to the ceiling and prepare a 7" round metal duct pipe with 4" shorter than measured distance.
15. Use the prepared 7" round metal duct pipe to connect the T-Box to the plastic damper. Use duct tape to make all joints secure and air tight. Make sure pipe is in the groove of the plastic damper. Refer to Figure 14
16. Remove stainless steel filters and install the carbon filters. (Refer to Figure 20)
17. Re-attach the stainless steel filters.
18. Skip to Step 21, Duct Cover Installation

### Ductwork Installation

19. Use 7" round aluminum or steel pipe to connect the plastic damper on the hood to the ductwork above.
20. Use duct tape to make all joints secure and air tight. Make sure pipe is in the groove of the plastic damper. Refer to Figure 14

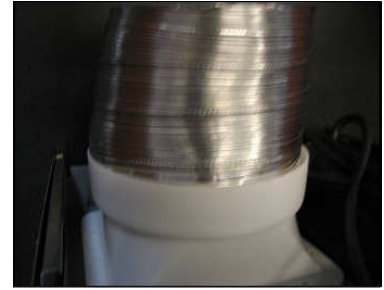


Figure 14

### Duct Cover Installation

21. (SKIP STEP 22 and 23 IF USING THE RECIRCULATING CONVERSION KIT. YOU WILL NOT NEED THE DUCT COVER-MOUNTING BRACKET.) Using references in Table 1 and measurements on page 17, mark the leveling point for duct cover-mounting bracket.
22. Secure the duct cover-mounting bracket to the wall with two screws (not provided). Refer to Figure 15. Make sure all screws are tightened.
23. Hook the inner duct cover onto the duct cover-mounting bracket and release the outer duct cover to fit onto the hood as shown in Figure 15 and 16.



Figure 15



Figure 16

### Final Assembly

24. Rotate the oil container clockwise to install it. Shown in Figure 17.
25. Turn power ON in control panel. Check all lights and fan operation.
26. Make sure to leave this manual for the homeowner.



Figure 17

## OPERATING INSTRUCTION

This KOBE hood is equipped with five electronic controls with LED screen, one powerful centrifugal squirrel cage with stainless steel filter, two bright 12-volt 20-watt halogen lights, and one oil container.

The five control buttons are Power Control (On/Off), Auto Control, Speed Control (Low & High Speed), Light Control and Timer Control. Refer to Figure 18.


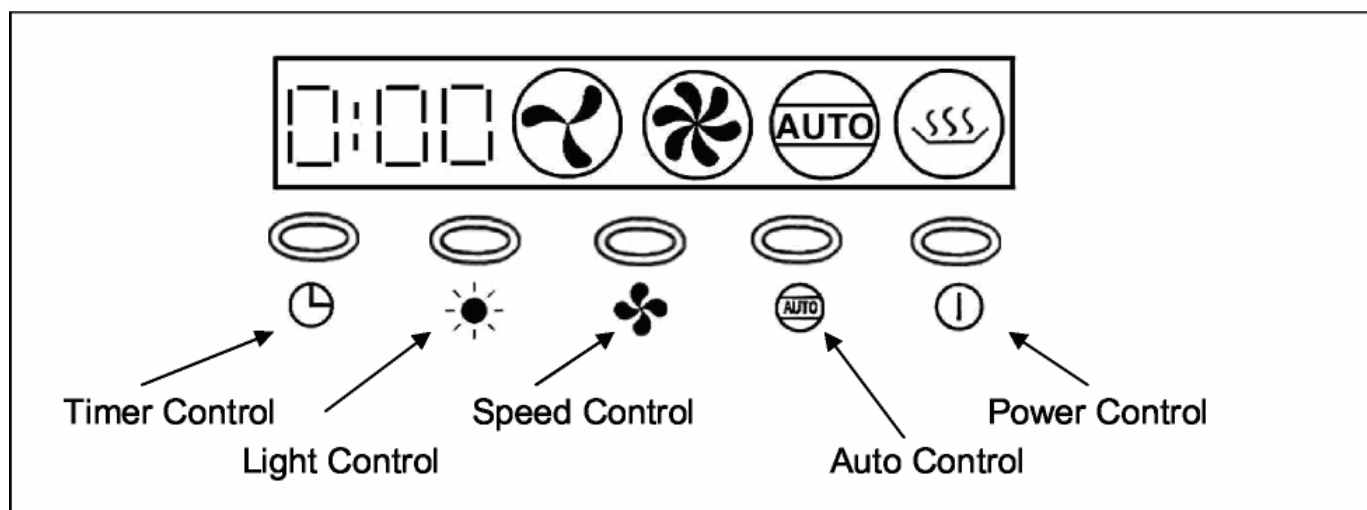


Figure 18

### Power Control

Press Power Control to turn On/Off the hood.


Output Display:

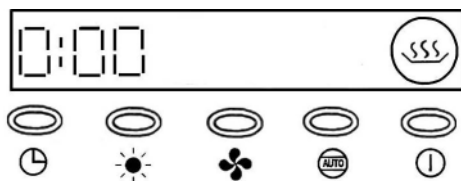

### Auto Control

Press Auto Control to set the hood on auto sensor. When smoke, gas, or fluctuating temperature\* is detected, hood automatically turns on at prior speed setting. (\*Temperature: Higher than normal room temperature.)


Output Display:

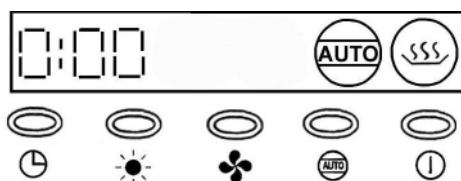

### Speed Control


Press once for High speed to start.

Output Display:

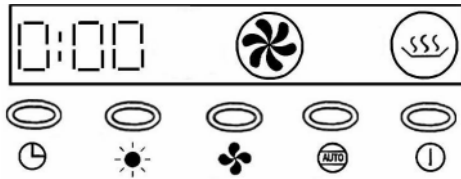

Press twice for Low speed to start.

Output Display:

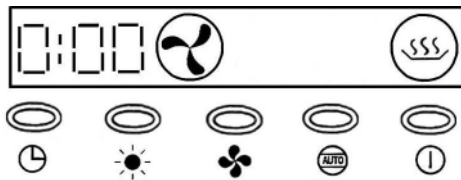

### Light Control

Press Light Control to turn on the two halogen lights.

### Timer Control

Press Timer Control to start timer. When Timer Control is pressed, fan will automatically shut off after set time. Timer range from 1 min. to 99 mins.

To clear the timer, press Power Control OFF; and then press Power Control ON again.

## **MAINTENANCE**

**CAUTION: NEVER PUT YOUR HAND INTO THE AREA HOUSING THE FAN WHILE THE FAN IS OPERATING.**

For optimal operation, clean range hood surface, stainless steel filter, and oil container regularly.

### **To Clean Hood Surface**

**CAUTION: NEVER USE ABRASIVE CLEANERS, PADS, OR CLOTHS.**

- Regular care will help preserve its appearance.

- 1) Use only mild soap or detergent solutions. Dry surfaces using soft cloth.
- 2) If hood looks splotchy (stainless steel hood), use an orange base cleaner to clean the surface of the hood. Avoid getting cleaner on the control switches. Spread a light coating over the surface of the hood and leave on for a few minutes (do not leave on too long or this may cause damage to hood finish). Use soft towel to wipe off the cleaning solution, gently rub away stubborn spots. Use a slightly damp towel to get rid of any cleaning solution. Use dry soft towel to dry the hood.
- 3) To bring glow back into a stainless steel finish, use a stainless steel cleaner.
- 4) DO NOT allow deposits to remain for long periods of time.
- 5) DO NOT use ordinary steel wool or steel brushes. Small bits of steel may adhere to the surface causing rust.
- 6) DO NOT allow salt solutions, disinfectants, bleaches, or cleaning compounds to remain in contact with stainless steel for extended periods. Many of these compounds contain chemicals, which may be harmful. Rinse with water after exposure and wipe dry with a clean cloth.

### **To Clean Stainless Steel Filter / Oil Container**

**CAUTION: DRAIN OIL CONTAINER BEFORE OIL CAN OVERFLOW.**

- 1) The oil container attached underneath stainless steel filter can be removed by turning counter-clockwise.
- 2) To clean the stainless steel filter, remove the screws (leave in a safe place), and slide stainless steel filter out.
- 3) Both oil container and stainless steel filter should be washed with warm soapy water and dry thoroughly before returning in place. Both are top rack dishwasher safe.

## To Clean Carbon Filter (Optional Recirculating Kit)

- 1) Turn oil container counter-clockwise. Shown in Figure 18.
- 2) Use a Philips screwdriver to take out the screws (2 pcs). Shown in Figure 19.

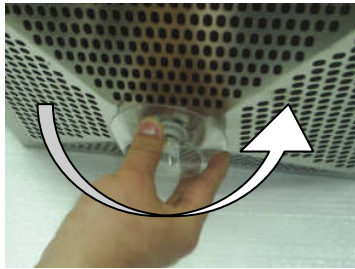


Figure 18

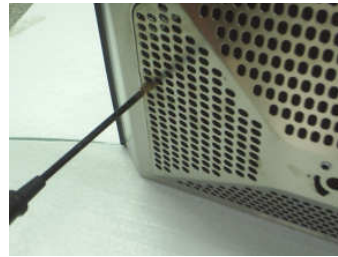


Figure 19

- 3) Remove the carbon filter from the two stainless steel filters. Shown in Figure 20.
- 4) Place carbon filter into warm water with neutral detergent and clean thoroughly. Dry and replace.
- 5) Re-install the carbon filter and the stainless steel filters.



Figure 20

## To Replace Light Bulb

**CAUTION: HALOGEN LIGHT UNIT MAY BE HOT! WAIT UNTIL UNIT IS COOL.**

- 1) Make sure all control switches are off, and range hood is unplugged.
- 2) Use a flat head screwdriver to pop out protective covering as shown in Figure 21.
- 3) Gently pull out the defective light bulb and discard. Light bulbs should be 12V 20W maximum. Refer to Figure 22. Push bulb securely into light socket.
- 4) Replace protective cover.
- 5) Plug in range hood.

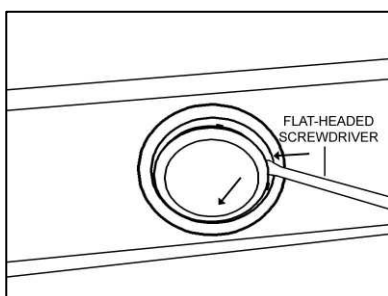


Figure 21

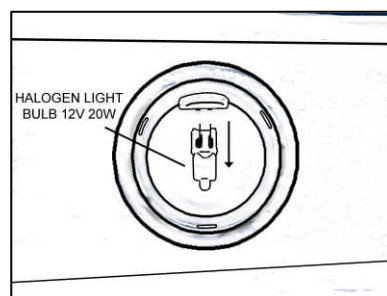


Figure 22

## SPECIFICATIONS

<b>MODEL / SIZE</b>	CX1830GS-8 / 30" CX1836GS-8 / 36" CX1842GS-8 / 42"		
<b>COLOR</b>	# 304 Commercial Grade Stainless Steel		
<b>CONSUMPTION</b>	189.4W / 1.57A (Wattage / Ampere)		
<b>VOLTAGE</b>	120V 60Hz		
<b>NUMBER OF MOTOR</b>	1		
<b>DESIGN</b>	18-Gauge		
<b>FAN TYPE</b>	Centrifugal Squirrel Cage		
<b>EXHAUST</b>	7" Round w/Damper		
<b>CONTROLS</b>	Electronic Touch Button (5 buttons) - Power Control, Auto Control, Speed Control (Low & High Speed), Light Control, & Timer Control		
<b>HALOGEN LIGHTS</b>	12V 20W x 2		
<b>HOOD DIMENSION (W x D x H)</b>	(Model No.: CX1830GS-8) 29-1/2" x 19-3/4" x 3" (Model No.: CX1836GS-8) 35-1/2" x 19-3/4" x 4-1/2" (Model No.: CX1842GS-8) 41-7/8" x 19-3/4" x 6-1/2"		
<b>DUCT COVER / BLOWER DIMENSION (W x D x H)</b>	(Model No.: CX183-8S) 14-7/8" x 13" x (15-3/4" ~ 37")		
<b>OPTIONAL ACCESSORIES (W x D x H)</b>	1) 21" Inner Duct Cover Extension (Model No.: CX183-21DC) 14-1/8" x 13" x 15-3/4" x 37" 2) 30" Stainless Steel Back Panel (Model No.: SSP30) 30" x 1/10" x 32" 3) 36" Stainless Steel Back Panel (Model No.: SSP36) 36" x 1/10" x 32" 4) Recirculating Kit (Model No.: RD-0183)		
<b>Weight (lbs)</b>		<b><u>NET</u></b>	<b><u>GROSS</u></b>
	CX1830GS-8	9	14
	CX1836GS-8	14	18
	CX1842GS-8	16	22
	CX183-8S	35	46
<b>SPEED</b>	<b>LOW</b>	<b>HIGH</b>	
<b>AIR CAPACITY (CFM)*</b>	400	600	
<b>SONE</b>	1.3	2.8	

\* In House Test Static Pressure "0".


\*\* Specifications subject to change without notice.




## MEASUREMENTS & DIAGRAMS

\*\*\*Inch figures converted from millimeters measurements. Inch measurements estimated.



\*\*\*Millimeter measurements in ( ).

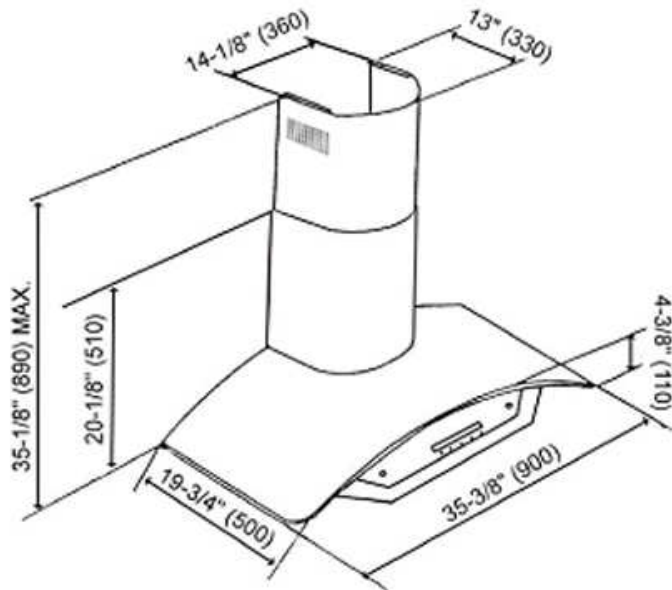

\*\*\*VIEWING DOWN FROM THE TOP

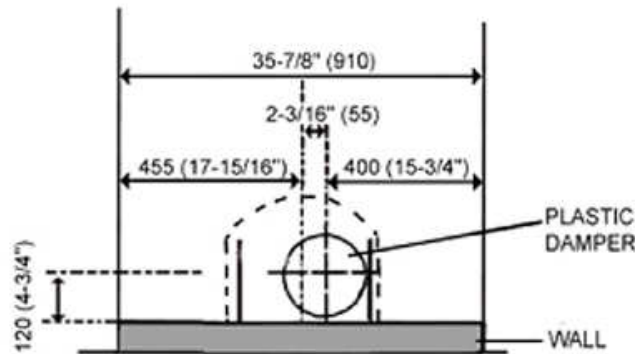

\*\*\*VIEW FROM THE SIDE

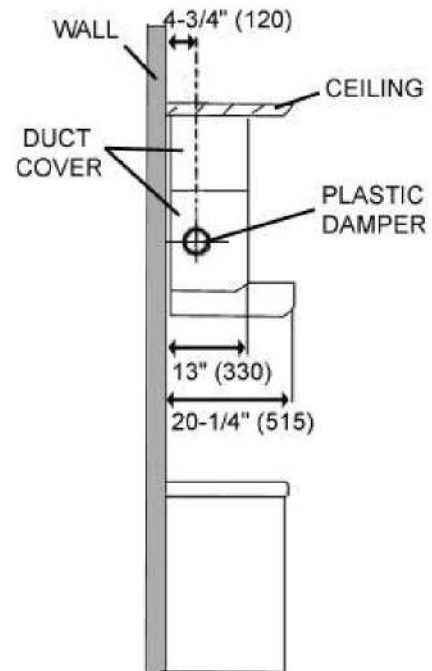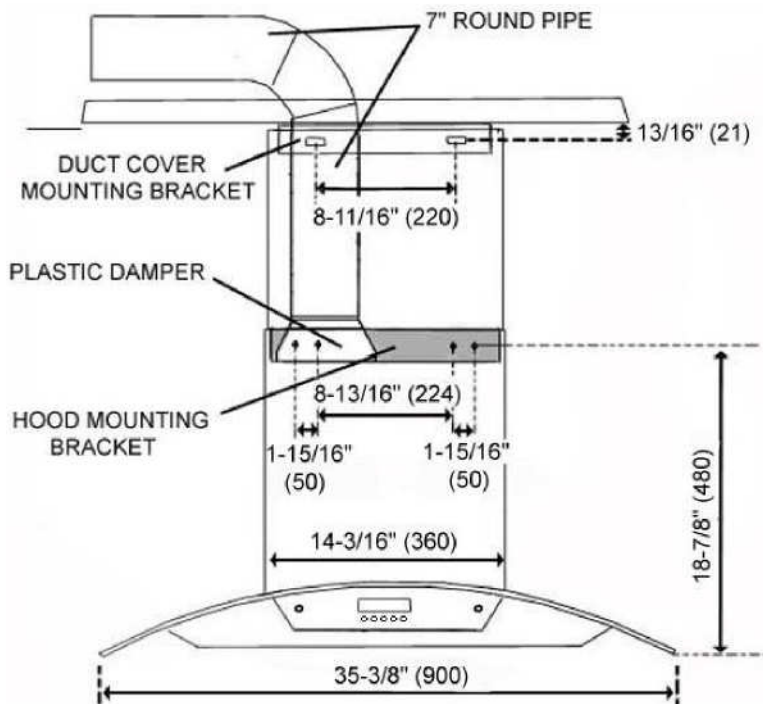

## PARTS LIST


**MODEL NO.: CX1830GS-8  
CX1836GS-8  
CX1842GS-8**

NO.	DESCRIPTION	MODEL /SIZE	PART NO.
1	Oil Container (Round)		1-HAN-M001
2	Stainless Steel Filter Screw		FT-S-1
3	Stainless Steel Filter		1-FBL-A009
4	Stainless Steel Mesh Filter		1-HGF-A100
5	Halogen Light Support		1-FAV-J703
6	Halogen Light (12V 20W Max.)		1-FAV-ZJ01
7	Bottom Casing		1-FAZ-A001
8	Control Board , Control Button		1-HDC-G100, 1-FAZ-J100
9	Control Box Screw		FT-S-2
10	Hood Casing		1-FAZ-A100
11	Hood-Mounting Bracket		1-FAZ-M002
12	Plastic Damper		1-FAV-M011
13	Transformer		1-HAN-J101
14	Electrical Wire Box		1-FAV-G001
15	Processor Board		1-FAX-G100
16	Capacitor		1-HAN-G001
17	Rubber Seal		1-FAV-M005
18	Air Chamber		1-FAV-F160
19	Motor		1-HAN-F110
20	Blower		1-FAV-F170
21	Locknut		1-FAA-F205
22	Blower Cover		1-FAV-F120
23	Duct Cover-Mounting Bracket		1-FAV-M020
24	Inner Duct Cover		1-HJS-M001
25	Air Chamber Cover		1-FAV-A006
26	Outer Duct Cover		1-HJS-A100
27	Glass Canopy Screw		FT-S-4
28	Glass Canopy	30"	CX183-30G
		36"	CX183-36G
		42"	CX183-42G
29	LED Screen		1-FAZ-A002
30	Control Panel Screw		FT-S-3


### RECIRCULATING KIT (Optional) Model No.: RD-0183

NO.	DESCRIPTION	MODEL/SIZE	PART NO.
31	T-Box		1-HGF-M100
32	Carbon Filter Frame		1-HGF-A100
33	Carbon Filter		1-HJT-F101

**MODEL NO.: CX1830GS-8  
CX1836GS-8  
CX1842GS-8**

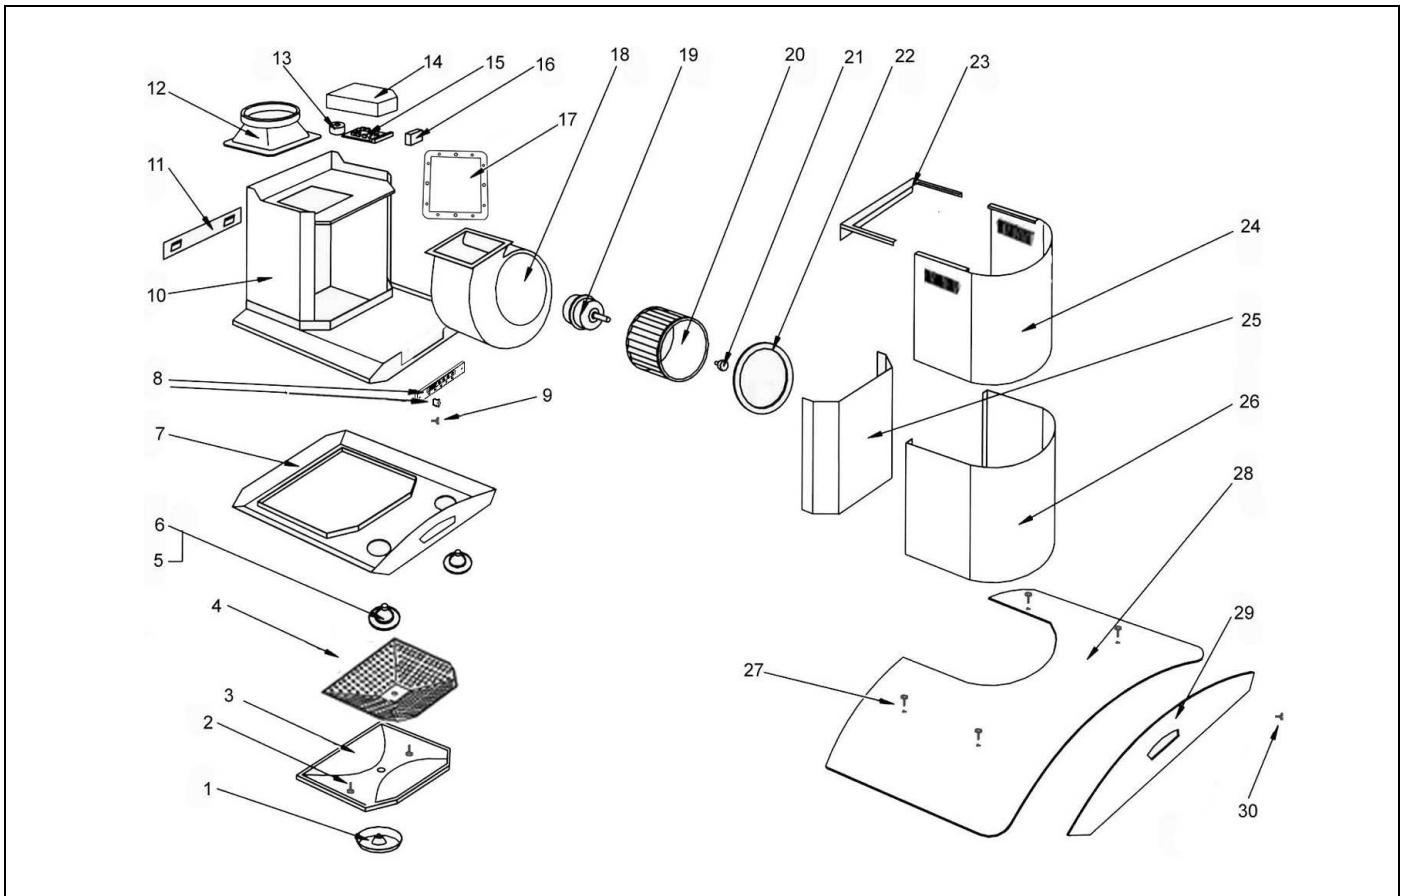


**RECIRCULATING KIT (OPTIONAL)**  
**Model No.: RD-0183**

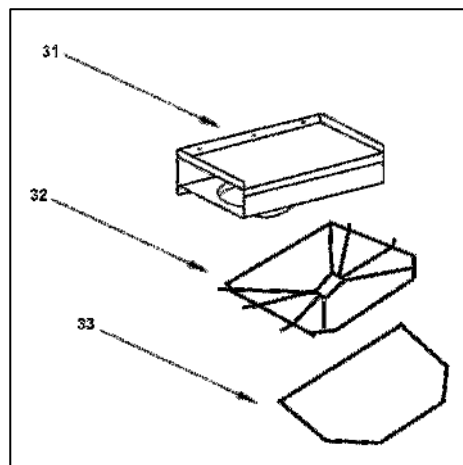

## CIRCUIT DIAGRAM

MODEL NO.: CX1830GS-8  
CX1836GS-8  
CX1842GS-8

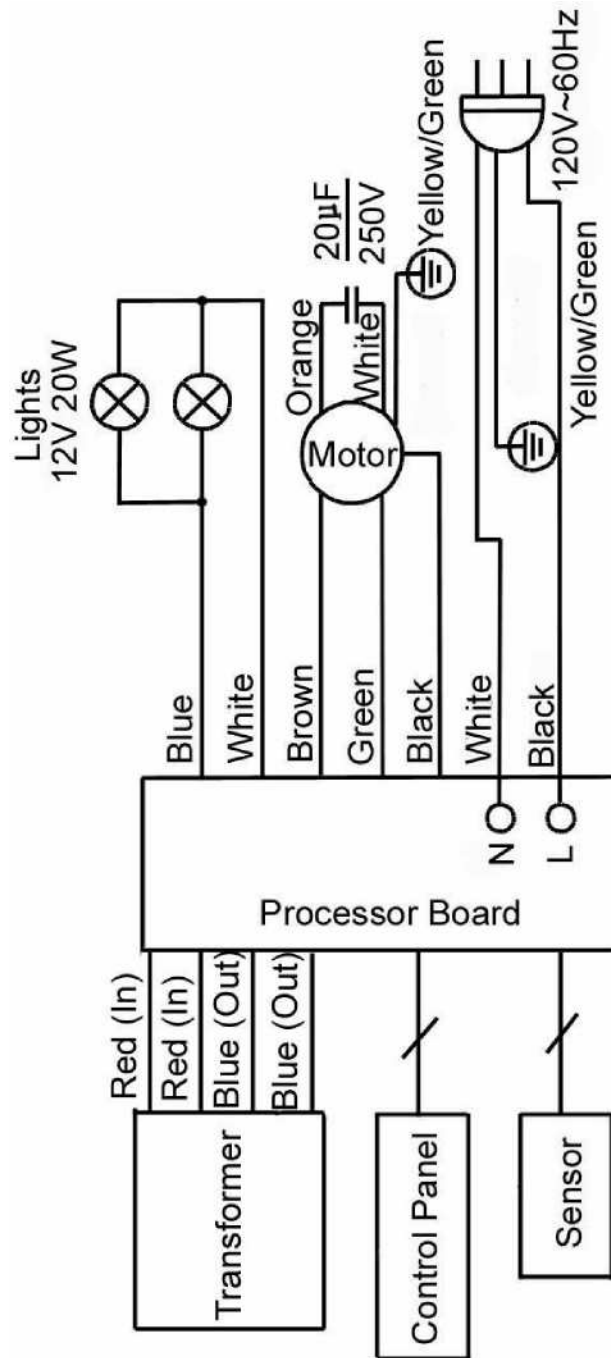

## DISCLAIMER

1. **CAREFULLY INSPECT ALL ITEMS FOR DAMAGES BEFORE ACCEPTING DELIVERY. NOTE ANY DAMAGES ON THE FREIGHT BILL OR EXPRESS RECEIPT. REQUEST NAME AND SIGNATURE OF THE CARRIER'S AGENT AND KEEP COPY TO SUPPORT YOUR CLAIM.**

Upon acceptance of items, owner assumes responsibility for its safe arrival. Damages should be reported to carrier and a claim filed. Failure to do this could result in the carrier refusing to honor your claim. The carrier will furnish you with necessary forms for filing a claim.

**DAMAGES CAUSED DURING TRANSIT ARE NOT COVERED UNDER OUR WARRANTY.**

2. **PLEASE INSPECT CONTENTS OF PACKAGE (S) CAREFULLY UPON RECEIVING!** We must be notified in writing of any damages and/or missing parts within the allocated days upon receipt of package(s). Contact your local KOBE dealer or distributor or call KOBE for the time limit.

**CLAIMS WILL NOT BE ACCEPTED AFTER THE ALLOCATED DAYS.**

NOTE: ITEMS WERE THOROUGHLY TESTED AND CAREFULLY PACKED IN OUR FACTORY.

3. Products must be returned in good working condition with ALL original parts and documentation packed in ALL original cartons, fillers and shipping cartons. A restocking fee of 25% will be charged for all approved return(s).

**EXCHANGES OR RETURNS MAY NOT BE ACCEPTED IF ANY PACKAGING IS MISSING.**

4. **MAKE SURE TO INSPECT THE HOOD FOR DAMAGES AND DEFECTS BEFORE INSTALLATION.** Appearance flaws of the hood found after installation and not affecting hood performance is not covered under our warranty for returns or exchanges. Service visits not covered under warranty will carry a service charge.

A) Before Installation: Return for exchange or refund (please see above for acceptable returns).

B) After Installation: **NO** exchange or refund.

## **WARRANTY**

### **WARRANTY CERTIFICATE**

KOBE Range Hoods, Inc. warrants all products manufactured or supplied by it to be free from defects in workmanship and materials. Its obligations pursuant to this warranty are limited to a period of two years from the date of purchase and to the repair or replacement at its option and subject to the terms and conditions stated below, of any component part, which its examination shall disclose to be so defective.

### **TWO-YEAR WARRANTY SERVICE PERIOD**

Any covered failure occurring within two years of original purchase arising from defective workmanship or material in manufacture will be repaired (or at our option the unit will be replaced) free of charge by an authorized KOBE Range Hoods Agent or KOBE Range Hoods as applicable. Keep proof of purchase (or original invoice) handy for inspection.

If the range hood is sold by the original purchaser during the warranty period the new owner is protected until expiration of the original purchaser's warranty.

### **CONDITIONS**

The following conditions apply only in relation to the warranty expressly given in this certificate.

- 1) This warranty applies only:
  - a) within U.S.A. and Canada.
  - b) to range hoods used for PRIVATE SINGLE FAMILY USE (if used for COMMERCIAL or MULTIPLE FAMILY USE or other purposes, warranty will be voided).
- 2) Repair of any fault to be provided under this warranty shall not be provided:
  - a) if the identification number attached to the range hood has been altered, rendered illegible or removed;
  - b) if notice of the defect has not been given within the period applicable;
  - c) for failure of light bulbs;
  - d) for physical damage;
  - e) for surfaces damaged by use of improper chemical cleaning agents;
  - f) if the appliance has been:
    - i) subject to misuse, abuse, negligence, accident, incorrect installation or failure to follow the operating instructions;
    - ii) connected to improper, inadequate or faulty electricity service or exhaust ducts or flues or operated using incorrect or contaminated lubricants;
    - iii) installed, maintained or operated otherwise than in accordance with the instructions furnished by KOBE Range Hoods including the improper use of detergents, bleaches, or cleaners.
  - g) for damage to range hood during transit, delivery, installation or removal;
  - h) for damage by or resulting from attempted repairs conducted by anyone other than our Authorized Service Agent.

- 3) The purchaser shall be responsible for any expenses involved in making the range hood readily accessible for servicing and where the range hood is installed outside the main sales territory of the retailer or service territory of the nearest approved KOBE Range Hoods Agent as applicable, for any traveling expenses and any costs of transporting the range hood or parts thereof to and from the dealer or Service Agent
- 4) The purchaser must produce proof of purchase together with this warranty certificate when making the claim.
- 5) Damages caused during shipment are not covered under our warranty.

### **CONSEQUENTIAL DAMAGE**

The warrantor is not responsible for any consequential damage. SOME STATES DO NOT ALLOW THE EXCLUSION OF CONSEQUENTIAL DAMAGE SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

### **IMPLIED WARRANTIES/STATE LAW**

Any implied warranties, including the implied warranty of merchantability and fitness for purpose, imposed on the sale by the laws of the state of sale are limited to two year from the date of original purchase. Some states do not allow limitations on the duration of implied warranties. This warranty gives you specific legal rights, and may also have rights, which vary from state to state.

### **SERVICE**

For service contact:

KOBE Range Hoods  
10505 Valley Blvd, Suite 302  
El Monte, CA 91731  
U.S.A  
Tel: (626) 350-1355 Fax: (626) 350-1976  
Email: [customerservice@KOBERangeHoods.com](mailto:customerservice@KOBERangeHoods.com)  
Website: [www. KobeRangeHoods.com](http://www.KobeRangeHoods.com)

## PRODUCT REGISTRATION

### Register Your Product!

Any covered failure occurring within two years of original purchase arising from defective workmanship or material in manufacture will be repaired or at our option the unit will be replaced free of charge by an authorized KOBE Range Hoods Agent or KOBE Range Hoods as applicable. Keep proof of purchase (original invoice) handy for inspection.

If the range hood is sold by the original purchaser during the warranty period the new owner is protected until expiration of the original purchaser's warranty. See warranty section for complete warranty coverage information.

This appliance has been manufactured, tested, and inspected to the standards required by KOBE Range Hoods.

### PLEASE MAIL IN YOUR WARRANTY REGISTRATION CARD AND PROOF OF PURCHASE TO:

KOBE Range Hoods  
10505 Valley Blvd, Suite 302  
El Monte, CA 91731

### RECORD THE FOLLOWING INFORMATION FOR YOUR RECORD:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchased Date                \_\_\_\_ / \_\_\_\_ / \_\_\_\_

Purchased From:

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

**IMPORTANT: PLEASE KEEP A COPY OF YOUR SALE RECEIPT OR INVOICE HANDY WHEN REQUESTING SERVICE.**





KOBE Range Hoods  
10505 Valley Blvd Suite # 302  
San Gabriel, CA 91731 USA

<http://www.KOBERangeHoods.com>

KOBE hoods are made for use in the USA and CANADA only. We do not recommend using the hood overseas because the power supply may not be compatible, and it may violate the electrical code of that country, **Using KOBE hood overseas is at your own risk and will void your warranty.**