

HP LaserJet 1160 and 1320 Series Printers - How to Clear a Paper Jam

In this document:

- ✦ [Print cartridge area](#)
 - ✦ [Input trays](#)
 - ✦ [Output bin](#)
 - ✦ [Straight-through output path](#)
 - ✦ [Automatic two-sided printing \(duplexing\) path](#)
-

Occasionally, media becomes jammed during a print job. You are notified of a media jam by an error in the software and the printer control panel lights.

The following are some of the causes of media jams:

- The input trays are loaded improperly or too full. See "Loading media into the input trays" in the electronic User's Guide located on the CD-ROM that shipped with the printer for more information.

When you add new media, always remove all of the media from the input tray and straighten the stack of new media. This helps prevent multiple sheets of media from feeding through the printer at one time, reducing media jams.

- The media does not meet HP specifications. See "Printer media specifications" in the electronic User's Guide located on the CD-ROM that shipped with the printer for more information.
- The printer might need to be cleaned to remove paper dust and other particles from the paper path. See "Cleaning the printer" in the electronic User's Guide located on the CD-ROM that shipped with the printer for instructions.

There might be loose toner in the printer after a media jam. This toner clears up after a few sheets print.

CAUTION: Media jams might result in loose toner on the page. If you get any toner on your clothes, wash them in cold water. *Hot water will permanently set the toner into the fabric.*


Print cartridge area [Top of Page](#)

To clear a jam in the print cartridge area, perform the following steps:

CAUTION: Do not use sharp objects, such as tweezers or needlenose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.

1. Open the print cartridge door, and remove the print cartridge.

Figure 1: Print cartridge door

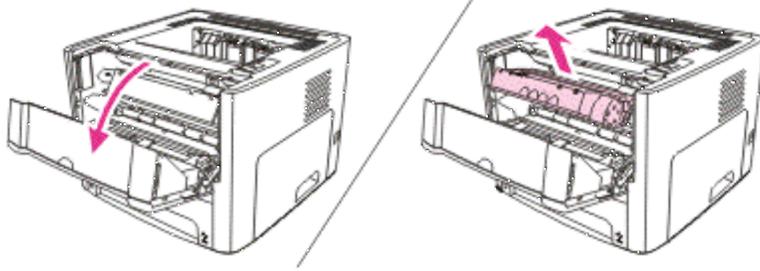


removing print cartridge

To prevent damage to the print cartridge, minimize its exposure to direct light.

2. Open the straight-through output door.


Figure 2: Straight-through output door

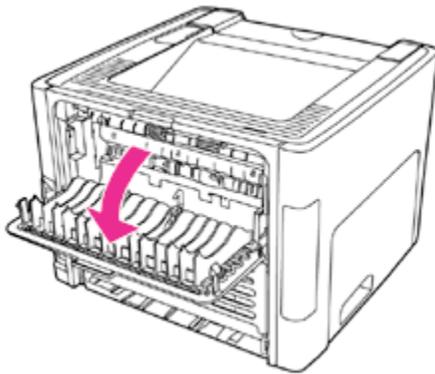

opening the straight-through output door

3. Rotate the green pressure release levers downward.

Figure 3: Green pressure release levers

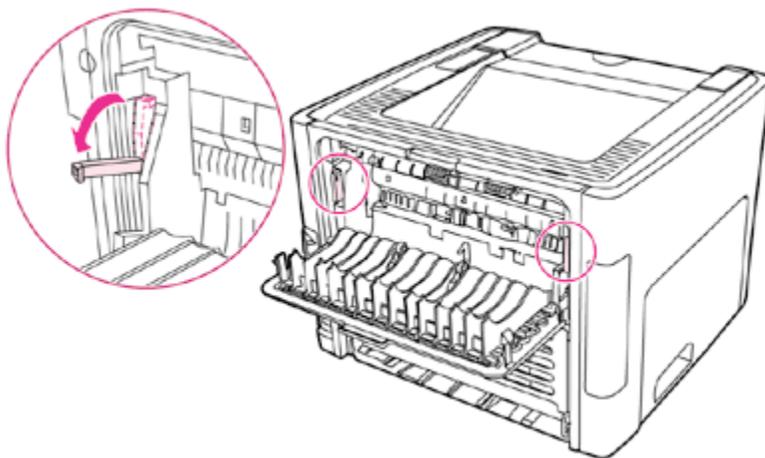


release levers

rotating the pressure

4. With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the printer.


Figure 4: Remove jammed media

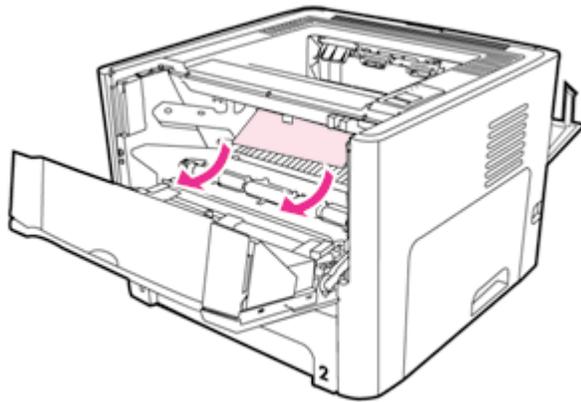

removing jammed media

5. Replace the print cartridge, and close the print cartridge door.

Figure 5: Print cartridge

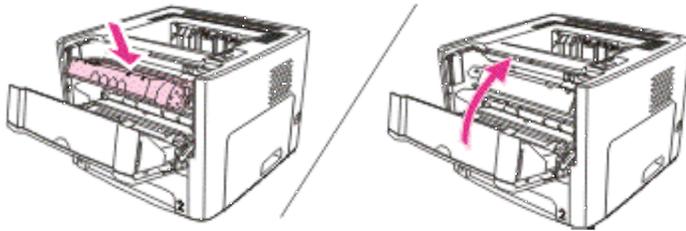

reinstalling the print cartridge


Input trays [Top of Page](#)

To clear a jam in the input trays, perform the following steps:

CAUTION: Do not use sharp objects, such as tweezers or needlenose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.

1. Open the straight-through output door.


Figure 6: Straight-through output door

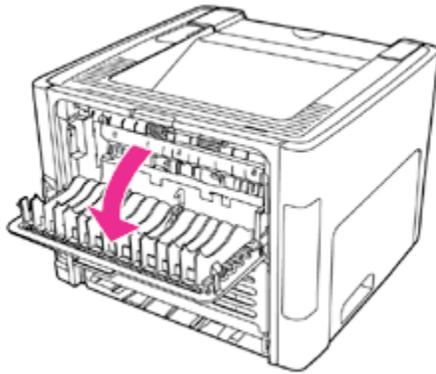

opening the straight-through output door

2. Rotate the green pressure release levers downward.

Figure 7: Green pressure release levers

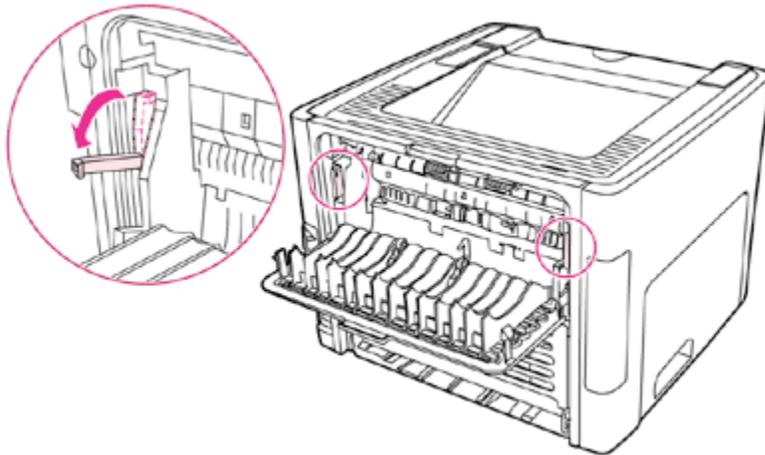


release levers

rotating the pressure

3. Open the single-sheet priority input slot (Tray 1) door.


Figure 8: Single-sheet priority input slot (tray 1)

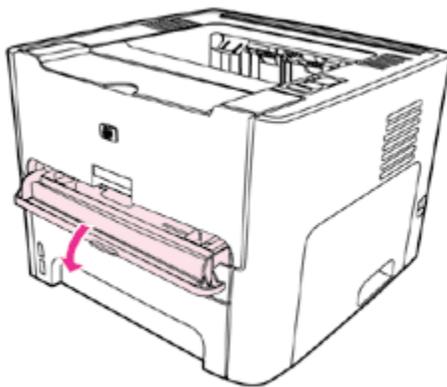

opening single-sheet priority input slot

4. With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the printer.


Figure 9: Remove jammed media

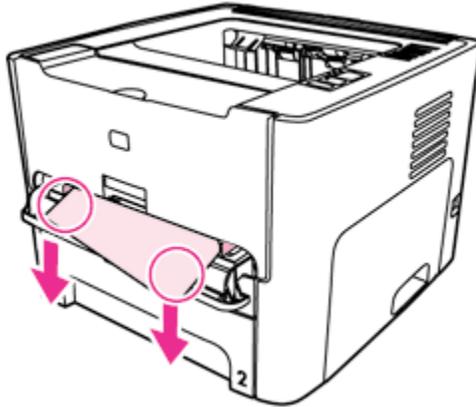

removing jammed media

5. Close the single-sheet priority input slot (Tray 1) door.


Figure 10: Close single-sheet priority input slot

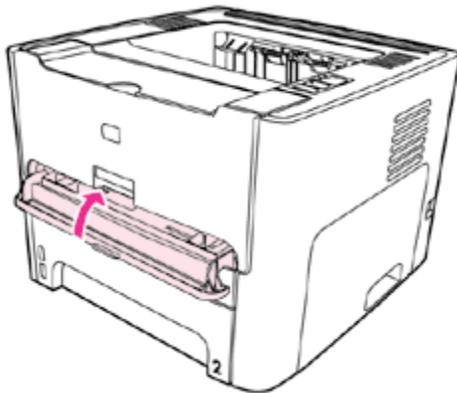

closing single-sheet priority input slot

6. Open the main input tray (Tray 2).


Figure 11: Main input tray

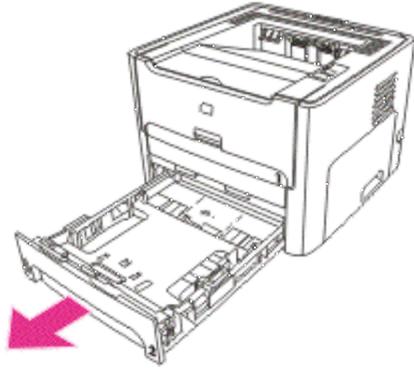

opening main input tray

7. With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the printer.


Figure 12: Remove jammed media

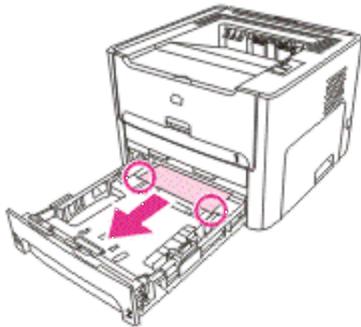

removing jammed media

8. If no media is visible, open the print cartridge door, remove the print cartridge, and rotate the upper media guide. Carefully pull the media up and out of the printer.


Figure 13: Upper media guide

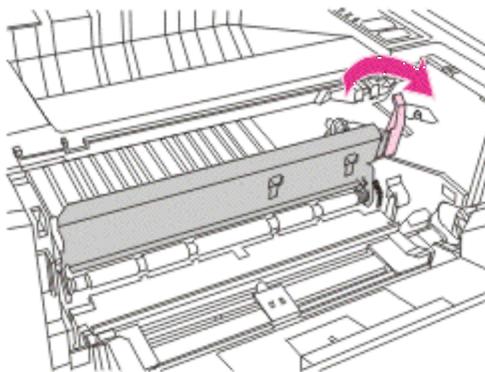

removing the jammed media

9. Close the main input tray (Tray 2).

Figure 14: Main input tray (close)

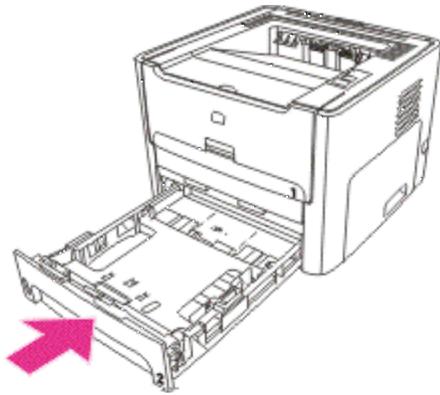


closing main input tray

Output bin [Top of Page](#)

CAUTION: Do not use sharp objects, such as tweezers or needlenose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.

With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the printer.

Figure 15: Main output bin

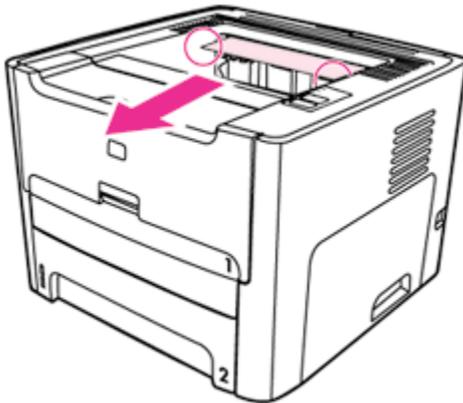

removing jammed media


Straight-through output path [Top of Page](#)

To clear a jam in the straight-through output path, perform the following steps:

CAUTION: Do not use sharp objects, such as tweezers or needlenose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.

1. Open the straight-through output door.


Figure 16: Straight-through output door

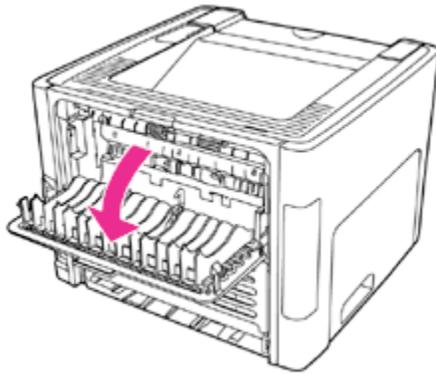

opening the straight-through output door

2. Rotate the green pressure release levers downward.

Figure 17: Green pressure release levers

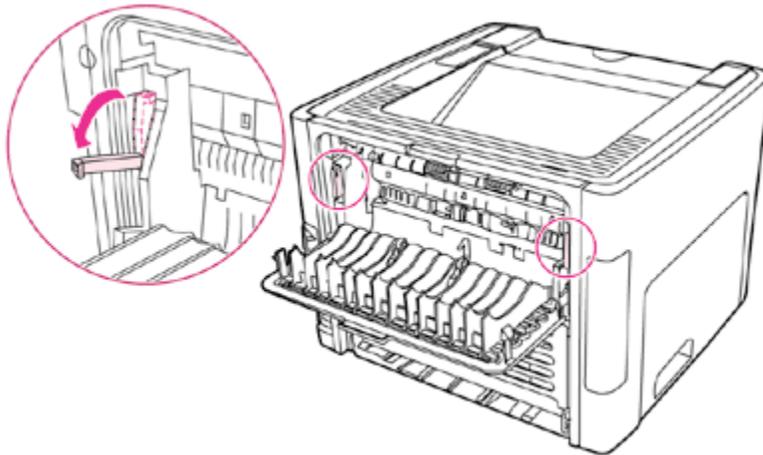

release levers

rotating the pressure

3. With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the printer.


Figure 18: Remove jammed media



removing the jammed media

4. Close the straight-through output door.

Figure 19: Straight-through output door (close)

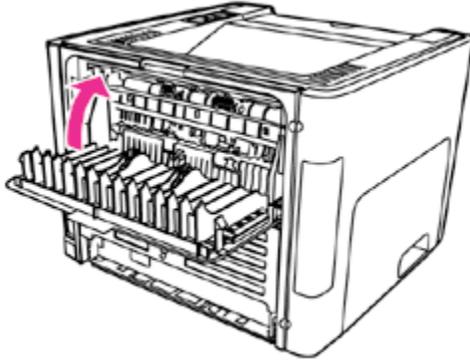

closing the straight-through output door

The pressure release levers automatically close when you close the straight-through output door.


Automatic two-sided printing (duplexing) path [Top of Page](#)

To clear a jam in the automatic two-sided path, perform the following steps:

CAUTION: Do not use sharp objects, such as tweezers or needlenose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.

1. Open the straight-through output door.


Figure 20: Straight-through output door

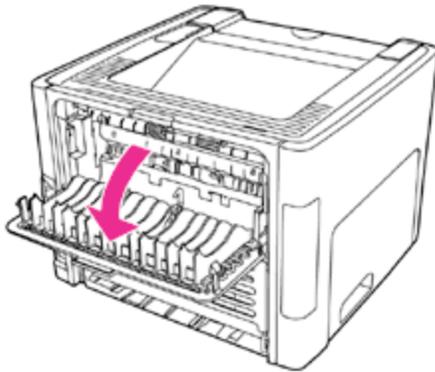

opening the straight-through output door

2. Rotate the green pressure release levers downward.

Figure 21: Green pressure release levers

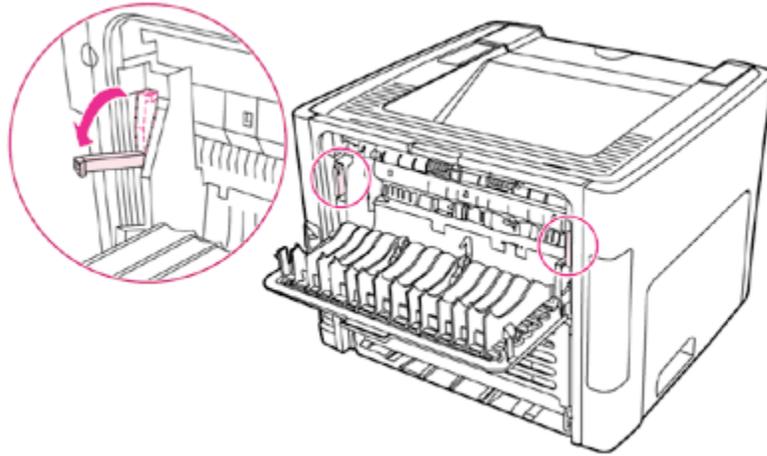


release levers

rotating the pressure

3. Remove the main input tray (Tray 2).

Figure 22: Main input tray

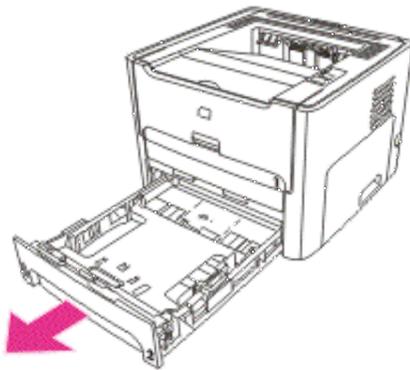

removing main input tray

4. Push down on the green lever on the automatic two-sided path door on the front of the printer.


Figure 23: Automatic two-sided path door



opening front automatic two-sided path door

5. With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the printer.


Figure 24: Remove jammed media

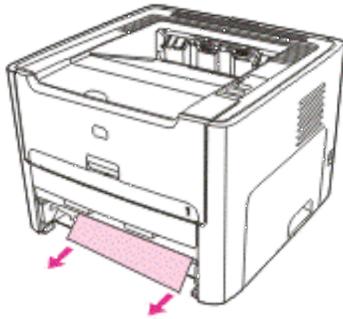

removing jammed media

6. Close the automatic two-sided path door.


Figure 25: Automatic two-sided path door (close)

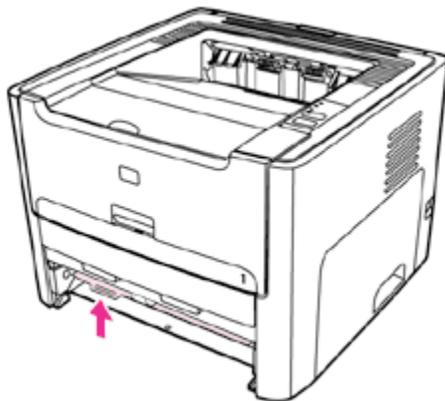

closing front automatic two-sided path door

7. Reinsert the main input tray (Tray 2).


Figure 26: Main input tray (close)

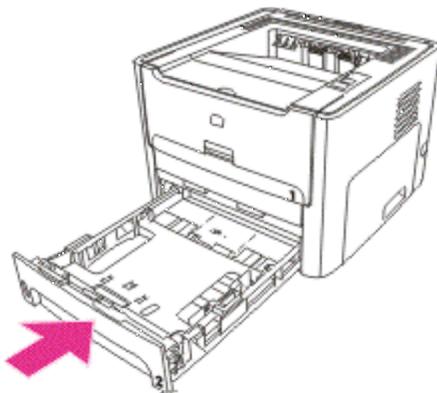

reinserting main input tray

8. Open the automatic two-sided path door on the back of the printer.


Figure 27: Automatic two-sided path

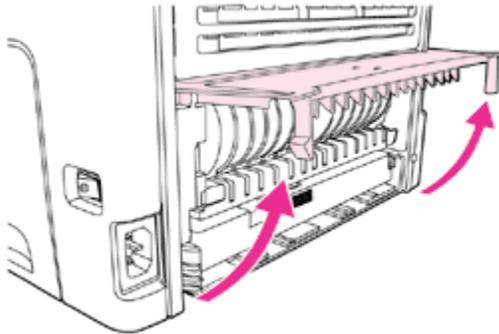

opening rear automatic two-sided path door

9. With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the printer.


Figure 28: Remove jammed media

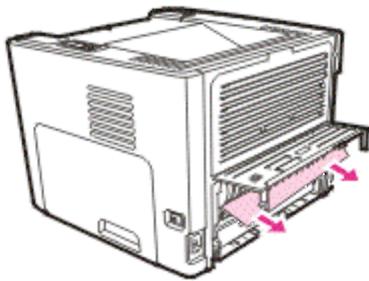

removing jammed media

10. Close the automatic two-sided path door.

Figure 29: Automatic two-sided path door (close)

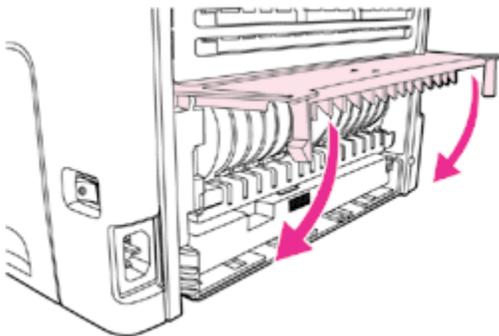

closing rear automatic two-sided path door