

Dell™ AIO Printer A940

Owner's Manual

Look Inside For:


- Learning about your printer
- Using your printer
- Maintenance and Troubleshooting



Finding information

Refer to:	When you need help with:
Setup Diagram	This document contains complete setup information.
<i>Drivers and Utilities</i> CD	Documentation and drivers are already installed on your printer when shipped from Dell. You can use the CD to uninstall/reinstall drivers or access your documentation. Readme files may be included on your CD to provide last-minute updates about technical changes to your printer or advanced technical reference material for experienced users or technicians.
<i>Owner's Manual</i>	This document contains information about: <ul style="list-style-type: none">• Basic usage• Scanning, printing, copying, and faxing• Creative projects• Ink cartridge ordering information• Setup troubleshooting• General troubleshooting
Dell Support Website	<ul style="list-style-type: none">• Solutions — Troubleshooting hints and tips, articles from technicians, and online courses• Upgrades — Upgrade information for components, such as memory• Customer Care — Contact information, order status, warranty, and repair information• Downloads — Drivers• Reference — Printer documentation and product specifications <p>You can access Dell Support at support.dell.com. Select your region on the WELCOME TO DELL SUPPORT page, and fill in the requested details to access help tools and information.</p>


Understanding the All-In-One parts

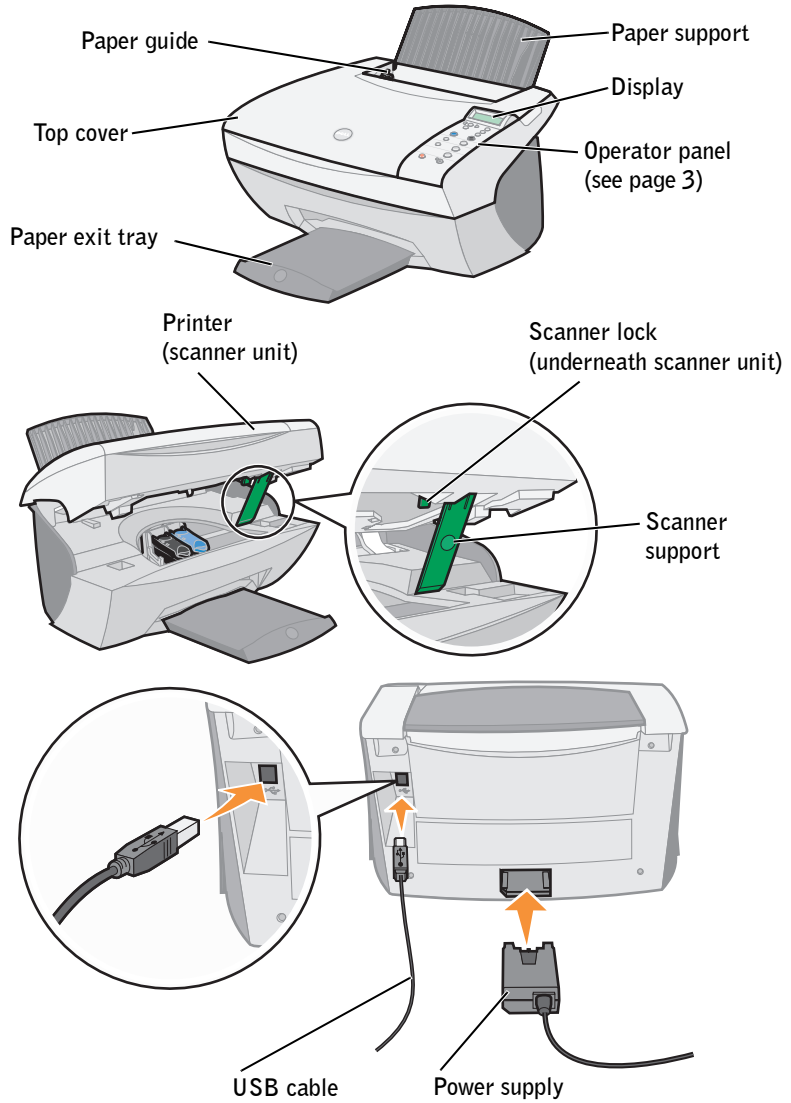

Use the:	When you want to:
Display	Check the status of the All-In-One.
Operator panel	Operate your All-In-One (attached to a computer or unattached). For more information, see page 3.
Paper exit tray	Stack paper as it exits the All-In-One.
Paper guide	Make sure paper feeds correctly into the All-In-One.
Paper support	Load paper in the All-In-One.
Power supply	Supply power to the All-In-One.
Scanner lock	Lock or unlock the scanner. NOTE: Unlock the scanner before use. Lock the scanner if you are moving your All-In-One.
Scanner support	Keep the printer (scanner unit) open to change cartridges, unlock the scanner, or lock the scanner.
Printer (scanner unit)	<ul style="list-style-type: none"> • Change cartridges. • Unlock the scanner. • Lock the scanner. NOTE: Lift the printer (scanner unit) to do these things.
Top cover	Place an item on or remove an item from the scanner glass.
USB cable	Connect your All-In-One to a computer.

Finding your Express Service Code and Tag number

Your express service code and tag number is located inside the printer, as shown.

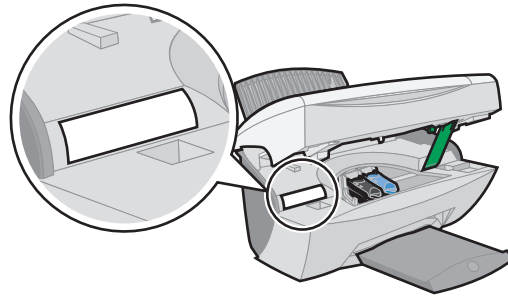



Accessing your User's Guide

To access your User's Guide:

- Click Start → Programs → Dell Printers → Dell AIO Printer A940 → View User's Guide.

Notes, Notices, and Cautions

 **NOTE:** A NOTE indicates important information that helps you make better use of your computer.

 **NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.**

Information in this document is subject to change without notice.

© 2003 Dell Computer Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Computer Corporation is strictly forbidden.

Trademarks used in this text: Dell and DELL logo are trademarks of Dell Computer Corporation; Microsoft and Windows are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names of their products. Dell Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Dell Computer Corporation, One Dell Way, Round Rock, Texas, 78682, USA.

Safety information

- Use only the power supply provided with this product or the manufacturer's authorized replacement power supply.
- Connect the power cord to an electrical outlet that is near the product and easily accessible.
- Refer service or repairs, other than those described in the user documentation, to a professional service person.



CAUTION: Do not use the fax feature during a lightning storm. Do not set up this product or make any electrical or cabling connections, such as the power supply cord or telephone, during a lightning storm.

Contents

Finding information	iii
Understanding the All-In-One parts	iv
Notes, Notices, and Cautions	vii
Safety information	viii

1 Learning about your printer

Setting up your printer	2
Understanding the operator panel	3
Operator panel menus	5
Photo Options menus	6
Understanding the printer software	7
Accessing the Dell All-In-One Center	7
Accessing Print Properties	8
Using the Dell Photo Editor	9
Using the Dell Printer Solution Center	10
Understanding the paper type sensor	11

2 Using your printer

Loading paper	14
Placing your document on the scanner glass	17
Printing	18
Printing photos	18

Copying	24
Copying photos	24
Scanning	26
Scanning photos	26
Editing scanned images	29
Using special scan features	29
Faxing	30
Using BVRP fax software	30
Installing BVRP fax software	30
Configuring BVRP fax software	31
Sending a one-page fax with BVRP	32
Sending a multiple-page fax with BVRP	32
Receiving faxes with BVRP	33
Viewing your faxes in BVRP	33
Using Fax Console	33
Installing Fax Console	33
Configuring Fax Console	34
Sending a one-page fax with Fax Console	34
Sending a multiple-page fax with Fax Console	34
Receiving faxes with Fax Console	35
Viewing faxes with Fax Console	35
Fax troubleshooting	36

3 Maintenance

Ordering supplies	38
Replacing the ink cartridges	39
Aligning the ink cartridges	41
After installing cartridges	41
To improve print quality	41

Cleaning the ink cartridge nozzles	42
4 Troubleshooting	
Setup troubleshooting	44
General troubleshooting	44
Paper misfeeds or multiple sheets feed	45
Envelopes do not feed properly	45
Document does not print	45
Display language is not preferable	46
Printer or scanner is not communicating with computer	46
Copy quality is unsatisfactory	46
More troubleshooting	48
You receive an error message	48
Uninstall and reinstall the printer software	54
Other help sources	54
5 Regulatory Notices	
6 Appendix	
Contacting Dell	60
Limited Warranties and Return Policy	72
Limited Warranty for Dell-Branded Hardware Products (U.S. Only)	72
"Total Satisfaction" Return Policy (U.S. Only)	75
Limited Warranty Terms for Dell-Branded Hardware Products (Canada Only)	75
"Total Satisfaction" Return Policy (Canada Only)	79
Dell Software and Peripherals (Canada Only)	79
One-Year End-User Manufacturer Guarantee (Latin America and the Caribbean Only)	80

Dell Computer Corporation	
Ink and Toner Cartridges Limited Warranties	82
Ink and Toner Cartridges Limited Warranty (U.S. and Canada Only)	
82	
Ink and Toner Cartridges Limited Warranty (Latin America Only)	83
Dell Software License Agreement	84

Index	87
-----------------	----

SECTION 1

Learning about your printer

Setting up your printer


Understanding the operator panel

Understanding the printer software

Understanding the paper type sensor

You can use the Dell™ AIO Printer A940 to do a variety of things. A couple of important things to note:

- You *do not* need to attach your printer to a computer to make copies.
- You *do* need to attach your printer to a computer to send faxes.
- If your printer is attached to a computer, you can use the operator panel or the printer software to create your projects.


 **NOTE:** The computer must have an internal modem or be connected to an external modem that is connected to a telephone line.


Setting up your printer

Follow the instructions on your printer setup documentation to install the hardware and software. For setup troubleshooting, see page 44.

Understanding the operator panel

The operator panel buttons help you scan, copy, fax, and customize documents. The light indicates whether the printer is on, and the display features the printer status, messages, and menus. You can press and hold some buttons to scroll through a list of options on the display. The table on page 4 shows what each button does.

 **NOTE:** Button functions (except **Cancel**) are disabled during printing, copying, and scanning.

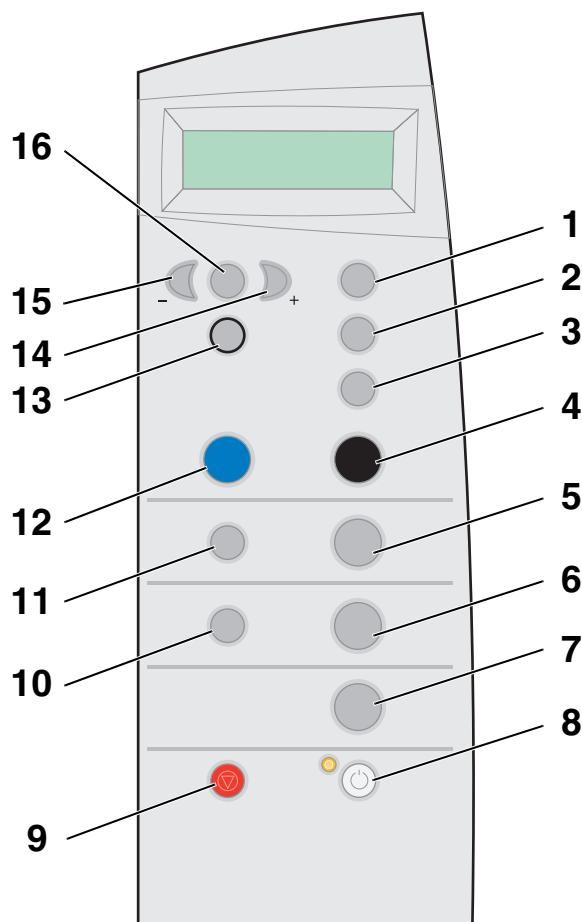

#	Press:	To:
1	Number of Copies	Specify the number (1–99) of copies to make.
2	Reduce/Enlarge	Reduce or enlarge your original document by percentage, to Fit to Page, or to poster size.
3	Copy <u>Q</u> uality	Select a copy quality: <u>Q</u> uick, Normal, Better, or Best.
4	B lack	Make a black and white copy using the current copy settings. For help, see page 24.
5	Copy P hoto	Begin a photo copy job using current Photo Options settings (the highest quality scan and print settings).
6	S can	Scan and send to a software application.
7	F ax	Scan and send a document to the fax software. NOTE: The printer must be attached to a computer with a modem.
8	P ower	Turn your printer on or off.
9	C ancel	Stop a job in progress or clear menu selections.
10	S elect S oftware	Select a new scan destination. For help, see page 26. NOTE: Use this button when the printer is attached to a computer.
11	P hoto O ptions	Select the quantity and size of photograph reprints.
12	C olor	Make a color copy of a color image using the current copy settings. For help, see page 24.
13	S elect	Choose the option currently shown on the display, or set the default language and paper size during setup.
14	R ight arrow (+)	Increase a menu number or scroll forward through a list of options on the display.
15	L eft arrow (-)	Decrease a menu number or scroll backward through a list of options on the display.
16	O ptions	Scroll through the menu headings. For help, see page 5.

Operator panel menus

When you press **Options** repeatedly, the menu headings below display. When the menu heading you want displays, press **+** to scroll through the available menu items, and then press **Select** to save the setting.

From this menu:	You can:
LIGHTER/DARKER	Lighten or darken the copied image.
BLANK PAPER SIZE	Specify the size of the paper loaded in the paper support.
BLANK PAPER TYPE	Specify the type of the paper loaded in the paper support. NOTE: If you leave this on Auto Detect (the default), then the paper type sensor (see page 11) optimizes the setting according to the type of paper loaded.
REPEAT IMAGE	Specify the number of images to place on one page.
COLOR	Adjust the color intensity of the copy.
ORIGINAL SIZE	Specify the size of the document on the scanner glass. NOTE: Leave this on Auto Detect (the default) unless the size of the document output you are printing is not satisfactory.
CONTENT TYPE	Specify the type of document on the scanner glass.
COLLATE-BLACK	Collate multiple black and white copies. NOTE: You cannot collate color copies.
IRON-ON/MIRROR	Print a mirror image of the scanned image.
CARTRIDGES	Select: <ul style="list-style-type: none">• Ink Levels to display the ink cartridge ink levels.• Change to see instructions on how to change the ink cartridges.• Align to automatically align the ink cartridges.• Clean to clean the ink cartridges.• Self Test to print a test page.

From this menu:	You can:
POWER SAVE	Select a time to begin reducing power: <ul style="list-style-type: none"> • Immediately • After 10 minutes • After 30 minutes (the default) • After 60 minutes • Never
CLEAR SETTINGS	Select when (after 2 minutes or never) you would like your printer to return to the default settings.
SET DEFAULTS	Select the current settings as the default settings or restore the factory default settings.
LANGUAGE	Select a language for all display text.


 **NOTE:** The option currently selected has an asterisk (*) beside it on the display.

Photo Options menu

The Photo Options menu helps you to customize photos.


- 1 Press **Photo Options**, and then **+** repeatedly to scroll through the available reprint sizes.

• Original	• 4 x 6	• 2 x 2 Poster
• Wallet	• 5 x 7	• 3 x 3 Poster
• 3 x 5	• 8 x 10	• 4 x 4 Poster

- 2 When the reprint size you want displays, press **Select**.

Repeat **Photo** displays.

- 3 Press **+** to turn this option on or off.


 **NOTE:** Leave this option on to print multiple images on the same page if the size selected allows it.

- 4 Press **Select**.
- 5 Press **Copy Photo**.

Understanding the printer software

The printer software includes the:


- Dell All-In-One Center—helps you perform various scan and copy operations and manage your saved images.
- Print Properties—helps you adjust printing settings.
- Dell Photo Editor—helps you edit your photos.
- Dell Printer Solution Center—provides maintenance and troubleshooting help.

 **NOTE:** Available from almost every application that prints.

Accessing the Dell All-In-One Center

To access the Dell All-In-One Center:

- Click Start → Programs → Dell Printers → Dell AIO Printer A940 → Dell All-In-One Center.

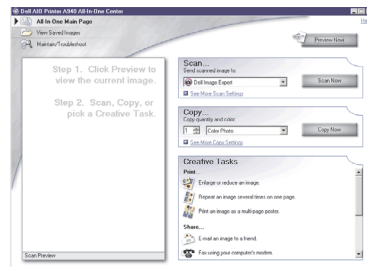

You can use the Dell All-In-One Center to:


- Select a scan destination.
- Select a copy quantity and color.
- Scan, copy, print, fax, and do creative tasks.
- Access troubleshooting and maintenance information.
- Preview images you want to print.
- Manage photos (copy them to folders, print them, do creative copying) using the View Saved Images tab.

Accessing Print Properties

You can change your printer settings in Print Properties. To open Print Properties:


- 1 With your document open, click **File** → **Print**.

The Print dialog box appears.

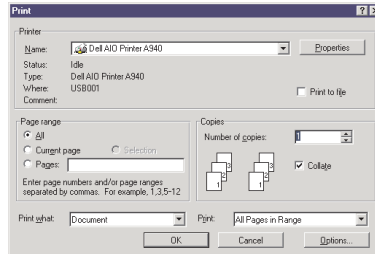

- 2 In the Print dialog box, click **Properties**, **Preferences**, **Options**, or **Setup** (depending on your program or operating system).

The Print Properties screen appears.

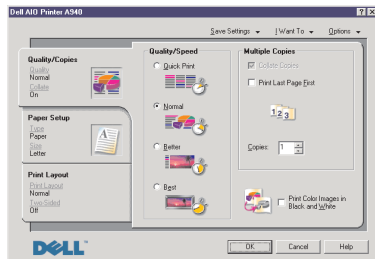


Using the Dell Photo Editor

The Dell Photo Editor lets you adjust photo attributes (brightness, contrast, and orientation) of scanned images.

There are two ways to open the Dell Photo Editor:

- Click **Start** → **Programs** → **Dell Printers** → **Dell AIO Printer A940** → **Dell Photo Editor**.
- From the All-In-One Center, send scanned image to Photo Editor.

The Dell Photo Editor appears.

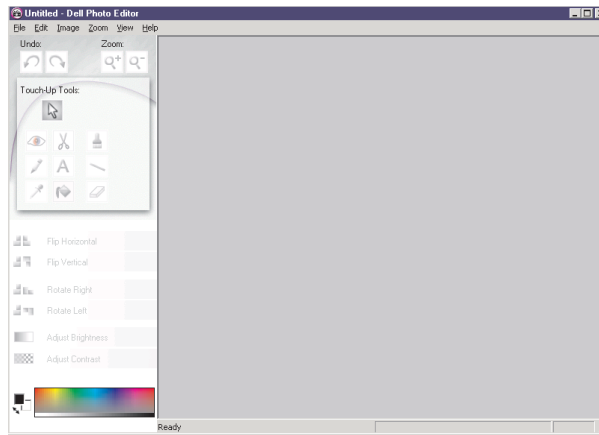


Using the Dell Printer Solution Center

The Dell Printer Solution Center is a guide you can refer to for printer help and to check the current printer status.

To open the Dell Printer Solution Center, click **Start** → **Programs** → **Dell Printers** → **Dell AIO Printer A940** → **Dell Printer Solution Center**.

The Dell Printer Solution Center appears.

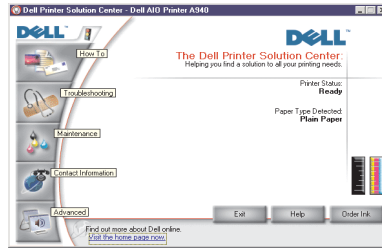

The following table describes the Dell Printer Solution Center tabs.

From this tab:	You can:
Status (the tab that appears on Start)	<ul style="list-style-type: none"> • Check the current printer status. • See what type of paper is in the printer. • View ink levels.
How To	<ul style="list-style-type: none"> • Receive information about basic features. • Receive scan, copy, fax, and print instructions. • Receive project information. • Search the electronic guide. • Go online to view more ideas.
Troubleshooting	<ul style="list-style-type: none"> • Check the current printer status. • View recommended Help topics. • View common troubleshooting topics. • Search for more specific troubleshooting topics. • Visit the support area online.

From this tab:	You can:
Maintenance	<ul style="list-style-type: none"> • Learn how to install a new ink cartridge. • View information about how to purchase new cartridges. • Print a test page. • Clean the ink cartridge nozzles. • Align the cartridges. • Solve other problems. • Visit the supplies area online. <p>NOTE: Some links will not work while a job is in progress.</p>
Contact Information	<ul style="list-style-type: none"> • View information about ordering ink or supplies. • View information about contacting Dell Customer Support. • View a list of phone numbers. • Visit the Dell Web site.
Advanced	<ul style="list-style-type: none"> • Change printing status appearance options. • View software version information.

Understanding the paper type sensor

Your printer has a paper type sensor that detects these paper types:

- Plain paper
- Coated paper
- Glossy/photo paper
- Transparencies

If you load one of these paper types, the printer detects the paper type and automatically adjusts the paper type settings and print resolution.



NOTE: Your printer cannot detect the paper size. For help, see page 12.

To choose the paper size:

- 1 With your document open, click **File** → **Print**.
- 2 In the Print dialog box, click **Properties**, **Preferences**, **Options**, or **Setup** (depending on your program or operating system).
The Print Properties screen appears.
- 3 Click the **Paper Setup** tab, and then select the paper size you are using.
- 4 Click **OK**.

The paper type sensor is on unless you turn it off. If you want to turn it off for the current print job:

- 1 With your document open, click **File** → **Print**.
- 2 In the Print dialog box, click **Properties**, **Preferences**, **Options**, or **Setup** (depending on your operating system).
The Print Properties screen appears.
- 3 Click **Options**.
- 4 Click **Paper Type Sensor Options**.
- 5 Click **Allow the paper type sensor to select paper type** (the default) to deselect it.
- 6 Click **OK**.

To permanently turn it off:

- 1 Click **Start** → **Settings** → **Printers** or **Start** → **Printers and Faxes**.
- 2 Right-click the printer icon.
- 3 Click **Properties**.
- 4 Click **Printing Preferences**.
- 5 Click **Options** or the **Printer Settings** tab.
- 6 Click **Paper Type Sensor Options**.
- 7 Click the box to deselect it.
- 8 Click **OK** on each of the open dialog boxes.



NOTE: To temporarily override the paper type sensor for a particular print job, specify a paper type in the GUI (graphical user interface) under Specialty paper.

SECTION 2

Using your printer

Loading paper

Placing your document on the scanner glass

Printing

Copying

Scanning

Editing scanned images

Faxing

Loading paper

To load other paper types, follow the guidelines on page 15.

To load most types of paper:


- 1 Place the paper against the right side of the paper support with the print side facing you and the top of the paper feeding into the paper support.



- 2 Squeeze and slide the paper guide to the left edge of the paper.



NOTE: Do not force paper into the printer.

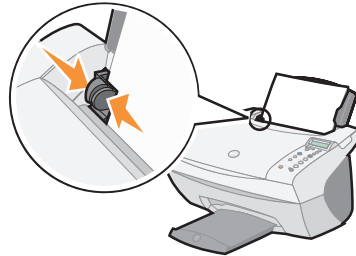

You can load up to: **Make sure:**

100 sheets of **plain paper** The paper is designed for use with inkjet printers.

10 envelopes



- The envelopes are loaded vertically against the right side of the paper support.
- The stamp location is in the upper left corner.
- The envelopes are designed for use with inkjet printers.
- You squeeze and slide the paper guide to the left edge of the envelope (as shown).

25 sheets of **labels**

The labels are designed for use with inkjet printers.

10 sheets of **card stock**

- The card stock is designed for use with inkjet printers.
- The thickness does not exceed 0.025 inches.

10 **greeting cards, index cards, postcards, or photo cards**

The cards are loaded vertically against the right side of the paper support.

25 sheets of **coated, photo, or glossy paper**

The glossy or coated side faces you.

10 **transparencies**

- The transparencies are designed for use with inkjet printers.
- The rough side faces you.

100 sheets of **custom size paper** Your paper size fits within these dimensions:

Width

- 76 to 216 mm
- 3.0 to 8.5 in.

Length

- 127 to 432 mm
- 5.0 to 17.0 in.

25 **iron-on transfers**

- You follow the loading instructions on the iron-on packaging.
- The blank side faces you.

20 sheets of **banner paper**

The banner paper is designed for use with inkjet printers.



NOTE: To avoid smearing ink, remove each transparency or photo from the paper exit tray before the next one exits the printer. Transparencies and photos may require up to 15 minutes to dry.

Before you begin copying, scanning, printing, or sending faxes, refer to the information below about how much paper the printer exit tray can hold.

The printer paper exit tray can hold:

-
- 50 sheets of paper
 - 10 sheets of labels
 - 1 transparency
 - 10 envelopes
 - 10 cards
 - 1 sheet of coated, photo, or glossy paper

You can use your printer to copy, scan, print, and fax. The following instructions explain how to complete these tasks.


Placing your document on the scanner glass

- 1 Open the top cover.



- 2 Place the item you want to copy face down on the scanner glass.



 **NOTE:** Make sure the upper left corner of the front of the item aligns with the arrow

- 3 Close the scanner lid to avoid dark edges.



Printing

- 1 Load paper. For help, see page 14.
- 2 With your document open, click **File** → **Print**.
- 3 To change the printer settings, click **Properties, Options, Setup** or **Preferences** (depending on the program or operating system).
- 4 On the three tabs along the left side (**Quality/Copies, Paper Setup, and Print Layout**) of the **Print Properties** screen, confirm the selections, and then click **OK** or **Print** (depending on the program or operating system).

Printing photos

- 1 Click **File** → **Print**.
- 2 Click **Properties**.
- 3 Select the paper type and size.
- 4 If using photo paper, make sure the glossy side is facing you when you insert the paper into the paper support.
- 5 Click **Print**.

Sharing printers

You can print from multiple computers if your printer is attached to a computer that is connected to a network.

First, follow these instructions while you are at your own computer.

- 1 Click **Start** → **Settings** → **Printers**.
- 2 Select the printer **Dell AIO Printer A940** icon.
- 3 Click **File Sharing**.
- 4 Click the **Shared as** check box, and then type a name in the **Shared Name** text box.
- 5 Click **Additional Drivers** and select the operating systems of all network clients printing to this computer.
- 6 Click **OK**.

If you are missing files, you are prompted to insert the server operating system CD.

To check that the printer was successfully shared.

- Make sure the printer object in the Printers folder shows it is shared. For example, in Windows 2000, a hand is shown underneath the printer icon.
- Browse Network Neighborhood. Find the host name of the server and look for the shared name you assigned the printer.

Now, follow these instructions while you are at the other person's computer:

- 1 Click **Start** → **Settings** → **Printers**.
- 2 Click **Add Printer** to launch the Add Printer wizard.
- 3 Click **Network Print Server**.
- 4 Select the network printer from the Shared printers list. If the printer is not listed, type in the path of the printer in the text box.

For example: \\<server host name>\<shared printer name>

The server host name is the name of the server computer that identifies it to the network. The shared printer name is the name assigned during the server installation process.

- 5 Click **OK**.
If this is a new printer, you may be prompted to install a printer driver. If no system driver is available, then you will need to provide a path to available drivers.
- 6 Select whether you want this printer as the default printer for this client, and then click **Finish**.

Print a test page to verify printer installation.


- 1 Click **Start** → **Settings** → **Printer**.
- 2 Select the printer you just created.
- 3 Click **File** → **Properties**.
- 4 From the General tab, click **Print Test Page**.

When a test page prints successfully, printer installation is complete.

NOTE: When you print multiple images on one sheet of paper in this way, you cannot use Reduce/Enlarge. Depending on how many images you want to print per page, the printer reduces them to fit on the page.

Print repeating images

Load paper in the printer before you begin your project. For help, see page 14.

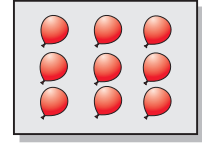

Using the operator panel

- 1 On the operator panel, press **Options** until **Repeat Image** displays.
- 2 Press **+** to scroll to the number of images you want to put on one sheet of paper (1, 4, 9, or 16).
- 3 Press **Select**.
- 4 Press **Color** or **Black** to begin copying.
- 5 After your image prints, press **Cancel** to return to **Normal Quality**.

Using the printer software

- 1 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears.
- 2 From the Creative Tasks section, click **Repeat an image several times on one page**.
- 3 Click **Preview Now** to view your scanned image.
- 4 Adjust the dotted lines to fit around the portion of the image you want to print.
- 5 Click **Printer Settings** to select your paper size.
- 6 Click **OK**.
- 7 When you are finished customizing your image, click **Print Now**.

Print a poster

You can print a poster of an image that you want to enlarge and extend over multiple pages.

Using the operator panel

- 1 Load A4 or letter size paper and select the size:
 - a On the operator panel, press **Options** until **BLANK PAPER SIZE** displays.
 - b Press **+** until the paper size on the display matches the paper size you have loaded.
 - c Press **Select**.

- 2 Open the top cover.
- 3 Place your document or item on the scanner glass. For help, see page 17.
- 4 Close the top cover.
- 5 On the operator panel, press **Reduce/Enlarge**.
- 6 Press **+** until you see the number of pages to be used for your poster on the display.

For example, **2x2 Poster** means the image you scan will be enlarged so that it fits on four pages.
- 7 Press **Select**.
- 8 To begin copying, press **Color** or **Black**.
- 9 To create your poster, attach the printed pages so that the image is as continuous and seamless as possible.
- 10 After your image prints, press **Cancel** to return to Normal Quality.

Using the printer software

- 1 Load A4 or letter size paper.
- 2 Open the top cover.
- 3 Place your document or item on the scanner glass. For help, see page 17.
- 4 Open the Dell All-In-One Center. For help, see page 7.


The All-In-One Main Page appears.
- 5 From the Creative Tasks section, click **Print an image as a multi-page poster**.
- 6 Click **Preview Now** to view your scanned image.
- 7 Adjust the dotted lines to fit around the portion of the image you want to print.
- 8 Click **Printer Settings** to select your paper size.
- 9 Click **OK**.
- 10 When you are finished customizing your document, click **Print Now**.


Print a banner

- 1 Place the stack of banner paper on the top cover, and feed in the first sheet.



- 2 Click **Start** → **Programs** → **Dell Printers** → **Dell AIO Printer A940** → **Dell Printer Solution Center**.
- 3 Click the **How To** tab.
- 4 From the **Projects** drop down dialog box, select **Banners**.
- 5 Click **View** and follow the instructions to print your banner.

 **NOTE:** Once the printer begins printing, wait until you can see the leading edge of the banner exiting the printer, and then carefully unfold the paper down to the floor in front of the printer.

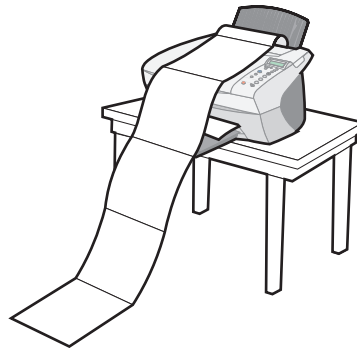

Print mirror images and iron-on transfers

To print out a mirror image of your original, use the following steps.

Using the operator panel

- 1 Open the top cover.
- 2 Place the item you want to print face down on the scanner glass. Make sure the upper left corner of the front of the item aligns with the arrow at the bottom right of the scanner.
- 3 On the operator panel, press **Options** repeatedly until **Iron-On/Mirror** displays.
- 4 Press **+** to choose **On**, and then press **Select**.
- 5 Press **Color** or **Black** to begin copying.
- 6 After your image prints, press **Cancel** to return to Normal Quality.

Personalize fabric with pictures

Using your computer

- 1 Create or open your picture document.
- 2 Click **File** → **Print**.
- 3 Click **Properties**, **Options**, **Setup** or **Preferences** (depending on the program or operating system).
- 4 Click the **Print Layout** tab, and then select **Mirror**.



NOTE: To create a fabric collage, you can repeat these steps multiple times or using many different pictures.



NOTE: Apply the transfer to a blanket, pillowcase, sheet set, T-shirt or another piece of fabric. Follow the instructions on the iron-on transfer package.

Copying

You can copy using the operator panel or the software.

First, load your document. For help, see page 17.

Using the operator panel:

- 1 Make sure your printer is on.
- 2 Press **Number of Copies** repeatedly until the number (any number 1–99) of copies you want to make displays, or press + or - to scroll through the number list.
- 3 Press **Color** or **Black**.
The printer is working when the display reads **COPYING**.
After making multiple copies, press **Cancel** to return to the default setting.

Using the printer software

- 1 Make sure your computer and your printer are on.
- 2 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears.
- 3 Click **Preview Now** to see your scanned image.
- 4 Select a quantity and color for your copies.
To further customize your copy job, click **See More Copy Settings**.
- 5 When you are finished customizing your image, click **Copy Now**.

Copying photos

- 1 Place your photo on the scanner glass. For help, see page 17.
- 2 Open the Dell All-In-One Center. For help, see page 7.
- 3 Click **Preview Now**.
- 4 Adjust the dotted lines to fit around the portion of the image you want to print.
- 5 From the Copy... Section, select **Photo**.
- 6 Select a copy quantity if making multiple copies.
- 7 To further customize your photo, click **See More Copy Settings**.
- 8 When you are finished customizing your settings, click **Copy Now**.



NOTE: Make sure the upper left corner of the front of the photo aligns with the arrow.

Make color copies

You can make color copies of a child's artwork, a magazine article, birth certificate, or other things using the operator panel or the computer.

Using the operator panel	Using the printer software
<ol style="list-style-type: none">1 Make sure your printer is on.2 Press Number of Copies if making multiple copies.3 Press Color.	<ol style="list-style-type: none">1 Make sure your computer and your printer are on.2 Open the Dell All-In-One Center. For help, see page 7. The All-In-One Main Page appears.3 From the Copy... section, select Color Document.4 Select a copy quantity if making multiple copies. To further customize your document, click See More Copy Settings.5 When you are finished customizing your image, click Copy Now.

The printer begins copying using the selected copy settings.

Scanning

You can scan using your operator panel and software.

First, load your document. For help, see page 17.

Using the operator panel:

- 1 Make sure your printer is on.
- 2 Press **Select Software**.
- 3 The scan destination that you last selected (or the factory default) displays.
- 4 Press **+** to scroll through the list of scan destinations.
- 5 When your preferred scan destination displays, press **Select**.
- 6 Press **Scan** to begin a scan job using the current settings.

Using the printer software

- 1 Make sure your computer and your printer are on.
- 2 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears.
- 3 Click **Preview Now** to see your scanned image.
- 4 Adjust the dotted lines to fit around the part of the image you want to print.
- 5 From the Send scanned image to: drop down box, select your scan destination.
To further customize your scan job, click **See More Scan Settings**.
- 6 When you are finished customizing your image, click **Scan Now**.

Scanning photos

- 1 Place your photo on the scanner glass. For help, see page 17.
- 2 Open the Dell All-In-One Center. For help, see page 7.
- 3 Click **Preview Now**.
- 4 Adjust the dotted lines to fit around the portion of the image you want to print.
- 5 Select your scan destination from the drop-down box.
- 6 When you are finished customizing your image, click **Scan Now**.
- 7 When your document has finished processing, it will open in the program you chose.



NOTE: Make sure the upper left corner of the front of the photo aligns with the arrow.

Enlarging or reducing images

You can enlarge or reduce patterns or photos using the operator panel or the All-In-One Center on your computer.

First, load your document. For help, see page 17.

Using the operator panel

- 1 On the operator panel, press **Reduce/Enlarge**.
- 2 Press **+** until you see the option you want to select: 50% (Half), 100% (Same), 200% (Double), Custom %, Fit to Page, 2x2 Poster, 3x3 Poster, or 4x4 Poster.
- 3 Press **Select**.
- 4 To begin copying, press **Color** or **Black**.
- 5 After your image prints, press **Cancel** to return to Normal Quality.

Using the printer software

- 1 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears.
- 2 From the Creative Tasks section, click **Enlarge or reduce an image**.
- 3 Follow the instructions on the screen to select the size of your new image.
- 4 Adjust the dotted lines to fit around the portion of the image you want to print.
- 5 Click **Printer Settings** to select your paper size.
- 6 Click **OK**.
- 7 When you are finished customizing your image, click **Print Now**.



NOTE: When you print multiple images on one sheet of paper in this way, you cannot use Reduce/Enlarge. Depending on how many images you want to print per page, the printer reduces them to fit on the page.

Scan a photograph and e-mail it to a friend

- 1 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears.
- 2 From the Creative Tasks section, click **E-mail an image to a friend**.
- 3 Follow the instructions on the screen to prepare the photo for e-mail.
- 4 Click **Attach Now**.
The New Message screen appears.
- 5 Follow the instructions on the screen.
- 6 Write a note to accompany the attached photograph.
- 7 Click **Send**.

Use Optical Character Recognition

Optical Character Recognition is a software feature that turns a scanned image into editable text within a word processing program.

- 1 Open the top cover.
- 2 Place the item you want to edit face down on the scanner glass. Make sure the upper left corner of the front of the item aligns with the arrow at the bottom right of the scanner.
- 3 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears.
- 4 From the Creative Tasks section, click **Edit text found in a scanned document (OCR)**.
- 5 Follow the instructions on your computer screen.
- 6 When your document has finished processing, it will open in the program you chose.
- 7 Edit your document.

Scan multiple pages or images



NOTE: You are prompted to put the next item on the scanner glass after the first one scans.

- 1 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears.
- 2 Select your scan destination from the drop-down box.
- 3 In the Scan... section, click **See More Scan Settings**, and then click **Display Advanced Scan Settings**.
- 4 On the Scan tab, select **Scan multiple items before output**.
- 5 Click **OK**.
- 6 When you are finished customizing your image, click **Scan Now**.

Editing scanned images

With most graphics programs, you can customize your image.

- 1 From the Dell All-In-One Center, scan your image to the image editor of your choice.
- 2 Edit the image using the tools available in your program.

You may be able to:

- Remove red eye
- Crop your image
- Add text to your image
- Adjust the brightness and contrast of your image
- Flip or rotate your image
- Change colors

For help, refer to the documentation that came with your graphics program.

Using special scan features

You can use your printer software to scan in many ways.


You can:


- Repeat images (scan to print). For help, see page 27.
- Autofit (scan to print).
- Multi-up—A printer software option that lets you print multiple pages of a document on a single sheet of paper. For example, select 4-up to print reduced images of pages 1 through 4 on the first sheet of paper, images of pages 5 through 8 on the second sheet, and so on.
- Use Optical Character Recognition to edit text on a document. For more information, see page 28.

Faxing


In order to send and receive faxes with your printer:

- Your computer must have faxing software installed and configured. You may use BVRP Classic Phone Tools/FaxTools or Microsoft Fax Console.
 - See "Using BVRP fax software" on page 30 to use BVRP.
 - See "Using Fax Console" on page 33 to use Fax Console.
- Your computer must be equipped with a data/fax modem.
- An active telephone line must be connected to the line-in connector of your data/fax modem.
- Your printer must be connected to the computer with a USB cable.

 **NOTE:** A data/fax modem is not built into your printer.

 **NOTE:** DSL (digital subscriber line), ISDN (integrated services digital network) and cable modems are *not* fax modems and are *not* supported.

USB cable

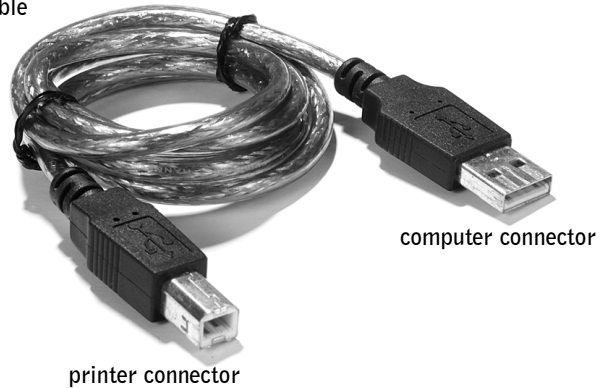

Using BVRP fax software

Installing BVRP fax software

- 1 Click the Start button.
- 2 Click All Programs.

A list of your installed software appears.

- 3 Check for any entry referring to Classic PhoneTools or FaxTools. If you have either of these entries, skip to “Configuring BVRP fax software.”
- 4 Click on the desktop.
The **All Programs** window closes.
- 5 Insert the *Dell Personal All-In-One Printer A940 Drivers and Utilities CD*.
An installation window appears.
- 6 Click **Cancel**, click the **Start** button, and then click **My Computer**.
- 7 Right-click the **CD Drive** icon.
A drop-down menu appears.
- 8 Click **Explore**.
- 9 Double-click the **Fax** folder.
- 10 Double-click the appropriate language folder.
- 11 Double-click the **Setup** icon.
The **Installation Wizard** appears.
- 12 Follow the instructions on your computer screen to complete the installation.

Configuring BVRP fax software

- 1 Click the **Start** button.
- 2 Click **All Programs**.
- 3 Click **FaxTools** or **Classic PhoneTools**.
The fax configuration wizard begins.
- 4 Click **Next**.
- 5 Read the license agreement, and then click **Yes** to continue.
- 6 Enter your name and company name.
- 7 Click **Next**.
- 8 Enter an identifier, phone number, and fax number.
- 9 Click **Next**, click **Next**, and click **Next** again.



NOTE: Fax service is set by default to automatically answer your phone line after two rings if you click to select the **Enable Receive** check box. Change these settings as desired.

- 10 Click **Finish**.
BVRP fax software launches.
- 11 Select your country, enter your area code, and enter any number you must press first before getting to an outside line.
- 12 Click **OK**.
- 13 Select your location and click **OK**.
- 14 Click **Next**, click **Next**, select your modem, and click **Next** again.
- 15 Click **Next**, click **Next**, and then click **Finish**.

Sending a one-page fax with BVRP

- 1 Ensure that your printer is attached to a computer with a data/fax modem.
- 2 Place the document you want to fax *face down* under the lid of the printer.
- 3 Press the Fax button on the front of the printer.
BVRP fax software launches.
- 4 Follow the instructions on your computer screen to send your fax.

Sending a multiple-page fax with BVRP

- 1 Click the **Start** button.
- 2 Move your mouse pointer over **All Programs**, then **Dell Printers**, and then **Dell AIO Printer A940**.
- 3 Click **Dell All-In-One Center**.
- 4 Click **See More Scan Settings**.
- 5 Click **Display Advanced Scan Settings**.
- 6 Click to select **Scan multiple items before output**.
- 7 Click **OK**.
- 8 Select **Fax** from the **Send scanned image to** drop-down menu.
- 9 Place the document you want to fax *face down* under the lid of the printer.
- 10 Click **Preview Now**.
A preview of your document appears. Adjust your document and repeat if necessary.

- 11 Click **Yes** until all pages you want to fax are scanned.
- 12 Click **No**.
- 13 Follow the instructions on your computer screen to send your fax.

Receiving faxes with BVRP

- 1 Click the **Start** button.
- 2 Click **All Programs**.
- 3 Click **Classic PhoneTools** or **FaxTools**.

BVRP fax software launches. You are now ready to receive a fax.



NOTE: The computer must be turned on and BVRP FaxTools must be configured in order to receive a fax.

Viewing your faxes in BVRP

- 1 Click the **Start** button.
- 2 Click **All Programs**.
- 3 Click **Classic PhoneTools** or **FaxTools**.
- 4 Click **Fax Inbox** to view received faxes.
- 5 Click **Fax Outbox** to view sent faxes.

Using Fax Console

Installing Fax Console

- 1 Click the **Start** button.
- 2 Click **Control Panel**.
- 3 Click **Add or Remove Programs**.
- 4 Click **Add/Remove Windows Components**.
- 5 Click to select **Fax Services**.
- 6 Click **Next**.

If prompted, insert the *Microsoft Windows XP* CD and click **OK**. Close the **Welcome to Microsoft Windows XP** window when it opens.

- 7 Click **Finish**.
- 8 Close the **Add/Remove Programs** window.

Configuring Fax Console

- 1 Click the **Start** button.
- 2 Move your mouse pointer over **All Programs**, then **Accessories**, then **Communications**, then **Fax**.
- 3 Click **Fax Console**.
The **Welcome to Fax Configuration Wizard** appears.
- 4 Click **Next**.
- 5 Enter any appropriate information and click **Next**.
- 6 Select your data/fax modem in the drop-down menu under **Please select the fax device**.
- 7 Select or de-select the **Enable Send** and **Enable Receive** check boxes as desired.



NOTE: De-selecting the **Enable Send** check box prevents you from sending faxes. Selecting the **Enable Receive** check box allows you to receive faxes.

- 8 Enter your TSID information and click **Next**.
- 9 Enter your CSID information and click **Next**.
- 10 Click to select **Print it on** and use the drop-down menu to the right of this field to select **Dell AIO Printer A940** if you want to print all received faxes.
- 11 To create an archive copy of each fax, click to select **Store a copy in a folder** and use the **Browse** button to select the desired archive location.
- 12 Click **Next**, confirm your settings, and click **Finish**.

Sending a one-page fax with Fax Console

- 1 Ensure that your printer is attached to a computer with a modem.
- 2 Place the document you want to fax *face down* under the lid of the printer.
- 3 Press the **Fax** button on the front of your printer.
The **Send Fax Wizard** appears.
- 4 Follow the instructions on your computer screen to send your fax.

Sending a multiple-page fax with Fax Console

- 1 Click the **Start** button.
- 2 Move your mouse pointer over **All Programs**, then **Dell Printers**, then **Dell AIO Printer A940**.

- 3 Click **Dell All-In-One Center**.
- 4 Click **See More Scan Settings**.
- 5 Click **Display Advanced Scan Settings**.
- 6 Click to select **Scan multiple items before output**, and click **OK**.
- 7 Select **Fax** from the **Send scanned image to** drop-down menu.
- 8 Place the document you want to fax *face down* under the lid of the printer.
- 9 Click **Preview Now**.
A preview of your document appears. Adjust your document and repeat if necessary.
- 10 Click **Yes** until all pages you want to fax are scanned.
- 11 Click **No**.
- 12 Follow the instructions on your computer screen to send your fax.

Receiving faxes with Fax Console

- 1 Click the **Start** button.
- 2 Move your mouse pointer over **All Programs**, then **Accessories**, then **Communications**, then **Fax**.
- 3 Click **Fax Console**.

You are now ready to receive a fax if you selected the **Enable Receive** check box when configuring **Fax Console**.

Viewing faxes with Fax Console

- 1 Click the **Start** button.
- 2 Move your mouse pointer over **All Programs**, then **Accessories**, then **Communications**, then **Fax**.
- 3 Click **Fax Console**.

Received faxes can be viewed in the **Inbox**. Sent faxes can be viewed in **Sent Items**.

Fax troubleshooting

If you are having trouble sending or receiving a fax, ensure that:

- Your computer is equipped with a working data/fax modem.
- An active phone line is connected to the line-in connector of your data/fax modem.
- Faxing software is installed and configured.
- Your printer is connected to the computer with a USB cable.

SECTION 3

Maintenance

Ordering supplies

Replacing the ink cartridges

Aligning the ink cartridges

Cleaning the ink cartridge nozzles

Ordering supplies

To order printer supplies or to locate a dealer near you, contact the Dell Web site at www.dell.com/supplies or www.dell.euro.com/supplies.


Item:	Part number:
Black cartridge	7Y743
Color cartridge	7Y745


Replacing the ink cartridges

The Dell AIO Printer A940 uses the following cartridges:

Item:	Part number:
Black cartridge	7Y743
Color cartridge	7Y745


- 1 Make sure the All-In-One is on.
- 2 Lift the printer (scanner unit) until the scanner support keeps it open.

 **NOTE:** For information about ordering supplies, see page 38.

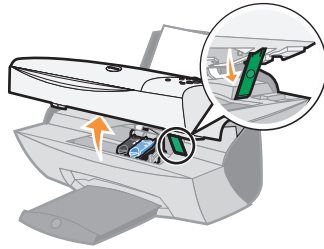


The ink cartridge carrier moves and stops at the loading position unless the All-In-One is busy.

- 3 Squeeze the tabs on the cartridge lids, and then lift the lids.

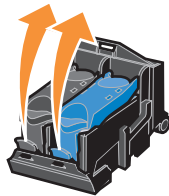

- 4 Remove the old cartridges. Store them in an air-tight container or dispose of them.

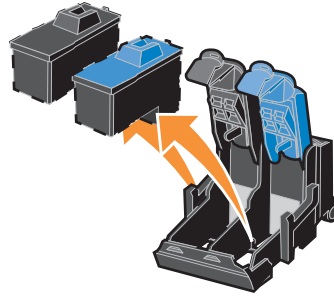

- 5 If you are installing new cartridges, remove the stickers and tape from the bottom of the cartridges.
- ➔ NOTICE:** Do **NOT** touch the gold contact area on the cartridges.
- 6 Insert the new cartridges, and then *snap* the lids closed.
 - 7 Lift the printer (scanner unit) and push the scanner support back while lowering the printer (scanner unit) until it is closed.
 - 8 Load paper into the paper support. For help, see page 14.
 - 9 Questions appear on the display. Use the buttons on the operator panel to answer the questions:
 - a If the color cartridge you installed is New (never been used), press **Select**.
If it is old, press **+**, and then press **Select**.
 - b If the black cartridge you installed is New, press **Select**.
If it is old, press **+**, and then press **Select**.

Aligning the ink cartridges

There are two instances when you will align your ink cartridges: after installing cartridges and to improve print quality.

After installing cartridges

After you install new ink cartridges, a message displays on the operator panel.

- 1 Make sure plain paper is loaded in the paper support.
- 2 Press **Select** to print an alignment page.

To improve print quality

You may want to align your cartridges periodically to improve print quality.

- 1 On the operator panel, press **Options** repeatedly until **Cartridges** displays.
- 2 Press **+** until **Align** displays, and then press **Select**.
- 3 Press **Select**.

An alignment page prints. Once the alignment page prints, your automatic alignment is complete.

Cleaning the ink cartridge nozzles

To improve print quality, you may need to clean the ink cartridge nozzles.

Clean the nozzles when:

- Characters are not printing completely.
- White dashes appear in graphics or printed text.
- Print is smudged or too dark.
- Colors on print jobs are faded or they differ from the colors on the screen.
- Vertical, straight lines are not smooth.

You can use the operator panel or the Dell Printer Solution Center to clean the nozzles.

Using the operator panel	Using the printer software
<ol style="list-style-type: none"> 1 Load plain paper in the printer. For help, see page 15. 2 Press Options until Cartridges displays. 3 Press + until Clean displays. 4 Press Select. 	<ol style="list-style-type: none"> 1 Load plain paper in the printer. For help, see page 15. 2 Open the Dell Printer Solution Center. For help, see page 10. 3 Click the Maintenance tab. 4 From the Maintenance tab, click Clean to fix horizontal streaks. 5 Click Print.

A nozzle page prints, forcing ink through the nozzles to clean the clogged nozzles.

- Print your document again to verify your print quality has improved.
- To further improve print quality, try wiping the ink cartridge nozzles and contacts (refer to your *User's Guide*), and then print your document again.
- If print quality has not improved, try cleaning the ink cartridge nozzles up to two more times.

SECTION 4

Troubleshooting

Setup troubleshooting

General troubleshooting

Other help sources

Setup troubleshooting

If you experience problems while setting up your printer, make sure:

- You unlock the scanner bed. For help locating the scanner lock, see the picture of the printer on page iv.
- You select your language and default paper size, and then press **Select** on the operator panel.
- You only have one Dell AIO Printer A940 attached to your computer.
- Your operating system is compatible with your printer. The Dell AIO Printer A940 supports Windows XP and Windows 2000.

General troubleshooting

When your printer has a problem, before contacting Dell Customer Support, check the following items.

If your printer is *not* attached to a computer, make sure:

- You read and follow any scrolling text Help messages on the display.
- The power supply is plugged into your printer and an electrical outlet.

If your printer *is* attached to a computer, make sure:

- The USB cable is securely attached to your computer and to your printer.
- Both your computer and your printer are on.
- The Dell AIO Printer A940 is set as your default printer.

Anytime your printer has a problem, make sure:

- Your printer is on.
- The scanner is unlocked.
- You removed the stickers and tape from the bottom of the ink cartridges. For help, see page 40.
- The paper is loaded correctly.
- You installed both of the ink cartridges. The Dell AIO Printer A940 will only work if you have both cartridges installed. For help installing the cartridges, see page 39.

Paper misfeeds or multiple sheets feed

Make sure:

- You use a paper recommended for inkjet printers.
- You do not force the paper into the printer.
- You do not load too much paper in the printer. For help, see page 14.
- You load the paper correctly.
- The printer is on a flat, level surface.
- The paper guide rests against the left edge of the paper and does not cause the paper to bow in the paper support.
- You select the correct paper type and size in Print Properties, Preferences, or in the All-In-One Center.

Envelopes do not feed properly

If regular paper feeds without problems, make sure:

- You load the envelopes correctly. For help, see page 15.
- You use an envelope size supported by the printer and select that size before you start your print job.
- You have the correct paper type and size selected in Print Properties.

Document does not print

- Make sure the cartridges are properly installed.
- Use an undamaged USB cable.
- Check your printer status to make sure your document is not being held or paused. To check printer status:
 - a Click **Start** → **Settings** → **Printers**.
 - b Double-click the **Dell A940** icon, and then click **Printer**.
 - c Make sure no check mark appears next to **Pause Printing**.
- Print a test page:
 - a Click **Start** → **Programs** → **Dell Printers** → **Dell AIO Printer A940** → **Dell All-In-One Center**.

- b Click the **Maintenance** tab.
- c From the Maintenance tab, click **Print a test page**.



NOTE: Photos or documents containing graphics may take longer to print than regular text.

Display language is not preferable

If the language on the printer display is not the language you prefer, change the language:

- 1 On the operator panel, press **Options** until **Language** displays.
- 2 Use **+** to scroll through the list of languages.
- 3 When your preferred language displays, press **Select** to set that language as the default.

Printer or scanner is not communicating with computer

- Disconnect, and then reconnect both ends of the USB cable.
- Unplug the power supply from the electrical outlet. Reconnect the power supply (refer to your setup documentation). Turn the power on.
- Restart your computer. If problems persist, see page 54, Uninstalling and reinstalling the software.

Copy quality is unsatisfactory

The following topics can help you improve unsatisfactory print quality on your document.

If your document is too light or too dark:

- 1 On the operator panel, press **Options** until **Lighter/Darker** displays.
- 2 Press **+** to darken your document or **-** to lighten it.
- 3 Press **Select**.

If you are copying in black and white and want to improve the quality:

- 1 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears.
- 2 In the Copy... section, click **See More Copy Settings**.
- 3 Click **Display Advanced Copy Settings**.

- 4 Click the **Scan** tab.
- 5 From the **Color depth** drop down menu, select **Gray**.
- 6 Click **OK**.

If you are scanning or copying from a printed source, and your copy has a checkerboard pattern on it, follow these directions:

For scanning:

- 1 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears on your computer screen.
- 2 From the **Scan...** section, click **See More Scan Settings**.
- 3 From the **What is being scanned?** option, select **Magazine/Newspaper**.
- 4 When you are finished customizing your document, click **Scan Now**.

For copying:

- 1 Open the Dell All-In-One Center. For help, see page 7.
The All-In-One Main Page appears on your computer screen.
- 2 From the **Copy...** section, click **See More Copy Settings**.
- 3 Click **Display Advanced Copy Settings**.
- 4 Select the **Image Patterns** tab.
- 5 Select the third box to remove image patterns from magazine or newspaper documents.
- 6 Click **OK**.

More troubleshooting

Refer to the *User's Guide* if you experience any of the following problems:

- Transparencies or glossy photo papers stick together
- Transparencies or photo papers contain white lines
- Document prints slowly
- Document prints poorly
- Auto-cropping of scanned image is unsatisfactory
- Edges of copied documents are cut off
- Copied objects appear in a different location on the page
- Fit to page function is not working properly
- Auto detect is set but not working properly

You receive an error message

Use this section to understand printer software error messages on your computer screen and messages on the display of your printer.

Message:	Go to page:
Paper Jam	49
Cover Open	50
Ink Low	50
Paper Out	51
Unlock Scanner	51
Cartridge Error	51
Other messages	53


Paper Jam message

Your printer has a paper jam. To clear a paper jam:


- 1 Press **Power** to turn the printer off.
- 2 Pull slowly and firmly on the paper to remove it.
- 3 Press **Power** to turn the printer back on.

If you cannot reach the paper because it is too far into the printer:

- 1 Lift the printer (scanner unit), and then pull the paper out.

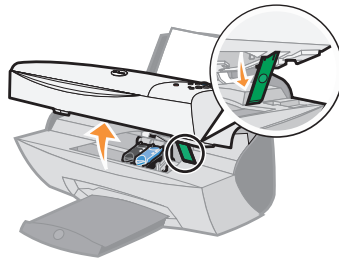

- 2 Lower the printer (scanner unit) to close it.

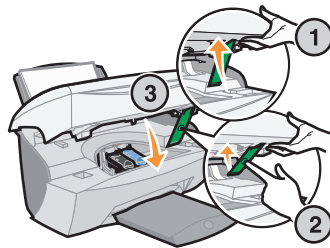


- 3 Press **Power** to turn the printer on, and then send your document to print.

Cover Open message

The Cover Open message displays when the printer (scanner unit) is open.

NOTE: The operator panel buttons do not function while the printer (scanner unit) is open.

Lower the printer (scanner unit).

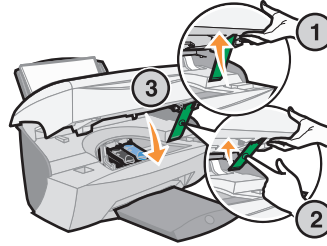

The message disappears, and the operator panel buttons function.

Ink Low message

An ink cartridge is running out of ink. Replace the cartridge in your printer with a new one. For help, see page 37.

- On the operator panel:

An Ink Low message (Color Ink Low, Black Ink Low, or both of these messages) displays when one of your cartridges is 25% full or less.

For help:

- Installing a new cartridge, see page 37.
- Ordering supplies, see page 38.

- On the computer screen:

An Ink Low message appears when one of your cartridges is 25% full or less.

When one of these messages appears, you can:

- Click **OK**.
- Click the **?** to get information about ordering supplies.
- Order a new cartridge or locate a dealer near you from the Dell Web site at support.dell.com.

For help:

- Installing a new cartridge, see page 39.
- Ordering supplies, see page 38.

Paper Out message


Your printer is out of paper.


- 1 Load paper.
- 2 Press **Select**.
- 3 Send your document to print.

Unlock Scanner message

The scanner is locked. To unlock it:

- 1 Press **Power** to turn the printer off.
- 2 Use both hands to lift the printer (scanner unit) until the scanner support holds it open.
To the left and beside the scanner support is the scanner lock. For help, see page iv.
- 3 Pull the scanner lock toward you to unlock the scanner.
- 4 Using both hands, lift the printer (scanner unit).
- 5 Push and hold the scanner support back.
- 6 Lower the printer (scanner unit) until it is completely closed.

 **NOTE:** If your printer has a paper jam, see page 49 for help.

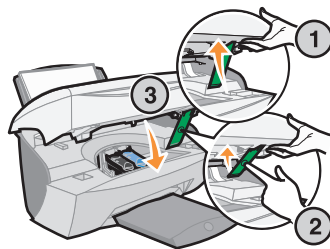

- 7 Press **Power** to turn the printer back on.

Cartridge Error messages


When you get these messages you may need to:

- Install cartridges, see page 37.
- Order cartridges, see page 38.

Check the table below for specific instructions:


Message:	Problem:	Do this:
Black cartridge missing	The black cartridge is not installed.	Install a black cartridge (part number 7Y743).
Color cartridge missing	The color cartridge is not installed.	Install a color cartridge (7Y745).
Cartridge Error	The printer has detected a short circuit in a cartridge.	Complete the following instructions.

- 1 Press **Power** to turn the printer off.
- 2 Use both hands to lift the printer (scanner unit) until the scanner support holds it open.

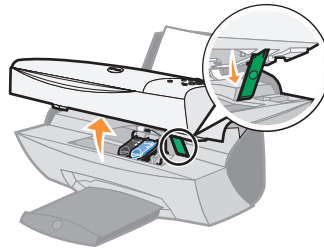

- 3 Turn the printer on.
The ink cartridge carrier moves and stops at the loading position unless the printer is busy.
- 4 Remove the color ink cartridge.

- 5 Lower the printer (scanner unit) until it is completely closed.

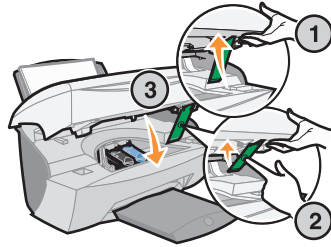

If the error message displays again, replace the black cartridge with a new black cartridge.

If the error message does not display, repeat steps 1–3 and then go to step 6.

- 6 Reinstall the color cartridge and remove the black ink cartridge.
- 7 Lower the printer (scanner unit) until it is completely closed.

If the error message displays again, replace the color cartridge with a new color cartridge.

If there is no error message (indicated by flashing lights), repeat steps 1–3 and then reinstall both ink cartridges.

- 8 Lower the printer (scanner unit) until it is completely closed.

If you get the error message again, while both cartridges are installed, replace both of the cartridges.

Other error messages

- 1 Turn the printer off.
- 2 Wait a few seconds, and then turn the printer back on.
- 3 Send your document to print.

Uninstall and reinstall the printer software

If the printer is not functioning properly or if a communications error message appears when you try to use your printer, you may need to uninstall, and then reinstall the printer software.

- 1 From your desktop, click **Start** → **Programs** → **Dell Printers** → **Dell AIO Printer A940** → **Uninstall Dell A940**.
- 2 Follow the instructions on your computer screen to uninstall the printer software.
- 3 Restart your computer before reinstalling the printer software.
- 4 Insert the Dell AIO Printer A940 CD.
If the CD does not start, click **Install**.
- 5 Follow the instructions on your computer screen to install the software.

Other help sources

If the preceding printer solutions do not solve the problem with your printer:

- Refer to the Dell Printer Solution Center software for more troubleshooting information:
 - a Click **Start** → **Programs** → **Dell Printers** → **Dell AIO Printer A940** → **Dell Solution Center**.
 - b Click the **Troubleshooting** tab on the left side of the screen.
- Go to support.dell.com for help.

SECTION 5

Regulatory Notices

Federal Communications Commission (FCC) compliance information statement

The Dell AIO Printer A940 has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The FCC Class B limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your point of purchase or service representative for additional suggestions.

The manufacturer is not responsible for any radio or television interference caused by using other than recommended cables or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

NOTE: To assure compliance with FCC regulations on electromagnetic interference for a Class B computing device, use a properly shielded and grounded cable. Use of a substitute cable not properly shielded and grounded may result in a violation of FCC regulations.

Any questions regarding this compliance information statement should be directed to:

Dell Products, L.P.
One Dell Way
Round Rock, Texas 78682

Industry Canada compliance statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis de conformité aux normes d'Industrie Canada

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Community (EC) directives conformity

A declaration of conformity with the requirements of the directives has been signed by the Director of Manufacturing and Technical Support, Dell International, S.A., Boigny, France.

This product satisfies the Class B limits of EN 55022 and safety requirements of EN 60950.

The United Kingdom Telecommunications Act 1984

This apparatus is approved under the approval number NS/G/1234/J/100003 for the indirect connections to the public telecommunications systems in the United Kingdom.

Japan VCCI

を目的とした情報処理装置等電波障害
/ C C I) 基準に適合しております。
装置をラジオ、テレビジョン受信機
、受信障害の原因とならずに

ENERGY STAR



The EPA ENERGY STAR Office Equipment program is a partnership effort with office equipment manufacturers to promote the introduction of energy-efficient products and to reduce air pollution caused by power generation.

Companies participating in this program introduce products that power down when they are not being used. This feature will cut the energy used by up to 50 percent. Dell is proud to be a participant in this program.

As an ENERGY STAR Partner, Dell International, Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Copyright advisory

It may be illegal to copy certain materials without permission or license, including documents, images, and currency. If you are not sure whether you have permission, seek legal advice.

SECTION 6

Appendix

Contacting Dell

Limited Warranties and Return Policy

Dell Computer Corporation Ink and Toner Cartridges
Limited Warranties

Dell Software License Agreement

Contacting Dell

To contact Dell electronically, you can access the following websites:

- www.dell.com
- support.dell.com (technical support)
- premiersupport.dell.com (technical support for educational, government, healthcare, and medium/large business customers, including Premier, Platinum, and Gold customers)

For specific web addresses for your country, find the appropriate country section in the table below.

NOTE: Toll-free numbers are for use within the country for which they are listed.

When you need to contact Dell, use the electronic addresses, telephone numbers, and codes provided in the following table. If you need assistance in determining which codes to use, contact a local or an international operator.

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Anguilla	General Support	toll-free: 800-335-0031
Antigua and Barbuda	General Support	1-800-805-5924
Argentina (Buenos Aires)	Website: www.dell.com.ar	
International Access Code: 00	Tech Support and Customer Care	toll-free: 0-800-444-0733
Country Code: 54	Sales	0-810-444-3355
City Code: 11	Tech Support Fax	11 4515 7139
	Customer Care Fax	11 4515 7138
Aruba	General Support	toll-free: 800-1578
Bahamas	General Support	toll-free: 1-866-278-6818
Barbados	General Support	1-800-534-3066

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Belgium (Brussels) International Access Code: 00 Country Code: 32 City Code: 2	Website: support.euro.dell.com E-mail: tech_be@dell.com E-mail for French Speaking Customers: support.euro.dell.com/be/fr/emaildell/ Technical Support Customer Care Corporate Sales Fax Switchboard	02 481 92 88 02 481 91 19 02 481 91 00 02 481 92 99 02 481 91 00
Bolivia	General Support	toll-free: 800-10-0238
Brazil International Access Code: 00 Country Code: 55 City Code: 51	Website: www.dell.com/br Customer Support, Technical Support Tech Support Fax Customer Care Fax Sales	0800 90 3355 51 481 5470 51 481 5480 0800 90 3390
British Virgin Islands	General Support	toll-free: 1-866-278-6820
Canada (North York, Ontario) International Access Code: 011	Online Order Status: www.dell.ca/ostatus AutoTech (automated technical support) TechFax Customer Care (Home Sales/Small Business) Customer Care (med./large business, government) Technical Support (Home Sales/Small Business) Technical Support (med./large bus., government) Sales (Home Sales/Small Business) Sales (med./large bus., government) Spare Parts Sales & Extended Service Sales	toll-free: 1-800-247-9362 toll-free: 1-800-950-1329 toll-free: 1-800-847-4096 toll-free: 1-800-326-9463 toll-free: 1-800-847-4096 toll-free: 1-800-387-5757 toll-free: 1-800-387-5752 toll-free: 1-800-387-5755 1 866 440 3355
Cayman Islands	General Support	1-800-805-7541
Colombia	General Support	980-9-15-3978
Costa Rica	General Support	0800-012-0435

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Denmark (Copenhagen)	Website: support.euro.dell.com	
International Access Code: 00	E-mail Support (portable computers): den_nbk_support@dell.com	
Country Code: 45	E-mail Support (desktop computers): den_support@dell.com	
	E-mail Support (servers): Nordic_server_support@dell.com	
	Technical Support	7023 0182
	Customer Care (Relational)	7023 0184
	Home/Small Business Customer Care	3287 5505
	Switchboard (Relational)	3287 1200
	Fax Switchboard (Relational)	3287 1201
	Switchboard (Home/Small Business)	3287 5000
	Fax Switchboard (Home/Small Business)	3287 5001
Finland (Helsinki)	Website: support.euro.dell.com	
International Access Code: 990	E-mail: fin_support@dell.com	
Country Code: 358	E-mail Support (servers): Nordic_support@dell.com	
City Code: 9	Technical Support	09 253 313 60
	Technical Support Fax	09 253 313 81
	Relational Customer Care	09 253 313 38
	Home/Small Business Customer Care	09 693 791 94
	Fax	09 253 313 99
	Switchboard	09 253 313 00

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
France (Paris) (Montpellier) International Access Code: 00 Country Code: 33 City Codes: (1) (4)	Website: support.euro.dell.com E-mail: support.euro.dell.com/fr/fr/emaildell/ Home and Small Business Technical Support Customer Care Switchboard Switchboard (calls from outside of France) Sales Fax Fax (calls from outside of France) Corporate Technical Support Customer Care Switchboard Sales Fax	 0825 387 270 0825 823 833 0825 004 700 04 99 75 40 00 0825 004 700 0825 004 701 04 99 75 40 01 0825 004 719 0825 338 339 01 55 94 71 00 01 55 94 71 00 01 55 94 71 01
Germany (Langen) International Access Code: 00 Country Code: 49 City Code: 6103	Website: support.euro.dell.com E-mail: tech_support_central_europe@dell.com Technical Support Home/Small Business Customer Care Global Segment Customer Care Preferred Accounts Customer Care Large Accounts Customer Care Public Accounts Customer Care Switchboard	 06103 766-7200 0180-5-224400 06103 766-9570 06103 766-9420 06103 766-9560 06103 766-9555 06103 766-7000

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Greece	Website: support.euro.dell.com	
International Access Code: 00	E-mail: support.euro.dell.com/gr/en/emaildell/	
Country Code: 30	Technical Support	080044149518
	Gold Technical Support	08844140083
	Switchboard	2108129800
	Sales	2108129800
	Fax	2108129812
Grenada	General Support	toll-free: 1-866-540-3355
Guyana	General Support	toll-free: 1-877-270-4609
India	Technical Support	1600 33 8045
	Sales	1600 33 8044
Ireland (Cherrywood)	Website: support.euro.dell.com	
International Access Code: 16	E-mail: dell_direct_support@dell.com	
Country Code: 353	Ireland Technical Support	1850 543 543
City Code: 1	U.K. Technical Support (dial within U.K. only)	0870 908 0800
	Home User Customer Care	01 204 4014
	Small Business Customer Care	01 204 4014
	U.K. Customer Care (dial within U.K. only)	0870 906 0010
	Corporate Customer Care	1850 200 982
	Corporate Customer Care (dial within U.K. only)	0870 907 4499
	Ireland Sales	01 204 4444
	U.K. Sales (dial within U.K. only)	0870 907 4000
	Fax/SalesFax	01 204 0103
	Switchboard	01 204 4444

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Italy (Milan) International Access Code: 00 Country Code: 39 City Code: 02	Website: support.euro.dell.com	
	E-mail: support.euro.dell.com/it/it/emaildell/	
	Home and Small Business	
	Technical Support	02 577 826 90
	Customer Care	02 696 821 14
	Fax	02 696 821 13
	Switchboard	02 696 821 12
	Corporate	
	Technical Support	02 577 826 90
	Customer Care	02 577 825 55
Fax	02 575 035 30	
Switchboard	02 577 821	
Jamaica	General Support (dial from within Jamaica only)	1-800-682-3639
Latin America	Customer Technical Support (Austin, Texas, U.S.A.)	512 728-4093
	Customer Service (Austin, Texas, U.S.A.)	512 728-3619
	Fax (Technical Support and Customer Service) (Austin, Texas, U.S.A.)	512 728-3883
	Sales (Austin, Texas, U.S.A.)	512 728-4397
	SalesFax (Austin, Texas, U.S.A.)	512 728-4600 or 512 728-3772
Luxembourg International Access Code: 00 Country Code: 352	Website: support.euro.dell.com	
	E-mail: tech_be@dell.com	
	Technical Support (Brussels, Belgium)	3420808075
	Home/Small Business Sales (Brussels, Belgium)	toll-free: 080016884
	Corporate Sales (Brussels, Belgium)	02 481 91 00
	Customer Care (Brussels, Belgium)	02 481 91 19
	Fax (Brussels, Belgium)	02 481 92 99
Switchboard (Brussels, Belgium)	02 481 91 00	

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Norway (Lysaker) International Access Code: 00 Country Code: 47	Website: support.euro.dell.com E-mail Support (portable computers): nor_nbk_support@dell.com E-mail Support (desktop computers): nor_support@dell.com E-mail Support (servers): nordic_server_support@dell.com	
	Technical Support	671 16882
	Relational Customer Care	671 17514
	Home/Small Business Customer Care	23162298
	Switchboard	671 16800
	Fax Switchboard	671 16865
Poland (Warsaw) International Access Code: 011 Country Code: 48 City Code: 22	Website: support.euro.dell.com E-mail: pl_support@dell.com	
	Customer Service Phone	57 95 700
	Customer Care	57 95 999
	Sales	57 95 999
	Customer Service Fax	57 95 806
	Reception Desk Fax	57 95 998
	Switchboard	57 95 999
Portugal International Access Code: 00 Country Code: 351	Website: support.euro.dell.com E-mail: support.euro.dell.com/pt/en/emailldell/	
	Technical Support	707200149
	Customer Care	800 300 413
	Sales	800 300 410 or 800 300 411 or 800 300 412 or 21 422 07 10
	Fax	21 424 01 12
Puerto Rico	General Support	1-800-805-7545
St. Kitts and Nevis	General Support	toll-free: 1-877-441-4731
St. Lucia	General Support	1-800-882-1521

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
St. Vincent and the Grenadines	General Support	toll-free: 1-877-270-4609
Singapore (Singapore)	Technical Support	toll-free: 800 6011 051
International Access Code: 005	Customer Service (Penang, Malaysia)	604 633 4949
Country Code: 65	Transaction Sales	toll-free: 800 6011 054
	Corporate Sales	toll-free: 800 6011 053
Spain (Madrid)	Website: support.euro.dell.com	
International Access Code: 00	E-mail: support.euro.dell.com/es/es/emailldell/	
Country Code: 34	Home and Small Business	
City Code: 91	Technical Support	902 100 130
	Customer Care	902 118 540
	Sales	902 118 541
	Switchboard	902 118 541
	Fax	902 118 539
	Corporate	
	Technical Support	902 100 130
	Customer Care	902 118 546
	Switchboard	91 722 92 00
	Fax	91 722 95 83

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Sweden (Upplands Vasby) International Access Code: 00 Country Code: 46 City Code: 8	Website: support.euro.dell.com E-mail: swe_support@dell.com E-mail Support for Latitude and Inspiron: Swe-nbk_kats@dell.com E-mail Support for OptiPlex: Swe_kats@dell.com E-mail Support for Servers: Nordic_server_support@dell.com	
	Technical Support	08 590 05 199
	Relational Customer Care	08 590 05 642
	Home/Small Business Customer Care	08 587 70 527
	Employee Purchase Program (EPP) Support	20 140 14 44
	Fax Technical Support	08 590 05 594
	Sales	08 590 05 185
Switzerland (Geneva) International Access Code: 00 Country Code: 41 City Code: 22	Website: support.euro.dell.com E-mail: swisstech@dell.com E-mail for French-speaking HSB and Corporate Customers: support.euro.dell.com/ch/fr/emaildell/	
	Technical Support (Home and Small Business)	0844 811 411
	Technical Support (Corporate)	0844 822 844
	Customer Care (Home and Small Business)	0848 802 202
	Customer Care (Corporate)	0848 821 721
	Fax	022 799 01 90
	Switchboard	022 799 01 01

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
U.K. (Bracknell)	Website: support.euro.dell.com	
International Access Code: 00	Customer Care website: support.euro.dell.com/uk/en/ECare/Form/Home.asp	
Country Code: 44		
City Code: 1344	E-mail: dell_direct_support@dell.com	
	Technical Support (Corporate/Preferred Accounts/PAD [1000+ employees])	0870 908 0500
	Technical Support (direct/PAD and general)	0870 908 0800
	Global Accounts Customer Care	01344 373 186
	Home and Small Business Customer Care	0870 906 0010
	Corporate Customer Care	01344 373 185
	Preferred Accounts (500–5000 employees) Customer Care	0870 906 0010
	Central Government Customer Care	01344 373 193
	Local Government & Education Customer Care	01344 373 199
	Health Customer Care	01344 373 194
	Home and Small Business Sales	0870 907 4000
	Corporate/Public Sector Sales	01344 860 456

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
U.S.A. (Austin, Texas)	Automated Order-Status Service	toll-free: 1-800-433-9014
International Access Code: 011 Country Code: 1	AutoTech (portable and desktop computers) Consumer (Home and Home Office) Technical Support Customer Service DellNet™ Service and Support	toll-free: 1-800-247-9362 toll-free: 1-800-624-9896 toll-free: 1-800-624-9897 toll-free: 1-877-Dellnet (1-877-335-5638)
	Employee Purchase Program (EPP) Customers Financial Services website: www.dellfinancialservices.com Financial Services (lease/loans) Financial Services (Dell Preferred Accounts [DPA])	toll-free: 1-800-695-8133 toll-free: 1-877-577-3355 toll-free: 1-800-283-2210
	Business Customer Service and Technical Support Employee Purchase Program (EPP) Customers Projectors Technical Support	toll-free: 1-800-822-8965 toll-free: 1-800-695-8133 toll-free: 1-877-459-7298
	Public (government, education, and healthcare) Customer Service and Technical Support Employee Purchase Program (EPP) Customers Dell Sales	toll-free: 1-800-456-3355 toll-free: 1-800-234-1490 toll-free: 1-800-289-3355 or toll-free: 1-800-879-3355
	Dell Outlet Store (Dell refurbished computers) Software and Peripherals Sales Spare Parts Sales Extended Service and Warranty Sales Fax Dell Services for the Deaf, Hard-of-Hearing, or Speech-Impaired	toll-free: 1-888-798-7561 toll-free: 1-800-671-3355 toll-free: 1-800-357-3355 toll-free: 1-800-247-4618 toll-free: 1-800-727-8320 toll-free: 1-877-DELLTTY (1-877-335-5889)
U.S. Virgin Islands	General Support	1-877-673-3355
Venezuela	General Support	8001-3605

Limited Warranties and Return Policy

Dell-branded hardware products purchased in the U.S. or Canada come with either a 90-day, one-year, two-year, three-year, or four-year limited warranty. To determine which warranty came with your hardware product(s), see your packing slip or invoice. The following sections describe the limited warranties and return policy for the U.S., the limited warranties and return policy for Canada, and the manufacturer guarantee for Latin America and the Caribbean.

Limited Warranty for Dell-Branded Hardware Products (U.S. Only)

What is covered by this limited warranty?

This limited warranty covers defects in materials and workmanship in your—our end-user customer's—Dell-branded hardware products, including Dell-branded peripheral products.

What is not covered by this limited warranty?

This limited warranty does not cover:

- Software, including the operating system and software added to the Dell-branded hardware products through our factory-integration system, third-party software, or the reloading of software
- Non-Dell-branded and Solution Provider Direct products and accessories
- Problems that result from:
 - External causes such as accident, abuse, misuse, or problems with electrical power
 - Servicing not authorized by Dell
 - Usage that is not in accordance with product instructions
 - Failure to follow the product instructions or failure to perform preventive maintenance
 - Problems caused by using accessories, parts, or components not supplied by Dell
- Products with missing or altered service tags or serial numbers
- Products for which we have not received payment

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE (OR JURISDICTION TO JURISDICTION). DELL'S RESPONSIBILITY FOR MALFUNCTIONS AND DEFECTS IN HARDWARE IS LIMITED TO REPAIR AND REPLACEMENT AS SET FORTH IN THIS WARRANTY STATEMENT. ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN TIME TO THE TERM OF THE LIMITED WARRANTY PERIOD REFLECTED ON YOUR PACKING SLIP OR INVOICE. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE LIMITED WARRANTY PERIOD HAS EXPIRED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

WE DO NOT ACCEPT LIABILITY BEYOND THE REMEDIES PROVIDED FOR IN THIS LIMITED WARRANTY OR FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LIABILITY FOR THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES, FOR PRODUCTS NOT BEING AVAILABLE FOR USE, OR FOR LOST DATA OR LOST SOFTWARE. OUR LIABILITY WILL BE NO MORE THAN THE AMOUNT YOU PAID FOR THE PRODUCT THAT IS THE SUBJECT OF A CLAIM. THIS IS THE MAXIMUM AMOUNT FOR WHICH WE ARE RESPONSIBLE.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

How long does this limited warranty last?

This limited warranty lasts for the time period indicated on your packing slip or invoice, except that the limited warranty on Dell-branded batteries lasts only one year and the limited warranty on the lamps for Dell-branded projectors lasts only ninety days. The limited warranty begins on the date of the packing slip or invoice. The warranty period is not extended if we repair or replace a warranted product or any parts. Dell may change the availability of limited warranties, at its discretion, but any changes will not be retroactive.

What do I do if I need warranty service?

Before the warranty expires, please call us at the relevant number listed in the following table. Please also have your Dell service tag number or order number available.

Individual Home Consumers:	U.S. Only
Technical Support	1-800-624-9896
Customer Service	1-800-624-9897
Individual Home Consumers who purchased through an Employee Purchase Program:	
Technical Support and Customer Service	1-800-822-8965
Home and Small Business Commercial Customers:	
Technical Support and Customer Service	1-800-456-3355
Medium, Large, or Global Commercial Customers, Healthcare Customers, and Value Added Resellers (VARs):	
Technical Support and Customer Service	1-877-459-7298
Government and Education Customers:	
Technical Support and Customer Service	1-877-459-7298
Dell-Branded Memory	1-888-363-5150

What will Dell do?

During the 90 days of the 90-day limited warranty and the first year of all other limited warranties: During the 90 days of the 90-day limited warranty and the first year of all other limited warranties, we will repair any Dell-branded hardware products returned to us that prove to be defective in materials or workmanship. If we are not able to repair the product, we will replace it with a comparable product that is new or refurbished.

When you contact us, we will issue a Return Material Authorization Number for you to include with your return. You must return the products to us in their original or equivalent packaging, prepay shipping charges, and insure the shipment or accept the risk if the product is lost or damaged in shipment. We will return the repaired or replacement products to you. We will pay to ship the repaired or replaced products to you if you use an address in the United States (excluding Puerto Rico and U.S. possessions and territories). Otherwise, we will ship the product to you freight collect.

If we determine that the product is not covered under this warranty, we will notify you and inform you of service alternatives that are available to you on a fee basis.

NOTE: Before you ship the product(s) to us, make sure to back up the data on the hard drive(s) and any other storage device(s) in the product(s). Remove any confidential, proprietary, or personal information and removable media such as floppy disks, CDs, or PC Cards. We are not responsible for any of your confidential, proprietary, or personal information; lost or corrupted data; or damaged or lost removable media.

During the remaining years: For the remaining period of the limited warranty, we will replace any defective part with new or refurbished parts, if we agree that it needs to be replaced. When you contact us, we will require a valid credit card number at the time you request a replacement part, but we will not charge you for the replacement part as long as you return the original part to us within thirty days after we ship the replacement part to you. If we do not receive the original part within thirty days, we will charge to your credit card the then-current standard price for that part.

We will pay to ship the part to you if you use an address in the United States (excluding Puerto Rico and U.S. possessions and territories). Otherwise, we will ship the part freight collect. We will also include a prepaid shipping container with each replacement part for your use in returning the replaced part to us.

NOTE: Before you replace parts, make sure to back up the data on the hard drive(s) and any other storage device(s) in the product(s). We are not responsible for lost or corrupted data.

What if I purchased a service contract?

If your service contract is with Dell, service will be provided to you under the terms of the service agreement. Please refer to that contract for details on how to obtain service.

If you purchased through us a service contract with one of our third-party service providers, please refer to that contract for details on how to obtain service.

How will you fix my product?

We use new and refurbished parts made by various manufacturers in performing warranty repairs and in building replacement parts and systems. Refurbished parts and systems are parts or systems that have been returned to Dell, some of which were never used by a customer. All parts and systems are inspected and tested for quality. Replacement parts and systems are covered for the remaining period of the limited warranty for the product you bought. Dell owns all parts removed from repaired products.

What do I do if I am not satisfied?

We pride ourselves on our great customer service. If you are not satisfied with the service you receive under this limited warranty, please let us know. We have found that the best way to resolve issues regarding our limited warranty is to work together. If, after those discussions, you are still not satisfied, we believe arbitration is the most expeditious way to resolve your concerns. Therefore, **ANY CLAIM, DISPUTE, OR CONTROVERSY (WHETHER IN CONTRACT, TORT, OR OTHERWISE, WHETHER PREEXISTING, PRESENT, OR FUTURE, AND INCLUDING STATUTORY, COMMON LAW, INTENTIONAL TORT, AND EQUITABLE CLAIMS) AGAINST DELL** arising from or relating to this limited warranty, its interpretation, or the breach, termination, or validity thereof, the relationships which result from this limited warranty (including, to the full extent permitted by applicable law, relationships with third parties), Dell's advertising, or any related purchase **SHALL BE RESOLVED EXCLUSIVELY AND FINALLY BY BINDING ARBITRATION ADMINISTERED BY THE NATIONAL ARBITRATION FORUM (NAF)** under its Code of Procedure then in effect (available via the Internet at www.arb-forum.com/ or via telephone at 1-800-474-2371). The arbitration will be limited solely to the dispute or controversy between you and Dell. Any award of the arbitrator(s) shall be final and binding on each of the parties, and may be entered as a judgment in any court of competent jurisdiction. Information may be obtained and claims may be filed with the NAF at P.O. Box 50191, Minneapolis, MN 55405. This provision applies only to individual home consumers and consumers who purchased through an employee purchase program. It does not apply to small, medium, large, and global commercial customers or government, education, and healthcare customers.

May I transfer the limited warranty?

Limited warranties on systems may be transferred if the current owner transfers ownership of the system and records the transfer with us. The limited warranty on Dell-branded memory may not be transferred. You may record your transfer by going to Dell's website:

- If you are an Individual Home Consumer, go to www.dell.com/us/en/dhs/topics/sbtopic_015_ccare.htm
- If you are a Home Office, Small, Medium, Large, or Global Commercial Customer, go to www.dell.com/us/en/biz/topics/sbtopic_ccare_nav_015_ccare.htm
- If you are a Government, Education, or Healthcare Customer, or an Individual Home Consumer who purchased through an employee purchase program, go to www.dell.com/us/en/pub/topics/sbtopic_015_ccare.htm

If you do not have Internet access, call your customer care representative or call 1-800-624-9897.

"Total Satisfaction" Return Policy (U.S. Only)

We value our relationship with you and want to make sure that you're satisfied with your purchases. That's why we offer a "Total Satisfaction" return policy for most products that you—the end-user customer—purchase directly from Dell. Under this policy, you may return to Dell products that you purchased directly from Dell for a credit or a refund of the purchase price paid, less shipping and handling and applicable restocking fees as follows:

- **New Hardware Products and Accessories** — All new hardware, accessories, parts, and unopened software still in its sealed package, excluding the products listed below, may be returned within thirty days from the date on the packing slip or invoice. To return applications software or an operating system that has been installed by Dell, you must return the entire computer. A different return policy applies to nondefective products purchased through Dell's Software and Peripherals division by customers of our Small and Medium Business divisions. Those products may be returned within thirty days from the date on the packing slip or invoice, but a fifteen percent (15%) restocking fee will be deducted from any refund or credit. The "Total Satisfaction" Return Policy and Software and Peripherals division return policy are not available for Dell | EMC storage products, EMC-branded products, or enterprise software.
- **Reconditioned or Refurbished Dell-Branded Hardware Products and Parts** — All reconditioned or refurbished Dell-branded server and storage products may be returned within thirty days from the date on the packing slip or invoice. All other reconditioned or refurbished Dell-branded hardware products and parts may be returned within fourteen days of the date on the packing slip or invoice.

To return products, e-mail or call Dell customer service to receive a Credit Return Authorization Number within the return policy period applicable to the product you want to return. You must obtain a Credit Return Authorization Number in order to return the product. See "Contacting Dell" or "Getting Help" in your customer documentation (or www.dell.com/us/en/gen/contact.htm) to find the appropriate contact information for obtaining customer assistance.

You must ship the products to Dell within five days of the date that Dell issues the Credit Return Authorization Number. You must also return the products to Dell in their original packaging, in as-new condition along with any media, documentation, and all other items that were included in the original shipment, prepaid shipping charges, and insure the shipment or accept the risk of loss or damage during shipment.

Limited Warranty Terms for Dell-Branded Hardware Products (Canada Only)

What is covered by this limited warranty?

This limited warranty covers defects in materials and workmanship in your—our end-user customer's—Dell-branded hardware products, including Dell-branded peripheral products.

What is not covered by this limited warranty?

This limited warranty does not cover:

- Software, including the operating system and software added to the Dell-branded hardware products through our factory-integration system, or the reloading of the software
- Non-Dell branded and Solution Provider Direct products and accessories
- Problems that result from:
 - External causes such as accident, abuse, misuse, or problems with electrical power
 - Servicing not authorized by Dell
 - Usage that is not in accordance with product instructions
 - Failure to follow the product instructions or failure to perform preventive maintenance
 - Problems caused by using accessories, parts, or components not supplied by Dell
- Products with missing or altered service tags or serial numbers
- Products for which we have not received payment

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM PROVINCE TO PROVINCE. DELL'S RESPONSIBILITY FOR MALFUNCTIONS AND DEFECTS IN PRODUCT IS LIMITED TO REPAIR AND REPLACEMENT AS SET FORTH IN THIS WARRANTY STATEMENT, FOR THE TERM OF THE WARRANTY PERIOD REFLECTED ON YOUR PACKING SLIP OR INVOICE. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS WARRANTY STATEMENT, DELL DISCLAIMS ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. SOME PROVINCES DO NOT ALLOW THE EXCLUSION OF CERTAIN IMPLIED WARRANTIES OR CONDITIONS, OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION LASTS. THEREFORE, THE FOREGOING EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

WE DO NOT ACCEPT LIABILITY BEYOND THE REMEDIES PROVIDED FOR IN THIS WARRANTY STATEMENT OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LIABILITY FOR THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES, FOR PRODUCTS NOT BEING AVAILABLE FOR USE, OR FOR LOST DATA OR LOST SOFTWARE. OUR LIABILITY WILL BE NO MORE THAN THE AMOUNT YOU PAID FOR THE PRODUCT THAT IS THE SUBJECT OF A CLAIM. THIS IS THE MAXIMUM AMOUNT FOR WHICH WE ARE RESPONSIBLE.

SOME PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

How long does this limited warranty last?

This limited warranty lasts for the time period indicated on your packing slip or invoice, except that the limited warranty on Dell-branded batteries lasts only one year and the limited warranty on the lamps for Dell-branded projectors lasts only ninety days. The limited warranty begins on the date of the packing slip or invoice. The warranty period is not extended if we repair or replace a warranted product or any parts. Dell may change the terms and availability of limited warranties, at its discretion, but any changes will not be retroactive (that is, the warranty terms in place at the time of purchase will apply to your purchase).

What do I do if I need warranty service?

Before the warranty expires, please call us at the relevant number listed in the following table. Please also have your Dell service tag number or order number available.

Individual Home Consumers; Home Office and Small Business Customers:	Canada Only
Technical Support and Customer Service	1-800-847-4096
Medium, Large, and Global Commercial Customers; Government, Education, and Healthcare Customers; and Value Added Resellers (VARs):	
Technical Support	1-800-387-5757
Customer Service	1-800-326-9463
Government or Education Customers, or Individual Home Consumers who purchased through an Employee Purchase Program:	
Technical Support	1-800-387-5757
Customer Service	1-800-326-9463 (Extension 8221 for Individual Consumers)
Dell-Branded Memory	1-888-363-5150

What will Dell do?

During the 90 days of the 90-day limited warranty and the first year of all other limited warranties: During the 90 days of the 90-day limited warranty and the first year of all other limited warranties, we will repair any Dell-branded hardware products returned to us that prove to be defective in materials or workmanship. If we are not able to repair the product, we will replace it with a comparable product that is new or refurbished.

When you contact us, we will issue a Return Material Authorization Number for you to include with your return. You must return the products to us in their original or equivalent packaging, prepay shipping charges, and insure the shipment or accept the risk if the product is lost or damaged in shipment. We will return the repaired or replacement products to you. We will pay to ship the repaired or replaced products to you if you use an address in Canada. Otherwise, we will ship the product to you freight collect.

If we determine that the problem is not covered under this warranty, we will notify you and inform you of service alternatives that are available to you on a fee basis.

NOTE: Before you ship the product(s) to us, make sure to back up the data on the hard drive(s) and any other storage device(s) in the product(s). Remove any confidential, proprietary or personal information, removable media, such as floppy disks, CDs, or PC Cards. We are not responsible for any of your confidential, proprietary or personal information; lost or corrupted data; or damaged or lost removable media.

During the remaining years following the first year of all limited warranties: We will replace any defective part with new or refurbished parts, if we agree that it needs to be replaced. When you contact us, we will require a valid credit card number at the time you request a replacement part, but we will not charge you for the replacement part as long as you return the original part to us within thirty days after we ship the replacement part to you. If we do not receive the original part within thirty days, we will charge to your credit card the then-current standard price for that part.

We will pay to ship the part to you if you use an address in Canada. Otherwise, we will ship the part freight collect. We will also include a prepaid shipping container with each replacement part for your use in returning the replaced part to us.

NOTE: Before you replace parts, make sure to back up the data on the hard drive(s) and any other storage device(s) in the product(s). We are not responsible for lost or corrupted data.

What if I purchased a service contract?

If your service contract is with Dell, service will be provided to you under the terms of the service contract. Please refer to that contract for details on how to obtain service. Dell's service contracts can be found online at www.dell.ca or by calling Customer Care at 1-800-847-4096. If you purchased through us a service contract with one of our third-party service providers, please refer to that contract (mailed to you with your packing slip or invoice) for details on how to obtain service.

How will you fix my product?

We use new and refurbished parts made by various manufacturers in performing warranty repairs and in building replacement parts and systems. Refurbished parts and systems are parts or systems that have been returned to Dell, some of which were never used by a customer. All parts and systems are inspected and tested for quality. Replacement parts and systems are covered for the remaining period of the limited warranty for the product you bought. Dell owns all parts removed from repaired products.

What do I do if I am not satisfied?

We pride ourselves on our great customer service. If you are not satisfied with the service you receive under this limited warranty, please let us know. We have found that the best way to resolve issues regarding our limited warranty is to work together. If, after those discussions, you are still not satisfied, we believe arbitration is the most expeditious way to resolve your concerns. Therefore, **ANY CLAIM, DISPUTE, OR CONTROVERSY (WHETHER IN CONTRACT, TORT, OR OTHERWISE, WHETHER PREEXISTING, PRESENT OR FUTURE, AND INCLUDING STATUTORY, COMMON LAW, INTENTIONAL TORT, AND EQUITABLE CLAIMS) AGAINST DELL** arising from or relating to this limited warranty, its interpretation, or the breach, termination or validity thereof, the relationships which result from this limited warranty (including, to the full extent permitted by applicable law, relationships with third parties), Dell's advertising, or any related purchase **SHALL BE RESOLVED EXCLUSIVELY AND FINALLY BY BINDING ARBITRATION ADMINISTERED BY THE NATIONAL ARBITRATION FORUM (NAF)** under its Code of Procedure then in effect (available via the Internet at www.arb-forum.com/, or via telephone at 1-800-474-2371). The arbitration will be limited solely to the dispute or controversy between you and Dell. Any award of the arbitrator(s) shall be final and binding on each of the parties, and may be entered as a judgment in any court of competent jurisdiction. Information may be obtained and claims may be filed with the NAF at P.O. Box 50191, Minneapolis, MN 55405.

May I transfer the limited warranty?

Limited warranties on systems may be transferred if the current owner transfers ownership of the system and records the transfer with us. The limited warranty on Dell-branded memory may not be transferred. You may record your transfer by going to Dell's website:

- For Canada-purchased computers (in-country transfers) and to transfer from one customer to another, go to www.dell.ca/ca/en/gen/topics/segtopic_ccare_nav_013_ccare.htm
- For out-of-country transfers (outside of the original country of purchase), go to www.dell.com/us/en/biz/topics/sbtopic_ccare_nav_016_ccare.htm

If you do not have Internet access, call Dell at 1-800-847-4096 (Home Consumer customers) or 1-800-326-9463 (Corporate Commercial or Government customers).

"Total Satisfaction" Return Policy (Canada Only)

If you are an end-user customer who bought new products directly from Dell, you may return them to Dell up to 30 days after you receive them for a refund or credit of the product purchase price. If you are an end-user customer who bought reconditioned or refurbished products from Dell, you may return them to Dell within 14 days after the date on the packing slip or invoice for a refund or credit of the product purchase price. In either case, the refund or credit will not include any shipping and handling charges shown on your packing slip or invoice and will be subject to a fifteen percent (15%) restocking fee, unless otherwise prohibited by law. If you are an organization that bought the products under a written agreement with Dell, the agreement may contain different terms for the return of products than specified by this policy.

To return products, you must call Dell Customer Service at 1-800-847-4096 to receive a Credit Return Authorization Number. To expedite the process of your refund or credit, Dell expects you to return the products to Dell in their original packaging within five days of the date that Dell issues the Credit Return Authorization Number. You must also prepay shipping charges and insure the shipment or accept the risk of loss or damage during shipment. You may return software for a refund or credit only if the sealed package containing the floppy disk(s) or CD(s) is unopened. Returned products must be in as-new condition, and all of the manuals, floppy disk(s), CD(s), power cables, and other items included with a product must be returned with it. For customers who want to return, for refund or credit only, either application or operating system software that has been installed by Dell, the whole system must be returned, along with any media and documentation that may have been included in the original shipment.

The "Total Satisfaction" Return Policy does not apply to Dell | EMC storage products. It also does not apply to products purchased through Dell's Software and Peripherals division. For those products, please instead refer to Dell's Software and Peripheral's then-current return policy (see the following section, "Dell Software and Peripherals (Canada Only)").

Dell Software and Peripherals (Canada Only)

Third-Party Software and Peripherals Products

Similar to other resellers of software and peripherals, Dell does not warrant third-party products. Third-party software and peripheral products are covered by the warranties provided by the original manufacturer or publisher only. Third-party manufacturer warranties vary from product to product. Consult your product documentation for specific warranty information. More information may also be available from the manufacturer or publisher.

While Dell offers a wide selection of software and peripheral products, we do not specifically test or guarantee that all of the products we offer work with any or all of the various models of Dell computers, nor do we test or guarantee all of the products we sell on the hundreds of different brands of computers available today. If you have questions about compatibility, we recommend and encourage you to contact the third-party software and peripheral product manufacturer or publisher directly.

Dell-Branded Peripheral Products

Dell does provide a limited warranty for new Dell-branded peripheral products (products for which Dell is listed as the manufacturer) such as monitors, batteries, memory, docking stations, and projectors). To determine which limited warranty applies to the product you purchased, see the Dell packing slip or invoice and/or the product documentation that accompanied your product. Descriptions of Dell's limited warranties are described in preceding sections.

Return Policy

If you are an end-user customer who bought Dell Software and Peripherals products directly from a Dell company, you may return Dell Software and Peripherals products that are in as-new condition to Dell up to 30 days from the date on the packing slip or invoice for a refund of the product purchase price if already paid. This refund will not include any shipping and handling charges shown on your packing slip or invoice; you are responsible for those.

To return products, you must call Dell Customer Service at 1-800-387-5759 to receive a Credit Return Authorization Number. You must ship the Dell Software and Peripherals products back to Dell in their original manufacturer's packaging (which must be in as-new condition), prepay shipping charges, and insure the shipment or accept the risk of loss or damage during shipment.

To qualify for refund or replacement, returned products must be in as-new condition, software products must be unopened, and all of the manuals, floppy disk(s), CD(s), power cables, and other items included with a product must be returned with it.

One-Year End-User Manufacturer Guarantee (Latin America and the Caribbean Only)

Guarantee

Dell Computer Corporation ("Dell") warrants to the end user in accordance with the following provisions that its branded hardware products, purchased by the end user from a Dell company or an authorized Dell distributor in Latin America or the Caribbean, will be free from defects in materials, workmanship, and design affecting normal use, for a period of one year from the original purchase date. Products for which proper claims are made will, at Dell's option, be repaired or replaced at Dell's expense. Dell owns all parts removed from repaired products. Dell uses new and reconditioned parts made by various manufacturers in performing repairs and building replacement products.

Exclusions

This Guarantee does not apply to defects resulting from: improper or inadequate installation, use, or maintenance; actions or modifications by unauthorized third parties or the end user; accidental or willful damage; or normal wear and tear.

Making a Claim

Claims must be made in Latin America or the Caribbean by contacting the Dell point of sale within the guarantee period. The end user must always supply proof of purchase, indicating name and address of the seller, date of purchase, model and serial number, name and address of the customer, and details of symptoms and configuration at the time of malfunction, including peripherals and software used. Otherwise, Dell may refuse the guarantee claim. Upon diagnosis of a warranted defect, Dell will make arrangements and pay for ground freight and insurance to and from Dell's repair/replacement center. The end user must ensure that the defective product is available for collection properly packed in original or equally protective packaging together with the details listed above and the return number provided to the end user by Dell.

Limitation and Statutory Rights

Dell makes no other warranty, guarantee or like statement other than as explicitly stated above, and this Guarantee is given in place of all other guarantees whatsoever, to the fullest extent permitted by law. In the absence of applicable legislation, this Guarantee will be the end user's sole and exclusive remedy against Dell or any of its affiliates, and neither Dell nor any of its affiliates shall be liable for loss of profit or contracts, or any other indirect or consequential loss arising from negligence, breach of contract, or howsoever.

This Guarantee does not impair or affect mandatory statutory rights of the end user against and/or any rights resulting from other contracts concluded by the end user with Dell and/or any other seller.

Dell World Trade LP

One Dell Way, Round Rock, TX 78682, USA

Dell Computadores do Brasil Ltda (CNPJ No. 72.381.189/0001-10)/

Dell Commercial do Brasil Ltda (CNPJ No. 03 405 822/0001-40)

Avenida Industrial Belgraf, 400

92990-000 - Eldorado do Sul – RS - Brasil

Dell Computer de Chile Ltda

Coyancura 2283, Piso 3- Of.302,

Providencia, Santiago - Chile

Dell Computer de Colombia Corporation

Carrera 7 #115-33 Oficina 603

Bogota, Colombia

Dell Computer de Mexico SA de CV

Paseo de la Reforma 2620 - 11° Piso

Col. Lomas Altas

11950 México, D.F.

Dell Computer Corporation Ink and Toner Cartridges Limited Warranties

The following sections describe the limited warranty for ink and toner cartridges for the U.S., Canada, and Latin America. Refer to the appropriate limited warranty accordingly.

Ink and Toner Cartridges Limited Warranty (U.S. and Canada Only)

Dell Computer Corporation warrants to the original purchaser of genuine Dell-branded toner cartridges that they will be free from defects in material and workmanship for the life of the cartridge and that for genuine Dell-branded ink cartridges they will be free from defects in material and workmanship for two years beginning on the date of invoice. If this product proves defective in either material or workmanship, it will be replaced without charge during the limited warranty period if returned to Dell. You must first call our toll-free number to get your return authorization. In the U.S., call 1-800-822-8965; in Canada, call 1-800-387-5757. If we are not able to replace the product because it has been discontinued or is not available, we will either replace it with a comparable product or reimburse you for the cartridge purchase cost, at Dell's sole option. This limited warranty does not apply to ink or toner cartridges that have been refilled or improperly stored or due to problems resulting from misuse, abuse, accident, neglect, mishandling, incorrect environments, or wear from ordinary use.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE (OR JURISDICTION TO JURISDICTION). DELL'S RESPONSIBILITY FOR MALFUNCTIONS AND DEFECTS IN HARDWARE IS LIMITED TO REPLACEMENT AS SET FORTH IN THIS WARRANTY STATEMENT. FOR CANADIAN CUSTOMERS, EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS WARRANTY STATEMENT, DELL DISCLAIMS ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, FOR THE PRODUCT. FOR U.S. CUSTOMERS, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN TIME TO THE TERM OF THIS LIMITED WARRANTY. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE LIMITED WARRANTY PERIOD HAS EXPIRED. SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF CERTAIN IMPLIED WARRANTIES OR CONDITIONS, OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY COVERAGE TERMINATES IF YOU SELL OR OTHERWISE TRANSFER THIS PRODUCT TO ANOTHER PARTY.

DELL DOES NOT ACCEPT LIABILITY BEYOND THE REMEDIES PROVIDED FOR IN THIS LIMITED WARRANTY OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LIABILITY FOR THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES, FOR PRODUCTS NOT BEING AVAILABLE FOR USE, OR FOR LOST DATA OR LOST SOFTWARE. DELL'S LIABILITY WILL BE NO MORE THAN THE AMOUNT YOU PAID FOR THE PRODUCT THAT IS THE SUBJECT OF A CLAIM. THIS IS THE MAXIMUM AMOUNT FOR WHICH DELL IS RESPONSIBLE.

SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Ink and Toner Cartridges Limited Warranty (Latin America Only)

Dell Computer Corporation warrants to the original purchaser of genuine Dell-branded toner cartridges that the cartridges will be free from defects resulting from material or manufacturing process for the life of the cartridge. For the original purchaser of genuine Dell-branded ink cartridges, Dell warrants that the cartridges will be free from defects resulting from material or manufacturing process for one year beginning from the date of delivery.

If this product presents defects resulting from either material or manufacturing process, it will be replaced without charge during the limited warranty period if returned to Dell.

In order to obtain the necessary information to enable the replacement, call the appropriate toll-free number. In Mexico, call 001-877-533-6230; in Puerto Rico, call 1-877-839-5123. In cases in which either the production of the cartridge has been discontinued or the cartridge is not available, Dell reserves the right, at its sole discretion, to choose between replacing it by a similar product or reimbursing you for the purchase cost.

This limited warranty does not apply to ink or toner cartridges that have been refilled or to defects resulting from misuse, abuse, accident, negligence, mishandling, improper storage or exposure to inappropriate environments.

Dell's liability for the malfunction or defect of hardware after the period of the legal warranty (and specifically the period of the legal warranty of defective products stated in the consumer protections rules), is limited to either the substitution of the product or the reimbursement as stated above. This warranty coverage terminates if you sell or otherwise transfer this product to a third party.

Dell does not accept any additional liability for patrimonial, emotional or any other kind of damage caused to the consumer and/or to a third party, which exceeds the established liability either in this limited warranty or in legal rules that may apply.

Dell Software License Agreement

This is a legal agreement between you, the user, and Dell Products, L.P. ("Dell"). This agreement covers all software that is distributed with the Dell product, for which there is no separate license agreement between you and the manufacturer or owner of the software (collectively the "Software"). By opening or breaking the seal on the Software packet(s), installing or downloading the Software, or using the Software that has been preloaded or is embedded in your computer, you agree to be bound by the terms of this agreement. If you do not agree to these terms, promptly return all Software items (disks, written materials, and packaging) and delete any preloaded or embedded Software.

You may use one copy of the Software on only one computer at a time. If you have multiple licenses for the Software, you may use as many copies at any time as you have licenses. "Use" means loading the Software in temporary memory or permanent storage on the computer. Installation on a network server solely for distribution to other computers is not "use" if (but only if) you have a separate license for each computer to which the Software is distributed. You must ensure that the number of persons using the Software installed on a network server does not exceed the number of licenses that you have. If the number of users of Software installed on a network server will exceed the number of licenses, you must purchase additional licenses until the number of licenses equals the number of users before allowing additional users to use the Software. If you are a commercial customer of Dell or a Dell affiliate, you hereby grant Dell, or an agent selected by Dell, the right to perform an audit of your use of the Software during normal business hours, you agree to cooperate with Dell in such audit, and you agree to provide Dell with all records reasonably related to your use of the Software. The audit will be limited to verification of your compliance with the terms of this agreement.

The Software is protected by United States copyright laws and international treaties. You may make one copy of the Software solely for backup or archival purposes or transfer it to a single hard disk provided you keep the original solely for backup or archival purposes. You may not rent or lease the Software or copy the written materials accompanying the Software, but you may transfer the Software and all accompanying materials on a permanent basis if you retain no copies and the recipient agrees to the terms hereof. Any transfer must include the most recent update and all prior versions. You may not reverse engineer, decompile or disassemble the Software. If the package accompanying your computer contains compact discs, 3.5" and/or 5.25" disks, you may use only the disks appropriate for your computer. You may not use the disks on another computer or network, or loan, rent, lease, or transfer them to another user except as permitted by this agreement.

Limited Warranty

Dell warrants that the Software disks will be free from defects in materials and workmanship under normal use for ninety (90) days from the date you receive them. This warranty is limited to you and is not transferable. Any implied warranties are limited to ninety (90) days from the date you receive the Software. Some jurisdictions do not allow limits on the duration of an implied warranty, so this limitation may not apply to you. The entire liability of Dell and its suppliers, and your exclusive remedy, shall be (a) return of the price paid for the Software or (b) replacement of any disk not meeting this warranty that is sent with a return authorization number to Dell, at your cost and risk. This limited warranty is void if any disk damage has resulted from accident, abuse, misapplication, or service or modification by someone other than Dell. Any replacement disk is warranted for the remaining original warranty period or thirty (30) days, whichever is longer.

Dell does NOT warrant that the functions of the Software will meet your requirements or that operation of the Software will be uninterrupted or error free. You assume responsibility for selecting the Software to achieve your intended results and for the use and results obtained from the Software.

DELL, ON BEHALF OF ITSELF AND ITS SUPPLIERS, DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, FOR THE SOFTWARE AND ALL ACCOMPANYING WRITTEN MATERIALS. This limited warranty gives you specific legal rights; you may have others, which vary from jurisdiction to jurisdiction.

IN NO EVENT SHALL DELL OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS) ARISING OUT OF USE OR INABILITY TO USE THE SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Because some jurisdictions do not allow an exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to you.

U.S. Government Restricted Rights

The software and documentation are "commercial items" as that term is defined at 48 C.F.R. 2.101, consisting of "commercial computer software" and "commercial computer software documentation" as such terms are used in 48 C.F.R. 12.212. Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4, all U.S. Government end users acquire the software and documentation with only those rights set forth herein. Contractor/manufacture is Dell Products, L.P., One Dell Way, Round Rock, Texas 78682.

General

This license is effective until terminated. It will terminate upon the conditions set forth above or if you fail to comply with any of its terms. Upon termination, you agree that the Software and accompanying materials, and all copies thereof, will be destroyed. This agreement is governed by the laws of the State of Texas. Each provision of this agreement is severable. If a provision is found to be unenforceable, this finding does not affect the enforceability of the remaining provisions, terms, or conditions of this agreement. This agreement is binding on successors and assigns. Dell agrees and you agree to waive, to the maximum extent permitted by law, any right to a jury trial with respect to the Software or this agreement. Because this waiver may not be effective in some jurisdictions, this waiver may not apply to you. You acknowledge that you have read this agreement, that you understand it, that you agree to be bound by its terms, and that this is the complete and exclusive statement of the agreement between you and Dell regarding the Software.

Index

Symbols

-, 4

+, 4

A

aligning ink cartridges, 41

All-In-One Center, 7

B

banner paper, 15

loading, 22

printing, 22

black copy, 4

black ink cartridge

part number, 39

buttons, operator panel, 3

Black, 4

Cancel, 4

Color, 4

Copy Photo, 4

Copy Quality, 4

Fax, 4

left arrow, 4

Number of Copies, 4

Options, 4

Photo Options, 4

Power, 4

Reduce/Enlarge, 4

right arrow, 4

Scan, 4

Select, 4

Select Software, 4

C

Cancel, 4

cards

loading, 15

Cartridge Error, 51

cartridges

aligning, 41

cleaning, 42

installing, 37

ordering, 38

part numbers, 39

removing, 40

replacing, 37, 39

cleaning ink cartridge nozzles

using operator panel, 42

using the Dell Printer Solution
Center, 42

cleaning, ink cartridge

nozzles, 42

color copy, 4

color ink cartridge

part number, 39

Copy Photo, 4

Copy Quality, 4

copying, 24

operator panel, 24

Cover Open, 50

creating projects

banner, 22

color copies, 25

iron-on transfers, 23

mirror images, 23

optical character

recognition, 28

personalize fabric, 23

posters, 20

repeated images, 20

scan a photograph to
e-mail, 27

custom size paper

loading, 15

D

Dell All-In-One Center, 7

Dell Photo Editor, 9

Dell Printer Solution

Center, 10

Dell Printer Solution Center

tabs

Advanced, 11

- Contact Information, 11
- How To, 10
- Maintenance, 11
- Troubleshooting, 10
- using, 10

display, v

E

- edit document text (OCR), 28
- envelopes
 - loading, 15
- error messages
 - Cartridge Error, 51
 - Cover Open, 50
 - Ink Low, 50
 - other, 53
 - Paper Jam, 49
 - Paper Out, 51
 - Unlock Scanner, 51

F

- Fax, 4
- faxing, 30

G

- glossy paper
 - loading, 15
- greeting cards
 - loading, 15

I

- improving print quality, 46
- index cards
 - loading, 15
- ink cartridges
 - aligning, 41
 - cleaning, 42
 - installing, 37
 - ordering, 38
 - removing, 40
 - replacing, 37, 39

Ink Low, 50

- installing
 - ink cartridges, 37

- iron-on transfers
 - loading, 15

L

- left arrow, 4

- light
 - Power, 3

- loading
 - banner paper, 22
 - cards, 15
 - custom size paper, 15
 - envelopes, 15
 - greeting cards, 15
 - index cards, 15
 - iron-on transfers, 15
 - photo cards, 15
 - photo paper, 15
 - postcards, 15
 - specialty paper, 16
 - transparencies, 15

M

- maintenance, 37
- menu headings, 5
- messages, error
 - Cartridge, 51
 - Cover Open, 50
 - Ink Low, 50
 - other, 53
 - Paper Jam, 49
 - Paper Out, 51
 - Unlock Scanner, 51
- mirror images, 23
- multiple images, 20

N

- notices, 55
- Number of Copies, 4

O

- operator panel, v
 - copying with, 24
 - scanning with, 24
 - using, 3
- Optical Character Recognition (OCR), 28
- Options, 4
- ordering supplies, 38

P

- paper
 - banner, 15

- card stock, 15
- cards, 15
- custom size, 15
- envelopes, 15
- iron-on transfers, 15
- labels, 15
- loading specialty, 16
- photo, 15
- plain, 15
- transparencies, 15
- paper exit tray, v
- paper guide, v
- Paper Jam message, 49
- paper jam, clearing, 49
- paper support, v
- paper type sensor, 11
- part number
 - black ink cartridge, 39
 - color ink cartridge, 39
- parts, iv
- photo cards
 - loading, 15
- Photo Editor, 9
- Photo Options, 4
- photo paper
 - loading, 15
- postcards
 - loading, 15
- Power, 4
- Power light, 3
- Print Properties, 8
- print quality,
 - troubleshooting, 46

- printer (scanner unit), v
- printer software
 - installing, 54
 - uninstalling, 54
- printing
 - banner, 22
 - iron-on transfers, 23
 - mirror images, 23
 - posters, 20
 - repeated images, 20
- projects
 - banner, 22
 - color copies, 25
 - mirror images and iron-on transfers, 23
 - Optical Character Recognition (OCR), 28
 - personalizing fabric, 23
 - poster, 20
 - repeating images, 20
 - scanning a photograph to e-mail, 27
 - scanning multiple pages or images, 28

R

- Reduce/Enlarge, 4
- removing ink cartridges, 40
- repeating images, 20
- right arrow, 4

S

- safety information, viii
- Scan, 4

- scanner lid, v
- scanner lock, v
- scanner support, v
- scanning, 24
 - operator panel, 26
 - placing document, 17
 - software, 29
- scanning multiple images, 28
- Select, 4
- setup, 2
- software, 7
 - Dell All-In-One Center, 7
 - Dell Photo Editor, 9
 - Dell Printer Solution Center, 10
 - Print Properties, 8
- specialty paper
 - loading, 16
- specialty papers
 - banner, 15
 - cards, 15
 - custom size paper, 15
 - envelopes, 15
 - greeting cards, 15
 - index cards, 15
 - iron-on transfers, 15
 - photo cards, 15
 - photo paper, 15
 - postcards, 15
 - transparencies, 15
- supplies, ordering, 38

T

- top cover, v

- transparencies
 - loading, 15
- troubleshooting, 43
 - Cartridge Error, 51
 - general, 44
 - out of paper, 51
 - Paper Jam, 49
 - print quality, 46
 - setup, 44

U

- uninstalling printer
 - software, 54
- Unlock Scanner, 51
- using Print Properties, 8

W

- warranty, 72