

ASSEMBLY & INSTALLATION INSTRUCTIONS

PROVIDENCE BATH ACCESSORIES

Apothecary Cabinet 9430.100 Demi-Apothecary Cabinet 9431.100 Rectangular Mirror 9486.101

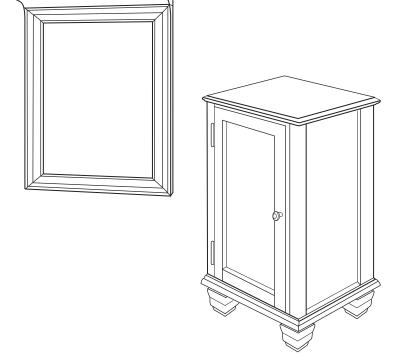


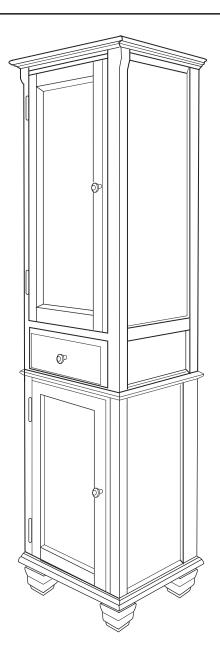


Thank you for selecting our products...products which have been the benchmarks of fine quality for over 100 years. To help insure that the installation process will proceed smoothly, please read these instructions carefully before you begin. Also, review the recommended tools and materials list; carefully unpack and examine your new plumbing fixture.


To maintain the beauty of the finish, avoid placing the furniture in direct sunlight, as sunlight causes fading. Also avoid extreme changes in temperature by arranging furniture away from radiators, heat and air vents, and air conditioning units. Avoid placing furniture directly under windows.

Recommended Tools & Materials

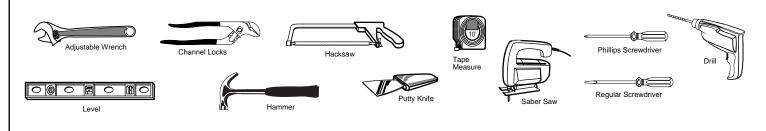


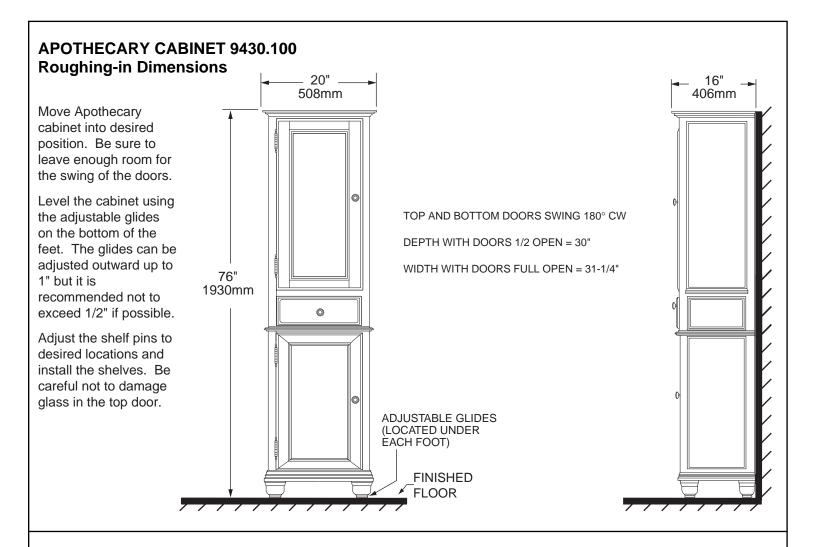

DEMI-APOTHECARY CABINET 9431.100 Roughing-in Dimensions

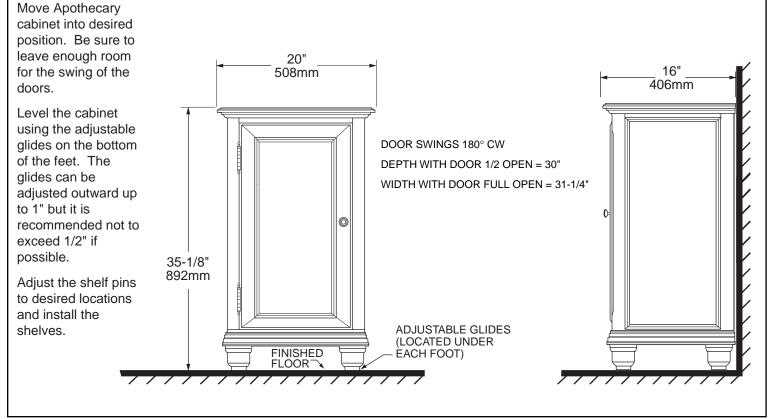

730547-100 Rev. C

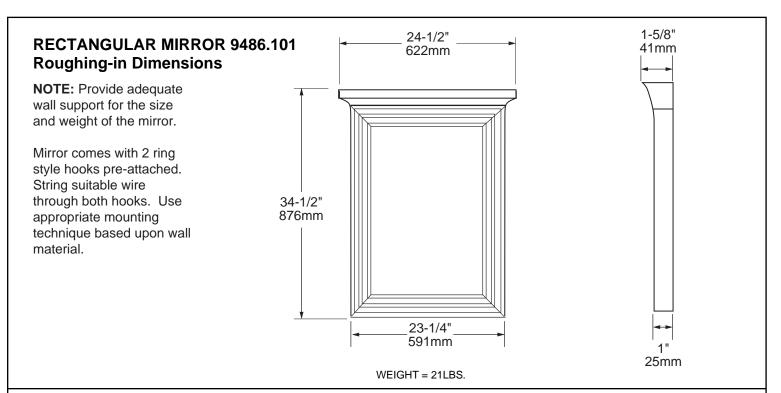

Care and Cleaning

Repair Parts

Dust the wood frequently with a clean, soft, dry, lint-free cloth, as well as polish it on a regular basis. Clean the surface by rubbing in the direction of the grain. Use polishes that contain detergents, emulsifiers and mineral oil. Avoid using silicone cleaners and waxes.

Clean up excess water and spills immediately. Use a blotting rather than a wiping action. Water left over a long period of time will cause white spots in the finish.

NOTE: Please note that some chemicals may damage the finish. Take care to avoid the following: iodine, hair dye, shaving cream, after shave lotion, alcohol, perfume, Lestoil®, Lysol Tub and Tile Cleaner®, Lysol Spray Disinfectant®, Dow Disinfectant®, acetone, paint remover, Formula 409®, Tile-X®, and Nair®.

REPAIR PART NO.	NOTE: PLEASE SPECIFY FINISH XXX - 214 Weathered White XXX - 240 Weathered Black DESCRIPTION	APOTHECARY CABINET 9430	DEMI APOTHECARY CABINET 943	RECTANGULAR MIRROR 9486
738634-0070A	DOOR ROLLER CATCH (1 PAIR)	Х	Х	
738635-0070A	SHELF PINS (8 PER PACK)	X	Х	
738636-0070A	DOOR PULL (1 PER PACK)	Х	Х	
738638-0070A	ADJUSTABLE FOOT GLIDES (4 PER PACK)	Х	Х	
738645-0070A	MIRROR HARDWARE (WIRE AND 2 BULLDOG CLIPS)			X
738776-XXX0A	FURNITURE TOUCH UP MARKER	Х	Χ	Х
738637-XXX0A	LEG (1/PACK)	X	Х	
738888-XXX0A	HINGE	Х	Х	
738889-XXX0A	DOOR WITH GLASS AND RETAINER	Х		
738890-XXX0A	DOOR	Х	Х	
738891-XXX0A	DRAWER ASSEMBLY	X		
738892-XXX0A	ADJUSTABLE SHELF	X		

AMERICAN-STANDARD WOOD FURNITURE WARRANTY

If inspection of this American-Standard plumbing product, within one year after its initial purchase, confirms that it is defective in materials or workmanship, American-Standard will repair or, at its option, exchange the product for a similar model. Variations in actual wood color and finishes which may result from natural characteristics of the wood, such as grain patterns, mineral streaks and the like, are not defects and are not covered by this warranty. This warranty applies only to the original purchaser and installation of these products.

This limited warranty does not apply to local building code compliance. Since local building codes vary considerably, the purchaser of this product should check with a local building or plumbing contractor to insure local code compliance before installation.

This warranty shall be void if the product has been moved from its initial place of installation; if it has been subjected to faulty maintenance, abuse, misuse, accident or other damages; if it was not installed in accordance with American-Standard's instructions; or if it has been modified in a manner inconsistent with the product as shipped by American-Standard.

American-Standard's option to repair or exchange the product under this warranty does not cover any labor or other costs of removal or installation, nor shall American-Standard be responsible for any other incidental or consequential damages attributable to a product defect or to the repair or exchange of a defective product, all of which are expressly excluded from this warranty. (Some states or provinces do not allow the exclusion or limitation of implied warranties, so this exclusion may not apply to you).

This warranty gives you specific legal rights. You may have other statutory rights that vary from state to state or province to province, in which case this warranty does not affect such statutory rights.

In the United States:
American Standard Inc.
P.O. Box 6820
Piscataway, New Jersey 08855
Attention: Director of Consumer Affairs

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 442-1902

In Canada: American Standard 2480 Stanfield Rd. Mississauga, Ontario Canada L4Y 1S2

Toll Free: (800) 387-0369

In Mexico:
Customer Service Manager
Ideal Standard, S.A. de C.V.
Via Morelos #330
Col. Santa Clara
Ecatepec 55540 Edo. Mexico