

Service Manual

HP OmniBook 2000, 5500, and 5700



Notice

In a continuing effort to improve the quality of our products, technical and environmental information in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

As an ENERGY STAR partner, HP has determined that these products meet the ENERGY STAR guidelines for energy efficiency.

All Certifications may not be completed at product introduction. Please check with your HP reseller for certification status.

This equipment is subject to FCC rules. It will comply with the appropriate FCC rules before final delivery to the buyer.

ENERGY STAR is a service mark of the U.S. Environmental Protection Agency. IBM and OS/2 are registered trademarks and TrackPoint is a trademark of International Business Machines Corporation. Pentium and the Intel Inside logo are registered trademarks and MMX is a trademark of Intel Corporation. Photo CD is a registered trademark of Kodak Corporation. Microsoft, MS-DOS, and Windows are registered trademarks, and the Genuine Microsoft Products logo is a trademark of Microsoft Corporation in the United States of America and in other countries. Sound Blaster is a trademark of Creative Technology Ltd.

© Hewlett-Packard Company 1997.

All Rights Reserved. Reproduction, adaptation, or translation without prior written permission is prohibited except as allowed under copyright laws.

Printed in U.S.A. 5965-0262

Table of Contents

List of Figures List of Tables	
Introduction	vi
Product Overview	
What's New	
Product Features	
Product at a Glance	
Product Comparisons	
Troubleshooting	
Power-On Self-Test	
Beep Codes	
Display Codes	
OmniBook Diagnostics	
Running diagnostics	
User Interface	30
Special test hardware requirements	31
Loop Back Connectors	
Details on Individual Diagnostic Tests	
Test All	33
Display - (DISP.COM)	33
CPU - (CPU.EXE)	34
RAM - (RAM.COŃ)	34
ROM - (ROM.EXE)	
PCMCIÀ - (PCMCIA.COM)	
Internal IR - (FIRTEST.EXE)	35
Full 2 Unit IR Test - (FIRTEST.EXE)	
RS-232 Port - (RS232.COM)	
Printer Port - (LPT.COM)	
Hard Disk - (HDC.EXE)	
Floppy Disk - (FDC.EXE)	
Battery - (BATTERY.EXE)	
Audio - (AUDIO.EXE)	
Microphone - (MIKE.EXE)	
Joystick - (JOYSTICK.EXE)	
Icon LCD - (ICON.EXE)	
Keyboard - (KEYBD.EXE)	
Pointing Device - (MOUSE.EXE)	
CD-ROM - (CDROM.EXE)	
SCSI - (SCSI.EXE)	
Fan - (FAN.EXE)	
Desktop Management Interface (DMI)	
Description of DMI	
Contents of the DMI Package	45
System Configuration Utility	48
Main Configuration Screen	48
System Menu	49
Passwords Menu	
Disks Menu	
Input/Output Menu	
Power Menu	
Exit Menu	
Troubleshooting Tips	
Hardware Repair	

		64
Memory (End User Replaceable) Hard Disk Drive (End User Replaceable)		
		69
Small Parts (End User Replaceable)		
Small Parts (End User Replaceable) Expansion Door - F1125-60920		70
Door, Flash BIOS - F1371-60901		70
		70
I/O Door - F1350-60910 (OB2000 & OB5700), F1320-6 Memory Cover - F1320-60927		70
Memory Cover - F1320-60927 PCMCIA Button Assembly - F1320-60949		70
		.70
		70
Rubber Feet - F1320-60957		
Trackpoint™		70
Display (HP Authorized Service Providers Only)		
Display Labola		
Keyboard (HP Authorized Service Providers Only)		76
Icon Board (PCA PB-ICON) (HP Authorized Service Prov		79
Logic PCA Board (PCA PB-586/IO Bracket) (HP Authoriz	ed Service Providers Only)	
Programmable Flash BIOS IC (HP Authorized Service Pr		89
Video Memory (OB2000 & OB5700 Only) (HP Authorized	Service Providers Only)	91
Other Components and Accessories (HP Authorized Service)	vice Providers Only)	93
Appendix A - Technical Specifications		
Mass Storage Specifications		
Hard Disk Drive		
Floppy Disk Drive		
CD-ROM Drive		
System Resources		
System Interrupts		
System Memory		
System Input/Output Addresses		
Appendix C - Hewlett-Packard TFT Display Quality Stateme	ent	 102
Appendix D - Assembly Sub-Component Breakout		
Appendix E - Part Numbers		

List of Figures

Figure 1 - OmniBook 2000 and 5700 External Features	.11
Figure 2 - OmniBook 2000 and 5700 External Features - continued	12
Figure 3 - OmniBook 5500 External Features	
Figure 4 - OmniBook 5500 External Features - continued	
Figure 5 - OmniBook 2000, 5500, and 5700 Center Bay Modules	
Figure 6 - OmniBook 2000 and 5700 Exploded Diagram	
Figure 7 - OmniBook 5500 Exploded Diagram	
Figure 8 - Diagnostics User Interface	
Figure 9 - Serial Loop Back Connector	
Figure 10 - Parallel Loop Back Connector	
Figure 11 - DMI Components	
Figure 12 - Main Configuration Screen	
Figure 13 - System Menu Screen	
Figure 14 - Passwords Menu Screen	
Figure 15 - Disks Menu Screen	
Figure 16 - Input/Output Menu Screen	
Figure 17 - Power Menu Screen	54
Figure 18 - Exit Menu Screen	
Figure 19 - Removing the Battery	
Figure 20 - Removing Memory	
Figure 21 - Removing the Hard Disk Drive	
Figure 22 - Hard Drive Case	
Figure 23 - Removing the Hard Drive Plastic Kit	.68
Figure 24 - Removing the Floppy Disk Drive	.69
Figure 25 - Display Screws	
Figure 26 - Icon Assembly Removal	
Figure 27 - Display Cables	
Figure 28 - Display Flex Cable Position	
Figure 29 - 10.4" Display Label Placements	.74
Figure 30 - 11.3" Display Label Placements	.75
Figure 31 - 12.1" Display Label Placements	
Figure 32 - Palmrest Assembly Removal Figure 33 - Keyboard Screws	
Figure 33 - Keyboard Screws	
Figure 34 - Reyboard Removal Figure 35 - Upper Chassis Case Removal	.10
Figure 36 - Icon Board Removal	.00 .00
Figure 37 - CPU and CPU Fan Removal (OB2000 & OB5700 only)	
Figure 38 - CPU and Heat Spreader Removal (OB5500 only)	
Figure 39 - Additional Screw for Logic PCA Removal	
Figure 40 - Keyboard Shielding Plate Removal	
Figure 41 - Logic PCA Board Removal	
Figure 42 - Flash BIOS Door Removal	
Figure 43 - Flash BIOS IC Removal	
Figure 44 - Replacing the Flash BIOS IC	.90
Figure 45 - Video Memory Removal	

List of Tables

Table 1 - Additional Resources	vi
Table 2 - OmniBook 2000 and 5700 Parts Identification	.16
Table 3 - OmniBook 5500 Parts Identification	.18
Table 4 - POST Beep Codes	.26
Table 5 - POST Display Codes	
Table 6 - Dianostic Interface Available Keystrokes	
Table 7 - Diagnostic Tests that Require Special Hardware	.31
Table 8 - System Menu Settings	.49
Table 9 - Password Menu Settings	.51
Table 10 - Disks Menu Settings	.52
Table 11 - Input/Output Menu Settings	.53
Table 12 - Power Menu Settings	.54
Table 13 - Exit Menu Settings	
Table 14 - OmniBook Troubleshooting Tips	
Table 15 - Battery Compatibility Matrix	
Table 16 - Memory Compatibility Matrix	
Table 17 - Hard Drive Availability Matrix	
Table 18 - Display Compatibility Matrix	
Table 19 - Display Label Compatibility Matrix	
Table 20 - Icon Board Compatibility Matrix	
Table 21 - CPU Module Compatibility Matrix	
Table 22 - Logic PCA Compatibility Matrix	
Table 23 - Other Repairable Components and Accessories	
Table 24 - Hard Disk Drive Specifications	
Table 25 - Floppy Disk Drive Specifications	
Table 26 - CD-ROM Drive Specifications	
Table 27 - System Interrupts for the OmniBook 2000 and 5700	.97
Table 28 - System Interrupts for the OmniBook 5500	
Table 29 - System Memory Map for the OmniBook 2000 and 5700	
Table 30 - System Memory Map for the OmniBook 5500	.98
Table 31 - System I/O Addresses for the OmniBook 2000 and 5700	
Table 32 - System I/O Addresses for the OmniBook 5500	
Table 33 - DMA Channels for the OmniBook 2000 and 5700	.99
Table 34 - DMA Channels for the OmniBook 5500	.99

Introduction

This document provides reference information for the HP OmniBook 2000, 5500, and 5700. It is intended to be used by HP-qualified service personnel to help with the installation, servicing, and repair of these HP OmniBook PCs.

It is a self-paced guide designed to train you to install, configure, and repair the OmniBook Notebook PC. You can follow it without having any equipment available.

The following table lists additional sources where supplementary information can be obtained.

Resource	Number/Address	Comments
HP External Web	http://www.hp.com/go/omniboo k	No usage restriction (http://www2.hp.com/go/omniboo k provides a European mirror)
HP-MCD Internal Web	http://webmcd.cv.hp.com	Restricted to HP intranet access only
America Online	Keyword: HP	Call (800) 827-6364 for membership within the US
CompuServe ¹	GO HP	Call (800) 524-3388 for membership within the US
HP Bulletin Board Service ²	(208) 344-1691 (US only)	Refer to the latest Product Support Plan for non-US BBS numbers
HP First (automated fax)	(800) 333-1917	US and Canada
	(801) 344-4809	Outside US and Canada
	(800) 544-9976	Reseller support number (enter outlet id number)
HP Support Assist CD- ROM	(800) 457-1762	US and Canada
	(801) 431-1587	Outside US and Canada
HP MCD Service Engineer	svc-eng_mcd@om.cv.hp.com	Email address for service related questions and issues

Table 1 - Additional Resources

¹ Baud rates = 300-28.8; Parity = E; Data bits = 7; Stop bits = 1 ² Baud rates = 300-28.8; Parity = N, Data bits = 8; Stop bits = 1

Part 1

Product Overview

 What's New Product Features Product at a Glance Product Comparisons The OmniBook 2000 is the newest OmniBook in the Desktop-to-Go Notebook PC series. It has many of the same features as the OmniBook 5700 while still maintaining a lower price. The

Feature	OmniBook 2000	
Processor	133-MHz Intel Pentium [®] with and	Intel Pentium P55C
	without MMX technology	150 MHz and 166 MHz with MMX
		technology
Cache		512-KB L2 pipeline-burst
	16-KB or 32-KB L1 cache	
		32-KB L1 cache
Memory		expandable to 128MB
Display		12.1" TFT XGA and 12.1" TFT SVGA
	12.1" DSTN SVGA up to 64K colors	
Video	C&T 65554 64-bit accelerated	C&T 65554 64-bit accelerated
	RAM and Zoom Video enabled	RAM and Zoom Video enabled
PC Card		Cardbus support
System Chipset		Opti Viper-N+
Desktop	Pre-installed DMI 1.1 software	
Interface		
Advanced	APM 1.2	APM 1.2
Power		
	On suspand resume bibernate and	
	On, suspend, resume, hibernate and full off	full off

Product Features

The first two illustrations (Figure 1 and Figure 2) point out the key external features of the OmniBook 2000 and 5700. The second two illustrations (Figure 3 and Figure 4) point out the key external features of the OmniBook 5500. Figure 5 on page 14 shows the accessories that can be used in the center bay of the OmniBook 2000, 5500, and 5700.



Figure 1 - OmniBook 2000 and 5700 External Features

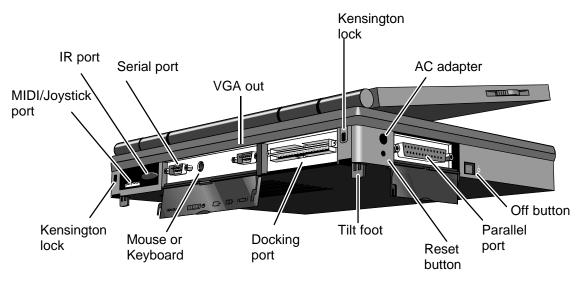
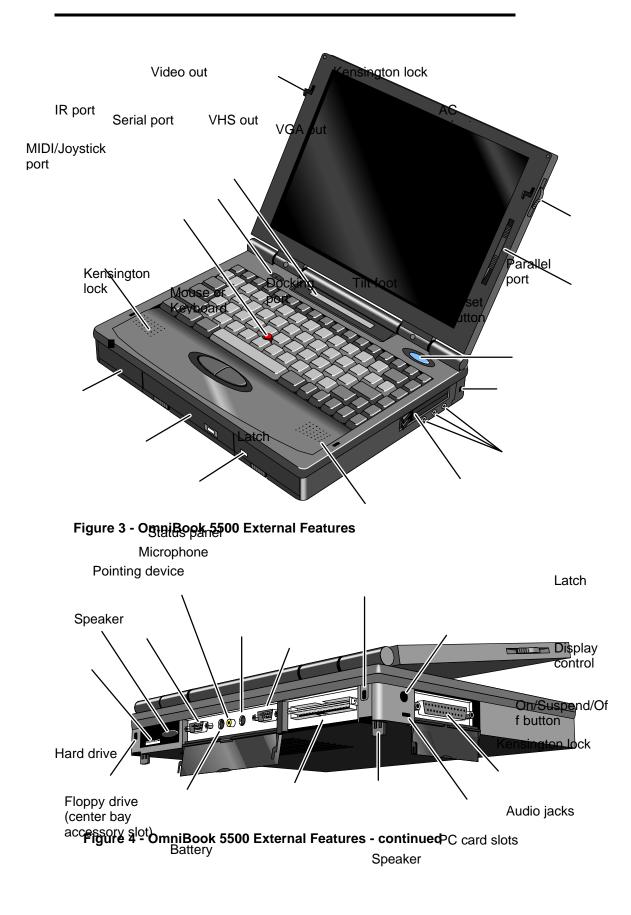


Figure 2 - OmniBook 2000 and 5700 External Features - continued



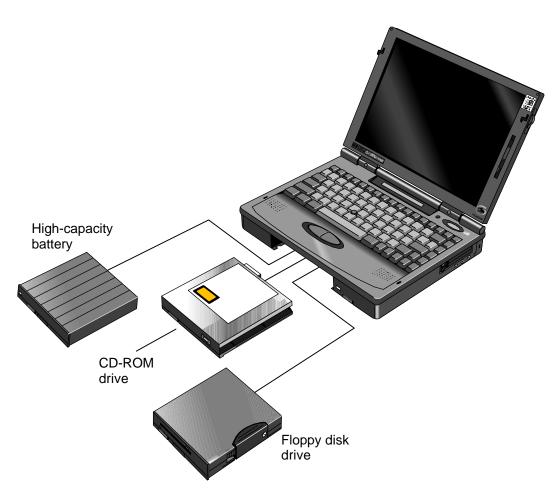


Figure 5 - OmniBook 2000, 5500, and 5700 Center Bay Modules

Product at a Glance

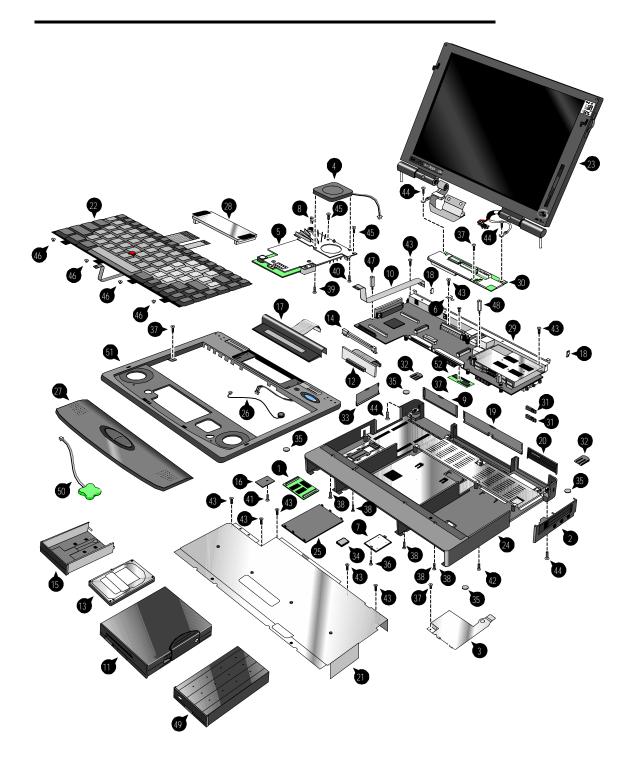


Figure 6 - OmniBook 2000 and 5700 Exploded Diagram

	Description	Part Number	Exchange Part #	User Replace.	OB5700	OB2000
	Memory Module				,	,
	8MB RAM	F1134-60901	F1134-69001	Y	√	√
	16MB RAM	F1135-60901	F1135-69001	Y	✓	~
	32MB RAM	F1136-60901	F1136-69001	Y	✓	✓
	64MB RAM	F1335-60901	F1335-69001	Y	✓	✓
2	Bezel	F1320-60958		N	✓	\checkmark
3	Card Bus Bracket	F1350-60916		Ν	✓	\checkmark
1	CPU Fan	F1350-60906		N	\checkmark	\checkmark
5	CPU Module					
	CPU Module/150C	F1350-60904	F1350-69004	Ν	\checkmark	
	CPU Module/166C	F1350-60905	F1350-69005	N	\checkmark	
	CPU Module/P54C-133	F1371-60908	F1371-69008	N		\checkmark
	CPU Module/P55C-133 (MMX)	F1371-60909	F1371-69009	N		✓
5	Dock Grounding Spring Plate	F1320-60962	1 10/1 00000	N	✓	\checkmark
7	Door, Flash BIOS	F1371-60901		Y		✓
					✓	✓
B	EMI Spring for LCD Hinge	F1350-60913		N		
9	Expansion Door	F1125-60920		Y	✓	~
10	FFC Cable T/B to M/B 10 PIN	F1320-60950		N	✓	✓
11	3.5" floppy disk drive	F1195-60901		Y	✓	✓
12	HDD-FPC Flex	F1320-60961		N	✓	\checkmark
13	Hard Disk Drive					
	HDD Drive 1.44GB	F1375-60901	F1375-69001	Y		\checkmark
	HDD Drive 2.0GB	F1339-60901	F1339-69001	Y	✓	\checkmark
	HDD Drive 3.0GB	F1348-60901	F1348-69001	Y	✓	
14	HDD PCB Bracket	F1320-60965		N	✓	\checkmark
15	HDD Plastic Kit	F1350-60920		Y	✓	\checkmark
16	HDD Security Cover	F1320-40001		Y	✓	✓
17	Icon Assembly	F1320-60918		N	✓	\checkmark
18	I/O Bracket Grounding Clip	F1350-60912		N	1	1
19	I/O Door	F1350-60912		Y	✓	✓
					v √	✓
20	IR Lens	F1320-60952		N	 ✓ 	v ✓
21	KBD Shielding Plate	F1320-60960		N		
22	Keyboard	*		N	✓	✓
23	LCD Display					
	LCD Assy 12.1 TFT/X	F1350-69002	F1350-69002	Ν	✓	
	LCD Assy/SMG 12.1 TFT/S	F1320-69094	F1320-69094	N	✓	\checkmark
	LCD Assy-12.1" DSTN	F1371-60906	F1371-69006	N		\checkmark
24	Lower Chassis Case					
	Lower Chassis Case - 5700	F1350-60914		N	\checkmark	
	Lower Chassis Case - 2000	F1371-60905		N		\checkmark
25	Memory Cover Door	F1320-60927		Y	✓	✓
26	Microphone Assembly	F1081-60946		N	\checkmark	\checkmark
27	Palmrest2 Assembly	F1320-60986		N	1	1
28	PCA - DC Power Supply	F1350-60909		N	1	\checkmark
20 29	PCA PB-586/IO Bracket	F1350-60909	E1250 60001	N	v √	· ✓
		F1350-60901	F1350-69001			•
30	PCA PB-Icon Board					1
	PCA PB-ICON/SVGA	F1350-60907		N	√	~
	PCA PB-ICON/XGA	F1350-60908		N	\checkmark	
	PCA PB-ICON/DSTN	F1371-60911		N		✓
31	PCMCIA Button Assembly	F1320-60949		Y	√	~
32	Plastic Foot	F1320-60929		Y	✓	~
33	Printer Port Door	F1125-60918		Y	✓	\checkmark
34	Prog Flash IC, BIOS	F1371-60903		N	✓	\checkmark
35	Rubber Foot	F1320-60957		Y	✓	\checkmark
36	Screw - BIOS Door	F1371-60902		Y		✓
37	Screw - CPU M2 X 4L	F1320-60963		N	✓	\checkmark
38	Screw - CPU M2.6 X 6L	F1081-60942		N	✓	~
39	Screw - FTB M2.6x10L	F1350-60925		N	\checkmark	\checkmark
10	Screw - FTB M2.6x10L	F1350-60926		N	✓	✓
+0 \$1				Y	v √	v √
	Screw - HDD Door	F1320-60919			v ✓	v ✓
12	Screw - ISOF M2.6x6L	F1350-60923		N		
13	Screw - ISOP M2x6L Nyl	F1350-60924		N	×	~
4	Screw - ISOP M2.6X8L NYLOK	F1081-60939		N	✓	✓
15	Screw - ISOT M2.6x4L	F1350-60927		N	✓	\checkmark
6	Screw - Keyboard	F1320-60920		N	✓	\checkmark
7	Standoff-M2x11.75 Nyl	F1350-60928		N	\checkmark	\checkmark
8	Standoff-M2x15L Nyl	F1350-60929		N	✓	√
9	Std Li-Ion Battery	F1193-60902		Y	√ 	√
19 10				N	↓	✓ ✓
	Sub Batt - NiMHd	F1350-60921			v √	v √
51 52	Upper Chassis Case	F1350-60915		N	·	ľ,
	Video RAM	F1350-60922		Ν	V	

Table 2 - OmniBook 2000 and 5700 Parts Identification

Note, this is a partial parts list. For a complete parts list, please refer to Appendix E or the Product Support Plan. *For a complete listing of available localized keyboards, refer to Appendix E or the Product Support Plan.

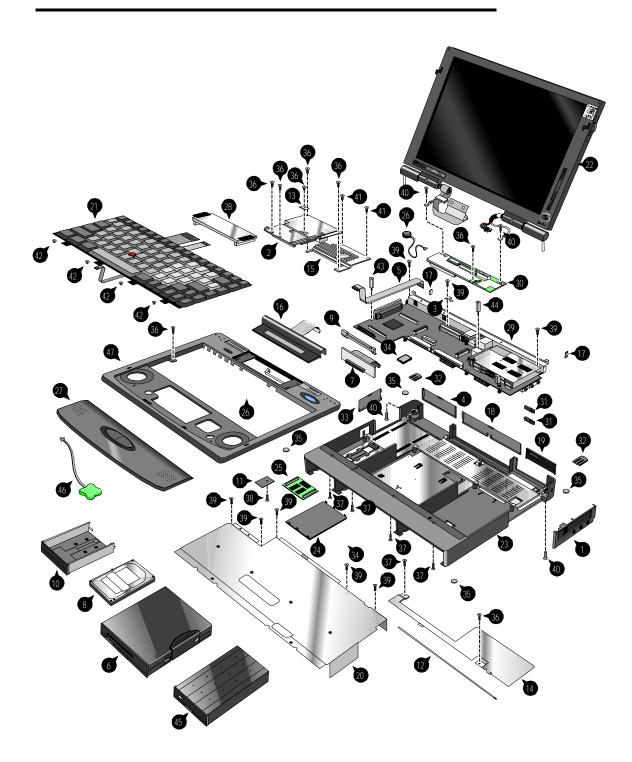


Figure 7 - OmniBook 5500 Exploded Diagram

Table 3 - OmniB	ook 5500 Parts	Identification
-----------------	----------------	----------------

	Description	Part Number	Exchange Part #	User Replace.
1	Bezel	F1320-60958		N
2	CPU Module			
	CPU Module/100C	F1320-60901	F1320-69001	N
	CPU Module/120C	F1320-60902	F1320-69002	N
	CPU Module/133C	F1320-60903	F1320-69003	Ν
	Dock Grounding Spring Plate	F1320-60962		Ν
	Expansion Door	F1125-60920		Y
	FFC Cable T/B to M/B 10 PIN	F1320-60950		N
	3.5" floppy disk drive	F1195-60901		Y
	HDD-FPC Flex	F1320-60961		Ň
5	Hard Disk Drive	11520-00501		
,	HDD Drive 810MB	F1191-60901	F1191-69001	Y
	HDD Drive 1.35GB	F1192-60901	F1192-69001	Y
	HDD Drive 2.0GB	F1339-60901	F1339-69001	Y
			F1339-09001	
)	HDD PCB Bracket	F1320-60965		N
0	HDD Plastic Kit	F1320-60947		Y
1	HDD Security Cover	F1320-40001		Y
2	Heat Pipe	F1320-60964		N
3	Heat Pipe Bracket	F1320-60972		N
4	Heat Pipe Spreader	F1320-60921		N
5	Heat Sink	F1320-60954		N
16	Icon Assembly	F1320-60918		N
17	I/O Bracket Grounding Clip	F1350-60912		N
8	I/O Door	F1320-60928		Y
19	IR Lens	F1320-60952		N
20	KBD Shielding Plate	F1320-60960		N
21	Keyboard	*		N
22	LCD Display			
	LCD Assy 10.4" TST/S	F1320-60904	F1320-69004	Ν
	LCD Assy 11.3" DSTN/S	F1320-60905	F1320-69005	N
	LCD Assy 12.1" TFT/S	F1320-60906	F1320-69006	N
	LCD Assy-SMG 12.1" TFT/S	F1320-60994	F1320-69094	N
23	Lower Chassis Case	F1320-60930	11320-03034	N
24	Memory Cover Door	F1320-60927		Y
24 25		F1320-00927		T
20	Memory Module	E4404 00004	E4404 00004	Y
	8MB RAM	F1134-60901	F1134-69001	
	16MB RAM	F1135-60901	F1135-69001	Y
_	32MB RAM	F1136-60901	F1136-69001	Y
26	Microphone Assembly	F1081-60946		Ν
27	Palmrest2 Assembly	F1320-60986		N
28	PCA - DC Power Supply	F1320-60925		N
29	PCA PB-586/IO Bracket	F1320-60926	F1320-69026	N
30	PCA PB-Icon Board			
	PCA PB-ICON	F1320-60924		N
	PCA PB-ICON/SMG	F1320-60993		N
31	PCMCIA Button Assembly	F1320-60949		Y
32	Plastic Foot	F1320-60929		Y
33	Printer Port Door	F1125-60918		Y
34	Prog Flash IC, BIOS	F1321-60907		N
35	Rubber Foot	F1320-60957		Y
36	Screw - CPU M2 X 4L	F1320-60963		N
37 37	Screw - CPU M2.6 X 6L	F1081-60942		N
88 88	Screw - HDD Door	F1320-60919		Y
9				N
	Screw - ISOP M2.0x6.0L Nylok	F1350-60924		
0	Screw - ISOP M2.6X8L Nylok	F1081-60939		N
1	Screw - M2.6x4.0L	F1350-60927		N
2	Screw - Keyboard	F1320-60920		N
3	Standoff-M2x11.75 Nyl	F1320-60951		N
4	Standoff-M2x15L Nyl	F1320-60955		N
5	Std Li-Ion Battery	F1193-60902		Y
6	Sub Battery 4.8v	F1081-60925		N
7	Upper Chassis Case	F1320-60931		N

Note, this is a partial parts list. For a complete parts list, please refer to Appendix E or the Product Support Plan. *For a complete listing of available localized keyboards, refer to Appendix E or the Product Support Plan.

Product Comparisons

	HP OmniBook 5700	HP OmniBook 5500	HP OmniBook 2000
Size Closed	29.5 x 22.6 x 4.9 cm (11.6 x 8.9 x 1.93 in)	29.5 x 22.6 x 4.9 cm (11.6 x 8.9 x 1.93 in)	29.5 x 22.6 x 4.9 cm (11.6 x 8.9 x 1.93 in)
Weight	3.27 kg (7.2 lb)	3.4 kg (7.5 lb)	3.27 kg (7.2 lb)
Processor	166- or 150-MHz Intel Pentium [®] with MMX technology	100-, 120-, or 133-MHz Intel Pentium processor	133-MHz Intel Pentium with and without MMX technology
Bus Architecture	32-bit PCI bus	32-bit PCI bus	32-bit PCI bus
Cache	512-KB burst-synchronous L2 cache	256-KB external L2 cache	no L2 cache
Display Size	12.1-inch TFT	10.4- or 12.1-inch diagonal TFT	12.1-inch diagonal TFT
		11.3-inch diagonal DSTN	12.1-inch diagonal DSTN
Display Resolution	XGA TFT 1024 x 768 x 64k colors	SVGA TFT 800 x 600 x 64K colors	SVGA TFT 800 x 600 x 16.7M colors
	SVGA TFT 800 x 600 x 16.7M colors	SVGA DSTN 800 X 600 X 256 colors	SVGA DSTN 800 x 600 x 64K colors
Video Bus	PCI local bus video	PCI local bus video	PCI local bus video
Video RAM	2-MB video RAM	1-MB video RAM	2-MB video RAM
VGA-out Support	XGA-out supports up to 1024 x 768 x 64k colors	XGA-out supports up to 1024 x 768 x 256 colors	XGA-out supports up to 1024 x 768 x 64k colors
Video Controller	Chips and Technology 65554 controller (64-bit)	Chips and Technology 65548 controller (32-bit)	Chips and Technology 65554 controller (64-bit)
Power	AC adapter 100 to 240 Vac (50 to 60 Hz) input; 12 Vdc, 3.3 A output	AC adapter 100 to 240 Vac (50 to 60 Hz) input; 12 Vdc, 3.3 A output	AC adapter 100 to 240 Vac (50 to 60 Hz) input; 12 Vdc, 3.3 A output
Battery Type	14.4-Vdc, 2.5-AH rechargeable Lithium-Ion battery	14.4-Vdc, 2.5-AH rechargeable Lithium-Ion battery	14.4-Vdc, 2.5-AH rechargeable Lithium-Ion battery
	Optional, 14.4-Vdc, 3.75-AH enhanced Lithium Ion battery	Optional, 14.4-Vdc, 3.75-AH enhanced Lithium Ion battery	Optional, 14.4-Vdc, 3.75-AH enhanced Lithium Ion battery
Battery Life	Up to 2.5 hours with one Lilon battery (enhanced Lilon battery adds up to 3.75 hours)	Up to 2.5 hours with one Lilon battery (enhanced Lilon battery adds up to 3.75 hours)	Up to 2.5 hours with one Lilon battery (enhanced Lilon battery adds up to 3.75 hours)
Recharge Rate	Battery recharges to high level in 4 hours using AC adapter while PC is on or off	Battery recharges to high level in 4 hours using AC adapter while PC is on or off	Battery recharges to high level in 4 hours using AC adapter while PC is on or off
Advanced Power Management	Instant-on maintains computer in ready-to-work state for weeks on a full charge; returns you to	Instant-on maintains computer in ready-to-work state for weeks on a full charge; returns you to your application or file	Instant-on maintains computer in ready-to-work state for weeks on a full charge; returns you to your application or file

	HP OmniBook 5700	HP OmniBook 5500	HP OmniBook 2000
	your application or file instantly	instantly	instantly
	2-minute low-battery warning	2-minute low-battery warning	2-minute low-battery warning
Removable Modules	 Floppy disk drive internal/external (can be replaced with a second battery or CD ROM drive) Hard disk drive RAM Battery 	 Floppy disk drive internal/external (can be replaced with a second battery or CD ROM drive) Hard disk drive RAM Battery 	 Floppy disk drive internal/external (can be replaced with a second battery or CD ROM drive) Hard disk drive RAM Battery
Hard Disk Drive	3.0-billion-byte or 2.0-billion- byte hard drives	810-MB, 1.35-GB, or 2.0GB hard disks	1.44-billion-byte or 2.0-billion- byte hard drives
Floppy Disk Drive	Internal 3.5-inch, 1.44-MB, standard; swaps with CD-ROM or enhanced battery; usable externally	Internal 3.5-inch, 1.44-MB, standard; swaps with CD-ROM or enhanced battery; usable externally	Internal 3.5-inch, 1.44-MB, standard; swaps with CD-ROM or enhanced battery; usable externally
CD-ROM Drive	Optional, internal, 10x	Optional, internal, 10x	Optional, internal, 10x
Memory	Self-refreshed FPM DRAM	Self-refreshed FPM DRAM	Self-refreshed FPM DRAM
	16 or 32-MB models, expandable to 128 MB	8 or 16-MB models, expandable to 64 MB	16 or 32-MB models, expandable to 128 MB
	8-, 16-, 32-, and 64-MB RAM modules available	8-, 16-, and 32-MB RAM modules available	8-, 16-, 32-, and 64-MB RAM modules available
Audio	16-bit with Sound Blaster™ Pro and MIDI support	16-bit with Sound Blaster Pro compatible and MIDI support	16-bit with Sound Blaster Pro and MIDI support
	Stereo sound via two built-in speakers	Stereo sound via two built-in speakers	Stereo sound via two built-in speakers
IO Ports	 9-pin, 115,200-bps, RS-232 port 25-pin bidirectional ECP/EPP parallel port XGA-out (up to 1024 x 768 x 64K) Fast-IR-IRDA compliant @ 4Mbps Expansion bus connector PS/2 keyboard/mouse port Headphone/stereo-out port Stereo-in and microphone ports MIDI/joystick port 	 9-pin, 115,200 - b/s, RS-232 port 25-pin bidirectional ECP/EPP parallel port XGA-out (up to 1024 x 768 x 256) Fast-IR-IRDA compliant @ 4Mbps Expansion bus connector NTSC/PAL video-out port (RCA and SVideo) PS/2 keyboard/mouse port Headphone/stereo-out port Stereo-in and microphone ports MIDI/joystick port 	 9-pin, 115,200-bps, RS-232 port 25-pin bidirectional ECP/EPP parallel port XGA-out (up to 1024 x 768 x 64K) Fast-IR-IRDA compliant @ 4Mbps Expansion bus connector PS/2 keyboard/mouse port Headphone/stereo-out port Stereo-in and microphone ports MIDI/joystick port
PCMCIA	One Type III PCMCIA slot (or use as two Type II slots) with 3.3-V or 5-V support Zoomed video support for lower slot CardBus support (both slots)	One Type III PCMCIA slot (or use as two Type II slots) with 3.3-V or 5-V support.	One Type III PCMCIA slot (or use as two Type II slots) with 3.3-V or 5-V support Zoomed video support for lower slot CardBus support (both slots)
Docking	Optional docking system with one PCI/ISA and one ISA slot,	Optional docking system with one PCI/ISA-and one ISA slot,	Optional docking system with one PCI/ISA-and one ISA slot,

	HP OmniBook 5700	HP OmniBook 5500	HP OmniBook 2000
	parallel, serial, XGA-out (up to 1024 x 768 x 64k), keyboard, PS/2 mouse, MIDI/joystick, audio and SCSI-2 ports. Optional port replicator with parallel, serial, video-out, keyboard, PS/2 mouse, MIDI/joystick, and audio ports	parallel, serial, XGA-out (up to 1024 x 768 x 256), keyboard, PS/2 mouse, MIDI/joystick, audio and SCSI-2 ports.	parallel, serial, XGA-out (up to 1024 x 768 x 64K), keyboard, PS/2 mouse, MIDI/joystick, audio, and SCSI-2 ports. Optional port replicator with parallel, serial, video-out, keyboard, PS/2 mouse, MIDI/joystick, and audio ports.
Pre-installed Software	Microsoft [®] Windows [®] for Workgroups 3.11 and MS- DOS [®] 6.22 co-loaded with Microsoft Windows 95*	Microsoft Windows for Workgroups 3.11 and MS- DOS 6.22 co-loaded with Microsoft Windows 95*	Microsoft [®] Windows [®] for Workgroups 3.11 and MS- DOS [®] 6.22 co-loaded with Microsoft Windows 95*
	Windows 95-compatible Plug and Play BIOS	Windows 95-compatible Plug and Play BIOS	Windows 95-compatible Plug and Play BIOS
	Advanced Power Management 1.2	Advanced Power Management 1.1	Advanced Power Management 1.2
	DMI 1.1 under Windows 95 with TopTools	HP PIM and Financial Calculator	DMI 1.1 under Windows 95 with TopTools
	HP PIM and Financial Calculator	On-line documentation	HP PIM and Financial Calculator
	On-line documentation		On-line documentation
Security Features	 2-level password protection Hardware-based hard drive password Electronic serial number in CMOS accessible through DMI PC ID (tattooing) Kensington lock slots 	 2-level password protection PC ID (tattooing) and serialization Drive lock Kensington lock slots 	 2-level password protection Hardware-based hard drive password Electronic serial number in CMOS accessible through DMI PC ID (tattooing) Kensington lock slots
Warranty	3-year return-to HP for repair (1-year on battery and accessories)	3-year return-to-HP for repair for premium models; 1-year return-to-HP for VL's (1-year on battery and accessories)	3-year return-to HP for repair (1-year on battery and accessories)

*(Note: Upon first boot, the end user must make a ONE-TIME selection between Windows 95 and Windows for Workgroups. Later, if the end user desires the rejected operating system, the end user will need to acquire and pay for such product as a separate transaction.)

Part 2

Troubleshooting

- Power-On Self-Test
- OmniBook Diagnostics
- Desktop Management Interface
- System Configuration Utility
- Troubleshooting Tips

Power-On Self-Test

The OmniBook 2000, 5500, and 5700 BIOS includes a Power-On Self-Test (POST) facility that tests a number of hardware and firmware items in the unit at each cold-start (BOOT or RESET).

The OmniBook self-test alone should not be used to diagnose a hardware problem. If the selftest results are absolutely clear and repeatable, confirm the results with at least two other nonself-test troubleshooting tools.

Within POST, there are three kinds of messages:

- Error Messages These messages appear when there is a failure in hardware, software, or firmware.
- Informational Messages These messages provide information to the user but require no action.
- Beep Codes This kind of warning sounds when POST errors occur and the screen is not yet available.

Beep Codes

These multiple beep codes indicate a failure in a simple test of:

- a portion of base memory
- flash BIOS checksum
- a portion of conventional memory
- a portion of extended memory

If the unit fails to boot

- all accessories are removed, including: memory, floppy drive, docking station, modems and other PC Cards, printers, external displays, pointing devices, and keyboard
- clean AC power is provided (no "chained" battery chargers or auto adapters), and press reset.

If the unit still fails to boot, it requires service.

Beep codes are used to identify a POST error that occurs when the screen is not available. Once the screen is operating, diagnostic messages are reported to the screen. There are beep codes for both fatal and nonfatal system board errors.

Beep Code	Description
S-S-S-P-S-S-L-P	The DMA page registers are faulty.
S-S-S-P-S-L-S-P	The refresh circuitry is faulty
S-S-S-P-S-L-L-P	The ROM checksum is incorrect
S-S-S-P-L-S-S-P	The CMOS RAM test failed
S-S-S-P-L-S-L-P	The DMA controller is faulty
S-S-S-P-L-L-S-P	The interrupt controller failed
S-S-S-P-L-L-L-P	The 8042 keyboard controller failed
S-S-L-P-S-S-S-P	No video adapter was found
S-S-L-P-S-S-L-P	No RAM installed. No message is displayed.

Table 4 - POST Beep Codes

Display Codes

There are a number of Power On Self Test (POST) tests that are performed after the Beep Code tests. Failure of one or more of these tests will result in a displayed failure code (such as 03044). It is extremely important not to interpret a failure code immediately as a hardware failure. The failure should be confirmed with a clean boot. A clean boot is defined as pressing the reset button after removing all accessories (including memory, floppy drive, modems, PC cards, and printers) and providing a reliable power source. Note, make sure the display is adjusted to be visible.

Message	Possible Cause
CLOCK NOT TICKING CORRECTLY	The real time clock is not ticking.
COLOR/MONO SWITCH INCORRECT	The COLOR/MONO switch on the system
	board is incorrect for the installed
	hardware.
CMOS CHECKSUM INVALID - RUN SCU	CMOS RAM information has been
	corrupted and needs to be reinitialized via
	the System Configuration Utility.
CMOS FAILURE - RUN SCU	CMOS RAM has lost power and needs to
	be reinitialized via the System
	Configuration Utility.
FLOPPY CONTROLLER FAILED	The floppy controller failed to respond to
	the reset command. Power down the
	system and check all appropriate
	connections. It the floppy controller
	continues to fail, you may need to replace
	it.
FLOPPY DISK TRACK 0 FAILED	The floppy drive cannot read track 0 of
	the floppy disk in the drive. Try another
	diskette. If the problem persists, you may
	need to replace the floppy drive.
FLOPPY INFORMATION INVALID - RUN SCU	The drive parameters stored in CMOS do
	not match the floppy drives detected in
	the system.
HARD DISK CONTROLLER ERROR	The hard disk controller failed to respond
	to the reset command. Possible
	solutions: 1) Check the drive parameters.
	2) Power down the system and check all
	appropriate connections. If the problem
	persists, you may need to replace the
HARDWARE INFO DOES NOT MATCH VIDEO	hard disk controller.
CARD - RUN SCU	The video adapter type specified in CMOS RAM does not match the installed
	hardware.
KEYBOARD CONTROLLER FAILURE	
REIDUARD GUNIRULLER FAILURE	The keyboard failed the self-test command. Check to see if the keyboard
	controller is properly installed. If the
	problem continues, replace the controller.
KEYBOARD FAILURE	The keyboard failed to respond to the
	RESET ID Command.
MACHINE IS LOCKED - TURN KEY	
	The system will not continue the boot

Table 5 - POST Display Codes

Message	Possible Cause
	sequence until you insert the key into the
	key lock and turn it.
NO BOOTABLE FLOPPY DRIVE 0 INSTALLED	No bootable floppy drive was detected. Possible solutions: 1) Power down the system and check all appropriate connections, cables, etc. 2) In
	configurations where no floppy drive is installed, run System Configuration Utility and make sure the diskette drive configuration item is set to "None". 3) Replace the diskette drive if necessary.
NO INTERRUPTS FROM TIMER 0	The periodic timer interrupt is not occurring.
RAM PARITY ERROR AT LOCATION xxxx	A RAM parity error occurred at the specified (hexadecimal) location.
ROM AT xxxx (LENGTH YYYY) WITH NON-ZERO CHECKSUM (zz)	An illegal adapter ROM was located at the specified address. An external adapter (such as a video card) may be causing a conflict.
TIME/DATE CORRUPT - RUN SCU	The time and date stored in the real time clock have been corrupted, possibly by a power loss.
UNEXPECTED AMOUNT OF MEMORY - RUN SCU	The amount of memory detected by POST does not match the amount specified in CMOS RAM.
CMOS RAM TEST FAILED	A walking built test of CMOS RAM locations 0E (Hex) - 3F (Hex) failed.
DMA CONTROLLER FAULTY	A sequential read/write of the transfer count and transfer address registers within the primary and secondary DMA controllers failed.
FAULTY DMA PAGE REGISTERS	A walking bit read/write of the 16 DMA controller page registers starting at location 80 Hex failed.
FAULTY REFRESH CIRCUIT	A continuous read/write test of port 61h found that bit 4 (Refresh Detect) failed to toggle within an allotted amount of time.
INTERRUPT CONTROLLER FAILED	A sequential read/write of various Interrupt Controller registers failed.
ROM CHECKSUM INCORRECT	A checksum of the ROM BIOS does not match the byte value at F000:FFFF.

OmniBook Diagnostics

The OmniBook diagnostics program provides a tool for diagnosing and isolating a hardware problem. The diagnostics software is intended for use in concert with additional troubleshooting methods to accurately determine the cause of trouble. The diagnostics program is not designed for unassisted customer use. Unless otherwise indicated, all diagnostic tests and features are available on the OmniBook 2000, 5500, and 5700.

All tests provided in the diagnostics program are designed to run following a clean boot of the OmniBook. This ensures that the environment of the computer will be In a dependable state for the diagnostics program to properly test the hardware components. The individual tests are non-destructive and are intended to preserve the state of the OmniBook. Reboot after completion of any test to ensure proper loading of necessary drivers.

Running diagnostics

The diagnostic software must be executed from a DOS command-line following a clean boot. For a system that normally boots to Windows for Workgroups, press F5 at bootup after the BIOS displays the CPU speed. This will boot the OmniBook to a DOS command-line. For a Windows 95 system, press Shift-F5. The user interface may be invoked or individual tests can be initiated from the command-line. When executed from the command-line, a test may or may not display results, but always terminates with either a zero for success or a non-zero for failure (the DOS errorlevel will be set accordingly). Non-zero results can be unique for each test (a result of 2 from a RAM test has a different meaning than a 2 from the serial test).

The diagnostic program is located in the **c:\omnibook\diag** directory. The main diagnostic program (user interface) is invoked by typing **diag** at the command-line. The main program looks for executables to perform individual tests using the same path with which it was invoked. For example, if the program was initiated by typing **c:\omnibook\diag\diag** from the root directory, then the **diag** directory will be searched for individual test programs.

Logging Test Results

Results can be logged to a file in the current drive and directory by pressing Alt-L. Only failures are written to the file. The log file is in ASCII format with the following layout:

date time test label failure description

The main program performs the logging. When logging is enabled for the first time (via the keyboard), the specified file is opened. If the file already exists, it is truncated. When logging is disabled or the program is terminated, the file is closed.

Looping Tests

Any test, or selection of tests, can be made to repeat or loop. The loop count can be changed by pressing Alt-C. The default count is 1; the maximum count is 9,999. A count of zero (0) indicates infinite looping. The count that is set applies to all tests until DIAG is terminated or the count is changed again.

Pressing the Backspace key will abort the looping sequence. The diagnostics program will check the keyboard for the Backspace key between each test and each iteration. However, since many

tests also read the keyboard and discard unexpected key presses, this feature may not work as expected.

When looping is enabled (count 0 or greater than 1), the date and time is displayed as each test is executed. The timestamp is displayed as the test begins and is over-written at completion.

The DIAG.INI file, located in the c:\omnibook\diag directory, contains a "Loop" entry for each test. The value of the entry determines whether the test can be placed in looping mode as part of a group of tests. A value of "1" enables looping in a group, while a "0" disables this feature. Regardless of this setting, looping will always be available when a test is initiated individually; the Loop entry in DIAG.INI only affects looping on groups of test. In general, group looping is disabled for the tests that require action by the tester such as the keyboard, mouse, and joystick tests.

User Interface

The main diagnostic program provides a user interface where the following actions can be performed:

- launch individual or groups of tests
- loop through a given set of tests *n* times or indefinitely
- optionally log failures to disk

An example of the user interface screen is displayed below. Note, on the OmniBook 5500, the Full 2 Unit IR and Fan tests are not available. Also, the Internal IR test is referred to as the Fast IR test on the OmniBook 5500.

Menu Statu ជុំស្ត្រស្តស្តស្តស្តស្តស្តស្តស្តស្តស្តស្តស្តស្តស	is Comments Date	
Test all	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~
Display		
CPU		
RAM		
ROM		
Upper PCMCIA		
Lower PCMCIA		1
Internal IR		
Full 2 Unit IR		
RS232 port		
Printer port	Test message window	
Hard disk		
Floppy disk		
Battery		
Audio		
Microphone		
Joystick		
Icon LCD		J
Keyboard		
Pointing Device		
CD-ROM SCSI		
Fan		
	Version mm/dd/vv	
Use ↑ or keys to se	lect a test then press ENTER to run.	, or press SPACE
· · ·	, then press ENTER to run marked tes	-
	Press ESC to exit	

Figure 8 - Diagnostics User Interface

The current test will be displayed in inverse video. The *Test message window* is an area of the screen, varying in size, that individual tests use for displaying messages. If used by a test, it pops up and is then removed when the test completes. The *Status* column is used to display the results of individual tests. *Comments* will be used for additional information. *Date* and *Time* are used for looping tests.

Keys are accepted from the keyboard, an external keyboard, or the serial port. The Alt key, used in conjunction with the appropriate letter, will pop-up each menu on the screen. Refer to Table 6 for a description of each key that is available for use in the user interface.

	Key	Description
Selecting Tests	Enter	run the selected tests (marked or hightlighted)
	Ctrl-Enter	run the alternate selected tests (marked or highlighted). See list of individual tests.
	Space	mark or select a test
Cursor Movement	End	move highlight to end of test list
	Home	move highlight to beginning of list
	Up Cursor	move highlight to the previous test in list
	Down Cursor	move highlight to the next test in list
Miscellaneous	Alt-L	toggle Logging on/off
	Alt-C	set loop Count
	Backspace	stops a looping test but leaves looping in effect
	Esc	return to previous level; used to exit dialogs; from the main screen exits diagnostics causing a reset

Table 6 - Dianostic Interface Available Keystrokes

Interpretation of test results

The test results will be displayed in the *Status* column of the user interface screen. Possible results are OK, Done, User Abort, Failed or a brief message indicating the type of failure. OK indicates that the test passed. Done indicates that the test has completed. See Details on Individual Diagnostic Tests beginning on page 33 for more information on each individual test.

Special test hardware requirements

Several tests within the OmniBook diagnostics program require special hardware. If the hardware is not present, the diagnostics will fail or not function properly. The below table lists the tests that require special hardware.

Test	Required Hardware
Full 2 Unit	Another OmniBook running the alternate (reflecting) 2 unit IR
IR ¹	test. See the Full 2 Unit IR test instructions on page 36.
RS-232 port	RS-232 serial loop back connector (see page 32 for diagram).
Printer port	Parallel port loop back connector (see page 32 for diagram).
Floppy disk	Formatted floppy disk which is not write protected.
Joystick	Joystick and F1181A port adapter.
CD-ROM	CD in the CD-ROM drive.
SCSI	The OmniBook must be docked.

¹ Not available on the OmniBook 5500

Loop Back Connectors

In order to run the RS232 serial port or parallel port self-test, a loop back connector is needed. The loop back may be placed on either the OmniBook port or at the end of the corresponding cable. This feature is also helpful in diagnosing a defective serial or parallel cable.

Loop back connectors may be purchased or easily constructed. The following illustrations identify the correct pin-out configurations for the serial and parallel loop back connectors.

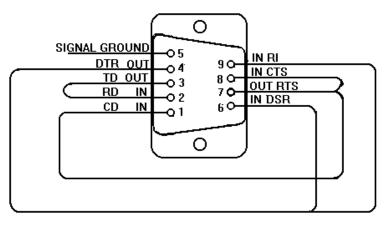


Figure 9 - Serial Loop Back Connector

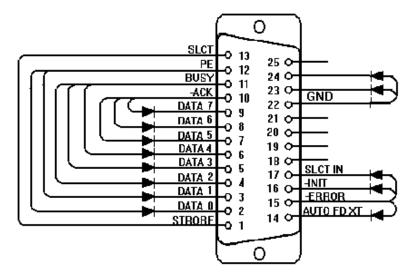


Figure 10 - Parallel Loop Back Connector

Details on Individual Diagnostic Tests

This section explains each test within the diagnostics program. Each test is listed along with its command-line file name. A brief description of the test, command-line parameters, valid keystrokes available during the test, and corresponding failure messages with error codes are also given.

Note, the term "flushed" that is used in the keystrokes sections indicates that the key is read from the key buffer and then discarded.

Test All

This is an easy way to run all the tests in sequence. However, looping does not work as expected with the Test All selection. For example, if three tests are tagged for looping and Test All is initiated, then the first two tests are executed only once. The last test in the sequence is the only test that will be looped.

Display - (DISP.COM)

The Display test executes a sequence of patterns on the screen:

- 1. Tests video RAM, which leaves vertical lines in groups of 4.
- 2. Draws a box around the outside edge of the display, filling the center with black.
- 3. Fills the entire display with white.
- 4. Fills the entire display with a 10-pixel checkerboard.
- Fills the display with horizontal lines on every 4th pixel, then steps the lines 3 times.
 Fills the display with vertical lines on every 4th pixel, then steps the lines 3 times.
- 7. Draws 16 horizontal bars of different colors.
- 8. Draws 16 vertical bars of different colors.
- 9. Draws 4 horizontal shaded bands (red, green, blue, and white) with vertical tick marks.

DOS Parameter	Explanation
1, 0, or none	Wait for a key after each display pattern
2 or greater	Don't wait for a key

Valid Keystrokes	Action
any key	When the DOS parameter is set to wait for a key, any key will step to the next display pattern; the only way to exit the test is to step through all patterns.
Esc	Aborts the test and all other keys are flushed.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
Failed	2	Video RAM is bad.

CPU - (CPU.EXE)

The CPU test checks the general purpose registers by copying a bit pattern through each register. Then a test of the Translation Lookaside Buffer is performed.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
n/a	The CPU test ignores the keyboard.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
Failed	2	The register test failed.
Failed	3	The CPU is in protected
		mode, must clean boot.
Failed	4	The Translate Lookaside
		Buffer test failed.

RAM - (RAM.COM)

The RAM test checks the base 640K of RAM first, then the remainder of memory.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
Backspace	Aborts the test, all other keys are flushed.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
Failed	3	Could not move to new code segment. RAM is bad.
Failed	4	CPU protected mode bit set, must clean boot.

ROM - (ROM.EXE)

The ROM test performs a 1-byte arithmetic checksum on the ROM block at address F000.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
n/a	The ROM test ignores the keyboard.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.

PCMCIA - (PCMCIA.COM)

The PCMCIA test sets up the TI CardBus controller chip, tests IRQ 3, and restores the chip.

DOS Parameter	Explanation
0	Test lower slot
1 (or any non-0 value)	Test upper slot

Valid Keystrokes	Action
n/a	The PCMCIA test ignores the keyboard.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
Failed	2	IRQ fail

Internal IR - (FIRTEST.EXE)

This test performs a minimal test of the IR chip but does not require a second OmniBook. The Full 2 Unit IR test is a more thorough test and does require a second OmniBook (see next section).

DOS Parameter	Explanation
Internal	Performs the internal (standalone) test.

Valid Keystrokes	Action
n/a	The Internal IR test ignores the keyboard.

Failure Message	Error Code	Meaning
Must clean boot	1	CPU protected mode bit set, must clean boot.
Must undock	3	This test cannot run while docked. Can also get this error if the internal transmit failed.
Failed	5	Receive fail or any other fail.

Full 2 Unit IR Test - (FIRTEST.EXE)

The Full 2 Unit IR test is not available on the OmniBook 5500. This test requires two OmniBooks: one on which the IR is known to be good, and the computer to be tested. The computer that is being tested will transmit IR packets to the known good computer, which will transmit (reflect) the packets back. This method ensures both transmitting and receiving functions are checked on the computer under test.

The test checks 115200 baud, 1.152 Mbps, and 4 Mbps by sending 20 packets at each speed and looping through the 3 speeds three times for a total of 60 packets at each speed. Every received packet is checked byte for byte against the packet that was sent. Every packet must pass or the test will fail.

To run the "Full 2 Unit IR" test, perform the following steps:

1. Clean boot both computers.

Windows 95 -- reboot and press <shift><F5> shortly before or after the computer displays "Starting Windows 95".
Windows for Workgroups -- reboot and press <F5> while the boot menu is displayed.

After clean booting, change to the c:\omnibook\diag directory.

- Prepare the known good computer to reflect packets to the test unit. Run DIAG.EXE and highlight "Full 2 Unit IR" and press <CTRL> + <ENTER>. (When desired testing duration is complete, press any key to abort the reflecting end of the test.)
- Position the computer to be tested so that the IR port is in line with the IR port on the known good unit. For a simple pass/fail test, run DIAG.EXE, highlight "Full 2 Unit IR" and press <ENTER>.

DOS Parameter	Explanation
Internal	Performs the internal (standalone) loopback test. This option does not test as much of the IR hardware, but will work with just one computer. Do not use this parameter with any of the other parameters.
Reflect	Initiates the "known good" reflecting end of the full 2 unit test.
Baud=xxxxx	Sets the baud for the first speed tested (defaults to 115200 baud). Unless /PHYTEST is also used, the 1.152M and 4M speeds will always be tested. Type in the full number for the baud to be tested (type 1152000 for 1.152Mbps, 4000000 for 4Mbps). Note This parameter must be used on both the known good reflecting computer and the computer under test. Both computers must start at the same speed to be able to communicate.
Loops=xxxxx	Sets the number of times to loop through

	the 3 speeds under test. Default = 3.
Phytest	Limits the test to just one speed which can be set with /BAUD. It also uses all null bytes rather than random data. Default speed = 115200 baud

Valid Keystrokes	Action
any key	Any keystroke will abort The Full 2 Unit IR test.

Failure Message	Explanation
OK	The test passed.
Must clean boot	A clean boot is required prior to the test (see step 1 above).
User abort	The test was aborted.
Must undock	The test cannot run when the OmniBook is docked.
No reflector unit	The computer under test did not receive back any of the packets it transmitted. Either the known good computer is not positioned properly or is not running the test (see step 2 above).
Fail	The test failed.

RS-232 Port - (RS232.COM)

NOTE: This test requires a serial loopback connector to be connected to the serial port.

The RS-232 Port test reads/writes to the COM1 serial port IER, baud divisor registers, and LCR. It also checks for the loopback connector and sends a byte through the loopback connector at each of the baud rates. The RS-232 Port test is hardcoded to test the UART at 3F8, therefore, it can test only COM1.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
n/a	The RS-232 test ignores the keyboard.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
Failed	2	No loopback connector
No loopback	3	Sending bytes failed
No loopback	4	Register read/write test failed

Printer Port - (LPT.COM)

NOTE: This test requires a parallel loopback connector to be connected to the parallel port.

The Printer Port test checks the data port by writing and reading different bytes 1000 times. The loopback connector is tested by toggling data bits 0 and 1 and seeing if the PE bit gets set. Finally, all of the loopback connections are tested.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
n/a	The Printer Port test ignores the keyboard.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
No loopback	3	Initial check for loopback connector failed.
No loopback	4	Data port test failed.
No loopback	5	Loopback connector test failed.

Hard Disk - (HDC.EXE)

The Hard Disk test verifies the presence of a hard disk, then reads/writes to the sectors. Within the user interface of Diag, pressing the Enter key invokes a short test. The short test check 1% of the cylinders and takes about a minute to complete. Pressing Ctrl-Enter runs the long test. This checks 100% of the cylinders and takes about 1.5 hours to complete.

DOS Parameter	Explanation	
1, none	Only test 1% of the cylinders	
Ν	Test N% of the cylinders	

Valid Keystrokes	Action
Esc	Aborts the test, all other keys flushed.

Failure Message	Error Code	Meaning
User Aborted	1	Esc key pressed, or bad hard
		drive
Failed	2	No hard disk
Failed	3	Hard drive controller failed.

Floppy Disk - (FDC.EXE)

NOTE: This test requires a formatted floppy disk to be inserted in the floppy drive.

The Floppy Disk test checks for the presence of a floppy drive with a floppy disk. If a floppy disk is not present in the drive, the test will prompt for one. At this point, a floppy disk must be inserted to continue (a reboot is necessary to abort at this stage). The sectors on the floppy disk are then tested. A complete test (100% of the sectors) takes about 1 minute and 38 seconds.

DOS Parameter	Explanation	
1, none	Only test 1% of the sectors	
Ν	Test N% of the sectors	

Valid Keystrokes	Action
Esc	Once the test begins testing the floppy disk, Esc will abort; all other keys are flushed.

Failure Message	Error Code	Meaning
User Aborted	1	Esc key pressed, read/write fail, or write protected disk

Battery - (BATTERY.EXE)

The Battery test displays battery voltage, temperature, type, charging information, and CPU temperature.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action	
Esc	The Battery test will run until the Esc key is	
	pressed; all other keys are flushed.	

Failure Message	Error Code	Meaning
none	n/a	The test does not return an
		error code.

Audio - (AUDIO.EXE)

The Audio test plays "Row, Row, Row Your Boat." It is up to the tester to determine if the audio fails or succeeds.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action	
n/a	The Audio test ignores the keyboard.	

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
Failed	3	A sound chip configuration call failed

Microphone - (MIKE.EXE)

Within the user interface of DIAG, the Microphone test records for a short time and then plays back what was recorded (similar to the "Rec" parameter).

DOS Parameter	Explanation	
Rec	Record and play back what was recorded	
On	Turns the microphone on	
Off	Turns the microphone off	
Gainon	Sets the gain bit in the sound chip	
Gainoff	Clears the gain bit in the sound chip	
Squeal	Turns the microphone on, sets the gain bit, turns the volume all the way up (so it squeals), waits for a key press, then turns off the gain bit and the microphone.	
Vol n	Sets the microphone volume where n = 1 to 31 (31 being loudest)	

Valid Keystrokes	Action
n/a	The Microphone test ignores the keyboard. Any keys pressed will be executed when the test finishes.

Failure Message	Error Code	Meaning
	1	Parameter error

Joystick - (JOYSTICK.EXE)

NOTE: This test requires a joystick and port adapter F1181A.

The Joystick test prompts to press joystick buttons and to move the pointer to various positions.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
	The Esc key will abort the Joystick test; all
	other keys are flushed.

Failure Message	Error Code	Meaning
User Aborted	1	Pointer movement test aborted with Esc
Failed	2	Joystick button test aborted with Esc

Icon LCD - (ICON.EXE)

The lcon test illuminates each segment of the icons in the icon LCD, moving from left to right. The test then flashes the entire panel three times. This is a visual test; no error codes are returned.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
n/a	The Icon LCD test ignores the keyboard. Any keys pressed will execute when the test finishes.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.

Keyboard - (KEYBD.EXE)

The Keyboard test consists of two types of tests: a full keyboard test, and a short keyboard test. For the full test, press the keys from left to right, top to bottom starting with Esc. For the short test, start with Pause/Break key and go clockwise around the outside of the keyboard and finish at the Scroll Lock key. Both tests skip the Fn key.

A high-pitched beep after a key press means it was the correct key and a low-pitched beep means it was incorrect. After an incorrect key is entered (low-pitched beep), the test allows four more attempts at entering the correct key.

The "Display Mode" of the keyboard test will display the number of the key as each key is pressed. The keys may be entered in any order. This mode is entered by pressing Esc during the test (as long as Esc is not the next key in the key sequence to be tested). Pressing Esc again exits display mode and resumes the keyboard test.

The DIAG.INI must be modified in order to invoke the short test within the user interface. Use the corresponding parameter explained in the below DOS Parameters table.

DOS Parameter	Explanation	
1	Perform the short test	
any non-1 value	Perform the full test	

Valid Keystrokes	Action
any key	To abort the keyboard test, press five, consecutive, incorrect keys.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.

Pointing Device - (MOUSE.EXE)

The Pointing Device test prompts the tester to move the mouse cursor to four points on the display. The left and right mouse buttons are then tested.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
n/a	The Pointing Device test ignores the keyboard. Any keys pressed will execute when the test finishes.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
Failed	2	Timed-out waiting for tester action (10 seconds)
Failed	3	TrackPoint or H8 failed

CD-ROM - (CDROM.EXE)

NOTE: This test requires a CD to be inserted in the CD-ROM drive.

The CD-ROM test checks the CD-ROM controller and IRQ 15. Then a block is read and verified 10 times followed by an eject test.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
Esc	The Esc key aborts the CD-ROM test; all

other keys flushed.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
CD Not Ready	2	CD not ready, no CD in drive
H/W Error	3	Timeout waiting for IRQ
Drive Not	4	CD drive not installed
Present		
Read Error	5	The read failed

SCSI - (SCSI.EXE)

NOTE: The OmniBook must be docked for this test to function properly.

The SCSI test checks for the presence of the PCI BIOS and SCSI controller. The test then checks for the presence of a SCSI hard disk, resets it, and copies the file SCSI.EXE to it.

DOS Parameter	Explanation
none	

Valid Keystrokes	Action
n/a	The SCSI test ignores the keyboard.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.
Failed	2	File copy to SCSI hard drive failed
Failed	3	PCI BIOS not present
Failed	4	SCSI controller not present
Failed	23	Error resetting the SCSI hard
		drive

Fan - (FAN.EXE)

The Fan test is not available on the OmniBook 5500. This test turns on the fan for the specified number of seconds. In the DIAG user interface, the Enter key instructs the test to run the fan for two seconds, while Ctrl-Enter runs the fan for five seconds.

DOS Parameter	Explanation
n	Number of seconds to run the fan (default=5)

Valid Keystrokes	Action
any key	Any key aborts the Fan test.

Failure Message	Error Code	Meaning
User Aborted	1	User aborted test.

Desktop Management Interface (DMI)

The Desktop Management Task Force (DMTF) was founded in 1992 by a group of leading computer manufacturers, including Hewlett-Packard, to define a standard method of managing the physical and logical components of personal computers. The result of these efforts is the Desktop Management Interface (DMI). The DMI package is pre-installed on the OmniBook 2000 and 5700.

Description of DMI

DMI is basically a set of rules for accessing information about a personal computer. Using DMI, an application program can determine, for example, which hardware and software components are present in a personal computer, the operating system that is being used, and the number of accessory board slots that are available. Using the DMI interface, a local or remote application program can check what hardware and software components are installed on your computer, how well they are working, and whether any needs replacing.

All this information is stored in a special Management Information Format (MIF) file, installed on each personal computer as part of the DMI package. The MIF file specifies information about components at two levels:

- **Groups** contain all the information concerning a particular hardware or software component. If more than one component of the same type is present, as is often the case with serial ports and hard disk drives, a group is repeated.
- Attributes are specific items of information relating to a group. Attributes of the Mouse group, for example, include the number of mouse buttons and the name and version number of the mouse driver being used.

Hewlett-Packard has developed a number of extensions to DMI to allow the enhanced features of HP OmniBook Notebook PCs to be managed with DMI. These extensions cover:

- Administrator and user passwords.
- Tattooing: a string of characters that uniquely identifies the computer.

Note: The DMI software package included with the OmniBook can only be used with the HP OmniBook Notebook PC.

For full details of the structure of the MIF file, including an explanation of the meaning of the fields of groups and attributes and how to write an application program that accesses this information, you can access the DMTF FTP server ftp.dmtf.org or the DMTF Web Pages at the URL www.dmtf.org.

Contents of the DMI Package


The DMI software and associated documentation is supplied either pre-installed on the OmniBook's hard disk drive or on two flexible disks. The contents of the package are the same in both cases.

Since the information accessed by the DMI software is specific to a particular computer, it must be installed on each computer separately.

The following software is supplied with the DMI package:

- A Microsoft Windows utility, SETUP.EXE, to install and initialize the DMI software.
- A Windows utility, HP TopTools. After DMI is installed, this utility can be used to display information about the computer through the DMI.
- A Management Information Format (MIF) file. This file contains information about everything on the computer that can be controlled using DMI facilities, and is initialized during installation.
- A component code, identifying the version of MIF file to use for specific models of HP OmniBook Notebook PCs.
- Windows-compatible DMTF Service Layer software, which controls access to the DMI.
- A client agent. The HP Remote DMI Agent is a DMI application and also a network server-side stream-based application. The Remote Agent is listening for Remote Application connection requests. If the main window of the Remote Agent is hidden, then no icon will appear on the screen when it is running.

Figure 11 provides a visual representation of the many components of the DMI package.

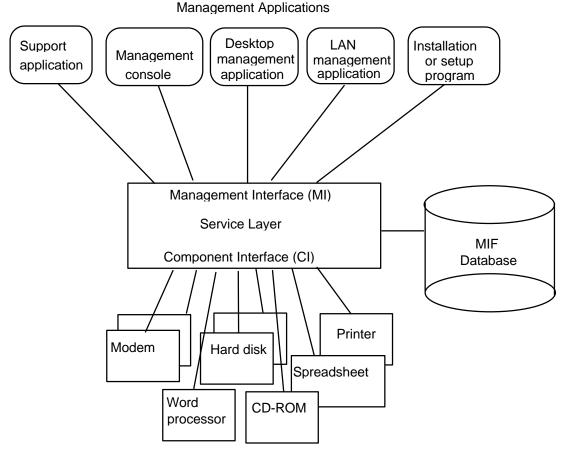

Manageable Products

Figure 11 - DMI Components

Installing the DMI Package from Windows 95

The DMI package is included with the OmniBook, but it must be properly installed before it can be used. The following steps explain how.

Alternatively, to install the DMI from floppy disks:

- Copy the DMI software from the \omnibook\dirvers\win95\dmi directory of either the hard disk or Recovery CD to two floppy diskettes (copy the contents of the \disk1 subdirectory to diskette #1 and the contents of the \disk2 subdirectory to diskette #2).
- Start Windows 95, if it is not already running.
- Insert diskette #1 into the floppy drive.
- Select and run the SETUP program from the diskette #1.

To install the DMI preloaded on the hard disk:

- Start Windows 95, if it is not already running.
- Click on "Start".
- Go to "Programs HP DMI".
- Select and run "SETUP".

Uninstalling the DMI Package from Windows 95

- Go to the HP DMI group.
- Launch the program "Uninstall DMI".
- Reboot the PC.

Using the DMI Interface

For a complete explanation of how to fully take advantage of DMI, the following documentation is provided with the OmniBook:

- A README.TXT file.
- A Windows online help file describing Hewlett-Packard's implementation of DMI (group and attribute definitions). Since not all Hewlett-Packard enhanced features are supported on all models, this document also describes any restrictions that apply.

System Configuration Utility

The System Configuration Utility (SCU) can be used to troubleshoot both software and hardware issues. Settings in the SCU may cause unexpected results in the operation of the OmniBook or installed applications. Battery charge and other system settings also can be verified with the SCU. The SCU settings are identical for the OmniBook 2000, 5500, and 5700, except where noted below.

The SCU is operating system independent and can be accessed by pressing F2 at boot-up or Fn+F2 at any other time. Use the <Alt> key to activate the menus and the cursor keys to navigate. The left mouse button, spacebar, and <Enter> key can also be used. The right mouse button and the <Esc> key will cancel the current action.

Main Configuration Screen

The main configuration screen of the SCU reports several system settings. See Figure 12 for an example of the main screen. The reported settings cannot be modified from the main screen; the changes must be made from the corresponding menu.

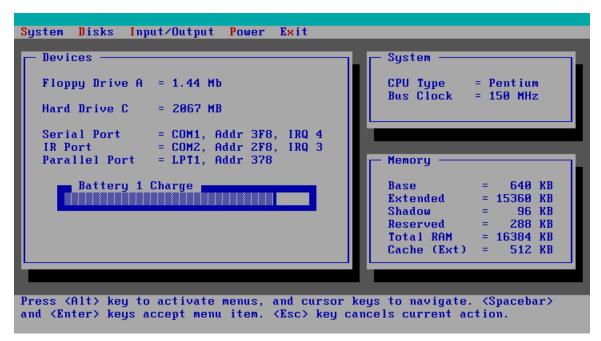


Figure 12 - Main Configuration Screen

System Menu

The system menu of the SCU provides an interface to modify several system settings. See Figure 13 for an example of the system menu. An explanation of each system setting and the corresponding options are provided in Table 8.

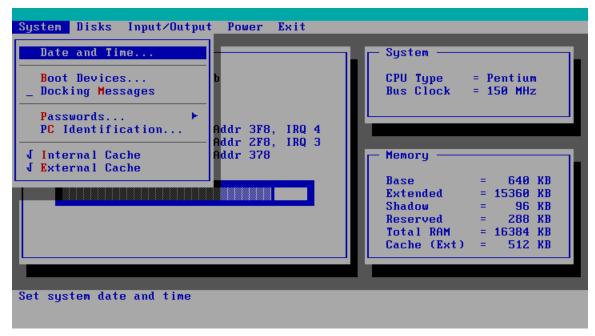


Figure 13 - System Menu Screen

Table 8 - System	Menu Settings
------------------	---------------

Setting	Parameters	Default	Comment
Date and Time	Day; Month; Year; Hour; Minute; Second		
Boot Devices			
Boot Device	FDD First; HDD First	FDD First	Booting from HDD first is useful for protecting a computer from becoming infected by a boot- sector virus.
Boot Configuration	Full; Boot devices only; Auto-detect	Auto-Detect	Full configures all PnP devices; Boot devices only is used with Win95; Auto-detect will configure for the loaded OS.
Fast Boot	Selected; not selected	Not selected	Fast Boot skips RAM test.
Enable SCSI BIOS ²	Selected; not selected.	Not selected.	Note, this requires changing the config.sys file. In Windows 3.11 enabling SCSI BIOS maximizes available memory when a hard disk drive is the only SCSI device.
Enable boot sector ² virus check	Selected; not selected.	Selected.	Displays message during boot if hard disk sector 0 (partition sector)

 $^{^{\}rm 2}$ For the OmniBook 5500, this requires BIOS version 2.12 or later

Setting	Parameters	Default	Comment
			changed since previous boot. A change could indicate a virus.
Docking Messages	Selected; not selected	Not selected	Enables warning messages at DOCK and UNDOCK.
Passwords	See Figure 14 - Passwords Menu Screen on page 50		
PC Identification		blank	The text entered here (maximum of 4 lines of 24 characters per line) will be displayed at BOOT time. Possible text: name, address, phone number, company, or other asset tracking information.
Internal Cache	Selected; not selected	Selected	Enable internal CPU cache for faster performance.
External Cache	Selected; not selected	Selected	Enable external CPU cache for faster performance. This setting is not available on the OmniBook 2000.

Passwords Menu

The password option of the system menu provides an interface to enter and modify administrator and user passwords. See Figure 14 for an example of the password menu. An explanation of each password option is provided in Table 9.

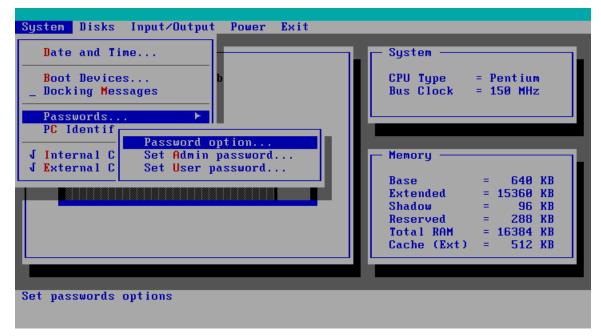


Figure 14 - Passwords Menu Screen

 Table 9 - Password Menu Settings

Setting	Parameters	Default	Comment
Passwords			
Password option			
Admin Password	Save modifications to	none selected	Admin Password is required before
required to:	PC ID texts		proceeding beyond the selected
	Save Setup changes		actions. The Admin Password (if
			defined) is ALWAYS required to
			save changes to these checkboxes.
User Password	Turn ON, Always;	none selected	Password is required before
required to:	Turn ON, after		proceeding beyond the selected
	FN+Suspend;		actions, and is ALWAYS required
	Undock;		to save changes to these
	Save Setup changes		checkboxes. Admin Password can
			be used in place of any User
Disable hard disk	Salastad: Nat salastad	Not selected.	password.
drive lock ²	Selected; Not selected	NUL SEIECLEU.	Check to remove password locking of the hard disk.
		nono	Allows entry of Admin password.
Set Admin password		none	
Set User password		none	Allows entry of User password.

Disks Menu

The disks menu of the SCU provides an interface to modify floppy and hard disk drive parameters. See Figure 15 for an example of the disks menu. An explanation of each disk parameter is provided in Table 10.

System Disks Input/Output Power Exit Devi Floppy Disk Drive Flop Hard Disk Drive Hard Drive C = 2067 MB	- System CPU Type = Pentium Bus Clock = 150 MHz
Serial Port = COM1, Addr 3F8, IRQ 4 IR Port = COM2, Addr 2F8, IRQ 3 Parallel Port = LPT1, Addr 378 Battery 1 Charge	Memory Base = 640 KB Extended = 15360 KB Shadow = 96 KB Reserved = 288 KB Total RAM = 16384 KB Cache (Ext) = 512 KB
Configure floppy disk drive	

Figure 15 - Disks Menu Screen

Table 10 - Disks Menu Settings

Setting	Parameters	Default	Comment
Disks			
Floppy Disk Drive	None 1.44 Mb 2.88 Mb	1.44 Mb	
Hard Disk Drive	None Standard Custom Auto-ID	Auto-ID	Select the configuration type of the hard disk. 'Standard' selects from a table of older drivers. 'Custom' allows manual modification of drive parameters. 'Auto-ID' will attempt to automatically type an IDE drive. (This screen also reports # cylinders, # heads, sectors/track, landing zone, write precomp, type code, and size).

Input/Output Menu

The input/output menu of the SCU provides an interface to modify serial and parallel port parameters and other external device settings. See Figure 16 for an example of the password menu. An explanation of each password option is provided in Table 11.

System Disks Input/Output Power Exit	System
Floppy Driv Hard Drive	CPU Type = Pentium Bus Clock = 150 MHz
Serial Port IR Port Parallel Po Audio Port	4 3 Memory
Battery 1 Charge	Base = 640 KB Extended = 15360 KB Shadow = 96 KB Reserved = 288 KB
	Total RAM = 16384 KB Cache (Ext) = 512 KB
Configure serial (COM) port mapping	

Figure 16 - Input/Output Menu Screen

Table 11 - Input/Output Menu Settings

Setting	Parameters	Default	Comment
COM Ports			
Serial Port:	None COM1, Addr 3F8, IRQ 4 COM2, Addr 2F8, IRQ 3 COM3, Addr 3E8, IRQ 4 COM4, Addr 2E8, IRQ 3	COM1, Addr 3F8, IRQ 4	
IR Port	None COM1, Addr 3F8, IRQ 4 COM2, Addr 2F8, IRQ 3 COM3, Addr 3E8, IRQ 4 COM4, Addr 2E8, IRQ 3	COM2, Addr 2F8, IRQ 3	
LPT Port Printer Port	None LPT1, Addr 378 LPT2, Addr 278 LPT3, Addr 3BC	LPT1, Addr 378	
LPT Type			
Port Definition	Standard AT (Centronics) Bidirectional (PS-2)	Bidirectional (PS-2)	
Keyboard Setup Key Delay	1⁄4 sec; 1⁄2 sec; 3⁄4 sec; 1 sec	½ sec	Select the delay period to wait (after a key is pressed) before it will
Key Repeat Rate	2 cps; 6 cps; 10 cps; 15 cps; 20 cps; 30 cps	10 cps	begin to repeat. Select the rate at which keys will be repeated when they are held down longer than the Key Delay period.
Keyboard Numlock	Selected, Not selected	Not selected	Start computer with NUM LOCK enabled.
External Devices VGA Display device	External VGA if attached, LCD off; Both external VGA and LCD	External VGA if attached, LCD off;	When 'External VGA' is selected, if an external VGA monitor is detected, it will be enabled and the LCD will be turned off. When 'Both external VGA and LCD' is selected, both
Television Type	NTSC; PAL	NTSC	are ALWAYS on. Select the television type. This setting is available only on the OmniBook 5500.
Force recognition of external VGA	Selected; Not selected	Not selected	Available only when <i>Both</i> <i>external VGA and LCD</i> is selected. This setting not available on the OmniBook 5500.
Enable External FN Key	Selected; Not selected	Selected	When enabled, CTRL + ALT on external keyboard acts as FN key.
Ignore External	Selected; Not selected	Not selected	

Setting Pointing Device	Parameters	Default	Comment
Audio Port			
Audio volume	0-7	7	
Beeper volume:	0-7	3	

Power Menu

The power menu of the SCU provides an interface to modify various power management and battery charging configurations³. See Figure 17 for an example of the password menu. An explanation of each power option is provided in Table 12.

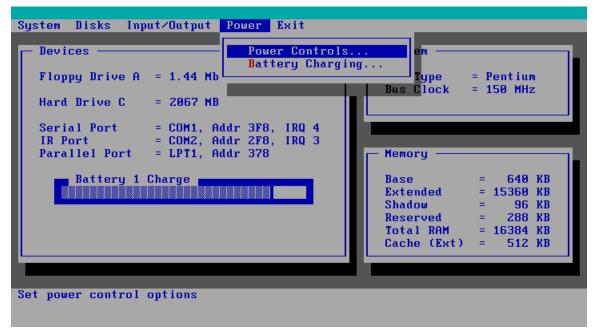


Figure 17 - Power Menu Screen

Setting	Parameters	Default	Comments
Power Controls			
Power Saving	Off/On	On	Enables power saving techniques (APM).
Suspend	Disable/Time (1 - 30 minutes or never)	3 minutes	When the system has been idle for the selected period, the computer will suspend. This setting not available on the OmniBook 5500.
Auto Hibernate (Save-to-Disk)	Disable/Time (6 hours to 7 days or never)	1 day	If the system has been suspended for the selected period, the entire state of the computer will be saved

³ The power management software in some operating systems can override the SCU settings. Under these circumstances, changes to the power management settings may have to be made within the operating system in addition to the SCU. Refer to the operating system manual or readme file.

Setting	Parameters	Default	Comments
			to the hard disk, and the computer will be fully powered down.
HDD power-down	Disable/Time (1-30 minutes or never)	3 minutes	The hard disk will be powered down if there have been no disk accesses for the selected period. Hard disk power will be restored when the disk is needed again.
CPU power-down	Disable/Time (512 ms-8 seconds or never)	2 sec	The CPU clock rate will be reduced (i.e. slower performance) if the system has been idle for the selected delay. The clock rate will be restored when system activity is detected. Only applicable when APM is inactive.
Enable hibernate (Save-to-Disk)	Selected; not selected	Selected	Enables hibernate (disable to free up hard drive space)
Timeout during screen activity	Selected; not selected	Not selected	Allows timeout (suspend) during screen activity (like screen savers).
HDD power-down when on AC	Selected; not selected	Selected	Allows the hard disk drive to spin down while AC power is connected.
Disable low battery message ²	Selected; not selected	Not selected	Inhibits display of BIOS low battery warning message. Does not affect reporting of battery status by operating systems.
Battery Charging	None Most drained first Least drained first Battery #1 first Battery #2 first	Most drained first	

Exit Menu

The exit menu of the SCU allows various methods of exiting the interface. See Figure 18 for an example of the exit menu. An explanation of each exit option is provided in Table 13.

System Disks Input/Output Power	Exit
Devices Floppy Drive A = 1.44 Mb Hard Drive C = 2067 MB Serial Port = COM1 Addr 3F8	Save and ExitSave and RebootExit (No Save)Default Settings Restore Settings
Serial Port = COM1, Addr 3F8 IR Port = COM2, Addr 2F8 Parallel Port = LPT1, Addr 378 Battery 1 Charge	Version Info Base = 640 KB Extended = 15360 KB Shadow = 96 KB Reserved = 288 KB Total RAM = 16384 KB Cache (Ext) = 512 KB
Save current settings and return to	previous work

Figure 18 - Exit Menu Screen

Setting	Parameters	Default	Comment
Save and Exit	n/a	n/a	Save current settings and return to previous work.
Save and Reboot	n/a	n/a	Save current settings and reboot so that settings take effect.
Exit (No Save)	n/a	n/a	Exit without saving current settings.
Default Settings	n/a	n/a	Set current setup to default settings.
Restore Settings	n/a	n/a	Restore current setup to original settings.
Version Info	n/a	n/a	Report current BIOS version information.

Table 13 - Exit Menu Settings

Troubleshooting Tips

Presented below is a table showing general guidelines for repairing units with specific failure symptoms. The order of likely causes is based upon data gathered by HP from analysis of failed modules. The suggested order of investigation is not mandatory but reflects the priority HP would currently place on looking for the root cause.

Swapping of easily replaced modules with known good reference modules is the ideal way to isolate the cause down to the module level. It is rare for more than one module to be responsible for the same failure symptom. Therefore, replacement of more than one module for a particular symptom should be the exception rather than the normal expectation.

After replacing modules, it is normal for some units to end up in a confused state and lock up when ac power is applied. If this occurs, the reset button should be pressed to bring the computer to a known state. If the unit still locks up or continues to lock up each time ac power is applied, the unit needs additional analysis.

Symptom	Call Center	Likely Cause (in order)	Comments
Battery			
Won't run on battery — no bars in battery icon	 Try known good battery in suspect unit Try suspect battery in known good unit Send in for repair 	BatteryPT-586	
Battery won't charge — light blinks	 Try known good battery Send in for repair 	Battery	
Battery won't charge — no charge indicators	 Try known good battery in suspect unit Try suspect battery in known good unit Send in for repair 	• PT-586	 Possible solder problem on RT1
Hard Disk Drive			
HDD doesn't spin at all	 Verify known good power source Reseat HDD Send in for repair 	 PT-586 HDD HDD flex cable HDD plastic kit 	 If the HDD plastic kit is bent or otherwise misshapen, the HDD may not function properly.
Display			
Dark display — no light	 Ensure contrast/brightness button is installed properly Adjust contrast/brightness Send in for repair 	 Broken backlight tube 	Replace display
Video problems — appears horizontal hold is out	Send in for repair	 Display connector not seated 	 Lift up icon assy — push down on left display connector.

Table 14 - OmniBook Troubleshooting Tips

Keyboardcorrectly.Keyboard errors — 2 characters on a keystoki instead of one• Send in for repair• PT-586 • PT-DC • Keyboard• Damaged U10 • Shorted pins on connectorsKeyboard errors — no response from key(s)• Send in for repair • PT-S86• PT-DC • FT-S86• Damaged U10 • Shorted pins on connectorsKeyboard dersn't respond, audio slow, battery problems• Send in for repair • Send in for repair• PT-S86 • PT-S86• Damaged U10Won't boot up & module and re- inserting • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-DC • PT-S86 • PT-ICON• Swap with reference CPI to check. Replace • Or fixed. • PT-DC • PT-DC	Symptom	Call Center	Likely Cause	Comments
KeyboardSend in for repairPT-586Damaged U102 characters on a keystroke insteadSend in for repairPT-DC KeyboardShorted pins on connectorsKeyboard derors — no response from slow, battery problemsSend in for repairPT-DC PT-S86Possible bad connector solder jointsKeyboard doesn't respond, audio slow, battery problemsSend in for repairPT-CPU PT-586Possible bad connector solder jointsWon't Boot up & no displayVerify known good power source Push reset button Try pulling RAM send in for repairPT-CPU RAM module PT-DC PT-S86Swap with reference CPI to check. Replace original CPU if not fixed. PT-BC PT-S86Unit hangs at Win95 screen during bootSend in for repairPT-S86 PT-ICONSwap with reference CPI to check. Replace original CPU if not fixed. PT-BC PT-S86Unit tocks up after 2-3 minutesEliminate any s/w configuration conflictsPT-S86 PT-ICONPossible burnt R92 hang up audio ICUnit looks up after "Bridge controller" "Bridge controller" "Bridge controller" "Bridge controller" "Bridge controller" excessively.It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while Send in for repair.PT-S86 PT-S86Damaged U10Cursor pointer "flying" or drifting excessively.It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while Send in for repair.Keyboard and palmrest.Be sure keyboards are tested with the correct palmrest.			(in order)	
Keyboard errors 2 characters on a keystoke instead of one• Send in for repair keystoke instead of one• PT-586 keyboard• Damaged U10 · Shorted pins on connectors oconnectorsKeyboard errors no response from key(s)• Send in for repair respond, audio slow, battery problems• PT-0C · PT-586 · PT-586 · PT-586• Possible bad connector solder jointsUnit Hangs or Won't Boot up & no display• Verify known good power source · Push reset button · Try puling RAM module and re- inserting · Send in for repair• PT-CPU · RAM module · PT-586 · PT-CON• Swap with reference CPI to check. Replace original CPU if not fixed. · PT-600 · PT-1CONUnit hangs at Win95 screen during boot• Verify known good power source · Send in for repair• PT-2CU · RAM module · PT-586 · PT-1CON• Swap with reference CPI to check. Replace · PT-1CONUnit locks up after · Broge in for repair• PT-586 · PT-1CON• Possible burnt R92 hang up audio ICUnit locks up after · Bridge controller' resume · Send in for repair• PT-586 · PT-1CON• Possible burnt R92 hang up audio ICUnit goes into suspend after · Bridge controller' resume · Cursor pointer dirfts slightly.• It is normal for the cursor to drift slightly a stel calibrate every once in a while · Send in for repair.• PT-586 · PT-586• Damaged U10Cursor pointer · flying' or drifting excessively.• It is normal for the cursor to drift slightly a stel calibrate every once in a while · Send in for repair.• PT-586 · PT-586• Damaged			correctly.	
2 characters on a keystroke instead of one • PT-DC • Shorted pins on connectors Keysbaard errors – or response from key(s) • Send in for repair • PT-DC • Possible bad connector solder joints Keyboard doesn't respond, audio slow, battery problems • Send in for repair • PT-S86 • Damaged U10 Won't Boot up & no display • Verify known good power source • PT-CPU • Swap with reference CPI to check. Replace original CPU in of fixed Win't Sacreen during boot • Verify known good power source • PT-DC • Swap with reference CPI to check. Replace original CPU in of fixed Unit hangs at Win't Sacreen during boot • Send in for repair • PT-S86 • Possible bad connector solder original CPU in of fixed Unit locks up after 'sridge controller' message, won't resume • Send in for repair • PT-ICON • Sourge EPROM — run BIOS upgrade sold in for repair Unit goes into suspend after ''Bridge controller'' message, won't resume • Send in for repair. • PT-S86 • Damaged U10 Cursor pointer ''flying'' or drifting excessively. • It is normal for the cursor to drift slightly as the circuit does a solf calibrate every once in a while • Mismatched keyboards are tested with the correct palmrest. The latest TackPoint the opposite direction of TrackPoint movement. • Mismatched keyboards and palmrest result in the opposite direction of intended movement. <	-			
keystroke instead of one• Keyboard• ConnectorsKeyboard errors no response from key(s)• Send in for repair• PT-DC • PT-586• Possible bad connector solder jointsKeyboard doesn't respond, audio slow, battery problems• Send in for repair• PT-586• Damaged U10Won't Boot up Won't boot up & no display• Verify known good power source• PT-CPU • RAM module • PT-586• Damaged U10Won't boot up & no display• Verify known good power source • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-586• Swap with reference CPI to check. Replace • PT-1CONUnit hangs at Win95 screen during boot• Eliminate any s/w configuration conflicts • Send in for repair• PT-586 • PT-ICON• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Send in for repair • Send in for repair• PT-ICON• Corrupt EEPROM — run BIOS upgradeUnit goes into suspend after "Bridge controller" resume• Send in for repair• PT-586• Damaged U10Cursor pointer diffing excessively.• It is normal for the cursor to driff slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest.• Be sure keyboards are tested with the correct palmrest.Cursor pointer diffing excessively.• It is normal for the cursor moving in the opposite direction of TrackPoint movement.• Mismatched palmrest.• Be sure keyboards are tested with the cor		Send in for repair		
of oneInternational systemKeyboard errors — or response from key(s)• Send in for repair• PT-DC • PT-586• Possible bad connector solder jointsKeyboard doesn't respond, audio slow, battery problems• Send in for repair• PT-586• Damaged U10Unit Hangs or Won't Boot up & no display• Verify known good power source • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-586• Swap with reference CPI to check. Replace original CPU if not fixed. • PT-586Unit hangs at Win95 screen during boot• Verify known good power source • Send in for repair• PT-586• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-1CON • PT-586• Damaged U10Unit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10Unit goes into suspend after "flying" or drifting excessively.• It is normal for the cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest.Cursor moves in the opposite direction of TrackPoint direction of TrackPoint evenent.• Nealer to Service Note s500-01• Refer to Service Note s500-01 for IC problemLoses time• Plug AC adapter into unit and let it charge<			-	•
Keyboard errors — no response from key(s)• Send in for repair• PT-DC • PT-586• Possible bad connector solder jointsKeyboard• Send in for repair• PT-586• Damaged U10Init Hangs or Won't boot up & no display• Verify known good power source • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • PT-586• Damaged U10Won't boot up & module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-B6• Swap with reference CPI to check. Replace original CPU in to fixed. • PT-B66• Make sure RAM is seate properly — remove and re-install to check.Unit hangs at Win95 screen during boot Unit locks up after 2-3 minutes• Eliminate any s/w configuration conflicts • Send in for repair• PT-586• Possible burnt R92 hang up audio ICUnit goes into suspend after "Bridge controller" message, won't resume• Run BIOS upgrade a self calibrate every once in a while • Send in for repair.• PT-586• Damaged U10Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuid does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. TrackPoint the cursor moving in the opposite direction of TrackPoint movement.• It is normal for the cursor moves in the cursor moves in the cursor moves in the cursor moves in the copposite direction of TrackPoint movement• It is normal for the cursor moves in the cursor mo			Keyboard	connectors
no response from key(s)• PT-586 · Keyboardsolder jointsKeyboard doesn't respond, audio slow, battery problems• Send in for repair• PT-586• Damaged U10Unit Hangs or Won't Boot up & no display• Verify known good power source • Push reset button • Try puling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-DC • PT-DC • RAM module • PT-CON• Swap with reference CPI to check. Replace original CPU if not fixed. • PT-DC • Make sure RAM is seate properly — remove and re-install to check.Unit hangs at Win95 screen during boot• Send in for repair • Send in for repair• PT-S86 • PT-ICON• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes suspend after "Bridge controller" message, won't resume• Run BIOS upgrade program • Send in for repair• PT-ICON • PT-ICON• Corrupt EEPROM — run BIOS upgrade • PT-S86Unit goes into suspend after "Bridge controller" "ftying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmest. • PT-586• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint the cursor to wrift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest. • Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of TrackPoint• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once		• Sond in for ronair		Possible bad connector
key(s)• KeyboardKeyboard doesn't respond, audio slow, battery problems• Send in for repair• PT-586• Damaged U10Won't Boot up• Verify known good power source • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-DC • PT-S86• Swap with reference CPI to check. Replace original CPU if not fixed. • PT-S86 • PT-ICONUnit Hangs at Win95 screen during boot• Verify known good power source • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-ICON• Swap with reference CPI to check. Replace original CPU if not fixed. • PT-S86 • PT-ICONUnit hangs at Win95 screen during boot• Send in for repair • Send in for repair• PT-586 • PT-ICON• Possible burnt R92 hang up audio ICUnit locks up after "Bridge controller" message, won't resume• Run BIOS upgrade program • Send in for repair• PT-ICON• Corrupt EEPROM — run BIOS upgrade palmrest. • PT-S86• Damaged U10Cursor pointer "Hying' or drifting excessively.• It is normal for the cursor to drift slightly a she circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest. • Mismatched palmrest. • Mismatched keyboards are tested with the correct palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of TrackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Philips • PT-586 Philips• Refer to Service Note S500-01		• Send in for repair	-	
Keyboard doesn't respond, audio slow, battery problems• Send in for repair• PT-586• Damaged U10Unit Hangs or Won't boot up & no display• Verify known good power source • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-S86• Swap with reference CPI to check. Replace original CPU if not fixed. • Make sure RAM is seate properly — remove and re-install to check.Unit hangs at Win95 screen during boot• Verify known good power source • Send in for repair• PT-S86 • PT-S86• Possible burnt R92 hang up audio ICUnit bocks up after 2-3 minutes• Ren BIOS upgrade program • Send in for repair• PT-S86• Possible burnt R92 hang up audio ICUnit goes into suspend after "Bridge controller" message, won't resume• Ren mail for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• PT-586• Damaged U10Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. • Damaged U10Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest. • Mismatched keyboards and palmrest result in the cursor woing in the opposite direction of TrackPoint movement	•			
respond, audio slow, battery problems••Unit Hangs or Won't Boot up••••Unit Hangs or Won't Boot up & no display•••	• • • •	• Send in for repair		Damaged 1110
slow, battery problemsSlow, battery problemsSlow, battery problemsWon't Boot up••••Won't Boot up & no display• Verify known good power source • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-DC • PT-586 • PT-ICCN• Swap with reference CPI to check. Replace original CPU if not fixed. • PT-DC • PT-586 • PT-ICCNUnit hangs at wind5 screen during boot• Eliminate any s/w configuration conflicts • Send in for repair• PT-586 • PT-ICCN• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes • Send in for repair• Run BIOS upgrade program • Send in for repair• PT-ICON• Corrupt EEPROM — run BIOS upgrade programUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586 • PT-586• Damaged U10Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest.• Be sure keyboards are tested with the correct palmrest.Cursor moves in the opposite direction of TrackPoint movement• Nerge Acadapter into unit and let it charge• PT-586 Philips it charge• Refer to Service Note s500-01 for IC problem		• Send in for repair	• F 1-500	• Damaged 010
problemsProblemsUnit Hangs or Won't boot up & no display• Verify known god power source • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-586 • PT-ICON• Swap with reference CPI to check. Replace original CPU if not fixed. • PT-586 • PT-ICONUnit hangs at Win95 screen during boot• Eliminate any s/w configuration conflicts • Send in for repair• PT-586 • PT-586 • PT-586 • PT-586 • PT-S86 • PT-S86 • PT-S86 • PT-S86 • PT-S86 • PT-S86 • Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-1CON • PT-586• Corrupt EEPROM — run BIOS upgrade program • Send in for repairUnit goes into suspend after "Bridge controller" message, won't resume• It is normal for the cursor to drift slightly a sthe circuit does a self calibrate every once in a while • Send in for repair.• PT-586 • PT-586• Damaged U10Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly a sthe circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest.Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly a sthe circuit does a self calibrate every once in a while • Send in for repair.• Mismatched keyboards are tested with the correct palmrest.Cursor pointer "flying" or drifting trackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Philips IC				
Unit Hangs or Won't Boot up & no display• Verify known good power source • Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-CPU • RAM module • PT-DC • PT-586 • PT-ICON• Swap with reference CPI to check. Replace original CPU if not fixed. • Make sure RAM is seate properly - remove and re-install to check.Unit hangs at Win95 screen during boot• Eliminate any s/w configuration conflicts • Send in for repair• PT-586 • PT-586• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-586 • PT-ICON• Corrupt EEPROM — run BIOS upgrade prograd • PT-586Unit goes into suspend after "Bridge controller" message, won't resume• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• PT-586 • PT-586• Damaged U10Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest.Cursor moves in the opposite direction of TrackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note S500-01 for IC problem				
Won't Boot up· Verify known good power source· PT-CPU · RAM module · PT-DC· Swap with reference CPI to check. Replace original CPU if not fixed. · PT-BCUnit hangs at Win95 screen during boot· Send in for repair· PT-586 · PT-ICON· Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes· Run BIOS upgrade program · Send in for repair· PT-586 · PT-ICON· Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes· Run BIOS upgrade program · Send in for repair· PT-586 · PT-ICON· Corrupt EEPROM — run BIOS upgrade · PT-586Unit goes into suspend after "Bridge controller" resume· Send in for repair· PT-586 · PT-586· Damaged U10Unit goes into suspend after "Bridge controller" resume· It is normal for the cursor pointer drifts slightly.· It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while · Send in for repair.· Keyboard and palmrest.· Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS) must match up with a ctTs palmrest. Mismatched keyboards and palmrests result in the opposite direction of TrackPoint movement· PIg AC adapter into unit and let it charge· PT-586 Philips IC· Refer to Service Note S500-01 for IC problem	•			
no displaypower sourceRAM moduleto check. Replace original CPU if not fixed.Push reset buttonTry pulling RAM module and re- insertingPT-DC •PT-586•Make sure RAM is seate properly — remove and re-install to check.Unit hangs at Win95 screen during boot•Eliminate any s/w configuration conflicts •Send in for repair•PT-586•PT-s86Unit locks up after 2-3 minutes•Eliminate any s/w configuration conflicts •Send in for repair•PT-586•Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes•Run BIOS upgrade program •Send in for repair•PT-ICON•Corrupt EEPROM — run BIOS upgrade paradeUnit goes into suspend after "Bridge controller" message, won't resume•Send in for repair•PT-586•Damaged U10Cursor pointer drifts slightly.•It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while •Send in for repair.•Keyboard and palmrest.•Be sure keyboards are tested with the correct palmrest.Cursor pointer "flying" or drifting excessively.•It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while •Send in for repair.•Keyboard and palmrest.•Be sure keyboards are tested with the correct palmrest.Cursor moves in the opposite direction of TrackPoint movement•It is normal for the cursor moving in the opposite direction of intended movement.•Keyboard pairCursor moves in the opposite direction of TrackPoint movement•Plug AC a	-			
no displaypower source• RAM moduleto check. Replace original CPU if not fixed. • PT-586• Push reset button • Try pulling RAM module and re- inserting • Send in for repair• PT-586 • PT-1CON• Make sure RAM is seate properly — remove and re-install to check.Unit hangs at Win95 screen during boot• Eliminate any s/w configuration conflicts • Send in for repair• PT-586• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-1CON• Corrupt EEPROM — run BIOS upgrade programUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10Unit goes into suspend after "Bridge controller" resume• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest and keyboard pain• Be sure keyboards are tested with the correct palmrest and keyboard painCursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest. • Mismatched palmrest and keyboard painCursor moves in the opposite direction of TrackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note S500-01 for IC problem	Won't boot up &	Verify known good	• PT-CPU	Swap with reference CPU
Try pulling RAM module and re- inserting• PT-586 • PT-ICON• Make sure RAM is seate properly — remove and re-install to check.Unit hangs at Win95 screen during boot• Eliminate any s/w configuration conflicts • Send in for repair• PT-586 • PT-ICON• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-1CON• Corrupt EEPROM — run BIOS upgrade program • Send in for repairUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10Cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest. • Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of intended movement. • Refer to Service Note sto0-04.Cursor moves in the opposite direction of TrackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note sto0-01 for IC problem	no display		RAM module	
module and re- inserting Send in for repair• PT-ICONproperly — remove and re-install to check.Unit hangs at Win95 screen during boot• Eliminate any s/w configuration conflicts • Send in for repair• PT-586• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-ICON• Corrupt EEPROM — run BIOS upgrade progradeUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10Cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest.Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest esult in the opposite direction of TrackPoint movement• PIug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		 Push reset button 	• PT-DC	original CPU if not fixed.
Inserting • Send in for repairPT-586Possible burnt R92 hang up audio ICUnit hangs at Win95 screen during boot• Run BIOS upgrade program • Send in for repair• PT-586• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-1CON• Corrupt EEPROM — run BIOS upgrade programUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10TrackPoint/Cursor• It is normal for the cursor pointer drifts slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. • Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. • Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. • Mismatched palmrest and keyboard pairCursor moves in the opposite direction of TrackPoint movement• Send in for repair.• Keyboard pairCursor moves in the opposite direction of TrackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		Try pulling RAM	• PT-586	Make sure RAM is seated
Send in for repairUnit hangs at Win95 screen during boot• Eliminate any s/w configuration conflicts • Send in for repair• PT-586• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-ICON• Corrupt EEPROM — run BIOS upgradeUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10Unit goes into suspend after "Bridge controller" message, won't resume• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest.Cursor pointer "ffying" or drifting excessively.• It is normal for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest.Cursor moves in the opposite direction of TrackPoint movement• Send in for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards and palmrest result in the cursor moving in the opposite direction of intended movement.Cursor moves in the opposite direction of TrackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note s500-01 for IC problem		module and re-	PT-ICON	
Unit hangs at Win95 screen during boot• Eliminate any s/w configuration conflicts • Send in for repair• PT-586• Possible burnt R92 hang up audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-ICON• Corrupt EEPROM — run BIOS upgradeUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10TrackPoint/Cursor Cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest.Cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does once in a while • Send in for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest.Cursor moves in the opposite direction of TrackPoint movement• Nismatched palmrest and keyboard pair• Mismatched palmrest and keyboard pairCursor moves in the opposite direction of TrackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		inserting		re-install to check.
Win95 screen during bootconfiguration conflicts • Send in for repairup audio ICUnit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-ICON• Corrupt EEPROM — run BIOS upgrade • PT-586Unit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10TrackPoint/Cursor• It is normal for the cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest.Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest.Cursor moves in the opposite direction of TrackPoint movement• Send in for repair.• Mismatched palmrest and keyboard pairCursor moves in the coposite direction of TrackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		i		
during bootSend in for repairPT-ICONCorrupt EEPROM — run BIOS upgrade program • Send in for repairUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-ICON• Corrupt EEPROM — run BIOS upgradeUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10TrackPoint/Cursor• It is normal for the cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest sesult in the opposite direction of TrackPoint movement• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest.Cursor moves in the opposite direction of TrackPoint movement• Send in for repair.• Mismatched palmrest result in the cursor moving in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Phillips IC• Refer to Service Note 5500-01 for IC problem			• PT-586	Possible burnt R92 hangs
Unit locks up after 2-3 minutes• Run BIOS upgrade program • Send in for repair• PT-ICON• Corrupt EEPROM — run BIOS upgrade BIOS upgradeUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10Cursor pointer drifts slightly. a self calibrate every once in a while excessively.• It is normal for the cursor to drift slightly a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint the opposite direction of TrackPoint movement• Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest.Cursor moves in the opposite direction of TrackPoint movement• Send in for repair.• Mismatched palmrest and keyboard pair• Mismatched palmrest result in the cursor moving in the opposite direction of intended movement.Miscellaneous Loses time• Plug AC adapter into unit and let it charge• PT-586 Phillips IC• Refer to Service Note 5500-01 for IC problem				up audio IC
2-3 minutesprogram • Send in for repairBIOS upgradeUnit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10TrackPoint/Cursor• It is normal for the cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched keyboards and palmrest result in the cursor moving in the opposite direction of intended movement. • Refer to Service Note 5500-04.Curser moves in the opposite direction of TrackPoint movement• Plug AC adapter into unit and let it charge• PT-586 Phillips IC• Refer to Service Note 5500-01 for IC problem				
Send in for repairSend in for repairUnit goes into suspend after "Bridge controller" message, won't resumeSend in for repair• PT-586• Damaged U10TrackPoint/Cursor• It is normal for the cursor pointer drifts slightly. as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moves in the opposite direction of TrackPoint movement• Nere application PT-586Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Phillips IC• Refer to Service Note 5500-01 for IC problem	•	Run BIOS upgrade	PT-ICON	
Unit goes into suspend after "Bridge controller" message, won't resume• Send in for repair• PT-586• Damaged U10TrackPoint/Cursor• It is normal for the cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest.Cursor pointer "flying" or drifting excessively.• Send in for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest.Cursor moves in the opposite direction of TrackPoint movement• Send in for repair.• Mismatched palmrest and keyboard pairMiscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem	2-3 minutes			BIOS upgrade
suspend after "Bridge controller" message, won't resumeIt is normal for the cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest and keyboard pairCursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest.Cursor moves in the opposite direction of TrackPoint movement• Send in for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest.Miscellaneous• Send in for repair.• Mismatched palmrest result in the cursor moving in the opposite direction of intended movement.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		<u>.</u>		
"Bridge controller" message, won't resumeIt is normal for the cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest.Cursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of TrackPoint movement• Mismatched palmrest result in the cursor moving in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		 Send in for repair 	• PT-586	Damaged U10
message, won't resumemessage, won't resumemessage, won't resumemessage, won't resumeTrackPoint/Cursor				
resumeIt is normal for the cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latestCursor pointer "flying" or drifting excessively.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of TrackPoint movement• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. Mismatched keyboard pairMiscellaneous• Send in for repair.• Mismatched palmrest and keyboard pair• Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem				
TrackPoint/CursorIt is normal for the cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest.Cursor moves in the opposite direction of TrackPoint movement• Send in for repair.• Mismatched palmrest and keyboard pair• TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem	-			
Cursor pointer drifts slightly.• It is normal for the cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.• Keyboard and palmrest.• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest.Cursor moves in the opposite direction of TrackPoint movement• Mismatched palmrest and keyboard pair• Mismatched palmrest and keyboard pair• Be sure keyboards are tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem				
drifts slightly.cursor to drift slightly as the circuit does a self calibrate every once in a while • Send in for repair.palmrest.tested with the correct palmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest.Cursor moves in the opposite direction of TrackPoint movement• Send in for repair.• Mismatched palmrest and keyboard pair• TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the opposite direction of intended movement.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		• It is normal for the	Keyboard and	• Be sure keyboards are
Cursor pointer "flying" or drifting excessively.as the circuit does a self calibrate every once in a while • Send in for repair.• Mismatched palmrest and keyboard pairpalmrest. The latest TrackPoint sensor (CTS must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of TrackPoint movement• Mismatched palmrest and keyboard pairpalmrest. The latest TrackPoint sensor (CTS) must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Phillips IC• Refer to Service Note 5500-01 for IC problem				
Cursor pointer "flying" or drifting excessively.a self calibrate every once in a while • Send in for repair.• Mismatched palmrest and keyboard pairTrackPoint sensor (CTS) must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moves in the opposite direction of TrackPoint movement• Mismatched palmrest and keyboard pairTrackPoint sensor (CTS) must match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		0,		
"flying" or drifting excessively.once in a while • Send in for repair.palmrest and keyboard pairmust match up with a CTS palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of TrackPoint movementmust match up with a CTS palmrest. Mismatched keyboards and palmrests result in the opposite direction of intended movement.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem	Cursor pointer	-	Mismatched	
excessively.• Send in for repair.keyboard pairCTS palmrest. Mismatched keyboards and palmrests result in the cursor moving in the opposite direction of TrackPoint movementCTS palmrest. Mismatched keyboards and palmrests result in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem				
Cursor moves in the opposite direction of TrackPoint movementMismatched keyboards and palmrests result in the cursor moving in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		Send in for repair.		
Cursor moves in the opposite direction of TrackPoint movementImage: Cursor moving in the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem				
Cursor moves in the opposite direction of TrackPoint movementin the opposite direction of intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem				and palmrests result in
the opposite direction of TrackPoint movementof intended movement. • Refer to Service Note 5500-04.Miscellaneous• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem		_		
direction of TrackPoint movement • Refer to Service Note 5500-04. Miscellaneous • Plug AC adapter into unit and let it charge • PT-586 Philips IC • Refer to Service Note 5500-04.				
TrackPoint movement 5500-04. Miscellaneous • Plug AC adapter into unit and let it charge • PT-586 Philips IC • Refer to Service Note 5500-01 for IC problem				
movement movement Miscellaneous • Plug AC adapter into unit and let it charge • PT-586 Philips IC • Refer to Service Note 5500-01 for IC problem				
Miscellaneous • Plug AC adapter into unit and let it charge • PT-586 Philips IC • Refer to Service Note 5500-01 for IC problem				5500-04 .
Loses time• Plug AC adapter into unit and let it charge• PT-586 Philips IC• Refer to Service Note 5500-01 for IC problem				
unit and let it charge IC 5500-01 for IC problem		• Dlug AC adapter into	DT FOC Dhilling	a Dofor to Comica Nata
for at least 24 hours.				5500-01 for iC problem

Symptom	Call Center	Likely Cause (in order)	Comments
	 Send in for repair if still losing time. 	 Sub-battery Discharged Flex cable (F1320-60950) PT-586 U46 or Y3 crystal IC 	and 5500-07 for backup battery problem (should be >4.8V). • Replace PT-586
PCMCIA failure	 Check device manager in Win95 for resource conflicts Send in for repair 	• PT-586	 Also check for configuration problems
Slow audio and display	• Send in for repair	• PT-CPU	 Check for loose heat sink screws — tightening should fix Check CPU fan for correct operation (use OmniBook diag program).
Computer gets hot	 It is normal for the computer to get warm/hot especially with 150 & 166 MHz MMX CPU and if charging the battery. Try using the fold down legs to raise the back of the machine to promote air flow. On OB2000 and OB5700, ensure air vents are clear. Send in for repair 	PT-586 PT-CPU RAM modules	Check CPU fan for correct operation (use OmniBook diag program).

Part 3

Hardware Repair

- Battery
- Memory
- Hard Disk Drive
- Floppy Disk Drive
- Small Parts
- Display
- Keyboard
- Icon Board
- CPU Module
- Logic PCA Board
- Programmable Flash BIOS IC
- Video Memory
- Other Components and Accessories

CAUTION: Always provide proper grounding when performing any of the following repairs. An electrostatic discharge may cause irreparable damage to the OmniBook and its components.

Battery

(End User Replaceable)

The OmniBook 2000 and 5700 must use the F1193B (F1193-60902) Standard Lithium Ion battery or the F1194B (F1194-60902) Enhanced Lithium Ion battery. Both of these batteries are fully compatible with the OmniBook 5500. Do not use either the F1193A (F1193-60901) or F1194A (F1194-60901) battery in the OmniBook 2000 or 5700 as data corruption may occur on the hard disk drive.

WARNING: Do not mutilate, puncture, or dispose of batteries in fire. The batteries can burst or explode, releasing hazardous chemicals. A rechargeable battery pack must be recycled or disposed of properly.

Battery	Description	Part Number	OB2000	OB5500	OB5700
F1193A	Standard Lilon	F1193-60901		\checkmark	
F1193B	Standard Lilon	F1193-60902	✓	\checkmark	✓
F1194A	Enhanced Lilon	F1194-60901		\checkmark	
F1194B	Enhanced Lilon	F1194-60902	\checkmark	\checkmark	\checkmark

Table 15 - Battery Compatibility Matrix

Required Equipment

none

Removal Procedure

1. Slide the battery release switch to the right and slide the battery out of its compartment. See Figure 19 - note, this perspective is with the OmniBook upside down, which is not necessary.

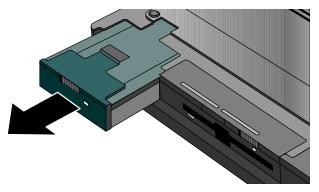


Figure 19 - Removing the Battery

Replacement Procedure

1. Reverse the above Removal Procedure.

Memory (End User Replaceable)

CAUTION: To avoid damage due to electrostatic discharge, handle the memory module by the edges only.

The table below lists each of the available memory modules for the OmniBook 2000, 5500, and 5700. The check marks indicate which memory modules are compatible with each OmniBook.

Memory	Part Number	Exchange p/n	OB2000	OB5500	OB5700
8-MB	F1134-60901	F1134-69001	\checkmark	\checkmark	\checkmark
16-MB	F1135-60901	F1135-69001	\checkmark	\checkmark	\checkmark
32-MB	F1136-60901	F1136-69001	\checkmark	\checkmark	\checkmark
64-MB	F1335-60901	F1335-69091	\checkmark		\checkmark

Table 16 - Memory Compatibility Matrix

Required Equipment

• Flat-bladed prying device (or fingernail)

Removal Procedure

- 1. Exit all applications, including Windows.
- 2. Remove the ac adapter and battery(ies) from the OmniBook.
- 3. Use a flat-bladed prying device (or fingernail) to remove the cover from the memoryexpansion slot.
- 4. Pull out the memory board by lifting up on the removal tab. See Figure 20.

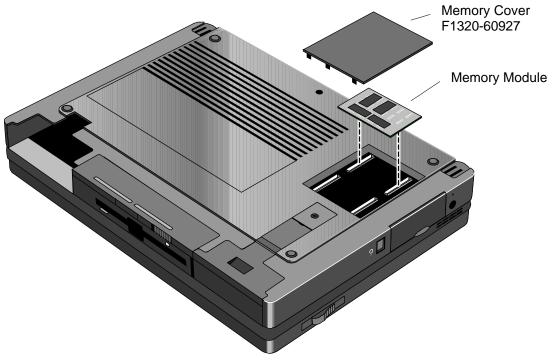


Figure 20 - Removing Memory

Replacement Procedure

1. Align the memory module over the connector slots and firmly press into place.

CAUTION: Avoid pressing the center of the memory module. This action could crack the board.

2. Replace cover and battery(ies) and reset the OmniBook.

Hard Disk Drive (End User Replaceable)

Whereas all the hard disk drives are compatible between the OmniBook 2000, 5500, and 5700, the table below indicates which hard drives were originally shipped with each corresponding OmniBook.

Hard Drive	Part Number	Exchange p/n	OB2000	OB5500	OB5700	Hard Drive Plastic Kit Part #
810-MB	F1191-60901	F1191-69001		\checkmark		F1320-60947
1.35-GB	F1192-60901	F1192-69001		\checkmark		F1320-60947
2.1-GB	F1339-60901	F1339-69001	\checkmark		\checkmark	F1350-60920
3.1-GB	F1348-60901	F1348-69001			\checkmark	F1350-60920
1.44-GB	F1375-60901	F1375-69001	\checkmark			F1350-60920

Table 17 - Hard Drive Availability Matrix

Required Equipment

Small phillips screwdriver

Removal Procedure

- 1. Exit all applications, including Windows.
- 2. Turn the OmniBook off and remove the battery and ac adapter.
- 3. Remove the screw and Security Cover located at the back end of the hard disk drive. See Figure 21.

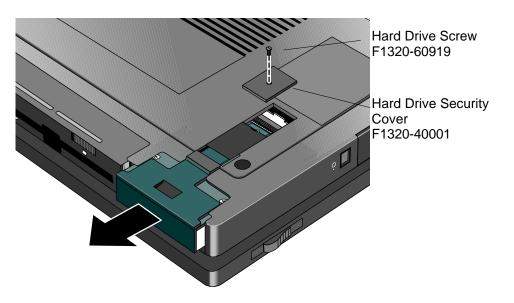


Figure 21 - Removing the Hard Disk Drive

- 4. Firmly slide the drive out of the compartment. This will take some force.
- 5. If the new hard drive does not have a plastic case, the old plastic case can be removed from the old hard drive by removing the four screws on the bottom of the case. Depending on the manufacturer of the replacement hard drive, the screw hole placement may vary. The

plastic portion of the hard drive may need to be removed to gain access to the screws of the plastic kit. See Figure 22.6. Now, the hard drive can be slid out of the case. See Figure 23.



Replacement Procedure

1. Reverse the above Removal Procedure.

Floppy Disk Drive

(End User Replaceable)

CAUTION: Do not remove the floppy disk drive while the OmniBook is actively reading or writing to it. Wait until the disk is inactive.

Required Equipment

• none

Removal Procedure

- 1. Slide the release switch on the floppy disk drive to the right.
- 2. Pull the pull-tab firmly to remove the floppy drive from the compartment. See Figure 24 note, this perspective is with the OmniBook upside down, which is not necessary.

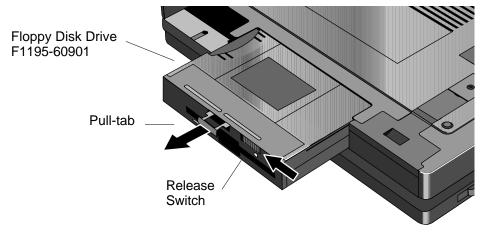


Figure 24 - Removing the Floppy Disk Drive

Replacement Procedure

1. Reverse the above Removal Procedure.

Small Parts

(End User Replaceable)

The following small parts are all end user replaceable. The procedures are the same for the OmniBook 2000, 5500, and 5700, except where noted.

Expansion Door - F1125-60920

Open the door and flex the center of the door until the side-tabs are released. Reverse to replace.

Display Contrast/Brightness Slider Button - F1371-60917

Use a blunt probe to gently pry the slider button from the display. To replace, align the button's prongs over the contrast/brightness post and press firmly into place.

Door, Flash BIOS - F1371-60901

On the OmniBook 2000, remove the screw securing the door and lift the door off the bottom case. Replace the door and screw. The OmniBook 5700 will have this feature added at a later date; the OmniBook 5500 will not.

Hard Drive Security Cover - F1320-40001

Use a small phillips screwdriver to remove the hard drive screw and security cover. Reverse to replace.

I/O Door - F1350-60910 (OB2000 & OB5700), F1320-60928 (OB5500 only)

Open the door and flex the center of the door until the side-tabs are released. Reverse to replace.

Memory Cover - F1320-60927

Use a flat-blade prying device or fingernail to pry the memory cover off. To replace, snap the cover into position.

PCMCIA Button Assembly - F1320-60949

"Unfold" the button, grasp firmly, and pull free. Reverse to replace.

Plastic Feet - F1320-60929 Flip the foot into an "open" position. Twist the foot to remove. Reverse to replace.

Printer Port Door - F1125-60918

Open the door and flex the center of the door until the side-tabs are released. Reverse to replace.

Rubber Feet - F1320-60957

Place a probe or similar device between the rubber foot and the plastic of the bottom case. Pry upward to pop the foot out. To replace, firmly press the foot into the hole.

Trackpoint[™] Cap - F1320-60971

Grasp the cap firmly and pull upward. Reserve to replace.

Display (HP Authorized Service Providers Only)

The below table summarizes the compatibility of displays between the OmniBook 2000, 5500, and 5700. Please note, that the proper Icon Board **must** be matched with the corresponding display type and manufacturer.

Table 18 - Display Compatibility Matrix

Display Part #	Display Type	OB2000	OB5500	OB5700	Icon Board ¹	Part Number
F1320-69004	10.4" TFT		\checkmark		PCA PT-ICON	F1320-60924
F1320-69005	11.3" DSTN		\checkmark		PCA PT-ICON	F1320-60924
F1320-69006	12.1" TFT Hitachi*	\checkmark	\checkmark	\checkmark	PCA PT-ICON ²	F1320-60924
					PCA PB-ICON/SVGA ³	F1350-60907
F1320-69094	12.1" TFT Samsung*	\checkmark	\checkmark	\checkmark	PCA PT-ICON/SMG ²	F1320-60993
					PCA PB-ICON/SVGA ³	F1350-60907
F1350-69002	12.1" TFT XGA			\checkmark	PCA PB-ICON/XGA	F1350-60908
F1371-69006	12.1" DSTN	\checkmark			PCA PB-ICON/DSTN	F1371-60911

* At the time of this printing, Samsung is considered the primary supplier of 12.1" TFT displays. Unless otherwise indicated, all 12.1" TFT SVGA orders should be placed against F1320-69094. However, this is subject to change without notice.

Required Equipment

• Small phillips screwdriver

Removal Procedure

- 1. Exit all applications, including Windows.
- 2. Turn the OmniBook off and remove the battery and ac adapter.
- 3. Follow the Hard Disk Drive Removal Procedure on page 67.
- 4. Turn the unit over and remove the two display screws located under the plastic feet. See Figure 25 on page 72.
- 5. Turn the unit back over and remove the Icon Assembly by applying pressure with the thumbs. See Figure 26 on page 72. Note, it is helpful to lift up on the display slightly.
- 6. The Icon Assembly flex cable may be disconnected at this point to completely remove the Icon Assembly, however, it is not necessary for the removal of the display.
- With the Icon Assembly either removed or out of the way, disconnect the Display Cables⁴ and the two Display Grounding Cables. See Figure 27 on page 73.

¹ Refer to Table 20 - Icon Board Compatibility Matrix on page 79.

² For the OmniBook 5500 only

³ For the OmniBook 2000 and 5700 only

⁴ The type of display cables (such as flex or wire harness) may vary depending on the type of display (such as TFT or DSTN).

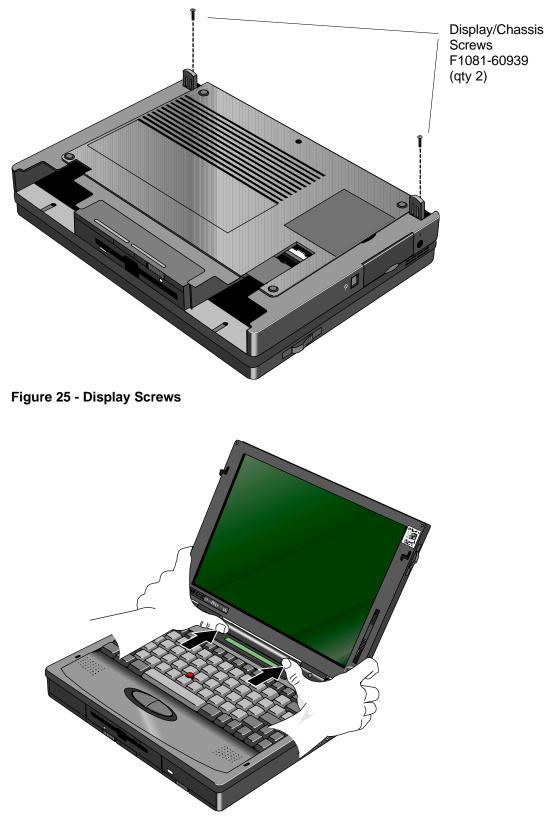


Figure 26 - Icon Assembly Removal

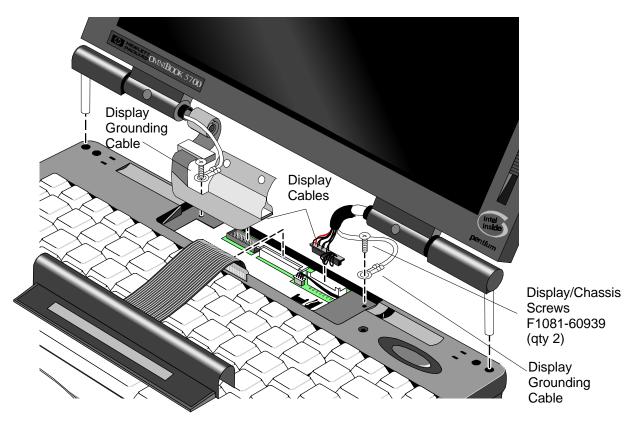


Figure 27 - Display Cables

Replacement Procedure

- 1. To replace, reverse the above Removal Procedure. Take care to properly position the Display Flex Cable. It must be wrapped three times around the post. See Figure 28.
- **CAUTION:** To avoid crimping the icon assembly flex cable, ensure that it is tucked inside of the icon assembly "tunnel."

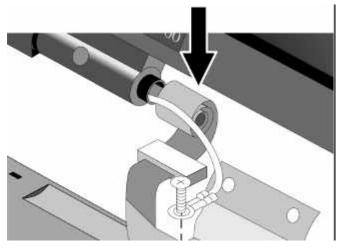


Figure 28 - Display Flex Cable Position

Display Labels

The OmniBook replacement display must be affixed with four labels before it is suitable to return to the customer. The below table summarizes the proper labels for each OmniBook and display type. The illustrations that follow demonstrate the appropriate placement of the Windows 95, Intel, and OmniBook model labels for each of the three display sizes available.

Display Size/Type	OmniBook Model	HP OmniBook Label	Windows 95 Label	OmniBook Model Label	Intel Inside Label
12.1" DSTN SVGA	2000CS	F1065-80005	7121-7353	F1371-60913	5182-5113
12.1" TFT SVGA	2000CT	F1065-80005	7121-7353	F1371-60912	see footnote ⁵
11.3" DSTN SVGA	5500CS	F1065-80005	7121-7353	F1320-60969	5182-5113
10.4" TFT SVGA 12.1" TFT SVGA	5500CT	F1065-80005	7121-7353	F1320-60970	5182-5113
12.1" TFT SVGA	5700CT	F1065-80005	7121-7353	F1350-60917	7121-7455
12.1" TFT XGA	5700CTX	F1065-80005	7121-7353	F1350-60918	7121-7455

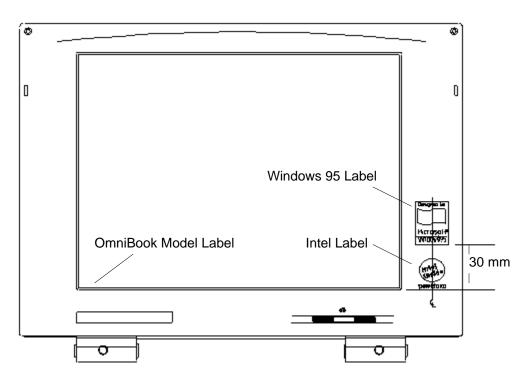


Figure 29 - 10.4" Display Label Placements

⁵ 7121-7455 for OmniBook with MMX Technology, 5182-5113 for OmniBook without MMX Technology

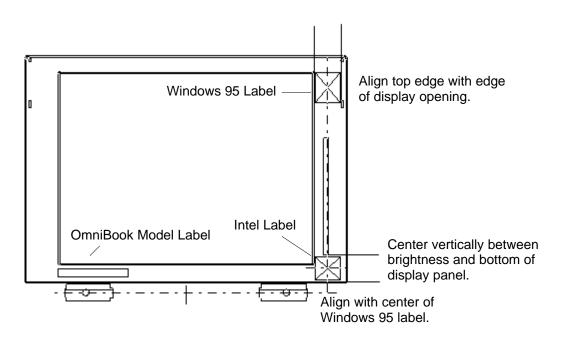


Figure 30 - 11.3" Display Label Placements

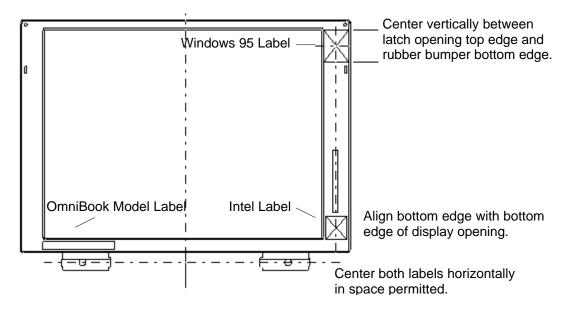


Figure 31 - 12.1" Display Label Placements

Keyboard (HP Authorized Service Providers Only)

Required Equipment

• Small phillips screwdriver

Removal Procedure

- 1. Exit all applications, including Windows.
- 2. Turn the OmniBook off and remove the battery and ac adapter.
- 3. Follow the Hard Disk Drive Removal Procedure on page 67 and the Floppy Disk Drive Removal Procedure on page 69 to remove these components.
- 4. Remove the four Palmrest Screws (see Figure 32 for the location of the screws Note, the Display is shown removed for illustrative purposes; it is not necessary for the repair procedure).

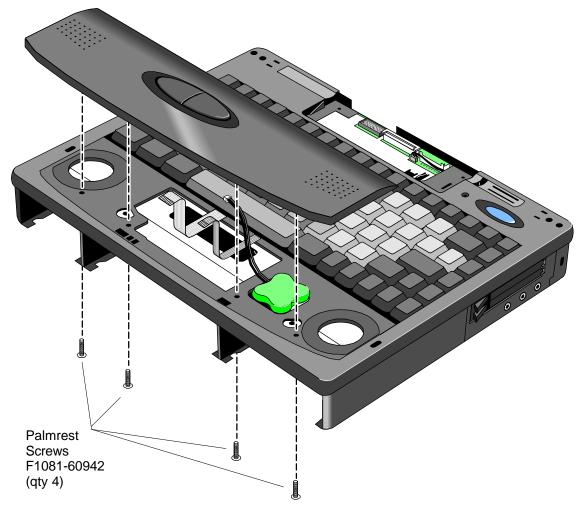


Figure 32 - Palmrest Assembly Removal

- 5. Flex the center of the Palmrest Assembly to release the side-tabs. Disconnect the Keyboard Flex cable. The other two cables can remain in place, or disconnect to fully remove the Palmrest Assembly.
- 6. Remove the four Keyboard Screws (see Figure 33 for the location of the screws).

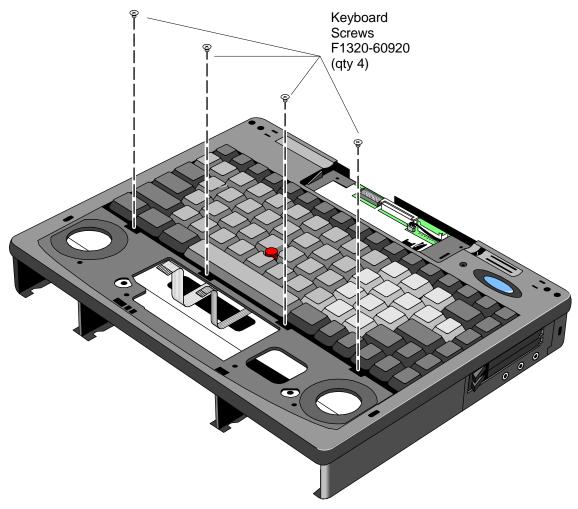


Figure 33 - Keyboard Screws

- 1. Lift up the Keyboard be sure to thread the Keyboard Flex Cable underneath the plastic of the Upper Chassis Case.
- 2. To remove the Keyboard further, the DC Power Supply Board must be removed. Pull up **evenly** on both tabs of the Power Board. See Figure 34.

CAUTION: Applying uneven pressure when removing the Power Board may cause damage to the connector pins.

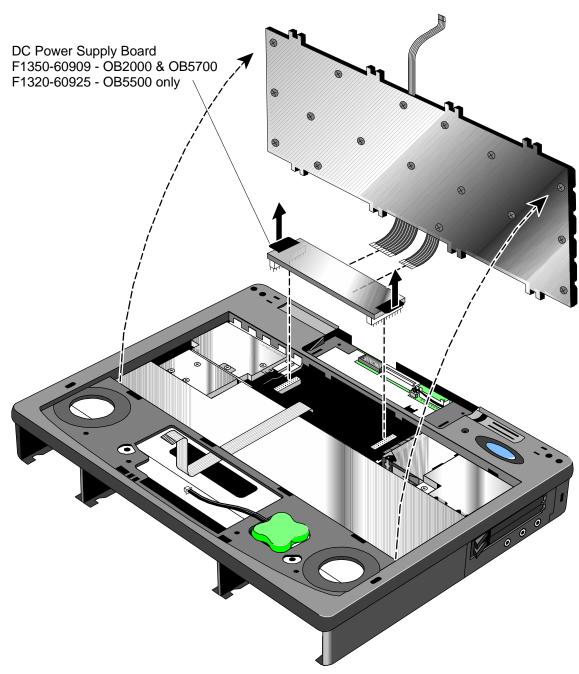


Figure 34 - Keyboard Removal

9. Disconnect the two flex cables from the Power Board.

Replacement Procedure

1. Reverse the above Removal Procedure. Take note to properly thread the Keyboard Flex Cable underneath the plastic of the Upper Chassis Case.

Icon Board (PCA PB-ICON) (HP Authorized Service Providers Only)

The table below lists the icon boards compatible with the OmniBook 2000, 5500, and 5700. Note the column indicating the matching LCD type (**the icon boards and LCD types must** *not* **be mismatched**). There are no exchange part numbers for any of the icon boards.

Icon Board	Part Number	OB2000	OB5500	OB5700	LCD Type/Mfg.	LCD Part # ⁶
PCA PT-ICON	F1320-60924		\checkmark		All/Hitachi	see footnote ⁷
PCA PT-ICON/SMG	F1320-60993		✓		12.1 TFT/Samsung	F1320-69094
PCA PB-ICON/SVGA	F1350-60907	\checkmark		\checkmark	SVGA TFT	F1320-69094
						F1320-69006
PCA PB-ICON/XGA	F1350-60908			\checkmark	XGA TFT	F1350-69002
PCA PB-ICON/DSTN	F1371-60911	\checkmark			DSTN	F1371-69006

Table 20 - Icon Board Compatibility Matrix

Required Equipment


Small phillips screwdriver

Removal Procedure

- 1. Exit all applications, including Windows.
- 2. Turn the OmniBook off and remove the battery and ac adapter.
- 3. Follow the Display Removal Procedure on page 71 and the Keyboard Removal Procedure on page 74 to remove these components.
- 4. Remove the Upper Chassis Case Screw and disconnect the On/Suspend Button and Microphone Cables. Lift the Upper Chassis from the base of the unit. See Figure 35.

⁶ Also refer to Table 18 - Display Compatibility Matrix on page 71

⁷ F1320-69004 for 10.4" TFT, F1320-69005 for 11.3" DSTN, and F1320-69006 for 12.1" TFT

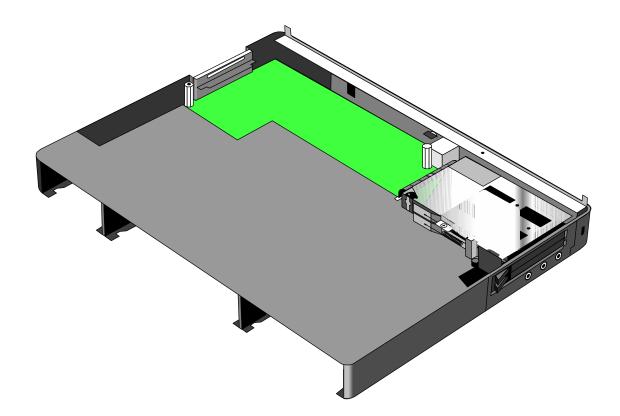

1. Remove the Icon Board Screw (see Figure 36). Gently rock the Icon Board back and forth to free it from the connector.

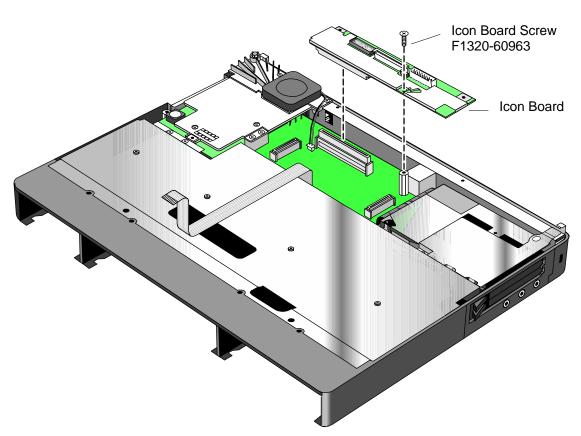


Figure 36 - Icon Board Removal

Replacement Procedure1. Reverse the above Removal Procedure.

CPU Module (HP Authorized Service Providers Only)

The following table lists the various CPU modules for the OmniBook 2000, 5500, and 5700.

CPU Module	Part Number	Exchange Part #	OB2000	OB5500	OB5700
100C	F1320-60901	F1320-69001		✓	
120C	F1320-60902	F1320-69002		\checkmark	
133C	F1320-60903	F1320-69003		\checkmark	
150C (MMX)	F1350-60904	F1350-69004			\checkmark
166C (MMX)	F1350-60905	F1350-69005			\checkmark
P54C-133	F1371-60908	F1371-69008	 ✓ 		
P55C-133 (MMX)	F1371-60909	F1371-69009	✓		

Table 21 - CPU Module Compatibility Matrix

Required Equipment

Small phillips screwdriver

Removal Procedure

- 1. Exit all applications, including Windows.
- 2. Turn the OmniBook off and remove the battery and ac adapter.
- 3. Follow the Display Removal Procedure on page 71 and the Keyboard Removal Procedure on page 74 to remove these components.
- 4. Remove the Upper Chassis Case Screw and disconnect the On/Suspend Button and Microphone Cables. Lift the Upper Chassis Case from the base of the unit. See Figure 35 on page 80.

5a. For the OmniBook 2000 and 5700, follow these steps:

- 1) Remove the two CPU Screws (see Figure 37 on page 83 for the location of the screws) and disconnect the CPU Fan Cable.
- 2) Gently rock the CPU Module back and forth to remove.
- 3) Remove the two CPU Fan Screws and the CPU Fan (see Figure 37 for the location of the screws).

5b. For the OmniBook 5500, follow these steps:

- 1) Remove the two Heat Spreader Screws and lift away the Heat Spreader. Refer to Figure 38 on page 84.
- 2) Remove the one Heat Pipe Bracket Screw and lift away the Heat Bracket.
- 3) Very carefully lift the Heat Pipe from the Keyboard Shielding Plate. Do not bend the Heat Pipe as this will decrease its effectiveness.
- 4) Remove the two Heat Sink Screws and the four CPU Screws. Gently rock the CPU back and forth to remove.

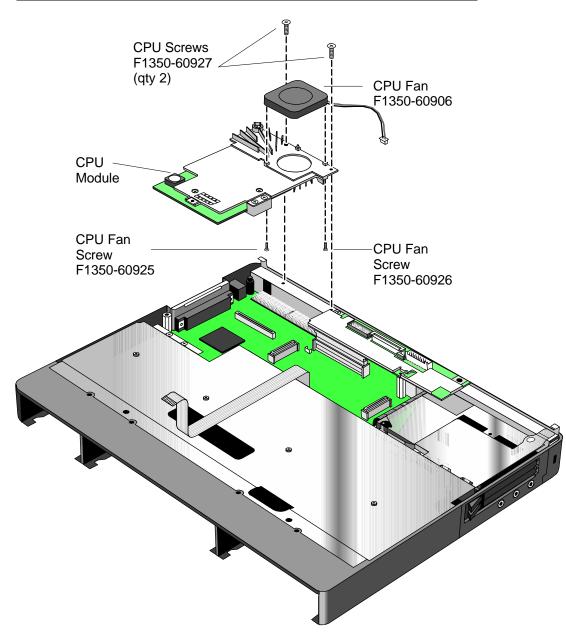


Figure 37 - CPU and CPU Fan Removal (OB2000 & OB5700 only)

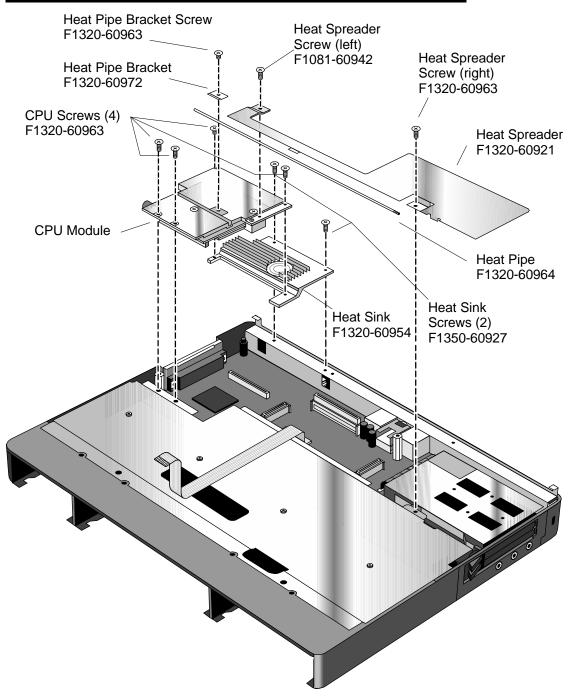


Figure 38 - CPU and Heat Spreader Removal (OB5500 only)

Replacement Procedure

1. Reverse the above Removal Procedure

Logic PCA Board (PCA PB-586/IO Bracket)

(HP Authorized Service Providers Only)

The OmniBook 2000 and 5700 are shipped with an electronic serial number programmed in EEPROM on the Logic PCA Board. This built-in serial number will help MIS managers in tracking assets and software configuration. Serial numbers can also be used for security and in tracking lost or stolen notebooks. The Desktop Management Interface (DMI) TopTools application shipped with the OmniBook can be used to read the serial number locally and across a network (requires HP OpenView network administration software architecture).

Programming the Electronic Serial Number

All replacement Logic PCA Boards will arrive without a serial number programmed in EEPROM. The following procedure provides the steps necessary to program the electronic serial number

1. After installation of the replacement Logic PCA Board and upon reboot, the OmniBook will halt with this prompt:

INVALID ELECTRONIC SERIAL NUMBER PRESS ANY KEY TO CONTINUE

- After a key is pressed, the OmniBook will continue a normal boot process. The HP Authorized Service Provider must program a valid serial number before the OmniBook can be shipped to the customer.
- 3. Boot the OmniBook to the DOS command-line an run the ESN.EXE program located in the c:\omnibook\diag directory.
- 4. The ESN program will prompt for a valid serial number.
- 5. Enter the serial number located on the bottom of the OmniBook. Use uppercase letters to be consistent with the appearance of the serial number on the OmniBook. The ESN program will burn the serial number into EEPROM.

Overriding an Incorrect Electronic Serial Number

If an incorrect serial number is inadvertently burned into EEPROM, it can be corrected. Perform the following steps:

- 1. Run the ESN.EXE program located in the c:\omnibook\diag directory.
- 2. The ESN program will prompt to confirm that the serial number is incorrect. It will then generate a five (5) digit number key.
- 3. The HP Authorized Service Provider must contact Hewlett-Packard Technical Support at this point.
- 4. HP Technical Support will ask for a CZ authorization number, or comparable credentials, and the five (5) digit number (from step 2).
- 5. HP Technical Support will provide a validation key to the HP Authorized Service Provider.
- 6. Enter the validation key. This will erase the existing electronic serial number and prompt for a new number.
- 7. Follow the above steps in **Programming the Electronic Serial Number** to enter the correct serial number.

Note, updating the BIOS or software on the OmniBook will **not** affect the electronic serial number.

The following table summarizes the different logic PCA boards for the OmniBook 2000, 5500, and 5700.

Logic PCA	Part Number	Exchange Part #	OB2000	OB5500	OB5700
PCA PT-586 with I/O Bracket	F1320-60926	F1320-69026		✓	
PCA PB-586 with I/O Bracket	F1350-60901	F1350-69001	✓		 ✓

Required Equipment

- Small phillips screwdriver
- 5mm hexdriver

Removal Procedure

- 1. Exit all applications, including Windows.
- 2. Turn the OmniBook off and remove the battery, ac adapter. For the OmniBook 2000 and 5700 only, remove the Logic PCA Screw (see Figure 39 for location).

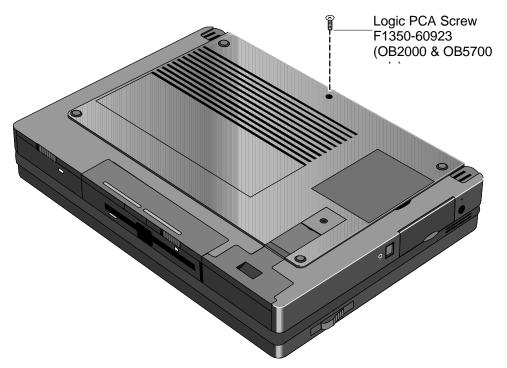


Figure 39 - Additional Screw for Logic PCA Removal

- 3. Follow the CPU Module Removal Procedure on page 85 and the Icon Board Removal Procedure on page 79 to gain access to the Logic PCA Board.
- 4. Now remove the Card Bus Bracket (OB2000 & OB5700 only) then the Keyboard Shielding Plate (five screws). See Figure 40 on page 87 for location of the screws.

5. To remove the Logic PCA Board from the Lower Chassis Case, three screws, two standoffs, the FFC Cable T/B to M/B, and the HDD-FPC Flex must first be removed. See Figure 41 on page 88 for the location of these components. The IR Lens and Bezel are now accessible.

CAUTION: Apply even pressure to both sides of the HDD FPC Flex when removing or replacing to avoid damage to the connector pins on the Logic PCA.

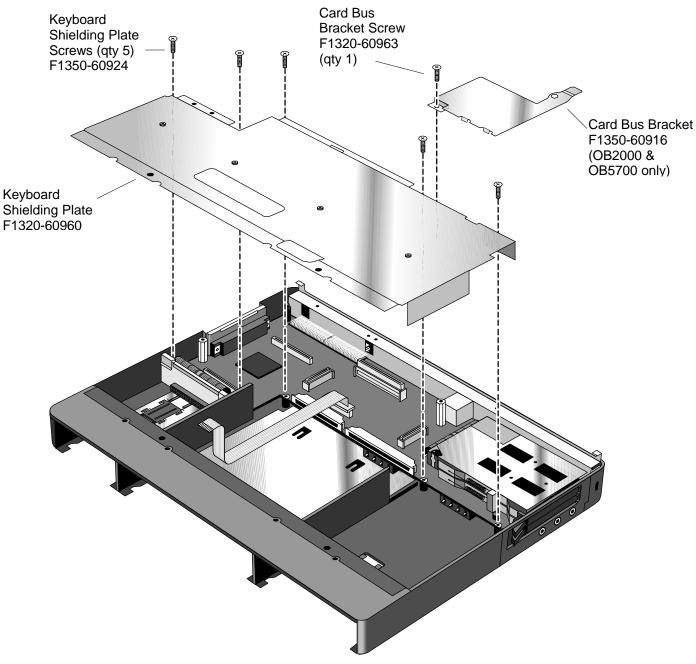


Figure 40 - Keyboard Shielding Plate Removal

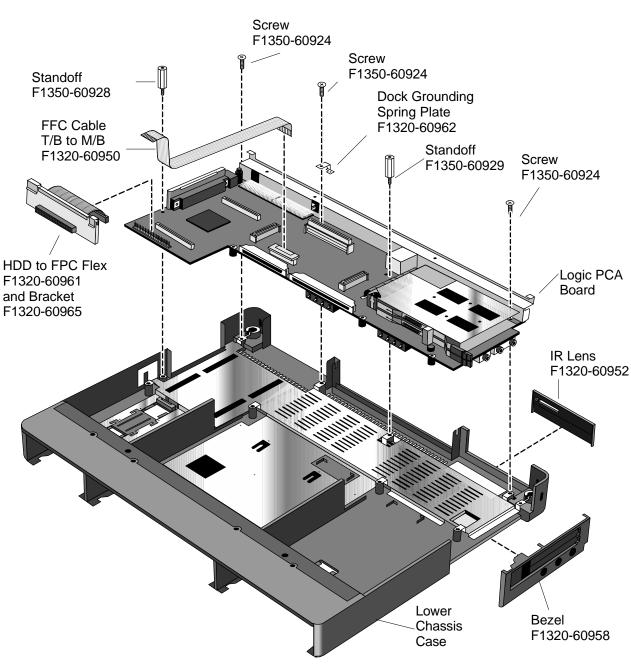


Figure 41 - Logic PCA Board Removal

Replacement Procedure

1. Reverse the above Removal Procedure.

Programmable Flash BIOS IC

(HP Authorized Service Providers Only)

The replacement BIOS IC will contain enough basic BIOS programming to boot the OmniBook. However, after replacing the IC, the BIOS must be reprogrammed. Hewlett-Packard prefers that the system is programmed with the latest BIOS for the respective OmniBook. The latest BIOS can be downloaded from the WWW (see Table 1 - Additional Resources on page vi).

Required Equipment

- Small phillips screwdriver
- 5mm hexdriver (OB5500 and OB5700 only)
- BIOS Insertion/Removal Tool (F1371-60904)

Removal Procedure

- 1. Exit all applications, including Windows.
- 2. Turn the OmniBook off and remove the battery and ac adapter.
- 3a. For the OmniBook 5700⁸ and 5500, follow the Logic PCA Board Removal Procedure to gain access to the BIOS IC. Turn the Logic PCA over and proceed with step four (4) below.
- 3b. For the OmniBook 2000, remove the Flash BIOS Door as shown in Figure 42.

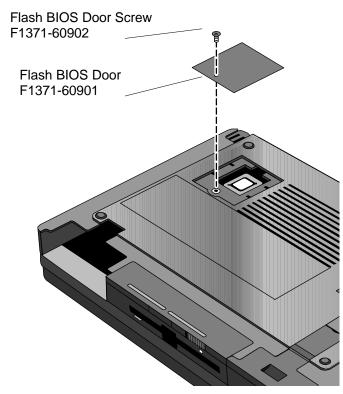


Figure 42 - Flash BIOS Door Removal

⁸ At a later date, the OmniBook 5700 will be compatible with the OmniBook 2000's Lower Chassis Case. At that time, removal of the Logic PCA will not be necessary to gain access to the Flash BIOS IC; it will be accessible via the Flash BIOS Door as seen in Figure 42.

4. Use a BIOS Insertion/Removal Tool to extract the BIOS IC from the Logic PCA. See Figure 43 on page 90.

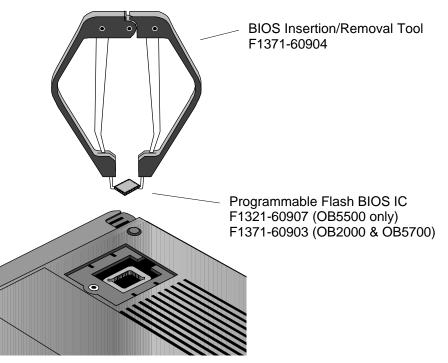


Figure 43 - Flash BIOS IC Removal

Replacement Procedure

- 1. Align the Flash BIOS IC with the slot on the Logic PCA. The IC is keyed to fit correctly.
- 2. Press down firmly on the IC to ensure a proper connection. See Figure 44.
- 1. Replace the remainder of the OmniBook components.

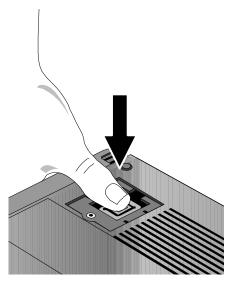


Figure 44 - Replacing the Flash BIOS IC

Video Memory (OB2000 & OB5700 Only)

(HP Authorized Service Providers Only)

Note: Only the OmniBook 2000 and 5700 contain video memory that is replaceable. This repair procedure is not applicable for the OmniBook 5500.

Also be aware that the Video Memory Board contains only 1MB of the total 2MB of video RAM on the system. The other 1MB of video RAM is integrated with the Logic PCA Board. Therefore, to replace *all* of the video RAM, the Logic PCA Board must be replaced (the replacement logic PCA will contain a new video RAM board).

Required Equipment

- Small phillips screwdriver
- 5mm hexdriver

Removal Procedure

- 1. Exit all applications, including Windows.
- 2. Turn the OmniBook off and remove the battery and ac adapter.
- Follow the Logic PCA Board Removal Procedure on page 85 to gain access to the Video Memory.
- 4. Remove the one necessary screw on the Logic PCA Board. See Figure 45.
- 5. Rock the Video Memory Board gently back and forth to remove.

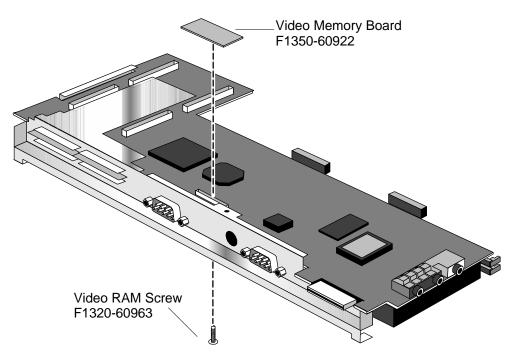


Figure 45 - Video Memory Removal

Replacement Procedure

1. Reverse the above Removal Procedure.

Other Components and Accessories

(HP Authorized Service Providers Only)

The below table lists additional replaceable components and the disassembly procedure(s) necessary to gain access to each. The accessories require a unit exchange (no repairable parts), unless otherwise indicated.

Component	Disassembly Procedure(s)/page#	Equipment	Special Notes
Bezel	Logic PCA Board - page 85	Small phillips screwdriver, 5mm hexdriver	
Card Bus Bracket	Display - page 71 Keyboard - page 74	Small phillips screwdriver	The Upper Chassis must also be removed.
CD-ROM Drive			The CD-ROM Drive contains no repairable components. A unit exchange is required.
CPU Fan	CPU Module - page 82	Small phillips screwdriver	
DC Power Supply Board	Keyboard - page 74	Small phillips screwdriver	
Dock Grounding Spring Plate	Icon Board - page 79	Small phillips screwdriver	Remove the one screw holding the Spring in place.
Docking System			The Docking System (F1189) does contain repairable components. Refer to the F1189-90008 manual for instructions.
EMI Spring for LCD Hinge	Display - page 71 Keyboard - page 74	Small phillips screwdriver	The Upper Chassis must also be removed. The Hinge simply slips out of its socket.
FFC Cable T/B to M/B	Keyboard - page 74	Small phillips screwdriver	
HDD PCB Bracket	Display - page 71 Keyboard - page 74	Small phillips screwdriver	The Upper Chassis, Keyboard Shielding Plate, and Card Bus Bracket must also be removed.
HDD-FPC Flex	Display - page 71 Keyboard - page 74	Small phillips screwdriver	The Upper Chassis, Keyboard Shielding Plate, and Card Bus Bracket must also be removed.
Heat Pipe	CPU Module - page 82	Small phillips screwdriver	
Heat Pipe Bracket	CPU Module - page 82	Small phillips screwdriver	
Heat Pipe Spreader	CPU Module - page 82	Small phillips screwdriver	
Heat Sink	CPU Module - page 82	Small phillips screwdriver	

Table 23 - Other Repairable Components and Accessories

Component	Disassembly	Equipment	Special Notes
	Procedure(s)/page#		
I/O Bracket Grounding Clips	Logic PCA Board - page 85	Small phillips screwdriver, 5mm hexdriver	The Clips easily slide off either side of the Logic PCA Board.
Icon Assembly	Display - page 71	Small phillips screwdriver	The Display does not need to be completely removed.
IR Lens	Logic PCA Board - page 85	Small phillips screwdriver, 5mm hexdriver	
Keyboard Shielding Plate	Display - page 71 Keyboard - page 74	Small phillips screwdriver	The Upper Chassis and Card Bus Bracket must also be removed.
Lower Chassis Case	Logic PCA Board - page 85	Small phillips screwdriver, 5mm hexdriver	
Palmrest Assembly	Keyboard - page 74	Small phillips screwdriver	The Keyboard does not need to be completely removed.
Port Replicator			The Port Replicator contains no repairable components. A unit exchange is required.
Sub Battery	Keyboard - page 74	Small phillips screwdriver	The Sub Battery is accessible once the Palmrest is lifted up.
Upper Chassis Case	Display - page 71 Keyboard - page 74	Small phillips screwdriver	Remove the one screw and disconnect the On/Suspend and Microphone Cables.

Appendix A - Technical Specifications

Mass Storage Specifications

Hard Disk Drive

The hard disk drive can be removed by the user for easy upgrades.

Hard drive manufacturers are subject to change without notice.

	810-million-byte	1.35-billion-byte	1.44-billion- byte	2.1-billion-byte	3.1-billion- byte
Manufacturer	Toshiba	Toshiba	Toshiba	Toshiba	Toshiba
Interface	ATA2	ATA2	ATA2 /ATA3	ATA2 /ATA3	ATA2 /ATA3
Recording	PRML (Partial	PRML (Partial	PRML (Partial	PRML (Partial	PRML (Partial
Method	Response	Response	Response	Response	Response
	Maximum	Maximum	Maximum	Maximum	Maximum
	likelihood)	likelihood)	likelihood)	likelihood)	likelihood)
Heads	Peak Detect	MR (Magneto	MR (Magneto	MR (Magneto	MR (Magneto
		Resistive)	Resistive)	Resistive)	Resistive)
Average access (read)	13 ms	13 ms	13 ms	13 ms	13 ms
Track to track seek	3 ms	3 ms	3 ms	3 ms	3 ms
Full Track	25 ms	25 ms	25 ms	25 ms	25 ms
Average latency	7.14 ms	7.14 ms	7.14 ms	7.4 ms	6.18 ms
Rotational speed	4200 rev/m	4200 rev/m	4200 rev/m	4200 rev/m	4852 rev/m
Media Transfer	24.7 (inner), 44.9	38.1 (inner), 54.8	38.6 (inner),	38.6 (inner),	43.8 (inner),
rate	(Outer) Mbits/sec	(Outer) Mbits/sec	69.8 (Outer)	69.8 (Outer)	68.9 (Outer)
			Mbits/sec	Mbits/sec	Mbits/sec
Buffer to host	16.6 Mbytes/sec	16.6 Mbytes/sec	16.6 Mbytes/sec	16.6 Mbytes/sec	16.6 Mbytes/sec
Buffer size	128KB (read and write segmented buffer)	128KB (read and write segmented buffer)	128KB (read and write segmented buffer)	128KB (read and write segmented buffer)	128KB (read and write segmented buffer)
Spindle start time	5 sec (typical)	5 sec (typical)	5 sec (typical)	5 sec (typical)	5 sec (typical)
Reliability:					
MTBF: Power-	300,000 hours	300,000 hours	300,000 hours	300,000 hours	300,000 hours
on Hours					
Unrecoverable	1.0E-13 bits	1.0E-13 bits	1.0E-13 bits	1.0E-13 bits	1.0E-13 bits
errors	transfer	transfer	transfer	transfer	transfer
Configuration:					
Sector Size	512 Bytes	512 Bytes	512 Bytes	512 Bytes	512 Bytes
User Cylinders	2,920	3,650	5,160	5,160	5,020
Data Heads	6	6	4	6	10
Disks	3	3	2	3	5

Table 24 - Hard Disk Drive Specifications

Floppy Disk Drive

The floppy disk drive can either be placed in the center bay slot or connected to the parallel port. It is hot-swappable and is configured as drive A by default.

Floppy disk drive manufacturers are subject to change without notice.

	3.5-inch Floppy Drive			
Manufacturer	TEAC			
Data Capacity	1.44MB (formatted)	724KB (formatted)		
	2M (unformatted)	1M (unformatted)		
Data Transfer Rate	500k bits/sec	250k bits/sec		
Disk Rotational Speed	300rpm			
Track Density	135tpi			
Cylinders	80			
Track-to-track Time	3ms			
Average Seek Time	94ms			
Start Time	480ms			
Average latency	100ms			
Mean Time Between	30,000 hours			
Failures				
Error Rate				
Soft (recoverable)	1 or less per 10 ⁹ bits read			
Hard	1 or less per 10 ¹² bits read			
(unrecoverable)				
Seek	1 or less per 10 ⁶ bits read			

Table 25 - Floppy Disk Drive Specifications

CD-ROM Drive

The CD-ROM Drive is an accessory to the OmniBook. It is designed to operate only in the center bay.

CD-ROM drive manufacturers are subject to change without notice.

	6x CD-ROM Drive	10x CD-ROM Drive
Manufacturer	Toshiba	Toshiba
Transfer Rate	900K sustained	1710 KB/sec max
Buffer	128K	128K
Access Speed	190ms	150ms
Start-up Time	2.3 s (6x)	2.3 s (10x)
Seek Time	160ms	130ms
Modes	CDROM (Mode 1&2), Photo CD, CD	CDROM (Mode 1&2), Photo CD, CD
	Plus, CDXA, CD-I, Multisession	Plus, CDXA, CD-I, Multisession

System Resources

Below are default values for system resources. To see other, non-default possibilities, use the System Configuration Utility (SCU) which lists port and audio device configurations in the Input/Output menu. For additional information on configuring system resources, refer to the System Configuration Utility section on page 48.

The tables in this section show typical resource usage as set up by the OmniBook BIOS. Plugand-play operating systems, drivers, and SCU settings may change some of the entries.

System Interrupts

The following tables list the available interrupts for the OmniBook 2000, 5500, and 5700.

-	
0	System timer
1	Keyboard
2	Redirect IRQ 9
3	COM2 (IR) and COM4 (free in Win95 when docked)
4	COM1 and COM3 (serial port)
5	Crystal sound
6	Floppy drive
7	LPT1 (parallel port)
8	Real-time clock
9	MIDI
10	PCI-type interrupt: CardBus (undocked) / SCSI (docked)
11	Free
12	Mouse
13	Coprocessor
14	Internal hard disk (primary IDE controller)
15	Internal CD-ROM (secondary IDE controller)

Table 27 - System Interrupts for the OmniBook 2000 and 5700

Table 28 - System Interrupts for the OmniBook 5500

0	System timer
1	Keyboard
2	Redirect IRQ 9
3	COM2 (serial IR) and COM4 (free in Win95 when docked)
4	COM1 and COM3 (serial port)
5	Crystal sound
6	Floppy drive
7	LPT1 (parallel port)
8	Real-time clock
9	MIDI
10	Fast IR (undocked)/AMD SCSI (docked)
11	Free
12	Mouse
13	Coprocessor
14	Internal hard disk (primary IDE controller)

15	Internal CD-ROM (secondary IDE controller, free if no internal
	CD)

System Memory

The following tables list the memory maps for the OmniBook 2000, 5500, and 5700.

Table 29 - System Memory Map for the OmniBook 2000 and 5700

C0000-CAFFF	Chips & Technologies video BIOS	
CB000-CBFFF	Enhanced parallel port BIOS	
CC000-CFFFF	Free	
D0000-D1FFF TI1131 PC Card Controller		
D2000-E7FFF	Free	
E8000-FFFFF	Plug-and play ISA, PCI, and System BIOS	

Table 30 - System Memory Map for the OmniBook 5500

C0000-C9FFF	Chips & Technologies video BIOS
CA000-CAFFF	Enhanced parallel port BIOS
CB000-CFFFF	Free
D0000-D1FFF	Cirrus Logic PC Card Controller
D2000-E7FFF	Free
E8000-EDFFF	Plug-and play BIOS
EE000-EFFFF	Plug-and-Play ISA
F0000-FFFFF	System BIOS

System Input/Output Addresses

The following tables list the available I/O addresses for the OmniBook 2000, 5500, and 5700.

15C-15D	Super I/O in Docking System
170-178	Secondary HDD controller (internal CD-ROM)
1F0-1F7	Internal hard disk
200-201	Joystick
220-22F	Crystal sound
2F8-2FF	COM2 (infrared port)
330-331	MPU 401 (MIDI)
378-37A	LPT1 (printer port)
388-38B	Sound
3B0-3BB	VGA adapter
3C0-3DF	VGA adapter
3E0-3E1	PC card bridge on PCI
3F0-3F5	Floppy controller
3F6	Primary HDD controller
3F8-3FF	COM1 (serial port)
400-47F	SCSI host controller
3000-300F	IDE but mastering registers
6000-6FFF	PC CardBus
8000-8FFF	PC CardBus

Table 31 - System I/O Addresses for the OmniBook 2000 and 5700

170-178	Secondary HDD controller (internal CD-ROM)
1F0-1F7	Internal hard disk
220-22F	Crystal sound
2F8-2FF	COM2 (infrared port)
330-331	MPU 401 (MIDI)
378-37A	LPT1 (printer port)
388	Sound
3C0-3DF	VGA adapter
3E0-3E1	PC card bridge on PCI
3F0-3F5	Floppy controller
3F6	Primary HDD controller
3F8-3FF	COM1 (serial port)
3000-33FF	VGA on PCI
3400-347F	SCSI on PCI
3E0H-3E1H	PC Card on ISA

Table 32 - System I/O Addresses for the OmniBook 5500

DMA Channels

The following tables lists the available DMA channels for the OmniBook 2000, 5500, and 5700.

0	Sound record
1	Sound playback
2	Floppy drive
3	Fast IR
4	DMA controller
5	Free
6	Free
7	Free

Table 34 - DMA Channels for the OmniBook 5500

0	Free
1	Sound playback
2	Floppy drive
3	Sound record
4	Free
5	Free
6	Free
7	Free

Appendix B - Hewlett-Packard Password Removal Policy

If the user forgets the system password, there is a master password that will unlock the OmniBook. The user calls Technical Support to determine this master password as follows:

- 1. Support will tell the user the keys to type at the password entry screen: [alt][shft][f10]
- The OmniBook generates and displays an encoded master password. This is displayed under the normal password entry area. At this point, this is the only password that will unlock the OmniBook unless the user presses [ESC] to remove the encoded master from the password entry screen. Then the user's stored password can be entered.
- 3. The user reads the encoded master password to Support.
- 4. Support runs a program that decodes the encoded password, and reads the decoded password (alphanumeric) to the user.
- 5. The user types in the decoded password.
- 6. OmniBook decodes the encoded master password it generated and compares it to the decoded password typed in by the user.
- 7. If the two passwords match, the OmniBook is unlocked. The forgotten password is automatically erased. Support can then guide the user through the process of entering a new password.
- 8. If the two passwords do not match, the previous sequence must be repeated until the user correctly enters a master password.

The encoded master password is an eight-character alphanumeric sequence that the OmniBook generates at random every time the appropriate keys are pressed in the password entry screen. Because it is generated randomly, a master password can only be used to unlock the OmniBook once. If the user forgets the password at another time, it will require another call to Support. (If the user presses the appropriate keys by mistake, pressing [ESC] will allow entering the stored password.)

The password descramble programs for the HP OmniBook Notebook PCs are protected as HP Company Private information. They may not be copied, backed-up, printed or distributed. There are only six official copies of each program.

In addition to the program being protected, its use is also controlled. Hewlett-Packard and authorized support providers must ensure with written evidence that the OmniBook that is being "descrambled" is actually in the hands of the unit's actual and current owner. This requires a sales receipt showing the unit serial number and owner's name, or a written statement from the owner attesting that he or she is the owner of the unit. The statement can be a fax copy of the document. The fact that the unit is in the hands of an HP representative on behalf of the customer is not evidence of ownership. In addition, HP will not descramble a unit for any non-owner, even if it involves

law enforcement agencies. If you receive such a request, you should notify management and HP Corporate Legal immediately. (These requests may require a court order prior to our participation.)

Further, you must log the name, serial number and date of the running of the descramble program, and file the written backup with the log. The log and backup are subject to standard record retention process and review.

The final issue relating to descramble of passwords is that HP cannot provide information to users that would assist them in improperly descrambling a password and opening a unit.

Appendix C - Hewlett-Packard TFT Display Quality Statement

TFT display manufacturing is a high precision but imperfect technology and manufacturers cannot currently produce large displays that are cosmetically perfect. Most, if not all, TFT displays will exhibit some level of cosmetic imperfection. These cosmetic imperfections may be visible to the customer under varying display conditions and can appear as bright, dim or dark spots. *This issue is common across all vendors supplying TFT displays in their products and is not specific to the HP OmniBook display.*

HP OmniBook TFT displays meet or exceed all TFT manufacturers' standards for cosmetic quality of TFT displays. HP does not warrant that the displays will be free of cosmetic imperfections. *TFT displays may have a small number of cosmetic imperfections and still conform to the display manufacturers' cosmetic quality specifications.*

Here are some guidelines to use in determining what action to take on customers' complaint of cosmetic imperfection in their TFT display:

- The unit should be viewed in the customer's normal operating condition. This means if the customer uses the unit predominately in DOS, or Windows, or in some other application or combination of applications, that is where the determination shall be made. Self test is not a normal operating condition and is not a sufficient tool to interpret display quality.
- 2. In the customer's normal operating mode:
 - a) If 4 or more variant pixels appear clustered in the area approximated by a thumbprint on the display surface, then the display should be considered for replacement.
 - b) On OmniBook 4000CT models, if more than 30 total pixels anywhere on the display are bad, then the display should be considered for replacement. On all other OmniBook models, if more than 15 total pixels anywhere on the display are bad, then the display should be considered for replacement.

These are the only conditions in this guideline that may call for a replacement due to a defect in material or workmanship based on the HP Limited Warranty Statement.

- 3. If a display is considered for replacement, it should be clear to the customer that cosmetic variations on the replacement display may also exist, and may require the customer to use a work-around to obscure the cosmetic imperfection.
- 4. Customers with cosmetic-based complaints only, that do not conform to the above conditions and tests will not normally be considered for display replacement. It will be left to the judgment of the HP-responsible person working with the customer, to identify work-arounds that are reasonable and appropriate for the individual customer. Customers who must have a more perfect display solution should consider switching to an OmniBook with a DSTN display.

We expect over time that the industry will continue to improve in its ability to produce displays with fewer inherent cosmetic imperfections and we will adjust our HP guidelines as the improvements are implemented.

Appendix D - Assembly Sub-Component Breakout

The following pages contain a breakout of various sub-components of the major replaceable assemblies for the OmniBook 2000, 5500, and 5700. The chart indicates whether or not the sub-component is included with the replacement assembly. For example, a replacement hard disk drive does not include a hard drive plastic kit. The plastic kit from the defective hard drive may be reused or a new plastic kit may be ordered separately.

This chart is indented to aid in determining which components need to be ordered when replacing an assembly of the OmniBook. However, in the continuing effort to improve the exchange process, this information may change without notice.

Assembly		Omn	iBool	۲	Sub-component(s	5)	Included
		200	550	570	, , ,		(y/n)
		0	0	0			
CPU Module							
CPU Module/100C	F1320-60901		\checkmark		Heat Sink	F1320-60954	No
CPU Module/120C	F1320-60902		\checkmark		Heat Sink	F1320-60954	No
CPU Module/133C	F1320-60903		\checkmark		Heat Sink	F1320-60954	No
CPU Module/150C	F1350-60904			\checkmark	CPU Fan	F1350-60906	
					EMI Spring for LCD Hinge	F1350-60913	Yes
CPU Module/166C	F1350-60905			\checkmark	CPU Fan	F1350-60906	No
					EMI Spring for LCD Hinge	F1350-60913	Yes
CPU Module/P54C-133	F1371-60908	~			CPU Fan	F1350-60906	No
					EMI Spring for LCD Hinge	F1350-60913	Yes
CPU Module/P55C-133 (MMX)	F1371-60909	~			CPU Fan	F1350-60906	No
					EMI Spring for LCD Hinge	F1350-60913	Yes
Display - LCD Assen	nbly						
LCD Assy - 10.4" TFT/S	F1320-60904		✓		Disp Panel Plastic 10.4" TFT	F1320-60934	Yes
					Disp Cover Plastic 10.4" TFT	F1320-60935	Yes
					Display Hook- Left	F1320-60938	Yes
					Display Hook - Right	F1320-60939	Yes
					Display Hook - Button (2)	F1320-60940	Yes
					Display Contrast Btn (2)	F1371-60917	Yes
					Flex Cable 10.4" LCD	F1320-60941	Yes
					Label - HP OmniBook	F1065-80005	Yes

Assembly		Omn	iBool	٢	Sub-component(s)		Included
Assembly		200 0		、 570 0		')	(y/n)
					Display Label 5500CT	F1320-60970	Yes
					Label - Intel Pentium	5182-5113	Yes
					Label - Win95	7121-7353	Yes
					Top Rubber Pad (2)		Yes
					Bottom Rubber Pad (2)	5183-2258	Yes
LCD Assy - 11.3" DSTN/S	F1320-60905		~		Disp Panel Plastic 11.3" DSTN	F1320-60936	Yes
					Disp Cover Plastic 11.3" DSTN	F1320-60937	Yes
					Display Hook- Left	F1320-60938	Yes
					Display Hook - Right	F1320-60939	Yes
					Display Hook - Button (2)	F1320-60940	Yes
					Display Contrast Btn (2)	F1371-60917	Yes
					Flex Cable 11.3" LCD	F1320-60942	Yes
					Label - HP OmniBook	F1065-80005	Yes
					Display Label 5500CS	F1320-60969	Yes
					Label - Intel Pentium	5182-5113	Yes
					Label - Win95	7121-7353	Yes
					Top Rubber Pad (2)	5183-2257	Yes
					Bottom Rubber Pad (2)	5183-2258	Yes
LCD Assy - 12.1" TFT/S	F1320-60906	~	•	~	Disp Panel Plastic 12.1" TFT	F1320-60932	Yes
					Disp Cover Plastic 12.1" TFT	F1320-60933	Yes
					Display Hook- Left	F1320-60938	Yes
					Display Hook - Right	F1320-60939	Yes
					Display Hook - Button (2)	F1320-60940	Yes
					Display Contrast Btn (1)	F1371-60917	Yes
					Flex Cable 12.1"	F1320-60943	Yes
					Label - HP OmniBook	F1065-80005	Yes
					Display Label	see footnote ¹	No
					Label - Intel	see footnote ²	

¹ F1371-60912 for OB2000CT, F1350-60917 for OB5700CT, and F1320-60970 for OB5500CT

Assembly		Omn	iBool	k	Sub-component(s	;)	Included
		200 0	1	570 0			(y/n)
					Label - Win95	7121-7353	Yes
					Top Rubber Pad (2)		Yes
					Bottom Rubber Pad (2)		Yes
LCD Assy /SMG 12.1" TFT/S	F1320-60994	~	~	~	Disp Panel Plastic /SMG 12.1" TFT	F1320-60996	Yes
					Disp Cover Plastic /SMG 12.1" TFT	F1320-60995	Yes
					Display Hook- Left	F1320-60938	Yes
					Display Hook - Right	F1320-60939	Yes
					Display Hook - Button (2)	F1320-60940	Yes
					Display Contrast Btn (1)	F1371-60917	Yes
					Flex Cable 12.1" /SMG LCD	F1320-60997	Yes
					Label - HP OmniBook	F1065-80005	Yes
					Display Label	see footnote ¹	No
					Label - Intel	see footnote ²	No
					Label - Win95	7121-7353	Yes
					Top Rubber Pad (2)	5183-2257	Yes
					Bottom Rubber Pad (2)	5183-2258	Yes
LCD Assy 12.1" DSTN	F1371-60906	~			Disp Panel Plastic 12.1" DSTN	F1371-60914	Yes
					Disp Cover Plastic 12.1" DSTN	F1371-60915	Yes
					Display Hook- Left	F1320-60938	Yes
					Display Hook - Right	F1320-60939	Yes
					Display Hook - Button (2)	F1320-60940	Yes
					Display Contrast Btn (2)	F1371-60917	Yes
					Cable 12.1" DSTN	F1371-60916	Yes
					Label - HP OmniBook	F1065-80005	Yes
					Display Label 2000CS	F1371-60913	No
					Label - Intel Pentium	5182-5113	No
					Label - Win95	7121-7353	Yes
					Top Rubber Pad (2)		Yes
					Bottom Rubber Pad (2)		Yes
LCD Assy 12.1"	F1350-60902		1	✓	Disp Panel Plastic	F1320-60932	Ves

² 5182-5113 for OmniBook without MMX, 7121-7455 for OmniBook with MMX

Assembly		Omn	iBool		Sub-component(s	5)	Included
		200 0	550 0	、 570 0		-)	(y/n)
TFT/X					12.1" TFT		
					Disp Cover Plastic 12.1" TFT	F1320-60933	Yes
					Display Hook- Left	F1320-60938	Yes
					Display Hook - Right	F1320-60939	Yes
					Display Hook - Button (2)	F1320-60940	Yes
					Display Contrast Btn (1)	F1371-60917	Yes
					Cable 12.1" XGA	F1350-60919	Yes
					Label - HP OmniBook	F1065-80005	Yes
					Display Label 5700CTX	F1350-60918	No
					Label - Intel MMX	7121-7455	No
					Label - Win95	7121-7353	Yes
					Top Rubber Pad (2)		Yes
					Bottom Rubber Pad (2)	5183-2258	Yes
Display Panel Plasti	1	,				I	
Display Panel Plastic 12.1" TFT	F1320-60932	~	~	~	Label - Win95	7121-7353	No
					Display Label	see footnote	
					Label - Intel	see footnote ²	
					Display Contrast Btn (1)		No
					Top Rubber Pad (2)		No
					Bottom Rubber Pad (2)		No
Display Panel Plastic 10.4" TFT	F1320-60934		~		Label - Win95	7121-7353	No
					Display Label 5500CT	F1320-60970	
					Label - Intel Pentium	5182-5113	No
					Display Contrast Btn (1)	F1371-60917	
					Top Rubber Pad (2)		No
					Bottom Rubber Pad (2)		No
Display Panel Plastic 11.3" DSTN	F1320-60936		~		Label - Win95	7121-7353	No
					Display Label 5500CS	F1320-60969	No
					Label - Intel Pentium	5182-5113	No
					Display Contrast Btn (2)	F1371-60917	No

Assembly	_	Omn	iBool	k	Sub-component(s	2)	Included
Assembly		200	550	к 570		> /	(y/n)
		0	0	0			(,,,,)
					Top Rubber Pad (2)	5183-2257	No
					Bottom Rubber Pad		No
					(2)		
Display Panel Plastic/ SMG 12.1" TFT	F1320-60996	V	V	~	Label - Win95	7121-7353	No
					Display Label	see footnote ¹	No
					Label - Intel	see footnote ²	No
					Display Contrast Btn (1)	F1371-60917	No
					Top Rubber Pad (2)		No
					Bottom Rubber Pad (2)	5183-2258	No
Display Panel Plastic 12.1" DSTN	F1371-60914	~			Label - Win95	7121-7353	No
					Display Label 2000CS	F1371-60913	No
					Label - Intel	see footnote ²	No
					Display Contrast Btn (1)	F1371-60917	No
					Top Rubber Pad (2)		No
					Bottom Rubber Pad (2)	5183-2258	No
Display Cover Plasti	C						
Display Cover	F1320-60933	\checkmark	\checkmark	\checkmark	Label - HP	F1065-80005	No
Plastic 12.1" TFT					OmniBook		
					Display Hook Button (2)	F1320-60940	
Display Cover Plastic 10.4" TFT	F1320-60935		~		Label - HP OmniBook	F1065-80005	
					Display Hook Button (2)	F1320-60940	No
Display Cover Plastic 11.3" DSTN	F1320-60937		~		Label - HP OmniBook	F1065-80005	No
					Display Hook Button (2)	F1320-60940	No
Display Cover Plastic/ SMG 12.1" TFT	F1320-60995	~	~	~	Label - HP OmniBook	F1065-80005	No
					Display Hook Button (2)	F1320-60940	
Display Cover Plastic 12.1" DSTN	F1371-60915	V			Label - HP OmniBook	F1065-80005	No
					Display Hook Button (2)	F1320-60940	No
Hard Disk Drive	F4404 00001			<u>г</u>		F4000 000 (T	N La
HDD Drive 810MB	F1191-60901		\checkmark		HDD Plastic Kit	F1320-60947	INO

Assembly		Omn	iBoo	k	Sub-component(s)		Included	
Assembly		200	550	570	Sub-component(s	>)	(y/n)	
		0	0	0				
HDD Drive 1.35GB	F1192-60901		~		HDD Plastic Kit	F1320-60947	No	
HDD Drive 1.44GB	F1375-60901	~			HDD Plastic Kit	F1350-60920	No	
HDD Drive 2.1GB	F1339-60901	✓		\checkmark	HDD Plastic Kit	F1350-60920	No	
HDD Drive 3.1GB	F1348-60901			\checkmark	HDD Plastic Kit	F1350-60920	No	
HDD Plastic Kit								
HDD Plastic Kit	F1320-60947		\checkmark		HDD Kit Screws (4)	n/a	Yes	
HDD Plastic Kit	F1350-60920	✓		\checkmark	HDD Kit Screws (4)	n/a	Yes	
HDD Security Cover	F1320-40001	✓	√	√	HDD Door Screw	F1320-60919	No	
KBD Shielding Plate	F1320-60960	~	~	~	Screws (5)	F1350-60924	No	
Keyboard	see footnote ³	✓	✓	✓	TrackPoint Cap	F1320-60971	Yes	
Lower Chassis Case			1	1				
Lower Chassis Case - 5700	F1350-60914			~	Plastic Foot (2)	F1320-60929	Yes	
					Rubber Foot (4)	F1320-60957	Yes	
					Business Card Holder	F1065-80017	No	
					Back Panel Overlay/Regulatory	F1320-60973	No	
					Memory Cover Door	F1320-60927	No	
					Printer Port Door	F1125-60918	No	
					Expansion Door	F1125-60920	No	
					I/O Door	F1350-60910	No	
					Bezel	F1320-60958	No	
					IR Lens	F1320-60952		
Lower Chassis Case - 5500	F1320-60930		~		Plastic Foot (2)	F1320-60929	Yes	
					Rubber Foot (4)	F1320-60957		
					Business Card Holder	F1065-80017	No	
					Back Panel Overlay/Regulatory	F1320-60973	No	
					Memory Cover Door	F1320-60927	No	
					Printer Port Door	F1125-60918	No	
					Expansion Door	F1125-60920	No	
					I/O Door	F1320-60928	No	
					Bezel	F1320-60958	No	
					IR Lens	F1320-60952	No	
Lower Chassis Case - 2000	F1371-60905	~			Plastic Foot (2)	F1320-60929	Yes	
					Rubber Foot (4)	F1320-60957	Yes	
					Business Card Holder	F1065-80017		
					Back Panel	F1320-60973	No	

³ Refer to Appendix E or the Product Support Plan for a full listing of localized keyboards.

Assembly		Omr	iBool	k	Sub-component(s)		Included
,		200 0	550 0	570 0		-,	(y/n)
					Overlay/Regulatory	1	
					Memory Cover Door	F1320-60927	No
					Printer Port Door	F1125-60918	No
					Expansion Door	F1125-60920	No
					I/O Door	F1350-60910	No
					Door, Flash BIOS	F1371-60901	No
					Bezel	F1320-60958	No
					IR Lens	F1320-60952	No
Microphone	F1081-60946	✓	√	✓	Rubber Gasket	n/a	Yes
Palmrest Assembly	F1320-60986	✓	√	✓	TrackPoint Btns (2)	n/a	Yes
					TrackPoint PCB	n/a	Yes
					Speakers (2)	n/a	Yes
					Sub-battery	see footnote ⁴	No
PCA PT-586	•					•	
PCA-PT-586 w/IO Bracket	F1320-60926		~		I/O Bracket Grounding Clip (2)	F1350-60912	
					Prog. Flash BIOS	F1321-60907	
					I/O Bracket	F1320-60948	
					PCMCIA Button Assy (2)	F1320-60949	No
					Dock Grounding Spring Plate	F1320-60962	No
					Foam	n/a	Yes
PCA-PB-586 w/IO Bracket	F1350-60901	~		~	I/O Bracket Grounding Clip (2)	F1350-60912	Yes
					Prog. Flash BIOS	F1371-60903	Yes
					Video RAM	F1350-60922	
					Video RAM Screw (1)	F1320-60963	Yes
					I/O Bracket	F1350-60911	
					PCMCIA Button Assy (2)	F1320-60949	No
					Dock Grounding Spring Plate	F1320-60962	No
					Foam	n/a	Yes
Upper Chassis Case	•						
Upper Chassis Case	F1320-60931		~		Microphone	F1081-60946	No
					Sub Battery Set 4.8v	F1081-60925	No
					Suspend/Resume Btn	n/a	Yes
					Icon Assembly	F1320-60918	
					Keyboard	see footnote ³	No
					Palmrest Assembly	F1320-60986	
Upper Chassis Case	F1350-60915	~		~	Microphone	F1081-60946	No

⁴ F1350-60921 for OB2000 & OB5700, F1081-60925 for OB5500 only.

Assembly		iBool	۲	Sub-component(s)		Included	
		550 0	570 0			(y/n)	
				Sub Battery NiMH	F1350-60921	No	
				Suspend/Resume Btn	n/a	Yes	
				Icon Assembly	F1320-60918	No	
				Keyboard	see footnote ³	No	
				Palmrest Assembly	F1320-60986	No	

Appendix E - Part Numbers

Part Number	Exchange Part Number	Description	User Replace.	OB5700	OB2000	OB5500
5182-5113		Label - Intel Pentium	Yes		\checkmark	\checkmark
5183-2257		LCD Assy - Top Rubber Pad	Yes	V	√	~
5183-2258		LCD Assy - Bottom Rubber Pad	Yes	√	✓	✓
5965-0241		OmniBook Support and Service Booklet	Yes	✓	 ✓ 	✓
5965-0262		Service Manual - OB 2000, 5500, & 5700	Yes	✓	✓	✓
7121-7353		Label - B/W Windows 95	Yes	V	V	✓
7121-7455		Label - Intel MMX	Yes	✓	✓	
F1065-80005		Label - HP OmniBook	Yes	✓	✓	✓
F1065-80017		Business Card Holder	Yes	✓	✓	✓
F1081-60925		SUB Battery Set 4.8V	No			✓
F1081-60939		Display Chassis Screw	No	✓	✓	✓
F1081-60942		Screw - CPU M2.6 X 6L Palm Rest Screw FTB	No	V	 ✓ 	✓
F1081-60946		Microphone Assy	No	✓	✓	✓
F1125-60918		Printer Port Door	Yes	✓	✓	✓
F1125-60920		Expansion Door	Yes	✓	✓	✓
F1125-60925		Heat Pipe Bracket	No			✓
F1125-60929		Cndct Foam 10x1x20mm	No			✓
F1134-60901	F1134-69001	8MB RAM	Yes	✓	✓	\checkmark
F1135-60901	F1135-69001	16MB RAM	Yes	✓	✓	✓
F1136-60901	F1136-69001	32MB RAM	Yes	✓	✓	✓
F1189-90008		OmniBook 5000/5500 Docking Sys. Fam Guide	Yes	×	×	×
F1191-60901	F1191-69001	HDD Drive 810	Yes			✓
F1192-60901	F1192-69001	HDD Drive 1.35GB	Yes			\checkmark
F1193-60902		Std Li-Ion Battery	Yes	✓	✓	\checkmark
F1194-60902		Enhncd Li-Ion Battery	Yes	✓	✓	\checkmark
F1195-60901		FDD Module Assy	Yes	✓	✓	\checkmark
F1320-40001		HDD Security Cover	Yes	✓	✓	\checkmark
F1320-60901	F1320-69001	CPU Module/100C	No			✓
F1320-60902	F1320-69002	CPU Module/120C	No			✓
F1320-60903	F1320-69003	CPU Module/133C	No			✓
F1320-60904	F1320-69004	LCD Assy-10.4" TFT/S	No			✓
F1320-60905	F1320-69005	LCD Assy-11.3" DSTN/S	No			✓
F1320-60906	F1320-69006	LCD Assy-12.1" TFT/S	No	✓	✓	\checkmark
F1320-60918		Icon Assy	No	✓	✓	\checkmark
F1320-60919		Screw - HDD Door	Yes	✓	✓	✓
F1320-60920		Screw - Keyboard	No	✓	✓	\checkmark

Part Number	Exchange Part	Description	User	OB5700	OB2000	OB5500
	Number		Replace.			
F1320-60921		Heat Pipe Spreader	No			✓
F1320-60924		PCA PT-ICON	No			✓
F1320-60925		PCA PT-DC	No			\checkmark
F1320-60926	F1320-69026	PCA PT - 586 with I/O bracket	No			~
F1320-60927		Memory Cover Door	Yes	\checkmark	✓	\checkmark
F1320-60928		I/O Door	Yes			\checkmark
F1320-60929		Plastic Foot	Yes	✓	✓	✓
F1320-60930		Lower Chassis Case	No			✓
F1320-60931		Upper Chassis Case	No			\checkmark
F1320-60932		Disp Panel Plastic 12.1"	No	✓	 ✓ 	~
F1320-60933		Disp Cover Plastic 12.1" TFT	No	✓	v	v
F1320-60934		Disp Panel Plastic 10.4" TFT	No			~
F1320-60935		Disp Cover Plastic 10.4" TFT	No			V
F1320-60936		Disp Panel Plastic 11.3" DSTN	No			×
F1320-60937		Disp Cover Plastic 11.3" DSTN	No			√
F1320-60938		Display Hook - Left	No	\checkmark	\checkmark	\checkmark
F1320-60939		Display Hook - Right	No	\checkmark	\checkmark	\checkmark
F1320-60940		Display Hook - Button	No	\checkmark	\checkmark	\checkmark
F1320-60941		Flex Cable 10.4" LCD	No			\checkmark
F1320-60942		Flex Cable 11.3" LCD	No			\checkmark
F1320-60943		Flex Cable 12.1" LCD SVGA	No	✓	✓	√
F1320-60947		HDD Plastic Kit	Yes			✓
F1320-60948		I/O Bracket	No			\checkmark
F1320-60949		PCMCIA Button Asmbly	Yes	✓	✓	✓
F1320-60950		FFC Cable T/B to M/B 10 PIN	No	✓	√	~
F1320-60951		Stand Off H=11.75mm	No			\checkmark
F1320-60952		IR Lens	No	✓	✓	\checkmark
F1320-60954		Heat Sink	No			\checkmark
F1320-60955		Stand Off M2X15L	No			✓
F1320-60957		Rubber Foot	Yes	✓	✓	\checkmark
F1320-60958		Bezel	No	✓	✓	\checkmark
F1320-60960		KBD Shielding Plate	No	✓	✓	\checkmark
F1320-60961		HDD-FPC Flex	No	√	✓	\checkmark
F1320-60962		Dock Grounding Spring Plate	No	✓	√	~
F1320-60963		Screw - CPU M2 X 4L	No	✓	\checkmark	\checkmark
F1320-60964		Heat Pipe	No		1	\checkmark
F1320-60965		HDD PCB Bracket	No	✓	✓	\checkmark
F1320-60966		Thermal Tape PT-586 82C557	No			v

Part Number	Exchange Part Number	Description	User	OB5700	OB2000	OB5500
E4000 00007	Number	There all Targe DT 500	Replace.			\checkmark
F1320-60967		Thermal Tape PT-586 F65548	No			
F1320-60968		Screw ISOFS M3X6L	No			\checkmark
F1320-60969		Display Label 5500CS	Yes			\checkmark
F1320-60970		Display Label 5500CT	Yes			\checkmark
F1320-60971		Trackpoint Cap (Bag of 5)	Yes	v	√	✓
F1320-60972		Heat Pipe Bracket	No			\checkmark
F1320-60973		Back Panel Overlay/Regulatory	No	~	 ✓ 	~
F1320-60974		Keybd2 - US	No	\checkmark	✓	✓
F1320-60975		Keybd2 - Germany	No	✓	✓	\checkmark
F1320-60976		Keybd2 - French	No	✓	✓	\checkmark
F1320-60977		Keybd2 - Spanish	No	✓	✓	\checkmark
F1320-60978		Keybd2 - Italian	No	✓	\checkmark	\checkmark
F1320-60979		Keybd2 - SW	No	✓	✓	\checkmark
F1320-60980		Keybd2 - Danish	No	· ✓	· ✓	✓ ✓
F1320-60981		Keybd2 - Swe/Fin	No	✓	✓	· ✓
F1320-60982		Keybd2 - UK	No	✓	✓	· ✓
F1320-60983		Keybd2 - Nor	No	✓	✓	\checkmark
F1320-60984		Keybd2 - Korean	No	•		· ✓
F1320-60985		Keybd2 - French / Canadian	No	✓	✓	✓ ✓
F1320-60986		Palmrest2 Assembly	No	\checkmark	\checkmark	\checkmark
F1320-60988		Recovery Kit - FRE	Yes	•		· •
F1320-60989		Recovery Kit - ITA	Yes			\checkmark
F1320-60989		Recovery Kit - GER	Yes			· •
F1320-60990		Recovery Kit - SPA	Yes			· ✓
F1320-60991		PCA PT-ICON/SMG	No			✓ ✓
F1320-60993	F1320-69094	LCD Assy/SMG 12.1	No	\checkmark	\checkmark	✓ ✓
	F 1320-09094	TFT/S				
F1320-60995		Disp Cover Plas/SMG 12.1" TFT	No	×	✓	×
F1320-60996		Disp Panel Plas/SMG 12.1" TFT	No	\checkmark	✓ 	√
F1320-60997		Flex Cable/SMG 12.1"	No	~	\checkmark	~
F1321-60901		OB5500 ENG RECVRY V.01 CDROM AND FLOPPY KIT	Yes			~
F1321-60902		OB5500 FRE RECVRY V.01 CDROM AND FLOPPY KIT	Yes			×
F1321-60903		OB5500 ITA RECVRY V.01 CDROM AND FLOPPY KIT	Yes			~
F1321-60904		OB5500 GER RECVRY V.01 CDROM AND FLOPPY KIT	Yes			~
F1321-60905		OB5500 SPA RECVRY	Yes			\checkmark

Part Number	Exchange Part	Description	User	OB5700	OB2000	OB5500
	Number		Replace.			
		V.01 CDROM AND				
		FLOPPY KIT				
F1321-60906		Laptop Grp. Train. Kit	No	✓	✓	✓
F1321-60907		Prog Flash IC, BIOS	No			✓
F1335-60901	F1335-69001	64MB RAM	Yes	✓	✓	
F1336-60901	F1336-69001	6X CD-ROM Assy - 5500	Yes			√
F1338-60901		External Battery Recharger	Yes	✓	✓	✓
F1339-60901	F1339-69001	HDD Drive 2.0GB	Yes	✓	✓	✓
F1347-60901	F1347-69001	10x CD-ROM Drive	Yes	\checkmark	\checkmark	\checkmark
F1348-60901	F1348-69001	HDD Drive 3.0GB	Yes	✓		
F1349-60901	F1349-69001	Port Replicator - OB2000/5700	Yes	✓	✓	
F1350-60901	F1350-69001	PCA PB-586/IO Bracket	No	✓	✓	
F1350-60902	F1350-69002	LCD Assy 12.1 TFT/X	No	✓		
F1350-60904	F1350-69004	CPU Module/150C	No	✓		
F1350-60905	F1350-69005	CPU Module/166C	No	✓		
F1350-60906		CPU Fan	No	✓	✓	
F1350-60907		PCA PB-ICON/SVGA	No	\checkmark	\checkmark	
F1350-60908		PCA PB-ICON/XGA	No	✓		
F1350-60909		PCA - DC Power Supply	No	✓	✓	
F1350-60910		I/O Door	Yes	✓	✓	
F1350-60911		I/O Bracket	No	✓	✓	
F1350-60912		I/O Bracket Grounding Clip	No	 ✓ 	✓	
F1350-60913		EMI Spring for LCD Hinge	No	V	V	
F1350-60914		Lower Chassis Case	No	✓		
F1350-60915		Upper Chassis Case	No	✓	✓	
F1350-60916		Card Bus Bracket	No	✓	✓	
F1350-60917		Display Label 5700CT	No	✓		
F1350-60918		Display Label 5700CTX	No	✓		
F1350-60919		XGA Cable 12.1"	No	✓		
F1350-60920		HDD Plastic Kit	Yes	✓	✓	
F1350-60921		Sub Batt - NiMHd	No	✓	✓	
F1350-60922		PCB - 1MB Video RAM	No	✓	✓	
F1350-60923		Screw - ISOF M2.6x6L	No	✓	✓	
F1350-60924		Screw - ISOP M2x6L Nyl	No	✓	✓	
F1350-60925		Screw - FTB M2.6x10L	No	\checkmark	✓	
F1350-60926		Screw - FTB M2.6x8L	No	✓	✓	
F1350-60927		Screw - ISOT M2.6x4L	No	\checkmark	✓	\checkmark
F1350-60928		Standoff-M2x11.75 Nyl	No	✓	✓	
F1350-60929		Standoff-M2x15L Nyl	No	\checkmark	✓	
F1350-60930		Recovery Kit ENG	Yes	✓		
F1350-60931		Recovery Kit FRE	Yes	✓		
F1350-60932		Recovery Kit ITA	Yes	✓		
F1350-60933		Recovery Kit GER	Yes	✓		

Part Number	Exchange Part Number	Description	User Replace.		OB2000	OB5500
F1350-60934		Recovery Kit SPA	Yes	✓		
F1350-60935		Recovery Kit SWE	Yes	\checkmark		
F1350-60936		OmniBook 5700 Training Video	Yes	\checkmark		
F1350-90001		Setup Guide OB5700 - English	Yes	✓		
F1350-90002		Setup Guide OB5700 - E,F,I,G,S,P	Yes	V		
F1350-90003		Setup Guide OB5700 - E,D,Sw,Fn,N	Yes	V		
F1350-90016		ServiceManual- OmniBook 5700	Yes	✓		
F1371-60901		Door, Flash BIOS	Yes		✓	
F1371-60902		Screw, BIOS Door	Yes		✓	
F1371-60903		Prog Flash IC, BIOS	No		✓	
F1371-60904		BIOS Insert/Removal Tool	No	✓	✓	V
F1371-60905		Lower Chassis Case	No		✓	
F1371-60906	F1371-69006	LCD Assy 12.1 DSTN	No		✓	
F1371-60908	F1371-69008	CPU Module/P54C-133	No		✓	
F1371-60909	F1371-69009	CPU Module/P55C-133 (MMX)	No		✓	
F1371-60911		PCA PB-ICON/DSTN 12.1	No		~	
F1371-60912		Display Label, 2000CT	No		✓	
F1371-60913		Display Label, 2000CS	No		✓	
F1371-60914		Disp Panel Plastic 12.1" DSTN	No		V	
F1371-60915		Disp Cover Plastic 12.1" DSTN	No		V	
F1371-60916		Disp Cable 12.1" DSTN	No		✓	
F1371-60917		Disp contrast/brightness slider button	Yes	~	✓	V
F1375-60901	F1375-69001	HDD Drive 1.44GB	Yes		✓	



HP Part Number 5965-0262