

hama®

C O M P U T E R

SATA HDD Docking Station, USB 2.0 + eSATA

**SATA HDD Docking Station
Station d'accueil HDD SATA**



00053106

Overview:

Package contents

Safety notes

1. Installation Instructions
2. Inserting the Hard Drive
3. Installing the Drivers
4. Backup Software
 - 4.1 Installation
 - 4.2 Configuration
 - 4.3 Creating backups
5. Contact and Support Information

Package contents

- Sata HDD docking station
- Power supply unit
- eSATA connection cable
- USB connection cable
- Driver CD
- Installation instructions

Safety instructions

- Do not operate the device in damp or dusty environments
- Do not operate this device on radiators or near heat sources
- This device is designed for indoor use only
- Protect the device from pressure and impact during operation
- Do not open or move the device during operation

1. Installation Instructions

Never disconnect the hard drive from the computer while data is being transferred. You may lose data if you do so.

Under no circumstance does Hama GmbH & Co KG accept liability for loss of data stored on data storage media.

2. Inserting the Hard Drive

Note: Be aware that static electricity can damage both the hard drive and the docking station. Discharge yourself by touching a metal object.

Connect the included power supply unit to the docking station. Then connect the docking station to your PC via USB or eSATA.

Make sure that the toggle switch used for switching the docking station on and off is set to **“Off”** when inserting the hard drive. Next, insert the SATA hard drive into the docking station and switch the toggle switch to **„On”**.

To remove the hard drive, proceed as follows (USB operation):

Click the **“Safely Remove Hardware”** button in the taskbar.



Then, select **“USB Mass Storage Device”** and click **“Exit”**.

3. Installing the Drivers:

The drivers for the unit are already included in Windows 2000, XP and Vista. The system installs them automatically. The docking station can be used without any further driver installation after connecting and restarting.

4. Backup Software

4.1 Installation




Insert the enclosed driver/installation CD into the CD-ROM drive of your PC.


After the autorun menu starts, select your language.




Now select **"Install Backup Tool"**. Installation starts automatically.

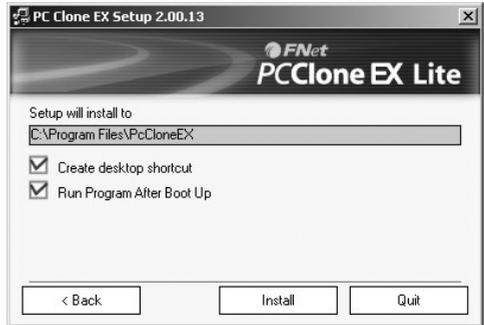


Select the folder in which the Backup Tool is to be installed. You can change the folder by clicking **"Browse"**.

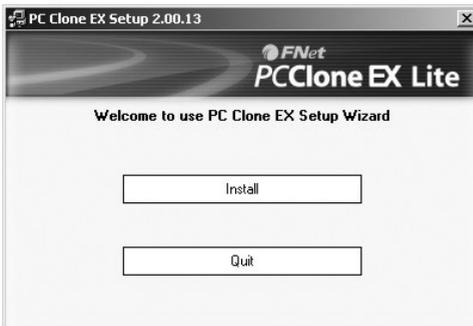

Click **"Install"** to start the installation.

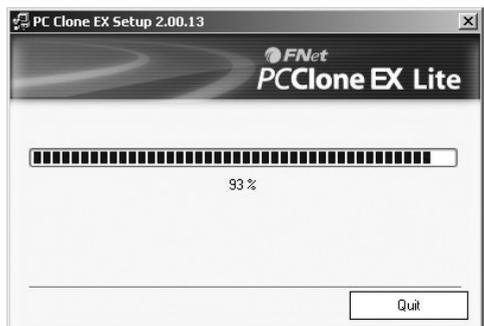

The Backup Tool is installed.

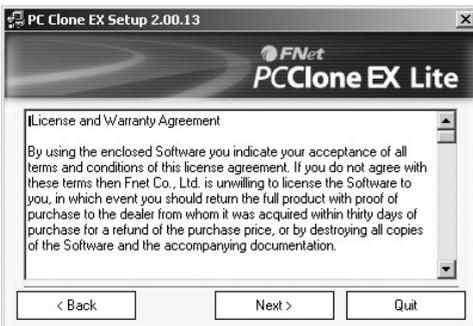

Accept the licence agreement.



The Backup Tool has been successfully installed and automatically started.


4.2 Configuration




Double-click the purple EX icon to start the Backup Tool. This symbol is located in the notification area (system tray) at the bottom right of the screen



Navigate to the second tab from the left to select the data to be backed up.

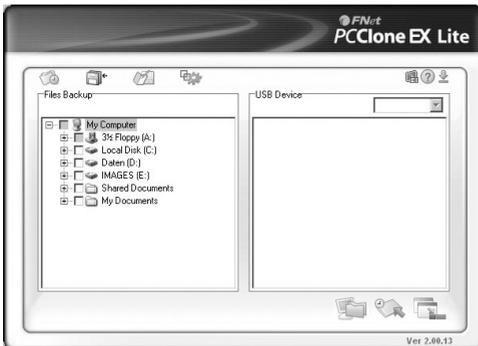

In the **"File Backup"** window, now select the hard drives and folders that you wish to back up.

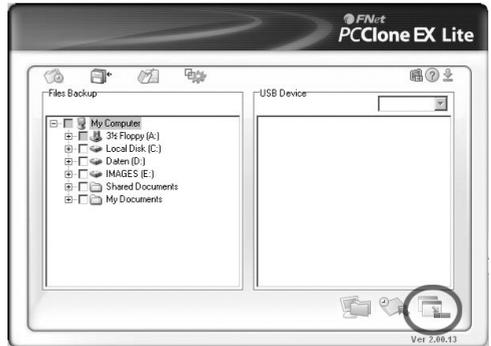

Click the **"Minimize"** button to have the backup software run in the background.

4.3 Starting the backup

Press the backup button on the hard drive housing to start the backup.



Press the backup button on the housing again or click **"Start"**.



The backup is copied to the hard drive.



When this window appears, the backup has been successfully completed.

5. Support and Contact Information

If products are defective:

Please contact your dealer or Hama Product Consulting if you have any product claims.

Internet / World Wide Web:

Product support, new drivers or product information can be found at www.hama.com

Support Hotline – Hama Product Consulting:

Tel. +49 (0) 9091 / 502-115

Fax +49 (0) 9091 / 502-272

E-mail: produktberatung@hama.de

hama[®]

Hama GmbH & Co KG
D-86651 Monheim/Germany
www.hama.com

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

00053 106/10.08