

Oster

User Manual

Manual de Instrucciones

Manuel d'Instructions

BLENDER LICUADORA MÉLANGEUR

MODELS/MODELOS
MODÈLES

6800-6839, 6850-6889



Visit us at www.oster.com

P.N. 110500

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

- Unplug cord from outlet when not in use or before cleaning.
- To protect against risk of electrical shock, do not immerse the cord, plug or motor base in water or any other liquids.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Never leave appliance unattended when in use.
- Close supervision is necessary when used near children.
- Avoid contact with moving parts. Keep hands and utensils out of jar while blending to prevent personal injury or damage to the blender. A rubber spatula may be used only when the blender is not running.
- The blade is sharp. Handle with care.
- Always put the lid on the jar before operating the blender.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest Authorized Sunbeam Appliance Service center for examination, repair or electrical or mechanical adjustment.
- Do not use outdoors or for commercial purposes; this appliance is for household use only.
- Use this appliance for its intended use as described in this manual. Do not use attachments that are not recommended by the manufacturer; they may cause injury.
- Always operate on a flat surface.
- Unplug the blender when it is not in use, before taking off or putting on parts and before cleaning.
- The use of attachments not made by OSTER®, including canning or ordinary jar and processing assembly parts, is not recommended by Sunbeam Products, Inc., and may cause injury to persons.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

The maximum rating marked on the product is based on the attachment that draws the greatest load. Other attachments may draw less power.

POWER CORD INSTRUCTIONS

Please follow the instructions below to ensure the safe use of the power cord.



- This appliance is equipped with a polarized plug. This type of plug has one blade that is wider than the other. This plug will fit in a polarized outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.
- You may use an extension cord, if necessary, but be certain to follow these guidelines:
 - The marked electrical rating of the extension cord must be at least 120/127 volt, 60 Hz, 10A.
 - The extension must be arranged so that it will not drape over the countertop or tabletop, will not be within the reach of children, and will not be tripped over.
- Do not pull, twist, or otherwise abuse the power cord.

SAVE THESE INSTRUCTIONS


WELCOME

Congratulations on your purchase of an OSTER® Blender! To learn more about OSTER® products, please visit us at www.oster.com.

LEARNING ABOUT YOUR BLENDER

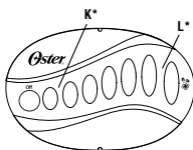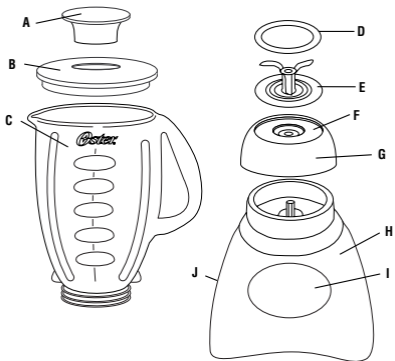

PUSH BUTTON CONTROL PANEL

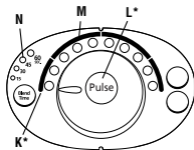

DIAL CONTROL PANEL

*Location varies by model

FEATURES OF YOUR BLENDER

- A. Feeder Cap for adding ingredients while blending
- B. Leakproof Lid
- C. Jar – Your Oster Blender includes one of the following:
 - 5-Cup Dishwasher Safe/Scratch Resistant Glass Jar
 - 6-Cup Break-Resistant Jar
 - 5-Cup Double Walled-Insulated Thermal Jar – keeps frozen drinks, smoothies and milkshakes cold for hours
- D. Sealing Ring for tight seal
- E. Ice Crush Blade pulverizes ice for smooth frozen drinks
- F. Threaded Bottom Disc
- G. Collar for stability from countertop to refrigerator to table
- H. Powerful Motor with exclusive ALL-METAL DRIVE® for extra durability
- I. Control Panel
- J. Convenient Cord Storage
- K. Easy-Clean Feature – quickly cleans jars in between batches
- L. Pulse for precise blending control
- M. Food and drink selections for perfect results – controls allow you to keep your blender set at your favorite food/drink selection
- N. Auto Blend™ Timer (*selected models only*)

USING YOUR BLENDER

Clean blender according to the instructions in the “Cleaning and Storing Your Blender” section.

Jar Assembly:

Turn jar upside down so the small opening is at the top. (*Figure 1*)

Place sealing ring over jar opening. (*Figure 2*)

Place blade into jar. (*Figure 3*)



FIGURE 1

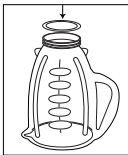


FIGURE 2



FIGURE 3

Snap threaded bottom disc and collar together. Place collar over blade and jar. (*Note: If there are slots on top of collar, line them up with notches on jar.*) Place the collar on jar and turn the threaded bottom disc clockwise to tighten. (*Figure 4*)

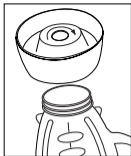


FIGURE 4



FIGURE 5

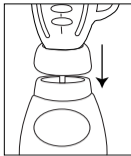


FIGURE 6

Wrap the power cord from the core storage area on the base of the blender until the cord is the length you desire. (Figure 5)

Place jar assembly onto base. (Figure 6)

Place ingredients into jar.

Place lid with feeder cap on jar.

Plug the power cord into a 120 Volt AC electrical outlet.

PUSHBUTTON MODELS

Slide switch to HIGH or LOW (If your model does not have a slide switch, push HIGH or LOW button.)

Push desired speed and blend ingredients to desired consistency.

Push OFF to stop the blender and turn blender off.

To use PULSE, select HIGH or LOW. Push PULSE and hold down for desired length of time. Release PULSE and allow blade to stop. Repeat cycle as desired.

DIAL MODELS WITHOUT TIMER

Turn dial to desired food/drink selection.

Press ON and blend ingredients to desired consistency.

Press OFF to stop the motor and turn blender off.

Note: Food/drink selection can be changed during blending by turning the dial to the desired selection.

Note: This blender is programmed to turn the power off automatically if not used for a period of several minutes.

To use PULSE, turn dial to desired food/drink selection. Press PULSE and hold down for desired length of time. Release and allow blade to stop. Repeat cycle as desired.

DIAL MODELS WITH TIMER

PRESS POWER TO TURN THE BLENDER ON.

The blender is set to the food/drink selection identified by a blinking indicator light. Turn dial to change the food/drink selection.

Press START and blend ingredients to desired consistency.

Press STOP to stop the motor. (*Pressing POWER stops the motor and turns the blender off.*)

Note: Food/drink selection can be changed during blending by turning the dial to the desired selection.

Note: This blender is programmed to turn the power off automatically if not used for a period of several minutes.

To use PULSE, turn dial to desired food/drink selection. Press PULSE and hold down for desired length of time. Release and allow blade to stop. Repeat cycle as desired.

To use Auto Blend™ Timer, press BLEND TIME until desired length of blending time (15, 30, 45, 60 seconds) is illuminated.

Turn dial to desired food/drink selection.

Press START. Blender will automatically stop when selected time has elapsed, or if food/drink selection is changed.

To stop blender before elapsed time, press STOP.

To use blender without timer, press BLEND TIME until no lights are illuminated.

BLENDING TIPS

- Put liquids in the jar first, unless a recipe says otherwise.
- Crushing ice: Crush 6 ice cubes or approximately 2 cups of ice at a time.
- Do not remove the lid while in use. Remove feeder cap to add smaller ingredients. (*Figure 7*)
- Cut all firm fruits and vegetables, cooked meats, fish and seafood into pieces no larger than 1/2 inch (1.8 cm) to 1 inch (2.5 cm). Cut all kinds of cheeses into pieces no larger than 1/2 inch (1.8 cm).
- This blender will not mash potatoes, whip egg whites or substitute dairy toppings, mix stiff dough or grind raw meat.

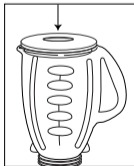


FIGURE 7

PROCESSING FOODS IN BLENDER

FOOD	PROCESSED QUANTITY	UNPROCESSED QUANTITY	SPECIAL INSTRUCTIONS
Breadcrumbs	1/2-cup (125 ml)	1 slice, torn in 8 pieces	Pulse 1 – 4 times
Celery	3/4-cup (200 ml)	1-cup (250 ml) of 1-inch (2.5 cm) pieces	Pulse 2 – 3 times
Cheese, Cheddar	1-cup (250 ml)	1-cup (250 ml) of 1-inch (2.5 cm) pieces	Pulse 2 times
Cheese, Swiss	1-cup (250 ml)	1-cup (250 ml) of 1-inch (2.5 cm) pieces	Pulse 5 times
Cheese, Hard or Semi-Hard	1-cup (250 ml)	1-cup (250 ml) of 1-inch (2.5 cm) pieces	Chop continuously
Coffee Beans	1-cup (250 ml)	1-cup (250 ml)	Grind 45 seconds for percolators and 60 seconds for drip
Cookies, Wafer	1/2-cup (125 ml)	10 wafers	Pulse 3 times
Crackers, Graham	1/2-cup (125 ml)	8 crackers	Pulse 3 times
Peppers	2/3-cup (150 ml)	1-cup (250 ml)	Pulse 1 time
Meat, Boneless, Cooked	1-cup (250 ml)	1-cup (250 ml) of 1-inch (2.5 cm) pieces	Chop continuously
Nuts, almonds, peanuts, pecans, walnuts	1-cup (250ml)	1-cup (250 ml)	Pulse 2 – 4 times

CLEANING AND STORING YOUR BLENDER

IMPORTANT: UNPLUG BEFORE CLEANING BASE and DO NOT IMMERSE THE BLENDER BASE IN WATER OR ANY OTHER LIQUIDS. Use a damp, soft sponge with mild detergent to clean the outside of the blender base. All parts except for the blender base are dishwasher safe. Collar and threaded bottom disc are top rack dishwasher safe **ONLY**. Collar and threaded bottom disc can be separated for cleaning. Hold collar with both hands and press down on top of disc with thumbs. Place sealing ring in bottom basket of dishwasher. You can also wash the parts in warm, soapy water. Rinse well and dry.

EASY CLEAN

Pour 3 cups of warm water in the blender jar. Add 1 – 2 drops of liquid dishwashing detergent. Select Easy Clean. Blend detergent for 10 –15 seconds. Empty jar of soapy water into sink. Rinse jar thoroughly with clean water.

NOTE: Easy Clean is not a substitute for regular cleaning described above. It is especially important to disassemble and thoroughly clean your blender when processing milk, dairy products, meats, seafood and eggs.

STORING YOUR BLENDER

After cleaning, reassemble blade to jar with sealing ring and collar. Store blender with cover ajar to prevent container odor.

1-Year Limited Warranty

Sunbeam Products, Inc, or if in Canada, Sunbeam Corporation (Canada) Limited (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

If you have any question regarding this warranty or would like to obtain warranty service:

In the U.S.A. – Please call 1-800-334-0759 and a convenient service center address will be provided to you.

In Canada – Please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourne Street, Mississauga, Ontario L5R 3V8.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

Oster®

For product questions contact:
Sunbeam Consumer Service
USA : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. All rights reserved.

OSTER® and ALL-METAL DRIVE® are registered trademarks of Sunbeam Products, Inc.
Auto Blend™ is a trademark of Sunbeam Products, Inc.
Distributed by Sunbeam Products, Inc., Boca Raton, FL 33431

Pour les questions de produit:
Sunbeam Consumer Service
États-Unis : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

ScottyB
9/04/03

©2003 Sunbeam Products, Inc. Tous droits réservés.

OSTER® et ALL-METAL DRIVE® sont marques déposées de Sunbeam Products, Inc.
Auto Blend™ est une marque de commerce Sunbeam Products, Inc.
Distribué par Sunbeam Products, Inc., Boca Raton, Florida 33431

Para preguntas sobre los productos llame:
Sunbeam Consumer Service
EE.UU. : 1.800.334.0759
Canadá : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. Todos los derechos reservados.

OSTER® y ALL-METAL DRIVE® son marcas registradas de Sunbeam Products, Inc.
Auto Blend™ es una marca comercial de Sunbeam Products, Inc.
Distribuido por Sunbeam Products, Inc., Boca Raton, FL 33431



**"UNA RESPUESTA PARA
CADA PREGUNTA"**

¿TIENE UD. ALGUNA PREGUNTA
O COMENTARIO?

LLÁMENOS SIN COSTO AL: 01-800-506-17-00
DEL D.F. AL: 53-66-08-00

DE LUNES A VIERNES DE LAS 8:30 HRS. A LAS 17:00 HRS.

PARA MÉXICO SÓLAMENTE - FOR MEXICO ONLY

LICUADORA OSTER®

Modelos 6800-013 - 6839-013, 6850-013 - 6889-013

IMPORTADOR: Sunbeam Mexicana, S.A. de C.V.

Avenida Juárez, No. 40-201

Ex-Hacienda de Santa Mónica


Tlalneapantla, Estado de México, C.P. 54050

R.F.C. SME-570929-G90, Tel: 53-66-08-00

País de Origen: México

País de Proceso: México, E.U.A.

Lea el Instructivo Arte de Usar el Aparato

NOM 004  **CARACTERÍSTICAS ELÉCTRICAS**
60 Hz 120 V ~ 450 W

CONTIENE: 1 PIEZA

SUNBEAM MEXICANA, S.A. DE C.V.

Avenida Juárez No. 40-201

Ex-Hacienda de Santa Mónica

Tlalneapantla, Estado de México, C.P. 54050

Tel. 5366-0800, Fax 5366-0810

