


RELI-ON ULTRASONIC HUMIDIFIER

Model H-0565-0

Operation Instructions

1. Make sure there is water in the water tank.
2. Water level must be adequate in the base in order for the unit to produce mist. This unit does not have an automatic shut off.
3. Switch is in the "OFF" position, plug cord into a 120 volt AC wall outlet.
4. Slide to "ON" position. Indicator will illuminate when power is on.
5. Set mist intensity control. Slide control to the right to increase mist output, slide to the left to decrease mist output.
6. Allow a few minutes for water to fill the reservoir to produce mist. It may take up to thirty minutes to saturate if you are using a new demineralization cartridge for mist to appear.
7. Turn off, reduce mist intensity, or open door to room if indoor relative humidity is above 50% or condensation forms on the wall or windows.
8. Make sure the power is off when moving the unit or refilling the water tank. The fan will continue to operate even if the water tank is empty.
9. In case of high temperature or filtration malfunction, this product may produce a sour or amino acid smell. If this occurs please rinse the filter with distilled water or replace the filter.
10. If you have any questions or comments, call toll-free 1-866-872-7442.

Always unplug the humidifier before filling.

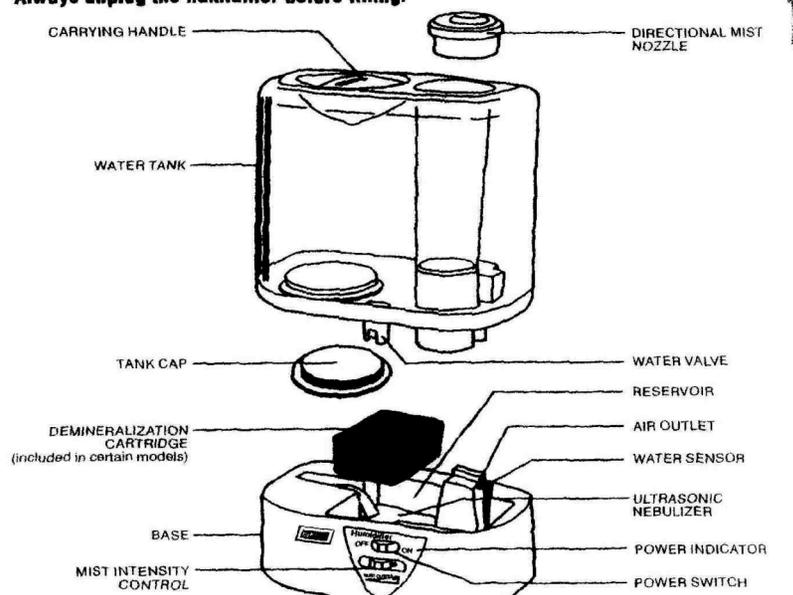

Filling the Water Tank

- Remove mist nozzle from the water tank. Turn tank upside down after removing it from the base. Open tank by turning cap counterclockwise. Rinse and wipe clean.
- Fill the water tank with cool tap water and replace the cap. Turn upside down to check for leaks. If leaks appear, remove cap and re-tighten. Be sure the rubber tank ring is properly placed to minimize leaks. Use of very cold water may temporarily hinder mist output. Filling humidifier with hot or warm water could cause damage to the unit. To reduce lime or calcium deposit in your unit, it is recommended to use the Kaz Demineralization Cartridge (Model DC-51). Distilled water may be used to reduce mineral deposits. Keep base and nebulizer clean for more effective mist output.
- Replace water tank on the base and reposition the mist nozzle on the tank.
- If white dust occurs due to hard/soft water, please change to distilled water.

WARNING

- Cord should be placed out of foot traffic and away from heated surfaces. Check cord before every use. DO NOT use unit if cord is damaged.
- To prevent fire, shock or personal injury, DO NOT use an extension cord.
- Medication and water treatments should **not** be added to water or ANY part of humidifier.
- Mist nozzle should not be covered.
- Placing unit in direct sunlight or high temperature area is not recommended.
- DO NOT overfill water tank or immerse the unit into water.
- Condensation on walls, floor and furniture might occur if unit is left unattended in a closed room.
- DO NOT direct mist nozzle towards walls, furniture, or children.
- Place unit on non-metallic waterproof surfaces and away from water sensitive furniture.
- Touching the ultrasonic nebulizer while plugged in could result in burns.
- For product service, call toll-free 1-866-872-7442.

DANGER

- If operated without water in water tank, it will cause damage to machine.
- Unit is made for indoor use only.
- Humidifier should be unplugged if being cleaned or not in use.
- DO NOT tilt or move humidifier while in use.
- DO NOT use near water.
- Wrapping the cord around the unit for storage is not recommended.

The warranty for the Reli-On Ultrasonic Humidifier complies with Wal-Mart's warranty.

You have ninety days to return the unit if it is not working to your satisfaction. Please keep your box and receipt.

RELI-ON ULTRASONIC HUMIDIFIER

MODEL H-0565-0

Cleaning Instructions

For best results, clean your humidifier **at least** once a week.

To begin:

- Turn off and unplug humidifier
- Empty water in tank and base of humidifier
- Remove filter cartridge

To clean base:

- Mix two tablespoons white vinegar to two cups of water.
- With a **soft cloth** and/or a **cotton ball**, dip into the solution, wiping the entire base area, being very careful not to damage any components. Be sure to clean the **transducer**- located at the bottom of the base; it is a little round silver disk. Be very careful not to damage transducer.
- Next with a soft cloth or a cotton ball dip into plain water (you are basically rinsing) wiping base and transducer being very carefully not to damage any components
- Set aside to dry


To clean tank:

- Mix two tablespoons of bleach to 1 gallon of water. (The tank is a two gallon tank so fill the tank half way then add the bleach).
- Put approximately 2 cups of the solution in the tank.
- Shake the tank. Dump out solution.
- Put approximately 2 cups of plain water in tank.
- Shake the tank. Dump out water.
- Take soft dry cloth (you can actually reach up into tank) and dry entire tank.
- Do this once a week.
- For best results, replace the filter every 45 uses or 240 hours. The Kaz Demineralization Cartridge (Model DC-51) can be purchased at Wal-Mart.

If you have trouble removing the tank cap, try adding liquid soap around the cap in order to loosen it.

ReliOn®

Owner's Manual

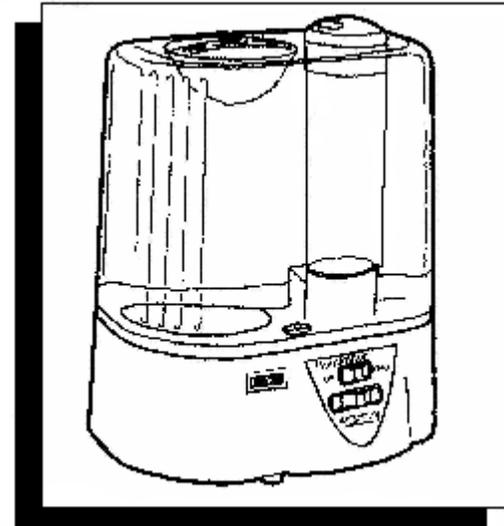

ULTRASONIC HUMIDIFIER
Model H-0565-0 Series

For product service, call our toll-free customer service line at 1-866-872-7442

Read and save these instructions for best results.