


Weather Forecast Station with Atomic Time Model: BAR206A

USER MANUAL

OVERVIEW

FRONT VIEW (FIG 1)

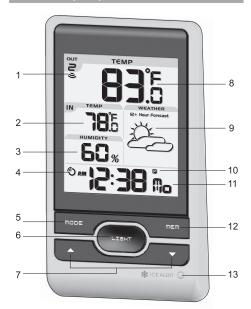


- 1. Remote sensor reception indicator
- 2. Indoor temperature
- 3. Indoor humidity

۲


NOTE Wireless sensor included does not include humidity. To receive outdoor humidity you need a wireless sensor with the humidity function.

- 4. Clock signal reception indicator
- 5. MODE: Change settings / display
- 6. LIGHT: Activate backlight for 5 seconds
- 7. ▲ / ▼: Increase / decrease setting; activate / deactivate clock reception signal
- 8. Outdoor temperature
- 9. Weather forecast
- 10. Time zone
- 11. Clock with weekday
- 12. MEM: View current, maximum and minimum temperature / humidity
- 13. Ice alert LED indicator

BACK VIEW (FIG 2)

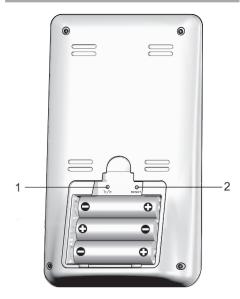

- °C / °F: Select temperature unit
 RESET: Reset unit to default settings
- DEMOTE OFNOOD (FIG 2)

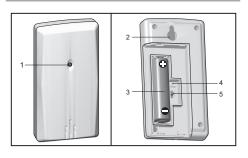

۲

- 1. LED status indicator
- 2. Wall mount hole
- 3. Battery compartment
- RESET hole
 CHANNEL switch

GETTING STARTED

- INSERT BATTERIES
- 1. Remove the battery compartment.
- 2. Insert the batteries, matching the polarities (see FIG 2).
- 3. Press RESET after each battery change.

	MEANING
Clock / alarm and indoor temperature area	Main unit batteries low
Outdoor temperature area	Sensor batteries low


REMOTE SENSOR

The main unit can collect data from up to 3 sensors.

To set up the sensor:

- 1. Open the battery compartment (see FIG 3).
- 2. Select a channel then press RESET.
- 3. Close the battery door.
- 4. Place the sensor within 30 m (98 ft) of the main unit using the table stand or wall mount.

TIP Ideal placements for the sensor would be in any location on the exterior of the home at a height of not more than 5 ft and which can shield it from direct sunlight or wet conditions for an accurate reading.

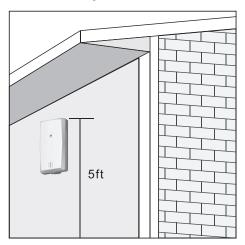


NOTE Use alkaline batteries for longer usage and consumer grade lithium batteries in temperatures below freezing.

SENSOR DATA TRANSMISSION

To search for a sensor:

Press and hold **+ MODE**.

The sensor reception icon in the remote sensor area shows the status:

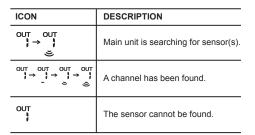

TIP The transmission range may vary depending on many factors. You may need to experiment with various locations to get the best results.

CLOCK

CLOCK RECEPTION


This product is designed to synchronize its clock automatically with WWVB-60 signal, within 3200km (2000 miles) of Fort Collins Colorado.

To enable / disable signal reception:

Press and hold \blacktriangle to enable or \blacktriangledown to disable signal reception.

NOTE Reception takes 2-10 minutes. If the signal is weak, it can take up to 24 hours to get a valid signal. If signal reception is unsuccessful, place your unit next to a window, press and hold to force another signal search.

Clock signal reception indicator:



MANUALLY SET CLOCI

To set the clock manually, disable the signal reception first.

- 1. Press and hold **MODE**.
- 2. Press \blacktriangle or \blacksquare to change the settings
- 3. Press MODE to confirm.
- The settings order is: time zone, 12/24 hr format, hour, minute, year, calendar mode (day – month / month – day), month, day and language.

۲

Select the time zone: (P) Pacific, (E) Eastern, (C) Central or (M) Mountain.

NOTE The language options are English (E), German (D), French (F), Italian (I), and Spanish (S).

To select display mode:

Press MODE to choose between clock with seconds / weekday / calendar.

WEATHER FORECAST

This product forecasts the next 12 to 24 hours of weather within a 30-50 km (19-31 mile) radius (US- with a 75% accuracy).

	Sunny
	Partially Cloudy
	Cloudy
	Rainy
	Snowy

TEMPERATURE AND HUMIDITY

To toggle temperature unit:

Press °C / °F.

To auto-scan between sensors:

Press and hold $\mathbf{\nabla}$ + **MEM** to display each sensor's data for 3 seconds.

To end press 🔺 .

To toggle between current, minimum and maximum records for the selected sensor:

Press **MEM** repeatedly.

To clear the records:

Press and hold MEM.

ICE WARNING

If the channel 1 sensor falls between 3°C to -2 °C (37°F to 28°F), LED indicator will flash, and will stop flashing once the temperature is out of this range.

BACKLIGHT

Press LIGHT to activate backlight for 5 seconds.

RESET

Press RESET to return to the default settings.

PRECAUTIONS

- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.
- Do not tamper with the unit's internal components. This invalidates the warranty.
- Only use fresh batteries. Do not mix new and old batteries.
- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment.
- Placement of this product on certain types of wood may result in damage to its finish for which Oregon Scientific will not be responsible. Consult the furniture manufacturer's care instructions for information.
- The contents of this manual may not be reproduced without the permission of the manufacturer.
- Do not dispose old batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
- Please note that some units are equipped with a battery safety strip. Remove the strip from the battery compartment before first use.

NOTE The technical specifications for this product and the contents of the user manual are subject to change without notice.

SPECIFICATIONS

۲

TYPE	DESCRIPTION	
MAIN UNIT		
LxWxH	164 x 94 x 49 mm (6.46 x 3.70 x 1.93 in)	
Weight	241 g (8.5 oz) without battery	
Temperature range	-5°C to 50°C (23°F to 122°F)	
Resolution	0.1°C (0.2°F)	
Signal frequency	433 MHz	
Humidity range	25% - 95%	
Humidity resolution	1%	
Power	3 x UM-3 (AA) 1.5 V batteries	
REMOTE UNIT (THN132N)		
LxWxH	96 x 50 x 22 mm (3.78 x 1.97 x 0.87 in)	
Weight	62 g (2.22 ounces)	
Transmission range	30 m (98 ft) unobstructed	
Temperature range	-20°C to 60°C (-4°F to 140°F)	
Power	1 x UM-3 (AA) 1.5 V batteries	

ABOUT OREGON SCIENTIFIC

Visit our website (<u>www.oregonscientific.com</u>) to learn more about Oregon Scientific products. If you're in the US and would like to contact our Customer Care department directly, please visit: <u>www2.oregonscientific.com/service/support</u> OR

Call 1-800-853-8883.

For international inquiries, please visit: <u>www2.oregonscientific.</u> <u>com/about/international</u>

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

۲

WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

DECLARATION OF CONFORMITY

The following information is not to be used as contact for support or sales. Please call our customer service number (listed on our website at <u>www.oregonscientific.com</u>, or on the warranty card for this product) for all inquiries instead.

We

Name:	Oregon Scientific, Inc.
Address:	19861 SW 95 th Ave.,Tualatin, Oregon 97062 USA
Telephone No.:	1-800-853-8883

declare that the product

Product No.:	BAR206A
Product Name:	Weather Forecast Station with Atomic Time
Manufacturer:	IDT Technology Limited
Address:	Block C, 9/F, Kaiser Estate, Phase 1,41 Man Yue St., Hung Hom, Kowloon, Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation. ۲