

## INSTALLATION INSTRUCTIONS V90088B

### **CONTINUOUS CHANNEL SERIES**

Model: Single Trimless Adjustable Downlight

### Avoid Fire or Electric Shock

- \*Installation Instructions for qualified electricians only.
- \*Install per National Electrical Code and local regulations.
- \*Read Installation Instructions completely before installation.
- \*Failure to follow Installation Instructions may void warranties.





# Fixture Mounting

- 1. Hang Housing(s) from Hanger Brackets located on sides of Fixture(s) using 1/4-20 Screw. See Fig. 2 and Fig. 4.
- 2. Adjust elevation of Housing so that Adjustable Extrusion Frame (set to 5/8" thickness at factory) will sit on top of installed Drywall and bottom of Housing walls match bottom of Drywall surface. See Fig. 3.
- 3. Install Drywall to edge of Housing. See Fig. 3.
- 4. Reinstall Trimless Extrusion Mudding Frame.
- 5. Apply Tape to first level of Trimless Extrusion Mudding Frame. See Fig. 3.
- 6. Apply Mudding Compound from Housing concealing Trimless Extrusion Mudding Frame and Screws. Mudd out as far as necessary to achieve flat ceiling appearance. See Fig. 3.

## **Housing Connection**

- 1. Locate Trimless Extrusion Mudding Frame on Housing. See Fig. 1.
- 2. Remove Screws.
- 3. Remove Trimless Extrusion Mudding Frame from Housing and set aside for reinstallation later.

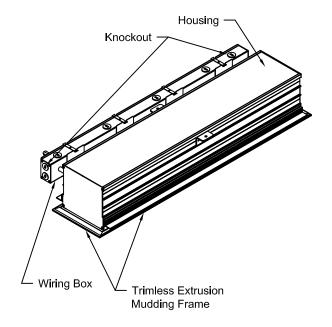


Figure 1

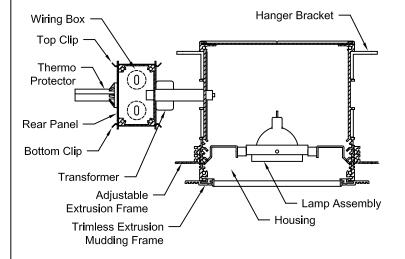


Figure 2



# INSTALLATION INSTRUCTIONS V90088B

## **CONTINUOUS CHANNEL SERIES**

Model: Single Trimless Adjustable Downlight

## Fixture Mounting (Con't)

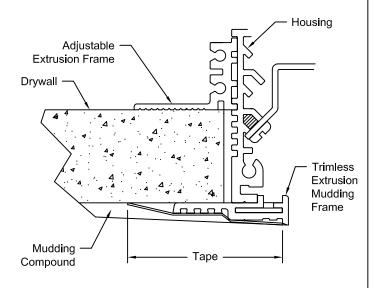


Figure 3

### **Transformer Access**

- 1. Locate Transformer Access Door behind each Lamp Assembly. See Fig. 4.
- 2. Remove Lamp Gimbals as necessary to reach Transformer Access Door.
- 3. Remove Two (2) Knurled Knobs at each side of Access Door.
- 4. Remove Transformer Access Door to access Transformer mounted to outside of Wiring Box.

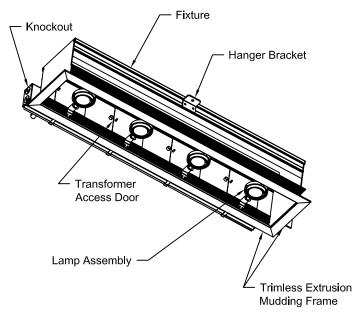


Figure 4

## **Electrical Wiring**

- 1. Turn OFF Electrical Service.
- 2. Connect Wiring Box to Electrical Service using Knockouts located at each end of Wiring Box and/or Knockouts along top of Wiring Box as needed. See Fig. 1, Fig. 2 and Fig. 4.
- 3. To remove Rear Access Panel(s) for inspection, lift Clips at Top and Bottom of Wiring Box. See Fig. 2.