


Passive Filter Design with QuickFil and the Bode 100

QuickFil 5.1

Software standard for PC filter design

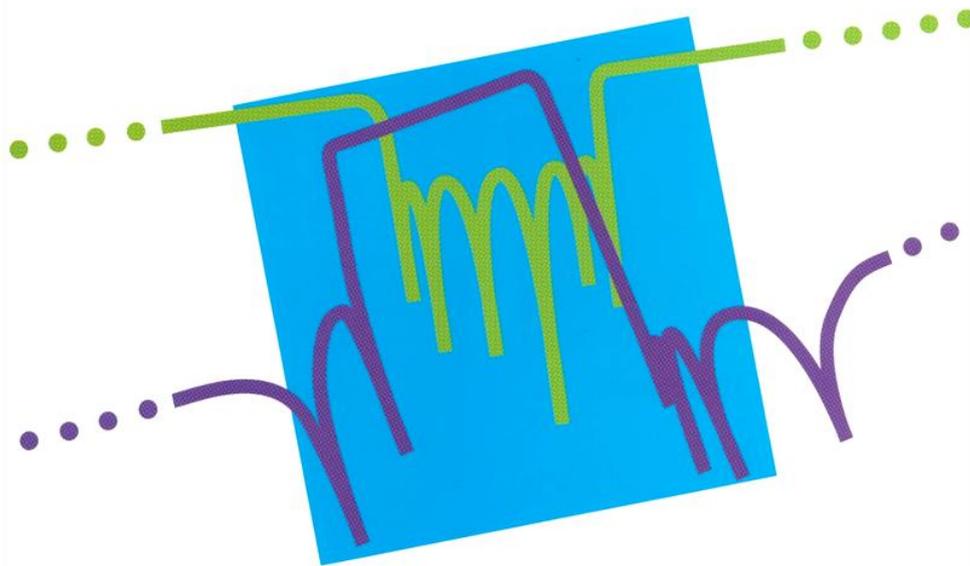

By Florian Hämmerle

© 2011 Omicron Lab – V1.0

Visit www.omicron-lab.com for more information.

Contact support@omicron-lab.com for technical support.

Table of Contents

1 Executive Summary	3
2 Task	3
3 Filter Design with QuickFil	4
3.1 About QuickFil	4
3.2 Bandpass Filter Design	4
3.2.1 Filter Type and Specifications	4
3.2.2 Circuit Manipulation	8
3.2.3 Circuit Analysis	11
4 Filter Measurement	13
4.1 Device Setup	13
4.2 Calibration	14
4.3 Measurement	15
5 Results	16
6 Conclusion	18

Note: Basic procedures such as setting-up, adjusting and calibrating the Bode 100 are described in the Bode 100 user manual.

Note: All measurements in this application note have been performed with the Bode Analyzer Suite V2.31. Use this version or a higher version to perform the measurements described in this application note.

You can download the latest version at
<http://www.omicron-lab.com/downloads.html>.

1 Executive Summary

This application note targets the design and analysis of standard filter types such as high pass, low pass and band pass filters.

It is demonstrated how to design a passive bandpass filter using the freeware filter design software QuickFil¹.

The designed filter is realized using standard value components and the filter characteristics are then measured using the Bode 100.

Finally the measured filter characteristics are compared with the calculated values from QuickFil.

2 Task

A passive bandpass filter with the following characteristics shall be designed:

- Centre frequency: $f_c = 230$ kHz
- Passband bandwidth: $f_p = 10\% = 23$ kHz
- Passband loss = 0.1 dB
- Filter degree $n = 6$

The designed filter shall be built and the characteristics be measured. The measured characteristics will be compared with the theoretical values.

¹ More information at: <http://www.omicron-lab.com/filter-design-software.html>

3 Filter Design with QuickFil

3.1 About QuickFil

QuickFil is a software for designing passive electronic filters. QuickFil supports many types of filters and different approximations:

Types of Filters:

- Lowpass
- Highpass
- Bandpass
- Bandstop
- Allpass
- Asymmetric bandpass filters
- Parametric bandpass filters

Approximations:

- Butterworth (maximally-flat filters)
- Chebyshev (equal-ripple filter)
- Inverse Chebyshev
- Elliptic (Cauer)
- Bessel (maximally flat delay)
- Modified Bessel
- General Equal-ripple approximation
- General maximum-flat approximation

Note:

If you plan to run QuickFil on Windows Vista or Windows 7 you have to use a small workaround. Details on this are described in the QuickFil Installation Guideline (go to <http://www.omicron-lab.com/filter-design-software.html> in the download tab)


3.2 Bandpass Filter Design

The following chapters are structured like a step by step guideline on how to design a filter using QuickFil.


3.2.1 Filter Type and Specifications

The first step is to define the filter type and approximation. After starting QuickFil the main screen is shown. By clicking on <Filtertype> the type of filter and the approximation method can be chosen as shown in the following figures:

In the QuickFil Main screen the option <Filtertype> can be chosen:

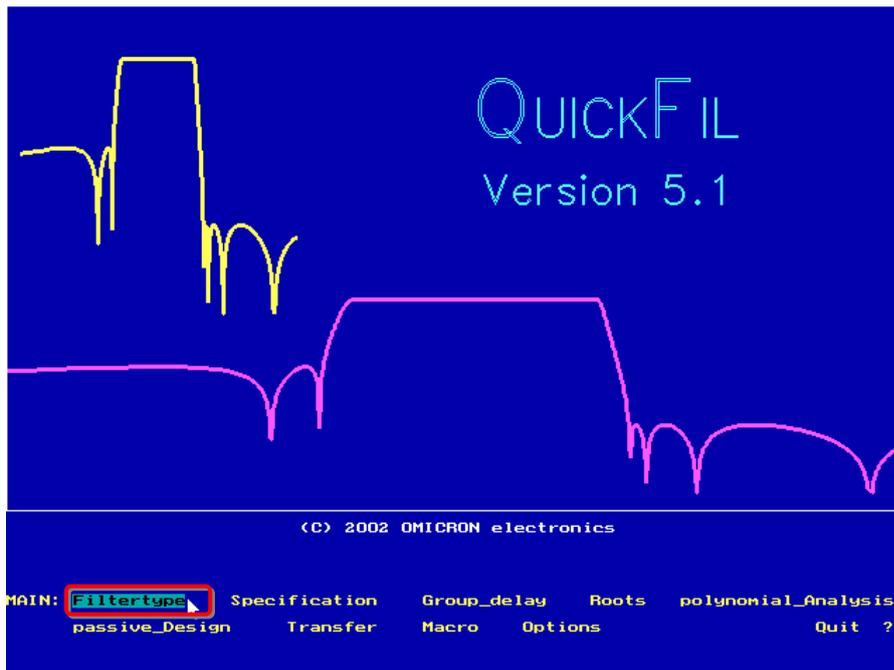

The Filtertype screen appears and the <Type> is set to <Bandpass> and the <Approximation > to <Chebychev>:

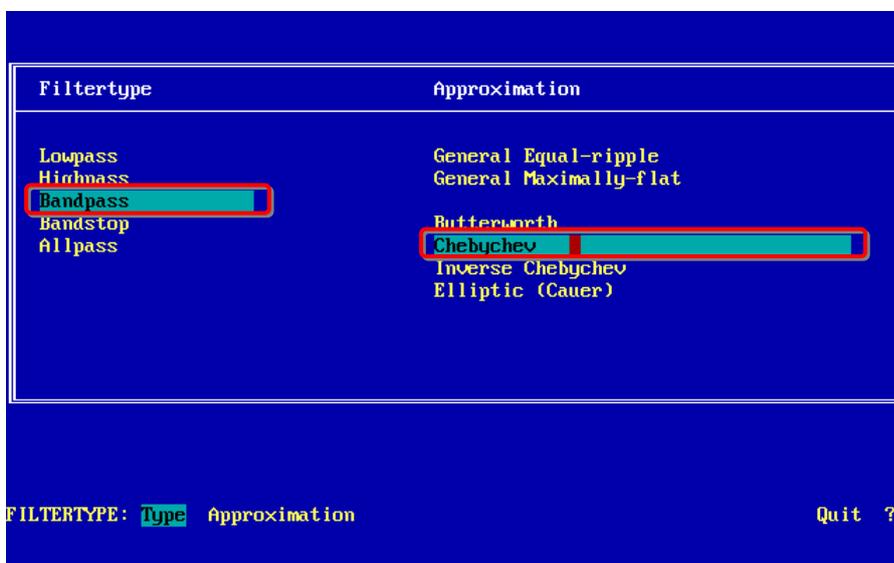

Note:

By clicking on <Quit> one can return to the main screen!

In the Main screen the <Specification> option can be chosen to enter the specification values which define the filter performance:

SPECIFICATIONS to : Chebychev - bandpass filter
apnote filter

(D) Centre frequency : 230.000 000 kHz
(B) Relative passband bandwidth : 10.00 %
(C) Relative stopband bandwidth : 30.00 %

(E) Passband bandedge loss : 0.100 000 dB
(F) Passband bandedge return loss : 15.43 dB
(R) Passband reflection factor : 15.09 %
(G) Stopband loss : 23.60 dB ◀

(H) Filter degree : 6
(I) Case (b, c) :
(J) Variable value (B,C,E,F,G,H,R) : 6

Relative 3dB bandwidth : 13.89 %
Filter quality : 20.67

SPECIFICATION: A B C E F R G H I J New comment file Printer
frequency repres. bandwidth repres. rel. bandwidth repres. Quit ?

Input values defining the filter properties.

The variable value is indicated by the ◀ symbol.

This option enables to enter the filter bandwidth as relative values.

As described in the beginning of the document, a filter with a centre frequency of 230 kHz is defined. The relative passband bandwidth is defined to be 10% and the relative stopband bandwidth is defined to be 30%.

By defining the <Stopband loss> to be the variable (changing) value the filter degree can be defined to be 6. This results in a calculated stopband loss of 23.6 dB.

<Quit> returns to the Main screen and by choosing the option <passive_Design> in the Main screen, QuickFil proposes the design and values for the passive filter defined in the specification screen:

Passive design


(O) Output circuit
(I) Input circuit
(S) Circuits with positive elements
(C) Computer circuit
(D) Dual circuit
(T) Terminating resistance
(A) Accuracy
(U) Sign real part of reflection zeros
(M) Manipulation and analysis

Move with [Cursor keys]

1 — R —
2 — L —
3 — C —
4 — L —
5 — C —
6 — L —
7 — C —
8 — R —

PASSIVE-DESIGN: O I S C D T A U M Quit ?

By clicking on <Dual circuit> QuickFil calculates the component values for the dual design. In this case the dual design has some advantages for later circuit manipulation.

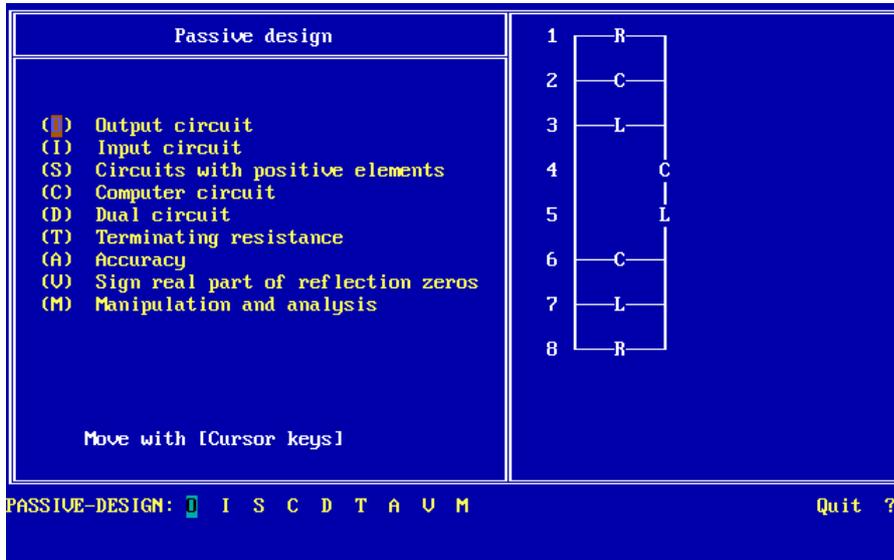

Choosing the option <Output circuit> shows the current design and the calculated component values:

appnote filter		


1R....	50.000 000 ohm
2C....	142.763 346 nF
3L....	3.354 037 uH
4	. C	1.206 170 nF
5	. L	396.986 807 uH
6C....	142.763 346 nF
7L....	3.354 037 uH
8R....	50.000 000 ohm

3.2.2 Circuit Manipulation


The default design proposed by QuickFil contains three inductors with two different inductance values ($L_3 = L_7 = 3.35 \mu\text{H}$, $L_5 = 397 \mu\text{H}$).

QuickFil offers a Norton's transformation functionality to modify component values without affecting the filter characteristics. In the following is explained how the filter can be modified to achieve three similar inductors.

The Norton's transformation option can be found by first choosing the <Manipulation and analysis> option in the Passive design screen.

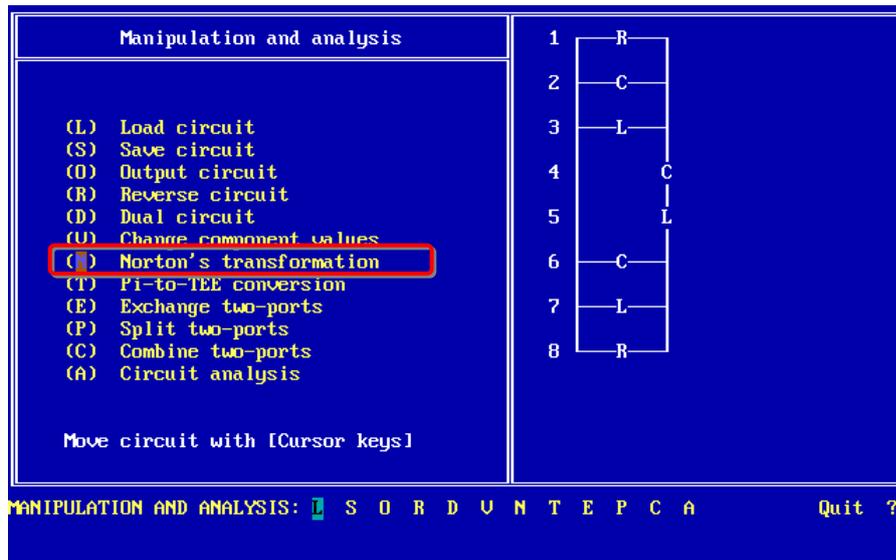

Choosing the <Norton's transformation> option opens the Norton's transformation screen:

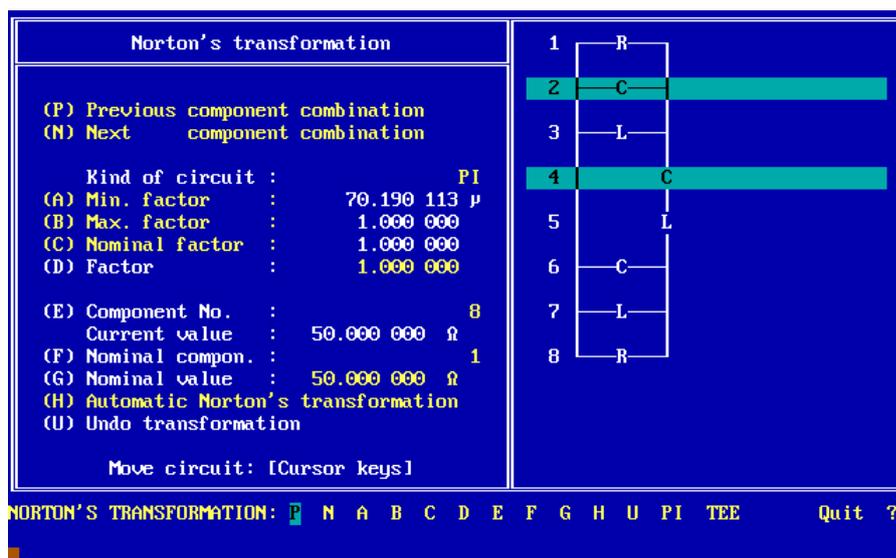

The transformation always works from top to down. We now want to perform a transformation in a way that the inductor L5 gets the same inductance value as the inductor L3. This can be done by setting the <Component No.> to 5. This means that component No. 5 will be changed. Since we want the inductor L5 to have the same value as the inductor L3 the <Nominal compon.> has to be set to 3. QuickFil now calculates the transformation factor which is displayed in the <Nominal factor> field:

In addition the <Kind of circuit> is set to TEE as this gives a better structure for the second transformation.

The transformation now has to be made active by clicking on <Nominal factor>. This means that the calculated transformation factor is applied to the circuit. This leads to the following screen:

The first two inductors now have the same inductance value. The same transformation can be applied to the third inductor as follows.

Clicking two times on <Next component combination> marks the right components. Now the <Component No.> field is set to 8 as we want to change the value of the last inductor at position 8. The <Nominal compon.> value is set to 6 as we want the inductor 8 to have the same inductance value as the inductor 6.

Norton's transformation

(P) Previous component combination
(N) Next component combination

Kind of circuit : TEE

(A) Min. factor : 1.000 000
(B) Max. factor : 11.986 200 k
(C) Nominal factor : 118.360 884
(D) Factor : 8.448 737 m

(E) Component No. : 8
Current value : 28.337 379 nH

(F) Nominal compon. : 6
(G) Nominal value : 3.354 037 uH

(H) Automatic Norton's transformation
(U) Undo transformation

Move circuit: [Cursor keys]

NORTON'S TRANSFORMATION: P N A B C D E F G H U P I TEE Quit ?

Performing the transformation by clicking on <Nominal factor> leads to the final circuit design. The circuit and component values can be displayed by clicking on <Quit> and <Output circuit>:

appnote filter		


1R....	50.000 000 ohm
2L....	3.354 037 uH
3	. C	157.213 986 nF
4C....	1.553 177 uF
5	. L	3.354 037 uH
6	. C	171.371 516 nF
7C....	1.553 177 uF
8	. C	157.213 986 nF
9L....	3.354 037 uH
10R....	50.000 000 ohm

The three inductors now have the same inductance values which can be advantageous for the practical design.

The practical design is built using standard component values. The capacitance values were achieved by series and parallel combination of standard capacitors. The used component values are:


Component	Calculated Value	Used Value
L2, L5, L9	3.354 μ H	3.3 μ H
C3, C8	157.213 nF	158 nF
C4, C7	1.553 μ F	1,55 μ F
C6	171.371 nF	172 nF

Assembled bandpass filter:

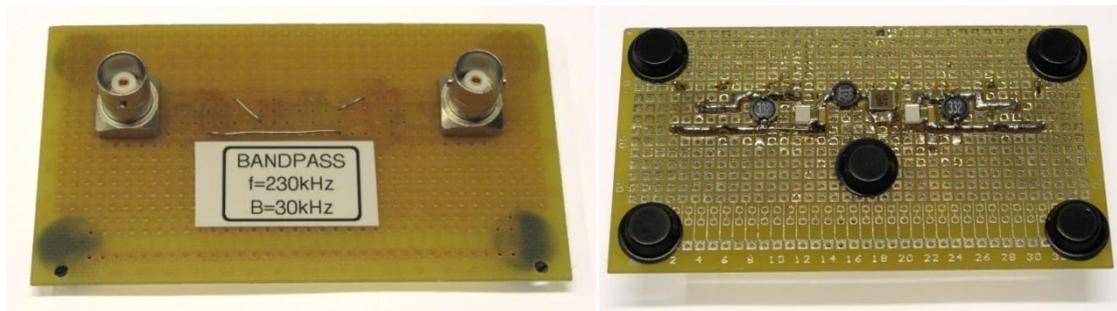


3.2.3 Circuit Analysis


QuickFil offers tools to analyze the designed filter. In the Manipulation and Analysis screen the option <Circuit analysis> can be chosen.

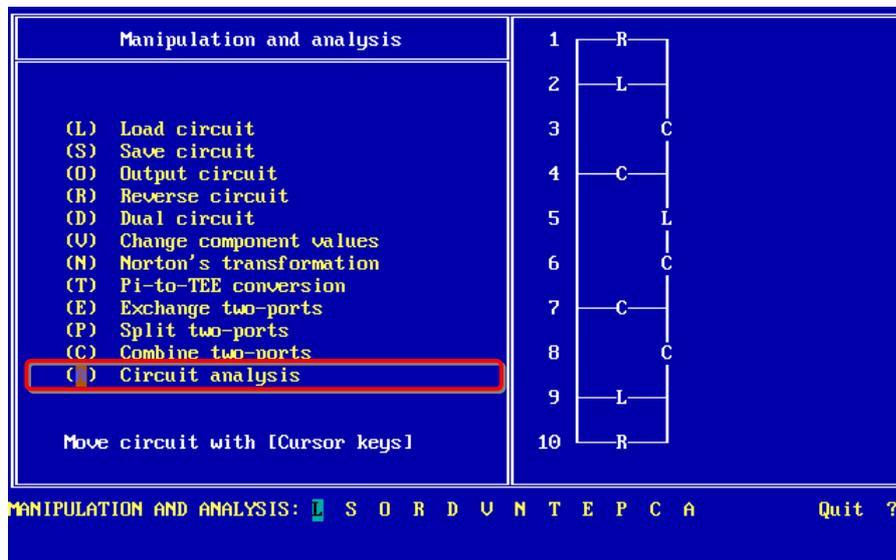

In the Circuit Analysis screen the desired property and plot settings can be set.

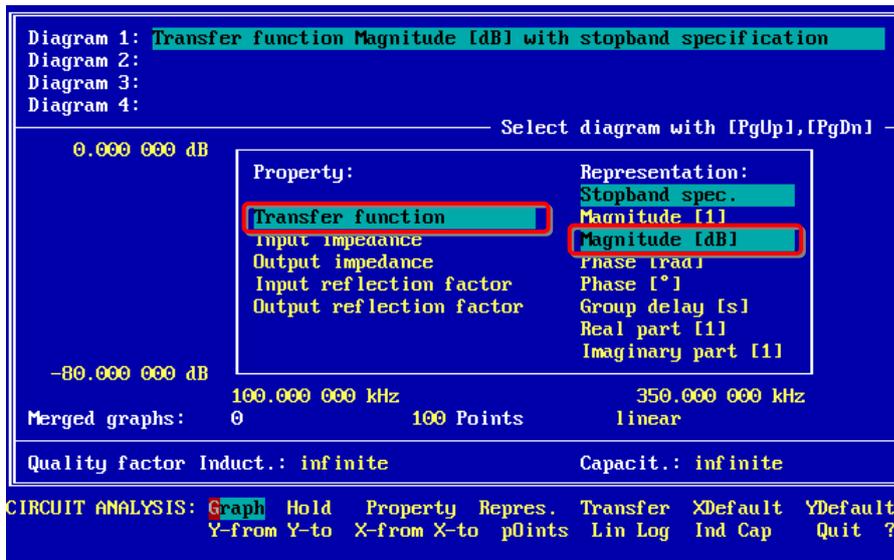

Clicking on <Graph> starts the plot window and shows the transfer function as shown in the following figure.

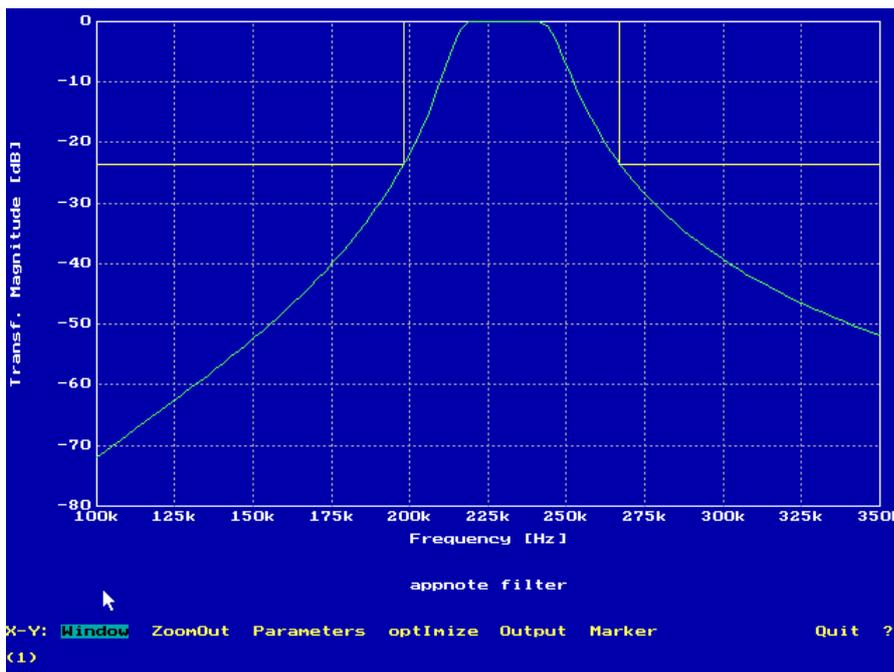


4 Filter Measurement

The assembled bandpass filter transfer function shall be measured with the Bode 100. In the following is shown step by step how to configure and calibrate the Bode 100 for the filter measurement.


4.1 Device Setup

The transfer function of the bandpass filter can be measured in the Frequency Sweep Mode of the Bode Analyzer Suite.

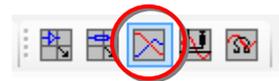


To do so the Bode Analyzer Suite has to be started and the Frequency Sweep Mode has to be selected by clicking on the Frequency Sweep Mode icon.


We want to measure the magnitude and phase of the filter. Therefore trace 1 is set to Measurement Gain, Format Mag(dB) and trace 2 to Measurement Gain, Format phase(°) as shown in the following figures:

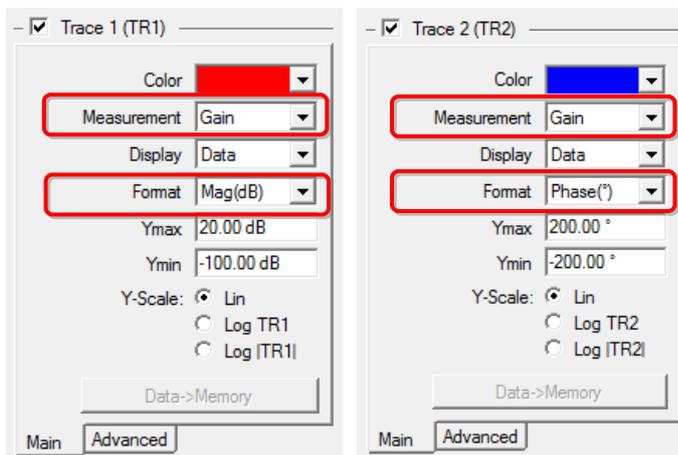

Start and stop frequency are set to 100 kHz and 350 kHz. The attenuator for channel 1 to 0 dB and the attenuator for channel 2 to 10 dB. The receiver bandwidth is set to 30 Hz:

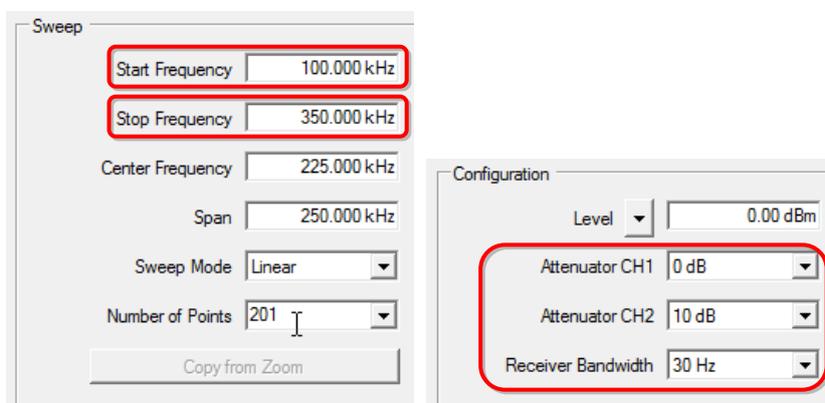

The 50 Ohm termination has to be switched on as the filter is designed to be terminated. To do so, open the configuration window and click on the termination switch (see figure below):

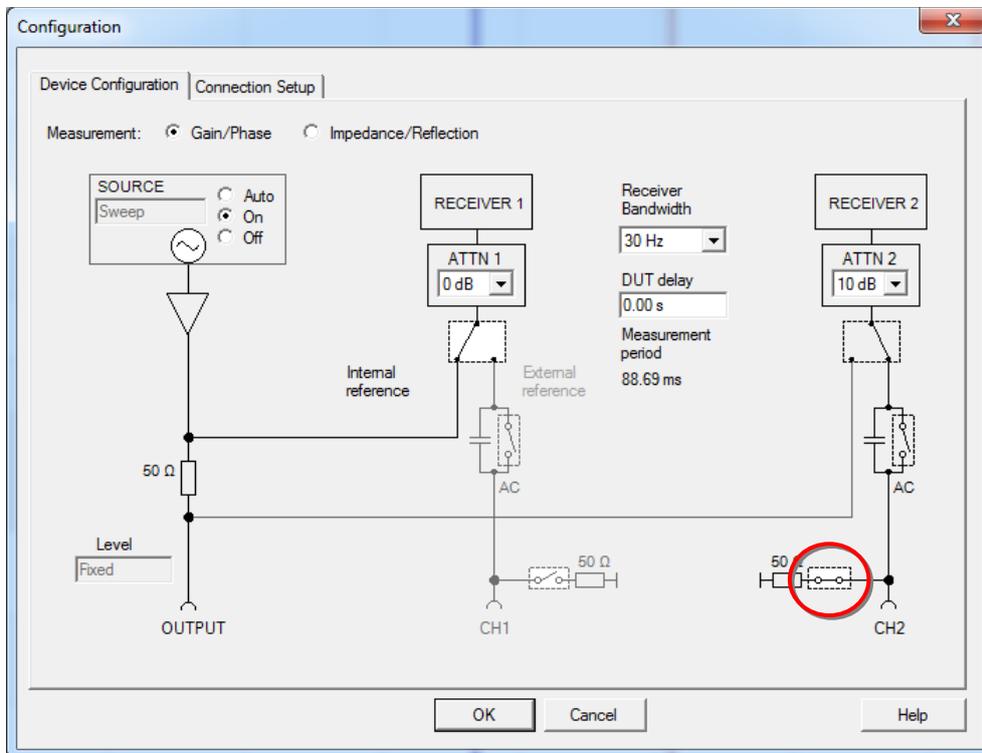

The Bode 100 is now ready to perform the measurement. To remove the influence of the connection cables on the measurement results it is advisable to perform a calibration before measuring the filter.

4.2 Calibration


A thru calibration removes the influence of the cables on the measurement. To do so, the two cables from output and channel 2 have to be connected together using the thru connector as shown in the picture below.



After connecting the cable the thru calibration can be done by clicking on User Calibration or Probe Calibration




Start the calibration by pressing start:

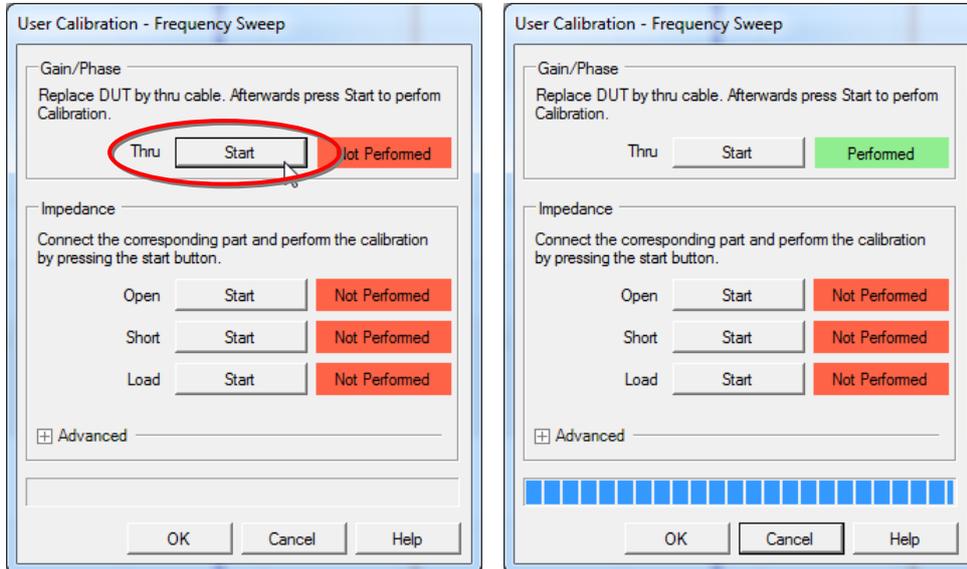

4.3 Measurement

After performing the calibration, the thru connection is replaced by the bandpass filter as shown in the picture below.

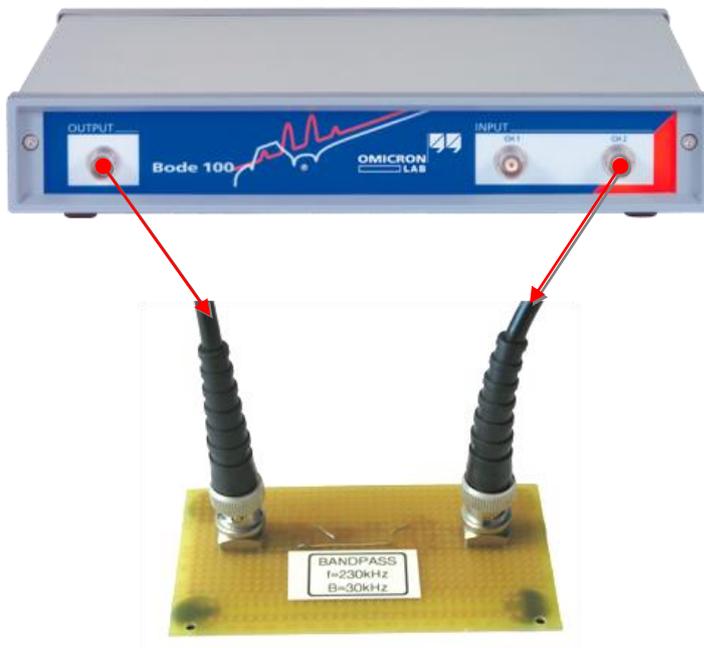


Now the measurement can be started by pressing the single sweep button.



5 Results

Performing the measurement described above leads to results as shown below. The first graph shows the amplitude gain in decibel and the second graph the phase in degree.

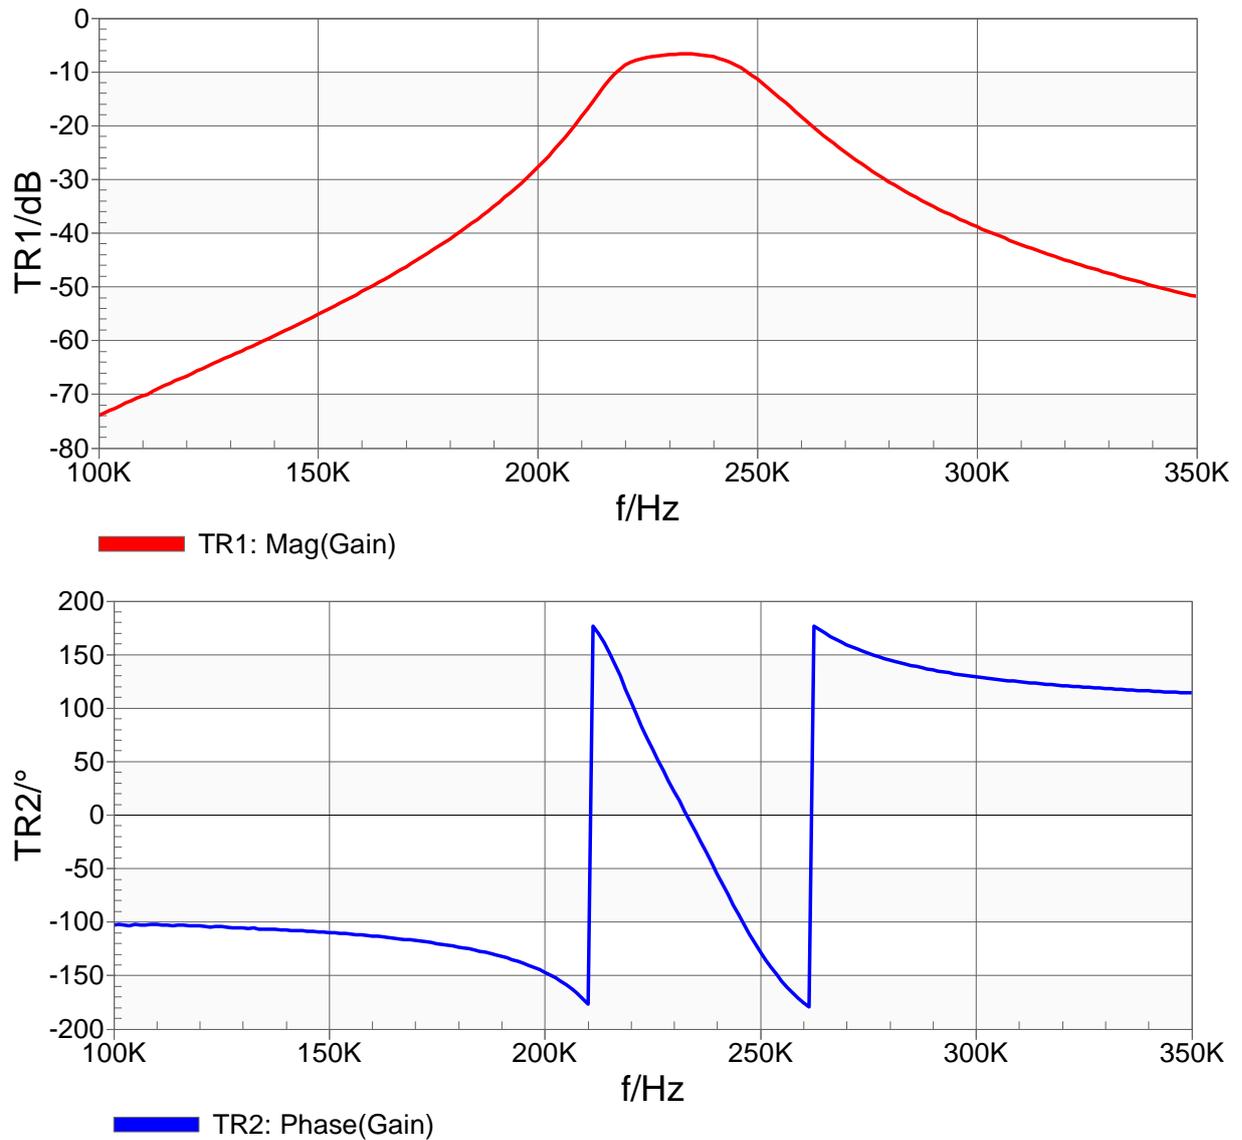


Comparing these results with the calculations in QuickFil shows that the passband loss is higher than calculated. The reason for this are the limited quality factors of the components used to assemble the filter.

QuickFil offers a feature to estimate this influence. In the circuit analysis screen are input fields for the inductor quality factor and the capacitor quality factor. The components used for the assembled filter have an approximate quality factor of

Inductors: $Q \approx 55$

Capacitor combinations: $Q \approx 40$


The figure below shows how the quality factors are entered into QuickFil.

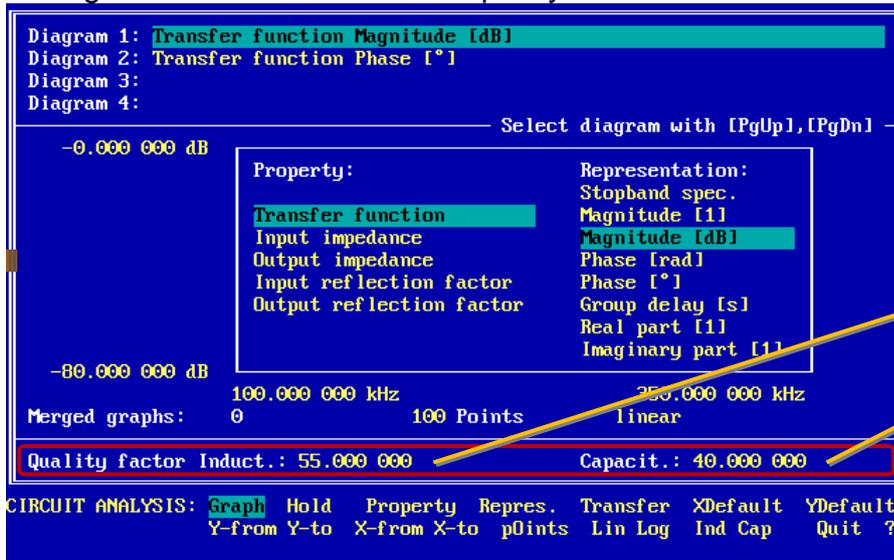



Inductor quality factor

Capacitor quality factor

When considering the quality factors of the components the calculated transfer characteristic results as shown in the following graph:

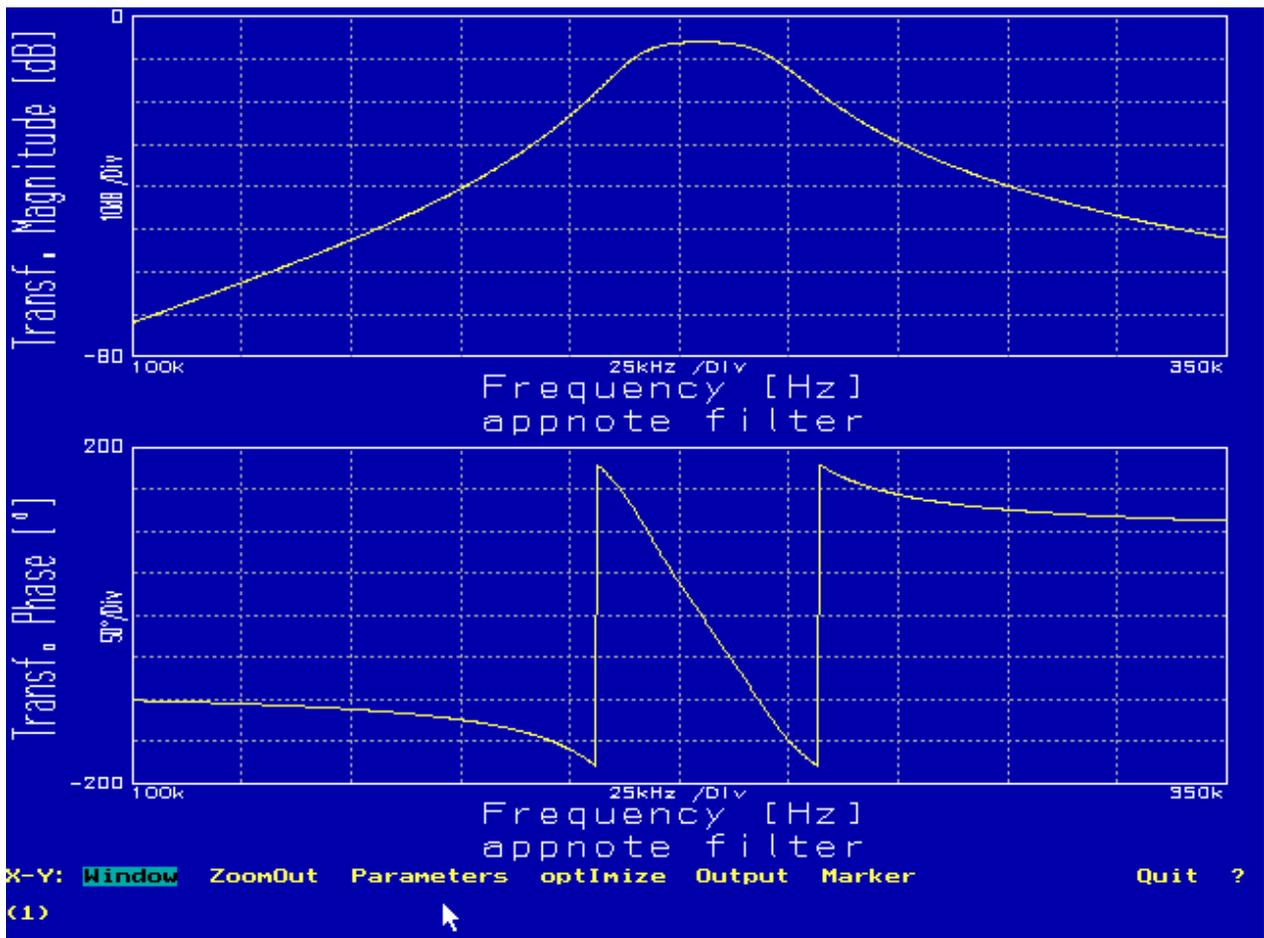

On the next page there is a direct comparison between measured and calculated data where the quality factors are taken into consideration

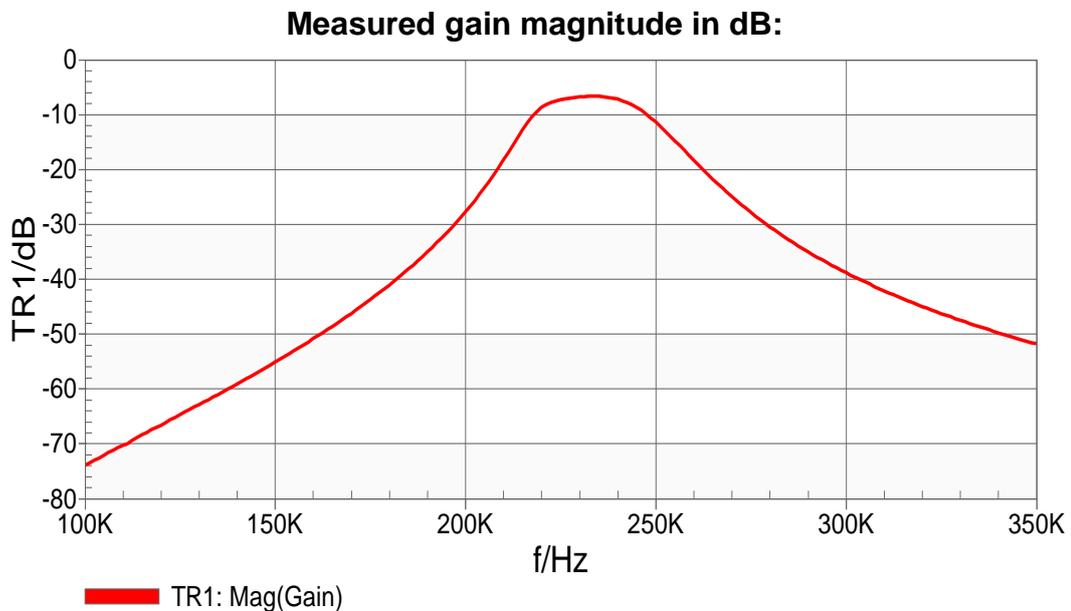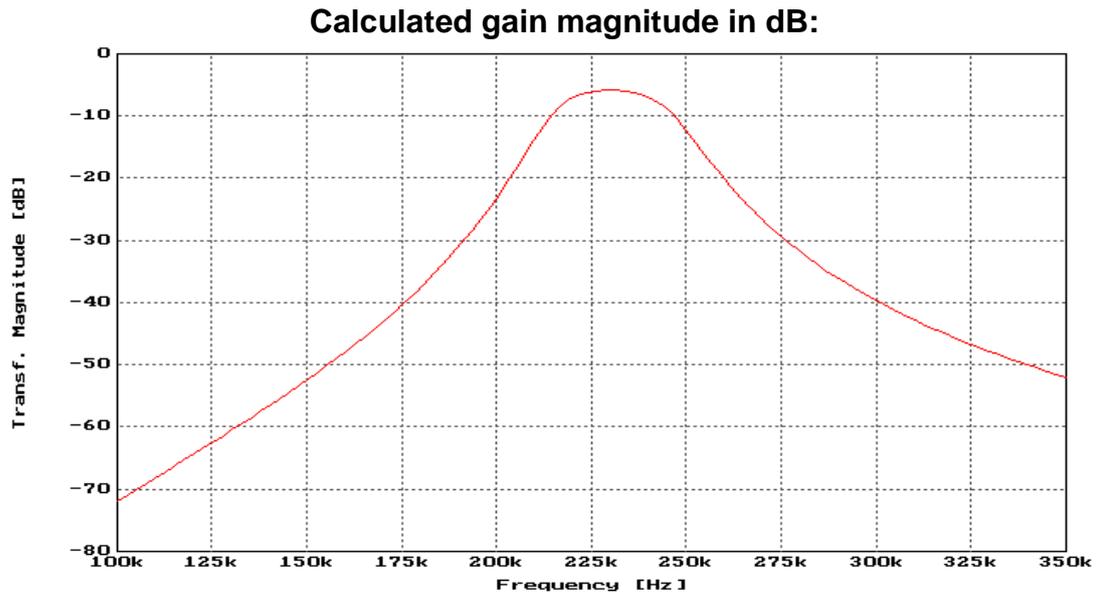

6 Conclusion

The first part of this application note shows how to design passive filters using the filter design software QuickFil. QuickFil offers many functions for passive filter design e.g. Norton's transformation to optimize the filter design.

The second part of the application note shows how to measure the filter characteristics of the designed bandpass filter using the Bode 100. It is shown how to terminate the filter correctly using the internal 50 Ohm resistance of the Bode 100.

The measured and calculated results match very well when the quality factors of the used components are considered for the calculation of the transfer function. It is therefore very important to have high quality components for the passive filter design.