



Thai Massage Seat

**Model: IBM80024
USER MANUAL**

IMPORTANT SAFETY INSTRUCTIONS

DANGER To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place into or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- Keep dry - DO NOT operate in wet or moist conditions.

WARNING TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts and attachments.
- Close supervision is necessary when this appliance is used near children invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. ONLY use attachments provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it's not working properly, if it has been dropped or damaged, or dropped into water.
- Keep cord away from heated surfaces.
- NEVER use while sleeping or fall asleep while using the massager.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury.
- DO NOT carry this appliance by power cord or use cord as handle.
- To disconnect, turn all controls to the "Off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.
- DO NOT use outdoors.
- DO NOT use on an infant or invalid or on a sleeping or unconscious person. DO NOT USE ON SENSITIVE SKIN OR ON A person with poor blood circulation.
- DO NOT crush. Avoid sharp folds.


CAUTION Please read all instructions carefully before operating.

1. Consult your doctor prior to using this product, if you are pregnant, if you have a pacemaker

2. or any concerns regarding your health.
2. Never leave this appliance unattended, especially if children are present.
3. Never leave the appliance unattended when it is turned on.
4. DO NOT use this product for more than 15 minutes at a time.
5. Excessive use could lead to the product overheating. Should this occur, discontinue use and allow the unit to cool before using again. The product will break if it over-heats.
6. Never use this product directly on swollen or inflame areas or skin eruptions.
7. This product is a non-professional appliance designed to provide soothing massage for back and legs.
8. DO NOT use this product as a substitute for medical attention.
9. DO NOT use this product before bed. The massage has a stimulating effect and may delay sleep.
10. Never use this product while in bed
11. This product should NEVER be used by any individual who is suffering from any physical condition that could limit their ability to operate the controls, or by any person who has sensory deficiencies in the lower half of their body.
12. This product is not for use in automobiles.


OVERVIEW

MASSAGER

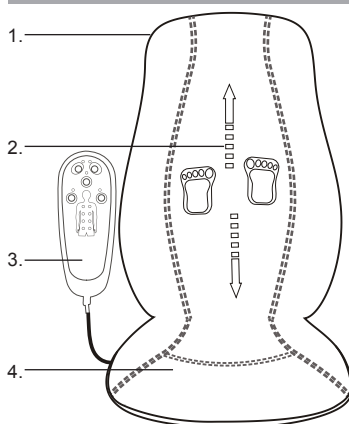

1. **SEAT COVER:** Use as cushion to lower massage intensity
2. **STEPPING:** Full, upper & lower back massage
3. **REMOTE CONTROL:** Multi-function controller
4. **SEAT CUSHION**

REMOTE CONTROL

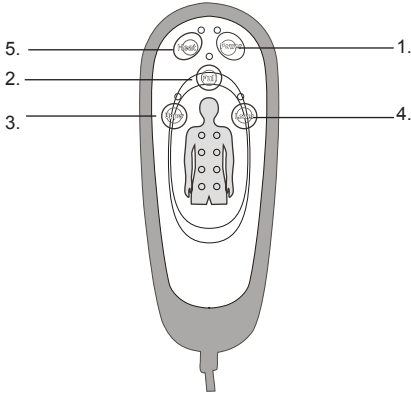

1. **POWER BUTTON:**
To operate the massager press the **POWER** button. The LED indicator light will illuminate to confirm your selection. To turn the massage functions off simply press the **POWER** button again. The LED indicator will blink while the stepping massage mechanism returns to its lowest position and then it will turn off.
- 2,3.&4. **MASSAGE SETTINGS:**
To select a target area for your massage, simply push button and corresponding LED light will illuminate. To deselect, push the button again. The massage system targets the following areas:
 - **FULL BACK**
massagers cycle up and then down your back.
 - **UPPER BACK**
massagers target mid to upper back.
 - **LOWER BACK**
Massagers target mid to lower back.
5. **HEAT BUTTON:**
For soothing heat simply press the **HEAT** button and the corresponding LED light will illuminate. To deselect, press **HEAT** button again.
NOTE For your safety, heat cannot be turned on if massage is not selected.

GETTING STARTED

Thank you for purchasing this Thai Massage Seat. The product uses an advanced Thai style massage technique. It is suitable for use on most chair types, but it not designed for use in a car.

STRAPPING SYSTEM

The massaging seat cover incorporation a convenient strapping system. Simply attach and adjust elastic straps behind the chair.

MAINTENANCE

STORING

Place massager in its box or in a safe, dry cool place. Avoid contact with sharp objects which may cut or puncture the fabric surface. to avoid breakage, do not wrap the power cord around the unit. Do not hang or carry unit by the hand control cord.

CLEANING

Unplug the unit and allow it to cool down before cleaning. Use only a soft, slightly damp sponge. Never allow water or any other liquid to come into contact with the unit.

- Do not immerse in any liquid to clean.
- Never use abrasive cleaners, brushes, gasoline, kerosene, glass / furniture polish or paint thinner to clean.
- Do not attempt to repair the massaging seat cover. There are no user serviceable parts.

CONTROLLER STORAGE POCKET

Always store multi-function controller in convenient storage pocket when ont in use.

HOME ADAPTER

The Thai Massage Seat includes an AC/DC wall adapter for home or office use. To turn the multi-function controller on , insert the end of the wall adaptor cord into the buttom of the controller

SPECIFICATIONS

TYPE	DESCRIPTION
MAIN UNIT	
L x W x H	660mm(L)x460mm(W)x160mm(H)(25.9inx18.1inx6.3in)
Weight	5kg (11.02lbs)
Power	Power adaptor: INPUT 100 – 240V ~ 50/60Hz OUTPUT: DC12V 3.0A

ABOUT OREGON SCIENTIFIC

Visit our website (www.oregonscientific.com) to learn more about Oregon Scientific products. If you're in the US and would like to contact our Customer Care department directly, please visit: www2.oregonscientific.com/service/support
OR
Call 1-800-853-8883.
For international inquiries, please visit: www2.oregonscientific.com/about/international

EU-DECLARATION OF CONFORMITY

Hereby, Oregon Scientific, declares that this Thai Massage Seat (model: IBM80024) is in compliance with EMC directive 2004 / 108 / CE. A copy of the signed and dated Declaration of Conformity is available on request via our Oregon Scientific Customer Service.

