



V. BRØNDUM A/S

User Manual

V. BRØNDUM A/S
Item No.: A0800103



RONDA[®] 2600

The Vacuum Cleaner for Factories and Warehouses
Emptying from the Bottom

11-2014

IMPORTANT!

Please read the manual before you use the vacuum cleaner.

User Manual

Table of Contentes

Description of RONDA® 2600	4
Technical data	4
Standard accessories	5
Machine design and description	6
Motor top	6
Adapter ring	6
Collection container.....	7
Multi-tube filter.....	7
Trolley frame	7
Front nozzle	7
Scope of application	8
Safety precautions	9
Mode of operation.....	13
Derivation of static electricity.....	13
Use and mounting of the front nozzle	14
Safety check before use	15
Start-up and collection of dry dust	16
Vacuum indicator and filter cleaning during operation	16
Emptying	18
Cleaning and maintenance	19
Maintenance of the motor top	19
Replacing the filters	20
In general	20
Check and replacement of the multi-tube filter.....	20
Replacement of the HEPA-filter	21
Disposal of filters.....	21
Trouble shooting	22
Service and repair.....	23

RONDA® 2600

The Vacuum Cleaner for Factories and Warehouses

RONDA® 2600 is a Danish developed high efficiency vacuum cleaner for the collection of dry dust in large areas such as warehouses, factories, offices etc. with hard floors. RONDA® 2600 is equipped with a very flexible and wide high-capacity front nozzle, which is suspended in such a way that there is close contact to the floor all the time. Two powerful 1100 W suction motors ensure a high suction capacity, and the derivation of static electricity guarantees a good working environment.



- Large collection capacity
- Emptying from the bottom
- Teflon-coated multi-tube filter
- Continuous filter cleaning during operation
- Robust lightweight trolley frame
- Smooth-running wheels
- Low noise level
- Derivation of static electricity
- High-capacity front nozzle
- Special suspended front nozzle with close contact to the floor for optimized collection
- External filter cleaning with pressure equalization valve
- HEPA-filtering

Technical Data

Suction motor, blow through	2*1100	Watt
Suction motor, voltage	230	Volt
Suction capacity	2550	mmWc
Air flow, max. (per motor)	54	l/sec.
	194	m ³ /h
Air flow, max. (measured, machine)	227	m ³ /h
Suction power, max.	580	W
Noise level	<70	dB(A)
Collection capacity (emptying from the bottom)	35	l
Filter area, multi-tube filter	1,0	m ²
Filter area, HEPA	1,1	m ²
Height	1070	mm
Length	770	mm
Width	670	mm
Weight without accessories	39	kg
Cable length	15	m

User Manual

Standard Accessories

RONDA® 2600 is supplied with a complete set of accessories including tubes, hose and all necessary nozzles.



The accessories can be re-ordered when using the following article numbers:

1. 40 mm professionals set (antistatic)	80.33.4025
2. Plastic hose, antistatic 4 m	84.54.3823
3. Crevice nozzle	80.34.4000
4. Round brush	80.34.4001
5. Floor nozzle B-370	84.38.3620
6. Tubes, two straight ones and one bent tube	80.52.2160

User Manual

Machine Design and Description

RONDA® 2600 consists of the following main parts:

- 1) Motor top
- 2) Adapter ring
- 3) Collection container
- 4) Intermediate ring with multi-tube filter
- 5) Trolley frame
- 6) Front nozzle

Motor Top

The two powerful suction motors of the motor top are individually switched on with the two switches of the motor top.

The motor top is equipped with an integrated handle. Do not use this handle for carrying the whole vacuum cleaner.

The motor top is equipped with a HEPA-filter (84.67.5006).

The HEPA-filter is attached to the underside of the motor top and filters out the very fine particles. The HEPA-filter holds back 99.997% of all particles larger than 0.3 µm.

Adapter Ring



The Motor top is mounted on an adapter ring holding the multi-tube filter in the intermediate ring.

The adapter ring is equipped with a vacuum indicator (1) and a pressure equalization valve (2).

The vacuum indicator indicates the negative pressure in the space above the multi-tube filter.

In this way you can read on the vacuum indicator whether the multi-tube filter is blocked and needs a cleaning.

The cleaning is made by means of the pressure equalization valve. Also see the section about filter cleaning during operation.

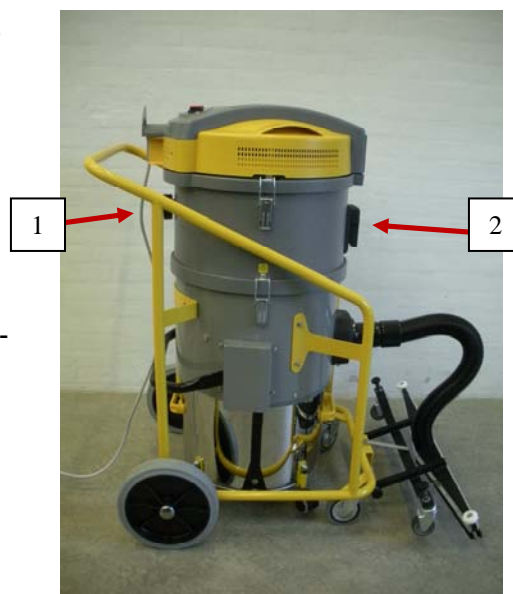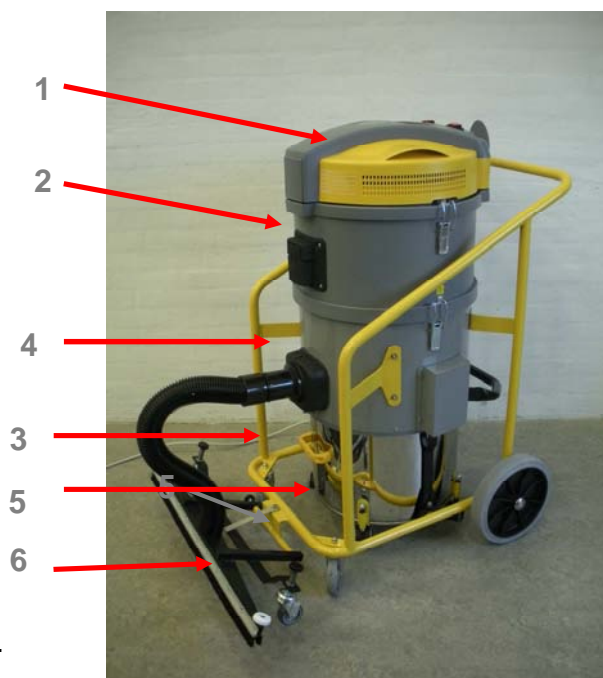

User Manual

Collection Container

The collection container can easily be removed if you disengage the container with the handle (emptying from the bottom).

The total collection capacity is 35 l (volume).



Multi-Tube Filter



The fine dust is held back in the collection container where a large Teflon-coated multi-tube filter will clean the air.

The multi-tube filter is a "Dust Class M" filter and has been approved by the German test institute BIA.

The multi-tube filter has a filter surface of 10,000 cm² and is mounted on springs, which gives a self-cleaning effect during operation.

Trolley Frame

The collection container and intermediate ring are placed in a solid trolley frame with revolving front wheels and large rear wheels. The machine is moved by means of the big push handle.

Front Nozzle

The wide front nozzle is suspended so that it can be adjusted. The precise distance above the surface of the floor is adjusted by means of the adjusting screws on top of the wheels of the front nozzle.



User Manual

Scope of Application

RONDA® 2600 is a vacuum cleaner according to DS/EN 60335-2-2 and CEI/IEC 60335-2-69 and may only be used as such.

RONDA® 2600 must not be used for collecting fluids or moist dust.

RONDA® 2600 is not approved and must not be used to collect flammable, explosive, poisonous or other dust, fluids or gasses hazardous to health.

RONDA® 2600 may be used in dry environments only and must not be used or stored under moist or wet conditions outside or inside.

User Manual

The user manual is to ensure a secure operation of the vacuum cleaner, and to ensure that the user is in no way uncertain as to the use. The manual must be stored near the vacuum cleaner.

Does any uncertainty arise as to the use of the vacuum cleaner or the material collected, the work should be stopped until all questions have been cleared.

Pictures and drawings are for illustrative purpose and will make the understanding of the manual easier. The pictures shown may therefore be different from the actual product.

Safety Precautions

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- The machine is **NOT** approved for collection of flammable, explosive, poisonous or extremely health hazardous dust, fluids or gasses.
- **DO NOT USE THE VACUUM CLEANER WITHOUT A PROPER GROUND CONNECTION.**
- This vacuum cleaner is designed to be used with a ground connection, in an installation with HFI or HPFI relay. The user is responsible for ensuring that the wall outlet is grounded. The ground connection of the plug must **NOT** be removed.
- The appliance must be emptied after use.
- The user must ensure that the appliance is adjusted to the task and that regulatory requirements are met.
- When collecting dust hazardous to health you must use a filter bag, and disposal must comply with the legal requirements for material (closed container, plastic bag etc.).
- Avoid damaging the supply cord. When replacing the supply cord, only use an original supply cord (see the spare parts list). V. BRØNDUM A/S, an authorized V. BRØNDUM A/S dealer or an equally qualified person must carry out the replacement in order to avoid danger. Regularly check the mains connection for damage, such as fissures or ageing, and if damage is found, the supply cord must be replaced before further use.
- Before any repair or maintenance operations on the appliance – also cleaning – the plug must be removed from the power supply.
- The mains socket of the appliance is to be used only for the purposes specified in the user manual.
- This appliance is intended for commercial use, e.g. in hotels, schools, hospitals, factories, shops, offices and rental businesses.
- **Before use**, operators should be provided with information, instruction and training for the use of the appliance and the substances for which it is to be used, including the safe method of removal and disposal of the material collected.
- For user servicing, the appliance must be dismantled, cleaned and serviced, as far as is reasonably practicable, without causing risk to the maintenance staff and others. Suitable precautions include decontamination before dismantling, provision for local filtered exhaust ventilation where the appliance is dismantled, cleaning of the maintenance area and suitable personal protection.

User Manual

- The manufacturer, or an instructed person, shall perform a technical inspection at least annually, consisting of, for example, inspection of filters for damage, air tightness of the appliance and proper function of the control mechanism. On class H appliances the appliance filtration efficiency should be tested at least annually, or more often, according to national requirements. The test method that may be used for the verification of the appliance filtration efficiency is given in AA.22.201.2. If the test will not be passed, it must be repeated with a new main filter.
- When carrying out service or repair operations, all contaminated items, which cannot be satisfactorily cleaned, are to be disposed of. Such items shall be disposed of in impervious bags in accordance with any current regulation of the disposal of such waste.
- The upper part of the motor top is a non-dust proof compartment, and when cleaning, the covers of this compartment are removed by loosening the screws fixing the covers.
- **IMPORTANT! The vacuum cleaner must not be started when the covers are removed.**
- **IMPORTANT! The motor top must not be covered when the appliance is in use.**

Guidelines in Connection with Disposal of the Machine



The product you have purchased is subject to Directive 2002/96/EC of the European Parliament and the Council of the European Union on waste electrical and electronic equipment (WEEE) and should not be disposed of as unsorted municipal waste. Please utilize your local WEEE collection facilities in the disposition of this product and otherwise observe all applicable national requirements.

Does the safe use or maintenance of the appliance raise any questions; do not hesitate to contact either your dealer or V. BRØNDUM A/S.

User Manual

General Safety Instructions

When using electrical equipment the necessary safety precautions must be taken in order to avoid the risk of fire, electrical shock and damage to persons. The below safety instructions are to be read and followed when the vacuum cleaner is being used.

1. Keep the working area clean. Slippery and greasy surfaces increase the risk of accidents.
2. Be aware of the surroundings. Do not expose the vacuum cleaner to rain. Do not use the vacuum cleaner in moist or wet surroundings. Do not use the vacuum cleaner near flammable gasses or liquids.
3. Protect against electrical shock.
Avoid bodily contact with earthed building parts, such as radiator, water pipes and the like and also electrical appliances with their own earth connection.
4. Keep children and unauthorized persons away from the work place.
Do not let unauthorized persons touch the vacuum cleaner or the supply cord. All unauthorized persons should be kept at a distance.
5. Put the vacuum cleaner away, or make it ready for transport after use.
Keep the vacuum cleaner in a dry place and inaccessible to children.
6. Do not use force.
Do not use force when operating the vacuum cleaner. Do not step on the hose, or the electrical cord.
7. Choose the correct tool, accessories for the task.
Do not use badly proportioned or light tools for heavy tasks. Do not use tools for anything they are not intended for.
8. Choose suitable working clothes.
9. Personal protective equipment.
Put on eye and/or ear protection, if necessary. Put on respirator in dusty environments.
10. Protect the electrical cord.
Never carry the vacuum cleaner by the electrical cord. Do not remove the plug from the socket by pulling the electrical cord. Keep the electrical cord away from heating sources, oil and sharp edges.
11. Choose a safe working position so that there will be no risk of falling in the hose and cord.

User Manual

12. Keep the machine and equipment in good repair.
Keep the vacuum cleaner clean and dry and follow the instructions of the chapter about maintenance.
13. Cut off the electricity supply when the vacuum cleaner is not in use.
Remove the plug from the socket before maintenance, repair and when the NPU is not in use.
14. If extension cords are used out of doors, they must be approved for this.
If extension cords are used, the following guidelines must be observed.

Length of cord in metres	Cross section	
	<16A	<25A
Up to 20 m	Ø1.5mm ²	Ø2.5mm ²
20-50 m	Ø2.5mm ²	Ø4.0mm ²

15. Show attention and be rested.
The vacuum cleaner must not be used, if the user is tired, sleepy or sick or under the influence of alcohol or drugs / medicine.
16. Check for damage.
Check the vacuum cleaner for damage. Check that the shields etc. have been properly fastened. Check the electrical switches, and have an authorized service mechanic replace them, if they are damaged. Do not use the vacuum cleaner, if it cannot be started and/or stopped at the switch.

User Manual

Mode of operation

When the suction motors are turned on, the air is drawn through the appliance collecting the dust particles near the front nozzle.

The dust particles are drawn through the front nozzle by means of the high airflow and are transported through the suction hose to the collection container.

In the collection container the air is led towards the bottom of the container where the heavy particles will settle.

The very light particles are led by the airflow towards the multi-tube filter mounted in the intermediate ring. The air is drawn through the filter, which will hold back the dust particles.

The airflow is drawn through the HEPA-filter, which will hold back the very fine dust particles.



Finally the exhaust air is filtered by the noise reduction foam of the motor top, after which the purified air will leave the machine through the crevice under the yellow motor top.

IMPORTANT: Do not cover the motor top, when the machine is operating.

Derivation of Static Electricity

When collecting dry materials and dust, static electricity may be generated in for instance the suction hoses and tubes.

RONDA® 2600 is earthed through the earth connection of the cabling. Therefore, it is very important that the appliance is connected to a power supply with reliable connection to earth (Active protection against indirect touch).

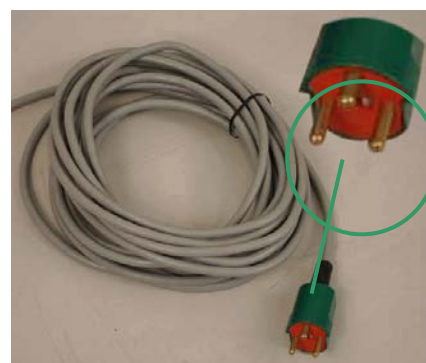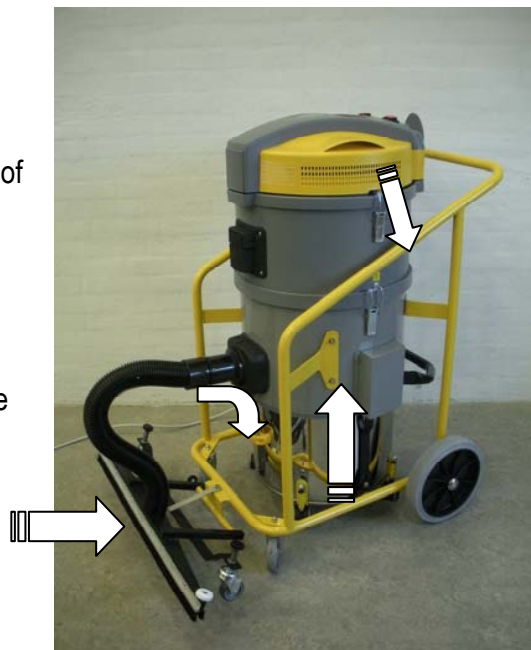

User Manual

Use and Mounting of the Front Nozzle

- Unpack the RONDA[®] 2600 and check that all the parts ordered are present.

The front nozzle is mounted onto the holder at the front of the yellow trolley frame.


On the back, the front nozzle is equipped with a mounting profile fitting the holder of the trolley frame.



- Loosen the thumbscrew (1).
- Let the guide pin (2) slide into the end of the tube.
- Push the nozzle into position (in place).
- Fix the front nozzle with the thumbscrew (1).
- Adjust the front nozzle to the correct height above the floor by turning the thumbscrews (3).

In order to ensure an optimum suction it is important that the brushes or the rubber lips of the front nozzle are adjusted so that they just touch the surface of the floor. The fine adjustment of the height of the front nozzle above the surface of the floor is made by means of the adjusting screws (3) of the wheels of the front nozzle.

- Fasten the suction hose to the front nozzle.
- Place the hose coupling in the container coupling at the front of the machine.

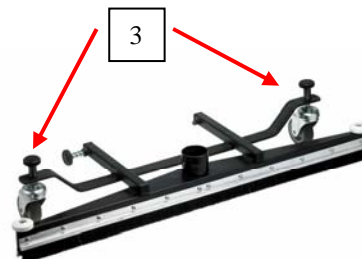

User Manual

Safety Check before Use

- Before connecting to the power supply it must be checked that the plug and the cord are undamaged. If the cord or the plug is damaged, a professional must make the replacement.
- Make sure that the voltage and current of the power supply correspond with the data on the data plate of the appliance.
- The plug must be removed from the power supply before any repair or maintenance operation – also cleaning.
- Before you start the vacuuming you must make sure that the machine is equipped with the right filters for the task in question. If any doubt, please contact the dealer.
- The machine is connected to the power supply with a reliable earth connection.
- If there are any questions as to the use, safety or construction of the appliance, do not hesitate to contact your dealer or V. BRØNDUM A/S.

REMEMBER: Always get information about the disposal of waste and about the rules in force for the materials in question.

RONDA® 2600 can now be used.

The collection and the use are described in details on the following pages.

User Manual

Start-up and Collection of Dry Dust

When the appliance has been correctly assembled and connected, you can start it by pressing the switches on the motor top. The two powerful suction motors have separate switches.



You can move the vacuum cleaner during operation on the large wheels. The revolving front wheels facilitate the manoeuvring of the machine.

The accessory set with hose, tubes and nozzles can be used for cleaning the inaccessible places that the front nozzle cannot reach.

The hose is attached to the container coupling on the front of the appliance and assembled with the tubes and the nozzle chosen.

The floor nozzle is suitable for the collection of dust and materials from large even surfaces. The nozzle is equipped with brushes and wheels, which make sure that the nozzle is conveyed over the even surface in an optimal way.

Eventually, the brushes will be worn, which will consequently reduce the efficiency of the nozzle.

Adjust the wheel height by using the knob of the nozzle to ensure that the brushes only just touch the floor.

Vacuum Indicator and Filter Cleaning during Operation

The vacuum indicator placed on the adaptor ring of the motor top measures the air pressure inside the appliance during operation. The vacuum indicator is placed on the back of the appliance so that it is visible to the operator during operation.

If the multi-tube filter is blocked by fine particles, the air pressure inside the appliance will drop. This can be read on the vacuum indicator.

If the pointer of the vacuum indicator goes into the red section, it is an indication of a too low air velocity in the hose and the tube, and the multi-tube filter should therefore be cleaned. The multitube filter can be cleaned during operation.



NOTICE:

The vacuum indicator of the RONDA[®] 2600 is calibrated for correct indication, when the appliance is used with its standard accessories (40 mm). Using hoses or other accessories with a smaller dimension, the vacuum indicator will indicate too high a value. If you want guarantee for sufficient air velocity in the tubes and hoses, it is recommended to clean the filter, and if necessary to empty the appliance, if the pointer of the vacuum indicator enters the red section.

User Manual

The multi-tube filter can be cleaned during operation, i.e. while the machine is working.

- Remove the hose from the front nozzle or the equipment connected.
- Block the suction.

(You can block the hose with a piece of cardboard, or you can let the appliance suck on a level surface, for instance a floor or the like).



Vacuum will now be formed inside the appliance.
By this, the springs of the multi-tube filter will contract a little.



- Pull the "lid" of the shock valve. (A regular pull, not a tug).
- When the spring power overcomes the vacuum, the valve will open with a "Purf".

In order to equalize the pressure difference in the vacuum cleaner and the pressure outside the vacuum cleaner, air will flush backwards through the multi-tube filter and reject possible accumulations. (Back flush).

In this way the multi-tube filter will be efficiently cleaned. The effect of the cleaning can be seen on the vacuum indicator – if not, the HEPA-filter may be blocked.

Repeat the process if necessary. (2-3 times should remove even the most stubborn dirt.)



User Manual

Emptying

RONDA® 2600 collects the material directly in the collection container.

It is advisable to clean the filters before emptying the container (see the section about filter cleaning).

If the appliance has been used immediately before, it is recommended to wait a few minutes with the emptying, so that the fine dust can fall to the bottom of the collection container.

Lift up the black handle at the bottom of the appliance in order to remove the container.

The collection container is released from the packing and will be lowered to the floor.

Now the container can be rolled out.



To mount the container it is rolled under the machine until it is caught by the edge at the front of the appliance.

The handle is pressed down, and the grippers will catch the container and lift it up to the correct position.



User Manual

Cleaning and Maintenance

The appliance must not be connected to the power supply during cleaning or maintenance. The appliance must always be emptied and cleaned after use and must never be left with dust in the container. (Risk of self-ignition).

IMPORTANT!
The appliance must not be connected to the power supply during cleaning or maintenance.

The easiest way to clean the appliance is as follows:

- The multi-tube filter is cleaned as required. See the description under “Filter Cleaning during Operation”.
- Wipe the outside of the appliance with a dry or slightly wet cloth.

Maintenance of the Motor Top

The motor top is made of maintenance-free parts and needs no daily maintenance, apart from external cleaning and inspection of electrical cords and plugs to ensure that these are not damaged.

The easiest way to clean the motor top is with a damp cloth. Never aim jets of water directly at the motor top.

In order to avoid unscheduled stops, it is recommended that the electrical parts are inspected annually by an authorized technician.

It is recommended to have an authorized service centre inspect the brushes of the suction motor after approx. 800 working hours, and if necessary, replace them. In this way the life of the suction motor is prolonged.

User Manual

Replacing the Filters

In General

When replacing the filter, the necessary precautions to protect the environment and the respiratory passages of the operator must be taken. This protection must be carried out with due regard to the nature of the use to which the vacuum cleaner has been put and to whatever hazard is posed by the dust on the surface of the filter.

Check and Replacement of the Multi-Tube Filter

The multi-tube filter is made of a very robust filter material and has a very long life span. However, the surface of the filter will gradually be worn by all the large and small particles, which are held back. Consequently, the filter must be checked for holes and fissures on a regular basis. Even small holes in the filter material will allow particles to penetrate the filter and continue through the filter and the motor, unless the appliance is equipped with a HEPA filter.

- Loosen the container clips of the motor top and remove the motor top.
- Place the motor top on a dry, clean and flat surface.
- Check the top surface of the multi-tube filter for dust particles. If you can see dust particles there, it is a sign of a damaged and worn multi-tube filter.



If the multi-tube filter is damaged, or if there are holes in surface of the filter, the multi-tube filter must be replaced. If the multi-tube filter is replaced, the HEPA-filter should be replaced at the same time. See the next page.



User Manual

Replacement of the HEPA-Filter (84.67.5006)

- Dismount the motor top of the suction unit and place it upside down with the HEPA filter upwards.
- Loosen the bolt (1) holding the HEPA-filter. The filter can now be removed and disposed of.
- Mount the new HEPA filter on the motor top and make sure that the contact face of the filter is undamaged and clean.
- Tighten the bolt gently so that the filter fits tightly to the contact face in the motor top.



Disposal of Filters

When you dispose of the used filters you must make sure that this is done according to the national regulations.

If the appliance has been used for the collection of material demanding safety equipment, you must also use safety equipment when replacing the filters.

It is recommended always to put on gloves and mask, when the appliance is emptied and maintained.

User Manual

Trouble Shooting

If the appliance does not collect the material in a satisfactory way:

- The suction hose, tube or nozzle may be blocked.
Stop the appliance and remove the blocking.
- The collection container may be filled to overflowing.
Stop the appliance and empty the container. See the section "Emptying".
- There might have been a leak during the assembly of the motor top.
Start the appliance, and block the suction hose. You will normally be able to hear a possible leak. Loosen the container clips of the motor top, remount the motor top, and lock the container clips again.
- The multi-tube filter may be blocked.
Clean the multi-tube filter as described in the section "Filter Cleaning during Operation".
- The HEPA-filter may be blocked.
Replace the filter as described in the section "Replacing the Filters".

User Manual

Service and Repair

Service and repair are free of charge within the warranty period (invoice must be presented) under the following conditions:

- The defect is caused due to defects in materials or defective design. (Defects due to normal wear, misuse or insufficient maintenance are not covered by the warranty.)
- No repair attempts have been made by parties other than V. BRØNDUM A/S or authorized service centres approved by V. BRØNDUM A/S.

Service and repair free of charge include spare parts and the cost for related working hours.

The appliance must be delivered to the factory through a dealer of the V. BRØNDUM A/S organization, or sent carriage paid to:

V. BRØNDUM A/S
Sadolinsvej 14-16
DK - 8600 Silkeborg

Tel. (+45) 8682 4366
Fax (+45) 8680 3363
E-mail: v@broendum.com
www.broendum.com

Subject to changes.