




# ET 8 and 12 QUICK PROGRAMMING GUIDE

2900 Adams Street  
Suite A-25  
Riverside, CA 92504  
(877) 922-2782  
[www.aquaconserve.com](http://www.aquaconserve.com)

# ET 8 and 12 Keyboard Guide October 20th, 2005

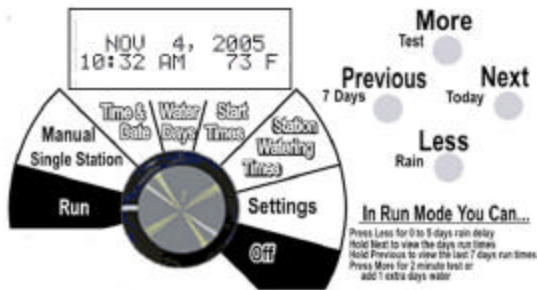

## Keys:

**More:** Increase Value or select ON.


**Less:** Decrease Value or select OFF.

**Next:** Next item to change.

**Previous:** Previous item to change.

**Dial:** Rotate the dial to select the item to view or modify.

## Secondary functions of the keys:

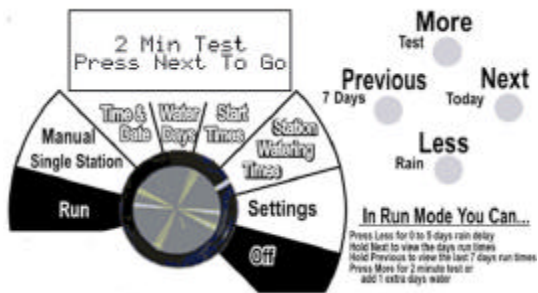

### More (Test):

Pressing the **More** key, from the main screen, causes the controller to enter the 2 minute test mode.

Press the **More** key to cycle through the following test options.

*2 Min Test* Run each station for two minutes.

*Auto Run All* Run all programs (A, B, C, and D).

*Auto Run Prog A* Run program A.

*Auto Run Prog B* Run program B.


*Auto Run Prog C* Run program C.

*Auto Run Prog D* Run program D.

Press the **Next** key to start the selected test.

Press the **Previous** or **Next** keys to go to the previous or next station.

To stop the test turn the **Dial** to *Off* and back to *Run*.

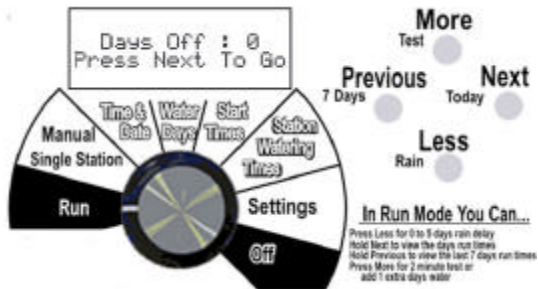

### Less (Rain):

Pressing the **Less** key, from the main screen, causes the controller to enter the *Rain Delay* screen.


Press the **More** key to increase the number of days to delay watering. The delay can be set from 1 to 5 days.

Press the **Less** key to decrease the number of days. Zero, 0, days turns the rain delay off and resumes normal watering.

Press the **Next** key to enter the changes and return to the main screen.

For more information please refer to your User's Guide.


# ET 8 and 12 Quick Programming Guide October 21, 2005

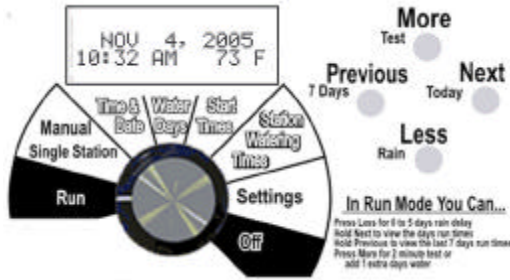

## Keys:

- More:** Increase Value or select ON.
- Less:** Decrease Value or select OFF.
- Next:** Next item to change.
- Previous:** Previous item to change.

**Dial:** Rotate dial to select the item to view or modify.

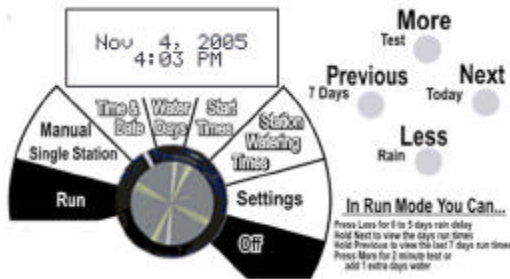

## Time and Date:

Turn the **Dial** to the position labeled *Time & Date*.

Use the **More** or **Less** keys to select the correct month.

Press the **Next** key to select the date.

Use the **More** or **Less** keys to select the correct date.

Press the **Next** key to select the year.


Press the **More** or **Less** keys to select the correct year.

Press the **Next** key to select the hour.

Use the **More** or **Less** keys to select the correct hour.

Press the **Next** key to select the minutes.

Press the **More** or **Less** keys to select the correct minutes.

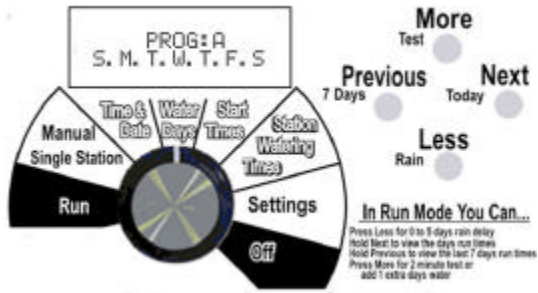

### Set Watering Days:

Turn the **Dial** to the position labeled *Days*.

Use the **More** or **Less** keys to select the Program to enter the watering days.

Press the **Next** key to select the watering days options.

Use the **More** or **Less** keys to select the option. Options are

*OFF* Program does not water.

*Odd Days* Program waters on odd days of the year.

*Even Days* Program waters on even days of the year.

*Select Days* Select which days of the week to water.

*Skip # Days*

### Set Watering Start Time:

Turn the **Dial** to the position labeled *Times*.


Use the **More** or **Less** keys to select the Program to enter the start times.


Press the **Next** key to select the first start time's hour.

Use the **More** or **Less** keys to select the start hour. Press the **Next** key to select the first start time's minutes.

Press the **More** or **Less** keys to select the start minutes.

Repeat the above steps for the 2nd through 4th start times. Repeat for the other Programs

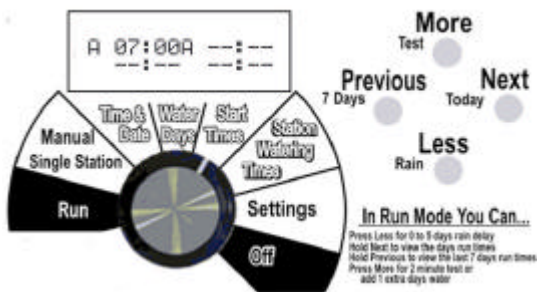

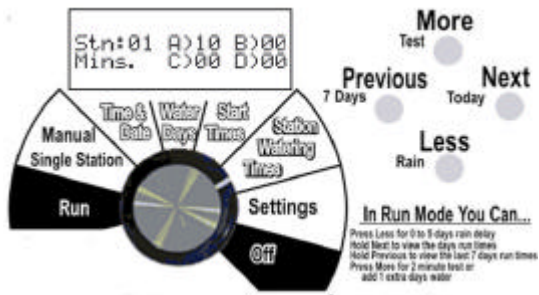

### Set Station Run Times:

Turn the **Dial** to the position labeled *Station Watering Times*:

Use the **More** or **Less** keys to select the station to program.

Press the **Next** key to set the station's *Program A* run time.

Use the **More** or **Less** keys to set the *Summer Run Time* in minutes.

Press the **Next** key to set the station's *Program B* run time.

Repeat the above steps for all of the run times and stations.

### Settings:

Turn **Dial** to the position labeled *Settings*.

Use the **More** or **Less** keys to select the correct *Region*. Refer to the User Manual for the correct region number.

Press the **Next** key to select the *Lock*.

Press the **More** key to turn the *Lock* ON. Press the **Less** key to turn the *Lock* OFF.

Press the **Next** key to select *Accumulation*.


Press the **More** key to turn *Accumulation* ON.

Press the **Less** key to turn *Accumulation* OFF.

Press the **Next** key to select the *Water Reduction* percentage.

Use the **More** or **Less** keys to select the desired *Water Reduction* percentage.

This completes the basic programming of the controller.

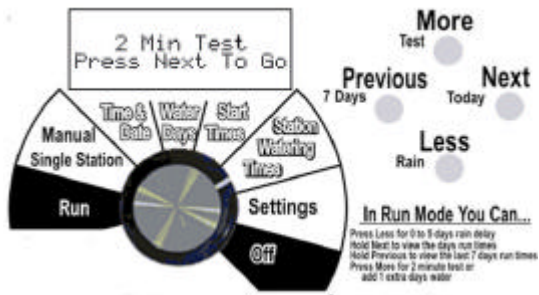

## 2 Minute Test:

From the *Run* screen press the **More (Test)** key.

Press the **More** key to cycle through the following test options.

*2 Min Test* Run each station for two minutes.

*Auto Run All* Run all programs (A, B, C, and D).

*Auto Run Prog A* Run program A.

*Auto Run Prog B* Run program B.


*Auto Run Prog C* Run program C.

*Auto Run Prog D* Run program D.

Press the **Next** key to run the selected test.

Turn the **Dial** to *Off* and then back to *Run* to quit the test.

## Manual Mode:

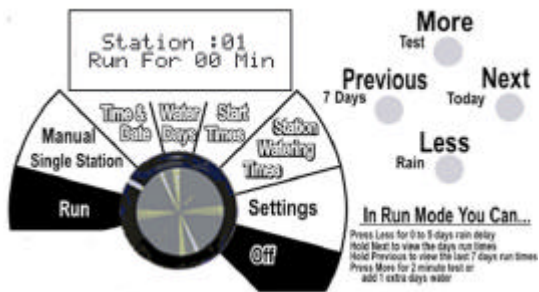

Turn the **Dial** to the position labeled *Manual Single Station*.

Use the **More** or **Less** key to select the station.


Press the **Next** key to select the minutes.

Use the **More** or **Less** keys to select the number of minutes to run the selected station.

Turn the **Dial** to the position labeled *Run* to run the station for the selected number of minutes.

Turn the **Dial** to *Off* and then back to *Run* to quit the manual cycle.


For more information please refer to your User's Guide.

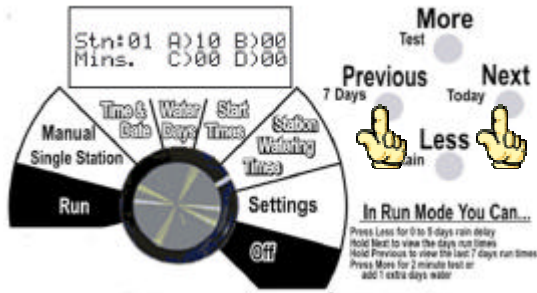

**Establishment:**


Turn the **Dial** to the position labeled *Station Watering Times*.

Simultaneously press the **Previous** and **Next** keys. The display will change to show the Establishment options.

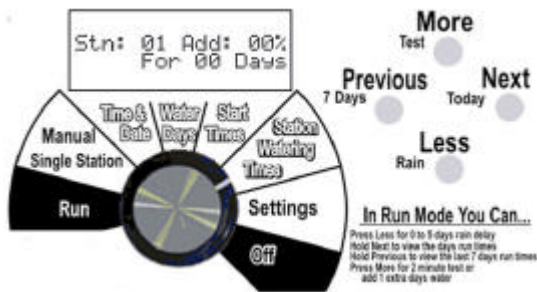

Use the **More** or **Less** keys to select the station. Press the **Next** key to select the percentage to increase the run time for the selected station. Use the **More** or **Less** keys to enter the percentage of run time increase. Press the **Next** key to select the number of days to run the Establishment feature. Use the **More** or **Less** keys to enter the number of days to run the establishment feature. Repeat the above step to add the establishment feature to other stations.

Turn the **Dial** to exit the establishment screen.

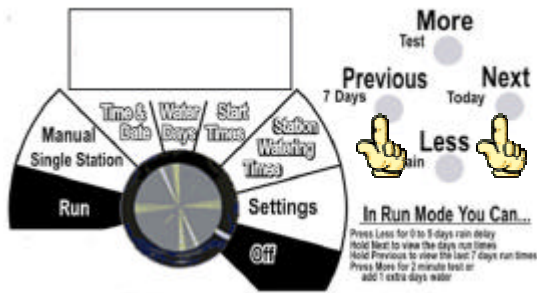


**Resetting the Controller:**

*Important: The reset will clear all programming and settings.*

Disconnect the battery from the controller. Disconnect the AC power from the controller.

Simultaneously press the **Previous** and **Next** keys. While pressing the keys apply power to the unit.

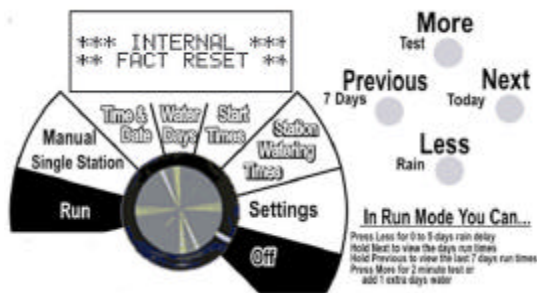

The display will show  
\*\*\* INTERNAL \*\*\*  
\*\* FACT RESET \*\*

and then

\*\*\* INTERNAL \*\*\*  
\*\* HIST RESET \*\*

The unit is now reset.