

Warranty Contact Information

TheraForm™ c/o Lifeform

8018 – 11500 35th Street SE

Calgary, AB. T2Z 3W4

Local Phone 403.720.3966

Fax 403.720.3973

Toll Free Phone 800.661.8568

Fax 888.720.3973

www.lifeformchairs.com

info@lifeformchairs.com

© 2009 Therasage Corporation

User Manual

TheraForm™ Revolution Zero Gravity Recliner



Congratulations on your purchase of our TheraForm™ Revolution Zero Gravity Recliner

Let's Get Started

Belief / Commitment

LifeForm® and Therasage™ have combined their expertise: time-honored handcrafted furniture making with advanced scientific technology to create furniture that promotes overall health and wellness. Believing furniture should offer more than simply comfort and style, the TheraForm™ Revolution Zero Gravity Recliner is a beautiful piece of superior quality furniture that additionally provides therapeutic health benefits in the relaxation of your home or office.

Function / Design / Quality

The TheraForm™ Revolution Zero Gravity Recliner features a motorized mechanism that is unique to the industry. Experience the healthful benefits of Zero Gravity positioning with the back and foot cushions working independently of one another for maximum comfort.

The interior frame of the TheraForm™ Revolution Zero Gravity Recliner is made from precision-cut, kiln-dried wood that resists warping and is superior in holding its structural shape. Doweled joints are braced and bonded together to maintain its structural integrity.

The arms, the adjustable foot, seat, back, and the cervical and lumbar cushions of the TheraForm™ Revolution Zero Gravity Recliner consist of a generous layer of conforming high-density memory foam to enhance comfort. The durable layered foam cushions are designed to evenly distribute weight and provide relief from painful pressure points. Patented Far Infrared heating elements are incorporated into the back and foot cushions for the added health benefits of Far Infrared Heat Therapy.

The TheraForm™ Revolution Zero Gravity Recliner features the finest full grain soft and smooth natural leather. Premium full grain hides are carefully dyed and sealed using special waxes that are hand rubbed into the surface to create a uniquely elegant appearance of rich contrasts in color throughout each hide. The final process polishes the leather to give added depth and clarity.

The low maintenance leather requires minimal care or cleaning. The use of a dry cloth will help remove residual dust while ordinary smudges and minor scuffs may be removed by massing the affected area or with a slightly damp cloth. Excess water or spills will darken the leather.

Warranty

Limited Lifetime Warranty for leather, 3 years for non-leather materials and non-motorized parts, and 1 year for the motorized mechanism and all parts related to the Far Infrared Heat Technology.



LIFEFORM®

Furniture Designed For Life

www.lifeformchairs.com



THERASAGE™

World's Premier Far Infrared Products

www.therasage.com

Your Revolution Zero Gravity Recliner requires some simple assembly before use. Follow these easy steps to assemble your new Zero Gravity Recliner with Far Infrared Heat.

List of parts

A. Leg bolt screws (2X)

A



E



B. Power converter & cord

B



F



C. Recliner remote controller

C



G



D. Far Infrared Heat remote controller

D



H



E. One cervical and one lumbar pillow

F. Back cushion

G. Swivel base with seat and leg cushions

H. Left and right arms

STEP ONE: Attach the arms Parts H and G

1.

Attach the left and right arm onto the base by aligning the two metal posts on each arm with the two metal bracket-slots on the base. When perfectly aligned with the base, the arm will slide down onto the base and automatically click into the final position.



2.

To secure the arms in place, screw the leg bolts on each of the left and right metal posts until tight.



STEP TWO: Attach the back Parts F and G

1.

Attach the back onto the base by aligning the two metal posts on the base with the metal bracket-slots on the back.

When perfectly aligned, the back will slide down onto the base and automatically click into the final position.



STEP THREE: Attach the electrical cords Parts B, C, and D

1.

Plug the Far Infrared Heat controller, part D, into the lower socket on the right-hand side of the control box located on the bottom left hand side of the back of the chair.



2.

Plug the Zero Gravity controller, part C, into the cord that comes out of the back of the chair.



3.

Connect the power cord, part B, that plugs into the electrical outlet directly into one side of the converter. Connect the power cord from the base of the chair into the other side of the converter.



4.

Attach the Far Infrared Heating Pads cords into the left-hand side of the control box. The cord from the back cushion plugs into the lower socket and the cord from the foot cushion plugs into the upper socket.



5.

Connect power cord to wall outlet. Turn power on. The On/Off switch is located on the top left-hand side of the control box.



STEP FOUR: Attach cervical & lumbar pillows Part E

1.

Zipper up the back cushion of the chair so the pull tabs are near the top.



2.

Attach the cervical pillow by opening the snap and placing it through the eyes of the two zipper tabs. To adjust the height of the cervical pillow, pull the two zipper tabs up or down.

3.

For additional lumbar support, place the lumbar pillow horizontally on the seat between the arm rests.




CONGRATULATIONS!

ASSEMBLY IS NOW COMPLETE.

Please read all instructions before using this product and retain for future reference.

Zero Gravity Controller

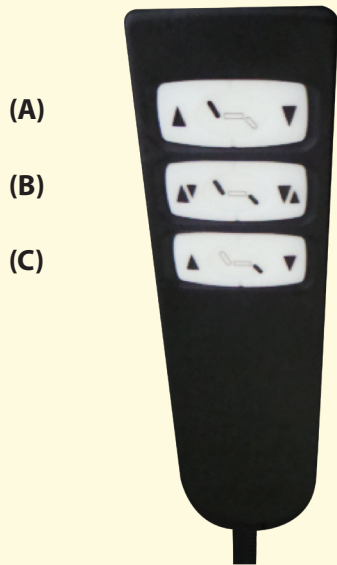

(A)

(A) Allows the reclining back to work independently.

(B)

(B) Controls the back and footrest together at the same time.

(C)

(C) Allows the footrest to work independently.

Far Infrared Heat Controller

ON/OFF

Allows you to turn the pad on or off.

HEAT

The temperature automatically starts at 95°F/35°C. Press the HEAT button to increase (+) or decrease

(-) the temperature level. The temperature bars on the digital screen will continue flashing until the desired temperature is reached.

TIMER

Press the TIMER button to increase (+) or decrease (-) the time. The timer automatically starts increasing in minute increments or can be manually set in 15 minute increments by pressing (+) with a 6 hour maximum. The digital screen displays the time.

By pressing the TIMER button (+), the timer will automatically go into "sleep" or countdown mode, finishing at the desired turn-off time. This automatic shut-off safety feature is a special built-in precaution against falling asleep while using the Pad or leaving the Pad "on" while it is still in operation.



Safety Instructions



Read all instructions before using this product. Save these instructions after reading.

WARNING: To reduce the risk of electrical shock always unplug this product from the electrical outlet immediately after using and before cleaning. Products involving power sources should never come in contact with any water source.

Safety Precautions

- Unplug from outlet when not in use.
- To disconnect, turn all controls to the OFF position, then remove the plug from the electrical outlet.
- Always connect this product to a properly grounded electrical outlet. This product is designed to operate on standard 110 volt house current.
- Do not pull on the AC cord.
- Always keep the power cord away from heated surfaces.
- Using power sources with unrelated products, overloading power cords and strips and using non-standard power sources is not recommended.
- It is not recommended to use a blanket with this product. Excessive heating can occur and cause fire, electric shock, or injury.
- Close supervision is dictated when this product is used by, on, or near children or disabled persons.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this product if the cord or plug are damaged, if it is not working properly, if it has been dropped or damaged, or come into contact with water. Contact our service center for warranty question and repair. **DO NOT ATTEMPT TO REPAIR THIS PRODUCT YOURSELF.**
- Do not use this product when any part of the body is in contact with a wet surface.
- Do not use outdoors.
- Always confirm that there are no obstacles behind this product.
- When using this product after it has been in storage, check to see that the product is operating properly prior to sitting in the product.
- If you feel any abnormal discomfort during the operation of this product, turn off the power immediately and do not use this product. Consult your physician. Do not sit on the controller.

Safety Instructions



Read all instructions before using this product. Save these instructions after reading.

GROUNDING INSTRUCTIONS

This product must be grounded. Grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into a standard 110 volt outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING: Improper connection of the equipment-grounding conductor and grounding plug will result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether this product is properly connected to your power source. Do not modify the plug provided with the product. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

