


RPL-5102 PLATE LOADED PREACHER CURL

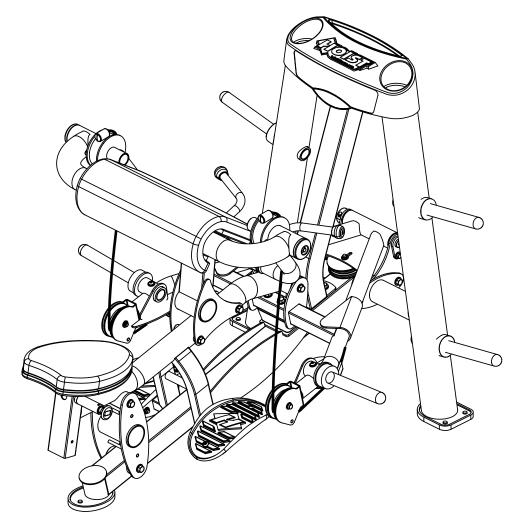

WARNING!

TO PREVENT POSSIBLE TIPPING, BOLT THIS UNIT TO THE EXERCISE FLOOR. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH.

Note: Both Serial Number and Model Number are Required when Ordering Parts

RECORD SERIAL NUMBER HERE

CATALOG NUMBER

0308 - 000

Customer Service

(800) 548-5438

(858) 578-7676 <u>Fax</u>

(858) 578-9558

CONTENTS

INSTRUCTIONS	02
FRAME ASSEMBLY	04
MACHINE ADJUSTMENT	31
PRE-ASSEMBLY	32
DECAL PLACEMENT	33
DECAL REFERENCE	34
PART LIST	37
ABBREVIATIONS	40
BOLT SIZING CHART	41
WASHER SIZING CHART	43
MAINTENANCE SCHEDULE	45
GENERAL MAINTENANCE INFORMATION	46
WEIGHT TRAINING TIPS	47
EXERCISE LOG	48
LIMITED WARRANTY	49

INSTRUCTIONS

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only HOIST replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

HOIST equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized HOIST dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Ratchet Wrench

1/2", 9/16" and 3/4" Sockets

Adjustable Wrench

Rubber Mallet

Tape Measure


Level


Hex Key Wrench Set


Two People


THIS PAGE WAS INTENTIONALLY LEFT BLANK


PAGE 03 RPL-5102 ASSEMBLY

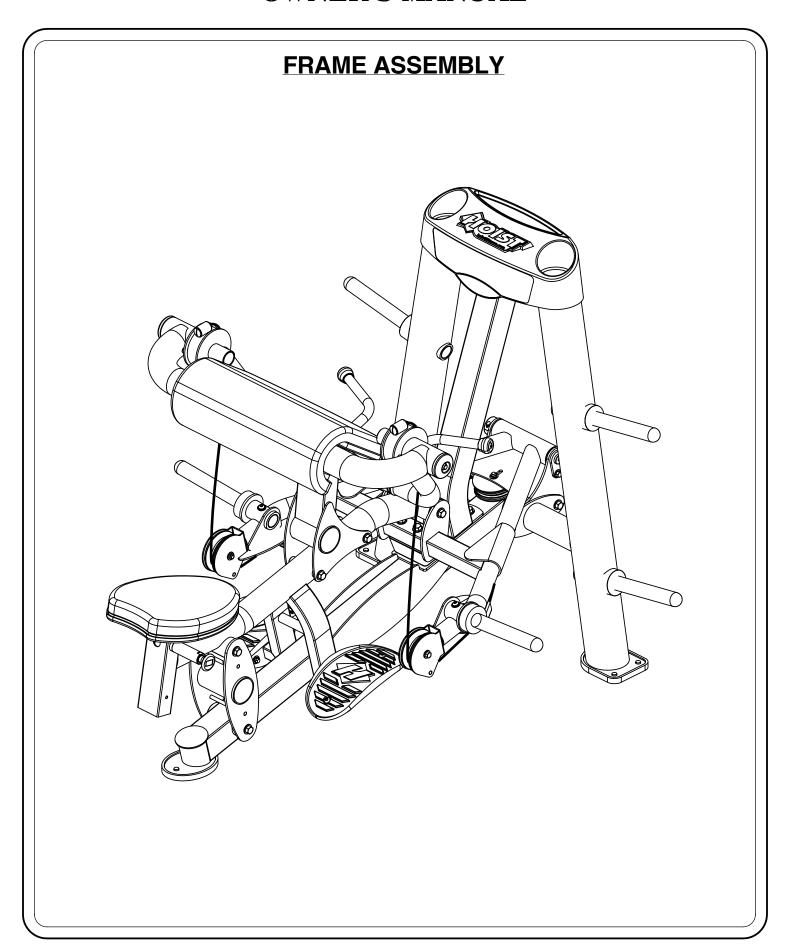


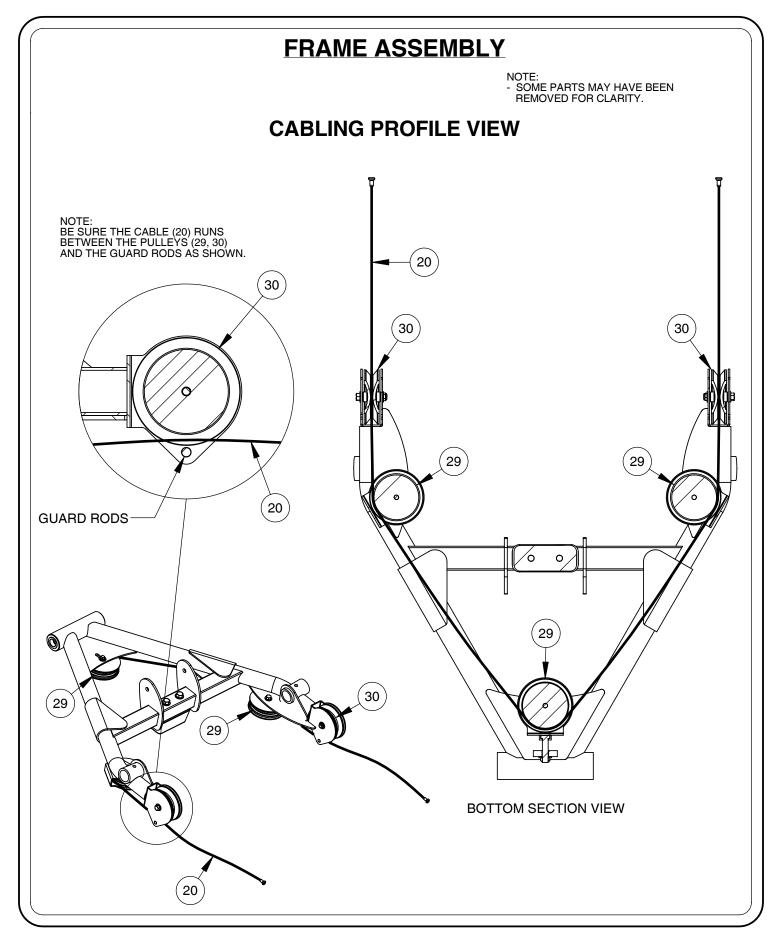


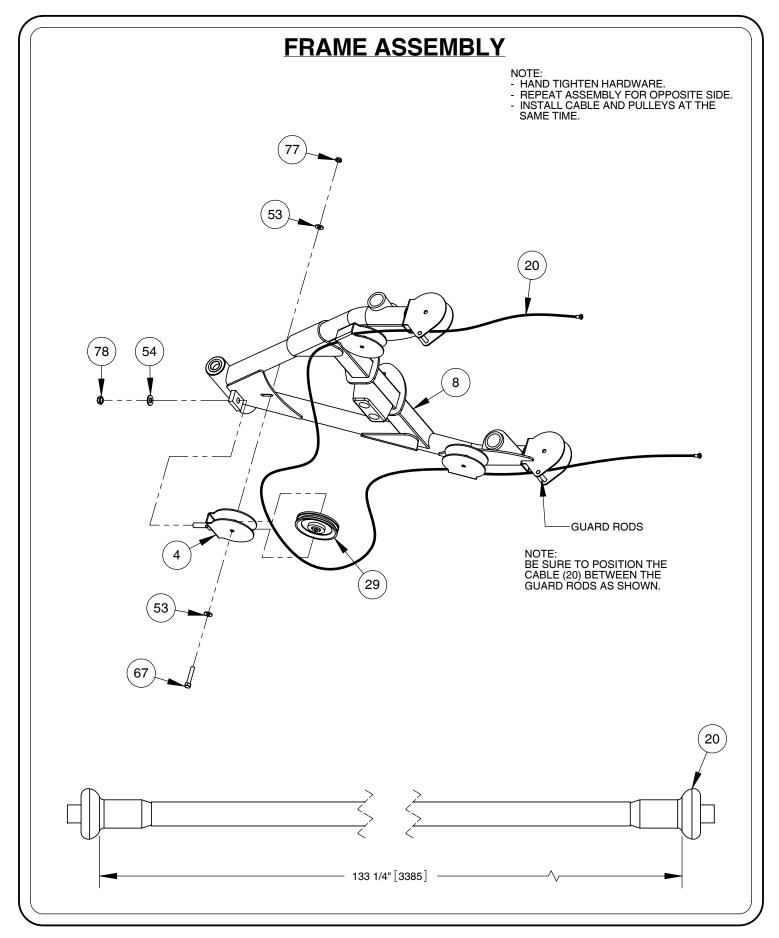


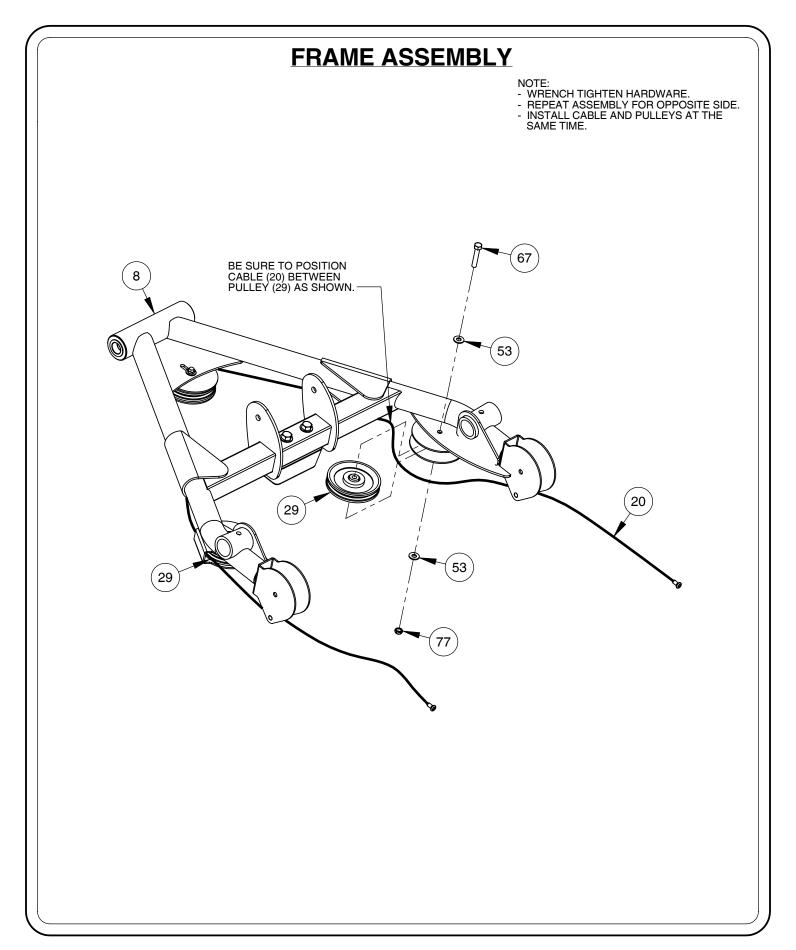


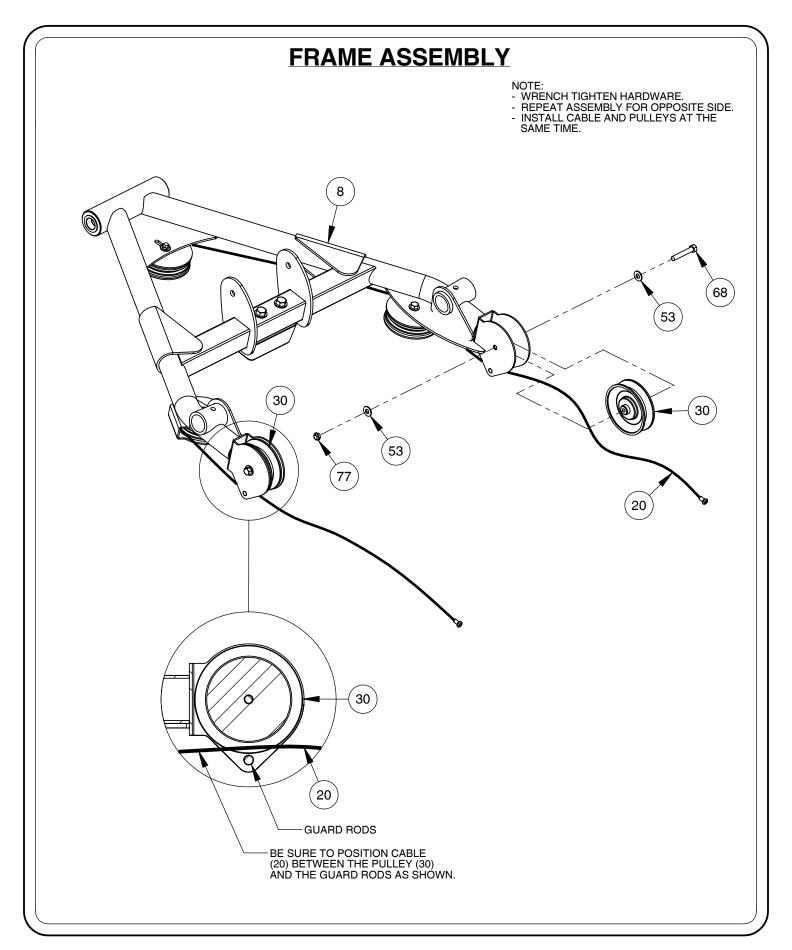


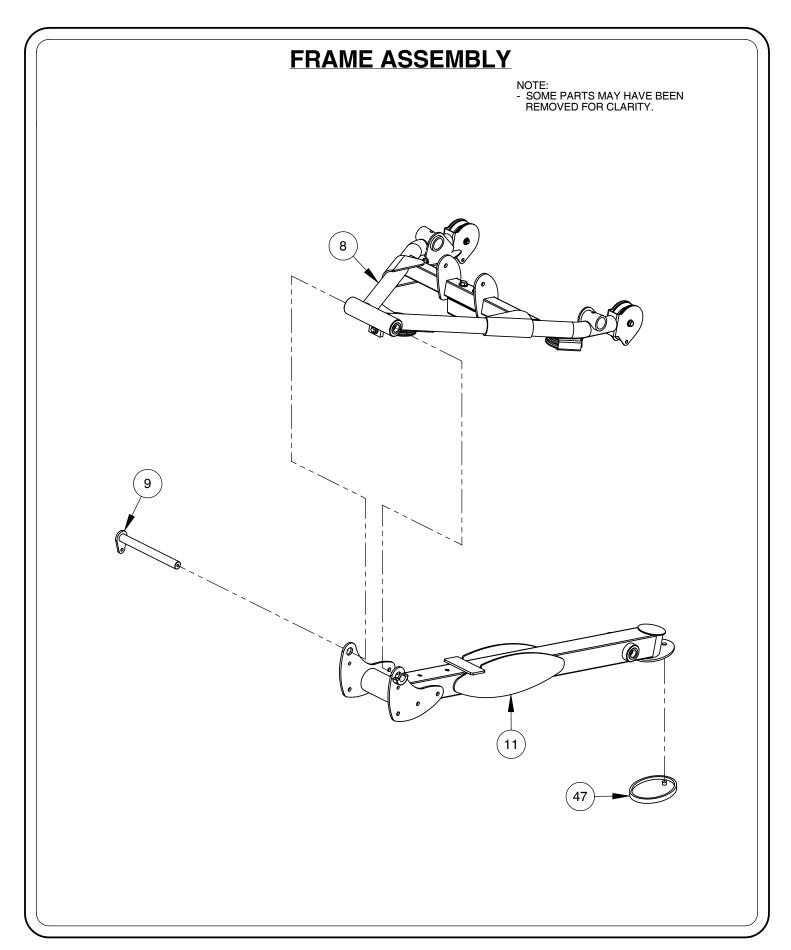


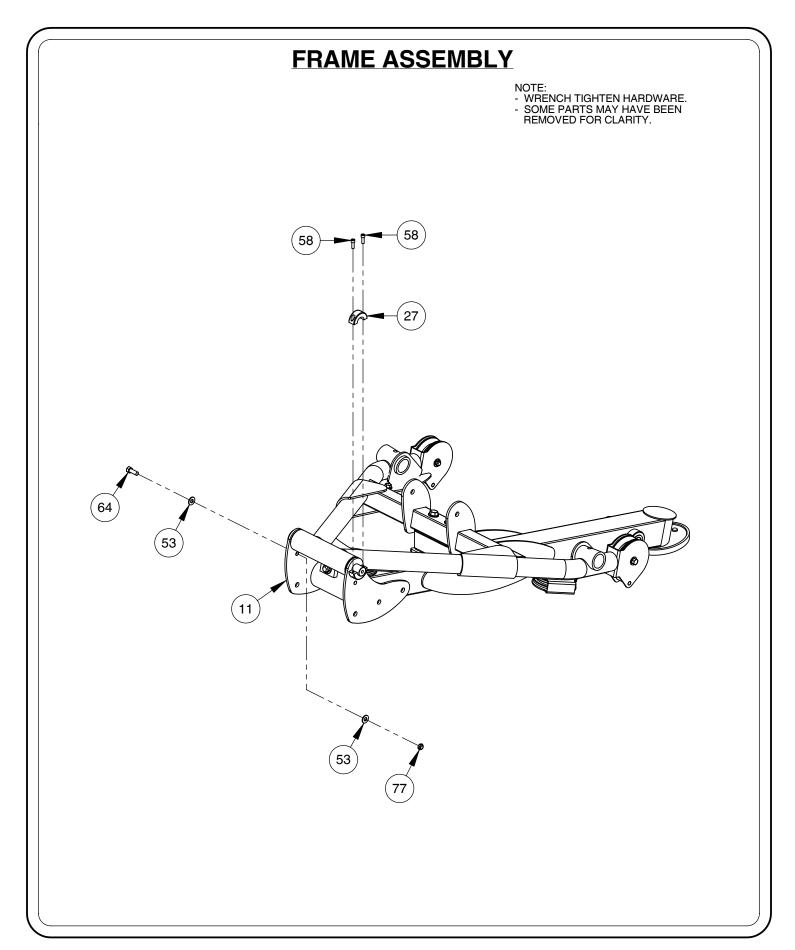


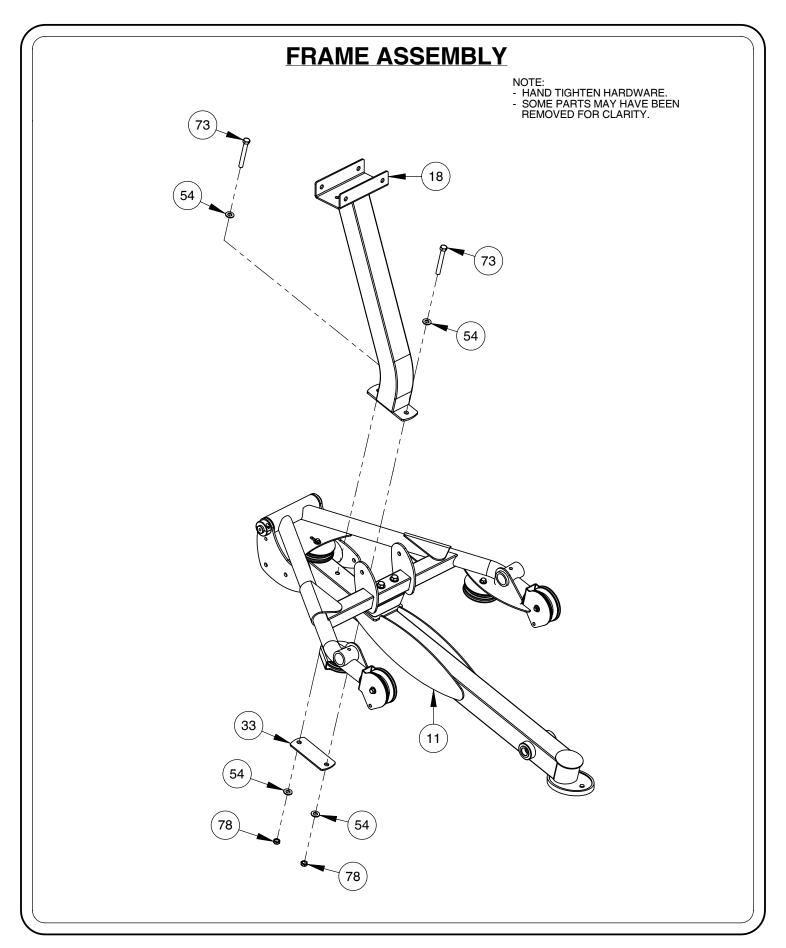


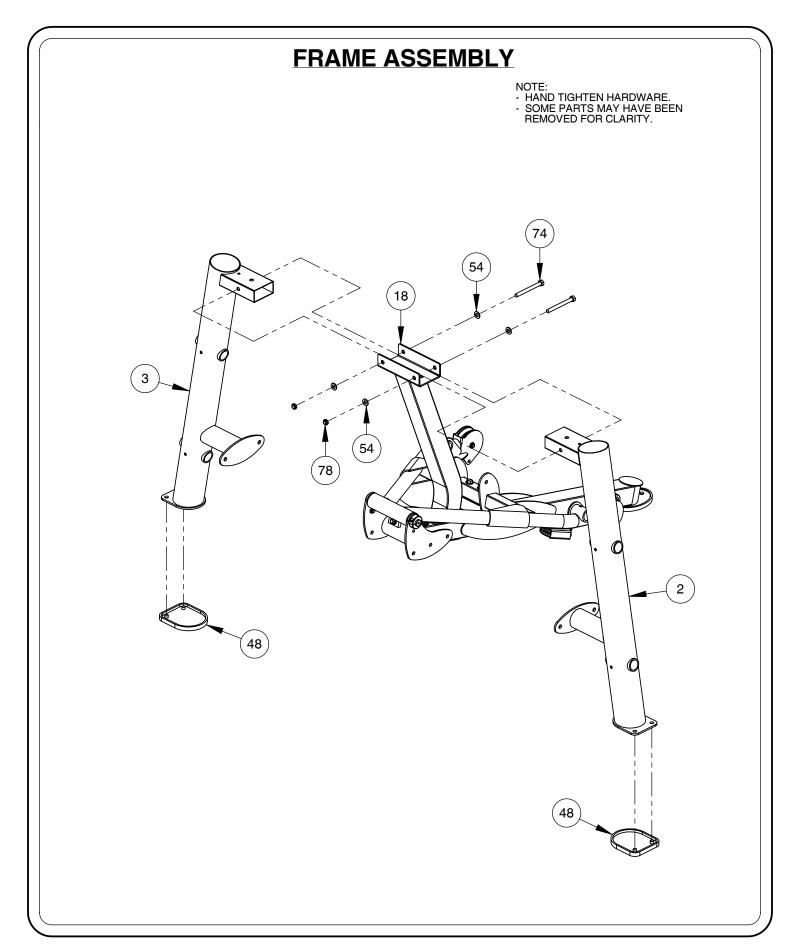


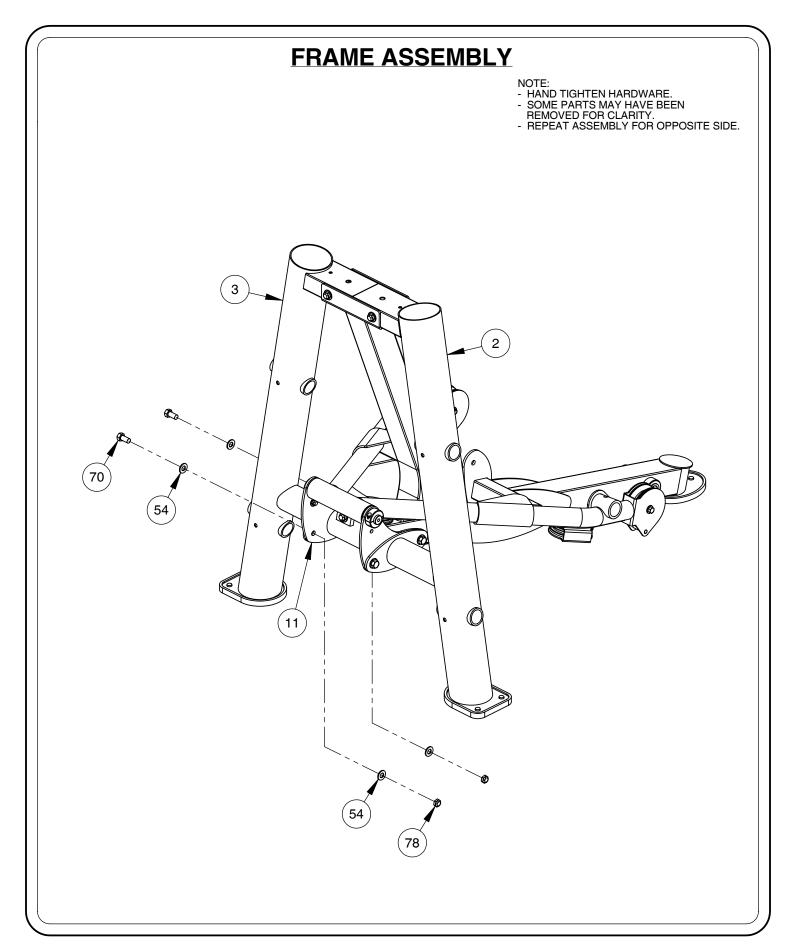


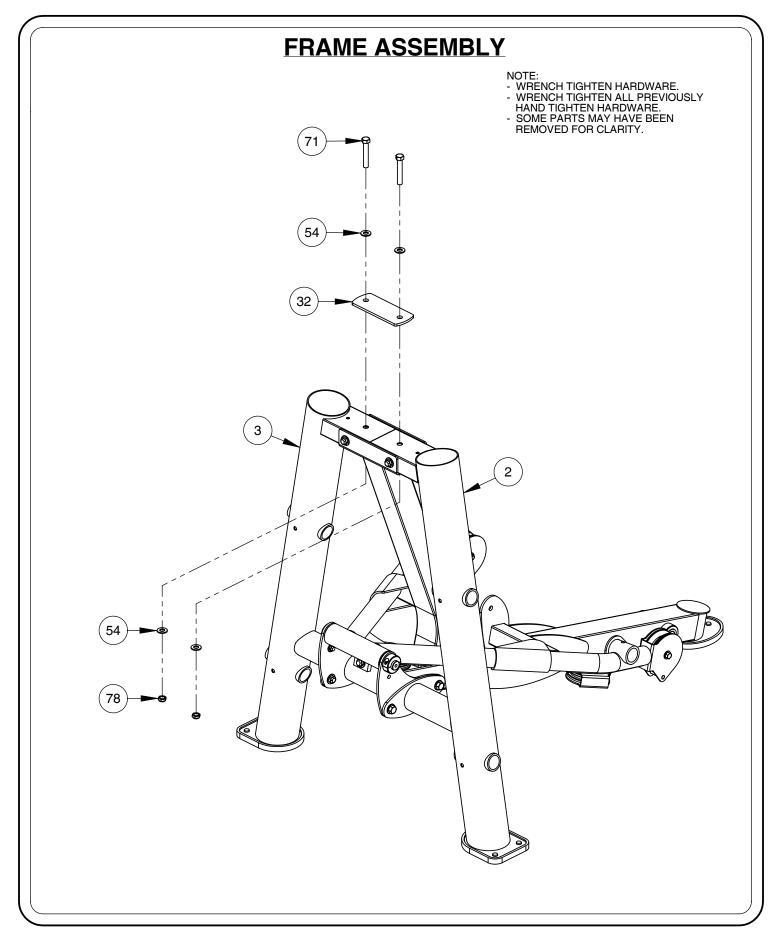


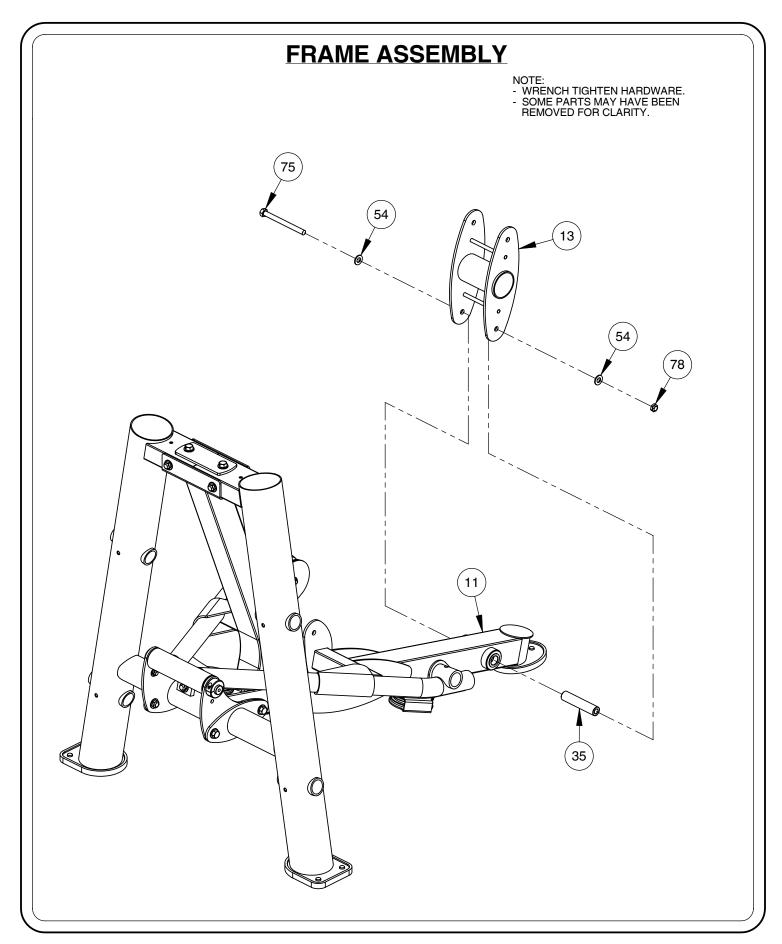


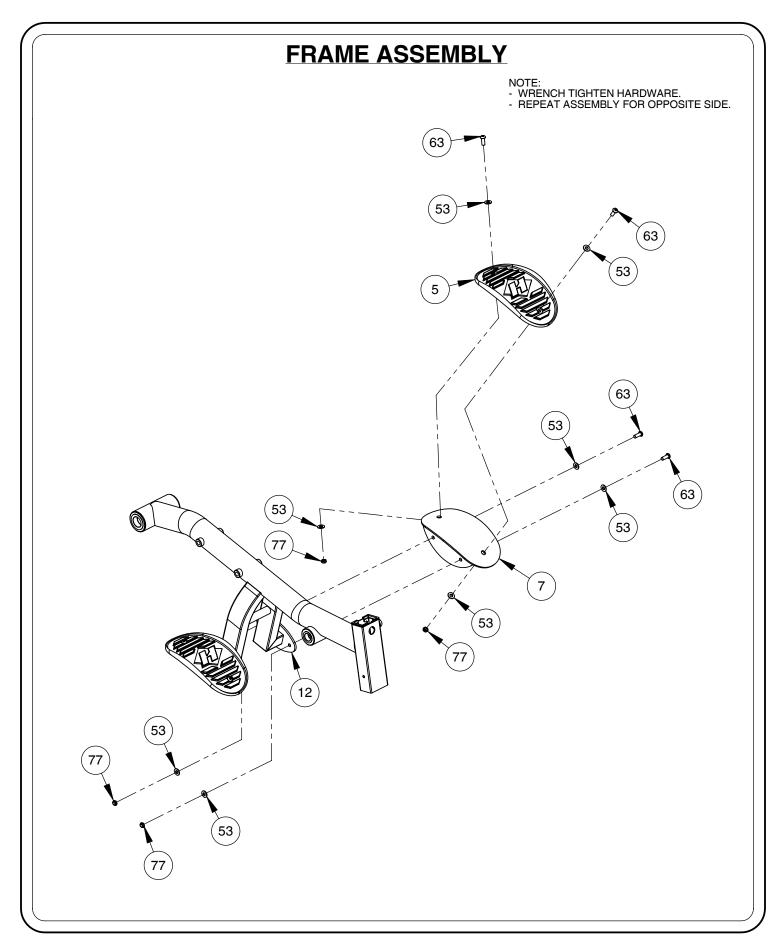


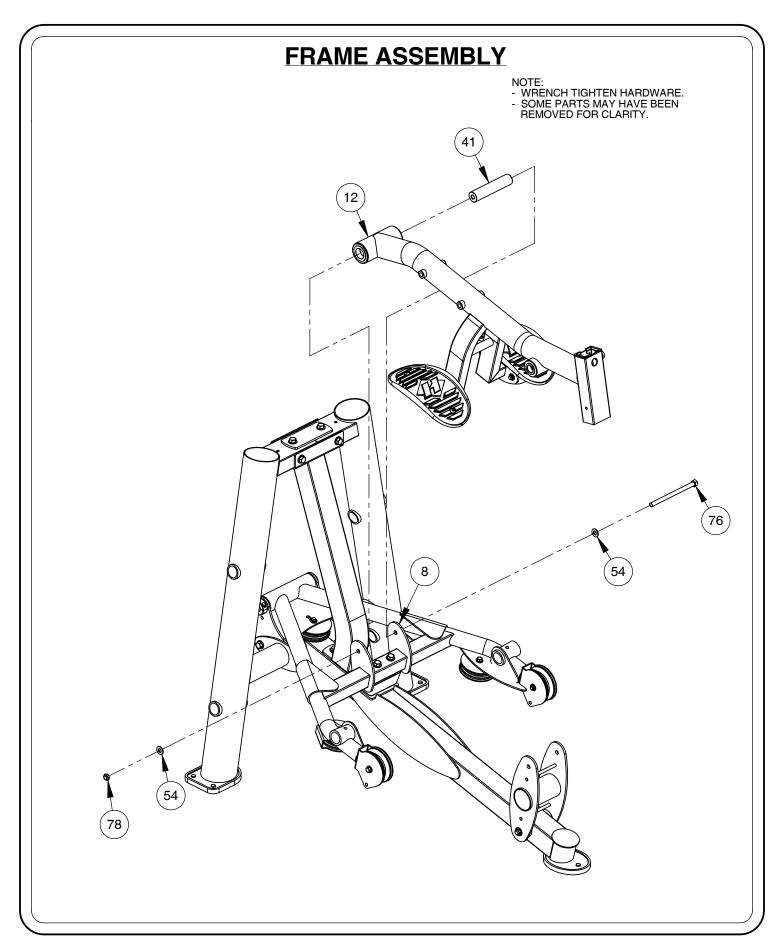


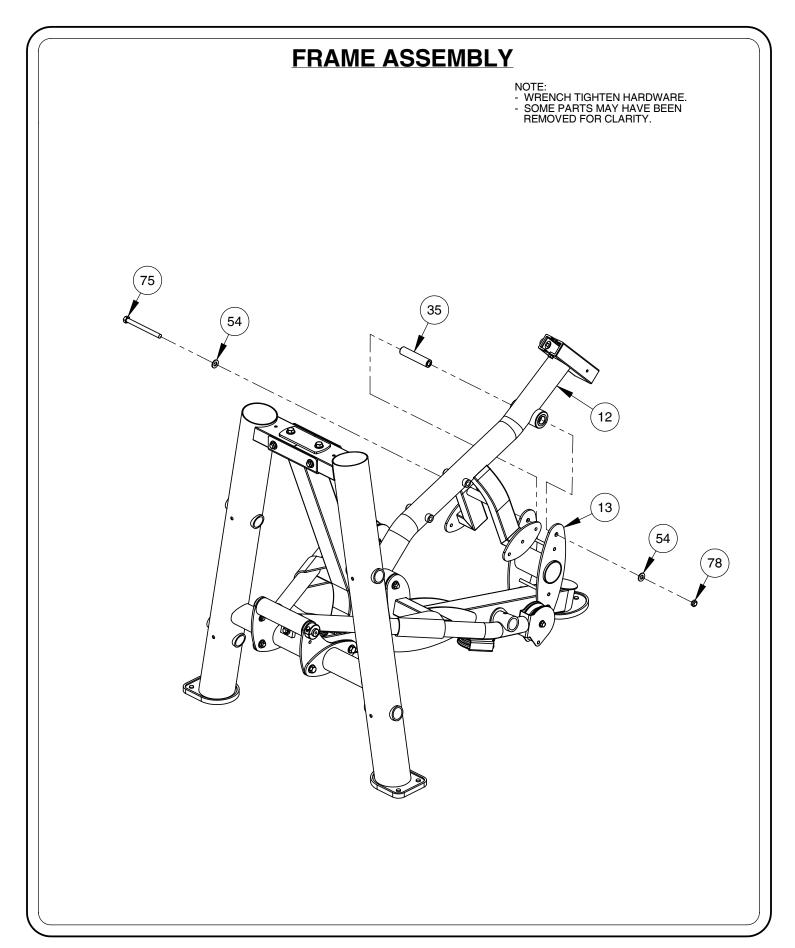


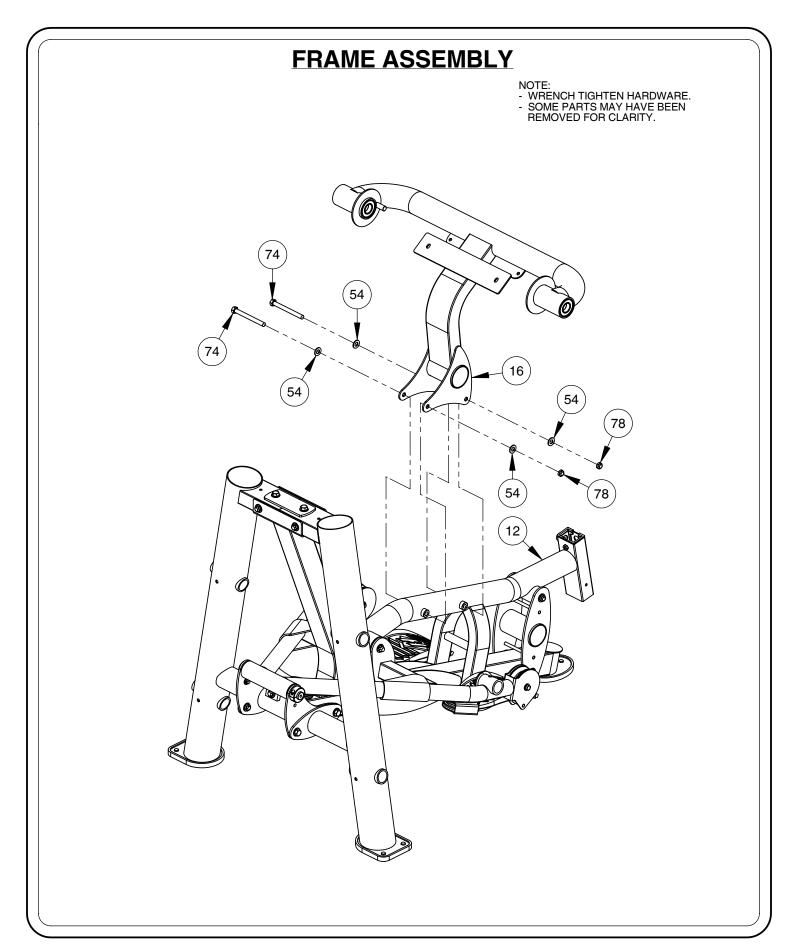


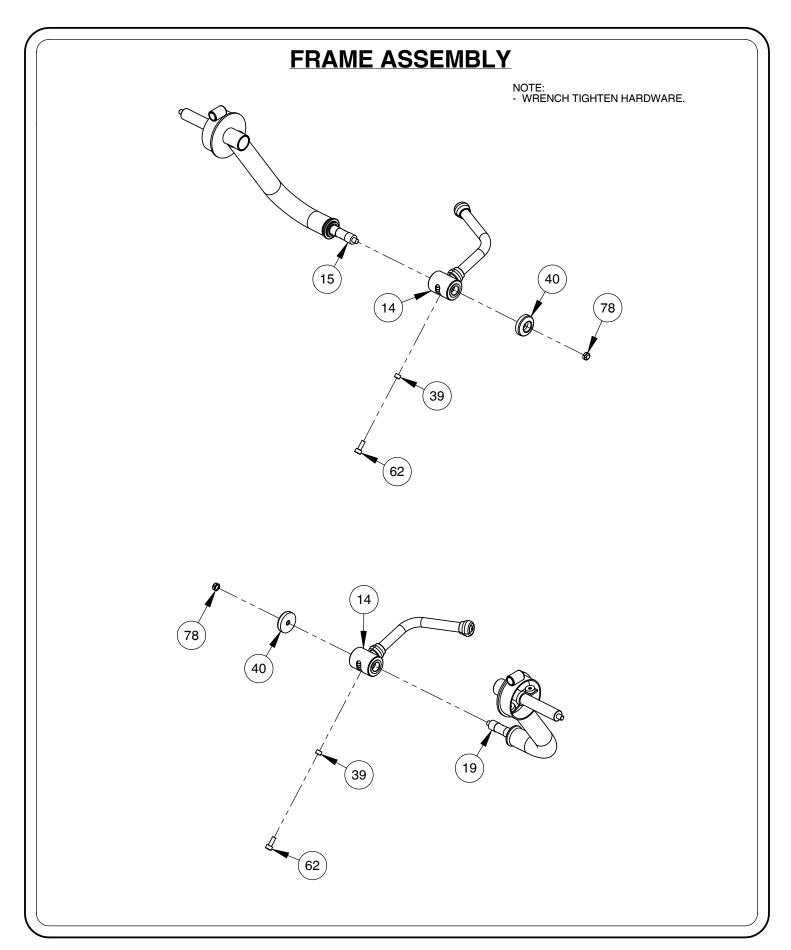


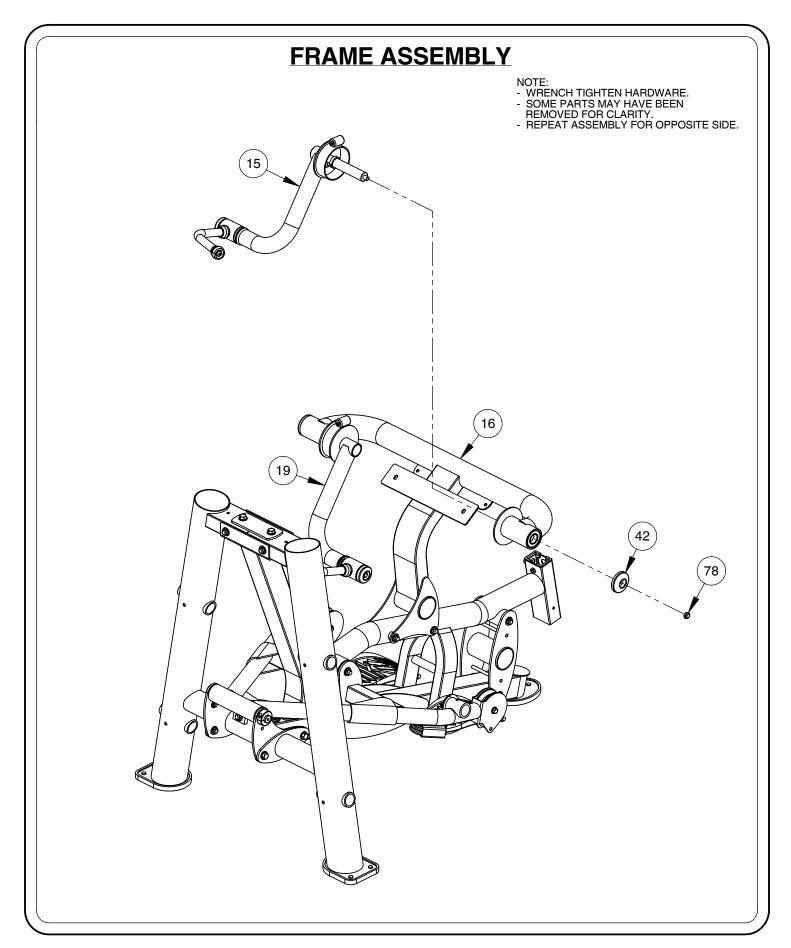


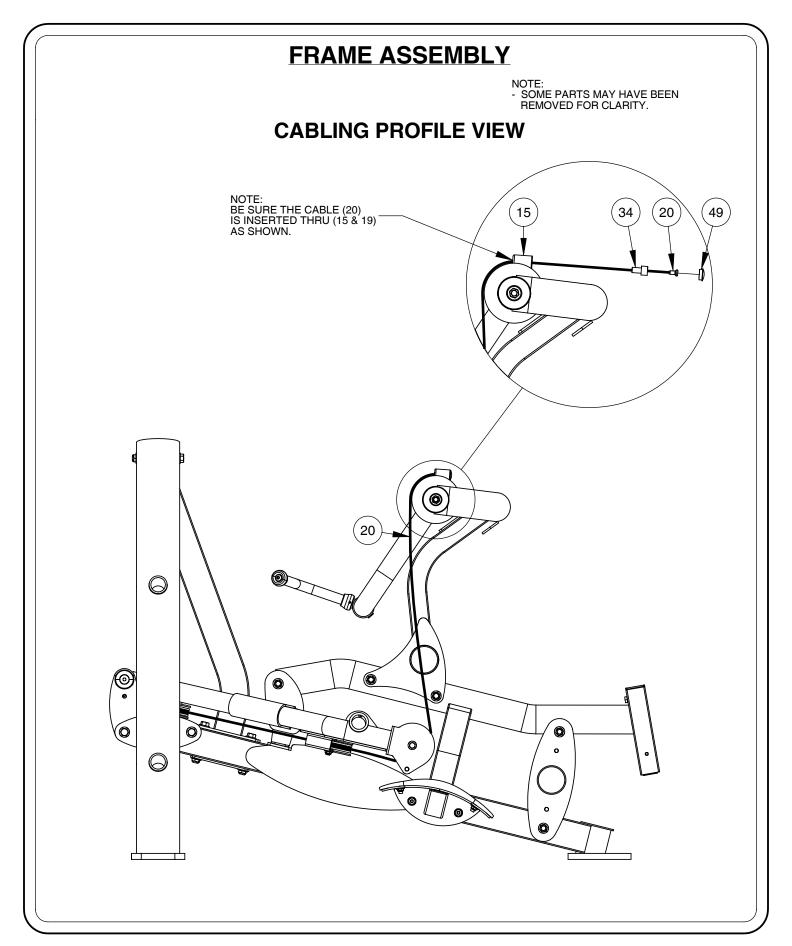


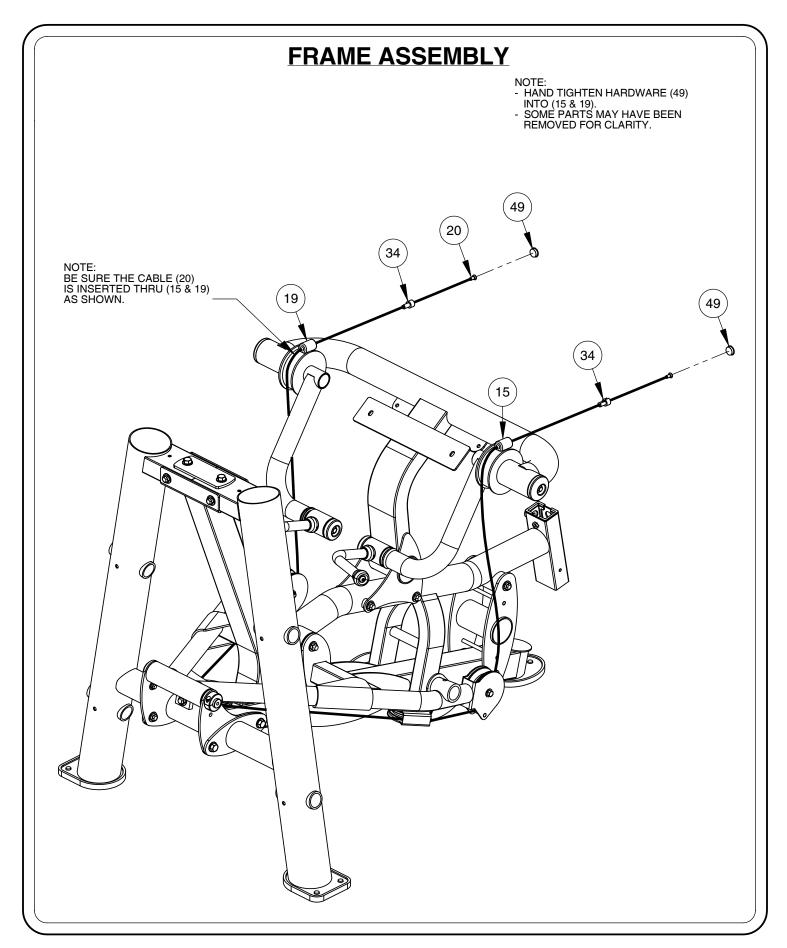


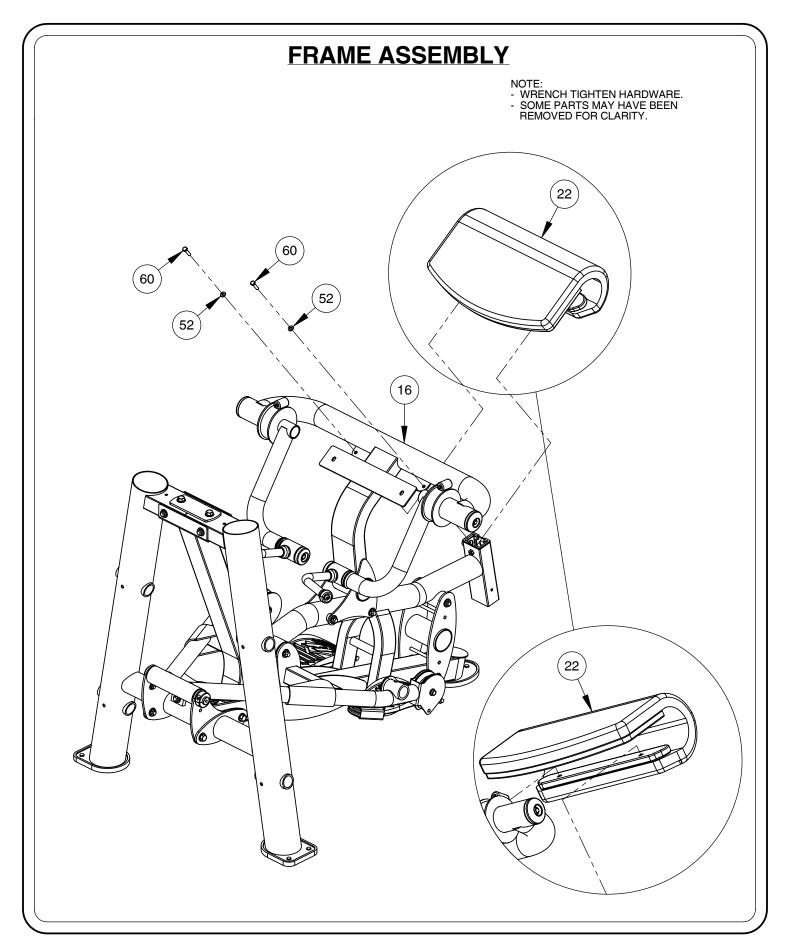


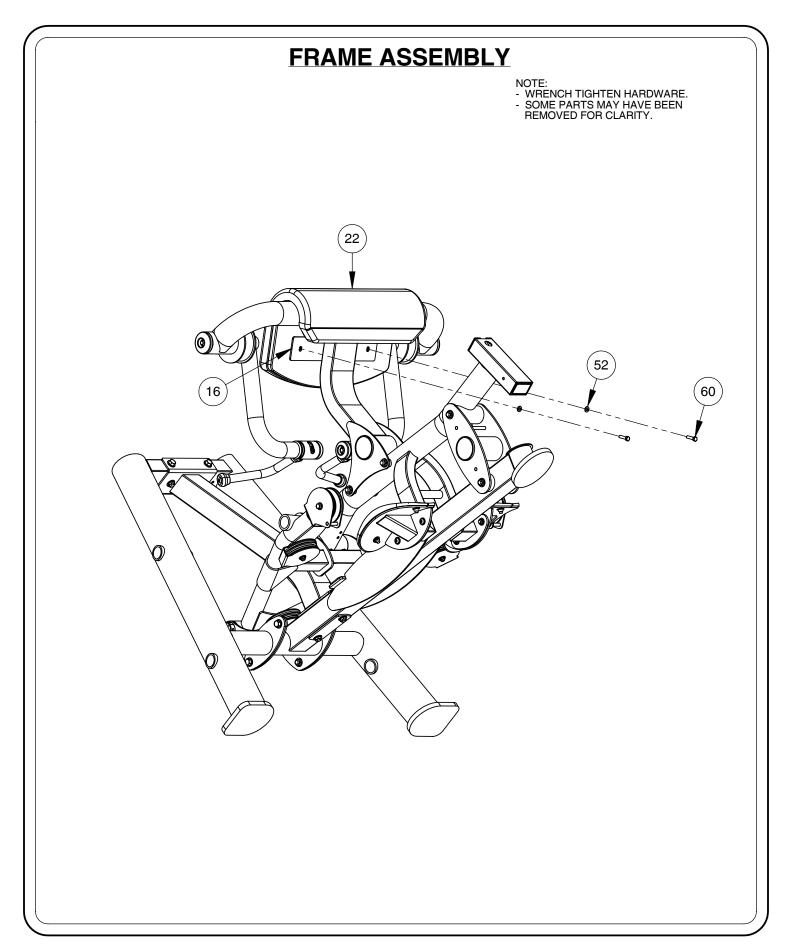


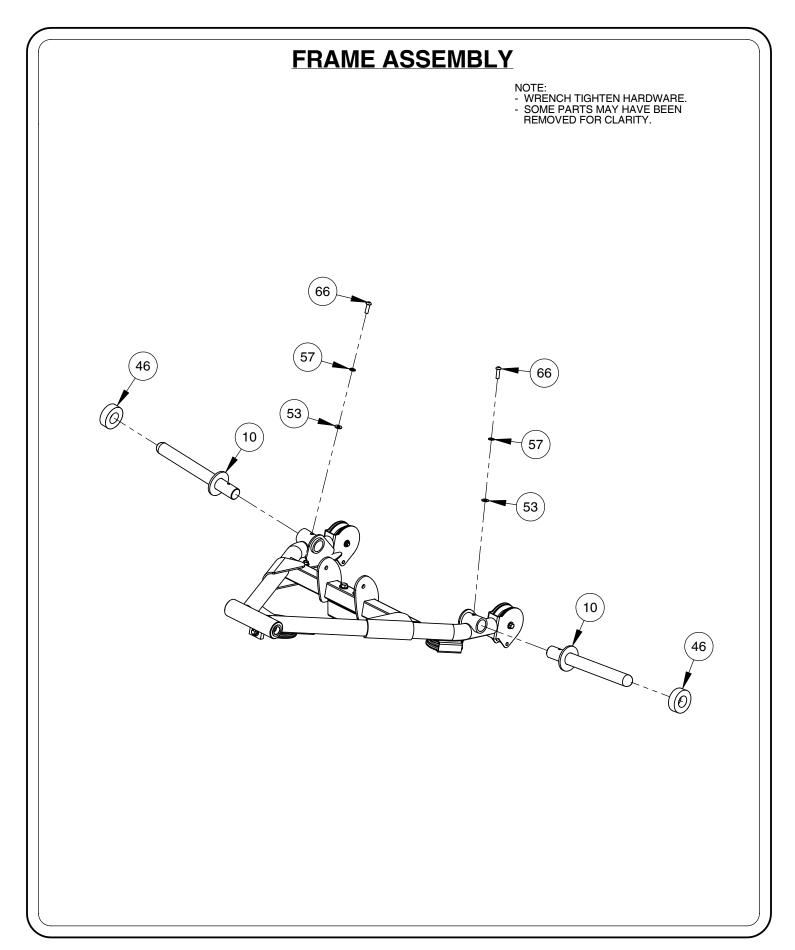

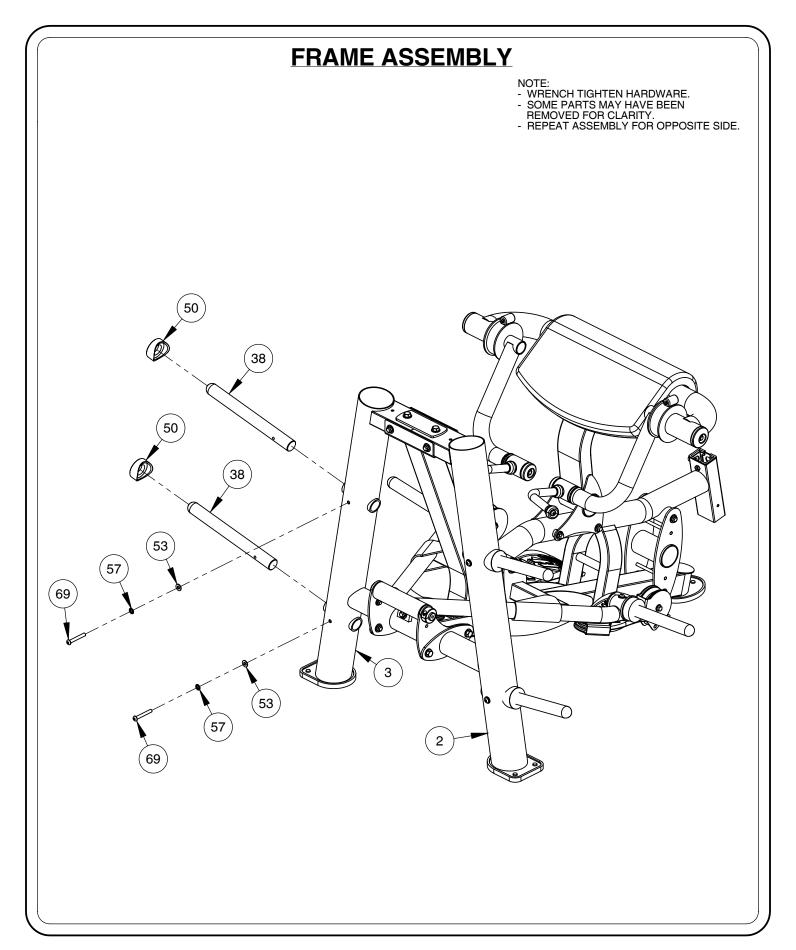

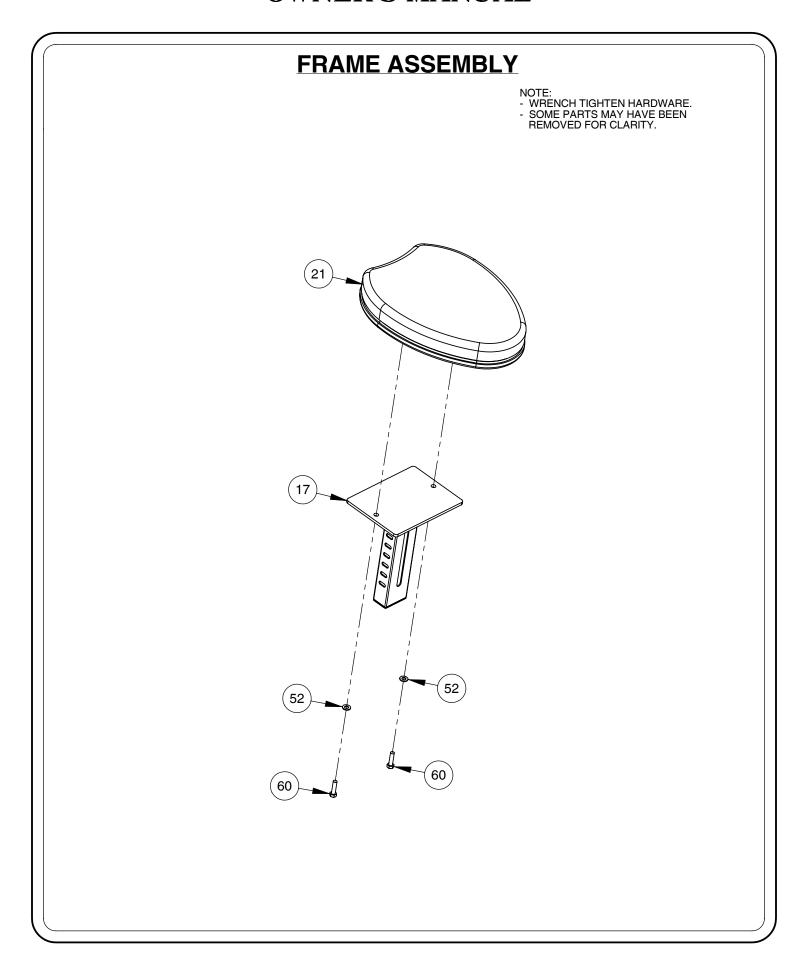


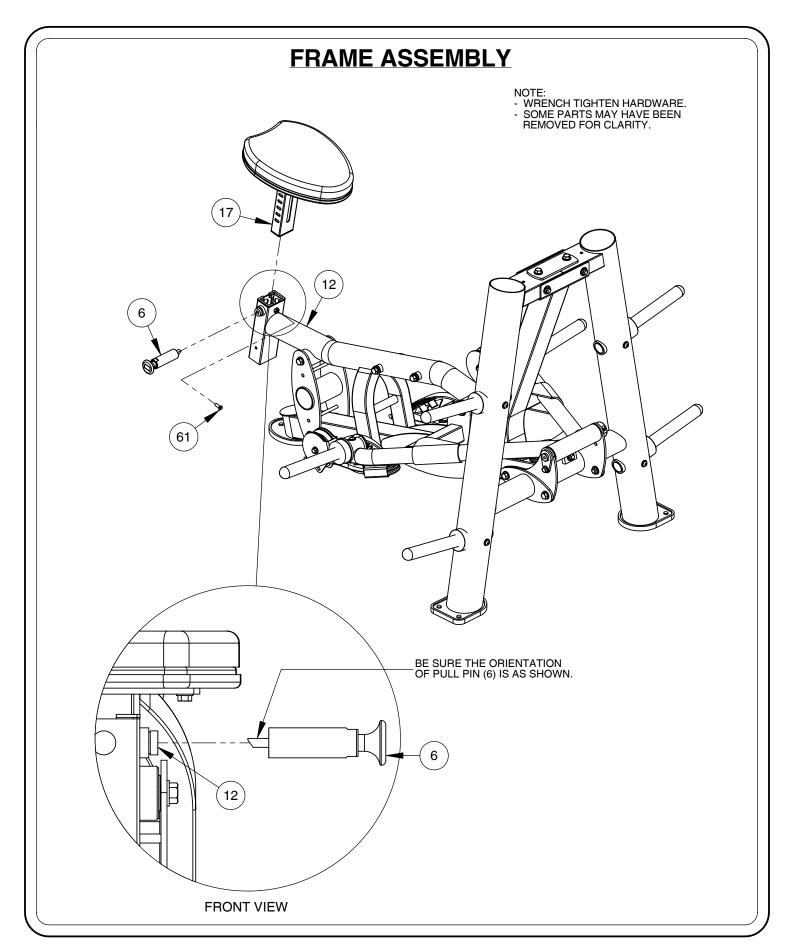


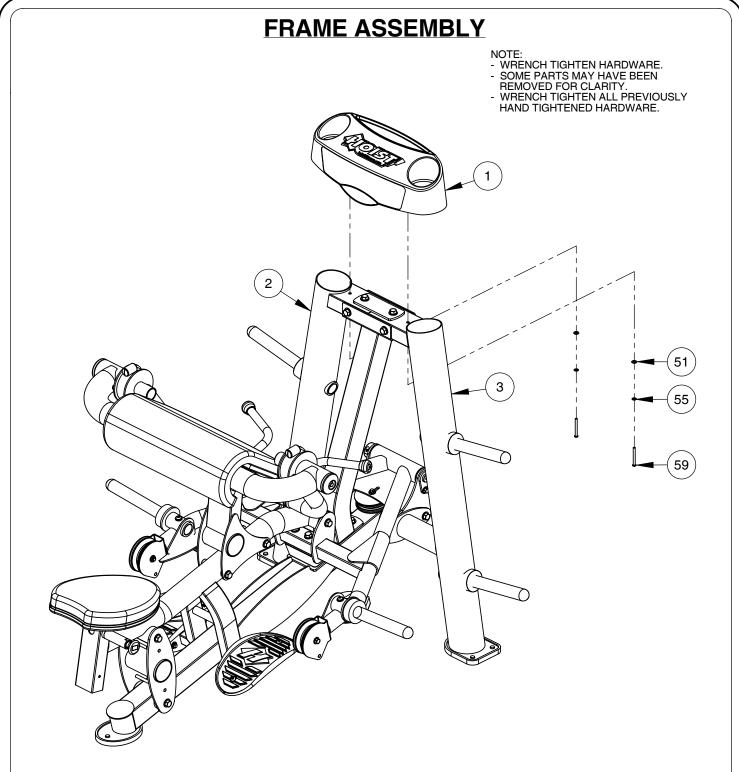


IMPORTANT

NOW THAT THE RPL-5102 IS COMPLETELY ASSEMBLED TAKE TIME TO ASSURE THAT YOUR UNIT IS ASSEMBLED SQUARE AND PERPENDICULAR. IF NOT, IT WILL BE NECESSARY TO LOOSEN SOME FRAME HARDWARE TO RE-ALIGN THE FRAME AND RETIGHTEN BOLTS.

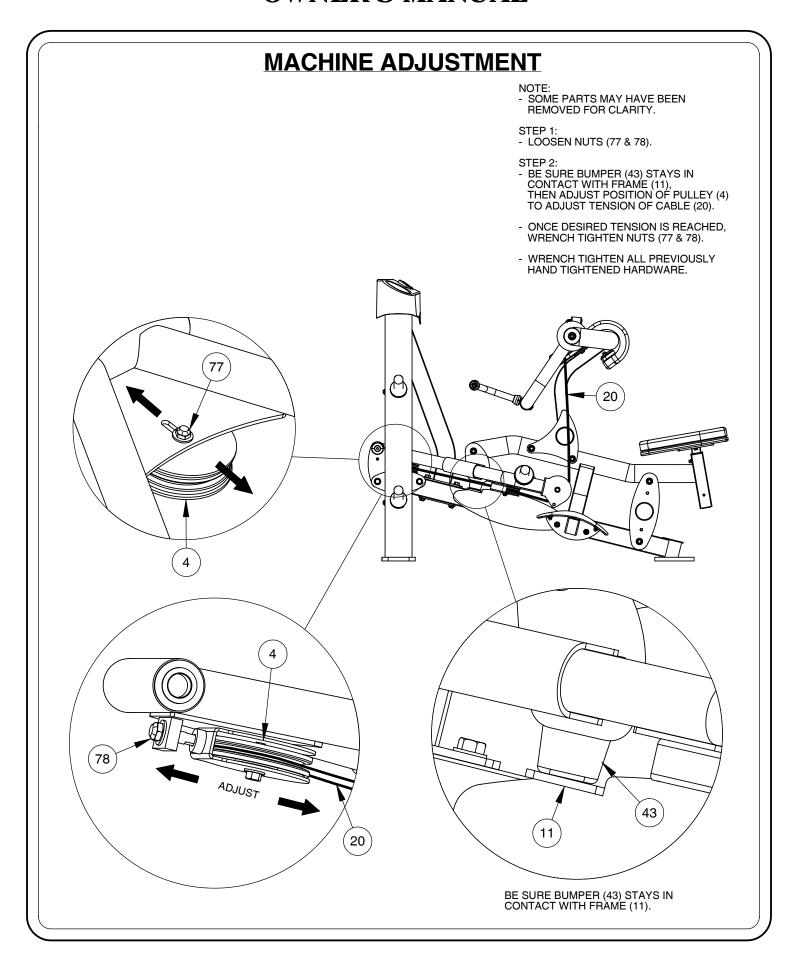

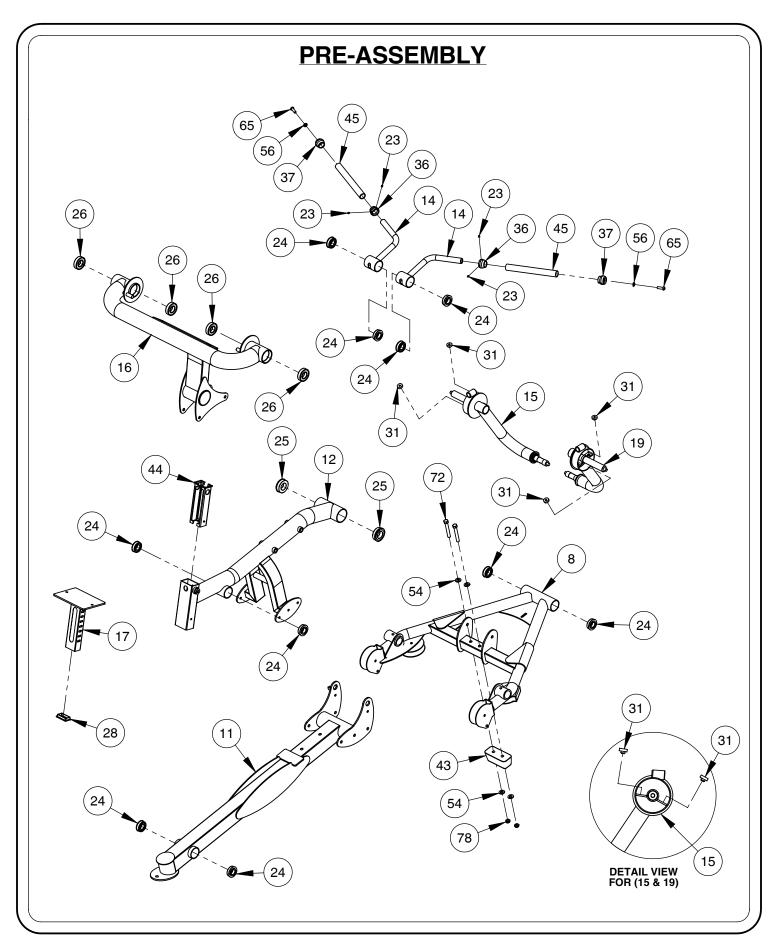

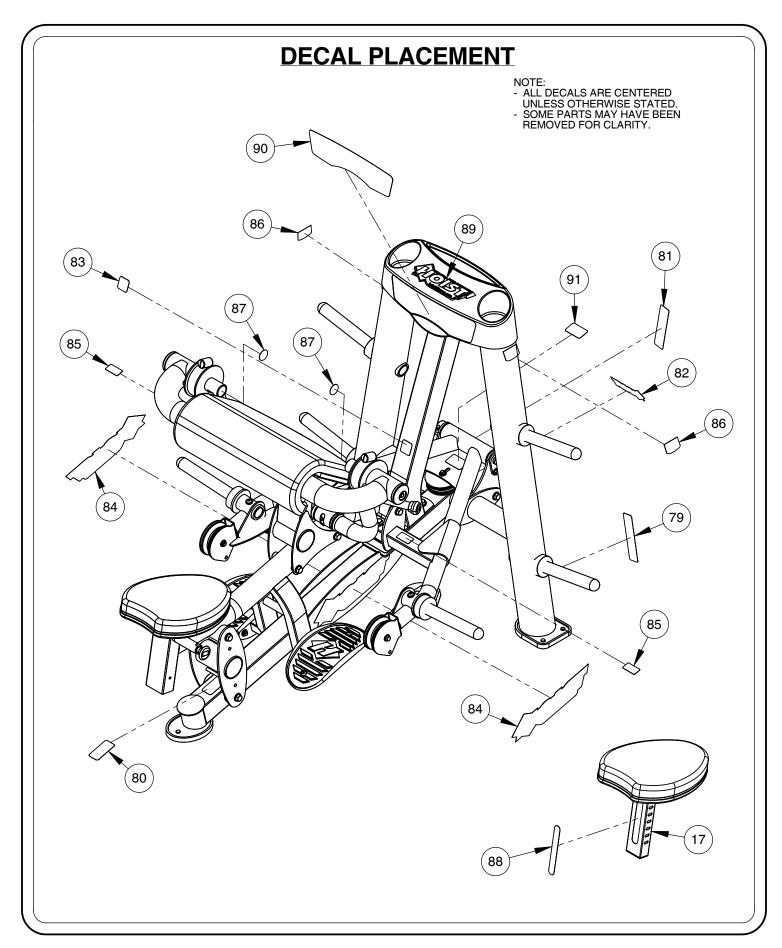

DECAL REFERENCE



021-0003405





021-0003341



021-0003113



SERIAL # DECAL



021-0003320



021-0003135

	Apach.												×
	$M_{\rm outbs}$										×	×	
E	$A_{IQIIIOIV}$								×	×			
$\left(\cdot \right)$	Wookly				×	×	×	×					
Ĕ	$Q_{\alpha i J_N}$	×	×	×									
NOI	COMMERCIAL	Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	Clean; Upholstery	Inspect; Cables or Belts and their tension	Inspect; Accessory Bars and Handles	Inspect; All Decals	Inspect; All nuts and Bolts Tighten if Needed.	Inspect; Anti-Skid Surfaces	Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	Clean & Wax; All Glossy Finishes	Repeck with Grease Linear Bearings	Replace; Cables, Belts and Connecting Parts.

021-0003008



DECAL REFERENCE CONTINUED *● ROC•IT* PREACHER CURL INSTRUCTIONS ADJUST seat so triceps lay flat on arm pad. Keep feet on footrests and hands on handles at all times. 2. Align elbows with RED PIVOT POINT. 3. Sit with feet on footrests. Do not enter or exit the machine unless it is stationary. 4. Grasp handles, pull hands up. EXERCISE. START 5. Slowly return to the start position. 021-0003691 021-0003725

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO. PART NUMBER		DESCRIPTION	QTY	
1	026-01PL2236	TOP CAP W/INSERTS	1	
2	026-01X3294	REAR UPRIGHT LEFT ASSEMBLY	1	
3	026-01X3377	REAR UPRIGHT RIGHT ASSEMBLY	1	
4	026-01X2026	ADJUSTABLE PULLEY MOUNT	1	
5	026-01X2402	FOOT PLATE ASSEMBLY	2	
6	026-01X2849	RACHET PULL-PIN ASSEMBLY	1	
7	026-01X2975	FOOT PLATE MOUNT ASSEMBLY	2	
8	026-01X3284	LIFT ARM	1	
9	026-01X3287	SHAFT, LIFT-ARM ASSEMBLY	1	
10	026-01X3305	WEIGHT HORN ASSEMBLY	2	
11	026-01X3319	BASE FRAME ASSEMBLY	1	
12	026-01X3320	USER SUPPORT FRAME	1	
13	026-01X3321	FLOATING LINK	1	
14	026-01X3323	HANDLE ASSEMBLY	2	
15	026-01X3324	CURL ARM LEFT	1	
16	026-01X3325	USER SUPPORT FRAME, UPPER	1	
17	026-01X3356	SEAT ADJUSTER ASSEMBLY	1	
18	026-01X3415	CENTER UPRIGHT	1	
19	026-01X3419	CURL ARM RIGHT	1	
20	010-01C0611	CABLE ASSEMBLY: RPL BICEP 133.25" LG	1	
21	022-01PD2054-A	SEAT PAD ASSEMBLY	1	
22	022-01PD2097-A	ARM PAD ASSEMBLY	1	
23	011-0411001	SET SCREW: 1/4"-28 X .25" LG. (SS)	4	
24	014-0009007	BEARING: FLANGED Ø2.00" O.D. X Ø1.00" I.D.	10	
25	014-0012010	BEARING: FLANGED BEARING Ø2.50" O.D. X Ø1.39" I.D.	2	
26	014-0012013	BEARING: BALL BEARING Ø2.44 O.D. X Ø1.18" I.D.		
27	014-0019005-2	SPLIT COLLAR: 1.00" I.D. X 20mmT NON-THREADED		
28	016-0001003	END CAP 1.50" X 2.50" (BLACK)	1	
29	018-0001003	CABLE PULLEY: Ø4.50"		
30	018-0002012	WIDE GROOVE PULLEY ϕ 4.50"	2	
31	019-0001001	PLUG BUMPER		
32	026-01F0251	BRACKET PLATE: 2 HOLES 7.00" X 2.75"		
33	026-01F0307	FLANGE: 2 HOLES 6.25" X 2.50"		
34	026-01M0199	QUICK RELEASE CABLE LOCK Ø 1/4"		
35	026-01M0660	SHAFT Ø1.00" O.D. X Ø .52" I.D. X 4.69" LG.		

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	NO. PART NUMBER DESCRIPTION		
36	026-01M0936	ALUMINIUM RING: ∅ 1.00" I.D.	2
37	026-01M0937	END CAP: ALUMINUM $ otin 1.0$ " I.D.	2
38	026-01M1185	WEIGHT HORN SHAFT 15.00"LG.	4
39	026-01M2043	BOLT STAND-OFF	2
40	026-01M2320	END CAP: DOMED ∅2.25" O.D.	2
41	026-01M2348	SHAFT ∅1.375" X 6.35" LG.	1
42	026-01M2356	END CAP: DOMED $ \phi $ 2.75" O.D.	2
43	026-01PL2246	DUAL HOLE BUMPER 2.05" THICK	1
44	026-01PL0125	E-Z GLIDE PLASTIC SLEEVE	2
45	026-01PL0206-13	Ø.938" X 10.50" LG. OPEN END GRIP	2
46	026-01PL0264	WEIGHT HORN RUBBER DONUT	2
47	026-01PL2122	OVAL-SHAPED RUBBER FOOT	1
48	026-01PL2131	D-SHAPED RUBBER FOOT	2
49	026-01PL2140	BLACK NYLON THREADED CAP	2
50	026-01PL2313	WEIGHT HORN RUBBER DONUT W/ 3.75 COPE	4
51	013-0002003	1/4" X 16mm SAE FLAT WASHER (WZ)	2
52	013-0302008	5/16" SAE FLAT WASHER (WZ)	6
53	013-0402007	3/8" X 22mm FLAT WASHER (WZ)	34
54	013-0102003	1/2" X 27mm SAE FLAT WASHER (WZ)	35
55	013-0102023	1/4" INTERNAL LOCK WASHER	2
56	013-0408001	3/8" INTERNAL LOCK WASHER (SS)	2
57	013-0102022	3/8" INTERNAL LOCK WASHER	6
58	011-0007097	1/4"-20UNC X .75" SHCS (BZ)	2
59	011-0101122	1/4"-20UNC X 2.50" BHCS (WZ) w/ NYLON PATCH	2
60	011-0107011	5/16"-18UNC X 1.25" HHB (WZ)	6
61	011-0311013	3/8-16UNC X .75" SQUARE HEAD (WZ)	1
62	011-0101063	3/8"-16UNC X 1.00" SHCS (WZ)	2
63	011-0101026	3/8"-16UNC X 1.00" BHCS (WZ)	8
64	011-0407022	3/8"-16UNC X 1.00" HHB (WZ)	1
65	011-0401002	3/8"-16UNC X 1.25" BHCS (SS)	2
66	011-0101034	3/8"-16UNC X 1.25" BHCS (WZ)	2
67	011-0407058	3/8"-16UNC X 2.00" HHB (WZ)	3
68	011-0107026	3/8"-16UNC X 2.25" HHB (WZ)	2
69	011-0101016	3/8"-16UNC X 2.75" BHCS (WZ)	4
70	011-0407042	1/2"-13UNC X 1.00" HHB (WZ)	4

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY		
71	011-0407016	1/2"-13UNC X 3.00" HHB (WZ)	2		
72	011-0407000	1/2"-13UNC X 3.50" HHB (WZ)	2		
73	011-0407047	1/2"-13UNC X 4.00" HHB (WZ)	2		
74	011-0107014	1/2"-13UNC X 5.00" HHB (WZ)	4		
75	011-0107036	1/2"-13UNC X 5.75" HHB (WZ)	2		
76	011-0107066	1/2"-13UNC X 7.50" HHB (WZ)	1		
77	012-0104008	3/8"-16 UNC THIN NYLOCK NUT (WZ)	14		
78	012-0304011	1/2"-13 UNC THIN NYLOCK NUT (WZ)	22		
79	021-0003008	DECAL COMMERCIAL MAINTENANCE 1.50" X 6.69"	1		
80	021-0003113	DECAL PINCH POINT 1.63" X 3.25" (VERTICAL)	1		
81	021-0003135	DECAL WARNING 1.50" X 6.69"	1		
82	021-0003230	DECAL HOIST 1.63" X 5.93"	1		
83	021-0003320	DECAL 800 LB. WEIGHT RATING (1.63" X 1.63")	1		
84	021-0003334	DECAL HOIST 3.90" X 14.25"	2		
85	021-0003341	DECAL PINCH POINT 1.07" X 2.13" (HORIZONTAL)	2		
86	021-0003405	DECAL ROX	2		
87	021-0003725	DECAL Ø 1.44" RED PIVOT POINT	2		
88	021-0004032	DECAL ADJUST 1-7 VERTICAL TXT.	1		
89	021-0018022	DECAL HOISTFITNESS.COM LOGO			
90	021-0003691	RPL-5102 PREACHER CURL PLACARD	1		
91	SERIAL # DECAL	DECAL HOIST SERIAL # 1.63" X 2.63"			

ABBREVIATIONS

BZ = Black Zinc

WZ = White Zinc


HHB = Hex Head Bolt


FHCS = Flat Head Cap Screw


BHCS = Button Head Cap Screw


SHCS = Socket Head Cap Screw

SHSS = Socket Head Shoulder Screw

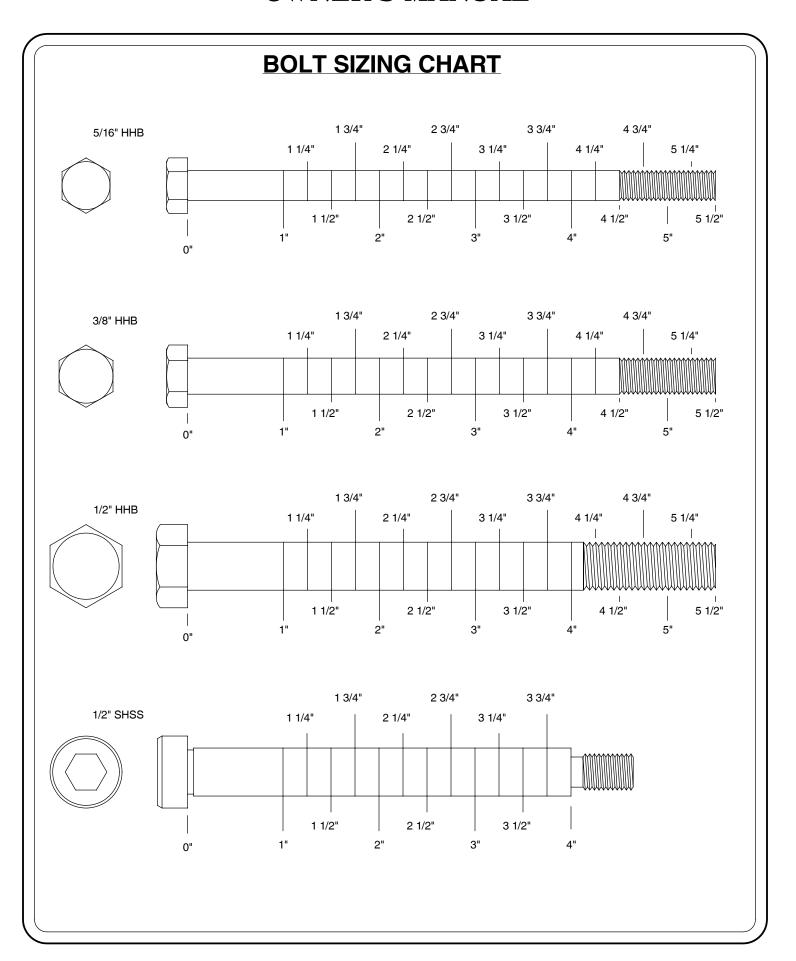

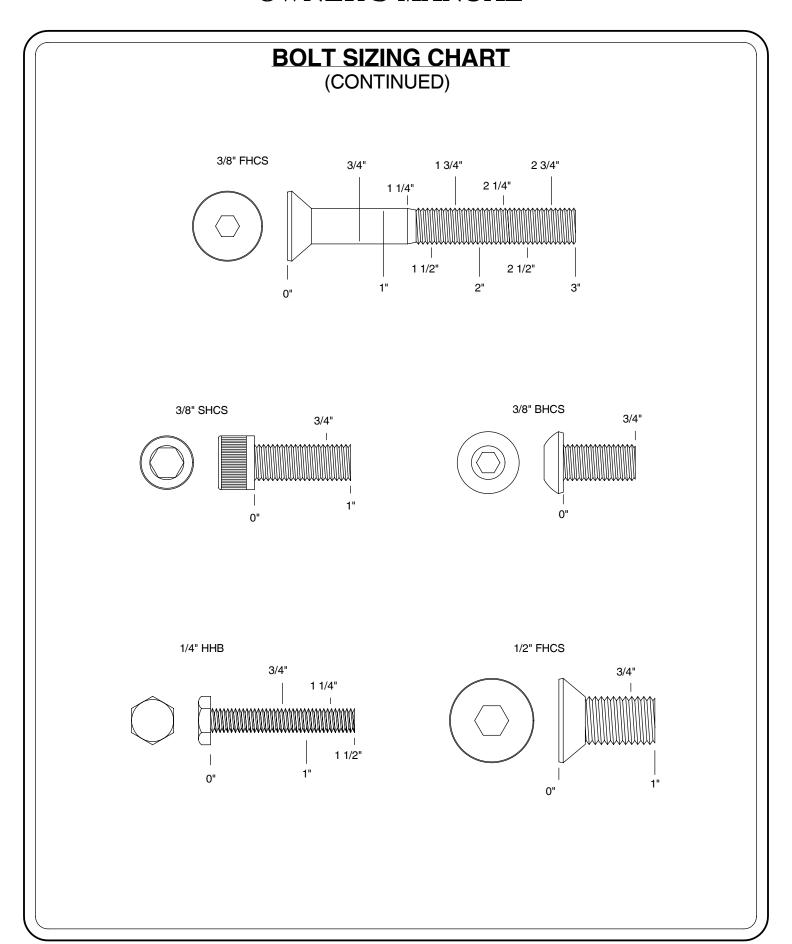

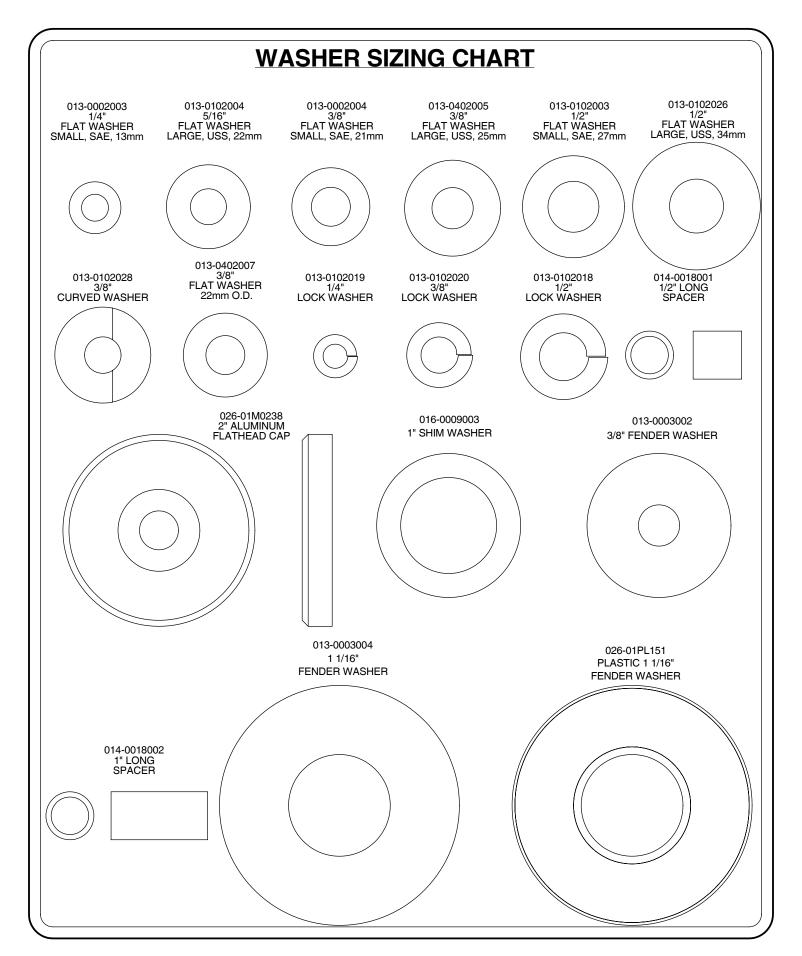

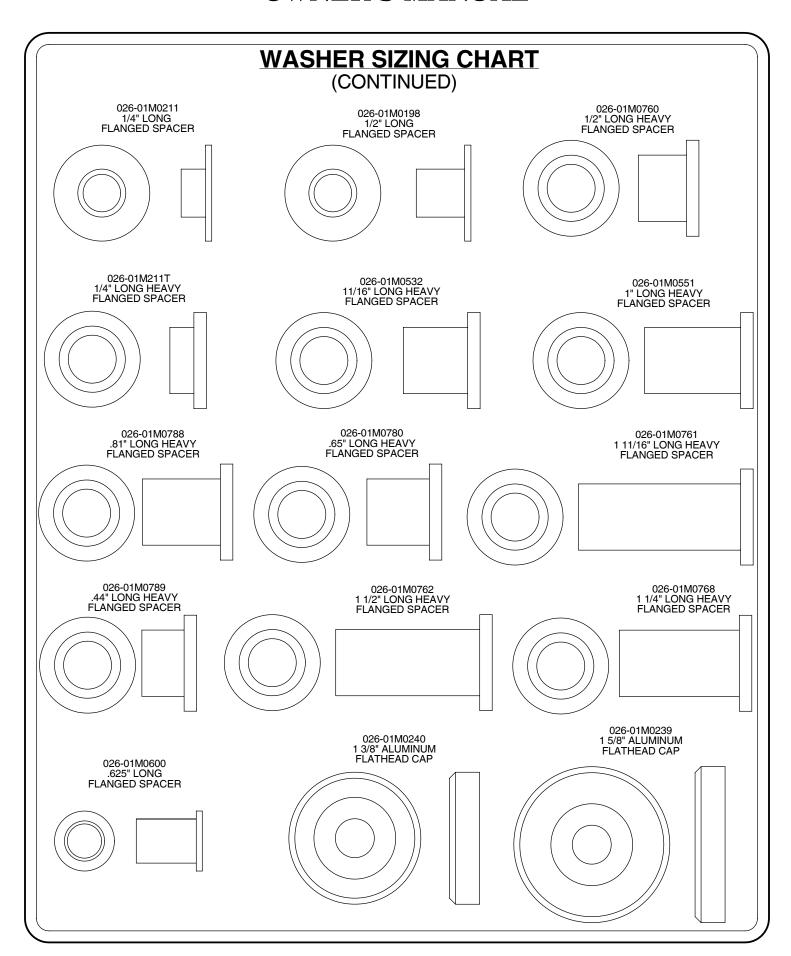

MAINTENANCE SCHEDULE

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY	
Clean; Upholstery	DAILY	WEEKLY	
Inspect; Cables or Belts and their tension	DAILY	WEEKLY	
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS	
Inspect; All Decals	WEEKLY	3 MONTHS	
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS	
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS	
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS	
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS	
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY	
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY	
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS	

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

HOIST FITNESS SYSTEMS GENERAL MAINTENANCE INFORMATION

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or warn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

*Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *Hoist uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

*Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

WEIGHT TRAINING TIPS

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your RPL-5102 HOIST® Fitness System, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Enjoy your RPL-5102 HOIST® Fitness System!

Exercise Totals Date S Ħ × S Ħ 8 S Ħ 8 S R 8 S R 8 S R 8 S R × \mathbf{S} R 8 S R 8 S R **4** S R 8 S Ħ

WEIGHT TRAINING EXERCISE LOG

S = Sets R = Repetition per set W = Weight used

HOIST FITNESS SYSTEMS LIMITED LIFETIME WARRANTY

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal. transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear

WARRANTY CLAIMS. All claims require: Model number, Serial number, Date of installation, and any information supporting the existence of the alleged defect.

To complete Warranty Registration visit: www.HOISTFITNESS.com and click on the Warranty Registration link

Starting from the original date of purchase, normal wear and tear shall be considered as the following:

COMMERCIAL USE: All malfunctions of upholstery, grips, paint, and chrome that occur after one year; all malfunctions of electronic components, belts, or cables after one year; all malfunctions of pulleys, bearings, or bushings that occur after five years. The frame and all welded components are warranted for the life of the product.

HOME USE: All malfunctions of grips, paint, and chrome that occur after ten years; all malfunctions of electronic components, belts, cables, or upholstery that occur after ten years; all malfunctions of pulleys, bearings, or bushings that occur after ten years. The frame and all welded components are warranted for the life of the product.

PLEASE NOTE THAT NOT ALL HOIST PRODUCTS ARE MADE FOR COMMERCIAL USE.

Refer to the instructions page of your owners manual or consult with you fitness product dealer to establish if a product is made for commercial use or not. Using a non-commercial product in a commercial setting can result in serious injury or death!

Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

WHAT IS NOT COVERED BY THIS WARRANTY

Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES. Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE. This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and five (5) year warranties described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

TRANSPORTATION COSTS. Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.

Hoist Fitness Systems 9990 Empire St. #130 San Diego, CA. 92126 (800)548-5438

PLEASE KEEP THIS FOR YOUR RECORDS