User's Manual

EXA DO

Model DO402G Dissolved Oxygen Converter [Style: S3]

IM 12J05D02-01E

vigilantplant.





Introduction

NOTE

Electric discharge

The EXA analyzer contains devices that can be damaged by electrostatic discharge. When servicing this equipment, please observe proper procedures to prevent such damage. Replacement components should be shipped in conductive packaging. Repair work should be done at grounded workstations using grounded soldering irons and wrist straps to avoid electrostatic discharge.

Installation and wiring

The EXA analyzer should only be used with equipment that meets the relevant IEC, American or Canadian standards. Yokogawa accepts no responsibility for the misuse of this unit.

The Instrument is packed carefully with shock absorbing materials, nevertheless, the instrument may be damaged or broken if subjected to strong shock, such as if the instrument is dropped. Handle with care.

Although the instrument has a weatherproof construction, the transmitter can be harmed if it becomes submerged in water or becomes excessively wet.

Do not use an abrasive or solvent in cleaning the instrument.

Yokogawa is not responsible for damage to the instrument, poor performance of the instrument or losses resulting from such, if the problems are caused by:

- · Improper operation by the user.
- Use of the instrument in improper applications
- Use of the instrument in an improper environment or improper utility program
- · Repair or modification of the related instrument by an engineer not authorized by Yokogawa.

How to dispose the batteries

This is an explanation about the new EU Battery Directive(DIRECTIVE 2006/66/EC). This directive is only valid in the EU.

Batteries are included in this product. Batteries incorporated into this product cannot be removed by yourself. Dispose them together with this product.

When you dispose this product in the EU, contact your local Yokogawa Europe B.V. office. Do not dispose them as domestic household waste.

Battery type: silver oxide battery

Notice:



The symbol means they shall be sorted out and collected as ordained in ANNEX II in DIRECTIVE 2006/66/EC.

Safety Precautions

Safety, Protection, and Modification of the Product

- In order to protect the system controlled by the product and the product itself and ensure safe operation, observe the safety precautions described in this user's manual. We assume no liability for safety if users fail to observe these instructions when operating the product.
- If this instrument is used in a manner not specified in this user's manual, the protection provided by this instrument may be impaired.
- If any protection or safety circuit is required for the system controlled by the product or for the product itself, prepare it separately.
- Be sure to use the spare parts approved by Yokogawa Electric Corporation (hereafter simply referred to as YOKOGAWA) when replacing parts or consumables.
- Modification of the product is strictly prohibited.
- The following safety symbols are used on the product as well as in this manual.



WARNING

This symbol indicates that an operator must follow the instructions laid out in this manual in order to avoid the risks, for the human body, of injury, electric shock, or fatalities. The manual describes what special care the operator must take to avoid such risks.



CAUTION

This symbol indicates that the operator must refer to the instructions in this manual in order to prevent the instrument (hardware) or software from being damaged, or a system failure from occurring.

CAUTION

This symbol gives information essential for understanding the operations and functions.

NOTE

This symbol indicates information that complements the present topic.



This symbol indicates Protective Ground Terminal.



This symbol indicates Function Ground Terminal. Do not use this terminal as the protective ground terminal.

Notes on Handling User's Manuals


- Please hand over the user's manuals to your end users so that they can keep the user's manuals on hand for convenient reference.
- Please read the information thoroughly before using the product.
- The purpose of these user's manuals is not to warrant that the product is well suited to any
 particular purpose but rather to describe the functional details of the product.
- No part of the user's manuals may be transferred or reproduced without prior written consent from YOKOGAWA.
- YOKOGAWA reserves the right to make improvements in the user's manuals and product at any time, without notice or obligation.
- If you have any questions, or you find mistakes or omissions in the user's manuals, please contact our sales representative or your local distributor.

Warning and Disclaimer

The product is provided on an "as is" basis. YOKOGAWA shall have neither liability nor responsibility to any person or entity with respect to any direct or indirect loss or damage arising from using the product or any defect of the product that YOKOGAWA can not predict in advance.

Label

The next warning label is put on the product.

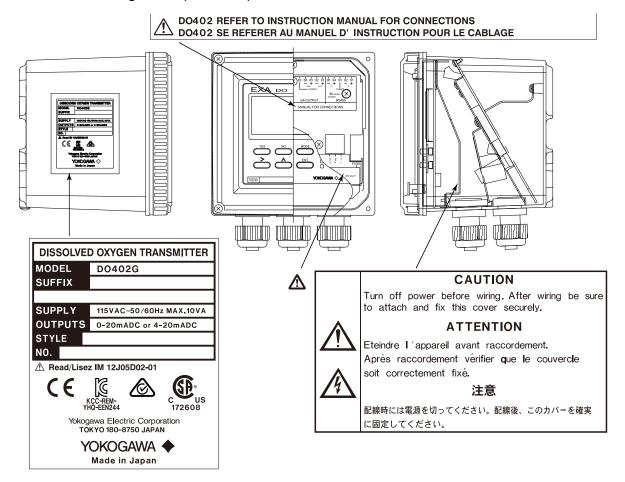

Drawing Conventions

Some drawings may be partially emphasized, simplified, or omitted, for the convenience of description.

Some screen images depicted in the user's manual may have different display positions or character types (e.g., the upper / lower case). Also note that some of the images contained in this user's manual are display examples.

Warranty and service

Yokogawa products and parts are guaranteed free from defects in workmanship and material under normal use and service for a period of (typically) 12 months from the date of shipment from the manufacturer.

Individual sales organisations can deviate from the typical warranty period, and the conditions of sale relating to the original purchase order should be consulted. Damage caused by wear and tear, inadequate maintenance, corrosion, or by the effects of chemical processes are excluded from this warranty coverage.

In the event of warranty claim, the defective goods should be sent (freight paid) to the service department of the relevant sales organisation for repair or replacement (at Yokogawa discretion). The following information must be included in the letter accompanying the returned goods:

- Part number, model code and serial number
- · Original purchase order and date
- · Length of time in service and a description of the process
- · Description of the fault, and the circumstances of failure
- Process/environmental conditions that may be related to the failure of the device.
- A statement whether warranty or nonwarranty service is requested
- Complete shipping and billing instructions for return of material, plus the name and phone number of a contact person who can be reached for further information.

Returned goods that have been in contact with process fluids must be decontaminated/ disinfected before shipment. Goods should carry a certificate to this effect, for the health and safety of our employees.

Material safety data sheets should also be included for all components of the processes to which the equipment has been exposed.

Model DO402G

Dissolved Oxygen Converter

[Style: S3]

IM 12J05D02-01E 9th Edition

TABLE OF CONTENTS

♦	Introd	Introductioni						
•	Safet	y Precau	Precautionsii					
1.	Introduction and General Description							
	1.1	Instrument Check						
	1.2	Application						
	1.3	General information						
	1.4	Config	Configuration checklist for DO402					
	1.5	System	1-7					
		1.5.1	Dissolved Oxygen Sensor	1-7				
		1.5.2	The holders	1-8				
2.	DO40	2G Spec	cifications	2-1				
	2.1	Genera	ıl	2-1				
	2.2	Operat	ing specifications	2-4				
	2.3	Model	and suffix codes	2-5				
3.	Instal	lation ar	nd Wiring	3-1				
	3.1	Installa	Installation and dimensions					
		3.1.1	Installation site	3-1				
		3.1.2	Mounting methods	3-1				
	3.2	Wiring		3-4				
		3.2.1	Wiring of DO30G	3-4				
		3.2.2	Wiring of DO70G	3-5				
		3.2.3	Preparation	3-6				
	3.3	Wiring	the power supply	3-7				
		3.3.1	General precautions	3-7				
		3.3.2	Access to terminal and cable entry	3-7				
		3.3.4	Grounding the housing	3-9				
		3.3.5	Switching on the instrument	3-10				
	3.4	Wiring	Wiring the contact signals					
		3.4.1	General precautions	3-10				
		3.4.2	Contact outputs					
		3.4.3	Contact input					
	3.5	Wiring	Wiring the analog output signals3-11					
		3.5.1	General precautions	3-11				

		3.5.2	Analog output signals	3-12
	3.6	Wiring	the standard galvanic sensor	3-12
	3.7	Wiring	other galvanic sensors	3-13
	3.8	Wiring	the standard optical sensor (DO70G)	3-14
	3.9	Wiring	polarographic sensors	3-16
	3.10	Wiring	RS-485 signal	3-16
4.	Opera	tion; Dis	splay Functions And Setting	4-1
	4.1	Operate	or interface	4-1
	4.2	Explana	ation of operating keys	4-2
	4.3	Setting	passcodes	4-3
	4.4	Display	functions (default)	4-4
5.	Paran	neter set	tting	5-1
	5.1	Mainter	nance mode	5-1
		5.1.1	Manual activation of Hold	5-2
		5.1.2	Manual Wash start/stop	5-3
		5.1.3	Setpoint adjustment	5-4
	5.2	Commi	ssioning mode	5-5
		5.2.1	Setpoints	5-6
		5.2.2	Range	5-8
		5.2.3	Hold	5-10
		5.2.4	Wash	5-12
		5.2.5	Service	5-13
	5.3	Notes f	or guidance in the use of service coded settings	5-14
		5.3.1	Parameter specific functions	5-14
		5.3.2	Temperature functions	5-15
		5.3.3	Calibration functions	5-16
		5.3.4	mA output settings	5-17
		5.3.5	Contact outputs	5-18
		5.3.6	User interface	5-22
		5.3.7	Communication setup	5-23
		5.3.8	General	5-24
		5.3.9	Test and setup mode	5-24
6.	Calibr	ation Pr	ocesure	6-1
	6.1	Genera	l	6-1
		6.1.1	Calibration methods	6-1
		6.1.2	Diagnostic functions performed during calibration	6-2
	6.2	Calibra	tion procedure using air calibration method	6-2
		6.2.1	Preparation	6-2
		6.2.2	Procedure for air calibration	6-3
	6.3	Calibra	tion procedure using water calibration method	6-4
		6.3.1	Preparation	6-4
		6.3.2	Calibration operation (water calibration method)	6-4

		6.3.3	Procedure for Water calibration	6-5
	6.4	Calibra	tion method using manual calibration method	6-6
		6.4.1	Preparation	6-6
		6.4.2	Procedure for manual calibration	6-7
7.	Mainte	enance.		7-1
	7.1	Overall	dissolved oxygen metering system	7-1
		7.1.1	Inspection and maintenance to be implemented periodically	7-1
		7.1.2	Inspection and maintenance to be implemented on occasion	7-1
	7.2	Periodi	c maintenance for the EXA DO402G converter	7-2
	7.3	Fuse R	eplacement	7-2
8.	Troubl	leshooti	ing	8-1
	8.1	Measur	res in the case of converter operation failure	8-1
		8.1.1	No dissolved-oxygen converter operation	
		8.1.2	Operation key or display failure	8-1
	8.2	Measur	res in the case of failure (Error) detection	8-1
9.	Spare	Parts		9-1
10.	_			
	10.1	Setpoir	ıt	10-1
	10.2	Range .		10-1
	10.3	Hold		10-1
	10.4	Wash		10-2
	10.5	User se	etting table	10-2
Custo	omer Ma	aintena	nce Parts List (for Style: S3) CMPL 12J05D0	2-03E
	sion Info			i

1. Introduction and General Description

The Yokogawa EXA is a 4-wire converter designed for industrial process monitoring, measurement and control applications. This instruction manual contains the information needed to install, set up, operate and maintain the unit correctly. This manual also includes a basic troubleshooting guide to answer typical user questions.

Yokogawa can not be responsible for the performance of the EXA analyzer if these instructions are not followed.

1.1 Instrument Check

Upon delivery, unpack the instrument carefully and inspect it to ensure that it was not damaged during shipment. If damage is found, retain the original packing materials (including the outer box) and then immediately notify the carrier and the relevant Yokogawa sales office.

Make sure the model number on the nameplate affixed to the left side of the instrument agrees with your order.

CAUTION

The nameplate will also contain the serial number and power supply selection.

Be sure to apply correct power to the unit.

Check that all the parts are present, including mounting bracket, as specified in the option codes at the end of the model number. For a description of the model codes, refer to Chapter 2 of this manual under General Specifications.

Basic Parts List: Converter EXA 402

User's Manual (See model code for language)

Optional mounting bracket when specified (See model code)

1.2 Application

The EXA converter is intended to be used for continuous on-line measurement in industrial installations. The unit combines simple operation and microprocessor-based performance with advanced self-diagnostics and enhanced communications capability to meet the most advanced requirements. The measurement can be used as part of an automated process control system. It can also be used to indicate dangerous limits of a process, to monitor product quality, or to function as a simple controller for a dosing/neutralization system.

Yokogawa designed the EXA analyzer to withstand harsh environments. The converter may be installed either indoors or outside because the IP65 (NEMA 4X) housing and cabling glands ensure the unit is adequately protected. The flexible polycarbonate window on the front door of the EXA allows pushbutton access to the keypad, thus preserving the water and dust protection of the unit even during routine maintenance operations.

A variety of EXA hardware is optionally available to allow wall, pipe, or panel mounting. Selecting a proper installation site will permit ease of operation. Sensors should normally be mounted close to the converter in order to ensure easy calibration and peak performance. If the unit must be mounted remotely from the sensors, WF10 extension cable can be used up to a maximum of 50 metres (150 feet) with a BA10 junction box.

The EXA is delivered with a general purpose default setting for programmable items. (Default settings are listed in Chapter 5 and again in Chapter 10). While this initial configuration allows easy start-up, the configuration should be adjusted to suit each particular application. An example of an adjustable item is the type of temperature sensor used. The EXA can be adjusted for any one of four different types of temperature sensors.

To record such configuration adjustments, write changes in the space provided in Chapter 10 of this manual. Because the EXA is suitable for use as a monitor, a controller or an alarm instrument, program configuration possibilities are numerous.

Details provided in this user's manual are sufficient to operate the EXA with all Yokogawa sensor systems and a wide range of third-party commercially available probes. For best results, read this manual in conjunction with the corresponding sensor user's manual.

1.3 General information

Flexibility, reliability and low maintenance are among the benefits provided by the EXA DO402G dissolved oxygen analyzer. Designed to meet the exacting requirements of measuring dissolved oxygen in the modern industrial environment, it contains many features to ensure the best precision whatever the application.

This 4-wire converter is housed in a robust IP65 field mountable case. Two mA outputs, four relays, digital communication and a clear LCD make the DO402G a truly comprehensive package.

The DO402G features PI control on both the auxiliary mA output and the pulse proportional relay outputs, thus avoiding the need for a separate controller.

The famous EXA sensor diagnostics are now expanded with a logbook facility in combination with the RS-485 two wire communication software option. This can be used to record events like calibration and diagnostic messages, and to update configuration of the converter remotely.

The DO402G accepts inputs from galvanic, polarographic and optical sensors. Percent saturation, mg oxygen/L water, and ppm DO can be displayed and transmitted. Compensation for atmospheric pressure altitude, salinity and temperature are included for the best accuracy of measurement.

Features

- · Simple 3 level operation
- · Display mg/L, ppm, % saturation
- · Air calibration or saturated water calibration
- Chloride concentration compensation can be programmed
- Automatic temperature compensation
- · Built-in barometric air pressure compensation
- "Hold" function enables fixed output signal during maintenance
- Two separate mA output signals
- Wide flexibility incorporating free programmable range settings, selection of output signals and alarm functions
- · Analog output with adjustable damping time
- · Password protection for each programming level
- Built-in wash timer with remote start possibility
- IP65 weather protection
- · Universal mounting possibilities
- Sensor diagnostics
- RS-485 bi-directional communication
- Logbook via RS-485 link
- PI control on mA and pulsed contact controls

Method of operation

The EXA DO30 operates on a galvanic cell principle.

The sensor contains a measuring cell consisting of a silver cathode and a lead anode. The voltage generated by this electrode pair is sufficient to generate a spontaneous reduction of oxygen at the cathode, so no external voltage source for this reaction is required. The electrodes are immersed in an electrolyte containing potassium hydroxide. Oxygen molecules can pass through a permeable membrane into the cell. The output current of the cell is directly related to the partial pressure of oxygen at the sample side.

In the sensor a thermistor is integrated to be able to correct for temperature changes. Both signals are used in the converter to ensure an automatically compensated value for dissolved oxygen. Calibration is worked out by simple air calibration to make sure that the performance of the instrument will be maintained.

The DO70G sensor operates based on the principle of optical (fluorescence) measurement.

The sensor comprises a fluorescent membrane, light-emitting part, light-receiving part, and internal circuit.

An external power source is required. Oxygen molecules pass through the permeable membrane to a fluorescent substance and shift the phase of fluorescent emission. The degree of this shift is inversely proportional to the partial pressure of oxygen on the sample side, resulting in the output of a current equivalent to the polarographic current adjusted by the internal circuit.

A temperature sensor is integrated in both sensors, and the temperature signals are used to automatically compensate the measurements of dissolved oxygen.

The combination of air-saturated water calibration and zero calibration helps maintain the performance of the instrument.

Display functions and ranges

The display continuously gives you all necessary information at a glance. The process values are shown in easily readable programmable units. Either mg/L. % saturation or ppm can be chosen.

The user-interface is simplified to a basic set of 6 keys accessible through the flexible window cover. It uses a simple step by step, question and answer style to communicate with the operator by giving messages on the second line of the display and indicating which keys are to be pressed in the display.

Automatic air calibration

Calibration for a dissolved oxygen instrument is performed by simple air calibration (please refer to 6.3.1 section for the optical sensor).

Criteria for automatic calibration (stabilization time, DO values) can be set to suit the sensor.

In addition to the air calibration three additional calibration procedures can be used:

- 1. Span calibration using air saturated water
- 2. Zero calibration using sulfite saturated water
- 3. Process calibration using laboratory reference method

Alarm and control functions

The EXA DO402 has four built-in relay contacts. From the factory the first two contacts are predefined as a high or low alarm.

The third contact its pre-defined as a wash contact. This wash contact is driven by a wash-timer with adjustable wash-time, interval time and relaxation time to control the wash cycle.

The fourth contact is fixed to function as an alarm, indicating that the EXA has found a fault in the measuring loop. FAIL safe.

Cleaning

In combination with the appropriate sensor and immersion type fitting the wash timer with remote start possibility can be used. Interval-time, washing time and relaxation time are free programmable.

Damping time on output signal

Under certain circumstances disturbances can cause high peaks in the output signal. To avoid these disturbances the EXA DO402 has an electronic filtering which averages the output signal during a programmable period. This damping time is programmable between 0 and 120 seconds.

Salinity compensation

In order to take the effect of salinity into account for oxygen measurement an average chloride concentration can be programmed. The chloride concentration value is set manually via the service level. The EXA DO402 takes account of the effects of salinity and temperature simultaneously. The advantage of this construction is that the result of the measurement is available immediately. A separate conversion table is not necessary.

Temperature compensation

The micro-processor makes an accurate temperature compensation possible that performs well over the entire range of the instrument. No further adjustment tables are required.

Barometric air pressure compensation

Air pressure differences, due to weather conditions or altitude, can cause a variation up to 20 % in the dissolved oxygen concentration. A built-in air pressure sensor automatically compensates for barometric influences between 900 to 1100 mbar (90 to 110 kPa).

Sensor diagnostics

The DO sensor is checked for low impedance between the silver electrode and an earth contact in the liquid, to detect membrane integrity. Temperature sensor connections and sensor connections are checked for impedance. These faults are signalled by the FAIL contact and can be signalled to the control room by an output of 0/3.5 mA or 22 mA. The fault is also signalled by a special marker held on the display, a LED on the front and an error code in the message display.

During calibration of a DO measuring system the slope deviation from nominal value (%) and sensor output (µA) at 0 mg/L are calculated and checked.

If any of these are outside the limits, an error is signalled.

Logbook

Software record of important events and diagnostic data. Available through RS-485, for use with the Yokogawa PC402 communication software.

Serial Communication


Bi-directional according to the EIA-485 standard using HART-protocol and PC402 software.

1.4 Configuration checklist for DO402

	Standard configuration	Options	Reference for change
Measured variable(s)		-	
Primary inputs	D.O. and Temp		
DO range	0- 20 mg/L	any span within 0-50 mg/L	"range"
DO units	mg/L	ppm. % saturation	code 56
Temperature range	0- 50 °C	25 °C minimum span	"range"
Temperature unit	Celsius	Fahrenheit	code 11
Outputs			
Analog output	4- 20 mA for DO	0-20 mA or 4-20 mA	code 30
Second output	4- 20 mA for Temp	0-20 mA or 4-20 mA	code 30
Output allocation	DO and Temp	DO, Temp, Table, PI control	code 31
Contact outputs	S1= high at 19.5 mg/L S2= low at 1.0 mg/L	(4) freely programmable	"setpoint" code 40. 41, 42, 43
Contact allocation	mg/L and FAIL	mg/L, temp, wash, PI control, HOLD	code 40- 43
Contact variables	dead time= 0.2 s; hyst= 0.1 mg/L	time: 0- 200 s; hyst 0- 20 mg/L	code 44
Add. contact functions	none	time out alarm	code 47
Control functions	none	PI on contacts or mA2 output	code 45, 46, 34 33
Digital outputs	none	RS-485	code 60
Communication			
Digital interface	disabled	RS-485	code 60
Communication software	disabled	PC402	contact factory
Variables on display	mg/L and temp	%sat, °C, mA1, mA2, SL, ZR, REL	"display"
Burn out	disabled	burn low (3.5)/ high (22) on mA1/ mA2	code 32
Password protection	disabled	for mains/ comm./ serv level	code 52
Autoreturn	return to measure in 10 minutes	enable or disable	code 50
Add. functions in MAINT	disabled	wash start/ setpoint adj	code 51
Diagnostics			
Membrane condition	active	enable or disable	code 02
Check on Slope	active	enable or disable	code 02, 22
Check on zero	disabled	enable or disable	code 02, 21, 22
Check on stability	0.05 mg/L per 60 s	0-50 mg/L in 10-600 s	code 20
Compatibility			
DO Sensor	DO30	DOX8, DO410, Ingold, DO70G	code 01, 10
Temperature sensor	Pt1000	Pt 100, PB36, 22k NTC	code 10
Membrane thickness	50 μm (2 mil)	25 or 50 μm (1 or 2 mil), adj. slope	code 01
Sensor principle	galvanic	galvanic or polarographic *1	code 01, "wiring"
Manual temp. comp.	disabled	disable or enable	code 13
Special Features			
Salinity compensation	disabled	comp. for 0- 100 ppt NaCl	code 04
Temperature calibration	none	adjustment +/- 7.5 °C	code 12
Zero calibration	disabled	disable or enable	code 21
Sensor washing	disabled	interval < 36 hours, wash time 0.1-10 min.	"Wash"
HOLD during maintenance	disabled	hold last or hold fix	"Hold"
Contact during HOLD	disabled	possible on S1,S2, S3 or S4	code 40-42
Atm. press. compensation	active	active or manual	
Soft fail alarm	disabled	possible for E1E4, E7E9, E12, E16, E22	code 53
Logbook	disabled	2 volumes of 50 events	code 61,62

^{*1:} Choose a polarographic sensor for an optical dissolved oxygen sensor.

1.5 System Configuration

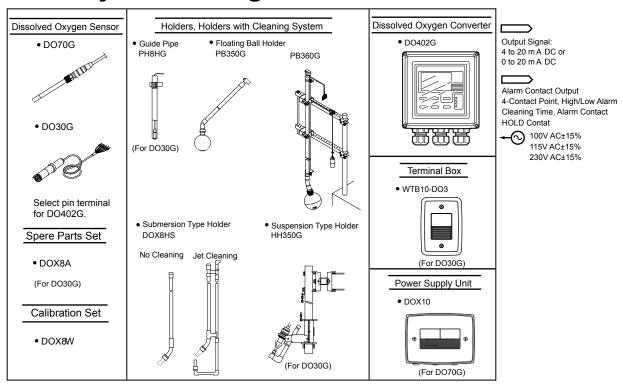

*: DOX10 is unusable depending on a use area.

1.5.1 Dissolved Oxygen Sensor

The DO402G can be used with a variety of sensors. Some specific programming may be necessary to match the converter with the sensor.

DO70G sensor

This sensor features temperature compensation with a 22k NTC RTD. The nominal output of this sensor is 60 nA in air under reference conditions. Before use, enter the service mode. Select service code 01 (*S.TYPE) and set it to 1 (polarographic sensor), then press the ENT key. Select *1.CELL2.9 and set the nominal output to 60 nA. Next, select service code 10 (*T.SENS) and set it to 3 (22 kNTC). Then select service code 21 (*0.CAL) and set it to 1 (zero calibration enabled) because twopoint calibration by air-saturated water calibration and zero calibration are required.

For details, refer to GS 12J05D04-01E.

Model DOX8SM sensor

This sensor is a galvanic sensor with a PB36 type temperature compensator and a 25 micron membrane (1 mil).

This sensor has a nominal output current of $7.5\mu A$ in ambient air under reference conditions. In Service code 01 selection 1 must be programmed when this sensor is used. The membrane check is inactive with this sensor unless external solution ground is used. (metal holder or sample line)

Model DO30G sensor

This sensor is essentially the same as the DOX8SM sensor, but it has a 50 micron membrane, fixed sensor cable, Pt1000 RTD temperature compensation and integral solution ground that allows membrane checking. The nominal output of this sensor is $3.75~\mu\text{A}$ in air under reference conditions.

In Service item "*I.CELL" selection 0 must be programmed when this sensor is used.

For details, refer to GS 12J05D03-01E.

Model DO30 sensor

This sensor is specified in GS 12J6K4-E-E and it can be supplied with 50 or with 25 micron membrane.

Normally 50 micron membrane is used and no reprogramming is necessary. Otherwise Service code 01 setting must be changed from 0 to 1.

Ingold model 32 sensors with 12, 19 and 25 mm shaft

These sensors are available in many different configurations. The sensor is a polarographic sensor and therefore settings of service code 01 has to be changed from 0 to 1.

The sensor output is normally between 30 and 100 nA in ambient air under reference conditions, but the "large cathode" version has a current output between 200 and 700 nA. To utilize Slope diagnostic features, it is best to read current output during first air calibration in "display" mode and to enter that value in service code 01.

The temperature compensator is a NTC resistance and that can be chosen by entry of 3 in code 10.

The wiring of the sensor is different as well:

The red wire: the anode goes to terminal 18

The white wire: the cathode goes to terminal 17

The green/yellow wire: the shield goes to terminal 14 and the 2 black wires for NTC go to terminal 11 and 12.

The membrane checking feature cannot be used for these sensors, due to the construction of the sensor.

1.5.2 The holders

PB30 floating ball holder

All Yokogawa sensors are compatible with the floating ball holder that is specified in GS 12J6K4-E-E and GS 12J5A1.

FD30 immersion fitting

The DO30 sensor is compatible with the FD30 immersion holder as specified in GS 12J6K4-E-E and with all flow fittings and flow fitting subassemblies that are specified in GS 12D7K2.

DOX8HS submersion type holder

The DOX8SM and the DO30G sensor are compatible with the DOX8HS holder and all PH8 model holders.

2. DO402G Specifications

2.1 General

Input specifications

The DO402G Dissolved Oxygen converter measures the current, that is generated by the Dissolved Oxygen sensor. The flexibility of the input circuit allows the use of many commercially available sensors, whether they are of the Galvanic type (driving voltage generated internally) or Polarographic type (driving voltage supplied by converter)

The input range varies from 0.0 nA up to 500 nA for optical, polarographic sensors and 0.0 to 50 μ A for galvanic sensors.

Temperature measurement for automatic temperature compensation utilizes Pt100, Pt1000 RTD elements or PB36 as used in DOX8, DO30 and DO70G sensors, as well as the 22 kNTC as used by the Hamilton Oxyferm.

Measurement ranges

DO: 0- 50 mg/L (ppm)

Temperature: 0- 50 °C (32- 122 °F)

Span

DO concentration: minimum: 1 mg/L (ppm)

maximum: 50 mg/L (ppm)

% saturation: minimum: 10 %

maximum: 300 %

Temperature: minimum: 25 °C (77 °F)

maximum: 50 °C (122 °F)

Output Signals

Two isolated outputs of 0/4- 20 mA DC with common negative.

Maximum load 600 Ohm.

Auxiliary output can be chosen from Temperature, DO, PI control, table, burn up (22 mA) or burn down (0 or 3.5 mA) to signal failure

Temperature compensation

0 to 50 °C

Sensor types: Pt100 or Pt1000 RTD; PB36 (Yokogawa compatible); 22 k NTC (Ingold

compatible)

Automatic or Manual temperature compensation

Calibration

Semi-automatic calibration with automatic compensation for influence of barometric pressure and altitude on partial pressure of oxygen in air (or solubility of oxygen in water). Automatic compensation for influence of salinity of water on solubility of oxygen in water is programmable.

The correction for pressure, salinity and temperature meets ISO 5814

Possible calibration routines are:

Slope (span) calibration in ambient air. The calibration table is based on 70 % RH and is determined empirically.

Slope (span) calibration in water, saturated with air: according ISO 5814 Zero calibration (normally inactive)

Serial Communication

Bi-directional according to the EIA-485 standard using HART protocol and PC402 software.

Logbook

Software record of important events and diagnostic data.

Available through RS-485, with key diagnostic information available in the display.

Display

Custom liquid crystal display, with a main display of 3 1/2 digits 12.5 mm high. Message display of 6 alphanumeric characters, 7 mm high.

Contact outputs

Four (4) SPDT relay contacts with LED indicators. For S1, S2, and S3, the LED is General:

on when relay is powered.

For S4 (FAIL) LED lights when power is removed (Fail safe). NOTF:

Contact outputs configurable for hysteresis and delay time.

Maximum values 100 VA, 250 V AC, 5 Amps. Capacity :

Maximum values 50 Watts, 250 V DC, 5 Amps.

- Status : High/Low process alarms, selected from process parameters and temperature.

Contact output is also available to signal "Hold Active

	Contact S1 to S3			Contact S4		
Status	LED	NO	NC	LED	NO	NC
Alarm, FAIL, OFF	On	Closed	Open	On	Open	Closed
Alarm, FAIL, OFF	Off	Open	Closed	Off	Closed	Open
Power OFF	Off	Open	Closed	Off	Open	Closed

Control function: On/Off

Proportional duty cycle control with integral term. PI pulsed

Proportional frequency control with integral term. In addition wash cleaning PI frequency

control signal on S3, and FAIL alarm for system and diagnostic errors on S4

Contact input

When a DO70G is connected, contact input cannot be used.

Voltage-free contact (do not apply voltage)

Wash start or input remote range change (either choice)

On resistance: 10Ω or less Off resistance: $100 \text{ k}\Omega$ or more On time: 0.5 sec. or more

Note: At the circumstance influenced from noise (e.g. long transmission of contact input), insertion of a relay near DO402G is recommended for insulating

Power supply

Supply voltage rating: 100, 115, 230 VAC

Applicable range: 85 to 115, 97.8 to 132.2, 195.5 to 264.5 VAC

Supply frequency rating: 50 / 60 Hz

Applicable range: 50 Hz ± 5% / 60 Hz ± 5%

Maximum 10 VA for steady operation Power consumption:

Safety and EMC conforming standards

Safety: conforms to EN 61010-1

EN 61010-2-030 CAN/CSA No.61010-1 UL Std. No. 61010-1 CSA C22.2 No. 94.2

UL 50E

EMC: EN 61326-1* Class A, Table 2 (For use in industrial locations) (Note 1)

EN 61326-2-3

EN 61000-3-2 Class A

EN 61000-3-3

EMC Regulatory Arrangement in Australia and New Zealand EN 55011 Class A, Group 1

Korea Electromagnetic Conformity Standard Class A

한국 전자파적합성 기준

*: Influence of immunity environment (Criteria A): Output shift is specified within ±25% of F.S.

Installation altitude: 2000 m or less

Category based on IEC 61010: II (Note 2)

Pollution degree based on IEC 61010:2 (Note 2)

Note 1: This instrument is a Class A product, and it is designed for use in the industrial environment. Please use this instrument in the industrial environment only.

A급 기기 (업무용 방송통신기자재) 이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Note 2: Installation category, called overvoltage category, specifies impulse withstand voltage. Category II is for electrical equipment. Pollution degree indicates the degree of existence of solid, liquid, gas or other inclusions which may reduce dielectric strength. Degree 2 is the normal indoor environment.

Shipping details

Package size: w x h x d 290 x 300 x 290 mm. 11.5 x 11.8 x 11.5 in.

Packed weight: approx. 2.5 kg (5 lb).

Connection via cables

The distance between the sensor and transmitter can be up to 50 m if the WTB10 junction box is used. This junction box can not be used for the DO70G, for which the allowable maximum distance is 10 m.

2.2 Operating specifications

Performance : DO (at t process = 25 °C)

Linearity: \pm 0.03 mg/L or \pm 0.5%FS, whichever is greater Repeatability: \pm 0.03 mg/L or \pm 0.5%FS, whichever is greater \pm 0.05 mg/L or \pm 0.5%FS, whichever is greater

Performance : Temperature (Pt1000, PB36, 22kNTC)

Linearity: ± 0.3 °C Repeatability: ± 0.1 °C Accuracy: ± 0.3 °C

Performance : Temperature (Pt100)

Linearity: ± 0.4 °C Repeatability: ± 0.1 °C Accuracy: ± 0.4 °C

Note on performance specifications:

The specifications are expressed with simulated inputs, because the DO402G can be

used with many different sensors with their unique characteristics.

The following tolerance is added to above performance. mA output tolerance: ± 0.02 mA of "0/4 - 20 mA"

Digital display tolerance: +1 digit

Response time

0 - 90%: 10 s

Ambient operating temperature

-10 to +55 °C (14 to 131 °F)

Storage temperature

-30 to +70 °C (-22 to 158 °F)

Humidity

10 to 90% RH non-condensing

Housing

Case: Cast aluminium with chemically resistant coating

Cover: flexible polycarbonate window.

Case color: off-white (munsell 2.5Y8.4/1.2)

Cover color: moss green (munsell 0.6GY3.1/2.0)

Cable entry: via six Pg13.5 nylon glands.

Cable terminals: for up to 2.5 mm² finished wires.

Protection: Weather resistant to IP65, NEMA 4X, CSA Type 3S

Mounting: Pipe, wall or panel, using optional bracket.

Data protection

Non volatile memory for configuration and logbook, and lithium battery for clock support.

Watchdog timer

Checks microprocessor

Automatic safeguard

Return to measuring mode when no keystroke is made for 10 min.

Power interruption

Less than 50 milliseconds no effect.

Operation protection

3-digit programmable password.

2.3 Model and suffix codes

[Style: S3]

Model Suffix code		ode	Option code	Description		
DO402G		••••••		••••••	Dissolved Oxygen Converter	
Туре	-1			•••••	General	
Power Supply		-1		•••••	115 V +/-15% AC, 50/60 Hz (*2)	
Voltage		-2		•••••	230 V +/-15% AC, 50/60 Hz	
		-5		•••••	100 V +/-15% AC, 50/60 Hz	
Language			-E		English	
			-J	•••••	Japanese	
Options		/ U		/U	Pipe, wall mounting bracket (Stainless steel)	
		/PM		1	Panel mounting bracket (Stainless steel)	
				/H3	Hood for sun protection (Carbon steel)	
		/H4		1'	Hood for sun protection (Stainless steel)	
		1		/SCT	Stainless steel tag plate	
				/AFTG	G 1/2	
				/ANSI	1/2 NPT	
				/X1	Epoxy baked finish (*1)	

The housing is coated with epoxy resin. When CSA safe standard conformity product is needed, select 115V "-1" of Power Supply Voltage.

3. Installation and Wiring

3.1 Installation and dimensions



CAUTION

Installation must be performed by a qualified personnel. If this rules is not followed and a damage occurs, Yokogawa will not be held responsible.

3.1.1 Installation site



CAUTION

This instrument is a Class A product, and it is designed for use in the industrial environment. Please use this instrument in the industrial environment only.

The EXA converter is weatherproof and can be installed inside or outside. It should, however, be installed as close as possible to the sensor to avoid long cable runs between sensor and converter. In any case, the cable length should not exceed 50 meters (162 feet). For an optical dissolved oxygen sensor, the allowable maximum cable length is 10 m. Select an installation site where:

- Mechanical vibrations and shocks are negligible
- No relay/power switches are in the direct environment
- · Access is possible to the cable glands (see figure 3.1)
- · The converter is not mounted in direct sunlight or severe weather conditions
- Maintenance procedures are possible (avoiding corrosive environments)

The ambient temperature and humidity of the installation environment must be within the limits of the instrument specifications. (See chapter 2).

3.1.2 Mounting methods

Refer to figures 3.2 and 3.3. Note that the EXA converter has universal mounting capabilities:

- · Panel mounting using optional brackets
- Surface mounting on a plate (using bolts from the back)
- Wall mounting on a bracket (for example, on a solid wall)
- Pipe mounting using a bracket on a horizontal or vertical pipe (maximum pipe diameter 50 A)

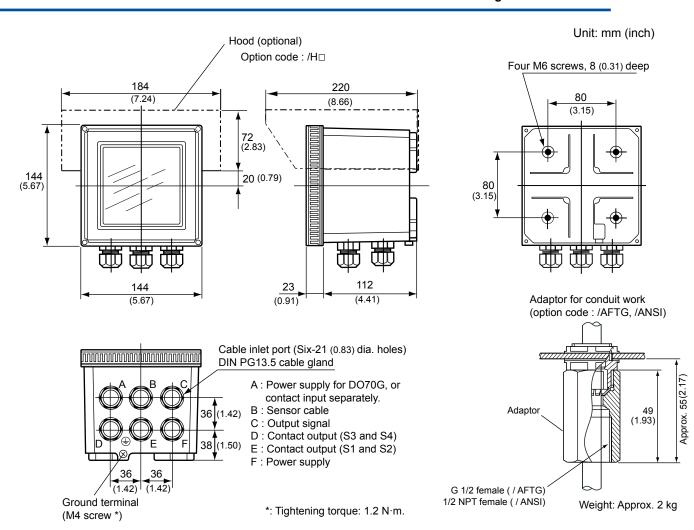


Figure 3.1 Housing dimensions and layout of glands



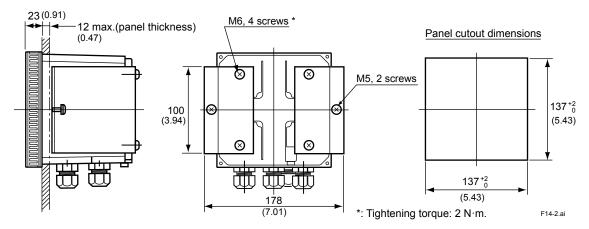


Figure 3.2 Panel mounting diagram (Option Code: /PM)


Example of bracket used for pipe mounting

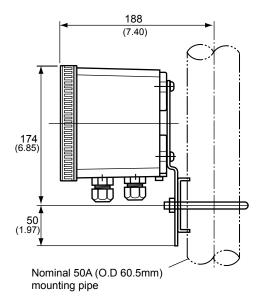

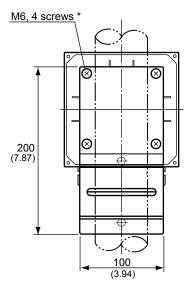

M6, 4 screws *

Example of bracket used for wall mounting

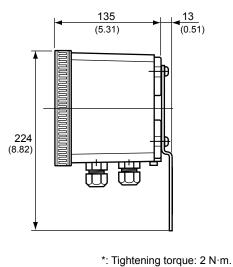

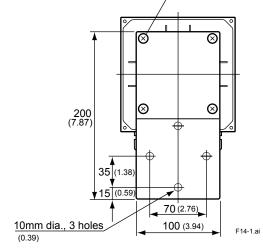


Figure 3.3 Wall and pipe mounting diagram (Option Code: /U)


3.2 Wiring



CAUTION

Wiring must be performed by a qualified personnel. If this rules is not followed and a damage occurs, Yokogawa will not be held responsible.

3.2.1 Wiring of DO30G

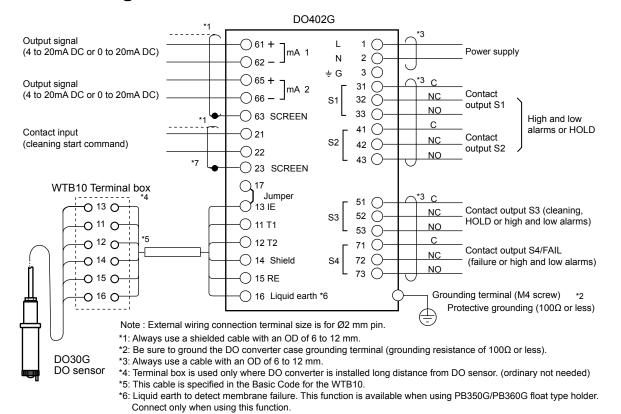

*7: In the case of use of contact input, refer to item 3.3.2.

Figure 3.4 Wiring of DO30G (Example)

3.2.2 Wiring of DO70G

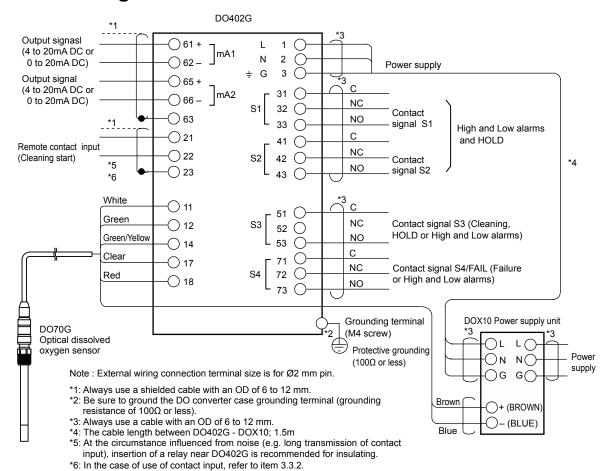


Figure 3.5 Wiring of DO70G (Example)



WARNING

Never apply power to the DO402G converter and other instruments connected to the DO402G converter until all wiring is completed.



WARNING

This product complies with the CE marking.

Where compliance with the CE marking and relevant standard is necessary, the following wiring is required.

- 1. Install an external switch or circuit breaker to the power supply of the DO402G converter.
- Use an external switch or circuit breaker rated 5A and conforming to IEC 60947-1 or IEC 60947-3.
- 3. It is recommended that the external switch or circuit breaker be installed in the same room as the DO402G converter.
- 4. The external switch or circuit breaker should be installed within reach of the operator and identified with marking as a power supply switch to the DO402G converter.
- 5. Power lines such as power cables and contact outputs should be fixed securely onto a wall or construction using cable racks, conduit tubing, nylon bands or other appropriate ways. Accidental removal from terminals by pulling may result in electric shock.

3.2.3 Preparation

The relay contact terminals and power supply connections are under the screening (shielding) plate.

These should be connected first. Connect the sensor, outputs and data communication connections last.

Follow the procedures below to open the DO402G for wiring:

- Loosen the four frontplate screws and remove the cover.
- 2. Use the rubber knob in the lower right hand corner and swing open the display board to the left.
- 3. The upper terminal strip is now visible.
- 4. Remove the screen (shield) plate covering the lower terminal strip.
- 5. Connect the power supply and contact outputs. Use the three glands at the back for these cables.
- 6. Replace the screen (shield) plate over the lower terminals.



WARNING

Always replace the screen plate over the power and contact outputs for safety and to avoid interference.

- 7. Connect the analog output(s), the sensor input, the contact input and, if necessary, the RS-485 serial bus.
- 8. Use the front three glands for analog output, sensor input, contact input and communication cabling (see figure 3.7).
- 9. Close the display board and switch on the power. Commission the instrument as required or use the default settings.
- 10. Replace the cover and secure frontplate with the four screws. Tighten four frontplate screws to 1.5 N⋅m torque.



CAUTION

For wiring, use cables with a heat resistance of at least 70°C.



CAUTION

Tighten the cable glands to 1.5 N•m torque. Torque less than 1.5 N•m cannot maintain the IP65 protection level.

3.3 Wiring the power supply

3.3.1 General precautions

Make sure the power supply is switched off. Also, make sure that the power supply is correct for the specifications of the EXA and that the voltage specified on the nameplate on the left side of the DO402G is satisfied.

Local health and safety regulations may require an external circuit breaker to be installed. The instrument is protected internally by a fuse. The fuse rating is dependent on the supply to the instrument. The 250 VAC fuses should be of the "time-lag" type, conforming to IEC60127.

The internal fuse is located next to the power terminals (in the lower right hand corner).



WARNING

Use only a fuse of the specified current, voltage and type ratings to prevent fire. For fuse replacement, refer to Section 7.3, "Fuse Replacement."

3.3.2 Access to terminal and cable entry

Terminals 1 and 2 on the bottom terminal strip are used for the power supply. Guide the power cables through the gland closest to the power supply terminals. Use 2.5 mm² (14 AWG) wires to connect to the terminals.

We recommend that the cables be terminated with pin terminals (see figure 3.6).

Connect the wires as indicated in the wiring diagram (refer to figure 3.7).



CAUTION

Use cables whose outer diameter is 6 to 12 mm.

For power cables, use cables that comply with UL2556VM-1 or equivalent. Tighten the cables to 0.5 N•m torque.


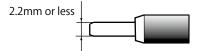


Figure 3.6 Pin terminal

Table 3.1 Connection method

	Power supply, contact output	Others		
Power supply connection method	Pin form crimp terminal with the insulation sleeve			
Conformity shape	2.5 mm2 (14 AWG)	0.13 to 2.5 mm2 (26 to 14 AWG)		
Clamping torque	0.5 N•m			
Crimp terminal example (Type)	Product made in wide Muller: H2.5/7, H2.5/10, H2.5/12, H2.5/18, H2.5/14D, H2.5/18D, H2.5/24D	Product made in wide Muller: (include the left model) H0.25/5, H0.5/6, H0.5/10, H0.75/6, H0.75/10, H1/6, H1/10, H1.5/7, H1.5/10, H1.5/12, H1.5/18, H0.14/10, H0.14/12, H0.25/10, H0.25/12, H0.34/10, H0.34/12, H0.5/10, H0.5/12, H0.5/14, H0.5/16, H0.75/12, H0.75/14, H0.75/16, H0.75/18H1/12, H1/14, H1/16, H1/18, H1.5/14, H1.5/16, H1.5/24		

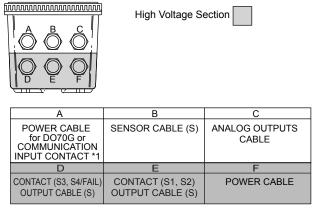

Suitable for cables with an outside diameter between 6 - 12 mm (0.24 - 0.47 in.)

*1: Use D or E for cable gland of DO70G power cable when both DO70G and contact input are used.

Figure 3.7 Glands to be used for cabling



WARNING

When connecting an external device, install and wire it so that requirements of the standard to which the device complies are met.



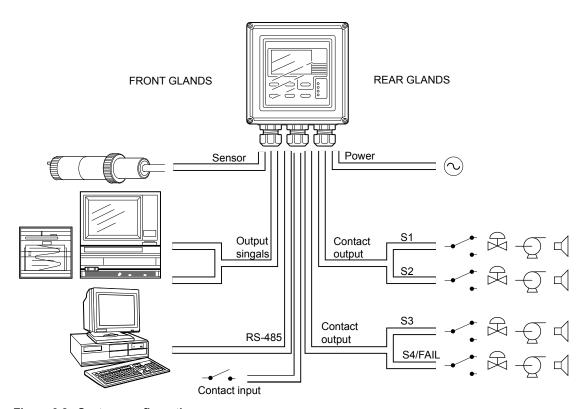


Figure 3.8 System configuration

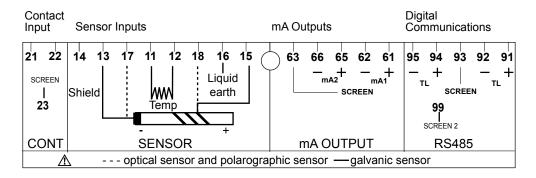

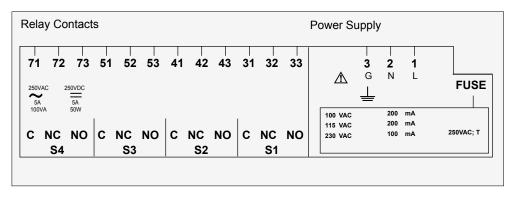

High voltage compartment

Figure 3.9 Input and output connections

Connect terminal 1 to the phase line of the AC power and terminal 2 to the zero line. The size of conductors should be at least 1.25 mm². The overall cable diameter should be between 6 & 12 mm (0.24 & 0.47 in).

3.3.4 Grounding the housing



WARNING

Protective grounding must be made to prevent electric shock.

To protect the instrument against interference, the housing should be connected to ground by a large area conductor. This cable can be fixed to the rear of the housing using a braided wire cable. See figure 3.10. This is separated from input ground by a galvanic isolation.

The internal grounding terminal is not the protective grounding terminal.



CAUTION

Please be sure to connect protective grounding of DO402G with cable of 1.25 mm² or larger cross section in order to avoid the electrical shock to the operators and maintenance engineers and prevent the influence of external noise. In addition, use cables whose colors are green and yellow stripes.

And further connect the grounding wire to the \bigoplus mark (100 Ω or less).

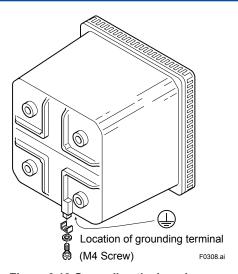


Figure 3.10 Grounding the housing

3.3.5 Switching on the instrument

After all connections are made and checked, the power can be switched on from the power supply.

Make sure the LCD display comes on. All segments will illuminate, then the instrument will momentarily display its unique serial number. After a brief interval, the display will change to the measured value. If errors are displayed or a valid measured value is not shown, consult the troubleshooting section (Chapter 8) before calling Yokogawa.

3.4 Wiring the contact signals



WARNING

There are high-voltage sections on the EXA. Be sure to turn off the power before wiring.

3.4.1 General precautions

The contact output signals consist of voltage-free relay contacts for switching electrical appliances (SPDT). They can also be used as digital outputs to signal processing equipment (such as a controller or PLC). It is possible to use multi-core cables for the contact in and output signals and shielded multi-core cable for the analog signals.

We recommend that the cables be terminated with pin terminals (see figure 3.6).

3.4.2 Contact outputs

The EXA unit's four contact outputs can be wired to suit your own custom requirements (Figure 3.8).

In the Non-Alarm or Power Off states, contacts S1, S2 and S3 are OFF, Common (C) and Normally Closed (NC) are in contact.

In the "Fail" or Power Off states, contact S4 is ON, Common (C) and Normally Closed (NC) are in contact.

You can either use them to switch AC power, or switch a DC Voltage for digital interfacing.

Default settings

- The contact S1 is pre-programmed for high alarm function.
- The contact S2 is pre-programmed for a low alarm function.
- The contact S3 is pre-programmed for wash function.
- The contact S4 is pre-programmed for FAIL.

The three control contacts (S1 to S3) can be used for simple process control by programming their function (Chapter 5). The FAIL contact is programmed to signal a fault in the measuring loop. Always connect the FAIL contact to an alarm device such as a warning light, sound annunciator, or alarm panel to make full use of the fault detection possibilities (self diagnostics) of the EXA converter.

When using ON/OFF signals whose voltage is 3.3 VAC or 70 VDC or higher, use 2.5 mm² (AWG14) wires. If using voltages lower these voltages, select wires in the range of 0.13 to 2.5 mm² (AWG26 to AWG14) according to the current capacity of the connected load.

Use cables that comply with UL2556VM-1 or equivalent and whose outer diameter is 6 to 12 mm. Tighten the cables to 0.5 N•m torque.

3.4.3 Contact input

Voltage-free contact (do not apply voltage)

Wash start or input remote range change (either choice)

It is necessary to use screening/shielding on the output signal cables. Screw (M3) 23 is used to connect the shielding.

On resistance: 10Ω or less Off resistance: $100 k\Omega$ or more

Select wires in the range of 0.13 to 2.5 mm² (AWG26 to AWG14) according to the current capacity of the connected load.

Use cables that comply with UL2556VM-1 or equivalent and whose outer diameter is 6 to 12 mm. Tighten the cables to 0.5 N•m torque.

3.5 Wiring the analog output signals

3.5.1 General precautions

The analog output signals of the EXA transmit low power standard industry signals to peripherals like control systems or strip-chart recorders (Figure 3.8).

Do not apply voltage.

Select wires in the range of 0.13 to 2.5 $\,\mathrm{mm^2}$ (AWG26 to AWG14) according to the current capacity of the connected load.

Use cables that comply with UL2556VM-1 or equivalent and whose outer diameter is 6 to 12 mm. Tighten the cables to 0.5 N•m torque.

We recommend that the cables be terminated with pin terminals (see figure 3.6).

3.5.2 Analog output signals

The output signals consist of active current signals of either 0-20 mA or 4-20 mA. The maximum load can be 600 ohms on each.

It should be necessary to use screening/shielding on the output signal cables. Terminal 63 is used to connect the shielding.

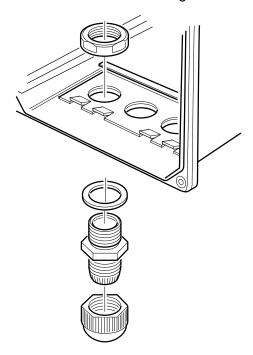


Figure 3.11 Cable gland assembly

3.6 Wiring the standard galvanic sensor

Do not use cables other than the dedicated cables.

Tighten the cables to 0.5 N•m torque.

The sensor cable has markers on the individual wires.

These markings refer to the markers on the terminals.

The temperature compensator has two wires with the markings T1, T2 and/or 11, 12 and must be connected to terminal 11 and 12.

The measuring electrode: the cathode is marked with IE and/or 13 and must be connected to terminal 13.

The reference electrode: the anode is marked with RE and/or 15 and must be connected to terminal 15.

The liquid earth (solution ground) is marked with 16 and must be connected to terminal 16.



CAUTION

The liquid earth (solution ground) connection is valid only when the floating ball holder, Model PB350G or PB360G, is used. Otherwise, do not make a connection to terminal 16. The connection, if made, may result in abnormal readings. Even if the floating ball holder is used, when the liquid earth (solution ground) connection is not used, then disconnect the wiring to terminal 16. (The disconnected wire should be covered with an insulating tube to avoid contact with other terminals.)

The overall shield of the cable is marked with 14 and must be connected to terminal 14.



CAUTION

A jumper cable is placed to connect converter terminals 13 and 17.

Make sure that connecting the sensor cable to the IE pin or pin 13 or pulling the sensor cable does not cause the jumper cable to come loose. Insufficient tightening may cause unstable or false measurements.

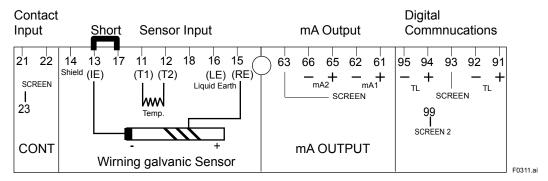


Figure 3.12 Wiring galvanic sensor

3.7 Wiring other galvanic sensors

Consult the users manual for the color identification of the sensor cable and connect temperature compensator, cathode and anode to the terminals: 11, 12, 13 and 15 as described above.

Connect the cable shield to 14 if there is one available. Sensor diagnostics is normally not possible.

Connect any of the following temperature compensators: PT100, PT1000, PB36, 22kNTC

Connect only to the cathode and anode of galvanic sensors.

Do not connect to other devices.



CAUTION

A jumper cable is placed to connect converter terminals 13 and 17.

Make sure that connecting the sensor cable to the IE pin or pin 13 or pulling the sensor cable does not cause the jumper cable to come loose. Insufficient tightening may cause unstable or false measurements.

3.8 Wiring the standard optical sensor (DO70G)

NOTE

A jumper cable is placed to connect converter terminals 13 and 17.

When a standard optical sensor (DO70G) is to be connected, the cable is not used, so disconnect it. It is recommended to save the jumper cable for future use—if may be needed when a galvanic sensor is used.

The color of the wiring of the sensor cable supports the indication of each terminal.

Color of sensor cable	White	Green	Green/Yellow	Clear	Red	Brown	Blue
DO402G	11	12	14	17	18		
DOX10						+	-

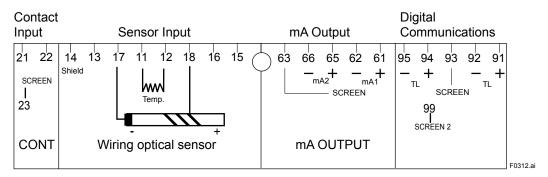


Figure 3.13 Wiring optical sensor

For the power supply wiring of the DOX10, see section 3.3.

Tighten the DOX10 cable glands to 1.5 N·m torque.

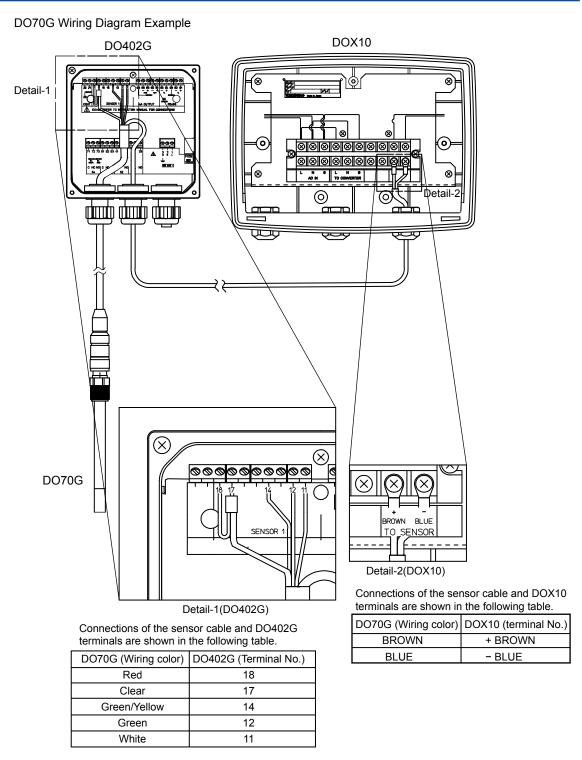


Figure 3.14 Wiring optical sensor (DO70G)

3.9 Wiring polarographic sensors

Consult the owners manual for the color identification of the sensor cable and connect temperature compensator, cathode and anode to terminals 11, 12, 17 and 18 in this sequence.

Connect the cable shield (when provided) to terminal 14.



CAUTION

A jumper cable is placed to connect converter terminals 13 and 17.

When a polarographic sensor is to be connected, the cable is not used, so disconnect it.

It is recommended to save the jumper cable for future use—if may be needed when a galvanic sensor is used.

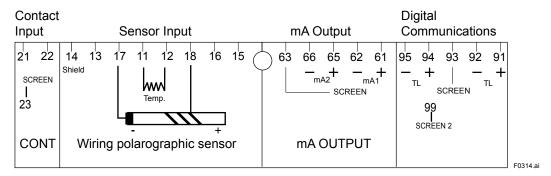


Figure 3.15 Wiring polarographic sensor

Connect any of the following temperature compensators: PT100, PT1000, PB36, 22kNTC Connect only to the cathode and anode of galvanic sensors.

Do not connect to other devices.

3.10 Wiring RS-485 signal

It is necessary to use screening/shielding on the output signal cables. Screw (M3) 99 is used to connect the shielding.

4. Operation; Display Functions And Setting

4.1 Operator interface

This section provides an overview of the operation of the EXA operator interface. The basic procedures for obtaining access to the three levels of operation are described briefly. For a step-by-step guide to data entry, refer to the relevant section of this instruction manual. Figure 4.1 shows the EXA operator interface.

LEVEL 1: Maintenance

These functions are accessible by pushbutton through a flexible front cover window. The functions make up the normal day-to-day operations that an operator may be required to complete. Adjustment of the display and routine calibration are among the features accessible in this way. (See table 4.1).

LEVEL 2: Commissioning

A second menu is exposed when the EXA front cover is removed and the display board is revealed. Users gain access to this menu by pressing the button marked * in the lower right of the display board. This menu is used to set such values as the output ranges and hold and wash features. It also gives access to the service menu. (See table 4.1).

LEVEL 3: Service

For more advanced configuration selections, press the button marked *, then press "NO" repeatedly until you reach *SERV. Now push the "YES" button. Selecting and entering "Service Code" numbers in the commissioning menu provide access to the more advanced functions. An explanation of the Service Codes is listed in chapter 5 and an overview table is shown in chapter 10.

Table 4.1 Operations overview

	Routine	Function	Chapter
Maintenance	AIR.CAL	Calibration in air (preferred method)	6
(level 1)	H2O.CAL	Calibration in aerated water	6
,	MAN.CAL	Process calibration based on grab sample	6
	DISP	Read auxiliary data and set message display	4
	HOLD	Switch HOLD on/off *	5
	SETP	Adjust alarm setpoints *	5
	WASH	Start wash cycle manually *	5
	M.TEMP	Adjust manual temp *	5
	M.PRESS	Adjust manual press	5
Commissioning	*SETP	Adjust alarm setpoints	5
(level 2)	*RANGE	Adjust output range(s)	5
,	*HOLD	Activate HOLD function	5
	*WASH	Activate and configure the wash timer	5
Service	*SERV	Configure the specialized functions of the	5
(level 3)		converter	

^{*:} Only possible if activated

NOTE: All three levels may be separately protected by a password. See Service Code 52 in chapter 5 Service Code table for details on setting passwords.

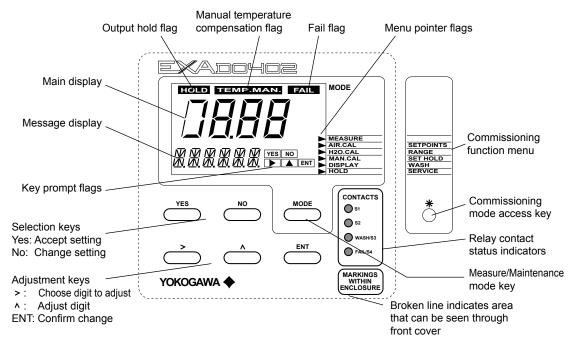


Figure 4.1 DO402 operator interface

4.2 Explanation of operating keys

MODE key

This key toggles between the Measuring and Maintenance modes. Press once to obtain access to the maintenance function menu. (Level 1 see table 4.1) Press again to return to the Measuring mode (press twice when hold is activated).

YES/NO keys

These are used to select choices from the menu.

YES is used to accept a menu selection.

NO is used to reject a selection, or to move ahead to the next option.

DATA ENTRY keys (> ^ ENT)

- > is used as a "cursor" key. Each press on this key moves the cursor or flashing digit one place to the right. This is used to select the digit to be changed when entering numerical data.
- is used to change the value of a selected digit. Each press on this key increases the value by one unit. The value can not be decreased, so in order to obtain a lower value, increase past nine to zero, then increase to the required number.
- ENT When the required value has been set using the > and ^ keys, press ENT to confirm the data entry. Please note that the EXA 402 does not register any change of data until the ENT key is pressed.

* key

This is the Commissioning mode key. It is used to obtain access to the Commissioning menu. This can only be done with the cover removed or opened. Once this button has been used to initiate the Commissioning menu, follow the prompts and use the other keys as described above.

4.3 Setting passcodes

In Service Code 52, EXA users can set passcode protection for each one of the three operating levels, or for any one or two of the three levels. This procedure should be completed after the initial commissioning (setup) of the instrument. The passcodes should then be recorded safely for future reference.

When passcodes have been set, the following additional steps are introduced to the configuration and programming operations:

Maintenance

Press MODE key. The display shows 000 and *PASS*

Enter a 3-digit passcode as set in Service Code 52 to obtain access to the Maintenance Mode

Commissioning

Press * key. The display shows 000 and *PASS*

Enter a 3-digit passcode as set in Service Code 52 to obtain access to the Commissioning Mode.

Service


From the commissioning menu, select *SERV by pressing YES key. The display shows 000 and *PASS*

Enter a 3-digit passcode as set in Service Code 52 to obtain access to the Service Mode.

NOTE

See Service Code 52 for the setting of passcodes.

4.4 Display functions (default)

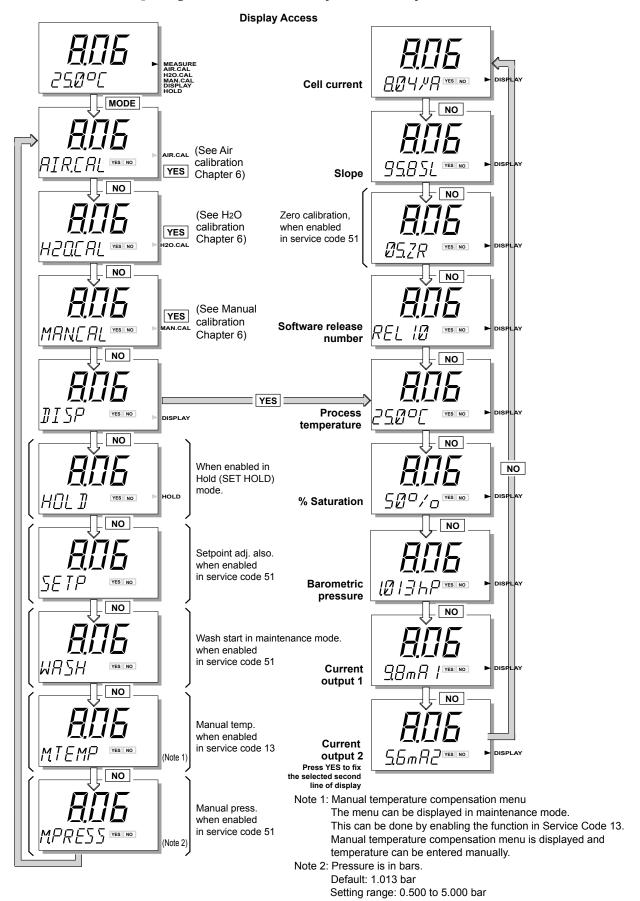

Parameter setting 5.

5.1 **Maintenance mode**

Standard operation of the EXA instrument involves use of the maintenance (or operating) mode to set up some of the parameters.

Access to the Maintenance mode is available via the six keys that can be pressed through the flexible window in the instrument cover. Press the MODE key once to enter this dialog mode.

Note: At this stage the user will be prompted for pass code where this has been previously set up in service code 52 in chapter 5.

Air calibration AIR.CAL

See "calibration" section 6.

H2O calibration

See "calibration" section 6.

H2O.CAL

H2O.CAL

Manual calibration MAN.CAL

See "calibration" section 6.

Display

See "operation" section 4.

DISP

WASH

Setpoint Select and adjust setpoint (when enabled in service menu section 5. SETP

service code 51). See section 5.4 for adjustment procedure.

Wash Manually start/stop wash cleaning (when enabled in service menu section

5, service code 51). See section 5-3 for adjustment procedure.

Hold Manually switch on/off HOLD (when enabled in commissioning menu

HOLD section).

See section 5-2 for adjustment procedure.

Manual temperature

M.TEMP

Manually input a temperature value for a sensor without a temperature sensor (when enabled in service menu section 4, service code 13). See

section 4.4 for adjustment procedure.

Manual pressure


M.PRESS

Manually input a pressure value when the pressure sensor in the DO402G

is not used (when enabled in service menu section 4, service code 51).


See section 4-4 for adjustment procedure.

5.1.1 Manual activation of Hold

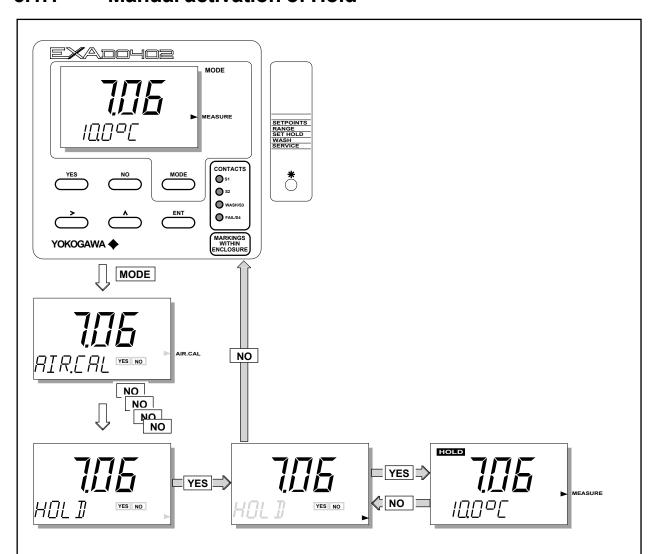

Note: The HOLD feature must first be activated in the commissioning mode section 5.2.3. Refer to note of section 5.2.3. Hold also.

5.1.2 Manual Wash start/stop

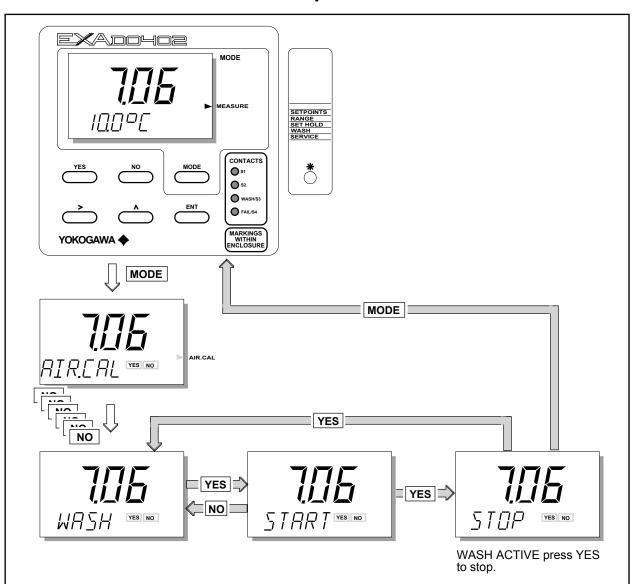

Note: Relay S3 must first be set for "WASH" in service code 42.


Manual wash start/stop is enabled with Service code 51.

Refer to commissioning mode section 5.2.4 for automatic cycle timing setup.

Manual temperature adjustgment menu is added to the maintenance mode

Manual temperature adjustgment is only visible if the manual temperature in service code 13 is enabled. When the manual temperature is entered, set the manual temperature and press enter.

5.1.3 Setpoint adjustment

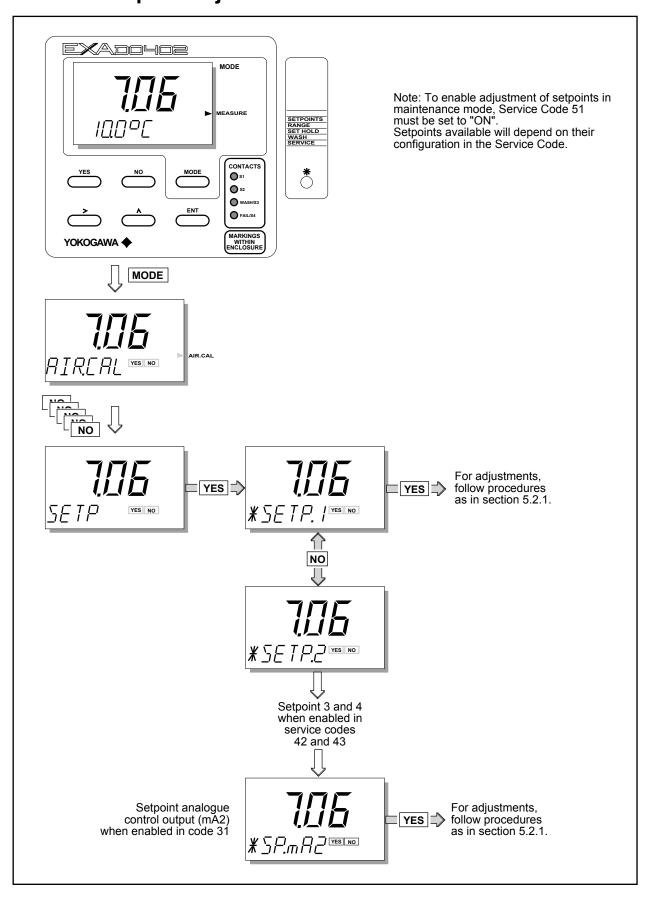

5.2 Commissioning mode

In order to obtain peak performance from the EXA converter, you must set it up for each custom application. Refer to section 1-4 for standard configurations and options.

*SETP Alarms are set by default S1 - high process alarm

S2 - low process alarm

S3 - WASH S4 - FAIL

The setpoints are at arbitrary default value. Therefore, you must set these to meaningful values, or set them to off. (See service codes 40 to 49 and

user interface codes 50 to 59).

*RANGE mA output 1 is set as default to 0 - 20 mg/L

mA output 2 is set as default to 0 - 50 °C

For enhanced resolution in more stable measuring processes, it may be desirable to select 0 - 5 mg/L range, for example, and maybe 0 - 25 $^{\circ}$ C

temperature range.

Service codes 30 to 39 can be used to choose other output parameters

on mA output 2.

*HOLD The EXA converter has the ability to "hold" the output during maintenance

periods. This parameter should be set up to hold the last measured value,

or a fixed value to suit the process.

*WASH The EXA can be set up to control a wash cleaner. When using this


function, the timings must be configured for interval, wash and recovery


periods.

*SERV This selection provides access to the service menu.


What follows are pictorial descriptions of typical frontplate pushbutton sequences for each parameter setting function. By following the simple YES/NO prompts and arrow keys, users can navigate through the process of setting range, setpoints, hold, wash and service functions.

5.2.1 Setpoints

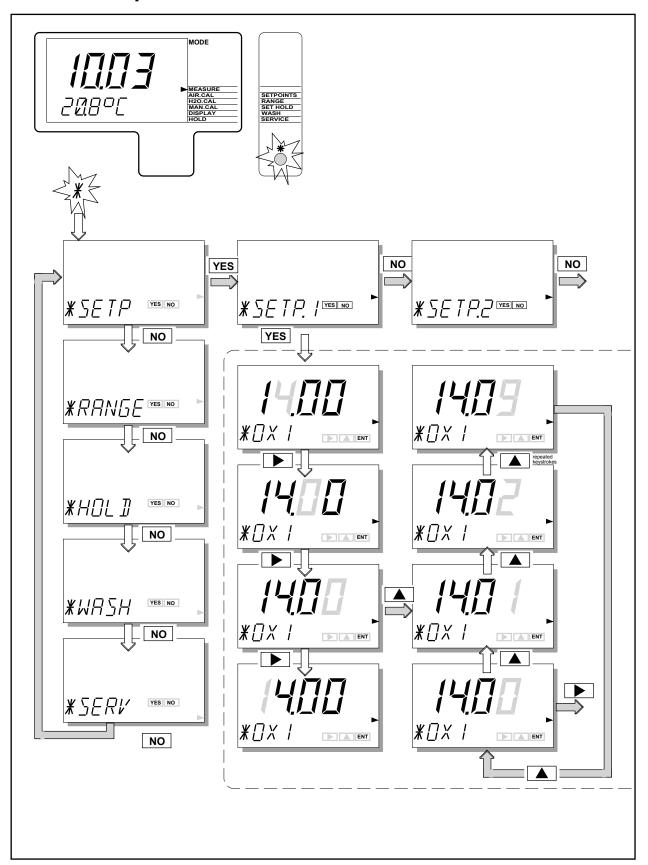

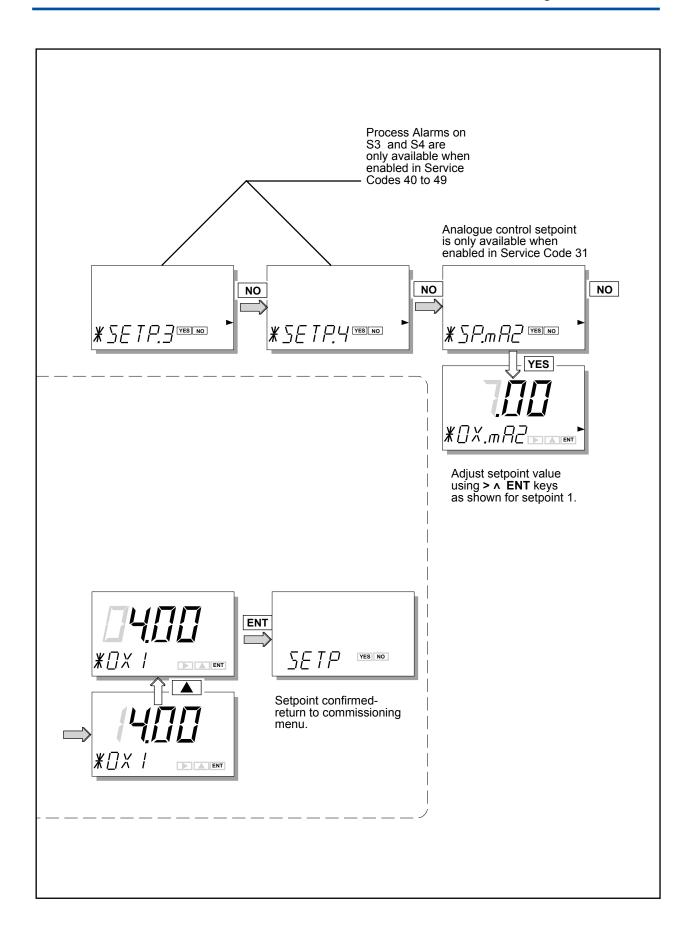


5.2.2 Range

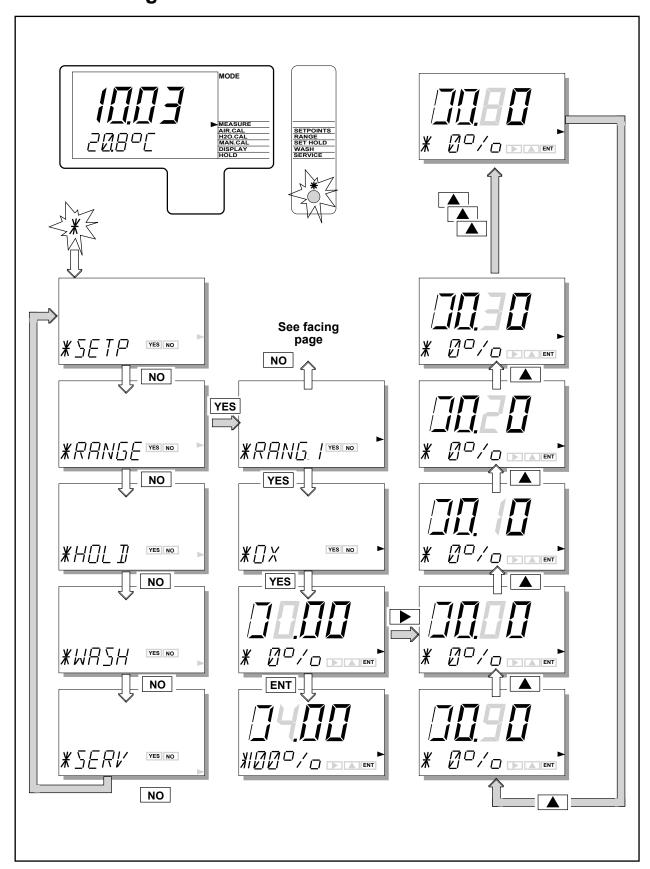

Choose Range to adjust, then set begin scale (0%) and end scale (100%) of the mA output signal, using the >, A ,and ENT keys. Selection of mA output(0-20 / 4-20 mA) is in Service Code 30. Range Selection Options Note: Range 2 does not appear are determined by Service when PI control or table set Code 31 on mA2 YES OR I #RNG. 11 YES NO *X* □ X *TEMP YES NO YES NO NO YES YES *RANG.2 YES NO ENT #1000/0 DAENT #1004/0 DA ENT ENT ENT Range values set, returnto commission mode. *RANGE YES NO *RANGE YES NO


5.2.3 Hold

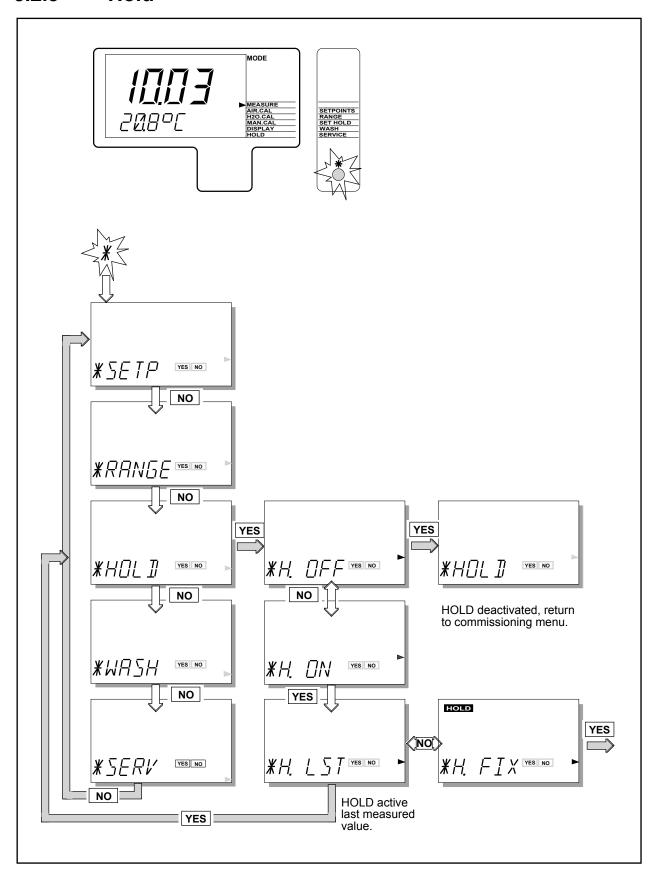


When using "wash" and active HOLD for maintenance, "wash" should be OFF in the commissioning mode section 5.2.4. After that, "wash" should be ON again for returning to measurement mode.

Note: HOLD will be non-activated at automatic wash cycle timing when "wash" is ON in the commissioning mode section 5.2.4.


HOLD values set,return to commissioning menu.

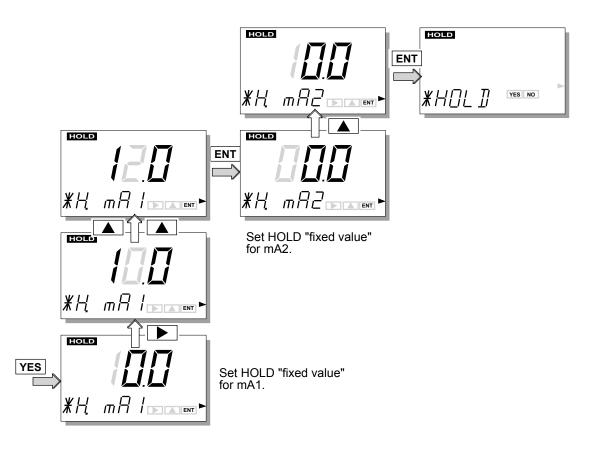

5.2.4 Wash

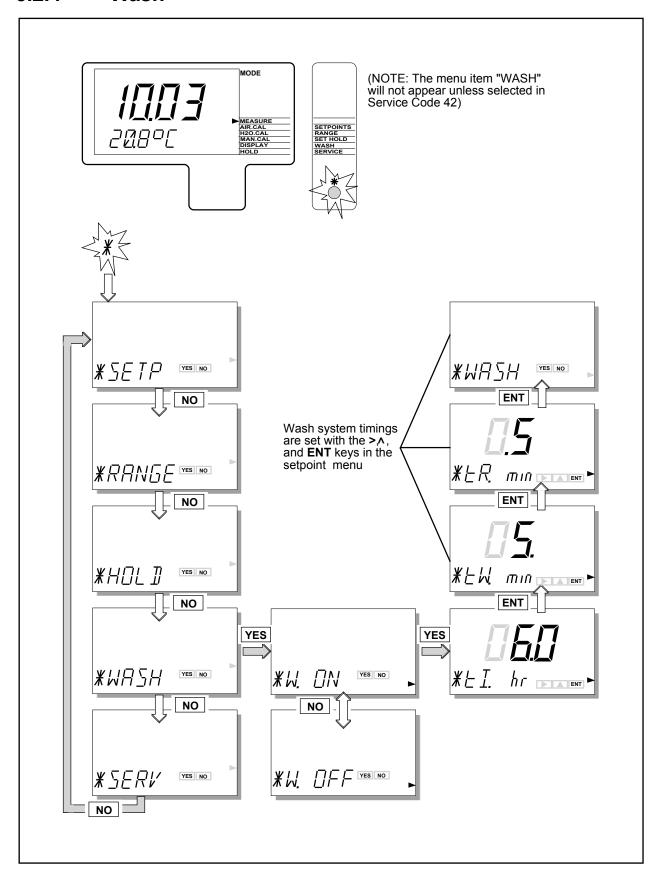

5.2.5 Service

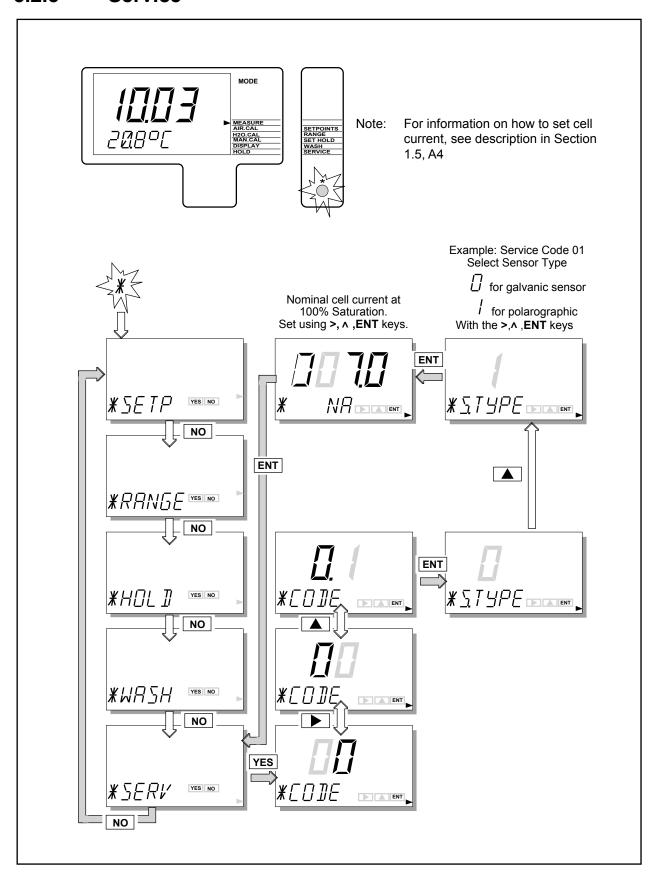

5.3 Notes for guidance in the use of service coded settings

5.3.1 Parameter specific functions

Code 01 *S.TYPE

Select 0 for DO30 sensor or other galvanic sensor. Select 1 for SM31, other polarographic sensor and optical dissolved oxygen sensor.

*I.CELL

After selecting sensor type you need to select the nominal cell current. With a galvanic sensor 3 choices are offered.

Select 0 for DO30 thick (50 μ m) membrane with a default of 3.75 μ A. Select 1 for DO30 thin (25 μ m) membrane with a default of 7.5 μ A. Select 9 for user definable. This can be set to suit any galvanic sensor.

With polarographic sensor 2 choices are offered.

Select 0 for SM31 sensor with a nominal cell current of 50 nA.

Select 9 for other polarographic sensor, with the nominal cell current to be user defined.

Select 9 for the DO70G sensor and input the nominal cell current of 60 nA.

General Note: Dissolved oxygen sensors fall into two categories –

galvanic and polarographic. Yokogawa offer both types:

Settings for Yokogawa Sensors

	DO30	DO30	SM31.	DO70G
Membrane	Thick	Thin	Sterilizable	Fluorescence
*S.TYPE	0	0	1	1
* I.CELL	0	1	0	9

Code 02 * CHECK

This code is used to set up appropriate diagnostics. In most cases a zero calibration is not used, the default check, therefore, set to "off". When zero check enabled, the maximum permissible zero offset should be set as a signal current.

When slope check enabled, the maximum as minimum calibrated slope values should be set as % of the nominal value.

For the galvanic sensors, a membrane check can be enabled. This is an impedance test to ensure that the membrane is intact.

The membrane check is not available for optical and polarographic sensors, so the membrane check cannot be enabled or disabled.

Code 04 *SAL.TY

Set 0 (salinity compensation disabled) when measuring water not including salinity components. Set 1 (salinity compensation enabled) when manually calibrated to salinity compensation. This is intended for accurately displaying saturated % concentration when measuring sample water. Set 1 (salinity compensation enabled) and then enter NaCl concentration using *[CL-]. For this concentration, enter salinity concentrations in actual sample water used to figure out salinity compensation values.

NOTE

The instrument will not perform salinity compensation simply by setting the salinity compensation to "1" (enabled) in Code 04, but requires the NaCl concentration. For measurement in consideration of the salinity of a sample, first, manually calibrate with values corrected for salinity and enter the NaCl concentration in Code 04. (See Section 6.4, "Calibration method using manual calibration method")

Code	Display	Function	Function detail	X	Υ	Z	Default values		
Parar	neter Spec	ific functions							
01	*S.TYPE	Sensor type	Galvanic	0			0		
			Polarographic	1					
	*I.CELL	Sensor output	3.75 µA for 50 micron type	0			0		
		Galvanic	7.50 µA for 25 micron type	1			7		
			User defined	9			3.75 µA		
	*I.CELL	Sensor output	50 nA	0			0		
		Polarographic	User defined	9			50 nA		
02	*CHECK	ECK Sensor check	Zero check: disabled	0			0.1.0		
			Zero check: enabled	1					
			Slope check: disabled		0				
			Slope check: enabled		1				
			Membrane check: disabled/only for Galvanic			0			
			Membrane check: enabled/only for Galvanic			1	(*1)		
	*ZERO	Maximum permissible	0 to 19.99 μA for Galvanic				0.5 μΑ		
		Zero offset	0 to 199.9 nA for Polarographic				5 nA		
	*SL.MIN	Minimum calibrated slope	0 to 99.9%				40%		
	*SL.MAX	Maximum calibrated slope	100 to 400%				200%		
03			Not used						
04	*SAL.TY	Salinity comp.(*2)	Compensation disabled				0		
	*101 1	N of the second	Compensation enabled						
	*[CL-]	NaCl conc.	Concentration in g/kg water: range 0.1 to 99.9 g/kg				Valid when code 04 is 1		
05- 09			Not used						

^{(*1):} Membrane check can be enabled when galvanic sensor is selected and cannot be used unless the floating ball holder, PB350G or PB360G, is used.

5.3.2 **Temperature functions**

Code 10	*T.SENS	Select temperature sensor to suit the measuring probe. Refer to instructions with DO sensor for which temperature sensor is used.
Code 11	*T.UNIT	Select °C or °F for temperature display.
Code 12	*T.ADJ	Adjust offset in temperature measurement when the sensor is at a stable known value.
Code 13	*T.MAN	Enable and set manual temperature compensation. After the manual temperature set menu has been displayed, enter temperature signals and press the [ENT] key to set. If the manual temperature compensation is enabled, the temperature set menu is displayed in maintenance mode.

The maximum and minimum slope values that may be entered depend on the nominal current from service code 01.

Example: When nominal current = 3.75 µA the maximum and minimum slope calibration Maximum 3.75 x 2 = 7.5 μ A Minimum 3.75 x 0.4 = 1.5 μ A values that may be entered are:

^{(*2):} The instrument will not perform salinity compensation simply by setting the salinity compensation to "1" (enabled) in Code 04, but requires the NaCl concentration. For measurement in consideration of the salinity of a sample, first, manually calibrate with values corrected for salinity and enter the NaCl concentration in Code 04. (See Section 6-4, "Calibration method using manual calibration method")

(*3): Set 60 nA for the DO70G optical dissolved oxygen sensor.

5.3.3 Calibration functions

Code 20 *ΔT.SEC Set stability parameters for calibration. A greater time, and/or a smaller

step gives

*Δmg/L greater stability before a calibration can be accepted. Use caution,

however, to avoid very long calibration times.

Code 21 *0.CAL In the DO30G sensor or other galvanic sensors and polarographic

sensors, the zero point fluctuates less than the span. Therefore, with the zero check, a zero calibration is not required for these sensors provided that they are used in environments with high-concentration dissolved

oxygen such as aerobic tanks.

The zero calibration is recommended when installing sensors, replacing

membranes, or performing measurement in anaerobic tanks with

lowconcentration dissolved oxygen.

The two-point calibration (zero and span) is necessary for the DO70G optical dissolved oxygen sensor because of its operation principle. Select

1 to enable zero calibration.

NOTE:

The zero point is reset to the default when 0 is set (zero calibration disabled) even after calibration.

Code 22 *ZERO Zero current values can be entered manually. If a zero calibration is made

in maintenance mode, a zero current value will be automatically reset.

NOTE:

A zero current value is displayed only when a zero calibration is enabled in code 21.

*SLOPE Slope values can be manually entered with current values. If a

span calibration is made in maintenance mode, slope values will be

automatically reset.

NOTE:

Slope values can be displayed with current values. When span check functions are enabled in code 02, the above current values are converted to % values and compared with the set values.

Slope % = current sensitive current /reference sensitive current

Code	Display	Function	Function detail	X	Υ	Z	Default values
Temp	erature Me	asuring Functions					
10	*T.SENS	Temp. Comp.	Pt100 RTD	0			
			Pt1000 RTD (DO30)	1			1
			PB36 = 2k2 NTC	2			
			22k NTC (SM31) (DO70G)	3			
11	*T.UNIT	Temp units	Celsius	0			0
			Fahrenheit	1			
12	*T.ADJ	Temp adjust	Adjustment +/- 7.5 °C or +/- 13.5 °F				
13	*T.MAN	Manual TC	Automatic temperature comp				0
			Manual temp compensation				25 °C/ 77 °F
14- 19			Not used				

Code	Display	Function	Function detail	Х	Υ	Z	Default values	
Calib	ration Setti	ngs						
20	*ΔT.SEC	Stabilization	Stabilisation time range 10- 600 s	60 s			60 s	
	*Δmg/L Step		DO step change range 0-50 mg/L or 0-300 %				0.05 mg/L	
21	*0.CAL	Zero cal.	Zero calibration disabled	0			0	
			Zero Calibration enabled	1				
22	*ZERO	Zero entry	Galvanic: In case that zero check is activated in code 02 within *I.CELL value set in code 02 In case that zero check is not activated in code 02 ±19.99 µA				00.00 μA 000.0 nA	
			Polarographic: In case that zero check is activated in code 02 within *I.CELL value set in code 02 In case that zero check is not activated in code 02 ±199.9 nA					
	*SLOPE	Slope entry	Minimum setting (*I.CELL set in code 01) × (*SL.MIN set in code 02) Maximum setting (*I.CELL set in code 01) × (*SL.MAX set in code 02)				3.75 µA (50 nA)	
23- 29			Not used					

5.3.4 mA output settings

Code 30 Select 0-20 mA or 4-20 mA for each of the mA outputs. *mA Code 31 *OUTP.F Select the parameter to be transmitted on each of the mA outputs. *D/R Select the control action when PI selected on mA2. Direct action gives an increasing output with an increase in measured value. Select "burn-out" signalling of diagnosed failures. Code 32 *BURN Code 33 *RGmA2 Set proportional band for PI control on mA2. Code 34 *tlmA2 Set integral time for PI control on mA2. Code 35-36*TABL1, Set up output linearization tables when selected in code 31. *TABL2 Code 37 *DAMP Set damping time to smooth out erratic process fluctuations.

After enabling range 1B, the user can set this range in commissioning Code 38 *SWTCH

mode. By pressing the external button with range 1B enabled, range 1B will be used instead of the normal range 1, until this button is not pressed

anymore.

Code	Display	Function	Function detail	X	Υ	Z	Default values
mA C	utput Func	tions					
30	*mA	mA output	Output 1 is 0- 20 mA	0			1.1
			Output 1 is 4- 20 mA	1			
			Output 2 is 0- 20 mA		0		
			Output 2 is 4- 20 mA		1		
31	*OUTP.F	Output function	Process value on mA1	0			0.2
			Table on mA1	1			
			Process value on mA2		0		
			Table on mA2		1		
			Temperature on mA2		2		
			PI control on mA2		3		
	*D/R	Control action	Reverse acting PI-control	0			0
			Direct acting PI control	1			
32	*BURN	Burn-out	No burn-out function on mA1	0			0.0
			Burn low on fail on mA1	1			
			Burn high on fail on mA1	2			
			No burn-out function on mA2		0		
			Burn low on fail on mA2		1		
			Burn high on fail on mA2		2		
33	*RGmA2	Prop. range	Proportional band: 0- 50 mg/L				5.0 mg/L
			0-300 % saturation				
34	*tlmA2	Integral time	Integral time in seconds 10 - 1999 s				100 s
35	*TABL1	Table for mA1	21 point table: Process value at				
			0, 5, 100 % of span				none
36	*TABL2	Table for mA2	21 point table: 0, 5, 100 %				none
37	*DAMP	Output damping	damping 0- 120 s				0 s
38	*SWTCH	Range 1B	Disabled	0			0
			Enabled	1			
39			Not used				

Note To enable wash function, set Service Code 38 to 0, Service Code 42 to 4.0.0, and Service Code 51 to 0.1.0.

5.3.5 Contact outputs

Code 40, *S1 & *S2 Process relays can be set for a variety of alarm and control function. 41, 42 & 43

Digit "X" sets the type of trigger:

Off means that the relay is not active

Low setpoint means that the relay is triggered by a decreasing measurement.

High setpoint means that the relay is triggered by an increasing measurement "HOLD" active means that there is maintenance activity in progress so the measurement is not live.

For *S3 There is the extra possibility to set up for a wash controller.

For *S4 There is the extra possibility to set up for "FAIL" indication.

Digit "Y" sets the control action:

Process alarm is a simple On/Off trip controlled by the high/low setpoint.

Proportional duty cycle control has a pulse width modulation for proportional dosing with solenoid valves.

Proportional frequency control is used for controlling electrically positioned valves.

. Temperature alarm is an On/Off trip on the measured temperature.

Digit "Z" sets the control parameter:

With or without "integral" action.

Code	Display	Function	Function detail	Х	Υ	Z	Default values
Conta	act Settings	<u> </u>					
40	*S1	Contact S1	Contact 1 inactive	0			2.00
			Low alarm configuration	1			
			High alarm configuration	2			
			Active during HOLD	3			
			Activation by process value		0		
			Proportional duty cycle		1]
			Proportional pulse frequency		2		
			Activation by temperature		3		
			PI control inactive			0	
			PI control active			1	
41	*S2	Contact S2	Contact 2 inactive	0			1.00
			Low alarm configuration	1			
			High alarm configuration	2			
			Active during HOLD	3			
			Activation by process value		0		
			Proportional duty cycle		1		
			Proportional pulse frequency		2		
			Activation by temperature		3		
			PI control inactive			0	
			PI control active			1	
42	*S3	Contact S3	Contact 3 inactive	0			4.00
			Low alarm configuration	1			
			High alarm configuration	2			
			Active during HOLD	3			
			Active during WASH	4			
			Activation by process value		0		
			Proportional duty cycle		1		
			Proportional pulse frequency		2		
			Activation by temperature		3		
			PI control inactive			0	
			PI control active			1	
43	*S4	Contact S4	Contact 4 inactive	0			4.00
			Low alarm configuration	1			
			High alarm configuration	2			
			Active during HOLD	3			
			Active during FAIL	4			
			Activation by process value		0		
			Proportional duty cycle		1		
			Proportional pulse frequency		2		
			Activation by temperature		3]
			PI control inactive			0]
			PI control active			1]

Code 44 *D.TIME The delay time (or dead time) sets the minimum relay switching time. This function can be adjusted to give a good alarm function in a noisy process,

preventing the relay from "chattering" or repeatedly switching when the

signal is close to the setpoint.

*P.HYST The hysteresis is the value beyond the setpoint that the measured value

*T.HYST must exceed before the control function will start working.

Code 45 *RANGE Proportional range is the value above (or below) the setpoint that

generates full output in proportional control.

*PER. The time period of the overall pulse control cycle (one ON and one OFF

period).

*FREQ. The maximum frequency for the pulse frequency control.

Code 46 *tl.CNT The integral time for the PI control settings.

Code 47 *EXPIR When a system is set up to control on the relay outputs, the expiry time

can be enabled to warn of an ineffective control. In other words, when the setpoint is exceeded for more than 15 minutes an error message is generated. This can mean, for example, that the reagent tank is empty.

Code	Display	Function	Function detail	X	Υ	Z	Default values
Conta	acts Setting	js					
44	*D.TIME	Dead Time	Delay after setpoint passed 0- 2.0 s				0.2 s
	*P.HYST	Hysteresis	Process value hysteresis 0-50 mg/L or 0-300 %				0.1 mg/L
	*T.HYST	Temp hyst	Temperature hysteresis 0-5 °C (0-12 °F)				0.5 °C
45	*RANGE	Prop. control	Proportional range 0- 50 mg/L				5.0 mg/L
	*PER.	Duty cycle	Period/ Duty cycle : 5- 100 s				10.0 s
	*FREQ.	Frequency	Frequency control 50 - 120 per min.				70 p.m.
46	*tl.CNT	Integral time	Int. time for contacts 10 - 1999 s				100 s
47	*EXPIR	Time out alarm	Disable time out alarm	0			0
			Enable time out alarm	1			
	*tE.mn		time out alarm after 0.5 - 199.9 min				15 min
48- 49			Not used				

Control and Alarm Functions

Control output (mA): PI control on the 2nd mA output.

The 2nd mA output can be configured to give a P/I (proportional and

integral) control output.

The setpoint, proportional band and integral time are each fully

programmable.

- Adjustable parameters:

Setpoint, proportional range and integral time.

Process alarm: The contact will be switched when the process value reaches a limit.

This can either be a high or low limit.

- Adjustable parameters:

Setpoint for the process value Hysteresis of the switching action Delay

time of the relay (0 to 200 s)

PI duty cycle control (Fig. 1):

The contact is used to control the time a solenoid valve is opened.

The proportional control is achieved by opening and closing the solenoid

valve and varying the ratio of on and off time (on, off).

- Adjustable parameters:

Setpoint, proportional range and integral time. Total period of the pulse period (5 to 100 s)

PI pulse frequency control (Fig. 2):

The contact is used to control a pulse-driven pump.

The frequency of pulses regulates the pump speed.

- Adjustable parameters:

Setpoint, proportional range & integral time. Maximum pulse frequency (50 to 120/min.)

Wash cleaning of sensors (Fig. 3):

Contact S3 is used to control the wash cycle, or as a process alarm.

- Adjustable parameters:

Cleaning time or washing time (tw) Recovery time after washing (tr) Interval time for wash cycle.

The graph shows a typical response curve during washing. The wash and recovery times need to be set to suit the process.

Fault alarm:

Contact S4 by default set to function as an alarm, indicating that the EXA has found a fault in the measuring loop. If the self diagnostics of the EXA indicate a fault or error, the FAIL contact will be switched. In most cases this will be caused by a malfunction of the measuring loop.

The FAIL contact is also closed when the power is removed.

The "FAIL" contact may also be configured as a fourth process alarm.

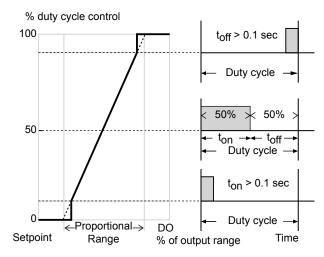


Figure 1 Duty cycle control

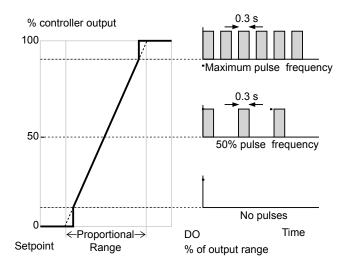


Figure 2 Pulse Frequency control

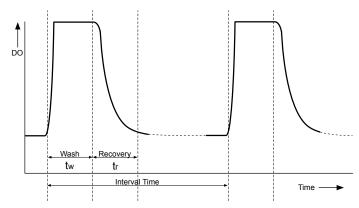


Figure 3 Dynamic response during wash

5.3.6 User interface

Code 50 *RET When Auto return is enabled, the converter reverts to the measuring mode from anywhere in the configuration menus, when no button is

pressed during the set time interval of 10 minutes.

Code 51 *MODE The adjustment of the contact setpoints, and the manual operation of

the wash system can be setup for operation in the maintenance mode. (Through the closed front cover). In maintenance mode the pressure can be entered (M. PRESS). If manual pressure is enabled, a warning is

given when starting manual-, water and air calibration.

Code 52 *PASS Passcodes can be set on any or all of the access levels, to restrict access

to the instrument configuration.

Code 53 *Err.04 Error message configuration. Two different types of failure mode can be

set.

Hard fail gives a steady FAIL flag in the display, and a continuous contact closure. All the other contacts (controls) are inhibited (except HOLD contacts), and a Fail signal is transmitted on the outputs when enabled in

code 32.

Soft fail gives a flashing FAIL flag in the display, and the relay contacts are pulsed. The other contacts (controls) are still functional, and the controller continues to work normally. The call for maintenance is a good example of where a SOFT fail is useful. A warning that the regular maintenance is due, should not be used to shut down the whole measurement. An extra choice is added for Errors set to Soft Fail. It can be set to LCD + Fail contact (current situation) or to LCD only.

Code 54 *E12 Overrange alarm, set limit for supersaturation permissible before FAIL alarm is triggered.

Code 55 *CALL.M Call for maintenance is a contact trigger to signal that the system has been in service for longer than the set time without calibration. The user

can set up to 250 days as a routine service interval.

Code 56 *UNIT Select mg/L, ppm or % saturation as the main unit, to suit the application.

Code	Display	Function	Function deta	il	X	Υ	Z	Default values
User	Interface							
50	*RET	Auto return	No return to meas. from HO	LD	0			1
			Return to meas. after 10 mir	n	1			
51	*MODE	add. to MAINT	Setpoint adj. disabled		0			0.0.0
			Setpoint adj. also in MAINT		1			
			Wash start disabled			0		
			Wash start in maintenance	mode		1		
			Manual pressure disabled				0	
			Manual pressure enabled				1	
52	*PASS	Password	Direct access to MAINT		0		Ė	0.0.0
52	1 700	Pass: 111 for #=1, 333	MAINT protected by passwo	ord	#			0.0.0
		for #=2, 777 for #=3,	Direct access to COMM	Jiu	#	0		-
		888 for #=4, 123 for #=5, 957 for #=6, 331			+			-
			COMM protected by passwo	ora	-	#		
		for #=7, 546 for #=8,	Direct access to SERV		-		0	
		847 for #=9	SERV protected by passwo		-		#	
53	*Err.01	Error setting	Response & Time failure	Soft fail	0			4 111
	*Err.02		Response & Time failure Zero calibration	Hard fail Soft fail	1 0			1 Hard
	E11.02		Zero calibration	Hard fail	1			1 Hard
	*Err.03		Slope calibration	Soft fail	0			i Haiu
			Slope calibration	Hard fail	1			1 Hard
	*Err.04		Membrane failure	Soft fail	0			
			Membrane failure	Hard fail	1			1 Hard
	*Err.07		Temperature sensor open	Soft fail	0			
			Temperature sensor open	Hard fail	1			1 Hard
	*Err.08		Temp. sensor shorted	Soft fail	0			
	*[00		Temp. sensor shorted	Hard fail	1			1 Hard
	*Err.09		Cell current abnormal Cell current abnormal	Soft fail Hard fail	0			1 Hard
	*Err.12		Abnormal measured value	Soft fail	0			I Haiu
	L11.12		Abnormal measured value	Hard fail	1			1 Hard
	*Err.16		Cell for maintenance	Soft fail	Ó			0 Soft
			interval time exceeded					
			Cell for maintenance	Hard fail	1			
	*E 00		interval time exceeded	0 " " "				0.0 %
	*Err.22		Control time-out Control time-out	Soft fail Hard fail	0			0 Soft
	*0057		LCD Fail Constant	паги тап	1			0.1.00.56
	*SOFT				0			0 LCD Fail
	.=		LCD only		1			1-00/
54	*E12	overrange limit	E12 active at 0 - 300 % sat ((Note)				150%
55	*CALL.M	E16 setting	No call for maintenance		0			0
			Call for maint. enabled		1			
			E16 message after 1- 250 d	lays				30
56	*UNIT	PV unit	Unit of measurement mg/L		0			0
			Unit of measurement ppm		1]
			Unit of measurement % sat.		2			1
57-			Not used					
59								
		1	1					i .

Note: For setting a value greater than 199.9, move the decimal point. For a value greater than 200%, decimal places cannot be used.

5.3.7 Communication setup

Code 60 *COMM.

The settings should be adjusted to suit the communicating device connected to the RS-485 port.

*SET. *ADDR.

For the Yokogawa PC402 software package, the default settings match the software as shipped.

Code 61 *HOUR The clock/calendar for the logbook is set for current date and time as reference.

> *SECND *YEAR *MONTH

*MINUT

*DAY

Code 62 *ERASE

Erase logbook function to clear the recorded data for a fresh start. This may be desirable when re-commissioning an instrument that has been out of service for a while.

5.3.8 General

Code 70 *LOAD

The load defaults code allows the instrument to be returned to the default set up with a single operation. This can be useful when wanting to change from one application to another.

5.3.9 Test and setup mode

Code 80 *TEST Not used

Note: Attempting to change data in service code 80 and above without the proper instructions and equipment, can result in corruption of the instrument setup, and will impair the performance of the unit.

Code	Display	Function	Function detail		X	Υ	Z	Default	tvalues
Comr	nunication								
60	*COMM.	Communication	Set communication Set communication Communication write enable Communication write protect	Off On	0	0		0.1	Off write protect
	*SET.	Baud rate & parity	Baud rate Parity	1200 2400 4800 9600 Off Odd Even	0 1 2 3	0 1 2		3.1	9600 Odd
	*ADDR.	Network address	Set address 00 to 15					00	
61	*HOUR *MINUT *SECND *YEAR *MONTH *DAY	Clock setup	Adjust to current date and time using >, ^ and ENT keys						
62	*ERASE	Erase logbook	Press YES to clear logbook da	ata					
63- 69			Not used						

Code	Display	Function	Function detail	X	Υ	Z	Default values
General							
70	*LOAD	Load defaults	Reset configuration to default values				
71-			Not used				
79							

Code	Display	Function	Function detail	X	Υ	Z	Default values
Test and setup mode							
80	*TEST	Test and setup	Not used				

6. Calibration Procesure

Calibration of the dissolved oxygen analyzer is performed in the following situations:

- When a new dissolved oxygen sensor is installed.
- When the membrane is replaced and/or the electrolyte solution is replaced
- When the measuring error after cleaning exceeds the acceptable deviation from reference method
- · When error message E12 or E16 indicates the need for maintenance

NOTE

When a new sensor is installed, when the membrane is replaced, and/or the electrolyte solution is replaced, it may take some time for the electrodes to stabilize due to the initial electrolysis. In particular, a zero calibration should be performed after the electrodes are exposed to the air or immersed in sample water for about half a day. When the sensor cable terminals 13 and 15 are shorted together before installation, the time for the zero point to stabilize can be reduced.

NOTE

It may take a long time for the electrodes to stabilize in the first electrolysis just after installing the DO30G sensor or other galvanic sensors and polarographic sensors, or after replacing the membrane or electrolyte solution. The zero calibration in particular should be carried out after leaving the sensor operating in air or measurement liquid for about half a day. The time for stabilizing the zero point can be reduced by shorting the terminals 13 and 15 of the sensor cable before installation.

6.1 General

6.1.1 Calibration methods

There are three methods for calibration of the EXA dissolved-oxygen analyzer: air calibration, water calibration and manual calibration.

Air calibration

This is the most common and easiest way to calibrate the analyzing system. The calibration is done in AIR.CAL mode in maintenance level.

Water calibration

This is the traditional way to calibrate dissolved oxygen analyzers in laboratory environment. . Accurate results can be obtained if the calibration is performed carefully. The water calibration may include a zero calibration if so selected in service code 21. Normally only a zero check is performed without calibration, since a good sensor has no zero signal.

Always select 1 in service code 21 for the DO70G optical dissolved oxygen sensor.

Water calibration is not possible in salt water unless salinity compensation is activated in service code 04. The calibration is done in H2O.CAL mode in maintenance level.

NOTE

In normal industrial environment better results are obtained with air calibration, which is therefore the recommended method.

Manual calibration

This is a calibration method whereby the sensor is not exposed to a calibration fluid, but is calibrated by comparison with a reference method. This reference method is normally a laboratory analysis of the water sample: either by iodometric titration according ISO 5813 or an electrochemical method according ISO 5814.

The calibration is done in MAN.CAL mode in maintenance level.

NOTE

Calibration must be carried out after changing the manual pressure setting (see service code 51).

When the manual pressure is enabled, air and water calibrations are made based on the specified pressure.

M.PR.ON YES/NO is displayed before the calibration to confirm whether the calibration will be made based on the pressure.

6.1.2 Diagnostic functions performed during calibration

The calibration is a semi-automatic calibration, which means that the sensor output is used for calculation of sensor parameters after the readings have stabilized. The criteria for stabilization are set in service code 20. If stable readings are not achieved within one hour error E1 message will appear on the display and the procedure is aborted. The calculated sensor parameters are compared with preset tolerances and if these conditions are not met, Error E2 (Zero Error) or E3 (Slope Error) will be signalled.

NOTE

- 1. Error messages that appear initially indicate inadequate settings of the diagnostic variables in service codes 01, 20 and/or 22.
- 2. Patience improves the accuracy of calibration. When the EXA prompts the user that the preset criteria are met by showing CAL.END message it only means that the minimum criteria are met. When the signal still changes after this initial acceptance, EXA will automatically update the sensor characteristics with the new information.

6.2 Calibration procedure using air calibration method

6.2.1 Preparation

Move the sensor to a maintenance site and wash off any dirt on the membrane. Lightly wipe off any remaining water from the membrane with a soft tissue.


Expose the sensor to the air in an environment where there is no temperature change and no wind. (A convenient way to accomplish this environment is to place the sensor in an empty bucket)

NOTE

If sensors are used without temperature compensating element, the temperature must be adjusted to ambient temperature in service code 13.

Before zero calibration, see 6.3.1 Preparation

6.2.2 Procedure for air calibration

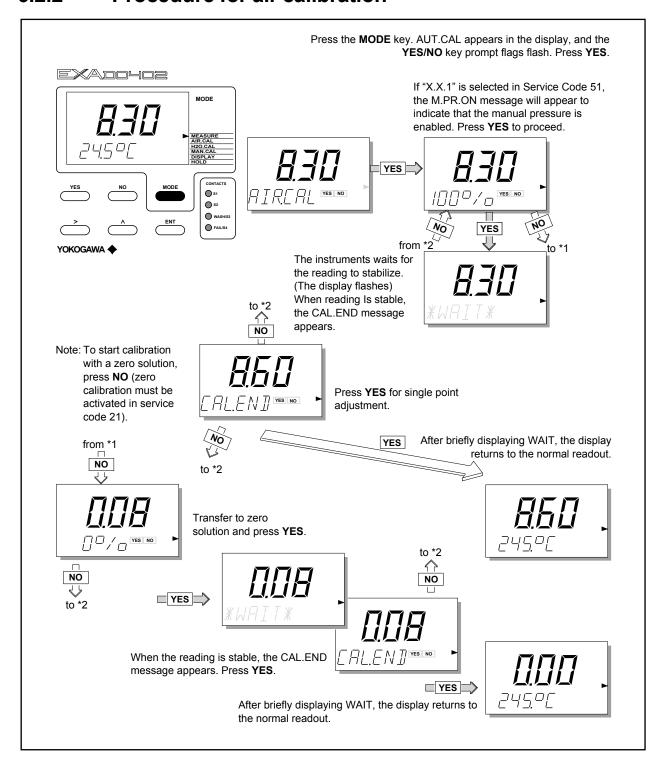

6.3 Calibration procedure using water calibration method

6.3.1 Preparation

Move the sensor to a maintenance site and wash off any dirt on the membrane. Lightly wipe off any remaining water from the membrane with a soft tissue.

Prepare the necessary equipment and reagents to be used for the span and (if required) zero calibration.

Equipment for span calibration includes:

- · beaker or bucket
- · magnetic stirrer or other means of agitating the water
- · Demineralized water or salty process water if salinity compensation is activated
- Air supply pump (aquarium pump)
- · Glass diffuser to generate small air bubbles

NOTE: It takes 15 to 30 minutes of aeration before it can be assumed that the water is fully saturated with air.

Reagent for zero calibration:

- · Sodium sulfite
- · demineralized water

The zero oxygen solution contains approximately 50 grams of sodium sulfite per liter.

6.3.2 Calibration operation (water calibration method)


If both zero and span calibration are used, it is better to start with span calibration in spite of normal calibration sequence with analog instrumentation. Otherwise the sensor must be rinsed off carefully to prevent ingress of oxygen absorbing sulfite in the aerated water.

NOTE

It takes a long time to calibrate the DO30G sensor or other galvanic sensors and polarographic sensors with sulfite-saturated water. Even after CAL.END is displayed, wait 40 to 50 minutes and then press the YES key. If the YES key is pressed without waiting, the indicator may show a minus reading during measurement. In an aerobic tank with high dissolved oxygen concentrations, a zero calibration is not required if a zero check is performed, because the indicating error is so insignificant that it does not affect the measurement results. There will be no problem if the electrodes are immersed in a zero solution for about 10 minutes and the indication falls below 1 mg/L. However, it is recommended to wait for about 60 minutes before performing a zero calibration when a new sensor is installed, when the membrane is replaced, or in a place where dissolved oxygen concentrations are low, such as in an anaerobic tank. If the solubility does not fall below 1 mg/L even after waiting for about 10 minutes, remove the sensor and clean it, and replace the membrane and/or replace the electrolyte solution.

Calibration may take longer than 10 minutes. Before starting the calibration procedure, check the setting of Auto Return (*RET.) in Service Code 50. It is recommended to set the Auto Return to "0" (No return to meas. from HOLD). After the calibration procedure has been completed, set the Auto Return to the desired setting in Service Code 50.

6.3.3 Procedure for Water calibration

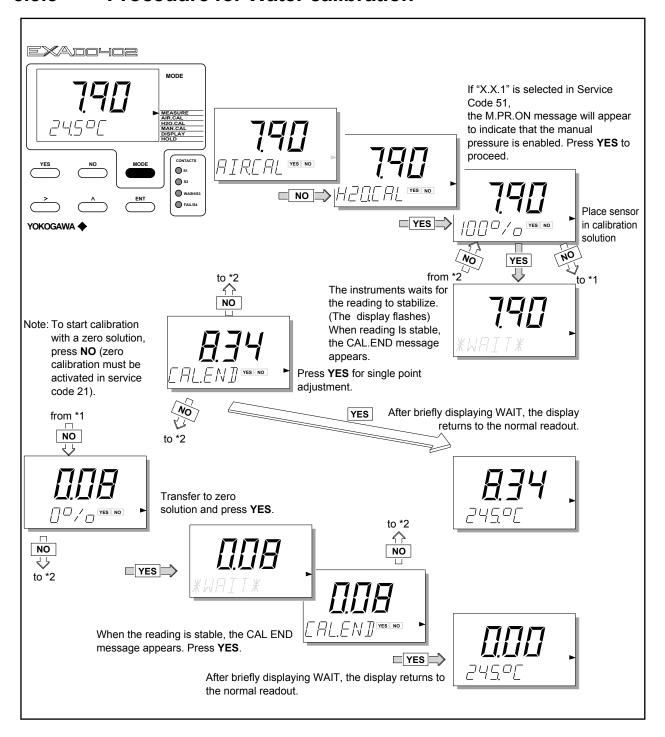

6.4 Calibration method using manual calibration method

6.4.1 Preparation

a. Cleaning

Confirm that the readings of the analyzer are stable and measured with a clean sensor.

Otherwise move the sensor to a maintenance site and wash off any dirt on the sensor membrane Move the sensor back to the process water and wait for the readings to stabilize.

b. Sampling

The manual calibration procedure involves adjustment of the readings to a reference standard.

Normally this reference is a laboratory measurement that analyses a sample that must be identical to the sample measured with the on-line analyzer.

The following precautions must be taken into account:

- The sample must be analyzed directly after sampling to avoid change of dissolved oxygen concentration or temperature after sampling.
- The reference standard must be analyzed with a laboratory meter that is calibrated prior to sample analysis.
- The reference method must be calibrated with the same calibration data as specified in ISO 5814 to avoid in discrepancies.

Most important calibration data are:

Dissolved oxygen concentration at saturation conditions as function of temperature, barometric pressure, altitude and salinity.

These data are included in this manual for reference and verification of correct calibration of reference analyzers. DO402G has taken all these variables into account during the semi-automatic calibration methods.

c. Compensating the salinity of a sample.

Example of procedure for (salinity compensation) calibration.

When performed in consideration of the salinity, calibration should be done manually.

The following shows a procedure for salinity compensation. Perform the calibration referring to Table 6.1.

Assuming that the atmosphere is 1 atm, the solution temperature is 22.5 °C, and the salinity is 30 g/kg (3 wt % seawater equivalent):

Calculating the saturated concentration of water
 According to Table 6.1, the solubility is 8.74 mg/L at 22 °C and 8.58 mg/L at 23 °C.
 The solubility at 22.5 °C is calculated as follows:
 8.74 + (8.58 - 8.74) × (22.5 - 22) = 8.66 mg/L

Calculating the value corrected for salinity
 0.0453 + (0.0443 - 0.0453) × (22.5 - 22) = 0.0448 mg/L
 0.0448 × 30 = 1.34 mg/L

3. Calculating the saturated concentration of solution (to be calibrated) 8.66 – 1.34 = 7.32 mg/L

NOTE

When salinity compensation is done, salinity compensation must be enabled in Service Code 04 to allow the instrument to show the saturated concentration (%) during sample measurements correctly.

6.4.2 Procedure for manual calibration

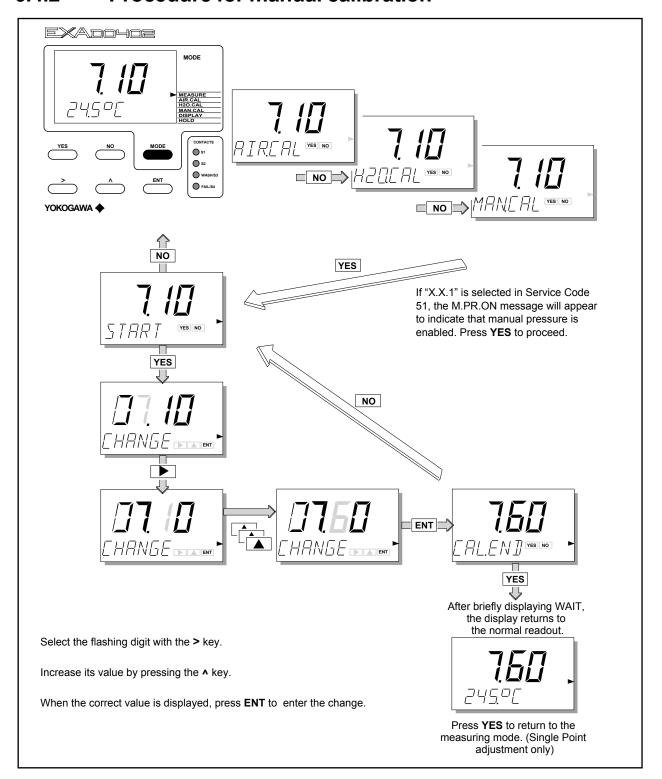


Table 6.1 Solubility of oxygen (mg/L) in water as a function of temperature & salinity

Temp (°C)	Solubility of oxygen in water in equilibrium with air @101.325kPa[pO₂] (mg/L)	Correction to be substracted for each degree of salinity expressed in grams per kilogram of total salts in water $[\Delta pO_2]$ (mg/L)
0	14.62	0.0875
1	14.22	0.0843
2	13.83	0.0818
3	13.46	0.0789
4	13.11	0.0760
2 3 4 5 6 7	12.77	0.0739
6	12.45	0.0714
7	12.14	0.0693
8	11.84	0.0671
9	11.56	0.0650
10	11.29	0.0632
11	11.03	0.0614
12	10.78	0.0593
13	10.54	0.0582
14	10.31	0.0561
15	10.08	0.0545
16	9.84	0.0532
17	9.66	0.0514
18	9.47	0.0500
19	9.28	0.0489
20	9.09	0.0475
21	8.91	0.0464
22	8.74	0.0453
23	8.58	0.0443
24	8.42	0.0432
25	8.26	0.0421
26	8.11	0.0407
27	7.97	0.0400
28	7.83	0.0389
29	7.69	0.0352
30	7.56	0.0371

Table 6.2 Solubility of oxygen (mg/L) at various temperatures and elevations (based on sea level barometric pressure of 760 mmHg)

Temp		Elevation (metres above sea level)					
(°C)	0	300	600	900	1200	1500	1800
0	14.6	14.1	13.6	13.2	12.7	12.3	11.8
2	13.8	13.3	12.9	12.4	12.0	11.6	11.2
4	13.1	12.7	12.2	11.9	11.4	11.0	10.6
6	12.4	12.0	11.6	11.2	10.8	10.4	10.1
8	11.8	11.4	11.0	10.6	10.3	9.9	9.6
10	11.3	10.9	10.5	10.2	9.8	9.5	9.2
12	10.8	10.4	10.1	9.7	9.4	9.1	8.8
14	10.3	9.9	9.6	9.3	9.0	8.7	8.3
16	9.9	9.5	9.2	8.9	8.6	8.3	8.0
18	9.5	9.2	8.9	8.6	8.3	8.0	7.7
20	9.1	8.8	8.5	8.2	7.9	7.7	7.4
22	8.7	8.4	8.1	7.8	7.6	7.3	7.1
24	8.4	8.1	7.8	7.6	7.3	7.1	6.8
26	8.1	7.8	7.6	7.3	7.0	6.8	6.6
28	7.8	7.5	7.3	7.0	6.8	6.6	6.3
30	7.5	7.2	7.0	6.8	6.5	6.3	6.1
32	7.3	7.1	6.8	6.6	6.4	6.1	5.9
34	7.1	6.9	6.6	6.4	6.2	6.0	5.8
36	6.8	6.6	6.3	6.1	5.9	5.7	5.5
38	6.6	6.4	6.2	5.9	5.7	5.6	5.4
40	6.4	6.2	6.0	5.8	5.6	5.4	5.2

Table 6.3 Solubility of oxygen (mg/L) of sea water & fresh water (based on sea level barometric pressure of 760 mmHg)

Temp	Solubility		
(°C)	Seawater (mg/L)	Fresh water (mg/L)	
0	11.97	14.62	
2	11.36	13.84	
4	10.82	13.13	
6	10.29	12.48	
8	9.84	11.87	
10	9.43	11.33	
12	9.05	10.83	
14	8.69	10.37	
16	8.37	9.95	
18	8.06	9.54	
20	7.77	9.17	
22	7.48	8.83	
24	7.21	8.53	
26	6.93	8.22	
28	6.67	7.92	
30	6.41	7.63	

7. Maintenance

It is important for maintaining the measurement accuracy of the EXA DO series of wire dissolvedoxygen metering system to perform inspection and maintenance at fixed intervals. It also serves to prevent problems from arising.

This chapter describes daily inspection and maintenance for the purpose of maintaining system performance.

7.1 Overall dissolved oxygen metering system

Tables 7.1 and 7.2 show the inspection and maintenance items for equipment composing 4-wire dissolved-oxygen metering system. The procedure of inspection and maintenance for the dissolved oxygen converter is described in Section 7.2. For inspection and maintenance of the sensors and holders, see each user's manual respectively.

7.1.1 Inspection and maintenance to be implemented periodically

Table 7.1 shows the items which are recommended to be inspected and maintained periodically.

Table 7.1 Items for periodic inspection and maintenance of 4-wire dissolved-oxygen metering system

Instrument or apparatus	ltem	Recommended Interval
All equipment	a. Calibration	a. 1 to 2 months
Dissolved oxygen sensor	a. Clean the tip of the sensor b. Polishing of (silver) electrode surface and replacement of electrolyte	a. 1 to 2 months b. 6 to 8 months
	c. Replacement of membrane assembly d. Replacement of sensor cap	c. 6 to 8 months d. 6 to 12 months
Dissolved oxygen converter	a. Inspection of temperature indication (error check) b. Replacement of fuse	a. 6 months b. 1 to 2 years
Float holder	a. Sweeping of winch mechanism	a. (depends on installation environment)
Immersion holder	a. Inspection of sensor holding O-ring b. Sweeping of cleaner nozzle c. Inspection for leakage from the solenoid valve for cleaning utility	a. 6 months b. 1 to 2 months c. 6 months

7.1.2 Inspection and maintenance to be implemented on occasion

Occasionally implement the maintenance that is not directly related to measurement functions and maintenance associated with errors.

Table 7.2 Items for occasional inspection and maintenance of 4-wire dissolved-oxygen metering

Faulty phenomenon	System content of inspection
Error E2 occurrence	Check whether the dissolved-oxygen sensor membrane is contaminated or not. Check whether the nozzle is clogged or not.
Error E3 occurrence	Polish the silver electrode surface of the galvanic dissolvedoxygen sensor, platinum surface of the polarographic dissolvedoxygen sensor, and replace the electrolyte. Check that the connection between sensor and sensor cable is fit, and LED emission of the optical dissolved-oxygen sensor.
It is difficult to see the inside of the converter through the window	Wipe off the dirt on the transparent window using tissue paper or the like. (Use detergent for hard-to-clean dirt.)

7.2 Periodic maintenance for the EXA DO402G converter

The DO402G converter requires very little periodic maintenance. The housing is sealed to IP65 (NEMA 4X) standards, and remains closed in normal operation. Users are required only to make sure the front window is kept clean in order to permit a clear view of the display and allow proper operation of the pushbuttons. If the window becomes soiled, clean it using a soft damp cloth or soft tissue. To deal with more stubborn stains, a neutral detergent may be used.

NOTE

Never used harsh chemicals or solvents. In the event that the window becomes heavily stained or scratched, refer to the parts list (Chapter 9) for replacement part numbers.

CAUTION

When you must open the front cover and/or glands, make sure that the seals are clean and correctly fitted when the unit is reassembled in order to maintain the housing's weatherproof integrity against water and water vapor. The DO measurement uses small signal currents and may otherwise be prone to problems caused by exposure of the circuitry to condensation.

7.3 Fuse Replacement

This section describes how to replace the power supply fuse.



WARNING

- Use only a fuse of the specified current, voltage and type ratings to prevent fire.
- Power to the instrument must be turned off at the external breaker before replacing the fuse. After replacing the fuse, install a high-voltage shield plate before turning the power on.
- · Do not short circuit the fuse holder.

Specified Ratings of the Power Supply Fuse

The power supply fuse (recommended fuse) used in the DO402G is as follows.

100/115 V AC version

Rated breaking current: 35 A or 10 times the rated current, whichever is greater (low breaking)

Maximum rated voltage: 250 V Maximum rated current: 200 mA

Compliance: UL, CSA, VDE, Japan's Electrical Appliance and material Safety Law

Part number: A1105EF

230 V AC version

Rated breaking current: 35 A or 10 times the rated current, whichever is greater (low breaking)

Maximum rated voltage: 250 V Maximum rated current: 100 mA

Compliance: UL, CSA, VDE, Japan's Electrical Appliance and material Safety Law

Part number: A1103EF

How to replace the fuse

1. Before replacing the fuse, turn off power to the instrument at the external breaker.

- 2. Remove the instrument cover and the high-voltage shield plate.
- 3. Remove the cover from the fuse holder by pulling out by hand.
- 4. Remove the fuse and install a new, recommended or equivalent fuse on the holder.
- 5. Put the fuse cover back on the holder securely.
- 6. Install the high-voltage shield plate.

It is recommended that the fuse be replaced every two years even if it has not blown.

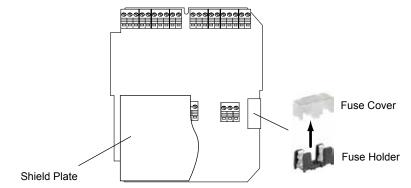


Figure 7.1 How to replace the fuse

8. Troubleshooting

This chapter describes the countermeasures for failures, classifying the cases into three categories: dissolvedoxygen converter failure, detection of failure with the self-diagnosis function, and abnormal measured values. The causes for abnormal measured values are not limited to equipment failures. If an abnormal phenomenon occurs, first check the following items:

- · Is the property of the measuring solution different from normal?
- · Is the dissolvedoxygen sensor properly installed?

8.1 Measures in the case of converter operation failure

8.1.1 No dissolved-oxygen converter operation

If the converter does not operate even when the power is supplied, one cause may be a blown fuse inside the converter.

Examine the fuse by turning off the power supply (see Subsection 3.3.1 on page 3.5).

If the fuse is blown, replace it with a new one. If fuses frequently blow and the cause is not clear, request an inspection by Yokogawa.

If the fuse is normal, examine the wiring system.

8.1.2 Operation key or display failure

If the operation keys do not operate smoothly or the display fails (e.g., a missing character segment), repair of the printed circuit board (digital board) (replacement with a new one) is required.

After the printed circuit board is replaced, operation checks and parameter settings are necessary.

Contact Yokogawa and request board-replacement work.

8.2 Measures in the case of failure (Error) detection

If a failure is detected through the self-diagnosis of the DO402G dissolved oxygen converter, the FAIL contact is closed. The FAIL lamp on the operation panel lights up and an error number appears in the data display.

NOTE

If an error is detected during configuration, the FAIL contact signal is output immediately but the error number is displayed after that action or operation is completed.

When a FAIL contact signal is output, take measures according to Table 8.1.

Table 8.1 Countermeasures in the case of failure (Error) detection

Error No.	Generation Mode	Error Content and Causes	Countermeasures
E1	AIR.CAL mode H2O. CAL mode	Stability failure Even after an hour has elapsed, the measured value change does not decrease within the set value of (mg/L) • Sensor temperature changes. • Dissolved-oxygen of the calibration solution changes. • The value of A (mg/L) is not suitable.	Eliminate the causes and press the (NO) key to perform re calibration.
E	H2O. CAL mode	Zero point error failure The zero point error exceeds the set range • Dirt sticks to the tip of the sensor. • Membrane abnormality. Electrolyte degradation.	Clean the sensor membrane, sensor cap, and recalibrate. If the error is detected again, replace the electrolyte and the membrane, sensor cap.
E3	AIR.CAL mode H2O. CAL mode MAN.CAL mode	Slope failure The slope exceeds the range of 40 to 200 % of the theoretical value. • Dirt sticks to the tip of the sensor. • Membrane abnormality. Electrolyte degradation.	Clean the sensor membrane, sensor cap, and recalibrate. If the error is detected again, replace the electrolyte and the membrane. Check that the connection between sensor and sensor cable is fit, and LED emission of the optical dissolved-oxygen sensor. When error occurred again, replace the sensor cap, sensor cable or sensor itself.
E4	Measuring mode	Sensor membrane failure	Replace membrane Check for wet O-rings in the membrane assembly or wet sealing face. Wipe off wet areas and dry out.
E7	All modes	Measured temperature failure (too high) It exceeds 50.0 °C (122.0 °F). • Measuring solution temperature is high • CODE 10 setting is not correct • Sensor cable wiring failure • Temperature sensor has failed	Examine the temperatures of the measuring solution and sensor and the CODE 10 setting Examine the sensor cable connection status. If the temperature sensor fails (abnormal resistance), replace the sensor.
E8	All modes	Measured temperature failure (too low) It falls below 0 °C (or 32.0 °F). • Measuring solution temperature is low • CODE 10 setting is not correct • Sensor cable wiring failure • Temperature sensor has failed.	Examine the temperatures of the measuring solution and sensor and the CODE 10 setting. Examine the sensor cable connection status. If the temperature sensor fails (abnormal resistance), replace the sensor.
E9	All modes	Input current failure It does not satisfy the following equation: input current < 50 µA for galvanic sensor < 500 nA for polarographic sensor and optical sensor	Examine the setting for CODE 01, 02
E10	All modes	EEPROM writing failure Electronic circuit failure	Turn off the power and then turn it back on and check whether or not the system returns to normal. If the failure occurs again, contact Yokogawa to request repair.
E12	All modes	Abnormal measured value The dissolved-oxygen value (%sat.) exceeds 150 % (or value set in CODE 54)	Examine the setting for CODE 01, 02 10, 12 & 54. Accurately perform calibration.

Error No.	Generation Mode	Error Content and Causes	Countermeasures
E15	CODE 12	Temperature error correction failure The difference between the corrected value and the standard value exceeds the range corresponding to ±7.5°C (±13 5°F). • Temperature entry is not accurate. • Sensor cable failure	Accurately measure the temperature of the measuring solution (dissolved oxygen sensor). Examine whether the sensor cable fails (partial disconnection or degraded insulation) and then correct the temperature error again.
E16	All modes	Call for maintenance-interval time exceeded	Perform maintenance. Reset interval.
E17	RANGE mode	Incorrect span. In the range setting, a value which makes the span less than 1.0 mg/L (or ppm) or 10 % sat. has been set.	Change the maximum or minimum value in the range so that a span more than the permissible value is obtained.
E18	CODE 35 & 36	Table values make no sense.	Reprogram.
E19	At data entry	Configuration failure A value not within the permissible range is entered.	Re-enter a value within the permissible range.
E20	All modes	Instrument initialization failure	Repair is necessary. Contact Yokogawa to request repair.
E21	All modes	EPROM comparison failure	Repair if necessary. Contact Yokogawa to request repair.
E22	All modes	The time-out interval for high or low alarm has elapsed. (if the function is enabled in CODE 47)	Take measures depending on the purpose to use this function. Reset the error with the (NO) key or (YES) key.

NOTE

It is possible that the error message does not disappear immediately after corrective measures. Then turn power off and the turn it back on and check whether the system returns to normal.

9. Spare Parts

See Customer Maintenance Parts List.

10. Appendix

Adjustable limits and defaults for settings in Commissioning Level

10.1 Setpoint

Variable	Default	Lower limit	Upper limit
*OX1	19.5 mg/L	0.0 mg/L	50.0 mg/L
		0.0 ppm	50.0 ppm
		0.0 %sat	300 %sat
*OX2	1.0 mg/L	0.0 mg/L	50.0 mg/L
		0.0 ppm	50.0 ppm
		0.0 %sat	300 %sat
*OX3	10.0 mg/L	0.0 mg/L	50.0 mg/L
		0.0 ppm	50.0 ppm
		0.0 %sat	300 %sat
*OX4	10.0 mg/L	0.0 mg/L	50.0 mg/L
		0.0 ppm	50.0 ppm
		0.0 %sat	300 %sat
*Sp.mA2	10.0 mg/L	0.0 mg/L	50.0 mg/L
		0.0 ppm	50.0 ppm
		0.0 %sat	300 %sat
*T1	25.0 °C/77 °F	0.0 °C/32 °F	50 °C/122 °F
*T2	25.0 °C/77 °F	0.0 °C/32 °F	50 °C/122 °F
*T3	25.0 °C/77 °F	0.0 °C/32 °F	50 °C/122 °F
*T4	25.0 °C/77 °F	0.0 °C/32 °F	50 °C/122 °F

10.2 Range

Variable	Default	Lower limit	Upper limit
Range 1: Process	0% = 0.00 100% = 19.99	0.0 mg/L 0.0 ppm 0.0 %sat	50.0 mg/L 50.0 ppm 300 %sat
Range 2: Process	0% = 0.00 100% = 19.99	0.0 mg/L 0.0 ppm 0.0 %sat	50.0 mg/L 50.0 ppm 300 %sat
Temperature	0% = 0 °C / 32 °F 100% = 50 °C / 122 °F	0.0 °C / 32 °F	50 °C / 122 °F

Note: The range has a minimum span of: 1.0 mg/L, 1.0 ppm or 10 %sat. In case of a temperature output 25 °C or 50 °F

10.3 Hold

Variable	Default	Lower limit	Upper limit
mA fix 1	10.00 mA	0 or 4 mA	20 mA
mA fix 2	10.00 mA	0 or 4 mA	20 mA

10.4 Wash

Variable	Default	Lower limit	Upper limit
Interval	6 hours	0.1 hours	36.0 hours
Wash time	0.5 minutes	0.1 minutes	10.0 minutes
Recovery time	0.5 minutes	0.1 minutes	10.0 minutes

10.5 User setting table

		I		T	,
	INCTION		TTING DEFAULTS	USER SETTINGS	
Para		ific function	ns		
01	*S.TYPE	0	Galvanic (7 µA)		
	*I.CELL	0	3.75 µA		
02	*CHECK	0.1.0	Zero Off		
			Slope On		
			Membrane Off		
04	*SAL.TY	0	Off		
Tem	perature me	easuring fur	nctions		
10	*T.SENS	1	Pt1000		
11	*T.UNIT	0	°C		
12	*T.ADJ		None		
13	*T.MAN	0	Off		
Calib	ration para	meter func	tions		
20	*ΔT.SEC	60	sec.		
	*∆mg/L	0.05	mg/L		
21	*0.CAL	0	Off		
22	*ZERO	0	μA (nA)		
	*SLOPE	3.75 (50)	μA (nA)		
mA c	outputs	1 - ()			
30	*mA	1.1	both 4-20mA		
31	*OUTP.F	0.2	DO & Temp.		
	*D/R	0	Reverse (control)		
32	*BURN	0.0	both off		
33	*RG.mA2	5.0 mg/L	only for PI control		
34	*tl.mA2	100 sec	only for PI control		
35	*TABL1	21 pt table	see code 31, §10-1		
36	*TABL2	21 pt table	see code 31, §10-1		
37	*DAMP	0	sec.		
38	*SWTCH	0	Off		
Cont		•	OII		
40	*S1	2.0.0	high process Al.		
41	*S2	1.0.0	low process Al.		
42	*S3	4.0.0	WASH		
43	*S4	4.0.0	FAIL		
44	*D.TIME	0.2	sec.		
	*P.HYST	0.1	mg/L		
	*T.HYST	0.5	°C		
45	*RANGE	0.5			
40	*PER	10.0	mg/L		
		70	Sec.		
16	*FREQ		p/min		
46	*tl.CNT	100 sec.	only for PI control		
47	*EXPIR	0	off		
11	*tE.min	15	min		
	Interface		T		
50	*RET	1	on		

FUNCTION		SETTING DEFAULTS		USER SETTINGS		
51	*MODE	0.0.0	all off			
52	*PASS	0.0.0	all off			
53	*Err.01	1	hard fail			
	*Err.02	1	hard fail			
	*Err.03	1	hard fail			
	*Err.04	1	hard fail			
	*Err.07	1	hard fail			
	*Err.08	1	hard fail			
	*Err.09	1	hard fail			
	*Err.12	1	hard fail			
	*Err.16	0	soft fail			
	*Err.22	0	soft fail			
	*SOFT	0	LCD + fail			
54	*E12	150	%			
55	*CALL.M	0	Off			
56	*UNIT	0	mg/L			
Com	munication	1				
60	*COMM.	0.1	off/write prot.			
	*SET.	3.1	9600/odd			
	*ADDR.	00	00			
61	*HOUR					
62	*ERASE					
General						
70	*LOAD					
Test and setup mode						
80	*TEST					

Error codes


Code	Error description	Possible cause	Suggested remedy
E1	Response time failure. Calibration failed to reach stability in 1 hour	Temperature unstable	Avoid draughts and direct sunshine
E2	Zero calibration out of limits Check limits ± 0.5 μA (±5.0nA)	Zero calibration not properly performed	Repeat carefully
E3	Slope calibration out of limits Check limits 40 to 200 %	Calibration not properly performed Wrong membrane thickness set	Repeat carefully Check code 01
E4	Membrane failure	Perforated membrane	Replace and recalibrate
E7	Temperature too high > 50 °C/122 °F	Process temperature too high Wrong sensor programmed Incorrect wiring	Check process Check model code sensor Check connections and cable
E8	Temperature too low < 0°C/32 °F	Process temperature too low Wrong sensor programmed Incorrect wiring	Check process Check model code sensor Check connections and cable
E9	Cell current abnormal Galvanic : outside -10 to 50 µA Polarographic: outside -100 to 500 nA	Sensor fault Programming fault	Check membrane Check setup
E10	EEPROM write failure	Fault in electronics	Try again, if unsuccessful contact Yokogawa
E12	Abnormal measured value. The dissolved oxygen value (%sat.) exceeds 150%. (or value set in Code 54)	Wrong DO sensor or temperaure sensor programmed. Incorrect wiring.	Check code 01, 02, 10, 12 and 54. Accurately perform calibration.
E15	Cable resistance influence to temperature exceeds ±7.5°C (±13.5°F)	Cable resistance too high Corroded contacts Wrong sensor programmed	Check cable Clean and reterminate Reprogram

Code	Error description	Possible cause	Suggested remedy
E16	Call for maintenance inetrval time exceeded.	System not maintained in preset time period	Perfrom maintenance Reset interval
E17	Output span too small	Incorrect configuration by user	Reprogram
E18	Table values make no sense	Wrong data programmed	Reprogram
E19	Programmed values outside acceptable limits	Incorrect configuration by user	Reprogram
E20	All programmed data lost	Fault in electronics Very severe interference	Contact Yokogawa
E21	Checksum error	Software problem	Contact Yokogawa
E22	Alarm activation time exceeded	Process control not effective within set time	Check control equipment Adjust value in code 47

Customer Maintenance Parts List


Model DO402G [Style: S3] Dissolved Oxygen Converter




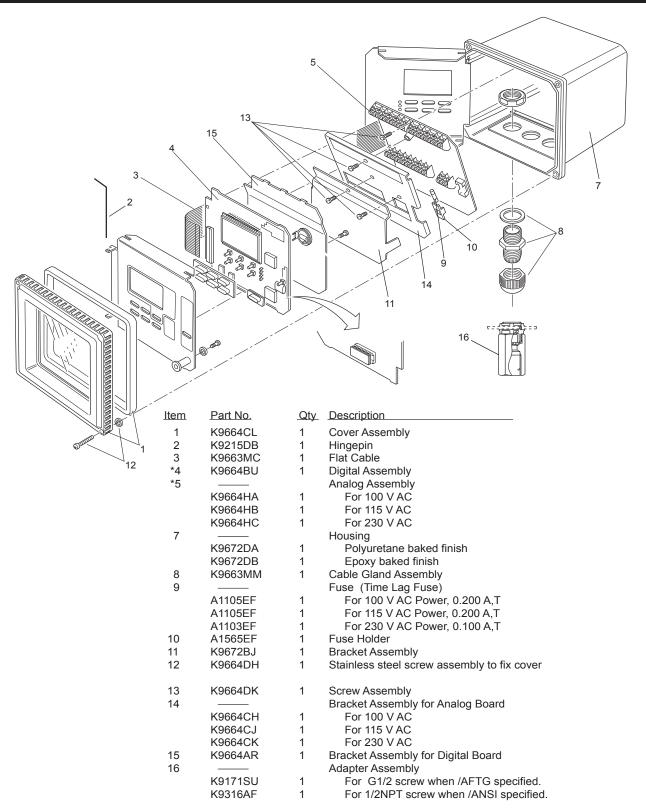



^{*} Do not exchange these parts. Call service personnel.



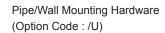


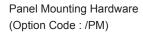


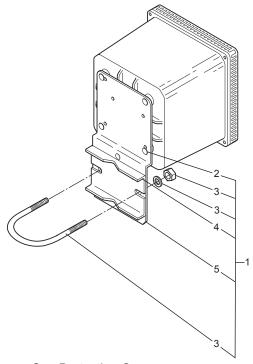

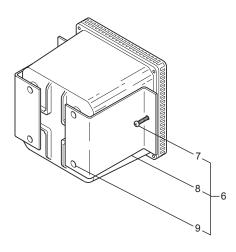

Sun Protection Cover (Option Code: /H3, /H4)

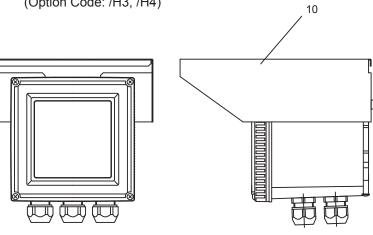

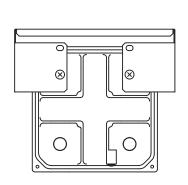

<u>Item</u>	Part No.	<u>Qty</u>	Description
1	K9171SS	1	Mounting Set (/U)
2	Y9608KU	4	Screw
3	D0117XL-A	1	U-Bolt Assembly
4	K9171SY	1	Plate
5	K9171SX	1	Bracket
6	K9171ST	1	Mounting Set (/PM)
7	Y9520LU	2	Screw
8	K9171SW	2	Bracket
9	Y9608KU	4	Screw
10	 K9664CA K9664CC	1 1	Sun Protection Cover Cabon steel (/H3) Stainless steel (/H4)

CMPL 12J05D02-03E 2nd Edition : Sep. 2012 (YK)

Revision Information

• Title : Model DO402G Dissolved Oxygen Converter [Style: S3]

Manual No. : IM 12J05D02-01E

Aug. 2015/9th Edition

Review all for a document software change.

Note addition for CSA safety standards, etc. (Pages iii, 1-1, 2-3, 2-4, 2-5, Chapter 3, etc.)

Delete chapter 11.

Feb. 2014/8th Edition

Page 2-2, 2-3, 3-4 Safety standard is revised.

Page 3-10 to 3-11 Some revision of section 3-8. Wiring the standard optical sensor (DO70G).

Page 5-1 Some revision of section 5-1. Maintenance mode.

Page 5-2 Some revision of section 5-1-1. Manual activation of Hold.

Page 5-11 Some revision of section 5-2-3. Hold.

Page 7-1 Some revision of Table 7-2.

Page 8-2 to 8-3 Some revision of Table 8-1.

Page Appendix 2 11-1 to 11-5 QIS 12J05D02-01E, QIC-12J05D02-01 revised (some change of dielectric strength test).

CMPL 12J05D02-03E revised to 2nd edition (some of P/N changed).

Feb. 2012/7th Edition

PREFACE, Addition of "How to dispose the batteries".; Page 2-2, Some revision of M. Safety and EMC conforming standards (description for EMC revised).; Page 4-4, Figure of Section 4-4. "Display functions (default)" modified.; Page 5-16, Explanation of the code 21 modified.; Page 5-25, Some revision of the code 53 (*Err.16 error setting).; Page 6-1, Caution of calibration added to Sec.6.; Page 6-4, Some revision of Sec. 6-3-1, and note for water calibration method of Sec. 6-3-2 modified.; Last page, Added of KC mark.

Oct. 2007/6th Edition

Appendix 2 Quality Inspection added.

Jul. 2007/5th Edition

Page 2-2: Addition of CSA certified to item. M. Safety and EMC conforming standards; Page 2-3: Some of G. Housing description revised; Page 3-3: Addition of CSA certified to Sec. 3.2 Wiring; Page 3-4: The torque to tighten frontplate screws added.

Mar. 2007/4th Edition

All over revised. (Style of DO402G changed to S3.)

Sep. 2006/3rd Edition

On p.ii, After-sales Warranty modified.; On p.2-3, Operating specifications modified.; On p.3-2, Housing dimensions of Fig. 3.01 modified.; On p.3-4, Fig. 3.04 Wiring Diagram modified.; On p.6-4, Tips for water calibration added.; On p.6-6, Some error corrected.

Feb 2004/2nd Edition

Style changed to S2

Apr. 2003/1st Edition

Newly published