

Pet Remote Training Collar System

User Manual

Model: SP 401

This is an effective 1 pet training system. It features an easy-to-use transmitter, 3 audible tones of different frequencies, and 8 different levels of static shock, replaceable batteries and 200 meters range.

Contents:

- 1 x Transmitter
- 1 x 6F22 9V Battery
- 1 x Antenna (for transmitter)
- 1 x 1 Adjustable Collar Receivers
- 1 x 6V Batteries
- 1 x Test Light (for checking static shock)
- 1 x User Manual

Quick start Guide

Step 1: Prepare the Remote Transmitter

Screw the antenna into place before using. Do not operate the remote trainer without a transmitter antenna. Follow the Positive (+) and Negative (-) signs inside the transmitter. Insert the 9V 6F22 battery into the transmitter correctly.

Step 2: Prepare the Collar Receiver

Insert the 6V (4LR44) battery into the receiver collar following the Positive (+) and Negative (-) signs. The collar will beep when you install the battery into receiver correctly, and LED indicated light will stay on for 2 second. Collar is in the standby mode and ready to receive signal, which will consume a small amount of electricity.

Step 3: Match Transmitter with the Collar Receiver

The Transmitter and Receiver are automatically matching.




Press 1 Button on the transmitter. The LED indicated light on the transmitter will stay on for about 2 seconds and then turn off. The Receiver will start static shock and the LED indicated light will be on.

Press the A Button and the Receiver will beep.

Please always install the transmitter's battery BEFORE install the receiver's battery because it is a wireless training system. The transmitter has to be power on then the receiver is able to receive the code from transmitter. It might not work if you did not install the batteries correct.

Step 4: How to Check the Static Shock

1. Use the **TEST LIGHT** attach on the both side of Electrodes (Metal).
2. Press Shock Button, the **TEST LIGHT** will blink or keeps on.

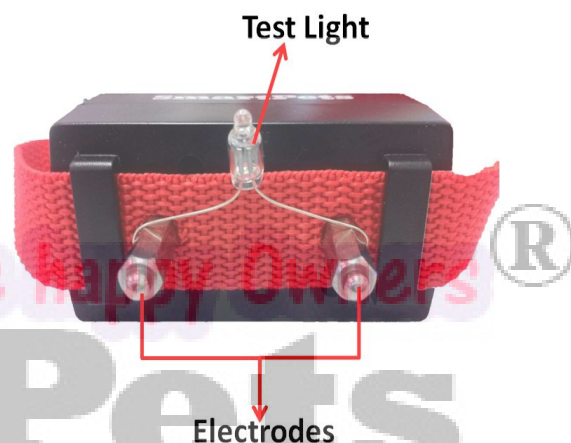

Step 5: Adjust the collar to fit your pet

To ensure a proper fit, please follow the steps below:

1. Put the collar receivers on your pet.
2. With your dog standing, centre the collar receiver where contact points are underneath your pet's neck, touching the skin. If your dog has a long or thick coat, trim the hair around the contact points to ensure consistent contact.
3. The collar receiver should fit snugly, yet loose enough to allow on finger to fit between the strap and your dog's neck. If the strap is too long for your dog, cut off the excess length.
4. Allow your dog to wear the collar for several minutes and then recheck the fit. Check the fit again as your dog becomes more comfortable wearing the collar receiver.

Notice:

We recommend you to use the audio function first before starting the static shock and always start from the lowest level of static shock.

How to use the transmitter and receivers

Button 1- 8 are for 8 different levels static shock. (Decrease in static shock which the 1 Button is the strongest static shock)

Button A - C are for 3 different Audio Tones.

How to change the batteries

It is important to check the battery regularly by monitoring indicated light to ensure the collar is working properly.

If the Receiver LED indicated light does not light up please replace the battery of receiver. If the Transmitter indicated light does not light up please replace the battery of transmitter.

Important:

1. The valid distance of remote control means the straight-line distance between the transmitter and the receiver without obstacles in between. If there are interference signals or signal screening around, the actual remote control distance may vary.
2. The lifetime of the batteries vary according as how often you use the product. Therefore you should often check the batteries by watching the indicator light on the receiver and the indicated light on transmitter.
3. This product is for pet training. Good effect can only be achieved after a period of training.
4. This product is a wireless transmitting device; you **MUST NOT** use the remote control system in places like petrol stations or hospitals where mobile phones are prohibited. Patients using heart pacemaker are forbidden to use this product.
5. The Electrodes have to directly touch your pet's skin as it is very important to effective training.
6. This product is only for Pet Training, It is not a **regular** Pet Collar. Please remove it from your pet at least 8 hours out of every 24 hours.



Made in China