USB 16 Channel Photo Isolator Input Board

..........................

# SMARTLAB USB 16 CHANNELS PHOTO ISOLATOR INPUT

# **OPERATION MANUAL**

Operations Manual

Isolator Input Board TABLE OF CONTENTS

USB 16 Channel Photo

# CHAPTERS

- 1. Introduction.....1
- 2. Hardware Configuration...... 4
- 3. Diagnostic under Windows ..... 10
- 4. Programming under Windows and Linux.....10

# APPENDICES

A.	Warranty Information	11
B.	Data Sheet	13
0		4 -

C. External Power Installation.....17



Decision Group

- ii -

Decision Group

- i -



The USB 16 channels photo isolator input card provides 16 photo couple digital input channels, and one RS232/RS422/RS485 port functions, which allow the digital input signals to be completely floated and prevent the ground loop and COM communication.

The USB 16 channels photo isolator input card provides one asynchronous serial communication ports (RS232 or RS422 or RS485), which link the computer and serial peripheral devices such as terminals, modems, serial printers, plotters, ... etc.

The USB 16 channels photo isolator input card provides Plug and Play (PnP) features, it is a programmable I/O interface card for PC/486, Pentium, or compatibles. The on board high speed 8051 uC provides USB functions run at 12Mbps full speed or 1.5Mbps low speed.

## ✤ <u>The features of USB 16 channels photo isolator input</u> <u>card are:</u>

- USB 2.0with Plug and Play (PnP) features.
- High speed 8051 uC core.
- Support USB ID selection to identify USB device.
- Support 16 photo couple input channels and one RS232/RS422/RS485 port functions.
- Allow the photo input signals to be completely floated and prevent the ground loops.
- 16 LED correspond to 16 input ports activation status.
- By using PC817 photo couple chips.

# 

Decision Group

- 1 -

# Operations Manual USB 16 Channel Photo Isolator Input Board

- Allow to connect RS232 or RS422/RS485 extension board with DB9 connector.
- Power supplied from external DC +5V.
- 5000V isolation voltage.
- Maximum load voltage is 30V.
- Maximum 50mA forward input current.
- Input voltage range from 0V to 30V.
- Activation voltage of photo input: When short jumpers (input range from 0 to 20V DC) 0 to 3.3V inactive 4.5 to 20V active
   When open jumpers (input range from 0 to 30V DC) 0 to 17.6V inactive 18 to 30V active
- Suitable for Linux, MS/WINDOWS, ... etc.
- Operating temperature range from 0 to 55°C.
- Relative humidity rage from 0 to 90%.

# \* PACKAGE CONTENTS:

- SMARTLAB USB 16 channels photo input board.
- USB cable.
- Decision Studio and User's manual CD.
- Two Different Connecter Types can be selected:


Standard: European P.C.B type terminal blocks Professional: Pluggable terminal blocks

## Optional

- Extension board with DB9 : RS232 or RS422/485
- PCB Carrier

# 

Decision Group

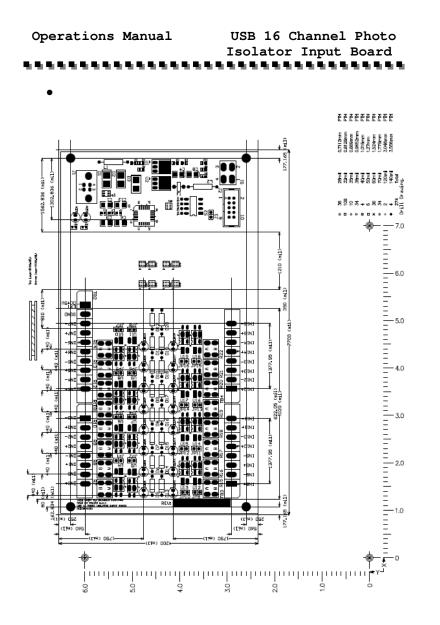

# Operations Manual USB 16 Channel Photo Isolator Input Board CHAPTER 2 HARDWARE CONFIGURATION

Before you use the USB 16 channels photo couple input card, please ensure that the jumpers and switches setting. The proper jumper and switches settings for the 16 channels photo couple input card are described in the following.

## 2.1 Switch Settings

1. S1 Reset



The S1 switch is used to reset 8051, the signal assignments are shown in the following.

Pin	Signals
3,4	Reset SW+
1,2	Reset SW-

2. S2 USB ID

ON 1	2	з	4	
	$\Box$	$\Box$	Ш	

......

### \_\_\_\_\_

Decision Group

- 4 -

Decision Group

- 3 -

The S2 switch is used to identify USB card ID. Please set different card ID to each card (do not duplicate card ID setting).

1	2	3	4	Card ID
ON	ON	ON	ON	
OFF	ON	ON	ON	14
ON	OFF	ON	ON	13
OFF	OFF	ON	ON	12
ON	ON	OFF	ON	11
OFF	ON	OFF	ON	10
ON	OFF	OFF	ON	9
OFF	OFF	OFF	ON	8
ON	ON	ON	OFF	7
OFF	ON	ON	OFF	6
ON	OFF	ON	OFF	5
OFF	OFF	ON	OFF	4
ON	ON	OFF	OFF	3
OFF	ON	OFF	OFF	2
ON	OFF	OFF	OFF	1
OFF	OFF	OFF	OFF	0

3. Down load revised firmware

When the S2 switch is set to ON ON ON ON status, means down load revised firmware. please follow the steps shown in the following:

1. Set S2 to ON ON ON ON.

2. Run USBBootloader program to down load revised firmware.

### Operations Manual USB 16 Channel Photo Isolator Input Board

### \*

2.2 Jumper Settings

Input Voltage Range Selection (JP1 to JP16)



1 2

JP1 to JP16 are used to select input voltage range. The JP1 is used to select photo couple input channel 0, and JP2 is used to select photo couple input channel 1, ... etc. When short the jumper, the input voltage range from 0 to 20V, and the active voltage form 4.5 to 20V. When open the jumper, the input voltage range from 0 to 30V, and the active voltage from 18 to 30V.

J	Jumper	Input Voltage	Inactive Voltage	Active Voltage
	open	0 to 30V	0 to 17.6V	18 to 30V
	short	0 to 20V	0 to 3.3V	4.5 to 20V

## 2.3 USB Connector

1. USB Connector

The USB connector is connected to computer USB port by using USB cable.


## 2.4 LED Status

1. LED1

Decision Group

- 5 -





# Decision Group

The LED1 is an indicator to show the power is supplied normally.

### 2. LED2

The LED2 is an indicator to warning the USB link status. When it lights, it means USB connection works normally, otherwise it is fail.

## 2.5 Connector and Jumper for Serial Communication

1. The connector of serial communication(J2)



To use RS422/RS485/RS232, please connect J2 to extension board by 10 pins flat cable. (Optional)

2. Enable Serial Port (J3)



J3 is used enable serial port communication, when short the J3, means enable serial port, otherwise, when open the J3, the serial port communication is disable.

### Operations Manual USB 16 Channel Photo Isolator Input Board

\*

### 2.6 Connector Assignments

The photo isolator input signal pin assignments are shown in the below.

Pin	Signal	Description
1	IN0+	Opto-isolator Ch. 00 + Input
2	IN0-	Opto-isolator Ch. 00 - Input
3	IN1+	Opto-isolator Ch. 01 + Input
4	IN1-	Opto-isolator Ch. 01 - Input
5	IN2+	Opto-isolator Ch. 02 + Input
6	IN2-	Opto-isolator Ch. 02 - Input
7	IN3+	Opto-isolator Ch. 03 + Input
8	IN3-	Opto-isolator Ch. 03 – Input

Pin	Signal	Description
1	IN4+	Opto-isolator Ch. 04 + Input
2	IN4-	Opto-isolator Ch. 04 - Input
3	IN5+	Opto-isolator Ch. 05 + Input
4	IN5-	Opto-isolator Ch. 05 - Input
5	IN6+	Opto-isolator Ch. 06 + Input
6	IN6-	Opto-isolator Ch. 06 - Input
7	IN7+	Opto-isolator Ch. 07 + Input
8	IN7-	Opto-isolator Ch. 07 – Input
9	SGND	Signal Ground
10	EXT +5V	External DC +5V 3A Power In

### ······

Decision Group

Decision Group

- 7 -

USB 16 Channel Photo Isolator Input Board

............................

Pin	Signal	Description
1	IN8+	Opto-isolator Ch. 08 + Input
2	IN8-	Opto-isolator Ch. 08 - Input
3	IN9+	Opto-isolator Ch. 09 + Input
4	IN9-	Opto-isolator Ch. 09 -Input
5	IN10+	Opto-isolator Ch. 10 + Input
6	IN10-	Opto-isolator Ch. 10 - Input
7	IN11+	Opto-isolator Ch. 11 + Input
8	IN11-	Opto-isolator Ch. 11 – Input

Pin	Signal	Description
1	IN12+	Opto-isolator Ch. 12 + Input
2	IN12-	Opto-isolator Ch. 12 - Input
3	IN13+	Opto-isolator Ch. 13 + Input
4	IN13-	Opto-isolator Ch. 13 - Input
5	IN14+	Opto-isolator Ch. 14 + Input
6	IN14-	Opto-isolator Ch. 14 - Input
7	IN15+	Opto-isolator Ch. 15 + Input
8	IN15-	Opto-isolator Ch. 15 – Input

Operations Manual USB 16 Channel Photo Isolator Input Board

### \*

# CHAPTER 3

# **DIAGNOSTIC UNDER WINDOWS**

USB Test Program.exe is a diagnostic program to test your USB devices under Windows/XP.

User can get USB Test Program.exe programs from Decision Studio CD.

# CHAPTER 4 SOFTWARE PROGRAMMING UNDER WINDOWS AND LINUX

Under Windows, we provide function library and dll file for users to program the device in supported language. You can find manual "USBDII\_Manual.pdf" and demo code in VB/VC/Delphi from Decision Studio CD.

Under Linux, we provide C source to allow user directly to access device. You can find manual and example in "dcihid-0.5.2.tgz".

Decision Group

- 9 -

Decision Group

- 10 -

USB 16 Channel Photo Isolator Input Board

# ..........

# **APPENDIX A** WARRANTY INFORMATION

### A.1 Copyright

Copyright DECISION COMPUTER INTERNATIONAL CO., LTD./DECISION GROUP INC. All rights reserved. No part of SmartLab software and manual may be produced, transmitted, transcribed, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of DECISION COMPUTER INTERNATIONAL CO., LTD./DECISION GROUP INC.

Each piece of SmartLab package permits user to use SmartLab only on a single computer, a registered user may use he program on a different computer, but may not use the program on more than one computer at the same time.

Corporate licensing agreements allow duplication and distribution of specific number of copies within the licensed institution. Duplication of multiple copies is not allowed except through execution of a licensing agreement. Welcome call for details.

### A.2 Warranty Information

SmartLab warrants that for a period of one year from the date of purchase (unless otherwise specified in the warranty card) that the goods supplied will perform according to the specifications defined in the user manual. Furthermore that the SmartLab product will be supplied free from defects

### ~~~~~

- 11 -

Decision Group

# Operations Manual USB 16 Channel Photo Isolator Input Board

in materials and workmanship and be fully functional under normal usage.

In the event of the failure of a SmartLab product within the specified warranty period, SmartLab will, at its option, replace or repair the item at no additional charge. This limited warranty does not cover damage resulting from incorrect use, electrical interference, accident, or modification of the product.

All goods returned for warranty repair must have the serial number intact. Goods without serial numbers attached will not be covered by the warranty.

The purchaser must pay transportation costs for goods returned. Repaired goods will be dispatched at the expense of SmartLab.

To ensure that your SmartLab product is covered by the warranty provisions, it is necessary that you return the Warranty card.

Under this Limited Warranty, SmartLab's obligations will be limited to repair or replacement only, of goods found to be defective a specified above during the warranty period. SmartLab is not liable to the purchaser for any damages or losses of any kind, through the use of, or inability to use, the SmartLab product. SmartLab reserves the right to determine what constitutes warranty repair or replacement.

Return Authorization: It is necessary that any returned goods are clearly marked with an RA number that has been issued by SmartLab. Goods returned without this authorization will not be attended to.

Decision Group -

- 12 -

USB 16 Channel Photo

Isolator Input Board ............ .................

> APPENDIX B DATA SHEET

#### SHARP

High Density Mounting Type

2. System appliances, measuring instruments

3. Registers, copiers, automatic vending

4. Electric home appliances, such as fan

5. Signal transmission between circuits of

different potentials and impedances

Photocoupler

Applications

machines

heaters, etc.

1. Computer terminals

PC817 Series

# PC817 Series

Lead forming type (I type ) and taping reel type (P type ) are also available. (PC817//PC817P )
 TUV (VDE0884 ) approved type is also available as an option.


#### Features

1. Current transfer ratio

- (CTR: MIN. 50% at I = 5mA, VCE=5V)
- 2. High isolation voltage between input and
- output (Vao : 5000V ms) 3. Compact dual-in-line package
- PC817 : 1-channel type
- PC827 : 2-channel type
- PC837 : 3-channel type

PC847 : 4-channel type

4. Recognized by UL, file No. E64380

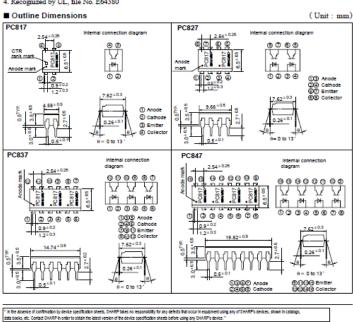

#### 

Decision Group

- 13 -

**Operations Manual** USB 16 Channel Photo

Isolator Input Board

.......................

SHARP

PC817 Series

(Ta= 25°C)

%

Ω

kHz -

MAX. Unit

1.4 V

3.0 V

10 μA

250 pF

10-7 600

0.2

1.0 pF

18 μs

18 μs


	Parameter	r		Symbol	Rating	Unit			
	Forward current			IF	50	mA			
1000	"Peak forward cu	urrent		Im	1	A	200		
Input	Reverse voltage	2		VR	6	v	- 52		
	Power dissipation	on		P	70	mW			
	Collector-emitte	er voltage		VCEO	35	V	- 23		
	Emitter-collecto	or voltage		VECO	6	V			
Output	Collector curren	at		I <sub>c</sub>	50	mA			
	Collector power	r dissipation		Pc	150	mW			
	Total power dis	sipation		Ptot	200	mW			
	*Isolation voltag	e		Viao	5 000	Vms	100		
	Operating temperature Storage temperature			Topr	- 30 to + 100	.c	- 102		
				T ag	- 55 to + 125	.c			
	"Soldering temp	erature		Tast	260	·C	0.0		
40 to 60 For 10 s		te	1	- 10					
2 40 to 60 3 For 10 s	% RH, AC for 1 minut econds tro-optical Ch	te		- 10					-
2 40 to 60 3 For 10 s	% RH, AC for 1 minut econds tro-optical Ch Parameter	te	Symbol		Conditions		MIN.	TYP.	T
2 40 to 60 3 For 10 s	% RH, AC for 1 minut econds tro-optical Ch Parameter Forward voltage	aracteris	Symbol V <sub>F</sub>	I <sub>F</sub> = 20m	A		MIN.	TYP. 1.2	Ŧ
2 40 to 60 3 For 10 s	% RH, AC for 1 minut econds tro-optical Ch Parameter Forward voltage Peak forward volta	aracteris	Symbol V <sub>F</sub> V <sub>FM</sub>	I <sub>F</sub> = 20m I <sub>FM</sub> = 0.:	IA 5A				Ī
2 40 to 60 3 For 10 s	% RH, AC for 1 minut econds tro-optical Ch Parameter Forward voltage Peak forward volt Reverse current	aracteris age	Symbol V <sub>F</sub> V <sub>PM</sub> I <sub>R</sub>	$I_F = 20m$ $I_{FM} = 0.2$ $V_R = 4V$	A 5A			1.2	
2 40 to 60 3 For 10 s	% RH, AC for 1 minut econds tro-optical Ch Parameter Forward voltage Peak forward volt Reverse current Terminal capacita	aracteris age nce	Symbol V <sub>F</sub> V <sub>FM</sub>	$I_{F} = 20m$ $I_{FM} = 0.2$ $V_{R} = 4V$ $V = 0, f^{2}$	hA 5A 7 = 1kHz				
2 40 to 60 3 For 10 s	% RH, AC for 1 minut econds tro-optical Ch Parameter Forward voltage Peak forward volt Reverse current	aracteris age nce	Symbol V <sub>F</sub> V <sub>PM</sub> I <sub>R</sub>	$I_{F} = 20m$ $I_{FM} = 0.2$ $V_R = 4V$ $V = 0, fr$ $V_{CR} = 20$	AA SA = 1kHz OV		•	1.2	
2 40 to 60 3 For 10 s Elect Input	% RH, AC for 1 minut econds tro-optical Ch Parameter Forward voltage Peak forward volt Reverse current Terminal capacita	aracteris age nce Tent	Symbol V <sub>F</sub> V <sub>FM</sub> I <sub>R</sub> C <sub>t</sub>	$I_{F} = 20m$ $I_{FM} = 0.2$ $V_R = 4V$ $V = 0, fr$ $V_{CR} = 20$	hA 5A 7 = 1kHz		•	1.2 - - 30	
2 40 to 60 3 For 10 s Elect Input	% RH, AC for 1 minut econds tro-optical Ch Parameter Forward voltage Peak forward volt Reverse current Terminal capacita Collector dark cur	aracteris age nce rent ntio	Symbol V <sub>F</sub> V <sub>FM</sub> I <sub>R</sub> C <sub>t</sub> I <sub>CED</sub>	$I_{y} = 20m$ $I_{rm} = 0.$ $V_{R} = 4V$ $V = 0, f:$ $V_{crt} = 20m$ $I_{y} = 5m\omega$	AA 5A = lkHz 0V A, V <sub>CE</sub> = 5V A, I <sub>C</sub> = 1mA		•	1.2 - - - - 0.1	
2 40 to 60 3 For 10 s Elec Input Output	% RH, AC for 1 minut econds tro-optical Ch Parameter Forward voltage Peak forward volt Reverse current Terminal capacita Collector dark cur "Current transfer ra	aracteris age nce rent ntio or volage	Symbol           V <sub>F</sub> V <sub>IM</sub> I <sub>R</sub> C <sub>1</sub> I <sub>CHD</sub> CTR	$I_{y} = 20m$ $I_{rot} = 0:$ $V_{x} = 4V$ $V = 0, f^{+}$ $V_{cx} = 2i$ $I_{y} = 5m\omega$ $I_{y} = 20m$ $DC500V$	5A 5A 7 = 1kHz 0V A, V <sub>CR</sub> = 5V 6A, I <sub>C</sub> = 1mA 7, 40 to 60% RH		•	1.2 - - - -	
2 40 to 60 3 For 10 s Elec Input Output Transfer charac-	% RH, AC for 1 minut econds tro-optical Chi Parameter Forward voltage Peak forward volt. Reverse current Terminal capacitat Collector dark cur "Current transfer ra Collector-entiter stands	aracteris age nce rent ntio os volage re	Symbol           Vr           In           In           Cr           Icno           CTR           Vcn(ut)           R_100           Cr	$I_{y} = 20m$ $I_{rm} = 0.$ $V_{R} = 4V$ V = 0, f: $V_{cn} = 20m$ $I_{y} = 20m$	5A 5A 7 = 1kHz 0V A, V <sub>CR</sub> = 5V 6A, I <sub>C</sub> = 1mA 7, 40 to 60% RH		- - - - - 50	1.2 - - - - 0.1	
2 40 to 60 3 For 10 s Elec Input Output Transfer	% RH, AC for 1 minut econds tro-optical Ch. Parameter Forward voltage Peak forward volt. Reverse current Terminal capacitat Collector dark cur "Current transfer ra Collector dark cur isolation resistanc	aracteris age nce rent ntio on volage se	Symbol         Vr           VrM         Ig           Ct         Icto           Icto         CTR           Vct(st)         R_100	$I_{F} = 20m$ $I_{FM} = 0.$ $V_{R} = 4V$ $V = 0, f^{2}$ $V_{CR} = 2i$ $I_{F} = 5mir$ $I_{F} = 20m$ $DC500V$ $V = 0, f^{2}$	5A 5A 7 = 1kHz 0V A, V <sub>CR</sub> = 5V 6A, I <sub>C</sub> = 1mA 7, 40 to 60% RH		- - - - - 50	1.2 - - - - - - - - - - - - - - - - - - -	
2 40 to 60 3 For 10 s Elec Input Output Transfer charac-	% RR, AC for 1 minut seconds tro-optical Ch Parameter Forward voltage Peak forward volt Reverse current Terminal capacitation Collector dark cur "Current transfer ra Collector dark cur "Current transfer ra Collector dark cur Floating capacitan Floating capacitan	aracteris age nce rent ntio on volage se	Symbol           Vr           In           In           Cr           Icno           CTR           Vcn(ut)           R_100           Cr	$I_{F} = 20m$ $I_{FM} = 0.:$ $V_{K} = 4V$ $V = 0, f:$ $V_{CR} = 2i$ $I_{F} = 5m$ $I_{F} = 20m$ $DC500V$ $V = 0, f:$ $V_{CR} = 5V,$	AA 5A = 1kHz 0V A, V <sub>CR</sub> = 5V A, I <sub>C</sub> = 1mA 7, 40 to 60% RH = 1MHz	- 3/B	- - - - - 50	1.2 - - - - 0.1 - - 0.1 - - 0.1 - - 0.6	

\*4 Classification table of current transfer ratio is shown below.

Fall time

Model No.	Rank mark	CTR (%)
PC817A	A	80 to 160
PC817B	B	130 to 260
PC817C	C	200 to 400
PC817D	D	300 to 600
PC8@7AB	A or B	80 to 260
PC8@7BC	B or C	130 to 400
PC8 07CD	C or D	200 to 600
PC8 #7AC	A, B or C	80 to 400
PC8@7BD	B, C or D	130 to 600
PC8 7AD	A, B, C or D	80 to 600
PC8	A, B, C, D or No mark	50 to 600



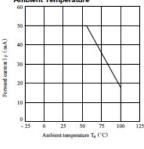


Decision Group

- 14 -

USB 16 Channel Photo Isolator Input Board ..................  **Operations Manual** USB 16 Channel Photo Isolator Input Board


------

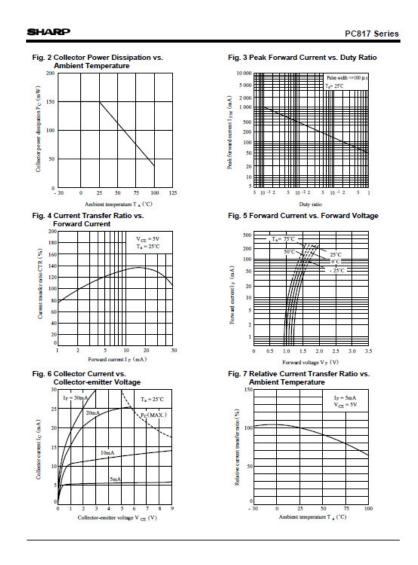

#### 

Decision Group

- 15 -

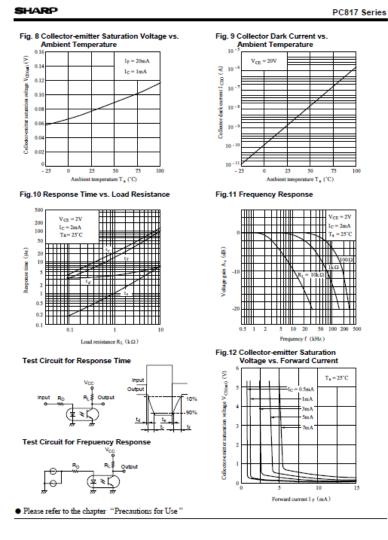

#### 

Decision Group

- 16 -

# **APPENDIX C** External Power Installation

\*\*Optional for Decision Group USB I/O series of items \*\* The materials of the external power for Decision Group USB I/O series items are customer-self-supplied or optional purchase, they are not covered in the standard package of Decision Group USB I/O series items.

**1. The Materials of the external power** (*customer-self-supplied*)



\* 5V / 1A AC adapter (*Power plug type is subject to the different varieties in different country.*).

- 17 -

Decision Group

Operations Manual USB 16 Channel Photo Isolator Input Board



\* AC power cord

### ~~~~~~

Decision Group - 18 -

USB 16 Channel Photo Isolator Input Board


2. Terminal blocks built-in on Decision Group USB I/O series of Items:




- e.g. PCB pluggable terminal blocks. (for PRO type only)
- **3. External Power Installation procedure:**



To tight / loose the terminal with a minus screwdriver. Operations Manual USB 16 Channel Photo Isolator Input Board

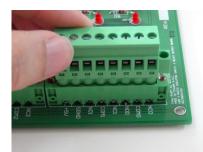

Plug the terminal blocks into the socket. (PRO type only)

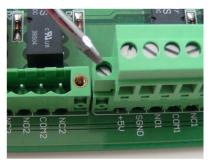

Fasten both sides of the screws (PRO type only)



Attach the black cord to the SGND and the red cord to the EXT DC+5V., as well as the signals cords

Decision Group

- 19 -

Decision Group

- 20 -

USB 16 Channel Photo Isolator Input Board



Connect your device to the computer with a USB cable



To confirm all the switches and jumper setting are correct in compliance

### ~~~~~~

Decision Group - 21 -