# **CopyBox**USB Duplicator



**User Manual** 

v. 1.1

Page 2 of 19 © 2009 Virtual Vision

# **Table of Contents**

Table of Contents	చ
Overview	
Features	
Buttons and LCD	
Operational Functions	
1. Copy	
2. Async Copy	
3. Compare	
4. Async Compare	
5. PreScan	
6. ReScan Bus	
7. Source Size	
8. Select Source	
9. Image	
9.1 Select Image	
9.2 Image Info	
9.3 Load	
9.4 Compare Image	
9.5 Delete Image	
9.6 Rename Image	
9.7 HDD Usage	
9.8 HDD Format	
10. Setup	
10.1 Language	
10.2 Copy Size	
10.3 Startup Menu	
10.4 Auto Compare	
10.5 Button Sound	
10.6 Device Info	
10.7 System Info	
10.8 Fast Copy	
10.9 Auto Start	
10.10 Auto Start Timer	
11. Advanced Setup	
11.1 Update Firmware	
11.2 Compare Firmware	
11.3 H/W Diagnostic	
11.4 Load Default	
Troubleshooting	
1CD Mossages	10

#### Overview

The CopyBox 7 USB is a standalone USB stick data backup system which supports Hi-Speed USB (USB 2.0) pen drives. Users can easily and instantly back up their pen drives through the LCD panel and keys on this system without connecting their pen drives to computers. This system supports most mainstream USB pen drives and is perfect for data backup and small-scale production in households, common offices and small businesses.

#### **Features**

- Standalone USB to USB pen drive data backup controller
- Independent copy controller without the need of additional hardware or software
- Supporting one internal 3.5-inch SATA hard drive
- Supporting one-to-many data backup of Hi-Speed USB pen drives
- Instant backup of important data from the pen drives
- LCD User-friendly interfaces and the message will be displayed on the LCD
- Updating firmware via a USB pen drive

#### **Buttons and LCD**

There are four buttons and an LCD on the panel of the CopyBox 7 USB:

#### LCD display

Displays all functions and messages.



## **Selection Button "Up"**

Scroll up the function list or the menu



# Selection Button "Enter"

Execute the selected function.



# Selection Button "Down"

Scroll down the function list or the menu.



#### Selection Button "Escape"

Abort the selected function.



Page 4 of 19 © 2009 Virtual Vision

# **Operational Functions**

The copy controller has 11 functions in total, 8 sub-functions under the ninth function, 10 sub-functions under the tenth function and 4 sub-functions under the eleventh function. These functions are listed below:

- 1. Copy
- 2. Async Copy
- 3. Compare
- 4. Async Compare
- 5. PreScan
- 6. ReScan BUS
- 7. Source Size
- 8. Select Source
- 9. Image
  - 9-01. Select Image
  - 9-02. Image Info
  - 9-03. Load
  - 9-04. Compare Image
  - 9-05. Delete Image
  - 9-06. Rename Image
  - 9-07. HDD Usage
  - 9-08. HDD Format
- 10. Setup
  - 10-01. Language
  - 10-02. Copy Size
  - 10-03. Startup Menu
  - 10-04. Auto Compare
  - 10-05. Button Sound
  - 10-06. Device Info
  - 10-07. System Info
  - 10-08. Fast Copy
  - 10-09. Auto Start
  - 10-10. Auto Start Timer
- 11. Adv Setup
  - 11-01. Update Firmware
  - 11-02. Compare Firmware
  - 11-03. H/W Diagnostic
  - 11-04. Load Default

Page 5 of 19 © 2009 Virtual Vision

#### 1. Copy

The "Copy" function copies directly the data of the source USB pen drive to a blank USB pen drive. Before copying, please make sure that the source USB pen drive is inserted and the target USB pen drive has a disk space equal to or larger than the source drive.

Choose the first function, "Copy". Insert the source pen drive to the source USB port and a blank pen drive to the target USB port.

8 Shows the number of detected pen drives, including the source and target pen drives. Press ENT to start copying data. The following message will be displayed on the LCD and the green LED on the CopyBox panel will blinks.

In the figure, the data volume and the copy time decrease while the completed percentage increases. Upon completion of data copying, the following message will be displayed on the LCD and the LED indicator of the USB port that has successfully completed the copying operation will turn orange and stay lit.

#### 2. Async Copy

The function "Async Copy" adds an extra target drive during the copying operation. Choose the second function, Async Copy.

Press ENT to start copying data. The following verification message will be displayed on the LCD:

During the process, you can insert another USB pen drive as the target of the Async Copy operation. The copying parameters will change accordingly. The blinking green USD LED on the CopyBox panel shows that the copying is in progress. When the LED turns orange and stay lit, the data copying of the USB pen drive on that USB port is completed. Upon completion, the following message is displayed on the LCD.

Page 6 of 19 © 2009 Virtual Vision

#### 3. Compare

The "Compare" function compares the data in the source USB pen drive with that in the target USB pen drive after the copying operation finishes. Choose the third function, "Compare". Please insert the source and target USB pen drives.

Press ENT to start comparing data. The following message will be displayed on the LCD.

Upon completion of data comparing, the following results will be displayed on the LCD and the LED of the target USB port will turn orange and stay lit.

# 4. Async Compare

The function "Async Compare" adds an extra target drive for data comparing during the comparing operation. Choose the fourth function, "Async Compare" and insert the source and target USB pen drives to the corresponding USB ports.

Press ENT to start comparing data. The following message will be displayed on the LCD.


During the process, you can insert another target USB pen drive for the Async Compare operation. The comparing rate will change accordingly. The blinking green USD LED on the CopyBox panel shows that the comparing is in progress. When the LED turns orange and stay lit, the data comparing of the USB pen drive on that USB port is completed. Upon completion, the following message is displayed on the LCD.

#### 5. PreScan

The function "PreScan" scans and tests the readability of the source USB pen drive. Choose the fifth function, "PreScan", and insert the source USB pen drive.

Page 7 of 19 © 2009 Virtual Vision

Press ENT. The following message will be displayed on the LCD.

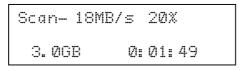

#### 6. ReScan Bus

The function "ReScan Bus" searches for the connected USB pen drives. If the controller does not automatically identify the USB pen drive, the drive can be scanned and identified again through this function.

Press ENT to enter the next figure. The default is Off. Press ▼ to select On.Press ENT. The following message will be displayed on the LCD.

Press ENT again to start scanning. The following message will be displayed on the LCD.

The number of the connected devices will be shown in the LCD. If the device remains unfound after rescanning, please check the device for defects or check the list of compatible devices on the manufacturer website.

# 7. Source Size

The function "Source Size" shows the disk capacity of the source USB pen drive.

Press ENT. The following message will be displayed on the LCD.

USB: Generic Total: 3953.0MB

Page 8 of 19 © 2009 Virtual Vision 7

#### 8. Select Source

Function 8 Select Source is to identify and assign source drives.

Select function 8.

Press ENT, and then press ▲ ▼ to select the source as shown below.

```
Select Source
USB
```

# 9. Image

Function 9 Image is only usable under Stand Alone mode when a HDD is connected. This function includes 8 subfunctions: Load, Delete Image, Image Info, Compare Image, Select Image, Select Src Drive, Image Format Info and Edit. The loaded data is called an image file.

Select function 9.

# 9.1 Select Image

This function is to select a partition in the hard disk. First, select the function by pressing ▼.

After installing a hard disk, your copy controller will format it automatically. Each partition occupies 5GB. The number of partitions is dependent on the hard disk's capacity. The partitions are alphabetically arranged. Select a partition by pressing  $\blacktriangle$   $\blacktriangledown$ , and LCD will show the message as follows.

#### 9.2 Image Info

This function is to show the basic information of an image file stored in a particular partition. First, select the function by pressing  $\nabla$ .

Press ENT, and LCD will show the information of the image file as follows.

001		3.	9GB		
NO	NAME				

Page 9 of 19 © 2009 Virtual Vision

#### 9.3 Load

Now press ENT, and you will enter the following figure. Here the function Load is to let you load data from USB into the current partition of the hard disk. "P:A" means partition A.

Press ENT to load. LCD will show the loading information as follows.

After the image file is successfully loaded, LCD will show the results as follows.

# 9.4 Compare Image

This function is to compare the contents of the source DVD and those of the image file in the partition. First, select the function by pressing  $\mathbf{\nabla}$ .

Press ENT, and LCD will show the information of the image file as follows.

When comparison is successfully, LCD will show the results as follows.

# 9.5 Delete Image

If you want to delete an image file stored in a particular partition, you can use the function Delete Image to do so. First, select the function by pressing  $\nabla$ .

The system will ask if you are sure to delete. Use ▲ ▼ to confirm Yes or No.

After the image file is deleted, LCD will show the results as follows.

Delete Image OK!

Page 10 of 19 © 2009 Virtual Vision

# 9.6 Rename Image

This function is to rename the image file. First, select the function by pressing ▼.

9-06. Image Rename Image

Press ENT, and then press ▲ ▼ to rename the image file.

Rename Image 001

After the image file is successfully renamed, LCD will show the results as follows.

Rename Ok!

# 9.7 HDD Usage

This function is to check the capacity of the HDD. First, select the function by pressing ▼.

9-07. Image HDD Usage

Press ENT, and LCD will show the information of the image file as follows.

Free: 213.7GB Total: 229.2GB

#### 9.8 HDD Format

This function is to see how you have formatted your hard disk. Now press ESC and  $\nabla$  to enter the following figure.

9–08. Image HDD Format

Press ENT, and LCD will show the information of the image file as follows.

HDD Format ? Yes

After the HDD is successfully formated, LCD will show the results as follows.

HDD Format OK!

Page 11 of 19 © 2009 Virtual Vision

# 10. Setup

The function "Setup" changes the default settings. Once the settings are changed, they have to be saved by pressing ENT. However, the default settings are recommended for best performances. This function has 10 sub functions, including: Language, Copy Size, Startup Menu, Auto Compare, Button Sound, Device Info, System Info, Fast Copy, Auto Start and Auto Start Timer. Please refer to the figure in Page 14 for detailed information. Choose the eighth function, "Setup" as shown in the following figure.

## 10.1 Language

Now, press ENT to enter the following menu. This function can specify the language of the LCD messages.

10-01. Setup Language

Press ENT to enter the following menu. The default setting is English. You can change the display language to Spanish, Japanese, Traditional Chinese and Simplified Chinese.

Language English

# 10.2 Copy Size

Now, press ESC and ▼ to enter the following menu. This function controls the percentage of the source USB pen drive to be copied.

10-02. Setup Copy Size

Press ENT to enter the following menu. The default setting is 100%. You can change the setting to ALL and 1% to 99% of the source drive, depending on your needs.

Copy Size 100% (3.9GB)

#### 10.3 Startup Menu

Now, press ESC and ▼ to enter the following menu. This function allows you to choose any function except "Advance Setup" as the first item on the menu every time the system starts.

10–03. Setup Startup Menu

Press ENT to enter the following menu. The default setting is "Copy". You can choose any other function as the first item. Remember to save the new setting by pressing ENT.

Startup Menu 1.Copy

Page 12 of 19 © 2009 Virtual Vision

# 10.4 Auto Compare

In the above menu, press ESC and ▼ to enter the following menu. This function automatically compares the source pen drive and the target pen drive after copying.

Press ENT to enter the following menu. The default setting is "Off". You can change it to "On" by pressing ▼.

Auto Compare Off

# 10.5 Button Sound

Now, press ESC and ▼ to enter the following menu. This function controls the sound of the button when it is pressed.

10–05. Setup Button Sound

Press ENT to enter the following menu. The default setting is "On". You can change it to "Off" by pressing ▼.

Button Sound On

#### 10.6 Device Info

Now, press ESC and ▼ to enter the following menu. This function shows the information of the source and target USB pen drives connected to the controller.

10-06. Setup Device Info

Press ENT to enter the following menu.

Ø USB CH: Ø Generic 3.9GB

You can browse the device information of the devices plugged to all the ports with the buttons ▲ and ▼, or enter the following menu to check the version information of the USB pen drive by pressing ENT.

Flash Disk 8.07

Page 13 of 19 © 2009 Virtual Vision

# 10.7 System Info

Now, press ESC and ▼ to enter the following menu. This function shows the system information.

Press ENT to enter the following menu.

Press ENT to enter the following menu.

Press ENT to enter the following menu.

Ram:	128MB
Flash	4Ø96kB

Press ESC to exit the menu when you finish.

# 10.8 Fast Copy

Now, press ESC and ▼ to enter the following menu. This function is fast data copying. (It supports FAT and FAT32 file formats.)

Press ENT to enter the following menu. The default setting is "On". You can change it to "Off" by pressing ▼.

#### 10.9 Auto Start

Now, press ESC and  $\nabla$  to enter the following menu. This function enables automatic data copying. It has to be used together with the 9-10 function for automatic data copying.

Press ENT to enter the following menu. The default setting is "Off". You can change it to 1-8 by pressing 
▼ according to the number of connected devices.

Auto Start Off

Page 14 of 19 © 2009 Virtual Vision

#### 10.10 Auto Start Timer

Now, press ESC and ▼ to enter the following menu. This function sets the start time of the automatic copying, which is related to the 10-09 function. If the 10-09 function is off, the 10-10 function is ineffective, too.

Press ENT to enter the following menu. The default setting is "Off". You can change it to  $50s \sim 5s$  by pressing  $\nabla$ .

# 11. Advanced Setup

The function "Adv Setup" changes system status. It includes 4 sub-functions: Update Firmware, Compare Firmware, H/W Diagnostic and Load Default. Please refer the figure on Page 14 for other information.

#### 11.1 Update Firmware

Now, press ESC and ▼ to enter the following menu. This function updates the firmware to the latest version. But you have to download the latest firmware first.

You can ask your supplier for the latest firmware by email or directly download the latest firmware from the website, . Extract the zip file to a blank pen drive. You don't have to extract the file if it is a bin file. Insert the pen drive to the source USB port and press ENT. The system will start searching for the new firmware as shown in the following figure:

The following message will be displayed on the LCD when the system finds new firmware.

Next, press ENT to start updating the firmware. Upon completion, the system will reboot itself automatically.

#### 11.2 Compare Firmware

Now, press ESC and ▼ to enter the following menu. This function compares the current version of firmware and the newly download firmware. It verifies whether the download version is the latest.

Page 15 of 19 © 2009 Virtual Vision

Next, press ENT to start comparing the firmware as shown in the following figure.

Compare Firmware

1.01L--1.01L ? Yes

Press ENT to confirm the comparing.

Compare Firmware
Ok!

You can upgrade the firmware after the comparing confirms that it is the latest.

# 11.3 H/W Diagnostic

Press ESC and ▼ to enter the following menu. This function tests the system.

11-03. Adv Setup H/W Diagnostic

Press ESC and ▼ to enter the following menu. The system first tests the LCD and next the buttons. Subsequently, the system carries out the RAM self test, hardware connection test and flash memory test. All the test results are displayed on the LCD. This is most easy and simple way to check whether the system functions normally.

LCD Test Start

Upon completion of the entire process, the following message will be displayed on the LCD.

Test finished

# 11.4 Load Default

Now, press ESC and ▼ to enter the following menu. This function restores all the settings to the default values

11-04. Adv Setup Load Default

Press ENT and ▼ to enter the following menu. Confirm restoring to the default values by pressing ▲ or ▼.

Load Default Config? Yes

Upon completion of loading, the following message will be displayed on the LCD.

Load Default OK

Page 16 of 19 © 2009 Virtual Vision

# **Troubleshooting**

#### The LCD

If nothing shows up on the LCD after system starts, please ensure the power cable is firmly connected and the sockets work normally.

#### The Error Messages

If a user stops the copying process by pressing ESC, an error message will be displayed on the LCD. Interruption of the copying process may freeze the system and rebooting the system is necessary. If the USB pen drive is unreadable, an error message will appear on the LCD. Please get another USB pen drive and try again. If the copy controller does not detect any device after it initializes, an error message will be displayed on the LCD.

#### Compatibility of USB pen drives

You can download the list of compatible USB pen drives from the ACARD website and check your drive's compatibility.

#### **Buttons**

If the buttons are irresponsive, they might not work properly. Please check the settings of the crossover switches.

#### <u>Unreadable USB pen drives</u>

If the USB pen drive is unreadable after copying, please check the drive through the "Compare" function or try again with a new pen drive.

#### High Failure Rate

If the failure rate of data copying is pretty high, please following the following procedures to improve it

- 1. Check if the pen drive has good quality.
- 2.Update the firmware.

# <u>Updating Firmware</u>

If you have trouble updating the firmware, please check the firmware. It might be caused by incorrect file download. Failure to update the firmware may make the system unable to start. In this case, please send the controller board back for repair.

#### The Ninth Function and Cancelling

To execute the ninth function "Adv Setup", please press and hold down ESC for 2 seconds. You can also cancel a function, such as copying and testing, during operation by pressing and holding down ESC for 2 seconds.

Page 17 of 19 © 2009 Virtual Vision

# **LCD Messages**

Initialize SDRAM Initializes the system SDRAM

**Detect Drives** Detects the USB pen drives connected to the system

User Abort! Aborting the operation in progress **Analyzing** Analyzes the source USB pen drive

Source Drive Not Exist The source USB pen drive is not inserted or unable to identify Target Drive Not Exist The target USB pen drive is not inserted or unable to identify

**HDD Image Not Exist** The Hard Disk do not have image file

HDD Image Read Fail The image file can not be read or read error from Hard Disk Source Drive Read Fail The source USB pen drive can not be read or read error The target USB pen drive can not be read or read error Target Drive Read Fail The target USB pen drive can not be written or write error Target Drive Write Fail

Target Drive Space Not Enough The target USB pen drive space is too small The PreScan of the source USB pen drive fails

> Saving the new configuration fails Load the default configuration or not?

The system is preparing itself for data copying The system is checking the target device now

The two copies of data for comparison are identical Hold down ESC for about 1 second to terminate the test

PreScan Fail!

Save new config Fail! Load Default Config?

Preparing

Check Target Please Await

Identical Hold ESC to Exit

© 2009 Virtual Vision Page 18 of 19

Page 19 of 19 © 2009 Virtual Vision