



**i.relax Aroma Diffuser**  
**Model: WS903**

**USER MANUAL**



EN

# i.relax Aroma Diffuser

## Model: WS903

### USER MANUAL

#### CONTENTS

- Introduction.....2**
- Overview.....2**
  - Front view.....2
  - Back view.....2
  - Remote control.....2
  - LCD Display.....3
- Getting Start.....3**
  - Power Supply.....3
- Function Setting.....4**
  - Manually Setting Clock.....4
  - Diffusing Setting.....4
  - Lighting Setting.....4
  - Sound Setting.....4
  - Sleep Timer Setting.....4
  - Auto Timer On Setting.....5
  - Adjust LCD Brightness.....5

- Sound Volume .....5
- Specifications.....5**
- Precautions.....5**
- Maintenance.....6**
- EU-Declaration of conformity.....7**
- About Oregon Scientific.....7**

## INTRODUCTION

Thank you for your purchase of i.relax Aroma Diffuser. Please read these instructions carefully and keep the manual near for future reference.

By breaking up a mixture of water and essential oils into millions of micro-particles, This aroma diffuser is designed to help you relax at home. Oregon Scientific designed this product to provide you with three of the well known holistic relaxation methods: Aromatherapy, Colour Therapy and Sound therapy.

## OVERVIEW

### FRONT VIEW




1. **IR RECEIVER:** Receive IR remote control signal.
2. **LCD DISPLAY:** Display all information of time and setting.

### BACK VIEW




1. **REMOTE CONTROL:** Remote control should be placed here when unused.
2. **DC:** Socket for connecting to AC/DC power adaptor.
3. **RESET / SET CLOCK:** Reset unit to default settings and then enter clock setting.

### REMOTE CONTROL

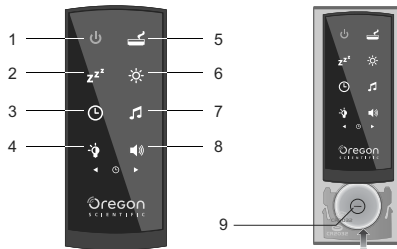

1. **POWER:** Turn on/off the unit.
2. **SLEEP:** View remaining time; enable sleep function with diffusing / nature sound / light; set sleep timer.
3. **TIMER:** View auto timer ON status; enter timer settings.
4. **BRIGHTNESS / -:** Toggle high/low LCD brightness; decrease values of the setting.
5. **DIFFUSE:** Toggle through selection (ON / REPEAT ON&OFF 30 seconds/ OFF).
6. **LIGHT:** Toggle through selection (Red / Orange / Yellow / Green / Blue / Purple / Loop).
7. **SOUND:** Toggle through 5 soothing sounds.
8. **VOLUME / +:** Toggle through 3 sound volumes; increase values of the setting.
9. **CR2025 batteries** - already installed

### LCD Display

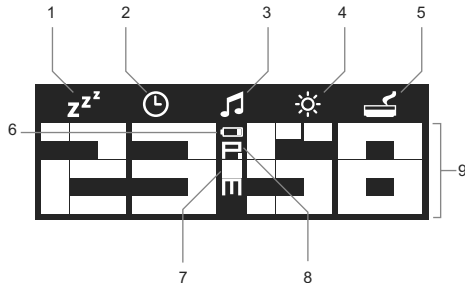

1. Sleep mode is ON
2. Auto timer mode is ON
3. Soothing sound is ON
4. Lighting is ON
5. Diffusing is ON
6. Battery low / no battery
7. 24HR clock format
8. AM/PM
9. Clock / settings

### GETTING STARTED

#### POWER SUPPLY

1. Remove the battery insulator before use.
2. Pour maximum 300ml tap water in room temperature into the water tank.
3. Add few drops of essential oils into the water.
4. Put back the cover.
5. Plug in the power adaptor.
6. Press the infrared remote control on remote control compartment to take it out.
7. After using the remote control, insert it to the remote control compartment.
8. Press **POWER** to turn on the unit.

**NOTE** Do not use distilled water with this product. Water temperature should be 15 - 40 °C. 100% nature essential oil should be used. Switch off the unit and unplug from the mains before moving or cleaning the unit.

**To pour the water out**

1. Turn the unit around to view front of the product (LCD facing you).
2. Pour the water out from the left edge.

**IMPORTANT** Do not empty water from the air tunnel or other sides. If water goes into the air tunnel during transportation, it will be normal that water passing out from the bottom. The air tunnel inside is designed as water resistant. Please wait until the air tunnel is dry before use.

**FUNCTION SETTING****MANUALLY SET CLOCK**

1. Press **RESET** to enter setting mode.
2. Press **BRIGHTNESS** or **VOLUME** to change the settings or press and hold **+ / -** to rapidly change the settings.
3. Press **TIMER** to confirm and move to next setting. The setting order is: 12/24 hr format and time.

**DIFFUSING SETTING**

1. Press **DIFFUSE** to enter setting mode.
2. Press **DIFFUSE** repeatedly to select desired diffusing mode or to turn diffuser off. The setting choices are:
  - ON for 120 minutes
  - 30 seconds ON & 30 seconds OFF
  - OFF

**NOTE** When there is no or not enough water, the diffusing function will be automatically switched OFF.

The "💧" will continue flashing to indicate low water level. Turn **OFF** the unit first and fill enough water and then turn it **ON** again.

The mist output should not be directed towards furniture or electrical appliances.

**LIGHTING SETTING**

1. Press **LIGHT** to enter setting mode.
2. Press **LIGHT** repeatedly to select desired lighting mode or to turn lighting off.
3. The setting order is: **red, orange, yellow, green, blue, purple, loop** and **OFF**.

**SOUND SETTING**

1. Press **SOUND** to enter setting mode.
2. Press **SOUND** repeatedly to select desired soothing sounds or to turn sound off.
3. The setting order is: soothing sounds (1-5) and **OFF**.

**SLEEP TIMER SETTING**

1. To adjust sleep timer setting
2. Press **SLEEP** to enter setting mode. Press **SLEEP** repeatedly to change the sleep timer setting or to turn it off.
3. The setting (minutes) order is: **120, 90, 60, 30, 15** and **OFF**.

**To view time remaining:**

- Press **SLEEP**.

**IMPORTANT** Press **SLEEP** twice to change sleep timer from **OFF (OFF, 120, 90, 60, 30, 15, 0 min)**.



## AUTO TIMER ON (ALARM) SETTING

1. Select the auto timer ON(alarm)/ wake up condition
  - Turn ON diffusing if auto timer ON(alarm) with aromatherapy.
  - Turn ON and select one colour of lighting if auto timer ON(alarm) with lighting.
  - Turn ON and select one soothing sound if auto timer ON(alarm) with nature's sound.
2. Press **TIMER** to enter **TIMER** setting mode.
3. Press +/- to change the settings or press and hold +/- to rapidly change the settings.
4. Press **TIMER** again to save and exit setting.
5. Turn OFF the unit before auto timer ON(alarm) time. The unit will be automatically turned ON according to the auto timer(alarm) with selected condition.

## ADJUST LCD BRIGHTNESS

- Press **BRIGHTNESS** to change the brightness. The setting order is: High and low.

## SOUND VOLUME

1. Press **VOLUME** to enter setting mode.
2. Press **VOLUME** repeatedly to change the volume setting or to turn it off. The setting order is: Volume level low, middle, high.

### RESET

- Press **RESET** to return to the default settings and set clock.

## SPECIFICATIONS

TYPE	DESCRIPTION
<b>MAIN UNIT</b>	
L x W x H	190mm(L) x 190mm(W) x 70mm(H) (7.48in x 7.48in x 2.76in)
Weight	660g (21.16 oz)
Water tank volume	300ml
Power	Power adaptor: INPUT 100 – 240V ~ 50/60Hz Battery (Remote Control): CR2025 x 1 Clock backup battery: CR2032 x 1

## PRECAUTIONS

- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Keep your aromadiffuser at normal room temperature, and do not use it at very low temperatures (< 0°C).
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- Remove dust regularly with a dry cloth. Accumulated dust poses a potential fire hazard.
- Do not expose your aromadiffuser to extreme heat or light (eg. direct sunlight).
- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.

- Do not tamper with the unit's internal components. This invalidates the warranty.
- Only use fresh batteries.
- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment.
- Placement of this product on certain types of wood may result in damage to its finish for which Oregon Scientific will not be responsible. Consult the furniture manufacturer's care instructions for information.
- The contents of this manual may not be reproduced without the permission of the manufacturer.
- Do not dispose old batteries as unsorted municipal waste. Collection of such waste separately for
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance
- The instructions shall include the substance of the following:  
The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or fire risk.

For the alliances that are directly plugged into socket-outlets, if the temperature rise of accessible surfaces during the test of Clause 11 exceeds the value specified for handles, knobs, grips and similar parts that are held for short periods only in normal use, the instructions shall include the substance of the following:

- The appliance has hot surfaces to evaporate the active ingredients and these surfaces should not be touched during use.

**NOTE** The technical specifications for this product and the contents of the user manual are subject to change without notice.

**NOTE** Features and accessories will not be available in all countries. For more information, please contact your local retailer.

## MAINTENANCE

- Water temperature should be 15 - 40 °C.
- Clean water tank and cover weekly.
- Refresh the water in the water tank each time you use the unit.
- Clean the unit completely, drain the water from water tank and dry all parts with a soft, dry cloth when you are not going to use the unit for a long time.
- Do not immerse the whole unit, or plug in water or any other liquid. Clean the base unit with a damp cloth.
- Do not use cleaning or scouring agents.



EN

## EU-DECLARATION OF CONFORMITY

Hereby, Oregon Scientific, declares that this i.relax Aroma Diffuser (Model: WS903) is in compliance with EMC directive 2004/108/EC. A copy of the signed and dated Declaration of Conformity is available on request via our Oregon Scientific Customer Service. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



## ABOUT OREGON SCIENTIFIC

Visit our website ([www.oregonscientific.com](http://www.oregonscientific.com)) to learn more about Oregon Scientific products.

If you're in the US and would like to contact our Customer Care department directly, please visit: [www2.oregonscientific.com/service/support.asp](http://www2.oregonscientific.com/service/support.asp)

