



Massage Seat
with Heat
Model: IBM80021

USER MANUAL

Massage Seat with Heat

Model: IBM80021

USER MANUAL

CONTENTS

Introduction	1
Important Safety Instructions	1
Precautions	1
Overview	
Massager	2
Control Panel.....	2
Features	2
Getting Started	
Conneting to Mains.....	3
Turning on the Massager.....	3
Choosing Massage Zones.....	3
Massage with Heat Function.....	3
Seat Massager.....	3
Demo Mode.....	3
Maintenance	
Storing	3
Cleaning	3
Recommended Massage Time	3
Specifications	4
About Oregon Scientific	4
EU-Declaration Of Conformity	4

INTRODUCTION

Thank you very much for purchasing "IBM80021 **Massage Seat with Heat**". This instruction manual contains useful information on appropriate use and maintenance of this product. In order to benefit from its features, read this manual before first use and save it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING AN ELECTRICAL PRODUCT, ESPECIALLY WHEN CHILDREN ARE PRESENT, ALWAYS FOLLOW BASIC PRECAUTIONS, INCLUDING THE FOLLOWING INSTRUCTIONS: Read all instructions before using these units.

DANGER To reduce the risk of electric shock:

- Unplug the unit from the electrical outlet immediately after using and before cleaning.
- If the unit has been dropped into water, do not pick up or touch it. Switch off at the mains and unplug immediately. Do not operate if it is wet.
- Do not use while bathing or in shower. Keep the unit always dry. Store the unit in a dry and safe place. Keep away from risks of dropping into a sink or a tub. Do not submerge in water.
- Do not insert pins or other metallic fasteners into the unit or any openings.
- Do not sit or stand on the massage unit (the back part of the appliance).

DANGER To reduce the risk of burns, fire or injury to persons:

- Do not leave a plugged unit unattended.
- Unplug from outlet when not in use and before putting on or taking off parts.
- Before unplugging, turn the unit off by pressing the on / off button on the remote control.
- The unit is not intended for use by persons with certain disabilities or lack of knowledge.
- Do not cover or use the unit under a blanket when operating. Covering it during use may excessively heating the unit which may cause fire, electrocution or injury to persons.
- Stop using the unit when you are feeling drowsy. Do not use when you are sleeping.
- Stop using the unit if it is damaged, wet, tempered, forced or not functioning properly. If in doubt, contact our help line.
- Keep the power cord away from heated surface.
- Do not operate where aerosol (spray) units are being used or where oxygen is being administered.
- Do not put heavy objects on the unit. Avoid risk of crushing.
- This unit is intended for indoor use only.
- Use this unit only for its intended use as described in this manual.
- Do not use attachments not provided with the unit or recommended by Oregon Scientific.

- Save the user manual for future reference.

PRECAUTIONS


Please read all instructions carefully before operating.

- This unit is not intended for medical use or to substitute medical care. It is intended only to provide a luxurious massage.
- Individuals, who are pregnant, fitted with pacemaker, suffering from diabetes, phlebitis and / or thrombosis, or are at an increased risk of developing blood clots due to recent surgery or prolonged bed rest should consult their physician before using the unit.
- Do not use if you have poor blood circulation. If in doubt, consult with your doctor.
- This unit should not be used by any individual suffering from any physical ailment that would limit the user's capacity to operate the controls or who has sensory deficiencies in the lower half of their body.
- Do not use if you have diabetes, tuberculosis, benign or malignant tumours, phlebitis and thrombosis, or if you have poor circulation.
- Do not use the unit directly on open wounds, swollen or inflamed areas and skin eruptions.
- Do not use the unit on erupted, swollen, inflamed skin areas, when you have a skin disease, ulcer or varicose veins are present.
- Consult a physician before using if you have any kind of fungal infection, swelling, fracture or persistent pain.
- If you feel ill after use or experience pain in muscles or joints for a long time, discontinue use and consult a physician. Persistent pain could be a symptom of a more serious condition.
- Do not use this unit before going to bed. The massage has a stimulating effect which may delay sleep.
- If you are feeling drowsy, stop using the unit and do not leave the unit operating when you are sleeping.
- Do not leave the unit unattended when children are present. This unit is not suitable for children's use. Keep out of reach of children.
- Do not cover the unit e.g. with pillow or blanket when it is in operation.
- Do not obstruct with objects or thrust any part of your body in the moving massage mechanism.
- Do not lift this unit by pulling the power cord or use the cord as handle.
- Do not use in automobiles.
- Do not use this unit in bed.
- Do not use the unit for more than 15 minutes at a time. Excessive use may overheat the unit. Should this occur, stop using the unit and wait until it cooled down before the next use.


- Ensure that your hands are dry when operating the controls or removing the plug.
- Do not sit or stand on the massage unit (the back part of the unit).
- Before unplugging, turn the unit off by slide the controller to OFF position.
- This unit is designed for non-professional use only.
- Not recommended for use on timber surfaces as the zipper may damage the wood. Take special care when using on upholstered furniture.
- Do not crush. Avoid sharp folds.
- To avoid the Velcro straps damaging your clothes, avoid wearing delicate fabrics or knitwear when using this unit.

OVERVIEW

MASSAGER

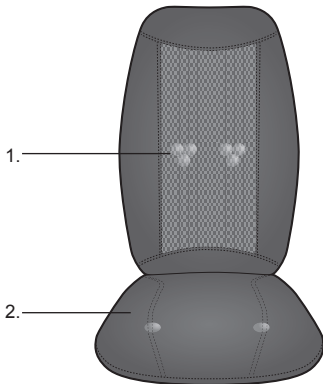


1. Kneading massage nodes
2. Massage seat.

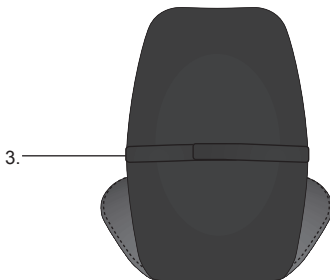

3. Velcro straps fastener

REMOTE CONTROL

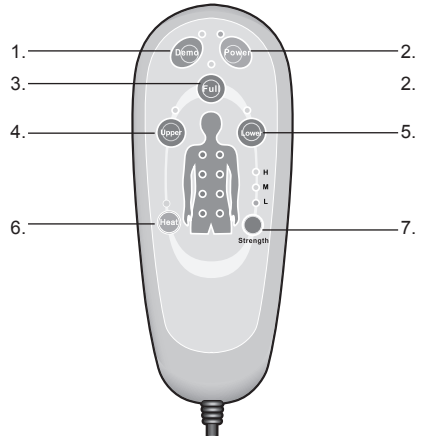

1. **DEMO:** Brief demonstration of the unit's functions
2. **POWER:** Press to turn on / off the unit.
3. **FULL:** The massager nodes travel to and fro hip area to shoulder area
4. **UPPER:** The massage nodes travel to and fro the shoulder area and the waist area
5. **LOWER:** The massage nodes travel to and fro the hip area and the waist area
6. **HEAT:** Press to turn heat function on
7. **STRENGTH:** Press to adjust the strength of the seat massage.

FEATURES

- XXXXXXXXXXXXXXXXXXXXXXXX
- XXXXXXXXXXXXXXXXXXXXXXXX
- XXXXXXXXXXXXXXXXXXXXXXXX
- XXXXXXXXXXXXXXXXXXXXXXXX
- XXXXXXXXXXXXXXXXXXXXXXXX

GETTING STARTED

WARNING

Preparing the units for your first time use

The **Massager** comes with 2 screws located on the back of the unit to protect the unit's mechanism during shipment. These screws must be removed before the first use to avoid damage. Use the provided allen key to remove the screws and then use the provided black plug to fill the hole. Dispose the screws appropriately.

When using the unit for the first time, you will hear a "pop" sound. This indicates that the secure lock has been unlocked. This only happens when the unit is used for the first time.

CONNECTING TO MAINS

1. Connect power adaptor to mains.
2. Connect the DC jack to the power adaptor.

WARNING

- Do not pull the power cord or wrap it around the unit.
- Do not sit on the power cord.

TURNING ON THE MASSAGER

1. Press the **POWER** button to turn the unit on. The LED indicator light will illuminate and confirm you selection.
2. To turn off the massager, press the **POWER** button again. The LED indicator light will blink while the massage nodes are returning to the starting position.

NOTE The massage mechanism always returns to the starting position when the massage course ends and when the unit is turned off at the control panel. If the electrical supply is interrupted, when the power restores, the mechanism will go back to the original point before a new massage begins. Press **POWER** to begin a new massage.

CHOOSING MESSAGE ZONES

1. Press **Full**, **Upper** or **Lower** button to choose the massage area as needed. The corresponding LED light will illuminate. Press
2. the same button to deselect and the LED indicator light will turn off.

NOTE The massager will turn off automatically after 15 minutes operation to prevent the unit overheating.

MESSAGE WITH HEAT FUNCTION

1. After chosen the massage program, press the **HEAT** button to turn on the heat function. The corresponding LED indicator light will turn on.
2. Press the same button to deselect the heat and the LED indicator light will turn off.

NOTE For your safety, the heat function cannot be turned on alone without any massage program chosen.

SEAT MASSAGER

1. Press the **STRENGTH** button to turn on the seat massage. The corresponding LED light indicator will be on.
2. Press the button multiple times to toggle through massage strength of low, medium, high and seat massage off option. The LED light indicator will be turned off when the seat massage is off.

DEMO MODE

For a brief demonstration of the features of the Massage Seat, press the **DEMO** button. The unit will start a cycle of kneading back massage. Once complete the unit automatically turns off.

MAINTENANCE

STORING

Place the unit in its box or in a safe, dry, cool place. Refrain from sharp edges or pointed objects that might cut or puncture the fabric surface. To avoid breakage, do not wrap the power cord around the unit. Do not hang the unit by the power cord or the cord of the remote control unit.

CLEANING

Unplug the unit and allow it to cool down before cleaning. Clean only with a soft, slightly damp sponge. Never allows water or any other liquids to come into contact with the unit.

- Do not immerse in any liquid.
- Never use abrasive cleaners, brushes, gasoline, kerosene, glass / furniture polish or paint thinner to clean.

WARNING

Do not attempt to repair the **Massage Seat with Heat**. There are no user serviceable parts.

RECOMMENDED MESSAGE TIME

Generally, a back massage could take up to 15 minutes. You may choose to use it once or twice daily as needed.

If you have any doubts or concerns, always consult your doctor.

SPECIFICATIONS

TYPE	DESCRIPTION
MAIN UNIT	
L x W x H	mm(L)x4mm(W)x mm(H) (in x in x in)
Weight	g (oz)
Power	V DC power adaptor: INPUT V Hz

ABOUT OREGON SCIENTIFIC

Visit our website (www.oregonscientific.com) to learn more about Oregon Scientific products. If you're in the US and would like to contact our Customer Care department directly, please visit: www2.oregonscientific.com/service/support
 OR
 Call 1-800-853-8883.
 For international inquiries, please visit: www2.oregonscientific.com/about/international

EU-DECLARATION OF CONFORMITY

Hereby, Oregon Scientific, declares that this **Massage Seat** (model: IBM80021) is in compliance with the essential requirements and other relevant provisions of Directive 1999 / 5 / EC. A copy of the signed and dated Declaration of Conformity is available on request via our Oregon Scientific Customer Service.

