



BIO BIDET SIMPLET BBC-70





BIO BIDET® BBC-70

WARNING

Do Not over-tighten plumbing connections.

Over-tightening plumbing connections can damage parts and cause leak.

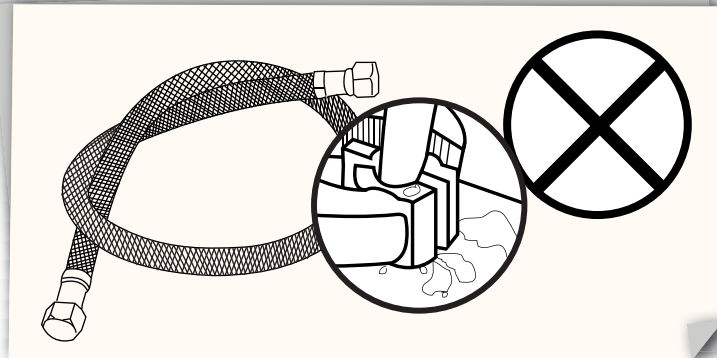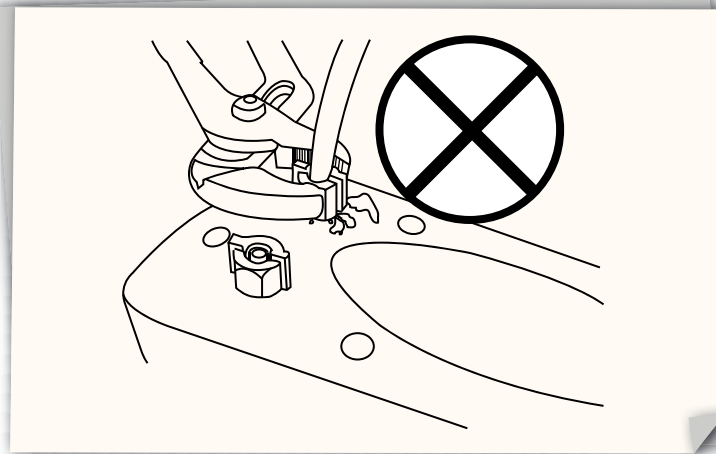

CONTENTS

Functions and Characteristics	4
Parts list	5
Configuration	6
Final Assembly	7
Installation Instruction	8
Maintenance	10
Warranty	12
Contact	



Read this manual carefully
and install properly



This product should be installed
accordingly to the manual




Keep this manual for future reference

BIO BIDET® BBC-70

Functions and Characteristics


- Ambient Temperature bidet model
- Ingenious splash guard
- Continuous Controlled Water Stream
- No electricity or battery required
- Connects directly to fresh water line
- Adjustable brackets
- Adjustable Pressure Control
- Quality Silver Brass Part
- Universal T valve
- Removable nozzle for better hygiene
- Splash Guarded Nozzle
- P.S.P.C (Positive Stepping Pressure Control)
- Double sided body panel

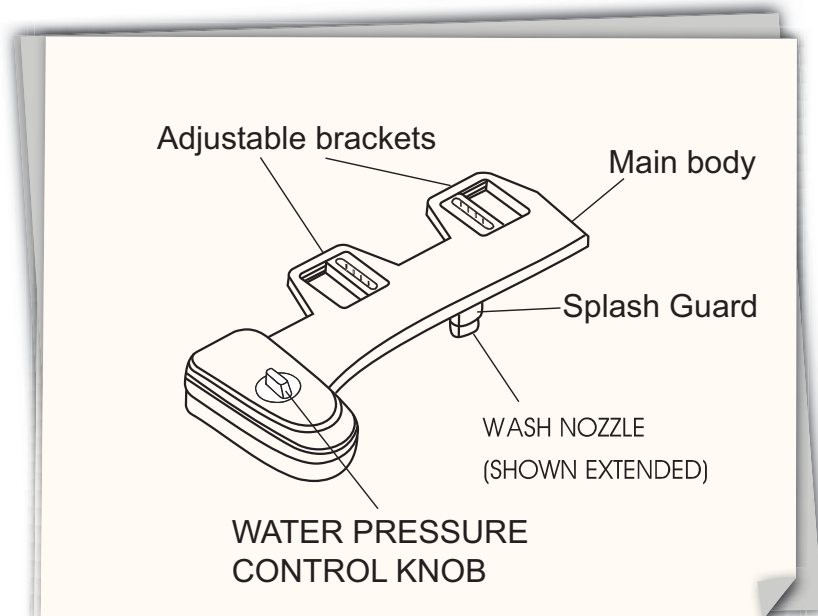

BIO BIDET® BBC-70


Parts List

Name	Quantity
Bidet	1
7/8" Fill Valve Adaptor	1
Water Supply Hose	1
Protective O rings	2
Owner's Manual	1

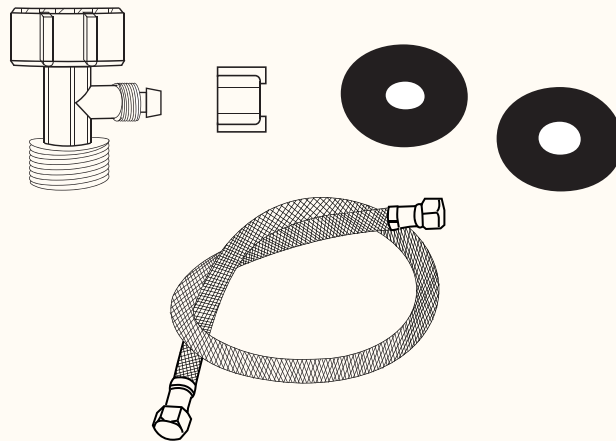

BIO BIDET® BBC-70

Configuration

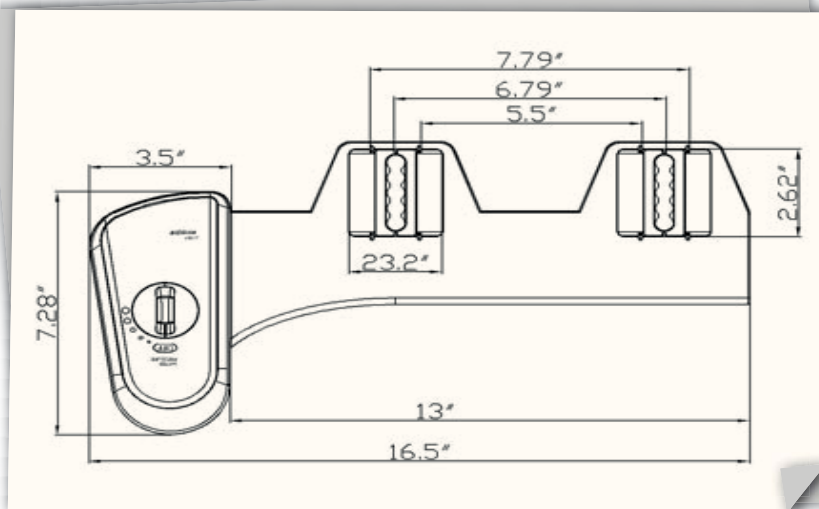

bio bidet Silver Brass flow valve

Silver Brass Ball
Water Flow Valve for
precise flow control

Silver Brass Pressure
Control Stem for maximum
durability


Quality ABS Resin



COPY RIGHT® BIO BIDET

BIO BIDET® BBC-70

Tighten nuts while checking for leaks.
Do Not over tight.

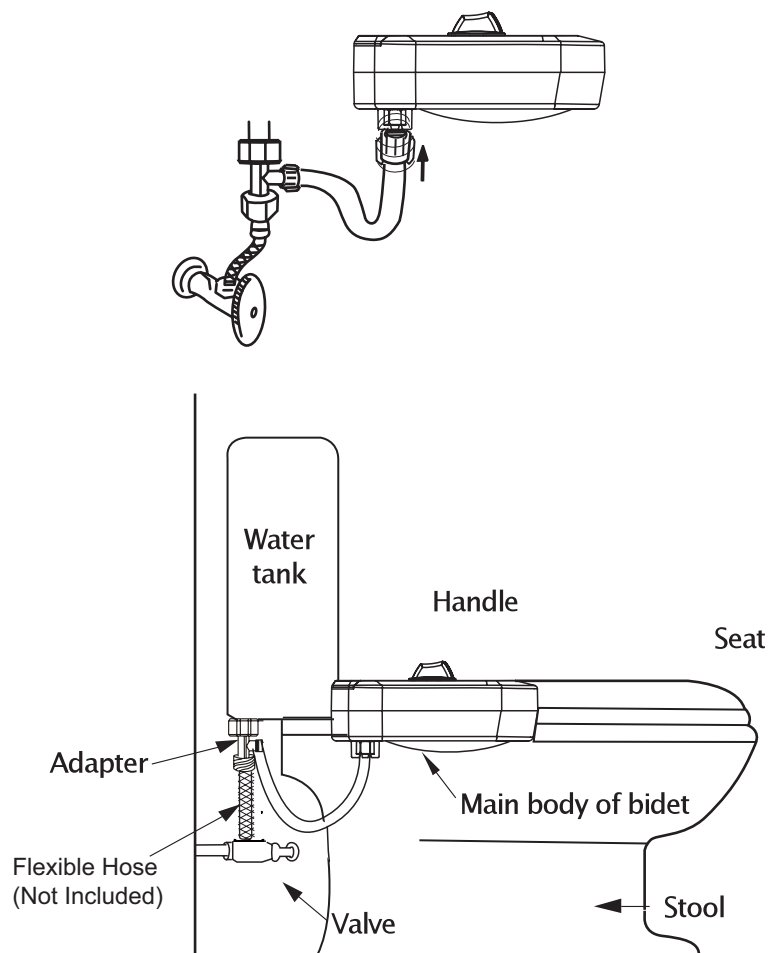


Installation Instructions

1. CAUTION

Do Not over tight any connections. Over tightening connections and adaptor can cause damage to the parts.

2. PROCEDURES OF ASSEMBLY

1

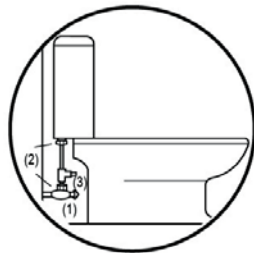

Shut water supply by turning it to the right and disassemble the water hose.
Flush toilet to drain water inside of toilet water tank before disassembling the water hose.


BIO BIDET® BBC-70

2




Remove existing seat and lid.
Release the bolts on both side of
the existing toilet seat.

3

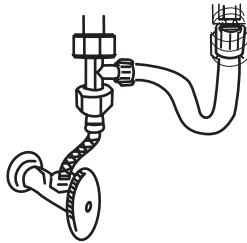


Connect supplied T valve to the
toilet fill valve. Note T valve will
be connected directly to toilet fill
valve, not the shut off valve. Then
connect rest of water lines to
connected T valve.

4

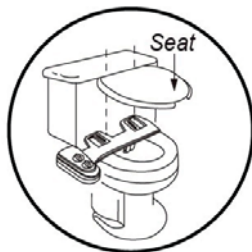

Mount bidet and toilet seat/lid
over toilet mounting holes.
Supplied rubber O-rings should be
placed under the bidet mounting
bracket to protect and secure
bidet on the toilet.

5

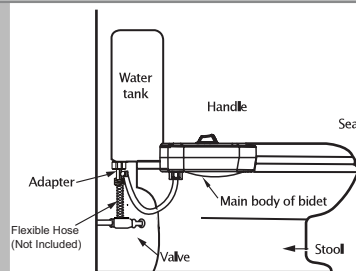

Open shut off valve and
check for any leaks.

Maintenance

To clean the nozzle, gently pull down on the head of the nozzle, and use a toothbrush or soft cloth and mild detergent to clean the nozzle. You may also remove entire nozzle assembly and soak it in mild detergent.

Do not use any harsh, abrasive products to clean Simplet BBC-70, which may damage surface of the product.



Warranty

Your Bio-Bidet,

Is warranted against defects in materials or workmanship for one (1) year from the Date of original purchase .Defective parts or a defective product returned to Bio Bidet will be repaired with new or comparable rebuilt parts or exchanged for a Refurbished Bio-Bidet as determined by Bio Bidet in their sole discretion

This limited warranty given by Bio Bidet covers all defects encountered in normal use of Bio-Bidet, and do not apply in the following cases:

1. Loss of or damage to Bio-Bidet due to abuse, misuse, tampering, mishandling, improper packaging by you, alteration and fail to fallow operating instructions.
2. Use of parts or supplies (other than those by Bio Bidet's dealers) that cause damage to Bio-Bidet.
3. Replacement of discolored or stained parts caused by chlorine, bleach, ammonia and other chemicals, cleaning supplies, oxidation, normal wear and tear.
4. Damage to or malfunction of the unit as a result of improper and negligent installation.

BIO BIDET® BBC-70

5. Any and all damages to plumbing, walls, floors, ceiling and personal properties resulting from water leaks or breakage. The product must be used at the user's own risk. Therefore, the owner hereby releases the manufacturer and distributor from any and all claims for damages where the above condition exists.

No implied warranty, including any implied warranty of merchantability or fitness or a particular purpose, applies to BBC innovation bidet after the applicable period of the express limited warranty stated above, and no other express warranty or guarantee, except as mentioned above, given by any person or entity with respect to Bio-Bidet shall bind Bio Bidet, (Some States and provinces do not allow limitations on how long an implied warranty, so the above limitation may not apply to you) BBC innovation shall not be liable for revenues or profits, inconvenience, expense for substitute equipment or service, or any other special, incidental or consequential damages caused by the use or misuse of, or inability to use, Bio-Bidet, regard-less of the possibility and foresee-ability of such damages. In no event shall recovery of any kind against BBC innovation be greater in amount than the purchase price of the product and causing the alleged damage. Without limiting the foregoing, you assume all risk and liability for loss, damage or injury to you and your property and to others and their property arising out of use or misuse of ,or inability to use, the Bio-Bidet not caused directly by the negligence or BBC innovation This limited warranty shall not extend to anyone other than the original purchaser of the Bio-Bidet

BIO BIDET® BBC-70

Thank You

Technical support / Customer Service

Bio Bidet
205 Berg ST Algonquin, IL 60102

T : 847.458.2334
U.S TOLL FREE : 877.339.5214

support@biobidet.com
www.biobidet.com