



User Manual


Spend a little Live a lot.

MEDION[®] 4.5" SMARTPHONE





GB IRE

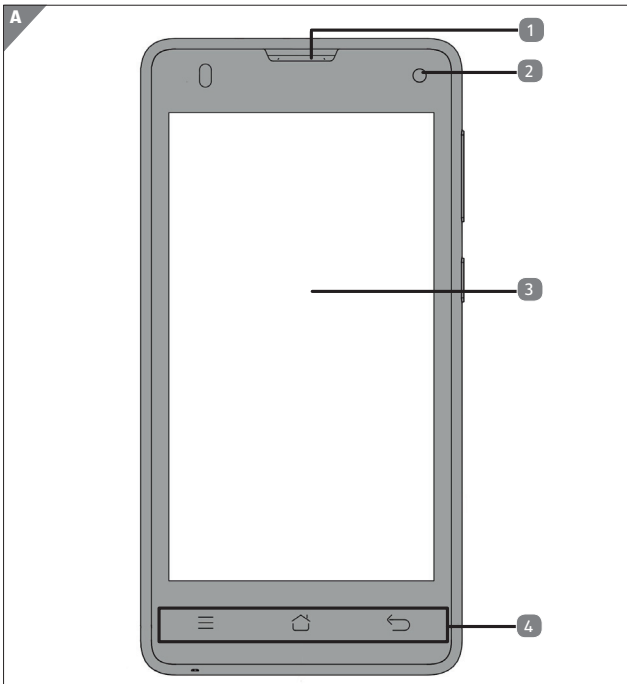

2



www.medion.co.uk

AFTER SALES SUPPORT




GB 0333 32 13 106
IRE 1800 992508





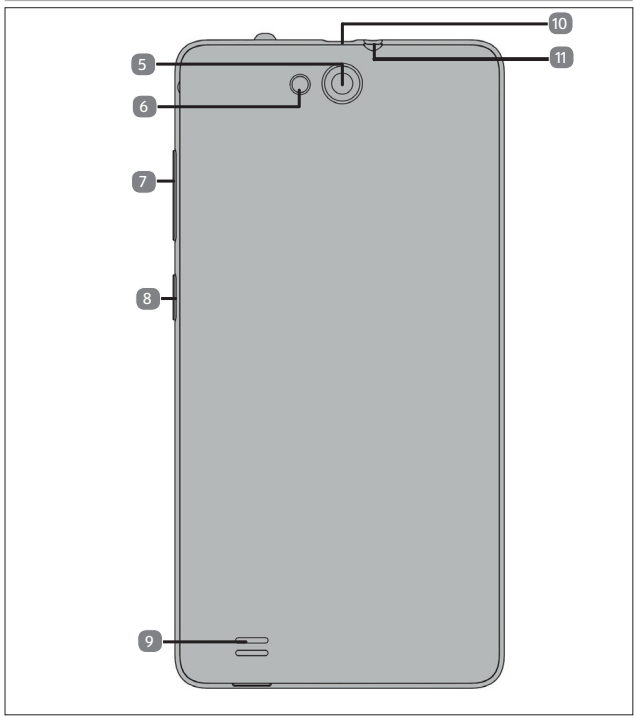


IRE GB



AFTER SALES SUPPORT




  0333 3213106
 1800 992508



www.medion.co.uk



Scope of delivery/device parts

- 1 Receiver
- 2 Camera
- 3 Touch display
- 4  Tap the button: shows the options available for the current display (option button)
-  Tap button: return to the home screen (start button)
-  Tap the button: return to the previous screen (back button)
- 5 Camera
- 6 Flash-LED
- 7 Volume button
- 8 On/off switch
- 9 Loudspeaker
- 10 Micro USB connection
- 11 3.5 mm jack for headset



Contents

Scope of delivery/device parts	4
About these Instructions	9
Symbols and Keywords used in these Instructions	9
Proper use	11
Usage limitations	12
Additional costs for Internet and roaming usage	13
Safety instructions	14
Making calls while driving	14
General	17
Cleaning and care	21
Data backup	22
Information about the display	22
Notes on batteries and rechargeable batteries	23
Environmental requirements	25
In the event of faults	26
People with pacemakers	26
People with hearing aids	27
Emergency calls	27
Saving a number for use in emergencies	28

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1800 992508



www.medion.co.uk

Contents of package	29
Preparations for using the telephone	30
SIM card	30
Inserting SIM cards and a microSD card	31
Inserting the battery	32
Charging the battery	32
Operation	33
Switching on the telephone	33
Operating the telephone	33
After switching on the telephone	34
First use	35
Switching off the phone	37
Switching to sleep mode	38
Waking up the phone from sleep mode	38
Main screen	39
Status and notification symbols	41
Using the notification field	43
Making/checking settings	44
Favourites list	49
Telephone calls	50
SMS/MMS	52
Connecting to the Internet	54
Adding a new data network connection	55
Additional costs for Internet and roaming usage	57



Contents

IRE

GB

Internet.....	58
Limiting data usage.....	58
Changing the data volume.....	59
Activating Wi-Fi	60
Disposal	61
Conformity information as per R&TTE	62
Technical data	63
Licence information	67
Legal notice	76

AFTER SALES SUPPORT



0333 32 13 106
1800 992508



www.medion.co.uk



GB

IRE

Contents



8



www.medion.co.uk

AFTER SALES SUPPORT



0333 32 13 106

1800 992508



About these Instructions



Before using the device for the first time, please read these operating instructions carefully, paying special attention to the safety notices.

This device should only be used as designated and as described in these instructions.

Please keep these instructions in a safe place for future reference.

Always include these instructions if passing the device on.

Symbols and Keywords used in these Instructions

 **DANGER!**

This signal word indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

AFTER SALES SUPPORT



0333 32 13 106
1800 992508



www.medion.co.uk

GB

IRE

About these Instructions

! WARNING!

This signal word indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

! CAUTION!

This signal word indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

NOTICE!

This signal word warns of possible damage to property or gives useful additional information on assembly or operation.



This symbol gives you useful additional information on assembly or operation.



Declaration of conformity (see section 'Declaration of conformity'): Products that feature this symbol meet the requirements of the EC directives.

10


www.medion.co.uk
AFTER SALES SUPPORT

GB 0333 32 13 106
IRE 1800 992508

Proper use




Your appliance offers a number of options for usage:

- The device is intended for private use only and not for industrial/commercial use.

Please note that we shall not be liable in cases of improper use:

- Do not modify the device without our consent and do not use any auxiliary equipment which we have not approved or supplied.
- Use only spare parts and accessories which we have supplied or approved.
- Heed all the information in these operating instructions, especially the safety information. Any other use is deemed improper and can cause personal injury or damage to the device.
- Do not use the device in extreme environmental conditions.

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

Usage limitations

It is essential to turn off the telephone in the following situations:

- Before boarding an aircraft or before packing it in your luggage. The use of radio devices in aircraft can have dangerous effects on the flight controls and interrupt radio contact and is thus prohibited.
- In hospitals, clinics or other health centres and in any locations in the direct vicinity of medical devices.
- In all locations where there is a risk of explosion (e.g. petrol stations; in dust-filled environments, e.g. where there is metal dust).
- In locations where the use of radio-controlled devices is prohibited, e.g. on construction sites or locations where people are working with explosives.
- While driving a motor vehicle (if no hands-free car kit is available).



About these Instructions

IRE

GB

Additional costs for Internet and roaming usage

Significant volume-based data costs may apply when using the mobile Internet. In order to limit these costs, we recommend that you purchase a contract with an Internet flat rate.

NOTICE!

When the phone is used for the first time, roaming is deactivated. Check your mobile service tariff before using the device and, if required, switch off mobile data services until you have activated a suitable Internet flat rate.

AFTER SALES SUPPORT



0333 3213106
1800 992508



www.medion.co.uk

13

Safety instructions

Making calls while driving

As making calls can reduce concentration levels (while driving a car or riding a bicycle), this may contribute to accidents occurring. The following instructions should be followed exactly.

It is an offence to hold a telephone in your hand (or between your head and your shoulder) to make a call while driving. It is also illegal to write SMS, e-mail or use other programs while driving. Failure to comply will result in fines and in your name being entered in the central traffic offenders register.

The use of hands-free sets is allowed.

⚠ CAUTION!

A wired headset is not a hands-free set and may not be used while driving.






 **WARNING!****Impairment to hearing!**

Excessive volume when using headphones or earphones can damage your hearing. Before pressing play, set the volume to the lowest setting. Start playback and increase the volume to a comfortable level. Changing the basic settings of the equaliser can also increase the volume and thus cause permanent damage to your hearing.

Changing the drivers, software, equaliser, operating system, etc., can also lead to an increase in the volume and thus cause permanent damage to your hearing. Listening to a device at high volumes for an extended period via headphones/earphones can damage your hearing.

- Hands-free systems should only be installed by suitably qualified professionals. Incorrect installation or maintenance can have hazardous consequences and may also void your guarantees – also that of the car. Irradiation of the car's on-board

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508





www.medion.co.uk



GB**IRE**

Safety instructions

electronics can cause serious defects and result in danger to life and limb for you and others.

- Do not use the mailbox while driving. Do not listen to your messages until you have parked the car and switched the motor off.
 - If you accept a call via the hands-free set while driving, keep the call as short as possible. Concentrate on your driving. Try to find a parking area before making a call.
 - Please comply with all national regulations if you use your mobile while driving abroad.
 - If you need to call often while driving, you should have a hands-free system installed in your car. These systems have been specially developed for this purpose.
 - Ensure that neither your telephone nor the hands-free system can interfere with the functionality of the safety equipment in your car.
- 
- 



- For cars with airbags: Bear in mind that the activation of the airbag involves the release of a large amount of force. Therefore, never install permanent telephone equipment in the area above the airbag or in the space occupied by the deployed airbag.
- If telephone or accessories are incorrectly installed this can lead to serious injury when the airbag is activated.




⚠ DANGER!

Ignoring this advice can lead to serious injuries and/or property damage. Non-compliance can lead to severe penalties!

General

- Do not let children play with electrical appliances without supervision. Children are not always aware of potential hazards.
- Keep packaging material such as plastic film away from children. There is a risk of

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

suffocation if used improperly.

⚠ DANGER!

Risk of electric shock!

Never open the housing of the device or the mains charging device. There is a risk of electric shock when the housing is open.

- Do not insert anything into the device through the slots and openings. This could result in an electrical short-circuit, an electric shock or even ignite a fire which will damage the product.
- Avoid exposing the device to water droplets or spray and do not place vases or anything containing water on the device. Liquids penetrating the device may impair the electrical safety of the product.
- Operate the mains charging device only on earthed power outlets with AC 100–240 V~, 60 Hz. If you are not sure about the power supply at the set-up location, please ask your power supplier.



- The socket must be close to the device and easy to access.
- Use only the supplied mains charger with the supplied USB cable.
- For extra safety, we recommend using an overvoltage protection device to prevent the product from sustaining damage as a result of power surges or lightning strikes.
- If you want to disconnect the device from the mains, first pull the mains charger out of the wall socket and then the plug on the product. The mains charger or the device may be damaged if this process is carried out in the reverse order. Always take hold of the plug when disconnecting the cable from the socket. Never pull on the cable.
- Position the cable so that it cannot be stepped on or tripped over.
- Do not place any objects on the cables to avoid damaging them.
- Do not allow plug-in connections to come under impact, e.g. from lateral

AFTER SALES SUPPORT

GB 0333 32 13 106
IRE 1800 992508



www.medion.co.uk

GB

IRE

Safety instructions

forces. This could cause internal and external damage to the product.

- Do not apply force when connecting cables and plugs and make sure that connectors are the right way round.
- Do not crush or bend the cable too far in order to prevent short-circuit and cable break.
- Maintain a distance of at least one metre from sources of high-frequency and magnetic interference (TV sets, loudspeakers, mobile phones, DECT telephones, etc.) in order to avoid malfunctions and data loss.
- Do not connect any devices to the product which do not meet the requirements set out in the EN60950 standard "Information Technology Equipment – Safety" or the EN60065 standard "Audio, video and similar electronic apparatus - Safety requirements".






Cleaning and care

Follow the instructions below to increase the service life of the product:

- Always unplug the device and disconnect all cables before cleaning.
- Do not use solvents, corrosive agents or aerosol-based detergents to clean the device.
- Use appropriate cleaners to wipe the display, e.g. glass cleaners or monitor cleaners (available from specialist retailers).
- Clean the screen with a soft, lint-free cloth.
- Do not place the screen in strong sunlight or near ultraviolet light.
- Make sure that no water droplets remain on the device. Water can cause permanent discolouration.
- Store the packaging material in a safe place; always use this to transport the device.

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

GB

IRE

Safety instructions

 **DANGER!**

Risk of electric shock!

None of the parts inside the device require cleaning or maintenance.

Data backup

NOTICE!

Data loss!

Back up your data on external storage media after each update. We do not accept any liability for claims for compensation arising from a loss of data or for any consequential damages.

Information about the display

- Do not place any objects on top of the device and do not exert pressure on the screen. This could break the screen.
- To avoid damaging the screen, do not touch it with sharp objects.
- If the screen breaks, there is a danger of injury. If this happens, pick up the

22

www.medion.co.uk**AFTER SALES SUPPORT**GB 0333 32 13 106
IRE 1800 992508

shattered pieces wearing protective gloves and send them to your service centre for professional disposal. Finally, wash your hands with soap, as the pieces may have been contaminated with chemicals.




- Keep the device away from moisture and from water in droplet or spray form. Avoid knocks, dust, heat and direct sunlight in order to prevent malfunction.

Notes on batteries and rechargeable batteries

This device contains a lithium-ion battery. Please note the following when using lithium-ion rechargeable batteries and other batteries:

- Charge the battery regularly and as fully as possible. Do not leave the battery discharged for long periods
- Keep batteries away from heat sources such as radiators or open flames, e.g. candles. There is a risk of explosion!

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

GB

IRE

Safety instructions




- If the device cannot be switched on although it is connected to a power source, please contact your service centre.
- Do not use chargers or batteries that are damaged in any way.
- Do not dismantle or deform batteries. You could injure your hands or fingers, or battery fluid could come into contact with your eyes or skin. If this happens, rinse the affected areas with plenty of clean water and contact your doctor immediately.
- Keep the batteries away from children. If batteries are accidentally swallowed, consult your doctor immediately.
- If the battery is integrated into the device, it cannot be readily replaced by the user themselves.



Environmental requirements

- Keep your telephone dry.
- Do not expose it to extremes of temperature (hot or cold).
- Do not place your phone next to burning cigarettes, open flames or other heat sources.
- Do not drop or bang the telephone and do not shake it. Rough handling can damage the internal circuitry.
- Do not paint your telephone as the paint could block the microphone, the ear piece or hinder moving parts and thus prevent normal use.
- Treat your telephone carefully and store it in a clean and dust-free location.
- Under no circumstances attempt to open the telephone or battery. Any modification to the device is prohibited and will invalidate the guarantee.
- The ring tone is played back via the ear piece. To avoid damage to hearing, accept the call before putting the telephone to your ear.

AFTER SALES SUPPORT

  0333 3213106
 1800 992508

25

www.medion.co.uk

  **GB** **IRE** Safety instructions

- Please only use the optional stereo earphones together with this smartphone.

NOTICE!

When using wired headsets, ensure the correct plug connection (see technical details).

In the event of faults

- If the charger, connection cable or device is damaged, immediately disconnect the charger from the power supply.
- Never try to open and/or repair the device or the charger yourself. In the event of a fault, contact our Service Centre or another suitable professional repair workshop.

People with pacemakers

When using your telephone, be sure to maintain a safety distance of at least 15 cm from your implanted pacemaker to avoid any

26



www.medion.co.uk

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1800 992508

possibility of interference.

Do not carry the telephone in a breast pocket when it is switched on. Hold the telephone to the ear on the opposite side to your pacemaker to avoid any possible adverse effects.

Switch off the telephone immediately if you suspect any adverse effects.

People with hearing aids




If you use a hearing aid, ask your doctor or the manufacturer of the hearing aid about any possible adverse effects caused by radio waves.

Emergency calls

This telephone uses radio signals, wireless and land-based networks, as well as functions programmed by the user. Because of this, a connection cannot be guaranteed under all possible circumstances. Therefore, you should not rely exclusively on telephones for essential communication (e.g. in medical emergency situations).

Emergency calls may not be possible on

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

 GB IRE Safety instructions

some mobile networks or while certain network services and/or telephone functions are being used. Contact your local network operator.

Saving a number for use in emergencies

If you are involved in an accident or injured and have your mobile phone with you, it is important for the emergency services to be able to inform a close friend or family member. Often, it is not immediately apparent to rescue workers which contact in the mobile phone directory should be called. Therefore an international abbreviation has been developed to allow emergency services to quickly inform one or more people of an event.

Save a contact under the name ICE (“in case of emergency”) for this purpose. If more than one person is to be notified, you can use ICE1, ICE2, and so on.



Contents of package

Please check your purchase to ensure all items are included and contact us within 14 days of purchase if the delivery is incomplete.

The product you have purchased includes the following items (see also “10. Technical data” on page 63):

- Smartphone
- microSD SIM-card slot key
- microSD memory card (optional)
- Mains charging device
- USB data and charger cable
- Stereo headset (optional)
- Manual with safety information
- Guarantee documents

AFTER SALES SUPPORT



0333 32 13 106
1800 992508



www.medion.co.uk

Preparations for using the telephone

You must insert a SIM card and charge the battery before you can use the telephone.

NOTICE!

Your smartphone is equipped with two SIM card slots. Both can be used for making phone calls or data transfer. The configuration of the card slots is carried out via the software.

SIM card

You choose the network provider, telephone network and tariff when purchasing a SIM card.

Therefore, check out which tariff from which network provider is best suited to your telephone usage before purchasing the SIM card.

You will also receive your telephone number with the SIM card. Furthermore, SIM cards can also feature additional memory functions (e.g. for the telephone book or SMS messages)

- Store all SIM cards out of the reach of small children.
- Handle your SIM card carefully because the card




and its contact points can be easily damaged through scratching or bending.

Inserting SIM cards and a microSD card

⚠ CAUTION!

Always ensure that the telephone is switched off when carrying out this process to avoid any damage to the device or the card.

1. Open the battery compartment cover and remove the battery if necessary.
2. Slide the SIM cards and the microSD card into the corresponding slots as illustrated.

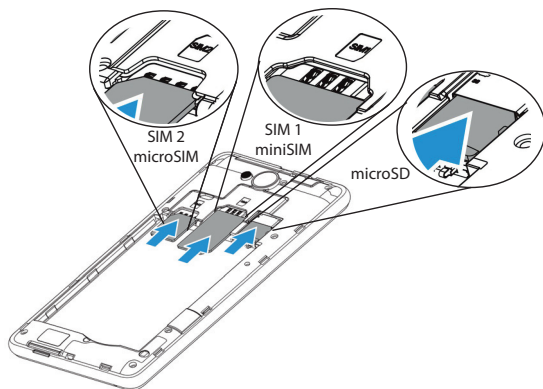

AFTER SALES SUPPORT

☎ **GB** 0333 32 13 106
IRE 1800 992508

31

www.medion.co.uk

Inserting the battery

- Remove the battery compartment cover if you have not already completed this step.
- Before installing the battery, firstly insert the SIM cards and, if desired, a microSD card as described in the previous sections.
- Insert the battery into the battery compartment. The contacts on the battery must touch the corresponding contacts on the telephone.

Charging the battery



The battery can be charged regardless of whether the SIM card is inserted.



- Before you charge the battery, make sure that the battery cover has been securely fitted again.
- Insert the micro USB plug in the corresponding connector on the phone. Ensure that the plug is inserted in the connector the right way round. Do not force it.
- Insert the other end of the cable into the USB connection on your computer or use the supplied mains charger.



- Connect the charger to an easily accessible mains socket.

Operation

Switching on the telephone




- Hold the on/off button down until the display switches on.
- Enter the 4 to 8-digit PIN code for each inserted SIM card and confirm them with .
- If you have entered a wrong digit, tap on .

Operating the telephone

You operate the the phone with your fingertips. Do not use any pointed or sharp-edged objects.

- Tap on the **display** to select apps or to open applications.
- If you hold down your finger on an input field, all of the available options will be displayed.
- Drag your finger over the display to move it up, down, right or left.
- If you press and hold an app, you can drag it across the display and place it in another position or delete it.

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

GB

IRE

Operation

- Drag two fingers apart on the screen at the same time or tap twice on the display in order to increase/reduce the size of a website.


After switching on the telephone

You can use various applications from the Google™ portfolio on your phone. To do this, you will generally require a Google™ account. This account will allow you to access a larger number of services such as Google Mail™.



First use

When you first switch on your phone, make the following settings:



- Select the language and tap on .
- Follow the on-screen instructions to conclude the initial setup for your smartphone.



You can view the display in portrait or landscape format. Simply hold the telephone upright or on its side to change the orientation of the display.

AFTER SALES SUPPORT



 0333 32 13 106
 1800 992508



www.medion.co.uk










GB **IRE** First use

An Internet connection is required in order to create a Google™ account or to sign in. You can connect to the Internet either via your SIM card or a Wi-Fi connection. Please bear in mind that costs may be incurred for the Internet connection especially when the connection is via your mobile phone service provider if you do not have a flat rate contract.






Switching off the phone

- Press and hold the on/off button until the selection menu appears with the following options:

	Powerj off (switches the phone completely off)
	Reboot (restarts the phone).
	Screenshot (creates an image of the current screen contents)
	Airplane mode (switches the phone to airplane mode)
	Silent (switches the phone to silent mode)
	Vibration (switches the phone to vibration mode)
	Sounds (activates all acoustic signals on the telephone)

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

Switching to sleep mode


In sleep mode, your device will be placed into a low-energy standby mode with the display turned off in order to save battery power. Your device also switches automatically into sleep mode if the display is switched off after a certain time.

You can set this time under **Settings** ⇒ **Display** ⇒ **Sleep**.

- Press the ON/OFF button to switch to sleep mode.

Waking up the phone from sleep mode

This is the standard setting and can be changed in the menu.

- Press the on/off button to reactivate the display.
- Drag the  symbol upwards to unlock the smartphone.
- Swipe your finger to the right to open the telephone function.
- Swipe your finger to the left to open the camera function.



Main screen

You decide what is displayed on your start screen. Set your own background, add shortcuts for the widgets or apps you require or remove them if desired.



(image similar)

AFTER SALES SUPPORT



0333 32 13 106
1800 992508



www.medion.co.uk

GB

IRE













First use

1	Status and notifications
2	Google input window
3	Installed apps
4	Telephone function
5	Contact list
6	Main menu
7	SMS/MMS menu
8	Web browser
9	Voice entry
10	Network/battery/date display






Status and notification symbols























Your phone uses simple icons to provide you with status updates. The meanings of the individual icons are as follows:

G	GPRS in use		No signal
E	EDGE in use		Signal strength,
3G	3G in use		GPS active
H	HSDPA in use		Call is being recorded
	USB connection		Alarm has been set
	Battery very weak		Connection to Wi-Fi network
	Battery almost empty		Bluetooth on
	Battery is weak		Loudspeaker on

AFTER SALES SUPPORT


  0333 3213106
 1800 992508

GB IRE First use


	Battery fully charged		Problem with the delivery of an SMS/MMS
	Batteries charging		New instant message
	Synchronisation		Outstanding event
	Vibration mode		All acoustic signals have been activated
	Airplane mode		Song playback
	Silent		Playback via the connected/paired headset
	New SMS/MMS/voice mail		Downloading data
	New Google Mail message		USB tethering is enabled
	Missed call		Mobile Wi-Fi hotspot is enabled
	Establishing connection		Call is being held
	Call is active		Microphone off



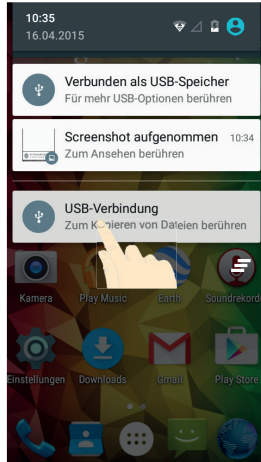


Using the notification field



(image similar)

Swipe your finger from the top downwards over the status bar to open the notification field that displays your calendar events, new messages and current settings such as call forwarding or call status. In addition, you can open messages, reminders etc. from here. Press  to open the quick settings menu.

AFTER SALES SUPPORT


  0333 32 13 106
 1800 992508

43






www.medion.co.uk

Making/checking settings

- In order to change or display your telephone settings, press  and tap on **Settings**.

Wireless & networks



Symbol	Menu name	Description
	Wi-Fi	Configuration and management of your Wi-Fi connection.
	SIM cards	Set which SIM is used for voice calls, video calls, SMS and Internet connection as well as roaming.
	Bluetooth	Configuration and management of your Bluetooth® connection. Authorise mobile data connections and virtual private networks.





First use

IRE




GB

	<p>Data usage</p>	<p>Configure the data usage settings, e.g. the limit for mobile data usage and the data usage cycle.</p>
	<p>More</p>	<p>Settings for airplane mode, VPN, tethering & mobile hotspot, Internet via USB and the mobile phone network.</p>

Device

Symbol	Menu name	Description
	<p>Display</p>	<p>Select display settings, e.g. brightness.</p>
	<p>Sound & notification</p>	<p>Select the sound settings, e.g. ring tones and notifications</p>




AFTER SALES SUPPORT


 0333 32 13 106
 1800 992508



45



www.medion.co.uk

	Storage	Check the available capacity on the memory card and the internal telephone memory.
	Battery	Information about consumption and charging status of the battery.
	Apps	Manage your applications (apps) and install new applications.




Personal

Symbol	Menu name	Description
	Location	Select the sources that are to be used for location finding.
	Security	Create your unlock pattern, define the SIM lock or memory management of the credentials for your mobile phone.

First use

IRE

GB

	Accounts	Here you can link a new or existing account with the current user account (e.g. a Google account)
	Language & input	Set the operating system language and region, as well as the text input options. Set the voice recognition and text-to-speech options.
	Backup & reset	Configure the data protection settings, e.g. backup, restoration and personal data.

AFTER SALES SUPPORT



0333 32 13 106
1800 992508








www.medion.co.uk

47



First use

System

Symbol	Menu name	Description
	Date & time	Set the date, time, time zone and date/time format.
	Scheduled power on/off	Set the time and the day of the automatic shut-off/switch-on.
	Accessibility	After installing the applications for input support, you can set various options here.
	Printing	It is possible to search for and configure printers here (this may require additional software from the manufacturer of the printer available from the Play Store).
	About phone	Display of phone details, status and legal information.

48




www.medion.co.uk

AFTER SALES SUPPORT




GB 0333 32 13 106
IRE 1 800 992508

Favourites list

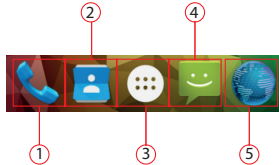

1	Start call
2	Contacts Access to all contacts on your mobile phone
3	Open main menu
4	SMS/MMS messages
5	Open Internet browser

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

GB

IRE

First use



Telephone calls

When you accept or make a call with a new SIM card for the first time, you must first select the standard SIM card.

Set the standard SIM or activate the **Always ask** function to be asked each time you open the phone's notification centre.

- Tap on the telephone icon on the home screen.



- Now tap on  and enter a telephone number.
- Tap on  to start dialling.

It is also possible to make a call from the contact list, call list or a text message.

Accepting calls

- Drag the telephone receiver symbol onto the green telephone receiver symbol.

Rejecting calls

- Drag the telephone receiver symbol onto the red telephone receiver symbol.

50

www.medion.co.uk**AFTER SALES SUPPORT**GB 0333 32 13 106
IRE 1800 992508

Rejecting a call with an SMS

- Drag the telephone receiver symbol onto the SMS/MMS symbol.

Contacts

You can save contacts on your telephone memory or your SIM card. More information about a contact can be saved on the telephone memory than on the SIM card. For example, addresses, photos, nicknames, websites and much more

When you open the contacts for the first time with a new SIM card, you must first select the standard SIM card.




Set the standard SIM or activate the **Always ask** function to be asked each time you open the contacts.

- You can call up your contacts by tapping on **(Contacts)**.



The contacts screen contains the following tabs: **Contacts**, **Favourites** and **Groups**.

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

GB

IRE

First use

SMS/MMS

Under **SMS/MMS**, you have access to your short messages (SMS) or multimedia messages (MMS).

You can send or receive SMS or MMS messages.

If you receive a new message, you can open it via the notification field or the message screen. Simply tap on the new message to read it.

When you write or read an **SMS/MMS** with a new SIM card for the first time, you must first select the standard SIM card.




Set the standard SIM or activate the **Always ask** function to be asked each time you open the **SMS/MMS** notification centre.



Writing a new message

- Tap on **(SMS/MMS)**.



- Tap on .
- Enter the number or name of the recipient. Corresponding contacts will be suggested during input. Tap on the suggested contact to add it as a recipient.
- Tap on **Type message** and then enter your message.
- Tap on  to send your text message.
- If you want to add an attachment to a text message, tap on  and select the relevant attachment. The SMS will then be automatically converted into an MMS message.

AFTER SALES SUPPORT



0333 32 13 106
1800 992508



www.medion.co.uk

GB

IRE

Connecting to the Internet

Connecting to the Internet

You can use the standard connection settings to access the Internet via your mobile phone network or use your Wi-Fi connection.

In order to access the Internet via the mobile data network, this service must be active in your contract.

NOTICE!

Read the chapter “Internet” carefully to avoid unnecessarily high mobile phone bills.

Also contact your mobile phone service provider if the settings for accessing the mobile data network provided by your service provider are not preconfigured on your telephone. If you change the settings without consulting your mobile phone service provider then it may be possible that your telephone will then no longer function correctly.

54

www.medion.co.uk

AFTER SALES SUPPORT




GB 0333 32 13 106
IRE 1800 992508

Adding a new data network connection

Your telephone is preconfigured for accessing the Internet via most European mobile phone service providers.

If it is nevertheless necessary for you to add a new data network connection, first ask your mobile phone service provider for the following information.

- Name of the access point (APN)
 - If necessary, the user name and password.
 - Server IP and port number, if the network uses a proxy server.
- Tap on  on the main screen.
 - Tap on **Settings** ⇒ **More...** ⇒ **Mobile networks** ⇒ **Access point Names**.
 - Press the menu key and tap on **New APN**.
 - Tap on **Name** to enter the name of your access point (freely selectable).
 - Tap on **APN** to enter the APN that you want to add.
 - Tap on **Proxy** and **Port** to enter the server IP and port if the network uses a proxy server.
 - Tap on **Username** and **Password** and enter

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1800 992508



www.medion.co.uk



GB**IRE**



Connecting to the Internet

the required information in each case. (If there are no user names and passwords, leave these fields blank.)

- If required, tap on **APN type**.
- Press the menu key and tap on **Save** to conclude the process.

NOTICE!

In order to set the APN to the default settings, press the Menu key and tap on **Reset to default**.



Additional costs for Internet and roaming usage

Significant volume-based data costs may apply when using the mobile Internet. In order to limit these costs, we recommend that you purchase a contract with an Internet flat rate.

Find out about the various options available from your mobile phone service provider. Also ask about the tariffs for using your telephone abroad (roaming) because this can also result in high charges.

NOTICE!

When you use the telephone for the first time, data roaming (use of data services in a different data network than your own home network provided by your mobile phone service provider e.g. abroad) is deactivated.

Check your mobile service tariff before using the device and, if required, switch off mobile data services until you have activated a suitable Internet flat rate. Proceed as follows:

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1800 992508



www.medion.co.uk


Internet

Volume-based data costs may apply when using the mobile Internet. Check your mobile service tariff before using the device and, if required, switch off mobile data services until you have activated a suitable Internet flat rate. Proceed as follows:

- Tap on .
- Now tap on **Settings** ⇨ **More...**
- Now tap on **Mobil networks** ⇨ **Data roaming** in sequence.

Limiting data usage

The telephone has an automatic function for limiting mobile data usage. If the value you have set is exceeded then the data connection is deactivated.

- Tap on .
- Now tap on **Settings** ⇨ **Data usage**.
- Now select whether you want to set data usage via the **Mobile network** or **Wi-Fi**.



NOTICE!

The time period for displaying the monthly data usage can be defined under the option Data usage cycle.




- Select the date for resetting the data usage cycle.
- Tap on **Set** to save the date.

Changing the data volume

As current mobile phone contracts offer Internet flat rates with different data usage limits, it is advisable to define the data usage limit for your mobile phone contract in the data usage limit function on your telephone.

- For example, if your monthly internet flat rate has a max. limit of 1 GB, set the red line (limit) to 1 GB.
Set the yellow line (warning) to a lower value.
- Tap on the table and drag the red line (limit) to 1 GB.
- Now drag the yellow line (warning) to a lower value.
- Tap on **Set limit** to activate data usage

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

GB


IRE

Connecting to the Internet

monitoring.

Activating Wi-Fi

Wi-Fi provides you with access to the Internet over a distance of several metres.

- Tap on  on the main screen.
- Tap on **Settings** ⇒ **Wi-Fi**.
- Activate the **Wi-Fi** checkbox to switch on this function.
- The name of all of the Wi-Fi networks available for your telephone and their security settings (open or secure) will now be displayed.
- Tap on a network to which you want to connect.
- Press the menu button and tap on scan to update the list of available networks in your local area.

NOTICE!

If you attempt to make a connection to a secure network, you will be required to enter a password to gain access.

60

www.medion.co.uk

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1800 992508

Disposal



Device

The device is fitted with an integrated battery. At the end of its operating life, do not dispose of the device with your ordinary household rubbish. Consult your local authority to find out about collection centres for environmentally sound disposal of electrical and electronic scrap.



Batteries

Used batteries do not belong in the household rubbish. They should be taken to a collection point for used batteries.



Packaging

Your device has been packaged to protect it against transportation damage. The packaging is made of environmentally friendly material which can be recycled.

AFTER SALES SUPPORT



0333 32 13 106
1800 992508



www.medion.co.uk

 GB IRE Conformity information as per R&TTE

Conformity information as per R&TTE

This device is supplied with the following wireless features:

- Wireless LAN
- Bluetooth

Medion AG hereby declares that the product conforms to the following European requirements:

- R&TTE Directive 1999/5/EC
- Ecodesign Directive 2009/125/EC
- RoHS Directive 2011/65/EU.

Full declarations of conformity are available at <http://www.medion.com/conformity>.

CE 0681

62



www.medion.co.uk

AFTER SALES SUPPORT






GB 0333 32 13 106
IRE 1800 992508

Technical data

Dimensions	
Thickness	10,6 mm
Width	69 mm
Height	136 mm
Weight	
with Battery	ca. 145 g
Band	
GSM	850/900/1800/1900 MHz
UMTS	900/2100 Mhz
WLAN	
Standard	IEEE 802.11 b/g/n (2.4 Ghz)
Bluetooth	
Version	V4.0

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508

63

www.medion.co.uk

GB

IRE

Technical data


Display	
Display size	11,43 cm / 4.5"
Resolution	480 x 854
Resolution camera	
Front	0,3 million Pixels
Rear	5 million Pixels
Storage capacity	
micro-SD slot	max. 32 GB
USB	
USB connector	USB 2.0, micro-USB



Technical data

IRE

GB

Mains charger	
Typ	KSAS0050500100VEU
Manufacturer	Ktec Co., Ltd., China
AC input	100 - 240V~ (50/60 Hz) 0.18A
DC output	5.0V  1A
Battery	
Typ	Li-Ion, 1800 mAh, 3.7V
Model	CK375471ARE
Manufacturer	Shenzhen HongDe Battery Co., Ltd.
Headphones/Headset	
Standard	3.5mm, CTIA Standard
SIM	
1 x	micro-SIM
1 x	mini-SIM

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1800 992508



www.medion.co.uk

65

GB

IRE

Technical data

Temperatures	
in operating	+5°C - +35°C
not in operating	0°C - +60°C
relative humidity (non- condensing)	10 - 90%

**AFTER SALES SUPPORT**

Licence information

This product is based in part on open source software the use of which is subject to the GNU General Public License (GPL) Version 2. This goes hand in hand with a commitment on the part of the manufacturer to make the corresponding source code that may have been modified also available under this licence. You can acquire the source code for this product in the following manner:

3. Visit MEDION Service at <http://www.medion.com/de/service/start> and enter the name, the MD number or the MSN number of your device in the search field. You will find these details on the rear of your device. In the window that appears next, select the category “Software”.
4. Alternatively, we can send you the source code for free on a data medium. Please send an e-mail to this effect to opensource@medion.com.

Please note that the source code is only of interest to software developers. As a pure user of the product, you would normally have no use for the source code.

You will find the complete text of the GPL below

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1800 992508



www.medion.co.uk






IRE

Licence information

as well as on the device under Settings/About the phone/Legal information. Further information about the GPL as well as official translations in various languages can be found at <http://www.fsf.org/licensing>.

68

www.medion.co.uk**AFTER SALES SUPPORT**
0333 32 13 106
1800 992508

GNU General Public Licence

Version 2, June 1991

Copyright (C) 1989,

1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston,

MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1 800 992508



www.medion.co.uk



GB **IRE** Licence information

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term „modification“.) Each licensee is addressed as "you".


Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that

70

 www.medion.co.uk

AFTER SALES SUPPORT

 **GB** 0333 32 13 106
IRE 1 800 992508

Licence information

IRE

GB

you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.




You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the



AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

71



GB **IRE** Licence information

entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:




- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with

72

 www.medion.co.uk

AFTER SALES SUPPORT

  0333 32 13 106
 1 800 992508

Licence information

IRE

GB

the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.




5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgement or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License.



If you cannot distribute so as to satisfy simultaneously your

AFTER SALES SUPPORT

  0333 32 13 106
 1 800 992508



www.medion.co.uk



GB **IRE** Licence information

obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to

74



www.medion.co.uk

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1800 992508

Licence information



it and “any later version”, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.




NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. END OF TERMS AND CONDITIONS

LGPL VERSION 2.1

AFTER SALES SUPPORT

  0333 32 13 106
 1800 992508



www.medion.co.uk

75



GB

IRE

Legal notice

Legal notice

Copyright © 2015

All rights reserved.

This operating manual is protected by copyright.

Mechanical, electronic and any other form of reproduction is prohibited without the written permission of the manufacturer

Copyright is owned by the company:

Medion AG

Am Zehnthof 77

45307 Essen

Germany

The operating manual can be reordered via the service hotline and is available for download via the service portal at www.medion.com/gb/service/start/.

76



www.medion.co.uk

AFTER SALES SUPPORT



GB 0333 32 13 106
IRE 1800 992508



Spend a little Live a lot.

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



Produced in China for:

MEDION AG
Am Zehnhof 77
45307 Essen
GERMANY

www.medion.de

AFTER SALES SUPPORT



GB 0333 32 13 106

IRE 1 800 992508



www.medion.co.uk

GB Standard rate

IRE free phone

Model: MD99232

Product code: 92788

08/2015

3
YEARS
WARRANTY