

## TF-025 TrailFinder Binocular Instructions



Features a built-in digital compass

### Holding your binocular

Grasp each barrel firmly and move the barrels closer together or further apart until you see a single circle of view. Always return your binoculars to this position before using.

### Focusing

Close your right eye and sight an object with your left eye. Focus the binocular by rotating the center focusing wheel until the image is sharp and clear.

Open your right eye and close your left eye. Rotate the right eyepiece until the object sighted is sharp and clear (note the setting of the diopter scale for future use).

Both sides (eyes) are now in focus and you will need to use only the center focusing wheel to focus on other objects.

### Rubber Fold Down Eyecups

Fold down for use with eyeglasses and fold up for use without eyeglasses. They provide comfort and promote viewing ease.

**CAUTION!** Viewing the sun can cause permanent eye damage. Do not view the sun with this binocular or even with the naked eye.

## Operation Instructions for TF-025 TrailFinder Compass

### To Power on

Press "SET" to activate LCD Readout

### To set auto shut off for 1-6 minutes

1. Press "MODE" twice until TM3 appears on LCD Readout
2. Press "SET" to change display time from 1 – 6 minutes
3. Once time is selected press "MODE" to confirm setting.


### To Calibrate

1. When "WARN" displays on LCD readout calibration is required
2. Press "MODE" twice until "CA" appears on LCD readout
3. Press "SET" once and the LCD readout will flash "TURN TWICE"
4. Turn compass slowly twice (360 degrees x 2)
5. Press "SET". Your compass is now calibrated

**Note:** Calibration is required after replacing battery.

**Battery:** Lithium battery #CR2032 included

**NOTE:** Keep your compass as level as possible during all procedures

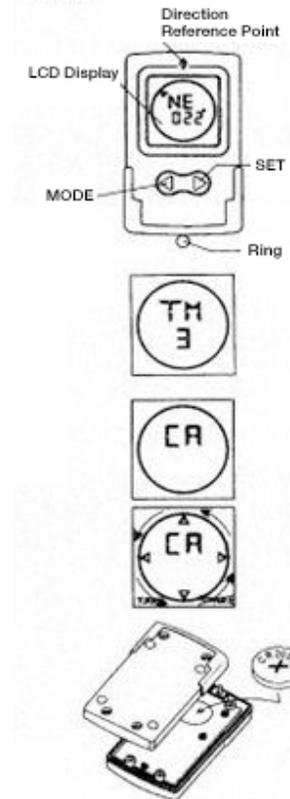

Once calibrated properly, the LCD display will show the direction you are facing while looking through the binocular. The small triangle containing the letter "N" will always point to the north.



35 Gilpin Avenue  
Hauppauge, NY 11788  
Tel: 631-963-5000 Fax: 631-427-6749  
www.carson-optical.com