



Loving music

Double Matrix Professional

Double sided record cleaning machine

User manual



Made in Germany

Hi-Fi Components **clearaudio[©] electronic** GmbH

Spardorfer Str. 150 ● D-91054 Erlangen ● Tel. +49(0) 1805/059595 ● FAX +49(0) 09131/51683
www.clearaudio.de ● www.analogshop.de ● info@clearaudio.de / copyright clearaudio© 2011

Version 1.2_02.21.11_E



Double Matrix Professional

User manual

Dear clearaudio customer,

Congratulations to your new **clearaudio** *Double Matrix Professional* record cleaning machine, an extraordinary product made by **clearaudio**.

The cleaning of dirty or used records does improve the overall sound quality. This appears as well for new vinyl records as there are often residues left over, which stay in the grooves during the pressing process.

Please read this user manual with great care, to avoid mistakes in use, mistreatments or void of warranty.

Why *Double Matrix Professional*?

In the past, many analog and music lovers as well commercial and professional organisations did approach us with numerous questions. How it is possible to clean vinyl records even better and faster. Why it cannot be avoided that the clean side of the record needs to be turned and be placed on a possible dusty underground.

It is obvious, during cleaning hundreds of records, especially under commercial circumstances, time is money.

A semiautomatic record cleaning machine, without costly accessories for a perfect cleaning of LP's and EP's - as well as the total elimination of electrostatic charges and that the record needs not to be flipped over again after one side is cleaned and which is able to finish the whole cleaning process within a minute - was the target for us. This means, a revolutionary and worldwide outstanding product needs to be developed. The additional goals are an efficient and easy use, combined with a longlife ability. By intensive research and development we successfully achieved our aim- the **clearaudio** *Double Matrix Professional*.

Ingredients and craftsmanship

The **clearaudio** *Double Matrix Professional* is made out of the highest grade of materials and components, which are almost undestroyable. The housing is made out of 4 mm thick aluminium material, for a robust case. The corner poles, feets, the fluid tank where the fluid is stored after cleaning are made out of very rigid materials. This results in an attractive total weight of approx. 16.5 kg.

Thank you very much for your confidence!

How to operate and why you made the right choice, you will read on the following pages.

We wish you a lot of enjoyment with your new **clearaudio** *Double Matrix Professional*.

Directory

1. Package content	4
2. Features overview	5
3. Set up	6
4. Operational controls and functions	7
5. Beginning of operation	11
6. Machine Maintenance	13
7. Service information	16
8. Technical data	17
Warranty information	18

Important note!



Pic. 1: Warning

1. Package content

The **clearaudio** *Double Matrix Professional* is delivered in a special and optimised packing material. Please take the record cleaning machine out of the packing and place it on a safe underground.

Please check if the *Double Matrix Professional* suffered any damages in transit. Right after that take off gently the blue secure tape. Any residues from the tape can be easily rubbed off by hand.

Please keep the original packing, to avoid any unnecessary damages in case the machine needs to be transported.

Please check the package content of your *Double Matrix Professional* :

- 1. Complete pre-installed *Double Matrix Professional* machine**
- 2. Seal - Clamp**
- 3. Filling funnel**
- 4. Power cord**
- 5. 4 pcs. microfibre spare stripes**
- 6. 250 ml pure groove cleaning fluid**
- 7. Seal for fluid container**
(already installed)
- 8. Fluid release knob**
(already mounted on the rubber tube)
- 9. Single Adapter**
- 10. Warranty card ***
* see on page 18 warranty registration.



Pic.2: Package content

In case that the content is not complete, please contact your **clearaudio** dealer, where you purchased the *Double Matrix Professional* .

2. Features - overview

⇒ Both sides cleaned at once

Due to the sophisticated design of the wash and vacuum arm tubes, it is now possible to clean both sides of your precious vinyl at once. This results in a even higher comfort during the use.

For a constant brush pressure a approved magnet mechanics are used.

⇒ Left-right turn switch

It is substantive for a perfect cleaning process that the platter is turning in both directions.

⇒ Continuously variable speed regulation

Due to this you have the possibility during the vacuum process to control the speed of your platter, depending on the dirt and even during the washing process. The more the record is dry, the less you can control the speed.

With this you can preserve the microfibre stripes and your record.

⇒ Cleaning of LPs, EPs and Singles

The *Double Matrix Professional* is able to clean all these formats without any additional accessories.

You even do not need to change the cleaning vacuum arms for the different formats.

⇒ Excellent cleaning

Through the cleaning process with the *Double Matrix Professional*, the general sonic improvements have been raised to a new level which regular cleaning machines do not reach. This is proven by our laboratories.

⇒ No platter

The vinyl records do not have to be placed on a possible dirty underground anymore, they are just sitting on a platform in the size of the label. Through the integrated cleaning vacuum brush, the vinyl is stabilised automatically. The labels of your records are completely covered through our well known Seal clamp, which is used in the *Double Matrix Professional* as a sandwich.

⇒ Cleaning in half of the time

Both sides of any record are cleaned at once. This reduces the time of the cleaning process at least of 50%. Especially in commercial areas, this is an unbeatable advantage.

⇒ Integrated filter

To avoid any dust or other particles, there is a micro filter integrated, to ensure a long life for the cleaning brushes and your vinyl.

⇒ Easy handling

The handling as well as the maintenance and support are very easy and customer - friendly.

⇒ Perfect cleaning fluid control

Only the fluid which is needed or desired, will be transferred. This is possible through two electronic controlled magnet valves which secure that no unwanted fluid is being transferred while vacuuming. You will find other machines on the market where this is not the case.

⇒ Antistatic brush

Through a high efficiency antistatic brush, a complete discharge is reached even if you do not want or need to clean your record. The sonic benefits are obvious.

⇒ Noise reduction

The *Double Matrix Professional* is already equipped with acoustic damping material, for a reduced noise level during use. As an additional feature there is a silent pad on the bottom of the housing. (For normal use, about 20 records per hour)

3. Set up

Place the *Double Matrix Professional* on a rugged underground like a table or rack. Please note that due to the weight of the *Double Matrix Professional* it could damage soft surfaces, or through movement of the *Double Matrix Professional* the surface could suffer scratches. Please make sure that the surface is able to retrieve up to 60°C.



3.1 Connection with main power

Connect the included power cord first to the IEC connector at the back panel of the *Double Matrix Professional*, then connect it to the power outlet. **Please make sure that the appropriate connector is used as well the voltage is correct.** Please refer to the type sticker next to the IEC connection.

The ideal temperature for the use of the *Double Matrix Professional* is between 15°C and 30°C.



Pic.3: Back view



Pic.4: Connection

3.2 Switch On


At the IEC connector you have the main Power switch (pic. 4). If the unit is switched on the red light of the switch is lightened up.

Please make sure that the appropriate connector is used as well the voltage is correct!

Now your *Double Matrix Professional* is ready to be used.

Please first finish reading the whole manual!

4. Operational controls and functions

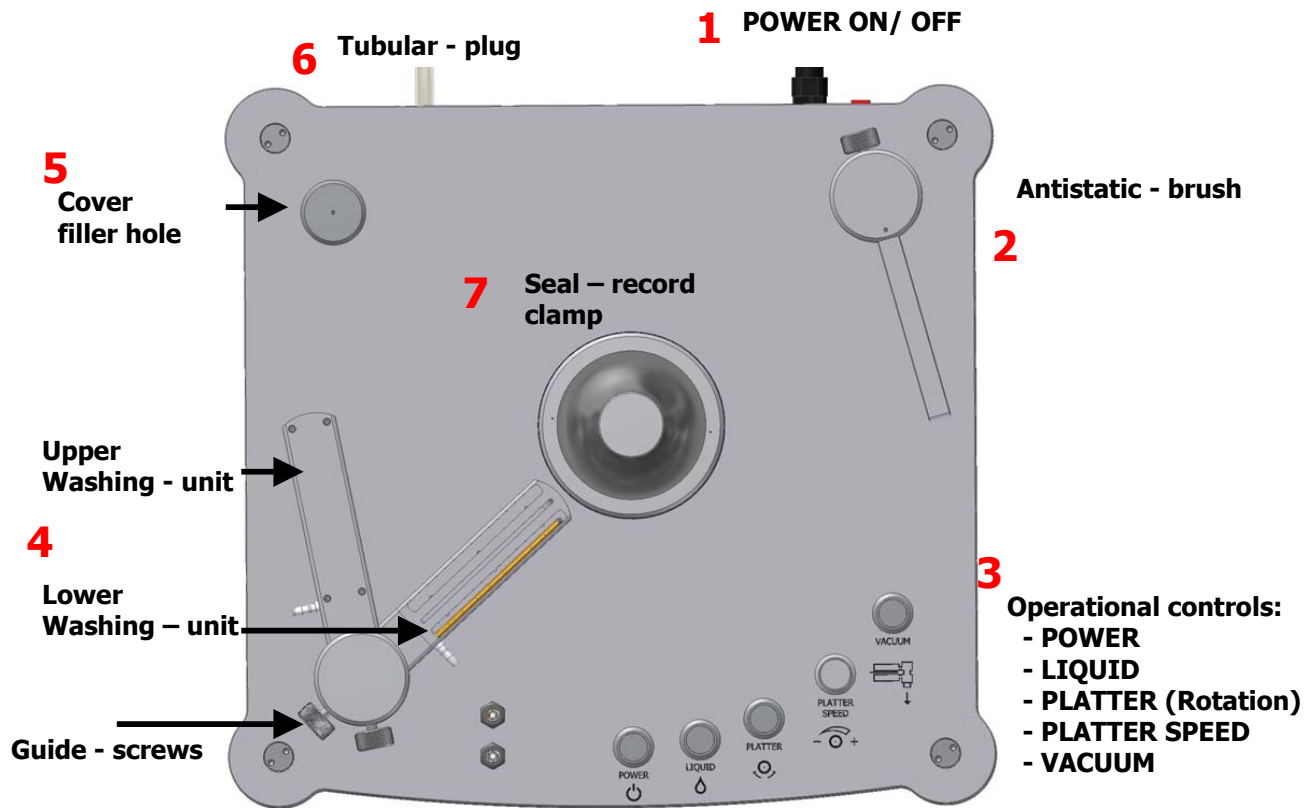

Pic.5: Top view

Please be familiar with all covered operational controls.
On the next pages all operational controls are described.

1

Power connection on the back side


For switching on and off. If the unit is switched on the red light of the switch is lightened up.

If the machine is longer not in use, please switch it off on the back side.

2

Antistatic – brush

The antistatic brush (Pic. 6) is used to discharge any electrical charges, which can occur while cleaning. After vacuuming the record and only when the surface is dry, place the antistatic brush in position while twisting it to the left (towards the record). Leave it in place for at least one turn.

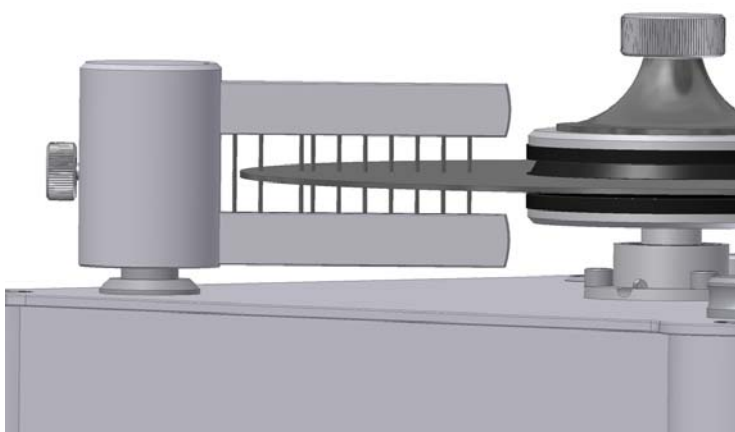

Pic.6: Use of Antistatic - brush

This Function can be used as well if you do not clean a record. If the hairs of the carbon fibre brush are not building enough connection to the surface of the record, use a comp to place the carbon hairs back in position.

3

Operational controls



Pic. 7: Operational controls

POWER = Bringing into service

LIQUID = Automatically fluid application via the washing unit

PLATTER = Right and left turn of the platter

PLATTER SPEED = Continuously variable speed regulation of the platter for selective cleaning

VACUUM = activate the suction of the fluid


4

Top and lower cleaning arms


The top and the lower cleaning arms include the cleaning and the vacuum as well as the fluid dispersion at once. If the top cleaning arm is in working position (pic. 9), there is always a constant pressure on the record. In the resting position (pic. 8) the top and the lower cleaning arms are automatically in a distance to the record. The top cleaning arm (pic. 10) can be twisted 90° degree, to be placed parallel to the lower cleaning arm. The lower cleaning arm can not be moved, as it is automatically moving horizontal due to the inserted magnets.

At the end of the cleaning arms, you will find several air holes (pic. 9, page 10). They are needed to transport the fluid with the airflow direction. The drier the surface of the record is, the lower is the pressure.


At the lower cleaning arm (pic. 10) on each side you see the fluid drains. These protection is built in to avoid fluid dripping if too much fluid is used while cleaning. This fluid will be automatically run through the blue tube (pic 8) back into the tank. Even during vacuum the blue tube is of help.

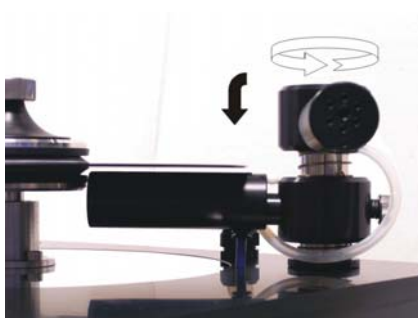

Pic. 8: Resting position

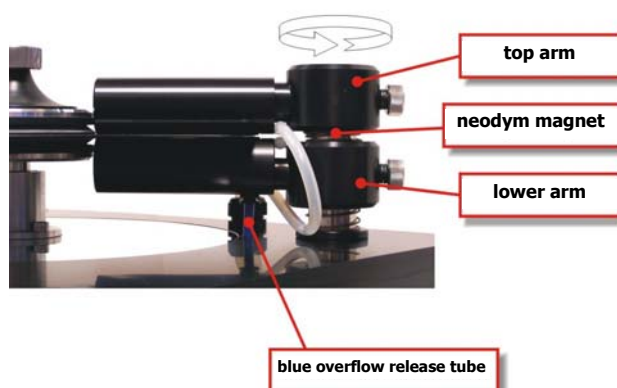

Pic. 9: Working position

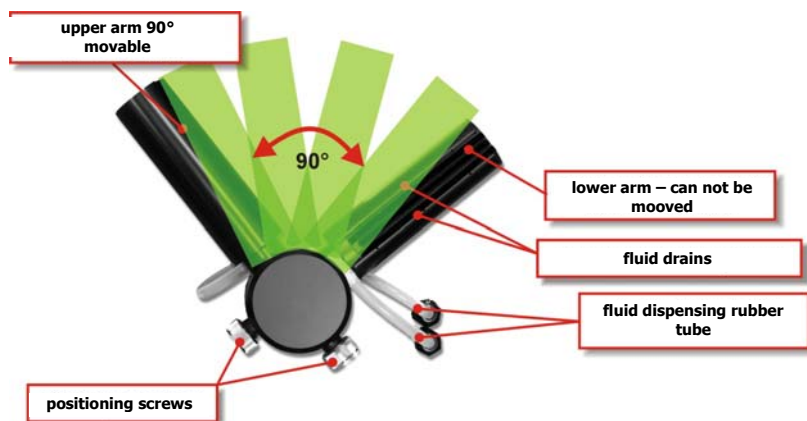

Pic. 10: Washing arm

5

Cover filler hole

Please fill in the record cleaning fluid „Pure Groove“ by using the delivered funnel tube.

6

Tubular - plug


By pulling out the plug you can empty the used cleaning fluid out of the fluid tank (see page 14).

7

clearaudio “Seal” record clamp

The **clearaudio** “Seal record clamp” (pic.11) has been developed to cover and seal the record label and to hold the records tight on any platter devices.

On the outer aluminium ring you will find two small deflation holes, so that there will be no vacuum while putting the seal clamp on records. This make it easier to release the clamp after the cleaning process.

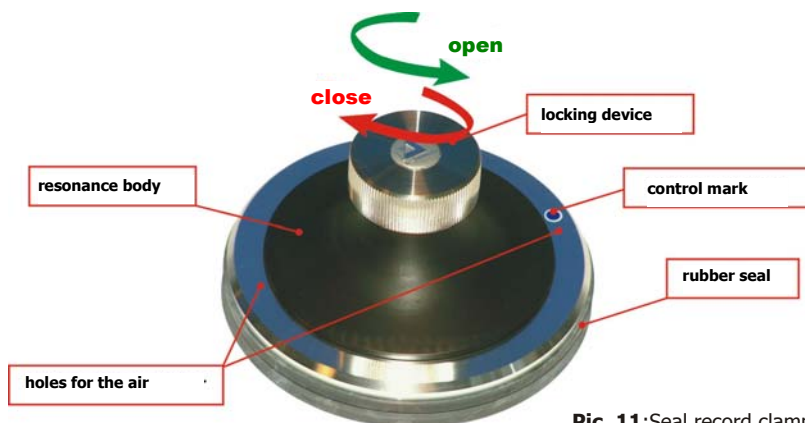

Pic. 11: Seal record clamp

Important!

Please place the “Seal record clamp” with some pressure on the record in order to avoid any unwanted sliding of the record!

5. Beginning of operation

5.1 Fluid tank re-fill

We recommend you to use only the clearaudio "Pure Groove" cleaning fluid for a perfect result and for the safety of your records (also available under: www.analogshop.de).

Attention:

Foaming fluid can damage the machine and void the warranty!

The fluid tank has a maximum capacity of **0,25 litre**. Open the fluid tank by removing the round top cap. Fill the fluid with the supplied filling funnel into the tank.

There is no necessity to worry if you filled too much fluid into tank, just wipe the spilled fluid off with a cloth.

5.2 Record cleaning, vacuum drying, electrostatic discharging

For the very first record cleaning process, we recommend you, to use a defective or very used record to get familiar wit the machine.

1. Take off the record clamp by twisting the lock cap to the left (pic. 11, page 10). Place the record over the spindle and put the record clamp back. Tighten it firmly, so that the record can not slip while vacuuming.
2. Place the top upper arm over the record, while swinging it towards the spindle. With light pressure on the top of the cleaning arm, the upper and lower cleaning arms will be pushed together due to the inserted magnets.
3. By pushing the button „LIQUID“ the rubber tubes will fill up with the cleaning fluid. Wait until the fluid comes out of the cleaning arms onto the surface of the record. The micro fibre brushes should be wet before switching them onto the platter.
4. To let the platter turn, push the button „POWER“. By using the button „PLATTER“ the platter will be in rotation. By using the button "PLATTER SPEED" you can control the speed of the platter and also the cleaning process of your record. Now be aware that the fluid should build a closed surface by pushing the "LIQUID" button quickly, maybe several times.

5. The platter should turn in each direction 3 to 5 times, depending on the dirt level of the record.

Caution: Please take care that there is enough fluid on the record surface.

For a very intense cleaning, you can stop the platter during the cleaning process. Just wait 30 to 60 seconds for the fluid to sink in.

5.3 Vacuum drying

6. To achieve a perfect result, proper vacuuming is necessary. Please press the button "VACUUM" for starting the vacuum – process.

7. When the record is dry you always should switch off the vacuum at first, then put the upper cleaning arm up and swing it back to the left in it's resting position.
Now you can stop the platter.

Important!

**The cleaning arm should always be placed back while the platter is turning.
After vacuum drying, never change the platter direction.**

8. Place the antistatic brush over the record, while lifting the brush up and swing it towards the record.
Let the platter turn now at least one time.

You should do this procedure after every cleaning process.

After the antistatic procedure, place the brush back in its resting position and switch off the platter.

Never use the antistatic brush when the record is wet!

Now you can take off the record and enjoy music.

5.3 Further care instructions

1. Don't use the Antistatic – brush in connection with wet records.
2. Dust and dirt, which are on the microfibre stripes should be taken off after every use.
We recommend to take a clean and soft cloth.
3. Please change the microfibre stripes at regular intervals, especially if you use the machine very often.



6. Machine maintenance

6.1 Changing the microfibre stripes

This procedure will be easier if you take off the upper cleaning arm .


Releasing the upper cleaning arm

First take the rubber tubes of the upper cleaning arm (pic. 12, no.1).

Now release the positioning screws, by turning them counter clock wise, till they stand off 6 - 8mm further out of the housing. It is no problem if you release the screws completely (pic. 12, no.2).

Now you can take off one or both cleaning arms. (pic. 12, no. 3)

To prevent any scratches, place them on a soft underground.

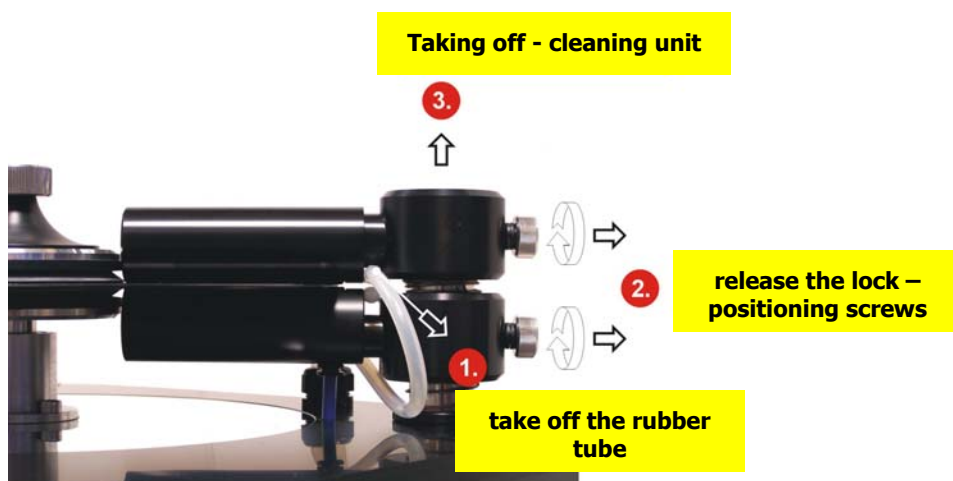

Pic. 12: Washing units (Pic. similar)

Before taking off the old microfibre stripes, please remember the previous position of them.

The adhesive surface must be clean and dry.

After you have taken off the protection foil ,place the new micro fabric stripes on the previous place and press the stripes gently onto the cleaning arms.

Attention!

Do not place the stripes over the small fluid dispensing holes.

After changing the microfibre stripes you can install the cleaning arms again.

Please use for this the opposite way as describes above.

6.2 Self cleaning procedure

After cleaning several records, depending on the dirt level of the records, you should clean your cleaning arms, as dust and dirt may influence the perfect cleaning procedure. Please place the upper cleaning arm in working position over the lower one.

Attention!

Please never place a record onto the machine while the self cleaning process.

6.3 Vacuum fluid tank

The tank for the vacuumed fluid has a tankage of 0.7 litre, which is normally reached after 100 cleaned records. Of course it depends on the amount of fluid used for each cleaning.

If you clean more than 20 records a day, you should release the fluid at the rubber tube at the back of the machine.

The rubber tube should only be opened for fluid release!

6.4 Draining and cleaning of the collecting and holding tank

Draining the collecting tank

Place an adequate container on the floor for the disposal fluid. Take off the secure cap of the rubber tube and place it into the disposal container. Tilt the machine towards the back (about 45°), until the fluid drains out of the tube.

Attention!

When finished, always place secure cap back on the tube !

Do not reuse the drained fluid!

Cleaning the collecting tank

Take off the upper cleaning arm and fill the cleaning fluid into the stainless steel tube. Water and vinegar (2 spoons) are appropriate enough.

Attention!

During the cleaning process, never switch on the vacuum!

Before releasing the rubber tube, let the fluid rest in the tank for about 20 minutes.



Pic. 13 Rubber tube seal / lock

Draining the holding tank

If your *Double Matrix Professional* ever needs to be transported, please make sure that there is no fluid left at all.

Therefore we recommend you to empty the collecting and the holding tank.

Take off the two rubber tubes from the cleaning arms and place them into a fluid container. Push the button "LIQUID" and let the fluid drain completely into the container, until there is no fluid left.

Place back the rubber tubes onto the cleaning arms.

If you do not use the machine for a longer period, we recommend to drain the collecting and the holding tank!

7. Service information

The warranty time for the *Double Matrix Professional* is two (2) years.

You can achieve the extended warranty time of three (3) years, if you fill out the warranty card and send it in within 2 weeks after purchase, to the following address :

clearaudio electronic GmbH
Spardorfer Str. 150
91054 Erlangen
Germany

Please note, never use foaming or acid fluids!

Use always special clearaudio "Pure Groove" fluid. Otherwise no warranty will be avoid

The *Double Matrix Professional* should only be repaired by clearaudio or approved institutions or persons, otherwise the warranty will be void.

A frequent optical control of the mains cables is requested, for your own safety. If any damage should occur, the repair or exchange should be done immediately through an approved electrician or institution !

A service of clearaudio products should be done only by certified clearaudio dealers.

If damage of the machine for any reason should occur, and a repair of the machine is necessary, than it should be sent to the selected dealer, distributor or directly to :

clearaudio electronic GmbH
Spardorfer Str 150
91054 Erlangen
Germany

Tel/Phone: +49-(0)9131 / 57702
www.clearaudio.de
www.analogshop.de
info@clearaudio.de

The repair will be free of charge, during the warranty period.

If you transport or ship the *Double Matrix Professional* , the use of original packaging is required! Please pack the machine like it has been packed originally from **clearaudio**. Only in the original packaging a secure transport is possible.

Legal disclaimer :

Clearaudio refuse to cover any claims or damage to records or any other damage, that have been caused by misuse or mishandling of the *Double Matrix Professional* .

8. Technical Data

Construction:	The <i>Double Matrix Professional</i> is a fully automatic record cleaning machine, turning the platter left and right , including vacuum suction.
Weight:	approx. 16,5 kg
Dimensions (LxBXH):	410 mm x 385 mm x 175 mm
Total height:	265 mm (incl. record clamp)
Warranty:	3 years, if the warranty card is filled out correctly and send back to clearaudio within 2 weeks
Total Power consumption:	500 Watts
Noise Level:	approx. 60 – 65 db
Further accessories :	Dust cover (Art. No. AC127) "Pure Groove" record cleaning fluid (Art. No. AC084) available at: www.analogshop.de

Attention:

This unit is for indoor use only!
Never place flammable goods near or onto the machine!
This unit / machine was built to be used in heated or climatic controlled surroundings.
Never touch the power cord with wet hands or other wet body parts !
Never put or use any equipment with open flames, like candles on top of this equipment!

CE The **clearaudio** *Double Matrix Professional* is approved according to the regulations of the CE certification and other international standards and approvals.

clearaudio electronic is not responsible for typographical errors in descriptions. Technical specifications subject to change or improvement without prior notice. Availability as long as stock lasts. Copies and imprints- also only in extracts – require written conformation through **clearaudio** electronic GmbH; Germany
© clearaudio electronic GmbH 2010

Version: December 2010

To achieve the full **clearaudio** warranty, it is necessary that you fill out and send the corresponding part of the warranty registration certificate /card back to clearaudio, within two weeks after purchase. Only if the product is returned in it's original packing clearaudio can provide the warranty of 3 years. Otherwise clearaudio provides the legal warranty of 2 years.

ENGLISH

WARRANTY

For warranty information, contact your local clearaudio distributor.

RETAIN YOUR PURCHASE RECEIPT

Your purchase receipt is your permanent record of a valuable purchase.

It should be kept in a safe place to be referred to as necessary for insurance purposes or when corresponding with clearaudio.

IMPORTANT

When seeking warranty service, it is the responsibility of the consumer to establish proof and date of purchase. Your purchase receipt or invoice is adequate for such proof.

FOR U.K. ONLY

This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

FRANÇAIS

GARANTIE

Pour des informations sur la garantie, contacter le distributeur local clearaudio.

CONSERVER L'ATTESTATION D'ACHAT

L'attestation d'achat est la preuve permanente d'un achat de valeur. La conserver en lieu sûr pour s'y reporter aux fins d'obtention d'une couverture d'assurance ou dans le cadre de correspondances avec clearaudio.

IMPORTANT

Pour l'obtention d'un service couvert par la garantie, il incombe au client d'établir la preuve de l'achat et d'en corroborer la date. Le reçu ou la facture constituent des preuves suffisantes.

DEUTSCH

GARANTIE

Bei Garantiefragen wenden Sie sich bitte zunächst an Ihren clearaudio-Händler.

Heben Sie Ihren Kaufbeleg gut auf.

WICHTIG!

Die Angaben auf Ihrer Quittung erlauben uns die Identifizierung Ihres Gerätes und belegen mit dem Kaufdatum die Dauer Ihrer Garantie-Ansprüche.

Für Serviceleistungen benötigen wir stets die Gerätenummer.

Diese finden Sie auf dem Typenschild auf der Rückseite des Gerätes oder auch in der beigelegten Garantie-Registrierkarte.

NEDERLANDS

GARANTIE

Voor inlichtingen omtrent garantie dient u zich tot uw plaatselijke clearaudio.

UW KWITANTIE, KASSABON E.D. BEWAREN

Uw kwitantie, kassabon e.d. vormen uw bewijs van aankoop van een waardevol artikel en dienen op een veilige plaats bewaard te worden voor evt, verwijzing bijv, in verband met verzekering of bij correspondentie met clearaudio.

BELANGRIJK

Bij een evt, beroep op de garantie is het de verantwoordelijkheid van de consument een gedateerd bewijs van aankoop te tonen. Uw kassabon of factuur zijn voldoende bewijs.

ITALIANO

GARANZIA

L'apparecchio è coperto da una garanzia di buon funzionamento della durata di un anno, o del periodo previsto dalla legge, a partire dalla data di acquisto comprovata da un documento attestante il nominativo del Rivenditore e la data di vendita. La garanzia sarà prestata con la sostituzione o la riparazione gratuita delle parti difettose.

Non sono coperti da garanzia difetti derivanti da uso improprio, errata installazione, manutenzione effettuata da personale non autorizzato o, comunque, da circostanze che non possano riferirsi a difetti di funzionamento dell'apparecchio. Sono inoltre esclusi dalla garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione.

Gli apparecchi verranno riparati presso i nostri Centri di Assistenza Autorizzati. Le spese ed i rischi di trasporto sono a carico del cliente. La casa costruttrice declina ogni responsabilità per danni diretti o indiretti provocati dalla inosservanza delle prescrizioni di installazione, uso e manutenzione dettagliate nel presente manuale o per guasti dovuti ad uso continuato a fini professionali.

ESPAÑOL

GARANTIA

Para obtener información acerca de la garantía póngase en contacto con su distribuidor clearaudio.

GUARDE SU RECIBO DE COMPRA

Su recibo de compra es su prueba permanente de haber adquirido un aparato de valor. Este recibo deberá guardarlo en un lugar seguro y utilizarlo como referencia cuando tenga que hacer uso del seguro o se ponga en contacto con clearaudio.

IMPORTANTE

Cuando solicite el servicio otorgado por la garantía el usuario tiene la responsabilidad de demostrar cuándo efectuó la compra. En este caso, su recibo de compra será la prueba apropiada.