



# **WOOFit** HEADPHONE

## User Manual

## Thank you!

Thank you for purchasing this WOOFit Bluetooth & Noise Cancellation headphone from SACKit. Please read the entire instruction manual before using the product and save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions regarding technical problems please contact our customer services. We hope you will enjoy your new WOOFit headphone.

## CONGRATULATIONS on your new SACKit product!

Register your new SACK<sup>it</sup> product and get the chance to WIN! Every three months we pick a winner among the registries. The winner receives a gift certificate worth €700,-

1. Go to [www.sackit.eu/reg](http://www.sackit.eu/reg)
2. Enter name, e-mail, and product
3. Be a winner!\*

\*When you register your product, you agree to receive email newsletters from SACKit. The winners will be contacted directly via e-mail. The gift certificate can be used for all items on the web shop.

## **Box contents**

1. WOOFit headphone
2. User manual
3. USB charging cable
4. 3.5mm audio cable

## **Quick start guide**

1. Charge the WOOFit Headphone using the included USB charging cable for no less than 4 hours
2. Long press the MFB Button for 10 seconds until LED light is flashing red and blue (this will turn on your WOOFit Headphone, and afterwards put it in pairing mode)
3. Turn on Bluetooth on your device
4. Choose WOOFit Headphones in the Bluetooth settings on your device
5. Start playing music on your device
6. Nod your head and dance

## Description of the appliance



## Battery charging

- Battery: rechargeable Polymer Lithium-Ion Battery, DC: 3.7V/290mAh
- Power: USB DC5V, Please use the USB cable sealed with our headphone for charging
- Charging Time: For first time use please be sure the battery has been charged fully before use. It needs more than 4 hours of charging the first time, then 2-3 hours for recharging
- When the red light is on, the headphone is in charge mode. The red light will turn off when the battery is fully charged.

## How to use the Noise Cancellation function

When you slide the NC button to the On side (On side=the RED mark will be hidden and the light indicator will turn green), then you can enjoy the headphone in Noise cancellation mode. When you don't need the Noise cancellation function, please slide the NC button to the OFF side.

## How to pair WOOFit Headphone with Bluetooth devices

First time pairing:

- Long press the MFB button for 10 seconds until LED light is flashing red and blue (flashing red and blue LED light indicates successful entering pairing mode). After the first 5 seconds, you will hear the ON sound. Keep pressing the button for another 5 seconds to turn on pairing mode
- Please keep the headphone and Bluetooth device in range of 1 meter when pairing and make sure your headphone is off
- Go into the Bluetooth settings on your device and search for new Bluetooth devices and select WOOFit Headphones
- Long press MFB button to turn off your WOOFit Headphone

## Operation instructions for use after first pairing:

- After first time pairing your WOOFit Headphone and your Bluetooth device will automatically stay connected
- Turn the headphone on by holding down the MFB button until you hear the ON sound
- Long press MFB button to turn off you WOOFit Headphone

The LED light will blink blue once the headphone is successfully paired.

**Notes:** *If the pairing is not successful, please turn the headphone off and on and then try to pair again.*

## Making calls with the headset

Functions	Status of head-phone	Operation
Redial Last number	Standby mode	Short press MFB twice quickly
Volume up	Conversation mode	Short press Volume + button

Volume down	Conversation mode	Short press Volume - button
Answering calling	Ringling	Short press MFB button
End call	Conversation mode	Short press MFB button
Reject calling	Ringling	Press and hold MFB button for one second, and release until you hear indication sound
Transfer the calling between headset and Bluetooth devices	Conversation mode	Press and hold the MFB button for 3 seconds can transfer the conversation from headset to mobile phone. Then press and hold the MFB button for 3 seconds to transfer the conversation back from mobile phone to headphone.

**Notes:**

*Not all the mobile phones support all the functions listed above. Please refer to the instruction of your mobile phone.*

*Some functions and indication tones may vary with mobile phones*

**Playing Music**

When the headphone connects with the mobile phone or Bluetooth transmitter, you can enjoy music through headphone wirelessly.

Function	Status of headset	Operation
Pause	Playing music	Short Press MFB button
Play	Pausing	Short Press MFB button
Next track	Playing music	Short press volume + button
Previous track	Playing music	Short press volume -button
Volume +	Playing music	Long press volume +button



Volume -	Playing music	Long press volume – button
----------	---------------	----------------------------


**Notes:**

- *For some mobile phones, the music will transmit to the speaker of mobile phone instead of the headphone, If that is the case, you have to choose TRANSMIT THE SOUND THROUGH BLUETOOTH in the SETTINGS of the music play interface on your mobile phone and then choose model name in the device list, so the music will be transmitted to the headphone. Please refer to the instruction of your mobile phone for further information.*
- *In order to use the on-headphone controls, your mobile phone or Bluetooth transmitter must support AVRCP*

## Operation instructions for in-line use:

Use the wire when you do not wish to use Bluetooth connection or when the battery needs recharging. In-line use is also possible when the battery is empty.

- Connect the 3.5mm plug into your WOOFit Headphone 3.5mm jack, then connect the other 3.5mm plug to your mobile phone 3.5mm jack. Please connect the wire the same way as shown in the picture for successful connection.
- Adjust the volume using the controls on your mobile phone. The in-line control button on the headset does not control the volume.

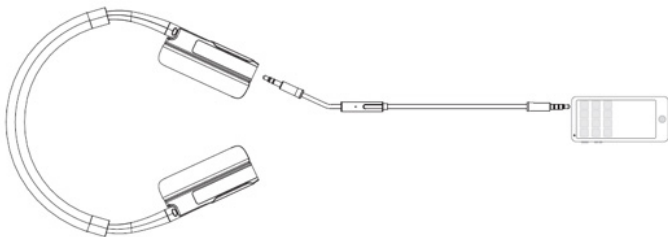

### **In-line button function as below.**

Android, BlackBerry, WindowsPhone

<b>Number of button presses</b>	<b>Hands-free function</b>	<b>Music mode</b>
Short press button	Answer/End call	Play/Pause

iPhone/iPad/iTouch

<b>Number of button presses</b>	<b>Hands-free function</b>	<b>Music mode</b>
Short press button once	Answer/End call	Play/Pause
Short press button twice	End call	Next track
Short press button three times	End call	Next track

*Remark: Some mobile phones may not compatible with the headphone due to different settings.*

## Trouble shooting

1. There is no sound coming from the earphones

Please check volume on your audio device to make sure it is outputting sound.

Please make sure that the 3.5mm plug is fully inserted into your audio device. Sometimes a case or protective cover can prevent a good connection.

Please make sure the earphone plug and audio device's jack is clean.

2. The headphone are not fitting comfortably.

Please adjust the length of the band by pull/push the pole as below.



3. If you are having trouble with using the hands-free microphone and play settings controller.

Please refer to the table in this manual that describes the various function of the hands-free microphone and play settings controller. If you are still having trouble, or if your device platform is not listed in this manual, please consult your mobile device's instruction manual.

### Caution

- Please recharge your battery if you can't turn on the headphone
- Please turn off your headphone after your usage to get a longer battery life
- Please use the charging USB packaging together with headphone
- Please don't change any other battery
- Keep the headphone in a safe place free from dust, liquids, and extreme temperatures
- Do not exposure or toss headphone into fire. It will probably cause an accident
- Please don't try to disassemble the headphone if you are not an expert
- Please don't use chemicals to clean the product

## Specifications

Bluetooth Solution: CSR

Bluetooth version: V4.0

Support agreement: A2DP, AVRCP, HFP, HSP

Operating distance: 10M

Battery: 290MAH

Charging time: about 3 hours

Charging current: 170MA

Playing time: 12 hours

Driver Unit: Ø40mm

Sensitivity: 105dB/1mW(S.P.L at 1KHz)

Impedance: 32Ω

Frequency Range: 20Hz-20KHz

Rated Power: 10mw

Max. Power: 20mw