



C70

CONVECTION MICROWAVE OVEN SERVICE AND REPAIR MANUAL

BLODGETT OVEN COMPANY

www.blodgettcorp.com
50 Lakeside Avenue, Box 586, Burlington, Vermont 05402 USA Telephone (800) 331-5842, (802) 860-3700 Fax: (802)864-0183

PN T0582 Rev F (3/01)
E 2000 – G.S. Blodgett Corporation

TABLE OF CONTENTS

READ THIS FIRST	i
Important Safety Instructions	ii
Precautions to Avoid Possible Exposure to Excessive Microwave Energy	iii
Precautions to be Observed Before and During Servicing to Avoid Possible Exposure to Excessive Microwave Energy	iv
Grounding Instructions	v
RF Interference Considerations	vi
Section 1 Installation Specs	
Oven Description	1-1
Installation	1-1
Section 2 Cleaning & Operating	
Basic Cleaning Procedures	2-1
Oven Cavity Filter Cleaning	2-2
Glossary of Common Operating Terms & Error Messages	2-3
Operational Flow Chart	2-4
Programming Flow Chart	2-6
Section 3 Test	
Test Function Quick Reference	3-1
Test Function Detailed Description	3-2
Section 4 Electrical Compartment	
Key Sequence of Operation – Failure Mode Analysis	4-1
Electrical Component Locations	4-2
Electrical Component Description with Voltage Information	4-3
Door Switches and Circuit Breakers	4-5
Door Switch Adjustment	4-6
Door Removal and Replacement	4-9
C70 Schematic	4-12
Section 5 Convection Circuit	
Catalytic Converter	5-1
Convection Element and Thermocouples	5-2
Thermoelectric Voltage in Millivolts – Type K Thermocouple	5-3
Convection (Blower) Motor Operation	5-4
Blower Motor Controller Fault Codes & Troubleshooting	5-5

TABLE OF CONTENTS

Section 6 Microwave Circuit

Measuring for Microwave Radiation Leakage	6-1
Magnetron Circuit	6-2
Magnetron Testing	6-3
Magnetron Removal and Replacement	6-3
Component Testing	6-4
Transformer Specifications	6-5
Control Circuit Board	6-6

READ THIS FIRST

TECHNICAL SUPPORT PHONE NUMBER 1-888-992-6624

This Service and Repair manual is set up for use by qualified technicians only. If you are unfamiliar with this oven, call the factory at the toll free number above for technical assistance. Technical support can be reached 24 hours a day, seven days a week.

Before working on the Accellis C-70 oven you must first read the safety instructions on the following pages. The Accellis C-70 is a combination convection/microwave oven. While servicing this oven, an RF meter must be used at all times to check for microwave leakage. This RF reading must be recorded on your work invoice.

Very often poor cleaning will result in microwave leakage. Please refer to the first two sections of this manual (INTRODUCTION and CLEANING & OPERATION) for information on the proper cleaning procedures.

Before removing the metal skin to access the electrical components in this oven, the power must be shut off and the oven unplugged. Wait at least one full minute before removing the oven skin so that the magnetron circuit can self-discharge. **FAILURE TO DO SO MAY RESULT IN DEATH OR SERIOUS INJURY.**

This oven has a one time registration feature on initial start-up. The Accellis C-70 will not operate until you have called and registered the oven location and phone number with technical support. Upon registration, an access code will be issued. Be sure that you have the location of the installation site and phone number before calling for registration.

This manual is divided into seven (7) chapters as follows:

- | | |
|--|---|
| 1. INSTALLATION SPECS – | This chapter includes oven specifications and the parameters for proper installation. |
| 2. CLEANING & OPERATION – | Improper cleaning can and will affect the operation of this oven. This chapter includes a brief description of the cleaning and operation procedures of the oven and the procedure to edit or change a cooking program. |
| 3. TEST – | This chapter details the Test Mode, which allows the technician to operate individual components or section of the Accellis C-70 oven. Using this feature will isolate most electrical troubleshooting problems. |
| 4. ELECTRICAL COMPARTMENT – | This chapter identifies the electrical compartment components and provides voltage information. Use the key to help isolate electrical troubleshooting problems. |
| 5. CONVECTION &
CATALYTIC CONVERTER – | This chapter provided information on the convection and blower motor speed control. Removal and cleaning of the catalytic converter are also provided. |
| 6. MICROWAVE CIRCUIT – | This chapter includes information on the microwave circuit and stirrer motor. |

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, THE FOLLOWING
BASIC SAFETY PRECAUTIONS SHOULD BE STRICTLY ADHERED TO:



WARNING!!

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

7. Read all instructions before using the appliance.
8. Read and follow the specific **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY** found on page iii.
9. This appliance must be grounded. Connect only to properly grounded outlet. See **GROUNDING INSTRUCTIONS** found on page iv.
10. Install or locate this appliance only in accordance with the provided installation instructions.
11. Some products such as whole eggs and sealed containers – for example, closed glass jars – may explode and **SHOULD NOT** be heated in this oven.
12. Use this appliance only for its intended use as described in the manual. **DO NOT** use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is **NOT** designed for industrial or laboratory use.
13. Children **SHOULD NOT** use this appliance.
14. **DO NOT** operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. See **POWER SUPPLY CORD REPLACEMENT** found on page iv.
15. This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair or adjustment.
16. **DO NOT** cover or block any openings on the appliance.
17. **DO NOT** store this appliance outdoors. **DO NOT** use this product near water – for example, near a kitchen sink, in a wet basement, or near a swimming pool.
18. **DO NOT** immerse cord or plug in water.
19. Keep cord away from heated surfaces.
20. **DO NOT** let cord hang over edge of table or counter.
21. **DO NOT** use a water jet for cleaning.
22. See the Maintenance section of this manual.
23. To reduce the risk of fire in the oven cavity:
 - a.) **DO NOT** overcook food. Carefully attend appliance if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b.) Remove wire twist-ties from paper or plastic bag in oven.
 - c.) If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - d.) **DO NOT** use the cavity for storage purposes. **DO NOT** leave paper products, cooking utensils, or food in the cavity when not in use.

SAVE THESE INSTRUCTIONS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. **DO NOT** attempt to operate this oven with the door open since open–door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. **DO NOT** place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on the sealing surfaces.
3. **DO NOT** operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - a.) Door (bent).
 - b.) Hinges and latches (broken or loosened).
 - c.) Door seals and sealing surfaces.
4. The oven **SHOULD NOT** be adjusted or repaired by anyone except properly qualified service personnel.

SAVE THESE INSTRUCTIONS

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. DO NOT operate or allow the oven to be operated with the door open.
2. Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:
 - a.) Interlock operation.
 - b.) Proper door closing.
 - c.) Seal and sealing surfaces (arcing, wear, and other damage).
 - d.) Damage to or loosening of hinges and latches.
 - e.) Evidence of dropping or abuse.
3. Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide, or transmission line, and cavity for proper alignment, integrity, and connection.
4. If the oven is operative prior to servicing, a microwave emission check should be performed prior to servicing the oven. Refer to page NO TAG of this manual for microwave leakage testing procedure.
5. Any defective or mis-aligned components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
6. A microwave leakage check to verify compliance with the Federal Performance Standard **MUST BE** performed on each oven prior to release to the owner. Refer to page NO TAG of this manual for microwave leakage testing procedure.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance **MUST BE** grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.



WARNING!!

Improper use of the grounding can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

DO NOT use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

POWER SUPPLY CORD REPLACEMENT

If the power supply cord is damaged, it **MUST BE** replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

SAVE THESE INSTRUCTIONS

RF INTERFERENCE CONSIDERATIONS

This oven generates radio frequency signals. This device has been tested and determined to be in compliance with applicable part of FCC part 18 requirements and to the protection requirements of Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility at the time of manufacture. However, some other equipment may exhibit sensitivity to signals below these limits resulting in interference with that equipment.

If your equipment experiences interference, the following steps should be considered:

1. Increase the physical separation between this oven and the sensitive equipment.
2. If the sensitive device can be grounded, do so following accepted grounding practices.
3. If battery powered microphones are being affected, insure that the batteries are fully charged.
4. Keep sensitive equipment on electrically separate circuits, if possible.
5. **DO NOT** route intercom wires, microphone wires, or speaker cables near oven.

SAVE THESE INSTRUCTIONS

CHAPTER 1

INSTALLATION SPECS

ACCELLIS C70

OVEN DESCRIPTION

SPECIFICATIONS	C70
Dimensions (single unit)	29" W x 21.5" H x 32.25" D (74.9 cm x 54.6 cm x 81.9 cm)
Maximum Input	8.0 KW/Hr.
Power Supply	208 VAC, 50/60 Hz, 1Ø, 39 amp, 3 wire including ground 240 VAC, 50/60 Hz, 1Ø, 36 amp, 3 wire including ground
Microwave Frequency	2.45 GHz
Connections including ground	The unit is supplied with a 6' power cord with an approved plug. The outlet box, receptacle and wall plate are to be furnished by the installing contractor.
Maximum Power Usage	
Convection Oven	5Kw
Microwave Oven	2Kw

TABLE 1

INSTALLATION

The Blodgett Accellis oven is manufactured to comply with applicable CE, UL, CUL, FDA, and FCC requirements. In addition, the unit is UL classified to NSF 4. All equipment is designed and certified for safe operation when installed in accordance with local and or national codes. Many local codes exist, and it is the responsibility of the owner and installer to comply with these codes.

In no event shall the manufacturer assume any liability for damages or injury resulting from installations which are not in compliance with the instructions and codes listed above.



WARNING!!

DEATH, INJURY, AND EQUIPMENT DAMAGE could result from improper installation of this oven or installation of a unit which has been damaged during shipment or storage. Either of these conditions could void the equipment warranty.

DO NOT INSTALL an oven suspected of damage.

INSTALL this oven according to the policies and procedures outlined in this manual.

OVEN LOCATION

The well planned and proper placement of your oven will result in long term operator convenience and satisfactory performance.

Be sure to place the oven in an area which is accessible for proper operation and servicing.

The countertop or work surface must be able to support the weight of 200 pounds. The manufacturer shall not assume liability for damage or injury resulting from improper installation of equipment including temporary or unstable work stations or countertops.

There must be 2" (5.08 cm) between the top of the unit and any shelf or other surface.

The oven must be installed level front to back and side to side. The oven legs may be bolted to the counter top if desired.

CHAPTER 2

CLEANING & OPERATING

BASIC CLEANING PROCEDURES

PROBLEMS ASSOCIATED WITH IMPROPER CLEANING

The Accellis C70 oven may not be operating correctly because it is not being cleaned properly. If the door is leaking microwaves, erratic operation of the display and other electrical components can occur. Also food deposits left in the oven will turn into black carbon from the high heat. Carbon can cause arking inside the cooking area and can reflect energy back to the magnetron.

If a customer tells you they are experiencing cooking performance problems, carefully inspect the cooking platter and waveguide cap for chips. If the platter or waveguide cap are chipped and soaked in water, they will absorb the water. The water will then be heated instead of the food product. The chipped part must be replaced.

DAILY CLEANING

1. Carefully remove the ceramic cooking platter and wave-guide cap. Spray both pieces generously with non-lye non-caustic oven cleaner or non-lye non-caustic degreaser and set aside to allow the cleaner to penetrate. **DO NOT soak the Ceramic Cook Platter or Waveguide Cap in water.**

2. Clean the ceramic cooking platter, and wave guide cap using brushes and scrub pads. Rinse to remove all cleaner and debris. Inspect for damage and replace as required.
3. **Reinstall the clean wave-guide cap into the oven.** This will protect the wave-guide seal while the cook chamber is cleaned.
4. To clean the interior of the oven, use a 3"x5" green scrub pad. Use a non lye based cleaner on tough spots. **DO NOT** wash out the interior cooking area. The waveguide quartz seal is not a water tight seal. Wipe out the oven with a damp rag. If the door area needs cleaning, be careful not to damage the small rubber gasket around the door shunt area.
5. Remove the lower access panel and grease collection pan. Empty, clean and reinstall the pan.
6. Verify the louvers on the front and side of the oven are clean of lint and unobstructed.

MONTHLY CLEANING

1. Remove and clean the exhaust cover from the back of the oven.

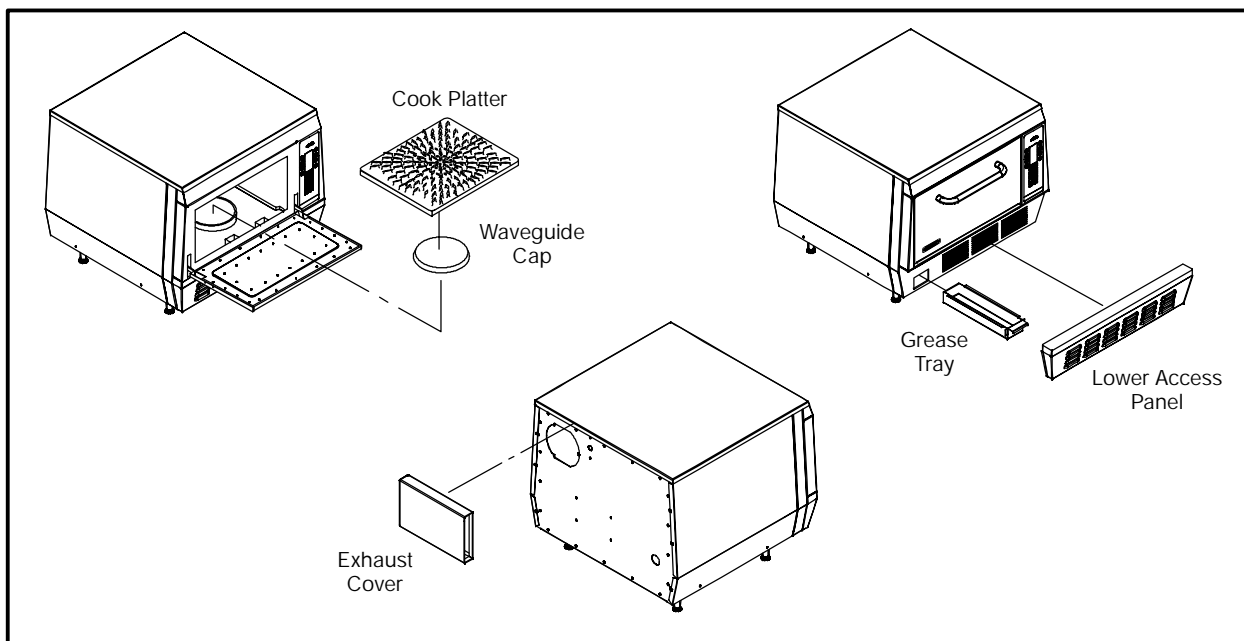


FIGURE 1

OVEN CAVITY FILTER CLEANING

Filter should be cleaned once a week, depending on food product and unit run time.

1. Turn the C70 off and disconnect power to the unit.
2. Allow the unit to cool before cleaning the filter.
3. Open the oven door.
4. Carefully remove the ceramic platter.
5. The oven cavity filter is located in the bottom left corner.
6. Remove the two screws.
7. Pull the two tabs on the filter to remove it.
8. Clean the filter with soap and warm water.

9. Clean the oven filter cavity.

DO NOT reach into the air return more than six inches.

10. Reinstall the filter and secure with the two screws.

DO NOT over tighten the screws.



WARNING!!

DO NOT operate the unit without the oven filter installed. Failure to do so may result in premature failure of the heater element.

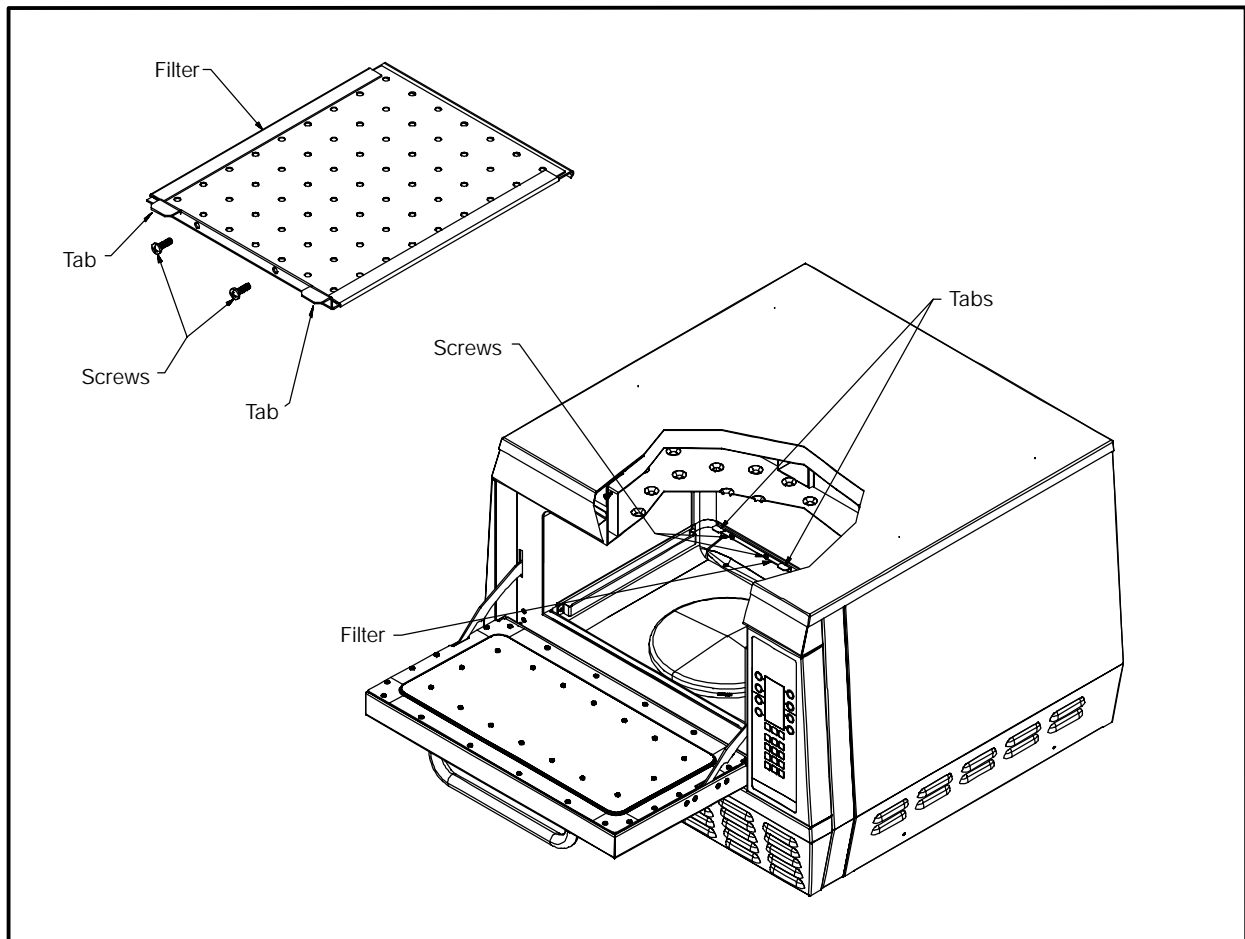


FIGURE 2

GLOSSARY OF COMMON OPERATING TERMS & ERROR MESSAGES

OVEN OPERATING COMPONENTS

Display – Primary interface to relay messages to the operator.

Keypad – Primary interface for the operator to control the oven.

Cook Chamber – Cavity in which the food products are cooked.

PRODUCT RECIPES

Recipe – The food product recipe programming consists of time, percentage of hot air flow (AIR) required and microwave (MW) level required.

Cook Cycle – Time of operation for a recipe.

Cook Event – Segment of a recipe, up to 6 events can be used for each recipe.

Duration – Time, in seconds, of a single cook event.

Air – Percent of convection air flow during a cook event.

MW – Percent of microwave used during a cook event.

Cook Temperature Set Point – Temperature should be a constant parameter. The same cook temperature should be used by all cook recipes.

MODES

Mode – The software environment which allows certain operations to occur. There are several modes, STANDBY, COOK, WARM UP and COOL DOWN in which the oven can operate.

Standby Mode – The standby mode is similar to oven off. In standby there is no power to the oven. There is power to the control, however, the oven will not operate in standby mode.

Cook Mode – Mode used to perform the normal oven operations, such as, monitor the key pad for requests to cook or change mode, and maintain the oven at the cook temperature set point.

Warm-Up Mode – Mode to bring the oven up to the cook temperature set point.

Cool-Down Mode – Turns off all oven components except the cooling fan and circulation blower.

ERROR MESSAGES

LO MAG CURR – the magnetron transformer is drawing less than 7 amps. The normal current draw is approximately 9 amps. The current draw is being monitored by the control board which has an inductance ring on it.

LO COOK TEMP – the temperature set for the C70 is not being maintained. It is referenced by two J type thermocouples.

MAG OT – the snap disk on the magnetron has overheated and has tripped.


BLOWER STAT – the control board is not receiving the proper output from the convection (blower) motor speed control.

LO MAG FLUX – there is a small antenna in the launch tube of the wave guide. This antenna or RF cable is attached to the control circuit board. The control circuit board amplifies the signal and looks for a certain fluctuation which indicates the magnetron is operating and the stirrer blade in the launch tube is rotating. When not cooking a minimum change of 20 is being looked for. When you are cooking a product a minimum change of 10 is being looked for. When viewing the RF display, it will fluctuate quickly with a maximum value of 120 (plus or minus 20).

ELECTOVR TMP – the j type thermocouple connected to the control board is above 140_F.

OVEN DOOR OPEN – (during cook cycle) the cooking door has been opened during a cook cycle and has not been closed properly.

OPERATIONAL FLOW CHART

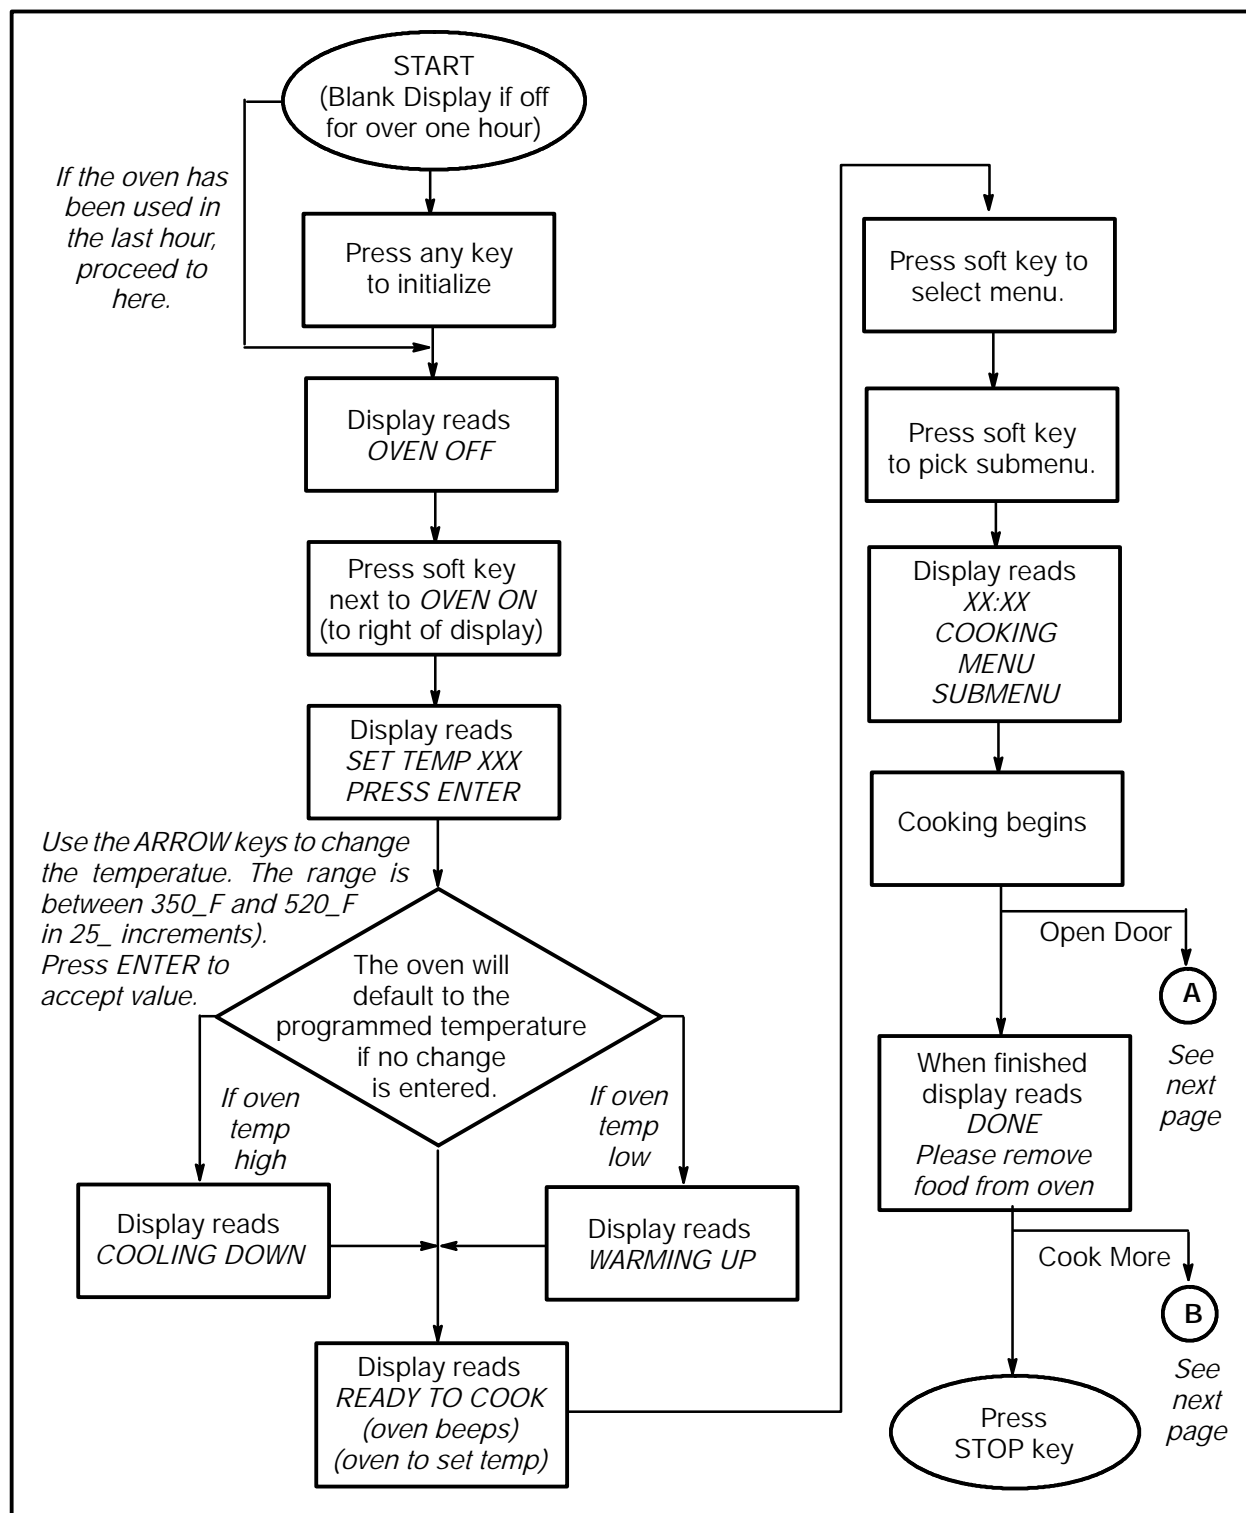


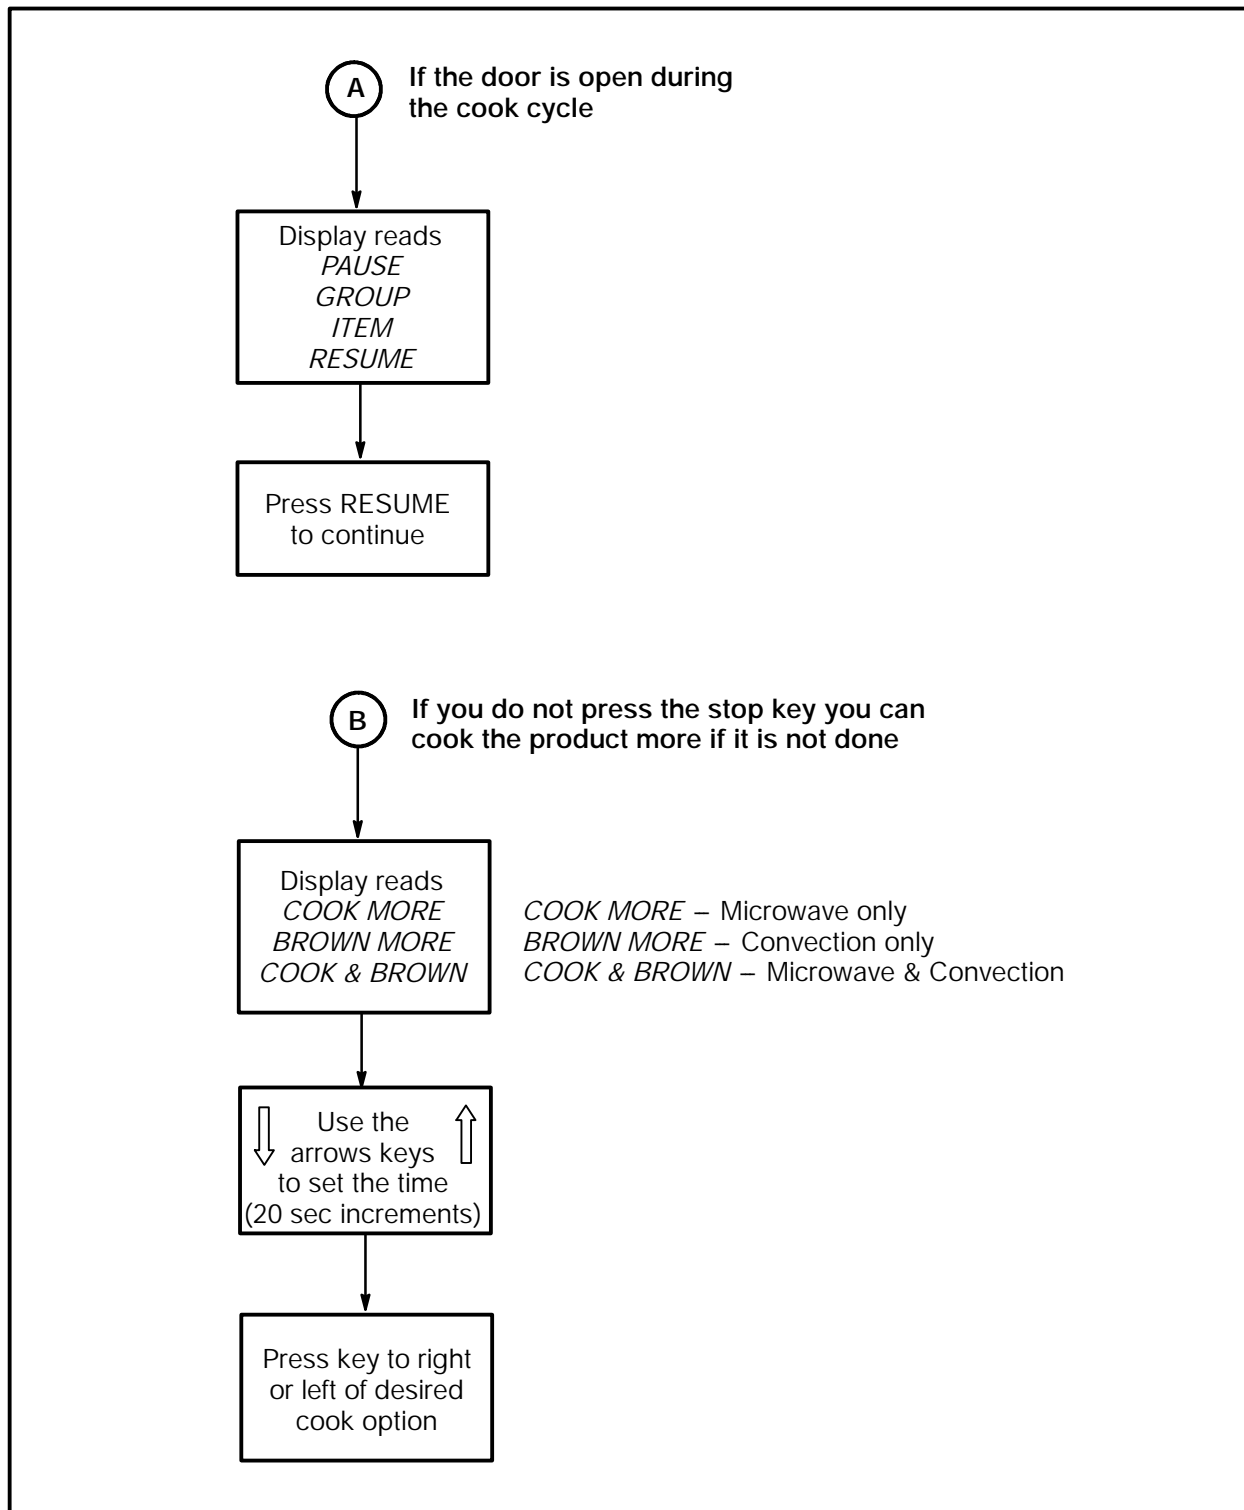


FIGURE 3

PROGRAMMING FLOW CHART

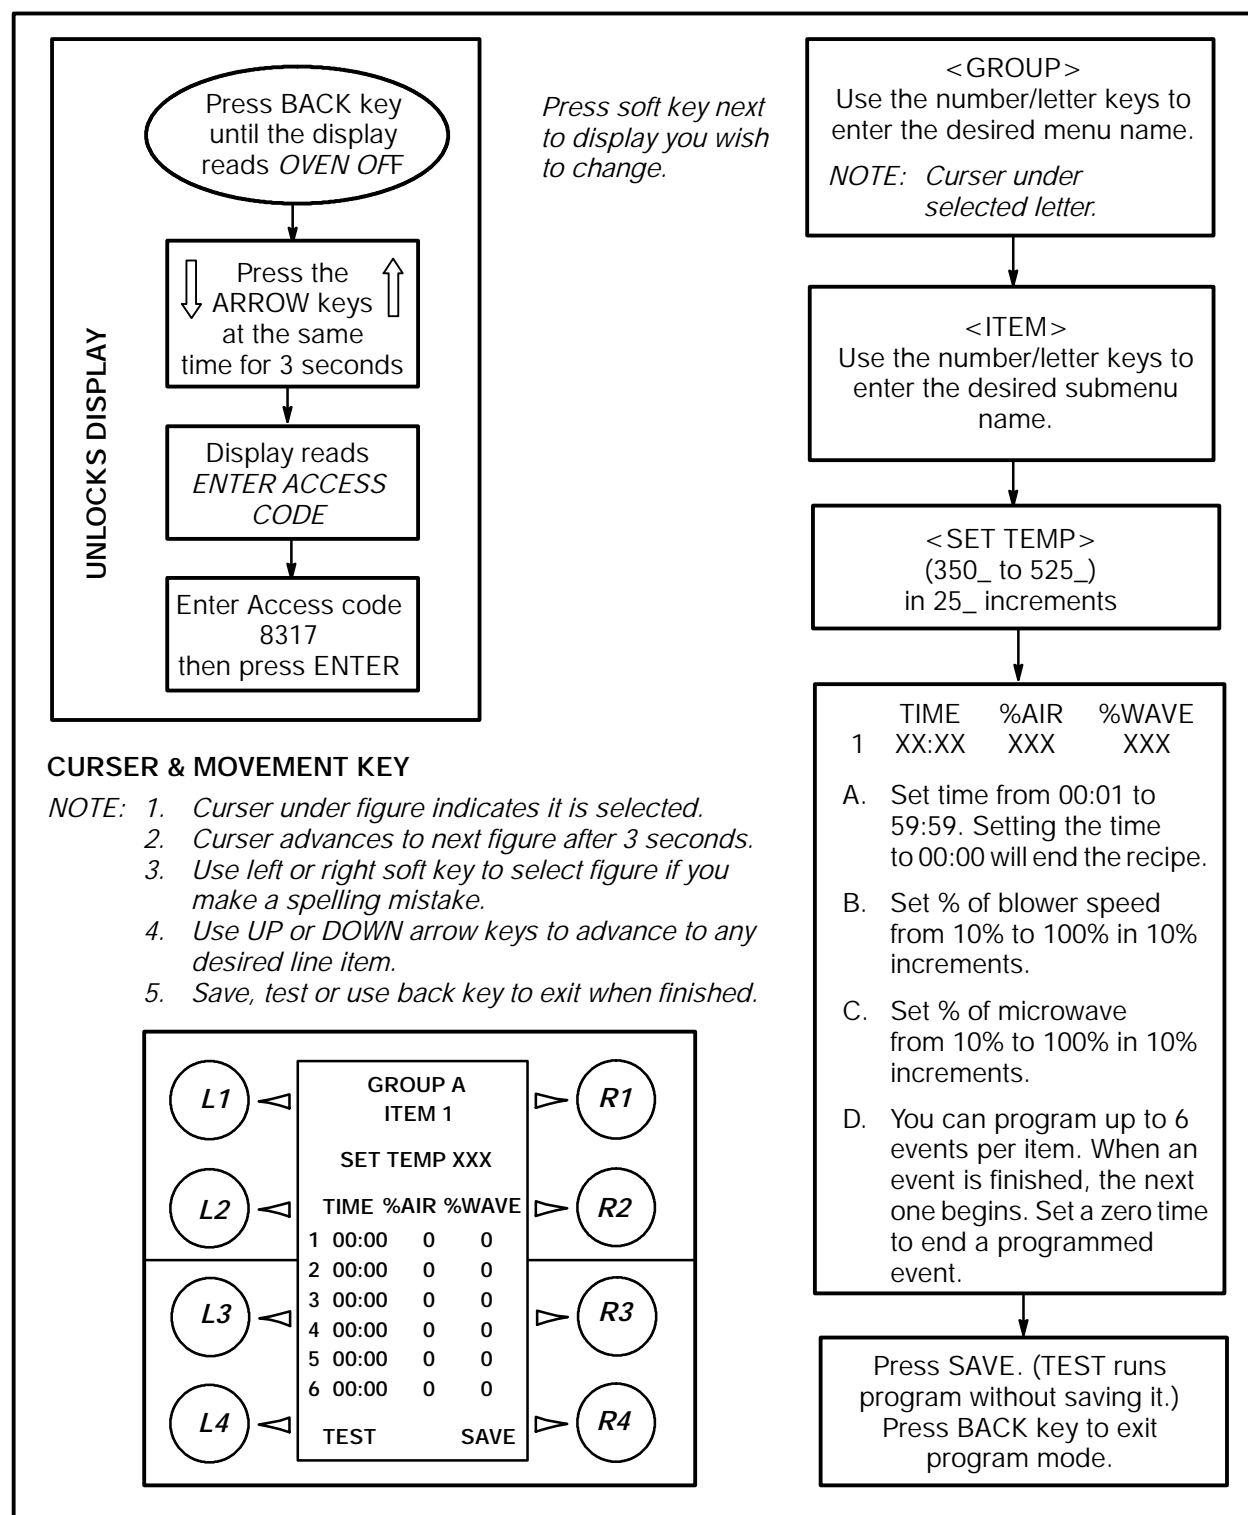

CHAPTER 3

TEST

TEST FUNCTION QUICK REFERENCE

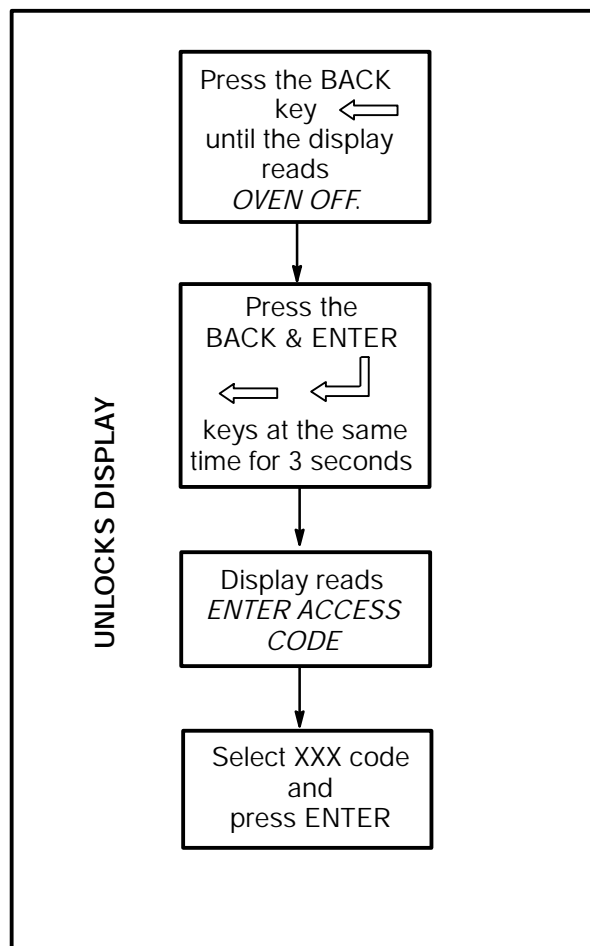


FIGURE 1

The test function allows the technician to operate components individually and get diagnostic information. There are 2 pages of test functions. To change pages use the DOWN ARROW key. Refer to the brief descriptions on this page to help determine which test function will help you. Before operating a test function, read the full description of the test function on these following pages.

DISPLAY PAGE 1

CCXX – thermocouple cooking cavity temperature

BLOWER – runs the blower motor in 10% increments

ELEC – thermocouple electrical compartment temperature

STEST – initiates the self test function

HXXX – thermocouple heat exchanger temperature

HEATER -- turns on HOT AIR heater element

MGTRON – (press & hold) runs the magnetron circuit

DIAG – runs the cooking display w/status indicators at the bottom of the display

DISPLAY PAGE 2

CCXX – thermocouple cooking cavity temperature

HXXX – thermocouple heat exchanger temperature

S/N – for entering the serial number of the C70

CCC – number of cook cycles

PIN – enters a new 3 digit password number

F/C -- Fahrenheit or Celsius temperature display

FF – view and reset cook fault counters

IAF – allows you to view or change the Idle Airflow

TEST FUNCTION DETAILED DESCRIPTION

TO ENTER TEST FUNCTION MODE

1. From the standby mode, press and hold both ARROW keys simultaneously for three seconds.
2. The display reads:

ENTER ACCESS CODE

3. Use the NUMERIC keypad to enter the following access code:

8317

4. Press the ENTER key.

TEST FUNCTION OPTIONS

The test screen displays the CC (cook cavity) and HX (heat exchange) temperature at the top of the screen.

The control displays page one of the test function options. Press the DOWN ARROW key to display page two of the test functions options.

To access a test function, press the corresponding soft key repeatedly.

TEST FUNCTION OPTIONS -- PAGE 1

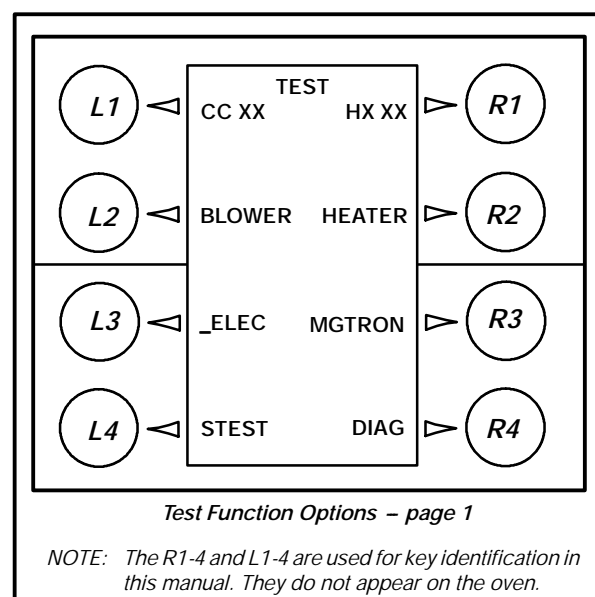


FIGURE 2

Blower Speed

The BLOWER key (L2) increments the blower speed in 10% steps. When the blower speed is 100%, the next press sets the speed to 0%.

Electronic Compartment Temperature

The _ELEC key (L3) displays the temperature inside the electronic enclosure.

Self Test Function

The STEST key (L4) initiates a self-test function to test all major components of the oven. Press the L4 key once to run the self test. Press the BACK key to return to the standby mode.

Heater Test

The HEATER key (R2) turns the heater on or off. If the heaters are on, pressing the R2 key turns the heaters off. If the heaters are off and the maximum heater temperature (700_F) is not exceeded, pressing the R2 key turns the heaters on. If the blower speed is 0, the blower speed is set to the Idle Airflow.

Magnetron

The MGTRON key (R3) is a press and hold key to test the magnetron. If the magnetron filaments are off when the MAG key is pressed, the message "MAG WARMING UP" is displayed. After a 3 second delay or if the filaments are already on, "MAG ON, RF xxx" is displayed. "xxx" is the fluctuating microwave power measured in the wave-guide (if RF detector is installed). Any time the MAG key is released, the magnetron turns off. The filament power (magnetron cooling fan and mode stirrer) remains on for three minutes.

Diagnostic Display

The DIAG key (R4) turns on or off the diagnostic display feature. This feature adds temperature displays to the menu group screens.

While cooking, cook setting parameters are displayed when diagnostics are enabled.

With diagnostics enabled, status indicators are displayed on the lower left of the display. Each indicator is a letter, which is displayed in a positive sense when the status condition is on. The letter is reversed when the condition is off. There are eight status indicators:

P – Cook door primary interlock switch
S – Cook door secondary interlock switch
M – Cook door monitor interlock switch
t – Magnetron over temperature switch
h – Heater turn on command
H – Heater current detected
A – Blower motor speed control “run” status
W – Magnetron current detected

TEST FUNCTION OPTIONS -- PAGE 2

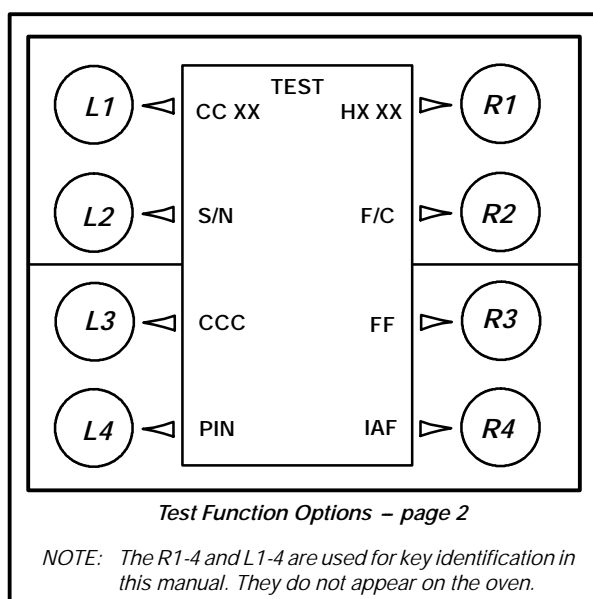


FIGURE 3

Serial Number

NOTE: This should only be needed when installing a new control. The S/N is located on the back of the oven.

The first press of the S/N key (L2) displays the oven's twelve-digit serial number. Use the following procedure to enter the serial number.

1. Press the S/N key again to enter the edit mode.
2. Press the ENTER KEY. A right and left arrow key appear on the bottom of the display. These arrows are used to navigate within the text. Use the L4 SOFT KEY to move the cursor to the left. Use the R4 SOFT KEY to move the cursor to the right.

3. Use the NUMERIC KEYPAD to change the digits as follows:
 - A.) Press the key once to enter the first letter.
 - B.) Press the key twice to enter the second letter.
 - C.) Press the key three times to enter the third letter.
 - D.) Press the key four times to enter the fourth letter if applicable or number.
 - E.) Press the key five times to enter the number if applicable.
4. Press the ENTER KEY to store the new name.

Cook Cycle Count

The CCC key (L3) displays the cook cycle count. The count is incremented when the cook process completes at least the first event. The count includes test cooks selected while in the edit function. To reset the count, press 0 key.

PIN Number

The PIN key (L4) is used to enter a new personal identification number (password) for accessing the test and edit functions. When the button is pressed the display reads:

ENTER PIN _ _ _

Use the numeric keypad to enter the new PIN. Only numbers are applicable for the PIN.

Temperature Units

The F/C key (R2) alternately selects fahrenheit or celsius for temperature displays.

Cook Fault Counter

The FF key (R3) is used to read and reset the oven cook fault counters. Repeat pressing the FF button to view five fault counters. Press the 0 key to reset the fault counter displayed. The faults include:

- D BLOWER STAT (blower motor speed controller)
- D LOW COOK TMP (temperature)
- D LOW MAG CURR (current)
- D MAG OVR TMP (over temperature switch)
- D ELEC OVR TMP (electronics)

Idle Airflow

The first press of the IAF key (R4) displays the selected idle airflow. Subsequent presses of the IAF button increment the idle airflow in 10% steps. When the idle airflow is 50%, the next press sets the airflow to 10%.

CHAPTER 4

***ELECTRICAL
COMPARTMENT***

KEY SEQUENCE OF OPERATION – FAILURE MODE ANALYSIS

Unit will perform self test of component functions.

1. **No display.** Check items:

#2 (fuse)

#4 (24VDC power supply).

#9 (SMT controller board). Check for 5 VDC on P5 pin 1+ & 3-.

NOTE: Check cable connections.

2. **Door interlock switch error.** Check items:

#5 (primary & monitor door switch) (secondary switch on left side of oven not shown.)

#6 (K2 relay)

#1 (circuit breaker)

See page 4–5.

3. **Mag current low.** Check items:

#1 (circuit breaker) (CB1)

#3 (convection high heat OT)

#6 (K3 relay filament heat)

#8 (K4 SS relay for magnetron)

#13 through #17.

NOTE: Reference page 6–4 and 6–6 for component testing.

4. **Mag Fluc Low.** Check items:

#12 (stir motor)

9 (SMT controller board RF cable connection.)

#13 through #17

NOTE: If (RF) value on display is (0 or 1). No RF power is present. If (RF) value is displaying a number value like (60) with little fluctuation then check item #12 (Stirrer fan in launcher tube may need to be inspected. This involves removing the quartz seal.)

NOTE: Reference page 6–4 and 6–6 for component testing.

5. **Mag Thermo SW.** Check items:

#17 (magnetron)

#11 (magnetron cooling fan.)

NOTE: Attached to back of the magnetron is the Mag thermo snap disk.

6. **Blower motor defective message.** Check items:

#18 Blower motor speed controller.

#19 Convection (blower) motor

NOTE: Reference pages 5–5 and 5–6 for BMSC defective messages.

7. **Heat Exchanger Thermo OPEN. Display shows the # 999.** Check items:

#9 (SMT controller board connector (J2) pins #37 & #38).

NOTE: Check pin connections.

NOTE: Reference pages 4–2 through 4–4.

8. **CC Heat thermo OPEN. Display shows the # 999.** Check items:

#9 (SMT controller board connector (J2) pins #37 & #38).

NOTE: Check pin connections.

NOTE: Reference pages 4–2 through 4–4.

9. **Heat Rise Low.** Check items:

#7 (K7 SS relay for heater)

#18 (convection motor controller)

NOTE: Reference pages 4–2 through 4–4. for heater testing information.

ELECTRICAL COMPONENT LOCATIONS

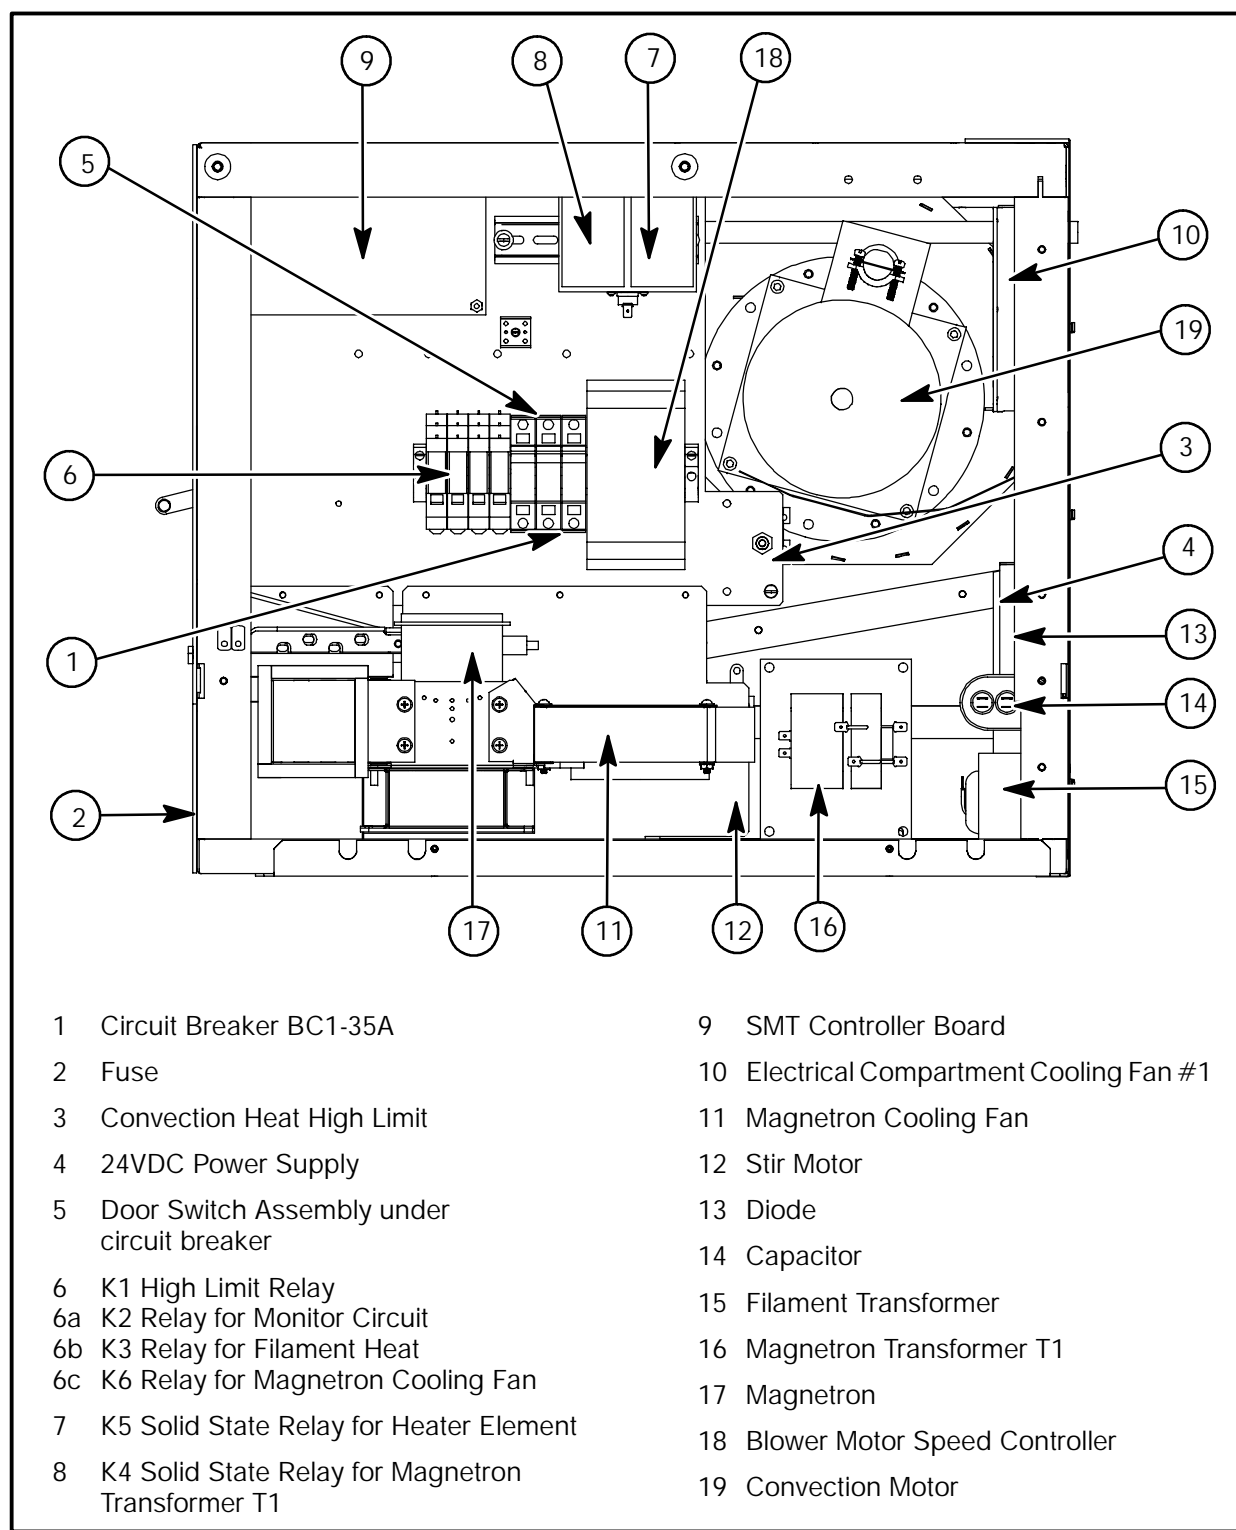


FIGURE 1

ELECTRICAL COMPONENT DESCRIPTION WITH VOLTAGE INFORMATION



CAUTION!

Magnetron voltage potential of 4800 VAC

NOTE: To test if 208/240 VAC is present use CB1 Terminal L2A white wire as neutral.

NOTE: To test if voltage at coil is present, measure voltage across coil. Voltage should be present when activated.

COMPONENTS

Item 1 Circuit Breaker CB1-35A

- D 208/240 VAC Trip Coil Terminals (1 & 2).
- D 208 VAC Line Input.
- D 208/240 VAC Line Output.

Item 2 Fuse

- D Qty (2) 10 AMP Fuse

NOTE: Remove front access panel to expose fuse holders.

Item 3 Convection Heat High Limit

- D 208/240 VAC (N/O) Terminals (13 & 14).

NOTE: Manual reset trip temp 350_C or 670_F

Item 4 24 VDC power supply

- D Line power in (L & N) 208 VAC.
- D Output (+V & -V) 24 VDC.

Item 5 Door Switch Assy

- D 24 VDC Switch #1 C.D.P.
- D 24 VDC Switch #2 C.D.S.
- D 24 VDC Switch #3 C.D.M.

Item 6 K1 High Limit Relay

- D 208/240 VAC Coil terminals (8 & 1).
- D 208/240 VAC Input Terminal (6).
- D 208/240 VAC Output Terminals (5).

Item 6 K2 Relay for Monitor circuit

- D 24 VDC Coil Terminals (8)+24 VDC & (1)-24 VDC.
- D 208/240 VAC Input Terminal (6).
- D 208/240 VAC Output Terminal (7).

Item 6 K3 Relay for Filament Heat

- D 24 VDC Coil Terminal (8)+24 VDC & (1)-24 VDC.
- D 208/240 VAC Input Terminals (6 & 3).
- D 208/240 VAC Output Terminals (5 & 4).

Item 6 K6 Relay for Magnetron Cooling Fan

- D 24 VDC Coil Terminals 24 VDC Input Terminals (6)-24VDC & (3)+24VDC.
- D 24 VDC Output Terminals (5)-24VDC & (4)+24VDC.

Item 7 K5 Solid State Relay for Heater Element

- D 24 VDC Coil Terminals (3+ & 4-).
- D 208/240 VAC Input Terminal #1.
- D 208/240 VAC Output Terminal #2.

Item 8 K4 Solid State Relay for Magnetron Transformer T1

- D 24 VDC Coil Terminals (3+ & 4-)
- D 208/240 VAC Input Terminal #1.
- D 208/240 VAC Output Terminal #2.

Item 9 SMT Controller Board

- D 24 VDC Line Input P2 location #16
- D 24 VDC Line return location P2 #22
- D Current Sense Transformer CT1.

NOTE: Amp draw on wire going to Mag is 9 AMP.

- D Current Sense Transformer CT3.

NOTE: Amp draw on wire going to Heater is 19 AMP.

Item 10 Electrical Compartment Cooling Fan #1

- D 24 VDC Output from (-V 24 VDC Power supply & OT #1 terminal NO).

NOTE: OT #1 closes at 120f.

Item 11 Magnetron Cooling Fan

- D 24 VDC Input from K6 Terminals (5 & 3).
- D 24 VDC Output from K6 Terminals. (5 & 4).

ELECTRICAL COMPARTMENT

Item 12 Stir Motor

- D 208/240 VAC Connector J1 (1 & 2)

NOTE: Energized by K3 Filament Heat contactor.

Item 13 Diode

- D Reference page 6–4 for test procedure.

Item 14 Capacitor

- D Reference page 6–4 for test procedure.

Item 15 Filament Transformer

- D Reference page 6–4 for test procedure.

Item 16 Magnetron Transformer T1

- D Reference page 6–4 for test procedure.

Item 17 Magnetron

- D Reference page 6–3 for test procedure.

Item 18 Blower Motor Speed Controller

- D 208/240 VAC Line power location (N & 230V)

- D Motor output (U,V,W) 240 VAC 3 phase.

24 VDC Motor control inputs and outputs.

- D #4) FWD RUN 24 VDC input.
- D #7) 0 to 10 VDC Speed input example, 1 VDC = 10% RPM, 2 VDC = 20% RPM.
- D #9) Speed Command.
- D #11) 24 VDC Common
- D #12) Running B.M.R

Item 19 24 VDC Motor control inputs and outputs.

- D 208/240 VAC Input from B.M.S.C Terminals (U.V.W)

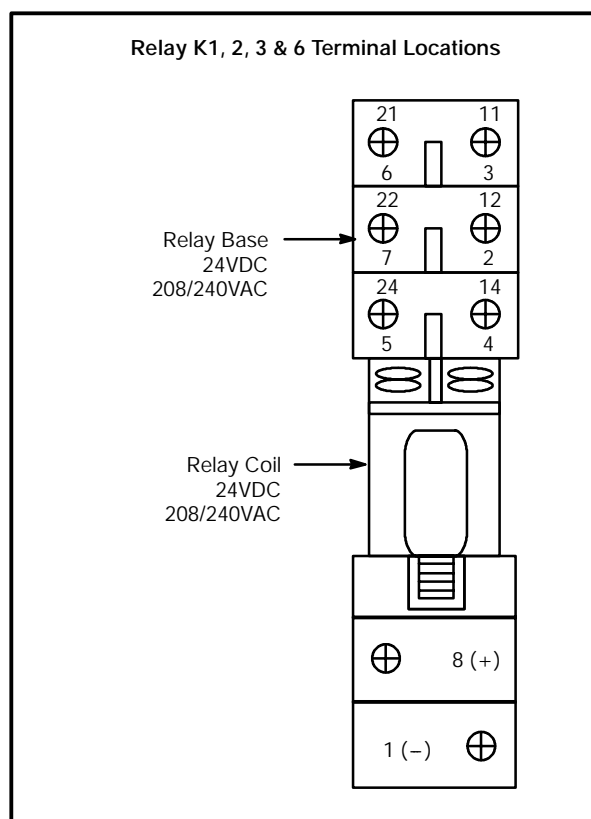


FIGURE 2

DOOR SWITCHES AND CIRCUIT BREAKERS

DOOR SWITCHES

The C-70 has 3 door switches. One door switch is located on the left hand side and is called the secondary switch. Two switches are located on the right hand side. One is called the primary switch and the other is called the monitor switch. **The monitor switch must close before the primary and secondary switches close or the circuit breaker will trip. The circuit breaker will also trip if a door switch is defective and not closing.** To determine what sequence the doors are closing in, you will need to access the Test mode and activate the Diagnostic mode (See pages 3–1 to 3–3). By doing so, you will activate the status indicators at the lower left bottom of the display. Slowly close the

door once you have activated the Diagnostic mode and observe the status indicators. You may need to adjust the strike screw on the door cam so the switches close in the correct sequence. The mounting screws for adjusting the door closer can also be adjusted if needed. (The mounting brackets for the door are slotted to allow adjustment.)

CIRCUIT BREAKER

The circuit breaker is a manual reset switch. It will trip if the total current draw is more than 35 amps or if it is activated by a safety fault. Refer to the chart below to help you determine what problem you may have if the circuit breaker has tripped.

CIRCUIT BREAKER TRIP CHART	
Component	Possible Cause/Circuit Information
Magnetron transformer	The magnetron transformer will draw approximately 9 amps when functioning properly. Check winding resistances (See Page 6–5) A 3 amp draw indicates the diode is bad.
Solid state contactor for Magnetron (K4)	(See above for correct current draw.) The coil operates on 24v dc. Solid state relays tend to fail closed. Check with VOM meter.
Hot air heater element	Use VOM meter. 240V element is 12ohms / current is 20amps 208V element is 9 ohms / current is 23 amps
Solid state contactor (K5) for hot air element	(See above for correct current draw.) The coil operates on 24v dc. Solid state relays tend to Fail closed. Check with VOM meter.
High limit & K1 relay	High limit tripped (670F). Reset with screwdriver. Check thermocouples (See page 4–8 and 5–3) Verify contact points (6 to 5) on K1 relay are open. Check K5.
Door switch closure	(Read first paragraph on this page.) Check Switches with VOM meter.

TABLE 1

DOOR SWITCH ADJUSTMENT

TOOLS REQUIRED:

- D 7/16 Allen wrench
- D 5/16 socket and ratchet or 5/16 box & open end wrench
- D #2 Phillips head screwdriver
- D Blodgett Door Switch Adjustment Kit, part #T0631
- D RF survey meter

DOOR SWITCH ADJUSTMENT INFORMATION

The goal of this adjustment procedure is to adjust the door switches so they close and open in the proper sequence. There are three door switches in the C70 oven. They are called the Monitor switch, the Primary switch, and the Secondary switch. The secondary switch is located on the left-hand side of the oven. The Primary and Monitor switch are located on the right hand side of the C70 oven. The Monitor switch is mounted closest to the oven cavity, with the Primary switch mounted next to it.

When closing the oven door, the Monitor switch must close first, then the Secondary switch and the last switch to close is the Primary. The door switches will open in the opposite sequence when the door is opened; first the Primary, then the secondary, and the last switch to open is the Monitor switch.

This procedure is written to insure proper oven operation and compliance with Federal regulations.

ADJUSTMENT

NOTE: Read these instructions completely before starting this procedure.

1. The C70 oven must be at room temperature to adjust the door switches.
2. With the power off to the C70, remove the oven body top and both sides. Use the security screwdriver provided in the Blodgett Shim kit where needed.
3. Loosen or remove the five screws securing the top oven molding across the top of the oven. See FIGURE 3 for location of the screws.
4. Reapply power to the C-70 oven.
5. Enter the TEST function mode. Refer to page 3-2 for instructions. Activate the Diagnostic

mode and read the short paragraph on this test function. You will be using the status indicators enabled in this mode to insure proper switch adjustment. You will be monitoring the P, S, and M status indicators when adjusting the door switches. Remember, when the indicator letter is dark, the switch is open. When the indicator letter is bright, the switch is closed. With the door open, manually operate the Secondary switch lever and observe the change in the status indicator on the display to demonstrate the switch open and closed indication.

6. Shut off the circuit breaker (down position) CB-1.
7. Locate the Blodgett shim kit, part number T0632. This kit contains a total of 12 shims. All the shims are engraved with their dimensions. Three shims are of the same thickness. Locate matching shims and separate them into 4 groups on top of the oven. Group the shims from left to right in the following order: 0.060, 0.048, 0.030, and 0.024. This is the order you will be using them in. The other tools in this kit will be used later.
8. Inspect all shims for flatness prior to starting. Any bent edges or non-planar (not flat) surfaces will cause incorrect measurements. Repair or replace damaged shims before proceeding.
9. Before starting to do any adjustments, review FIGURE 4. In the upper left hand side of Figure 1 is a detail of the door switch and its actuating screw. Compare this figure to the door switches on the C70 oven with the oven door is closed. The activator switch screw (5) must be engaging the door switch interlock switch lever (7). If these two parts are not engaging, it may be necessary to move the whole switch assembly by adjusting the two Phillips screws holding the door switch assembly in place.
10. Be sure the actuator switch screw at any time during this door switch adjustment is not over-driving the interlock switch lever (7) so that it is hitting the switch body (6).
11. All door switch adjustments for the rest of this procedure will be done by loosening the nut on an actuating switch screw (5/16 nut) and then using the Allen head wrench (7/64) to turn the actuator switch screw. It is recommended that

ACCELLIS C70

adjustments be made in 1/4 or less turn increments. When a door switch adjustment is completed, tighten the nut on the actuator switch screw while holding the actuator switch screw head in place with the (7/64) Allen head wrench.

12. Open the C70 oven door. Slide the 0.060 shims in place as shown in FIGURE 3. The longer lip with the etching must be on the inside of the door. (All shims must be placed as such when installed on the oven door.)
13. Hold the loosened (if not removed) top oven molding up so when you open and close the door with the shims in place such that the shims will clear the molding. Shimming it with cardboard (not provided) works well. See FIGURE 3.
14. Slowly close the oven door. All door switches must be open. (The Monitor status indicator letter (M) will be dark. The Primary (P) and Secondary (S) status indicators will be dark.)
15. Open the door 2 inches, then release it. The door should close firmly and all switches must be open. (With the door closed, the Monitor status indicator letter (M) will be dark. The Primary (P) and Secondary (S) status indicators will also be dark.) Repeat and readjust the door switch activator screw as needed to meet these criteria for both the door closings before continuing. (Step 14 & Step 15)
16. Remove the 0.060 shims and re-shim the door with the 0.048 shims.
17. Slowly close the oven door. The Monitor door switch must be closed. (With the door closed, the Monitor status indicator letter (M) will be bright.) At this time, do not worry about the other indicator status letters. You will be adjusting them later in this procedure.
18. Open the door 2 inches, then release it. The door should close firmly and the Monitor switch must be closed. (With the door closed, the Monitor status indicator letter (M) will be bright.) At this time, do not worry about the other indicator status letters. You will be adjusting them later in this procedure. Repeat and readjust the door switch activator screws as needed to meet this criteria for both the door closings before continuing. (Step 17 & Step 18).
19. Remove the 0.048 shims and re-shim the door with the 0.030 shims. Slowly close the door.
20. Adjust the Primary and Secondary switch actuator screws so they are just open when the door is closed. (With the door closed the Primary status indicator letter (P) will be dark and the Secondary status indicator letter (S) will be dark. The Monitor indicator letter (M) will be bright.) Repeat and readjust the door switch activator screws as needed to meet these criteria before continuing.
21. Open the door 2 inches, then release it. The door should close firmly. The Primary and Secondary switches must be open when the door is closed. (With the door closed the Primary status indicator letter (P) will be dark and the Secondary status indicator letter (S) will be dark. The Monitor indicator letter (M) will be bright.) Repeat and readjust the door switch activator screws as needed to meet these criteria for both the door closings before continuing. (Step 19 & Step 20)
22. Adjust the Secondary switch actuator screw 1/4 turn clockwise.
23. Remove the 0.030 shims and re-shim the door with the 0.024 shims. Slowly close the door.
24. The Primary, Secondary, and Monitor switches must be closed. (With the door closed the Primary status indicator letter (P) will be bright and the Secondary status indicator letter (S) will be bright. The Monitor indicator letter (M) will also be bright.) Repeat and readjust the door switch activator screws as needed to meet these criteria before continuing.
25. Open the door 2 inches, then release it. The Primary, Secondary, and Monitor switches must be closed. (With the door closed the Primary status indicator letter (P) will be bright and the Secondary status indicator letter (S) will be bright. The Monitor indicator letter (M) will also be bright.) Repeat and readjust the door switch activator screws as needed to meet this criteria before continuing. (Step 23 & Step 24)
26. While opening and closing the door gently, look at the status indicator letters. (When you close the door, the Monitor, Secondary, and Primary will close in that order. When you open the door, the Primary, Secondary, and Monitor will open in that order.) Repeat and readjust the door switch activator screws as needed to meet these criteria before continuing.
27. The next procedure will confirm the opening and closing of the door switches in the correct sequence using the Blodgett door leak test tool, part # T0629.

ELECTRICAL COMPARTMENT

28. If you removed the top oven molding, reinstall it at this time. If you did not remove the top oven molding, tighten the mounting screws.
29. Install the Blodgett leak test tool as shown on page NO TAG. Snug up the bottom 2 bolts to the face of the oven door. Adjust the top bolt so it is not hitting the top oven molding.
30. Slowly tighten and loosen the top bolt on the Blodgett leak test tool and observe the status indicator letters. They must open and close as described in Step 26. Repeat and readjust the door switch activator screws as needed to meet these criteria.
31. The C-70 oven must now be checked for microwave leakage. Refer to page NO TAG.
32. If you can not obtain the proper switch closing sequence, it may be necessary to adjust the door cam (roller) positions as described in the door replacement and installation procedure.

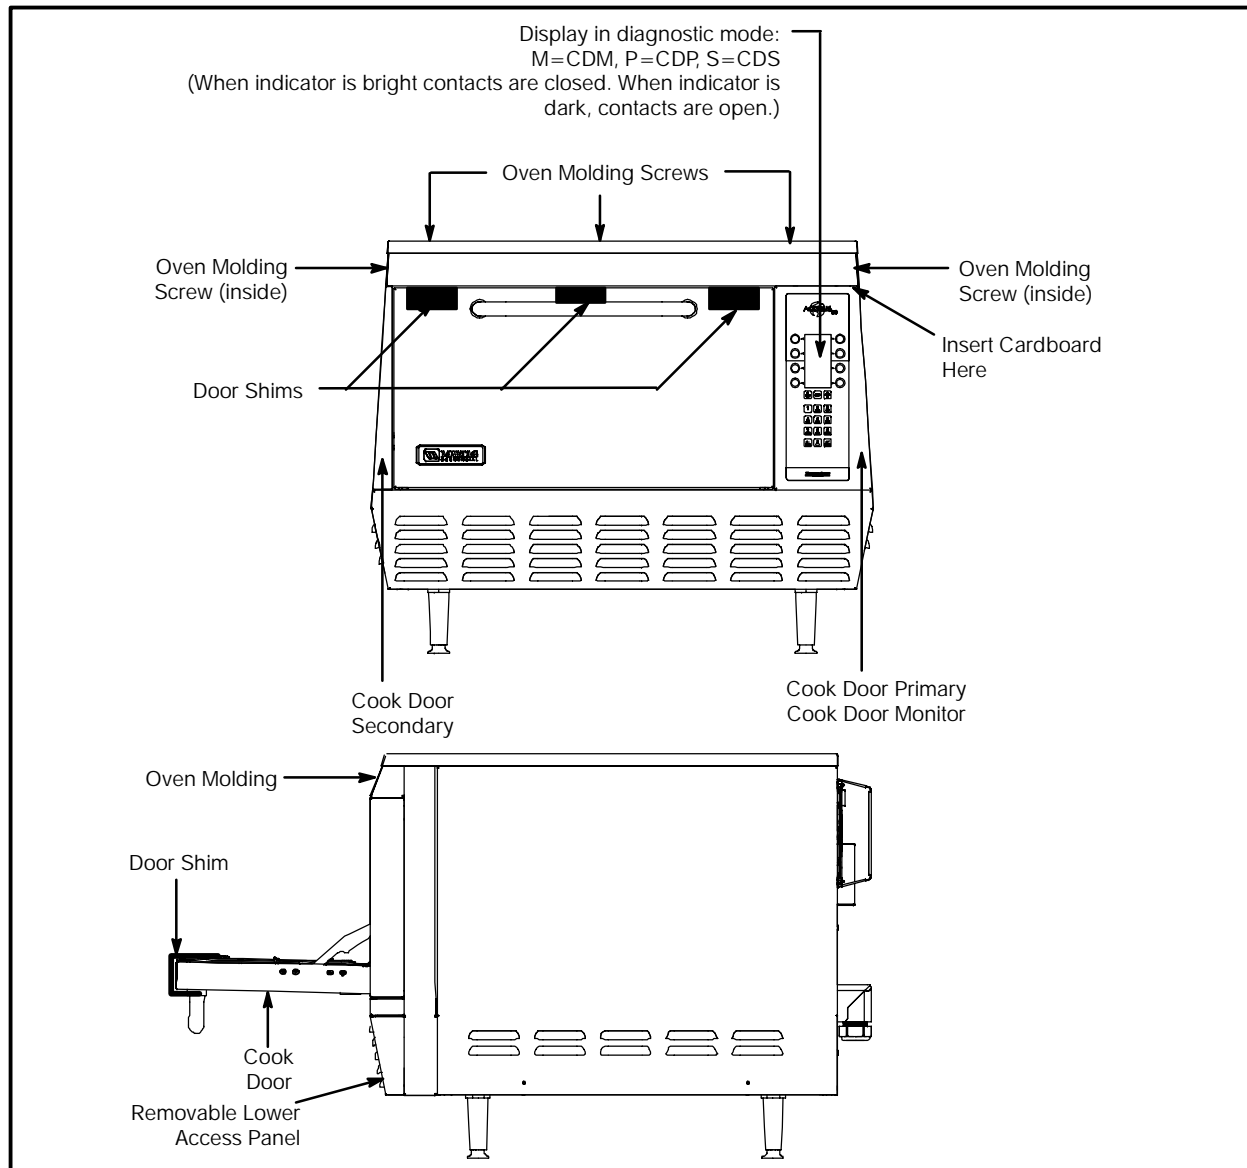


FIGURE 3

DOOR REMOVAL AND REPLACEMENT

Tools Required:

- D 12" long #2 Phillips screw driver
- D 3/8" hex driver
- D 3/8" socket with 1/4" ratchet wrench
- D Set of feeler gages

DOOR REMOVAL

1. Remove the side and top panels, top and bottom plugs, control panel, and perimeter trim piece.
2. Remove the interlock actuator bracket (#3) and front guide block assembly (#9) from both sides of the oven.

NOTE: The guide block assembly may or may not contain guide block support shims (#22). Guide block assemblies should be re-installed in the location they were removed from (i.e. right guide block assembly re-installed on right side) to prevent potential trailing arm binding.

3. Close the oven door and disconnect the springs (#8) from both trailing arms (#2).
4. Loosen but do not remove the nuts (#10) that hold the cam follower assembly (#12) in position, then rotate both assemblies down to vertical orientation.
5. Remove the door:
 - F.) Remove the four 10-32 UNF Phillips screws (#15) from the door hinge bar mounting brackets (#13) on both sides of the oven.
 - G.) Pull the door away from the oven, bottom first, to slide the hinge bars (#14) out of their slots. Use caution in removing the door to avoid bending the hinge bars. If the bars bind in their slots, gently wiggle the door to free them.
 - H.) Remove the door, guiding the hooked portion of the trailing arm over the cam follower rollers (#11).

DOOR INSTALLATION

1. Rotate cam follower assembly (#12) down to vertical position to permit the trailing arms (#2) to pass over the cam follower roller (#11) in step 2.
2. Assemble the door to the oven:

A.) Slide the trailing arms through the upper slots and over the rollers.

B.) Slide the hinge bars (#14) through the lower slots. Use caution in installing the door to avoid bending the hinge bars. If the bars bind in their slots, gently wiggle the door to free them.

C.) Attach the bars to the door hinge bar mounting brackets (#13) with four 10-32 UNF screws (#15) on each side (finger tight). Apply thread-locker to screw threads prior to installation.

D.) Close the door and apply even pressure (approximately 15 to 20 pounds) to the face of the door to squarely seat the door shunt on the oven face. Continue to apply this force while tightening the four screws on each side (two people are recommended).

3. Install the spring (#8) on each side between the trailing arm and spring bracket. Any interference between any other component or wiring and the springs or trailing arms must be corrected before proceeding.

4. Install the front trailing arm guide blocks (#9):

- A.) Assemble (per side) one spacer block (#17), two guide blocks (#18), two spacers (#19), and two screws (#20) with lock-washers (#21).

NOTE: The guide block assembly may or may not contain guide block support shims (#22). Guide block assemblies should be re-installed in the location they were removed from (i.e. right guide block assembly re-installed on right side) to prevent potential trailing arm binding

B.) Install one guide block assembly over each trailing arm and tighten screws.

5. Install the interlock actuator brackets (#3):

A.) Open the door.

B.) Attach the interlock actuator brackets to the trailing arms with two 6-32 UNC screws (#4), nuts, and lock-washers on each side.

NOTE: As you face the oven front, the right-hand side bracket is mounted to the inside of the arm; the left-hand side

ELECTRICAL COMPARTMENT

bracket is mounted to the **outside** of the arm.



WARNING!!

At the first closing of the door verify that the brackets do not hit and bend on the trailing arm guides (#1 and #9). If actuator switch screws (#5) are installed on the actuator brackets, insure that the interlock switch levers (#7) do not bottom out on the switch body (#6). If they do, open the door and back the problem screw(s) out, again checking for interference with the guide as the door is closed.

DOOR ADJUSTMENT

1. Adjust cam follower assembly (#12) to tension the trailing arms (#2) to apply closing pressure:
 - A.) Close the door.
 - B.) Rotate the cam follower assembly so that the top of the trailing arm engages the rear guide (#1) 0.125 inch (+0.125 –0.031) above the top of the chamfered lead in.
 - C.) The cam follower assembly roller (#11) should be located on the ramp portion of the trailing arm with 0.020" to 0.050" gap between the top of the roller and the bottom of the trailing arm radius.
 - D.) Tighten the cam follower bracket nuts (#10).
2. Adjust the interlock switch brackets (#16) and actuator brackets (#3):
 - A.) Move the switch brackets as required to bring the switches (#6) into contact with the actuator screw(s) (#5).
 - B.) The switch actuator screw(s) should contact the switch levers (#7) at 90°±5°. Bend the actuator brackets to adjust this alignment as required.
 - C.) Again, check that the brackets or screws do not contact the trailing arm guides (#1 and #9) as the door is closed.
 - D.) With the door closed, check that the actuator screws are centered side-to-side (not overhanging the edge) on the switch levers. Apply light side-to-side finger pressure to the trailing arm to verify that the rear guide blocks keep the actuator screws in position on the switch levers.

NOTE: Refer to page 4–6 for the final door switch adjustment. This adjustment is completed after all door adjustment steps have been completed.

3. Adjust the door pivot position for best alignment by inspecting for the following conditions:
 - A.) Ideally, the microwave sealing planes (the portions of the oven face and door shunt that overlap each other) should touch, since as the gap between the sealing planes increases, it becomes more likely that the microwave leakage will increase. However, because of manufacturing tolerances, the microwave sealing planes of the door shunt and the oven flange are not perfectly flat. The best door alignment minimizes the gaps between the sealing planes both top and bottom.
 - B.) If the hinge bars (#14) have been pushed too far into their brackets (#13) the lower edge of the sealing planes will be tight and there will be an excessive gap between the sealing planes along the top edge. In this position, with the top plug removed, most of the hex head of the shunt screws will be seen.
 - C.) If the hinge bars have not been pushed far enough into their brackets the upper edge of the sealing planes will be tight and an excessive gap will occur between the sealing planes along the bottom edge. This could permit excessive microwave leakage along the bottom edge.

*NOTE: To correct B or C: Loosen the door hinge bar screws (#15) on both sides. Close the door and apply **even** pressure (approximately 15 to 20 pounds) to both sides of the door to squarely seat the door shunt on the oven face. Continue to apply this force while tightening the four screws on each side (two people are recommended).*

- D.) By design there is a 0.030" clearance between the Phillips head screws securing the plastic shunt cover and the oven flange. Verify that one or more of these screws does not contact the oven flange and increase the gap between the sealing planes. This condition may be indicated by the head of the screw(s) marking the oven flange. If this is the case, the door may be

warped or the shunt may not be flat. Adjust, repair, or replace the door so that when the door shunt is seated squarely none of the Phillips head screws contact the oven flange.

E.) Repeat adjustment steps 1 and 2 as required after completing door alignment.

4. Adjust the interlock switches per procedure beginning on page 4–6.
5. After adjusting the interlock switches the oven must be checked for microwave leakage. Refer to the service manual for instructions and acceptable limits.

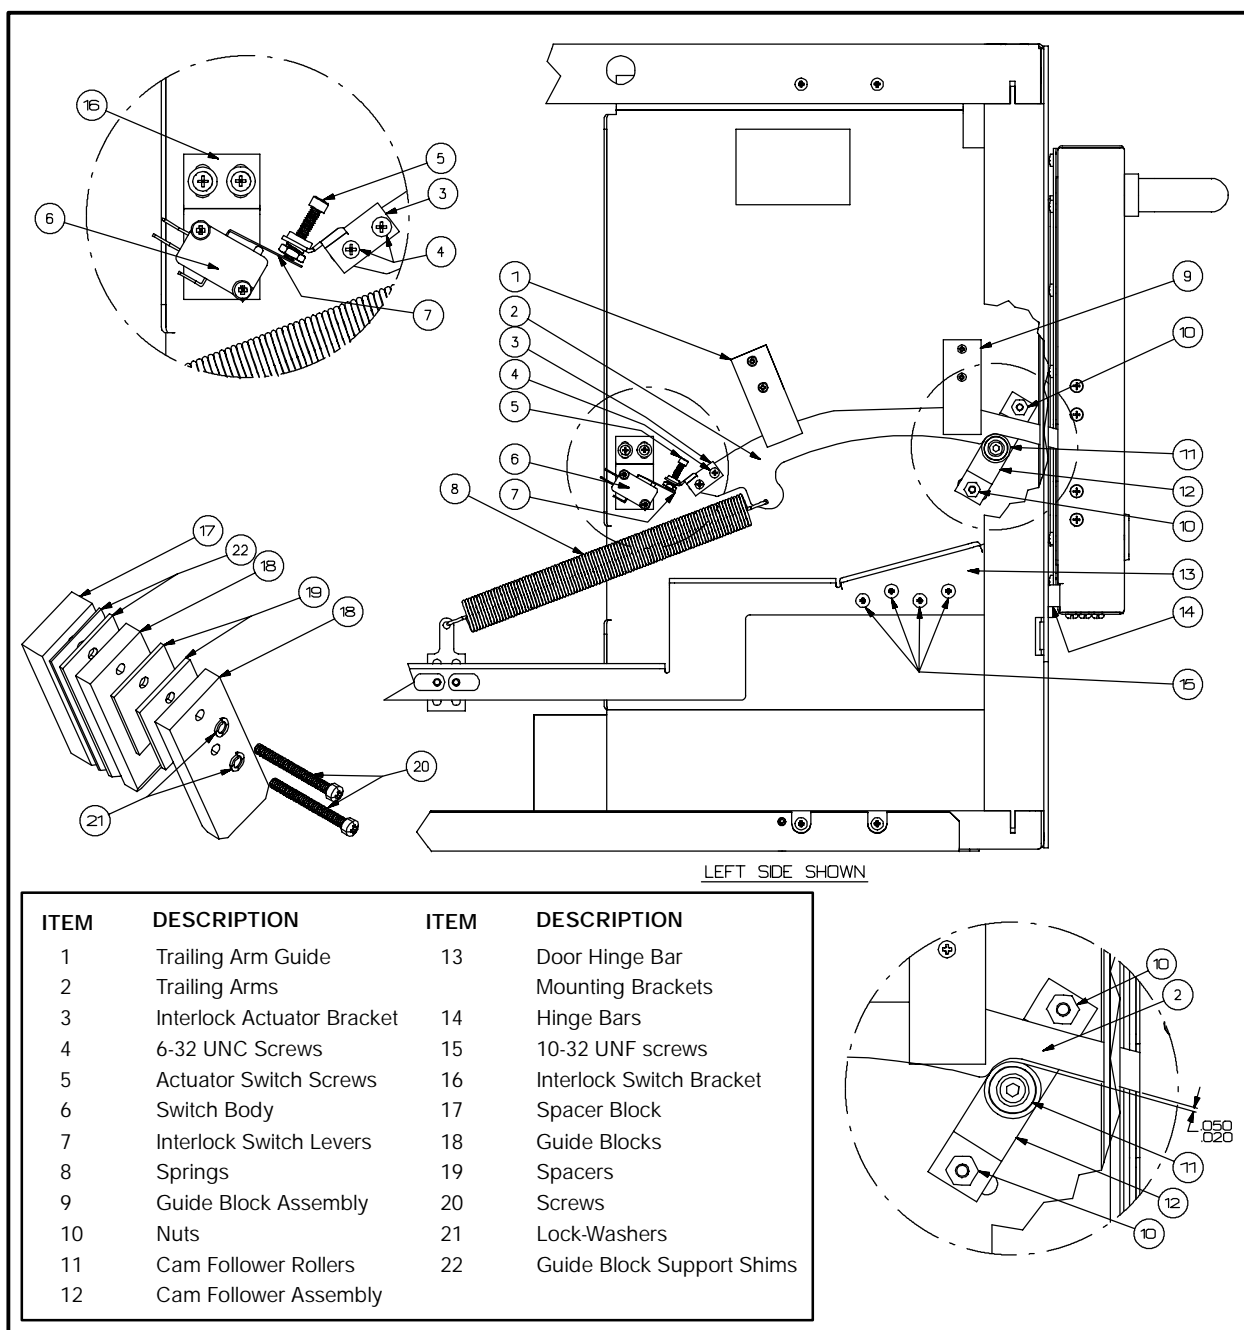


FIGURE 4



CHAPTER 5

CONVECTION CIRCUIT

CATALYTIC CONVERTER

The catalytic converter is installed in the return air duct behind the heater assembly. The installation of the catalytic converter requires a catalytic converter inner frame to properly position it in the air path. The above parts may be ordered in kit form.

Due to the nature of most foods and the physics governing the operation of the Accellis oven, grease buildup downstream of the cooking chamber is inevitable. Strict cleaning regiments can solve a majority of the problems, however, recirculation of undiluted grease saturated air is the main cause of downstream grease accumulation and any associated residual flavors.

The airborne grease tends to collect and bake onto the oven surface downstream of the cooking chamber. This grease, due to the high operating temperatures of the oven, will start to rapidly decompose into derivative organic compounds.

These decompositional derivatives generally have positive and negative effects on cooking; the shorter chain derivatives add favorable flavor characteristics to the food, while the higher order carbon chains lend unpleasant flavor characteristics, such as bitter tarry tastes.

The installation of the catalytic converter greatly effects the grease handling and any residual flavors which might build up over time. A properly operating catalytic converter causes the conversion of airborne grease into water, carbon dioxide and small amounts of nitrogen and oxygen. The catalytic converter acts as a combustion chamber for the airborne grease. The catalysts present on the filter lowers the ignition temperature of the airborne grease from approximately 700_F (371_C) to 450-550_F (232-288_C), allowing combustion to occur. The operating temperature of the oven directly determines the percentage of airborne grease conversion. A single pass of the air stream yields a 20-30% improvement in air quality.

A problem with the catalytic converter is indicated by a decrease in the effectiveness of browning (caused by a reduction in airflow) or by flavor transfer from one food group to another.

If you suspect the catalytic converter needs cleaning refer to figures on page 5 – 2 and below. These diagrams provide you with a location reference and exploded view. It is important to carefully remove the insulation and replace it neatly. The metal foil helps shield microwave emissions.

The catalytic converter can be cleaned with a non-lye based oven cleaner and rinsed. Let the catalytic converter air dry before installing.

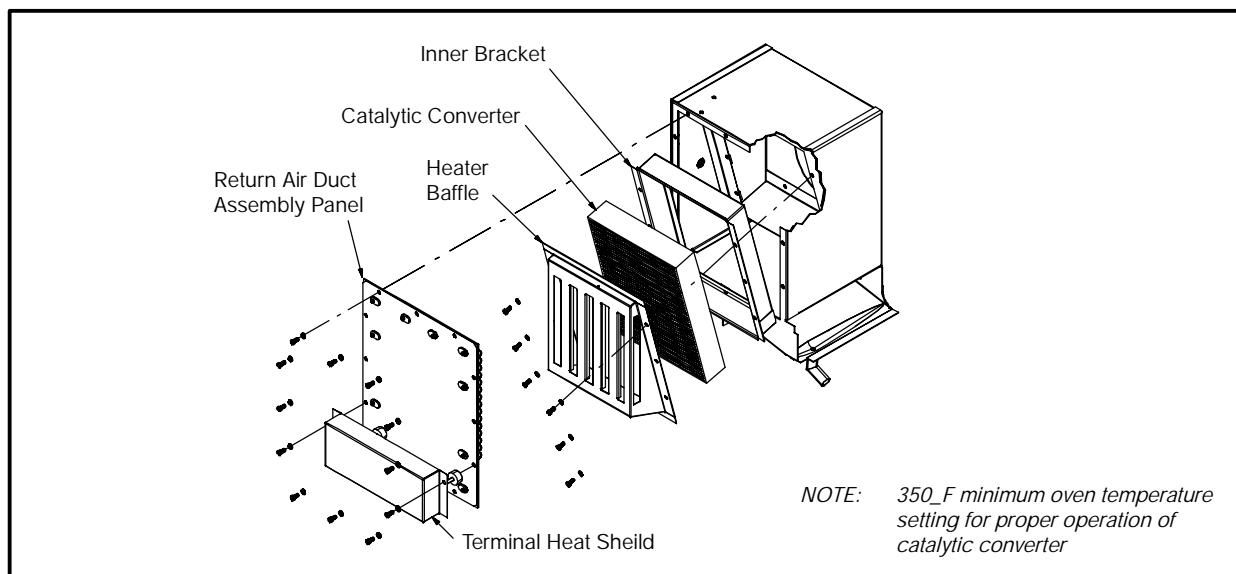


FIGURE 1

CONVECTION ELEMENT AND THERMOCOUPLES

The convection element is located in the rear back on the left side of the oven. It is controlled by one of the two solid state relays (K5), located in the top, center of the control compartment of the oven. The K5 relay coil operates on 24VDC which is supplied from the I/O control circuit assembly. The temperature is referenced by two "K" type thermocouples.

- D The HX thermocouple is in the rear of the oven by the catalytic converter.
- D The CC thermocouple is located on the top left side of the oven near the front by the door.

To test the operation of the convection circuit, run the oven in the test mode. See page 3-2 for Self Test information. The element will not energize if the convection motor is not running. You will have to troubleshoot the convection motor and its controller before continuing.

The resistance of the hot air element for 240VAC units is 12 ohms, it draws approximately 20 amps. The resistance of the hot air element for 208VAC units is 9 ohms, it draws approximately 23 amps. One of the wires to the hot air element is looped through an inductance coil transformer on the I/O

control circuit assembly. It must draw a minimum current of 7.5 amps to satisfy the circuit. If it does not, the display reads *HTR CURR LOW*. If a thermocouple is open the display reads *999*. The thermocouples are held in place with a compression fitting.

Before replacing a thermocouple, inspect the 40 pin connector where the thermocouples plug into the I/O control circuit assembly. It is possible you just have a loose connection. Try unplugging and reconnecting the 40 pin connector. When replacing a defective thermocouple, it is important to reinstall the new thermocouple so it protrudes a specific distance inside the oven cavity. See FIGURE 2.

Replace the thermocouple as follows:

1. Make a note where the old thermocouple exited the compression fitting.
2. Measure the distance from the exit point to the end of the thermocouple.
3. Mark this distance on your new thermocouple with a marker or a piece of tape.
4. Install the new thermocouple.

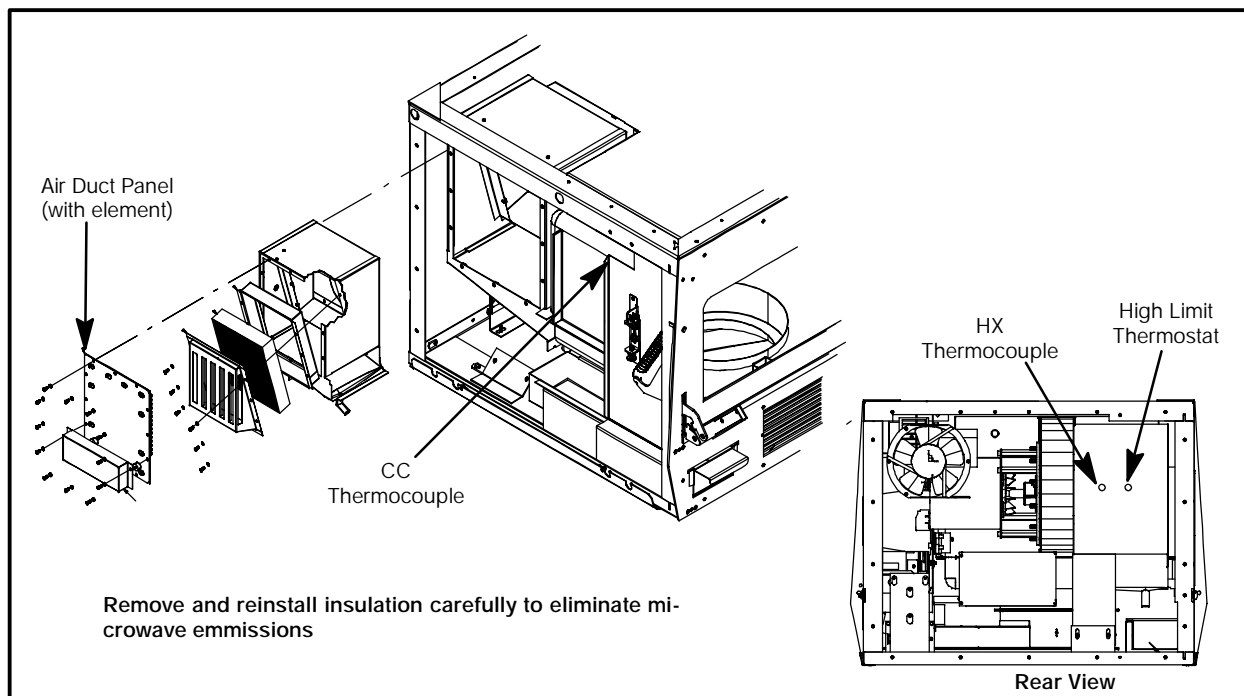


FIGURE 2

ACCELLIS C70

THERMOELECTRIC VOLTAGE IN MILLIVOLTS – TYPE K THERMOCOUPLE

_F	_C	Reading	+5_F	_F	_C	Reading	+5_F
70	21	0.843	0.955	310	154	6.316	6.428
80	27	1.068	1.181	320	160	6.539	6.65
90	32	1.294	1.407	330	166	6.761	6.873
100	38	1.52	1.634	340	171	6.984	7.094
110	43	1.748	1.862	350	177	7.205	7.316
120	49	1.977	2.091	360	182	7.427	7.538
130	54	2.206	2.321	370	188	7.649	7.76
140	60	2.436	2.551	380	193	7.87	7.981
150	66	2.666	2.781	390	199	8.092	8.203
160	71	2.896	3.012	400	204	8.314	8.425
170	77	3.127	3.243	410	210	8.537	8.648
180	82	3.358	3.473	420	216	8.759	8.871
190	88	3.589	3.704	430	221	8.983	9.094
200	93	3.819	3.934	440	227	9.206	9.318
210	99	4.049	4.164	450	232	9.43	9.543
220	104	4.279	4.394	460	238	9.655	9.768
230	110	4.508	4.622	470	243	9.88	9.993
240	116	4.737	4.851	480	249	10.106	10.219
250	121	4.964	5.078	490	254	10.333	10.446
260	127	5.192	5.305	500	260	10.56	10.673
270	132	5.418	5.531	510	266	10.787	10.901
280	138	5.634	5.756	520	271	11.015	11.129
290	143	5.868	5.98	530	277	11.243	11.358
300	149	6.092	6.204	540	282	11.472	11.587

TABLE 1

CONVECTION (BLOWER) MOTOR OPERATION

OVERVIEW

The convection (blower) motor is a variable speed convection motor which operates from zero rpms up to 7000 rpms. The blower motor speed is controlled by a SP200 AC drive control. This controller converts the 200V to 240V single phase input to a variable 3 phase output (230/460VAC). The speed is controlled by low voltage inputs (0 to 10 VDC) which are applied to pin #7 on the SP200 AC drive control from the control circuit card. If the convection (blower) motor is replaced, carefully remove and reinstall the insulation to eliminate microwave emissions. You must remove the entire motor assembly with the blower wheel to perform any work on either item.

TROUBLESHOOTING

To run the convection (blower) motor independently, you will need to operate the Accellis in the COOL DOWN mode.

To operate in COOL DOWN mode:

1. Turn the Accellis on.

2. Allow the unit to complete the start-up self diagnostic test.

3. Press the COOL DOWN button.

If the convection (blower) motor is not running:

1. Verify the plug connector on the top two pins on terminal P3, on the control circuit board is in place. See page 6–6.
2. Inspect the SP200 AC drive motor control. See FIGURE 3. The SP200 AC drive motor has a single LED.

If the LED is green, the controller is operating properly and has the correct inputs.

If the LED is flashing red, count the number of times the LED flashes before it repeats its flashing sequence. Refer to the fault code chart on page 5–6.

The operating parameters of the SP200 AC drive control are preprogrammed into the control. Refer to FIGURE 3 to verify voltages and wiring.

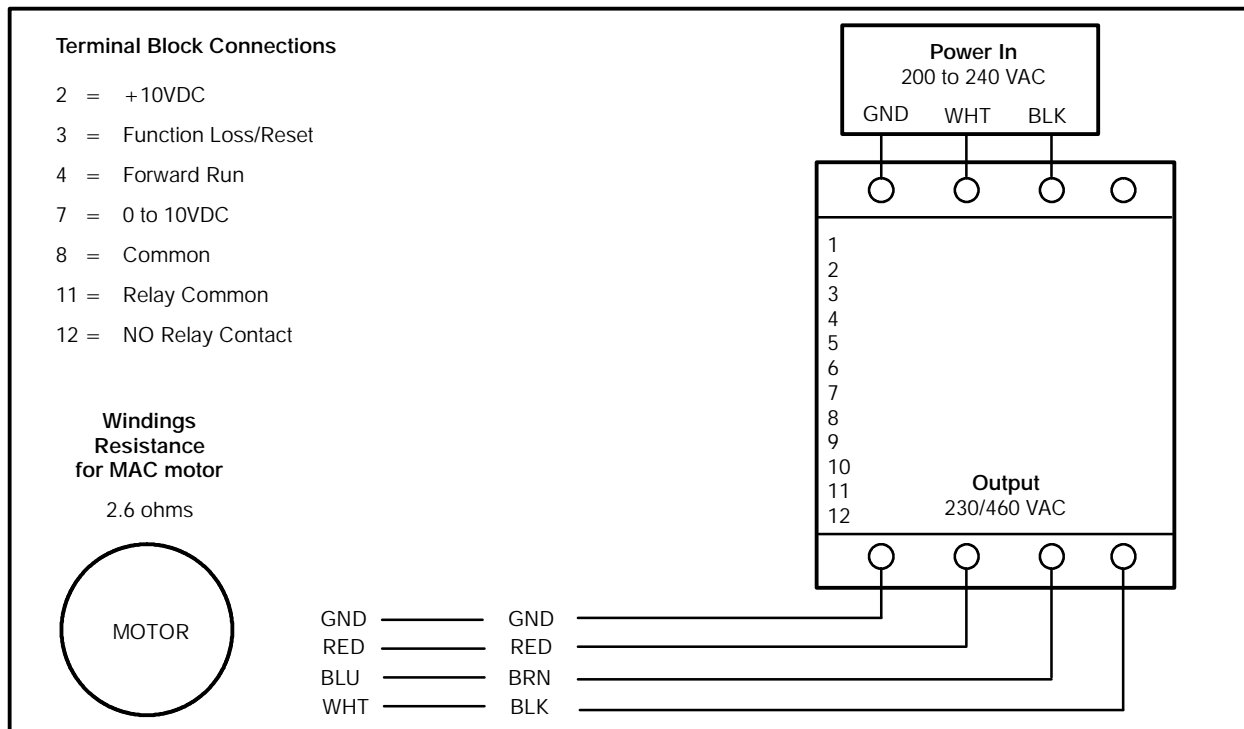


FIGURE 3

BLOWER MOTOR CONTROLLER FAULT CODES & TROUBLESHOOTING

NOTE: If no fault condition exists, the LED will be green. If a fault condition exists, the LED will flash red when a local keypad is not connected. All faults can be reset by cycling the reset control input, pressing the stop key, or cycling power, except as noted in the Corrective Action column below.

# of LED Flashes	Fault Description	Fault Cause	Corrective Action
2	Control Input	<ul style="list-style-type: none"> Illegal control input sequence 	<ul style="list-style-type: none"> 3-wire: Verify Start and Jog inputs are not both ON 2-wire: Verify that only one input (Forward, Reverse, or Jog) is ON
2	Function Loss	<ul style="list-style-type: none"> Start attempt while STOP (function loss) input is off 	<ul style="list-style-type: none"> Verify STOP (function loss) input is ON before attempting to start drive.
3	Under Voltage	<ul style="list-style-type: none"> Low input line Temporary loss of input line 	<ul style="list-style-type: none"> Check input line to verify voltage is within operating specifications
4	Over Voltage	<ul style="list-style-type: none"> High input line Decel time too fast Overhauling load 	<ul style="list-style-type: none"> Check input line to verify voltage is within operating specifications Increase decel time
5	Drive Overload	<ul style="list-style-type: none"> Excessive driven load 	<ul style="list-style-type: none"> Reduce the load
5	Motor Overload	<ul style="list-style-type: none"> Excessive driven load 	<ul style="list-style-type: none"> Verify P-02 is set correctly Reduce the load
6	Over Temperature	<ul style="list-style-type: none"> Operating environment is too hot Fan is blocked or not operating Excessive driven load 	<ul style="list-style-type: none"> Verify the ambient temperature is <50_ Verify clearance above/below drive Check for fan obstruction. Replace if necessary Reduce the carrier frequency (P-64) Reduce the load
7	Over Current (300%)	<ul style="list-style-type: none"> Shaft rotation blocked Excessive driven load Output wiring is incorrect or shorted 	<ul style="list-style-type: none"> Check for obstructions to shaft rotation or reduce excessive load Increase accel/decel time Verify output wiring is correct
8	Bad Keypad Connection	<ul style="list-style-type: none"> Bad connection from keypad to drive 	<ul style="list-style-type: none"> Verify keypad is properly connected to drive
9	Negative Slope	<ul style="list-style-type: none"> Conflicting parameter values 	<ul style="list-style-type: none"> Adjust values of parameters P-50 through P-54

CONVECTION CIRCUIT

# of LED Flashes	Fault Description	Fault Cause	Corrective Action
10	Ground Short	▷ Phase U	▷ Verify output wiring is correct
10		▷ Phase V	▷ Verify output phase is not grounded
10		▷ Phase W	▷ Verify motor is not damaged
10	Phase to Phase Short	▷ Phase U – V	▷ Verify output wiring is correct
10		▷ Phase U – W	▷ Verify motor is not damaged
10		▷ Phase V – W	
11	Checksum Failure	▷ Parameter value out of range	▷ Load default parameter values (P-60=1), then cycle power. If fault persists, replace drive.
12	Microprocessor Fault	▷ Internal processor error	▷ Cycle power. If fault persists, replace drive.

TABLE 2

This page intentionally left blank.

CHAPTER 6

MICROWAVE CIRCUIT

MEASURING FOR MICROWAVE RADIATION LEAKAGE

The following RF emissions test must be performed every time a service call is done on an Accellis oven. Report your findings on the work order.

NOTE: Your micro survey meter should be calibrated annually.

The following areas must be measured when performing the RF test.

- D Cook Door
- D Filter Door (if applicable)
- D At any place on the outside of the oven (with all covers in place).

Check for microwave leakage as follows:

1. Place a load in the oven for testing. The load must meet the following specifications:
 - A.) Load must be 275 ml +/- 15 ml of water.
 - B.) The water should be 77_F (25_C) +/- .5.
 - C.) The container must be a low form, 600 ml beaker with an inside diameter of approximately 3.35" (8.5cm) and made of an electrically non-conductive material such as glass or plastic.
2. Enter the diagnostic mode. Refer to page 3-2 for instructions for accessing diagnostic mode.
3. Position the Blodgett door leak test tool on the door handle. See FIGURE 1 for correct positioning of the the leak test tool.
4. Tighten the top screw to slowly open the door. Stop when the control panel indicates that any door switch has disengaged.
5. Loosen the top screw slowly until the control panel indicates that the open door switch has re-engaged.
6. Test for microwave leakage as follows:

This test must be done in conformance with 21 CFR, Ch1, Part 1030-Performance Standard for Microwave and Radio Frequency Emitting Product. Part 1030.10 Microwave Ovens. (C) Requirements - (1) Power Density Limit. **"The equivalent plane wave power density existing in the proximity of the external oven surface shall not exceed 1 milliwatt per square centimeter at any point 5 cm or more from**

the external surface of the oven, measured prior to acquisition by purchaser, and thereafter, 5 milliwatt per square centimeter at any point."

- A.) The tip of the probe should be touching the oven surface being measured with the probe handle perpendicular to the surface.
- B.) Move the probe counterclockwise around the perimeter of the door starting from the upper right corner at a speed of less than 0.5" per second. Be sure to probe entire door perimeter, returning to the upper right corner.

7. Exit the diagnostic mode.
8. Repeat STEPS 1 and 6 with the cook door closed.



WARNING!!

If the unit fails the radiation test, the oven must be taken out of service immediately until the defect is corrected. In addition, the Code of Federal Regulations 21 Subpart C, 1002.20 requires that leakage readings of over 5 mW/cm² MUST be reported to the manufacturer. If further information is required for this test please call Accellis Service at 1-888-992-6624.

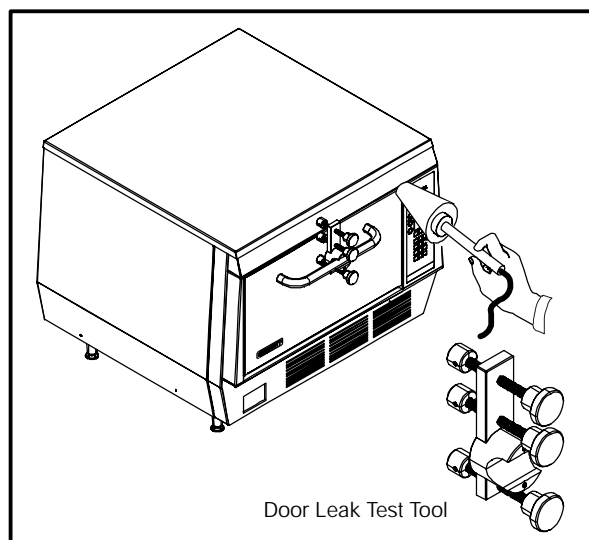


FIGURE 1

MAGNETRON CIRCUIT

Overview of a microwave circuit

All microwave circuits have a magnetron and a voltage doubler circuit. A voltage doubler for a magnetron circuit consists of a special step-up transformer, a capacitor, and a diode. In the C70 a separate

transformer is used to preheat the filament for the magnetron for better operation.

NOTE: If the voltage exceeds 500VDC, an X-ray emission test must be performed. Refer to UL923, paragraph 51.1.2, page 93.

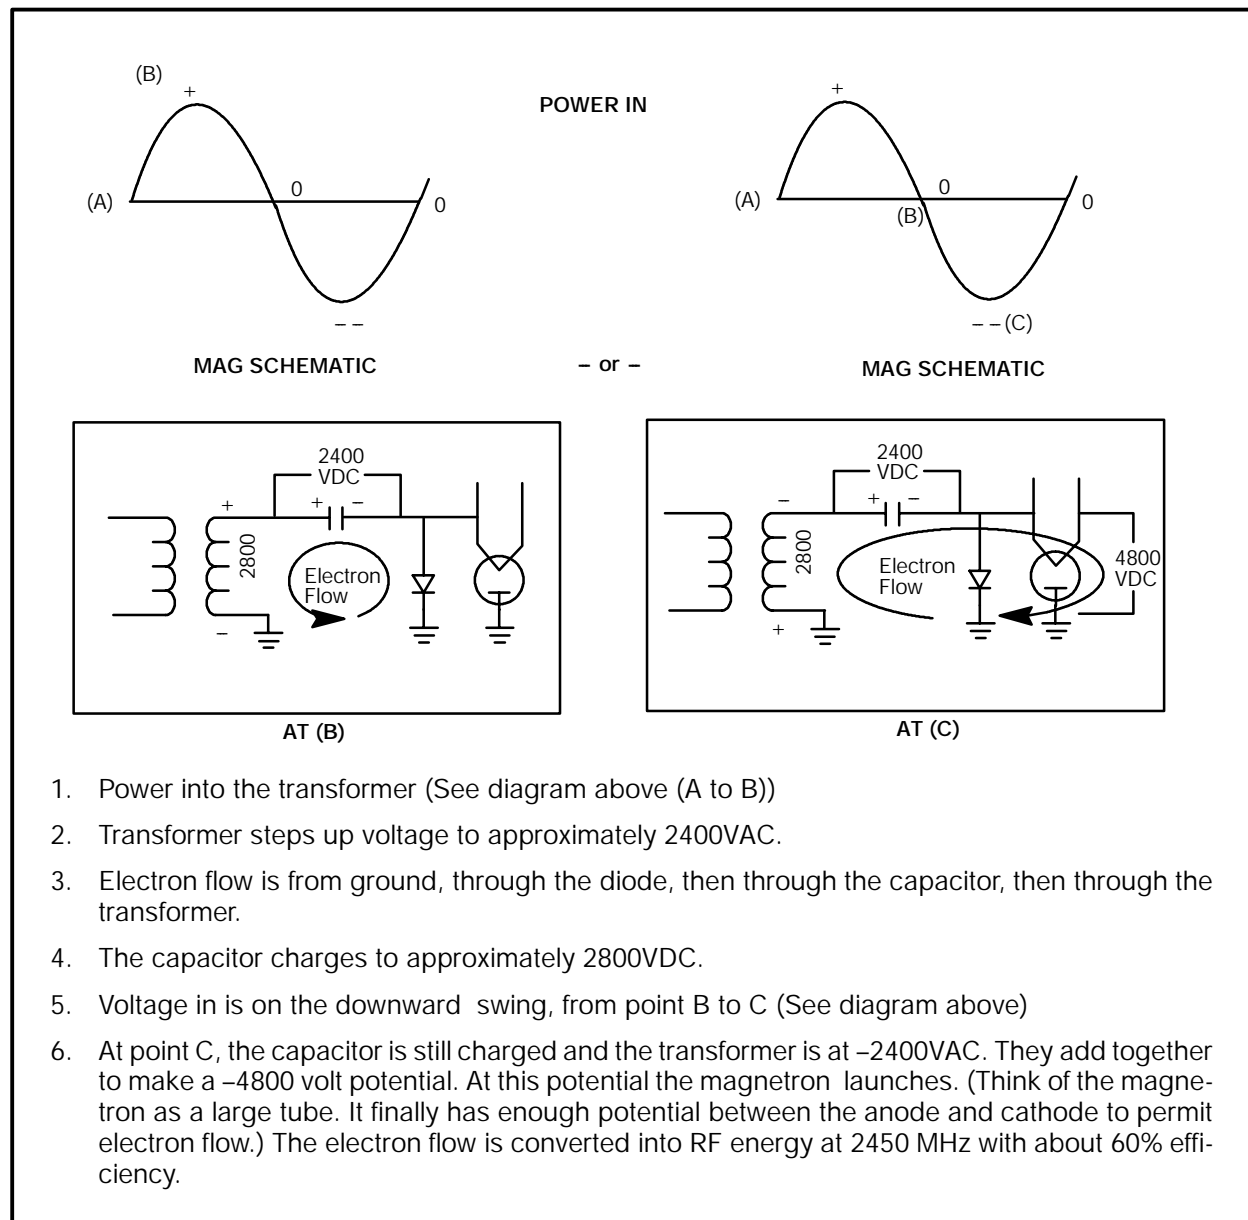


FIGURE 2

MAGNETRON TESTING



WARNING!!

The microwave circuit cannot be worked on with the unit on. The unit must be disconnected from the power source. Failure to do so could result in injury or death.



WARNING!!

The HV Capacitor must be discharged before proceeding by using a pair of insulated pliers to unhook the wire on the positive side of the diode and shorting the terminal to ground.

Checking a Magnetron for Open or Shorted Filaments:

1. Disconnect the AC power source and discharge the High Voltage Capacitors.
2. Isolate the magnetron from the circuit by removing the wires from the F and FA terminals.
3. An ohmmeter connected between the filament terminals (F, FA) should indicate a reading of less than 1 Ohm.
4. A continuity check between either filament terminal and the magnetron chassis should indicate an infinite resistance (open).

MAGNETRON REMOVAL AND REPLACEMENT

1. Remove door hinge bar support angle.
2. Remove magnetron cooling fan.
3. Unplug and remove magnetron.
4. Install new magnetron.
5. Check the oven for microwave leakage. Refer to page 6-1 for instructions.

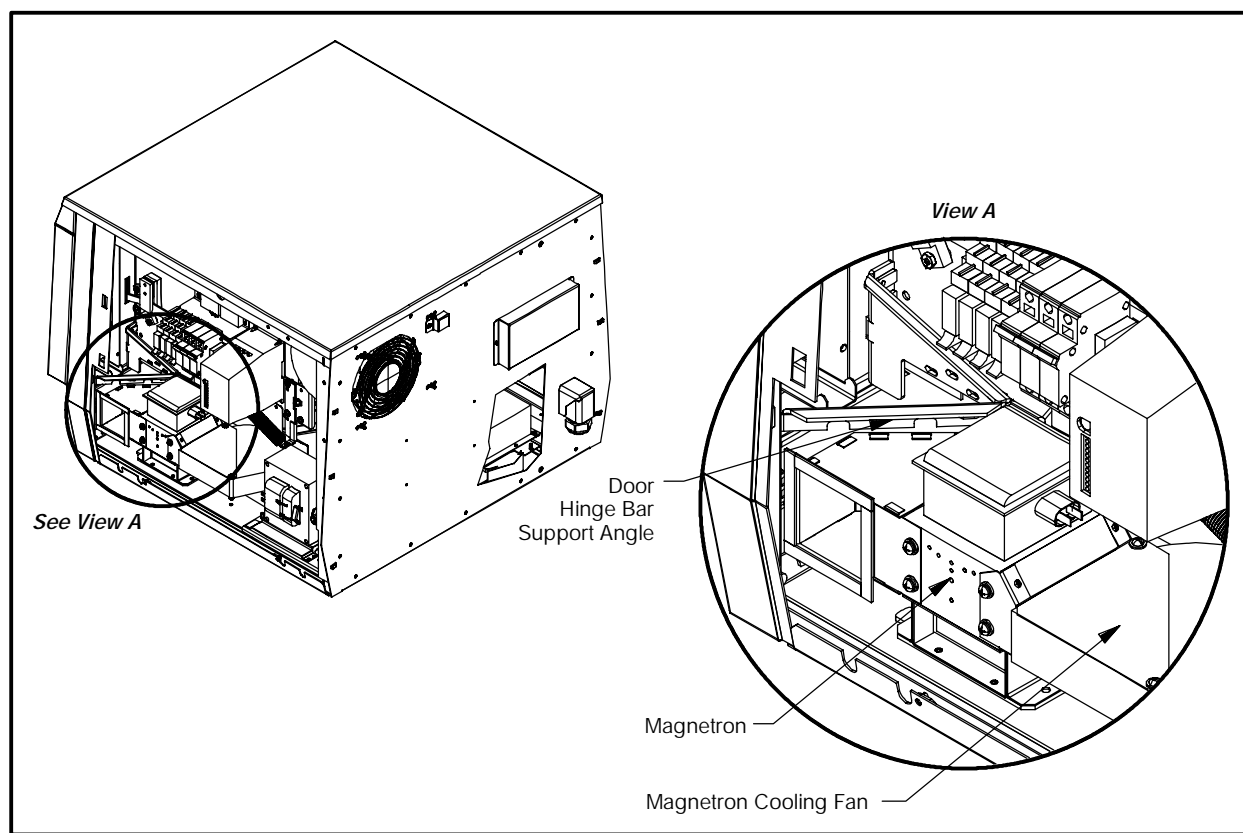


FIGURE 3

COMPONENT TESTING



WARNING!!

The microwave circuit cannot be serviced with the unit on. The unit must be disconnected from the power source. Failure to do so could result in injury or death.



WARNING!!

The HV Capacitor must be discharged before proceeding by using a pair of insulated pliers to unhook the wire on the positive side of the diode and shorting the terminal to ground.

TRANSFORMER TESTING

1. Disconnect the power source and discharge the capacitor.
2. Isolate the transformer from the circuit. (Wires are labeled but remember where they go)
3. Check impedance of the primary and secondary windings. See TABLE 1.
4. Filament winding should read less than 0.1 ohms.
5. Reconnect wires.

TRANSFORMER SPECIFICATIONS			
Main Transformer (Anode)		Filament Transformer	
Primary DCR	0.58 Ohm.	Primary DCR	(1–2) 23.2 Ohm (1–3) 27.8 Ohm
Secondary DCR:	(5–6) 46.39 Ohm (5–7) 54.00 Ohm	Secondary DCR:	(4–5) .020 Ohm
Input Voltage :	208–240 VAC, 50/60 HZ	Input Voltage :	208/240 + 10%, 50/60 HZ
Input Current:	9.0 Amps RMS	Input Current:	0.42 Amps @ 208 VAC 0.35 Amps @ 240 VAC
Anode Voltage:	2400 VDC Peak @ 0.415 Amps	Filament Voltage:	4.6 VAC @ 14 Amps

TABLE 1

DIODE TESTING



WARNING!!

DO NOT attempt to measure HV directly.

1. Isolate diode from circuit.
2. Connect the meter leads to the diode terminals.
3. Resistance readings (open) should be indicated in the reverse direction.
4. Resistance readings in the forward direction may be indeterminate.
5. If there is continuity in both directions (shorted diode).

CAPACITOR TESTING



WARNING!!

Discharge the capacitor after disconnecting the power and prior to servicing. Never assume the internal discharge resistor has completely discharged the capacitor.

1. Disconnect the oven from the power source.
2. Isolate the capacitor from the circuit.
3. Fully discharge the capacitor.
4. Connect the ohmmeter between the capacitor terminals. The meter should indicate a low impedance and then slowly return to infinite resistance.
5. Reverse the ohmmeter leads. Repeat step 4.
6. Check each terminal to case. Infinite resistance (open) should be indicated.

TRANSFORMER SPECIFICATIONS

	Anode Transformers	Filament Transformers
Primary DCR	0.58 Ohm	(1-2) 23.2 Ohm (1-3) 27.8 Ohm
Secondary DCR	(5-6) 46.39 Ohm (5-7) 54.00 Ohm	(4-5) .020 Ohm
Input Voltage	208-240 VAC, 50/60 Hz	208/240 10% 50/60 Hz
Input Current	9.0 Amps RMS	0.42 Amps @ 208 VAC 0.35 Amps @ 240 VAC
Anode Voltage	4500 VDC Peak @ 0.415 Amps	4.6 VAC @ 14 Amps

**WARNING!!**

Use extreme caution when taking any current readings. Failure to do so can result in death or serious injury.

**WARNING!!**

When replacing the anode transformer, remove the varnish around the mounting holes to insure proper grounding.

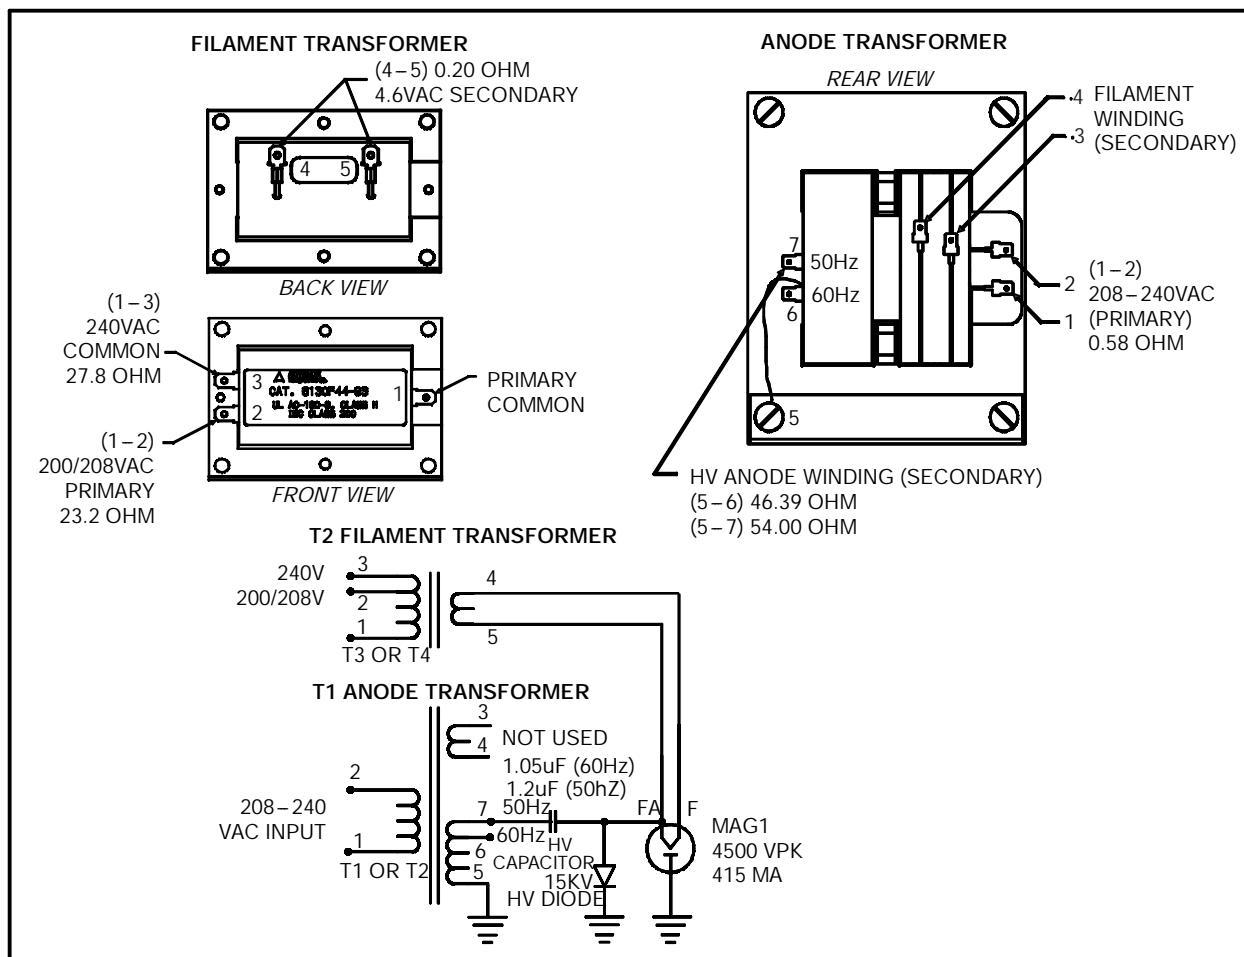


FIGURE 4

CONTROL CIRCUIT BOARD

To Initialize a New Board

1. Press Back & Enter simultaneously until prompted "ENTER PIN - - - -".
2. Type ERAS. Then press ENTER.
3. Type the letter E. Then press ENTER.

NOTE: For U.S.A models complete step (4)

4. Enter the PIN#XXX. To complete procedure.

NOTE: Latest code will default the oven to the registration state and the serial number will be zeroed. This will enable a service agent to get into the oven using 000 as a reg code. Be sure to enter the serial number into the oven after registration is disabled per the above instructions.

Magnetron Level Potentiometer Adjustment

NOTE: This procedure must be done after replacement of the controller board.

1. Place the oven in the test function mode as follows:
 - A.) From the standby mode, press and hold both ARROW keys simultaneously for three seconds.

- B.) The display reads:

ENTER ACCESS CODE

- C.) Use the NUMERIC keypad to enter the following access code:

8317

- D.) Press the ENTER key.

2. Place a microwave dish with approximately 9.3 oz. (275 ml) of cool water in the oven.
3. Press and hold the MGTRON key. Observe the reading on the keypad display. Adjust the amplifier gain on R24 on I/O controller board. Refer to FIGURE 5. Turn the screw clockwise to reduce the output until the maximum reading is 120 ± 20 .

NOTE: The displayed reading varies greatly due to the stirrer blade motion. Observe the reading for at least 10 seconds.

4. Press and hold the MGTRON key. Observe the oven keypad display. Verify the number displayed varies corresponding to stir blade motion.
5. The difference between the high and low peak values must be greater than 20.

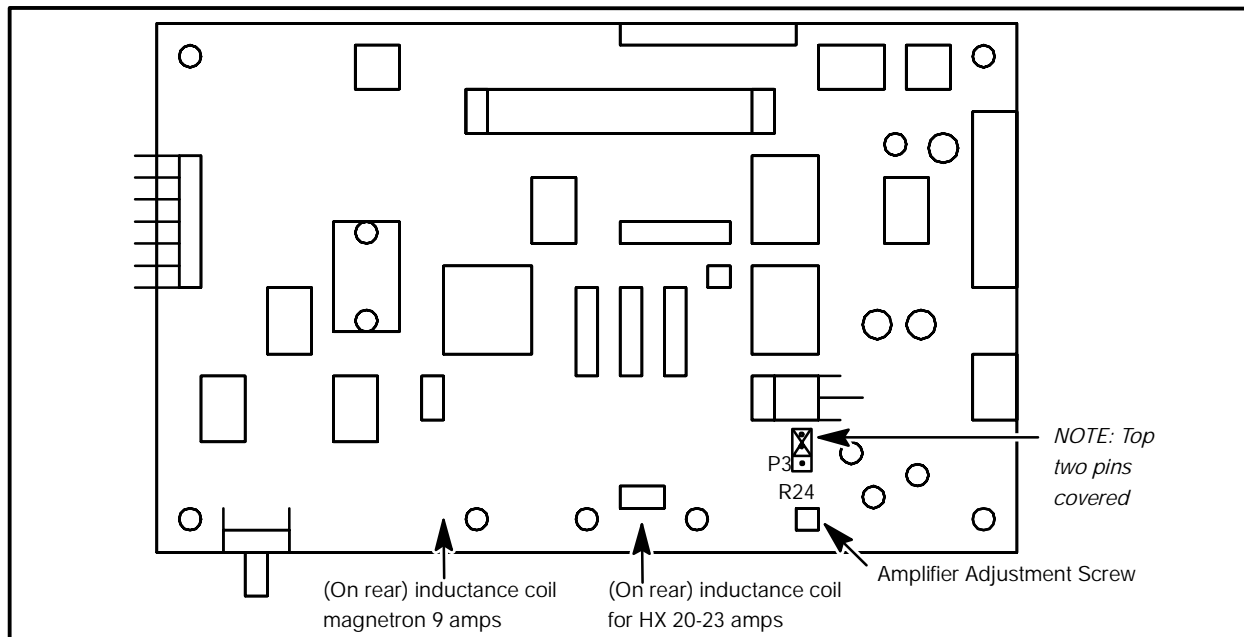


FIGURE 5

ACCELLIS C70

NOTES: