

## INSTALL INSTRUCTIONS C-TCB-7-IMP TELESCOPING COMPUTER BASE CHEVROLET IMPALA SPECIFIC C-SERIES-IMP CONSOLIDATOR® CONSOLE MOUNT (Example: C-1400-IMP)

### **TOOLS REQUIRED:**

3/16" Allen wrench

Open-end wrench set

### HARDWARE & COMPONENETS: <u>QTY</u> <u>DESCRIPTION</u>


- 1 Pole support assembly
- 1 Telescoping pole assembly
- 1 Spacer bracket
- 4 <sup>1</sup>/<sub>4</sub>-20 Hex nut
- 4 <sup>1</sup>/<sub>4</sub>"Flat washer
- $2 \frac{1}{4-20-x} \frac{1}{2}$  Hex head bolt
- $2 \frac{1}{4}-20 \times 1^{\circ}$  Hex head bolt  $\frac{1}{4}-20 \times 1^{\circ}$  Hex head bolt

# PART #

CM93071-7 CM93072-1 CM93381 GSM30005 GSM31005 GSM33000 GSM33002

### Always!

- > Read all instructions before installing any Havis-Shields Equipment Corp products.
- > Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- > Use hardware provided with install kit

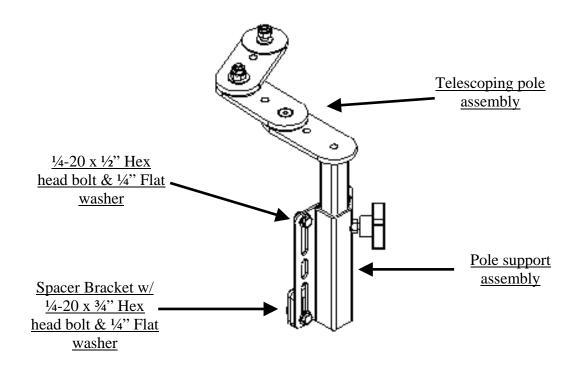

### **SUB ASSEMBLY:**

- 1. Confirm receipt of all hardware and components.
- **2.** Install Chevrolet Impala Specific C-Series-IMP Consolidator® into vehicle using hardware and instructions provided.
- **3.** Determine location on console to mount C-TCB-7-IMP and be sure to leave room on passenger side of console to mount.

### **INSTALLATION:**

- 1. Mount C-TCB-7-IMP on side of Chevrolet Impala Specific C-Series-IMP console.
  - Position C-TCB-7-IMP on Passenger side of console.
  - Attach to lower rail of console first.
  - Position spacer bracket between C-TCB-7-IMP and C-Series-IMP console.
  - Align nuts in rails to slotted holes on pole support assembly.
  - Attach pole support assembly and spacer bracket to console using <sup>1</sup>/<sub>4</sub>-20 x <sup>3</sup>/<sub>4</sub>" Hex head bolts, washers and nuts with in the console rail.
  - Now attach top of C-TCB-7-IMP using only <sup>1</sup>/<sub>4</sub>-20 x <sup>1</sup>/<sub>2</sub>" Hex head bolts, washers and nuts with in console rail.

*Note:* Rails of console have (4) <sup>1</sup>/<sub>4</sub>-20 hex nuts on both top and bottom. (Extra nuts are provided if needed)

• Attach optional C-3090 Computer mounting platform to Telescoping pole assembly.

