

# Savi® W730-M

Sistema de audífono  
inalámbrico de dispositivo  
múltiple

OPTIMIZED FOR  
Microsoft® Lync™


## GUÍA DE INICIO RÁPIDO



GUÍA DE VIDEO

<http://docs.plantronics.com/savi-700>

plantronics®

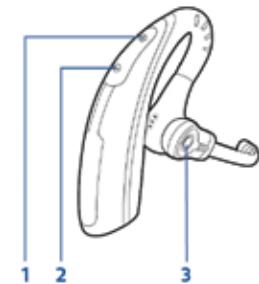

### 1 Botón flash/aumento de volumen

Aumentar el volumen Presione brevemente +

Flash Durante una llamada, presione por 1.5 segundos más volumen (+) o menos volumen (-) para poner la llamada en espera y contestar otra llamada.

### 2 Botón silencio/bajar el volumen

Bajar el volumen Presione brevemente -

Silencio Presione bajar el volumen (-) durante 1.5 segundos

### 3 Botón de control de llamadas

Contestar/terminar una llamada Presione brevemente

**AVISOS** Por su seguridad, no use el audífono a un volumen alto durante períodos prolongados. Esto puede causar pérdida de audición. Use siempre un volumen moderado. Para obtener más información sobre los audífonos y la audición, visite [plantronics.com/healthandsafety](http://plantronics.com/healthandsafety).

Antes de instalar o utilizar el producto, consulte las instrucciones de seguridad (aparte) para obtener información importante acerca de la seguridad del producto.

Savi W730 tiene una base WO2 y un audífono WH210.


## 1 Audífono

Personalice y cargue.


- Conecte la base de carga a la base.



- Enchufe un extremo del suministro eléctrico en el conector hembra en la parte trasera de la base y el otro extremo en la salida del tomacorriente que está funcionando.

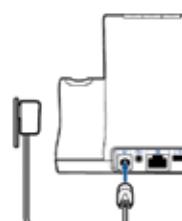

- Para cargar, coloque el audífono en la base durante 20 minutos como mínimo.

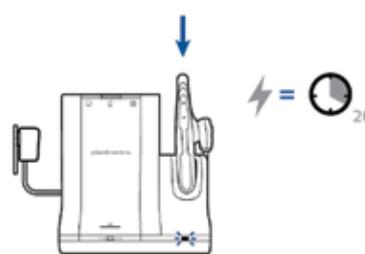

**NOTA** Este producto tiene una batería no reemplazable. Comuníquese con Plantronics para obtener información acerca del reemplazo.

## 2 Teléfono de escritorio

Conecte y llame.

- Elija la configuración del teléfono **A, B, o C** y conecte los cables.

**A Teléfono de escritorio (estándar)**




**B Teléfono de escritorio + dispositivo para descolgar el teléfono HL10 (se vende por separado)**



**C Teléfono de escritorio + cable EHS (se vende por separado)**




- Al usar el audífono, presione brevemente el botón de la base del teléfono de escritorio.

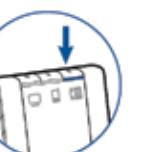

**NOTA** Si no tiene un control remoto para llamadas a través de un dispositivo para descolgar el teléfono (HL10) o un cable (EHS), quite manualmente el auricular del teléfono de escritorio antes de cada llamada.

- Si no escucha el tono de marcado, abra el panel del costado y ajuste el modificador de configuración media (A-G) hasta escucharlo. El ajuste preconfigurado **A** funciona para la mayoría de los teléfonos de escritorio.

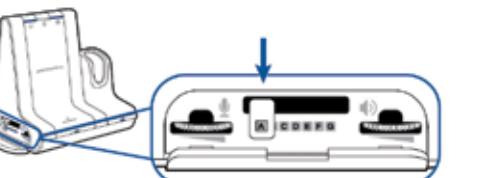

- Marque llamada de prueba desde el teléfono de escritorio.

- Para terminar la llamada, presione el botón de control de llamadas del audífono.



## 3 Móvil

Conecte y llame.

- Presione hacia abajo y mantenga presionado el botón de emparejamiento de Bluetooth (durante 4 segundos) en la base Savi hasta que el indicador LED parpadee en rojo y azul.




- Coloque el teléfono móvil Bluetooth en el modo búsqueda. Seleccione **SAVI 7xx** del listado de dispositivos que se encontraron.



- Si lo solicita el teléfono móvil, escriba **0000** como código de acceso. El indicador LED de Bluetooth en la base se volverá de color azul fuerte una vez que la base tenga una conexión activa con el teléfono móvil.




- Durante el uso del audífono, presione brevemente el botón de la base del móvil.

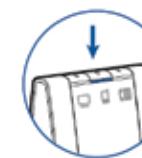

- Marque llamada de prueba desde el teléfono móvil.


- Para terminar la llamada, presione el botón de control de llamadas del audífono.

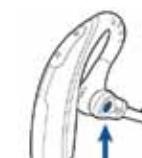


## 4 PC

Conecte y llame.

- Conecte el cable USB.

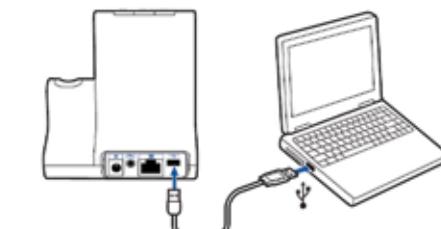

- Al usar el audífono, presione brevemente el botón de la base de la computadora.

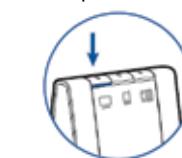

- Marque llamada de prueba desde el softphone de la computadora.

- Para terminar la llamada, presione el botón de control de llamadas del audífono.



**Advertencia:**

"La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada."

**Declaration of Conformity**

We Plantronics, 345 Encinal Street, Santa Cruz, California, 95060 USA (800) 544-4660, declare under our sole responsibility that the product WO2 complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Registration Information - Part 68**

This equipment complies with Part 68 of the FCC rules and the requirements adopted by ACTA. On the exterior of this equipment is a label that contains a product identifier in the format US:AAAEC#TXXX. If requested, this information must be provided to your telephone company.

A plug and jack used to connect this equipment to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, contact your local telephone company. For products approved after August 8, 2001, the REN for this product is part of the product identifier that has the format US:AAAEC#TXXX. The digits represented by ## are the REN without the decimal point. (For example, 03 represents a REN of 0.3.) For earlier producers, the REN is separately shown on the label.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary disconnection of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this unit, for repair or warranty information, please contact customer service at (800) 544-4660. If the equipment is causing harm to the network, the telephone company may request that you disconnect the equipment until the problem is resolved.

**DO NOT DISASSEMBLE THIS EQUIPMENT:** It does not contain any user-serviceable components. We recommend the installation of an AC surge arrester in the AC outlet to which this equipment is connected. Telephone companies report that electrical surges, typically lightning transients, are very destructive to customer terminal equipment connected to AC power sources.

**Exposure to RF Radiation**

The internal wireless radio operates within the guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community. Independent studies have shown that the internal wireless radio is safe for use by consumers. Visit [plantronics.com](http://plantronics.com) for more information.

In order to comply with FCC and IC RF Exposure requirements, the base must be installed and operated such that a minimum separation distance of 20 cm is maintained between the base and all persons during normal operation.

**NOTE:** Modifications not expressly approved by Plantronics, Inc. could void the user's authority to operate the equipment.

**Industry Canada Regulatory Information**

This product meets the applicable Industry Canada technical specifications/Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

This Class B digital apparatus complies with Canadian ICES-003. /Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**NOM-121-SCT-2009**

Advertencia: La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada."

**Avoid touching the contacts at the rear of the unit unnecessarily.** If operation is interrupted by a static event, power-cycle the product to restore normal functions.

## ¿NECESITA MÁS AYUDA?

**Asistencia para productos**  
[plantronics.com/support](http://plantronics.com/support)

**Guía del usuario en línea**  
<http://docs.plantronics.com/savi-700>

**Plantronics, Inc.**  
345 Encinal  
Santa Cruz, CA 95060  
United States

**Plantronics BV**  
South Point Building C  
Scorpius 140  
2132 LR Hoofddorp  
Netherlands

© 2011 Plantronics, Inc. All rights reserved. Plantronics, the logo design, Savi, and Sound Innovation are trademarks or registered trademarks of Plantronics, Inc. All other trademarks are the property of their respective owners. Microsoft, Internet Explorer, Windows, Windows Vista, and Windows XP are trademarks or registered trademarks of Microsoft Corporation in the U.S. and other countries. Pentium is a trademark of Intel Corporation in the U.S. and other countries. The Bluetooth trademark is owned by Bluetooth SIG, Inc. and any use of the mark by Plantronics, Inc. is under license.

Patents U.S. 7,633,963; 5,210,791; D539,266; D58903; D599331; D603372; China ZL 200630123311.3; CN301013095D; EM 000543798-0001; 000873823-0002; Taiwan D117516; D127399; Patents Pending 86108-05 (04.11)

