

# MODEL H0758 3-SHELF CART INSTRUCTIONS

The Model H0758 is a contemporary looking, low height cart that has no-slip shelves and a non-marring "soft" edge.

#### **Specifications**

Weight	43 lbs
Load Capacity	270 lbs
Dimensions	181/2"W x 29"L x 35"H
Top Shelf Height	241/21
Distance Between Shelves	s9 <sup>t</sup>

#### **Inventory** (Figure 1)

_	- · · ·	
Α.	Bottom Shelf	. 1
В.	Center Shelf	. 1
C.	Top Shelf	. 1
D.	Handle	. 1
E.	Columns	8
F.	Support Rods 20" Long	2
G.	Support Rods 20%" Long	2
H.	Flat Washers 10mm	4
I.	Fixed Casters	2
J.	Swivel Casters	2

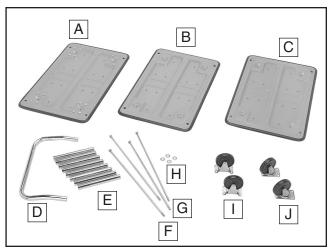



Figure 1. H0758 inventory.

#### **Recommended Tools**

Wrench/Socket <sup>2</sup>	12mm	1
Wrench/Socket <sup>3</sup>	17mm	1

#### **Assembly**

 Insert a support rod with a 10mm flat washer through a mounting hole in the bottom shelf, then slide a column onto the rod, as shown in Flgure 2.

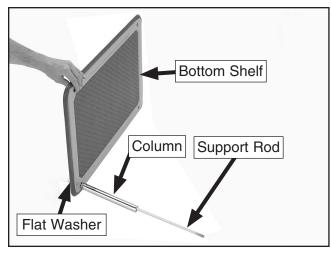

**Figure 2.** Support rod and column installed onto bottom shelf.

Continued on next page —

2. Repeat **Step 1** with the remaining support rods (see **Figure 3**), making sure to install the two 20" rods on the front end and the 20<sup>5</sup>/<sub>8</sub>" rods on the back end of the shelf.

**Note:** The longer rods will install into the handle later in these instructions.

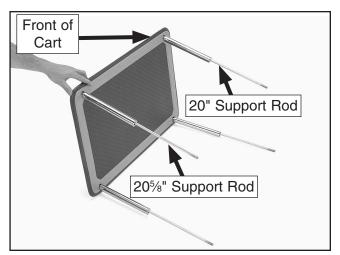


Figure 3. Lower shelf installed.

3. Slide the middle shelf through the support rods (**Figure 4**), then install a column onto each rod.

**Note:** Make sure the lighter side of the shelf faces down and toward the fasteners on the bottom shelf.

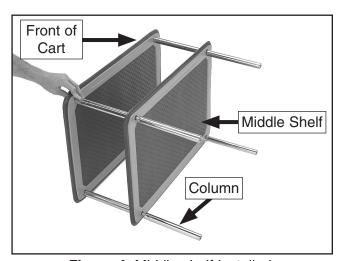


Figure 4. Middle shelf installed.

-2-

- **4.** Place the top shelf over the rods and align the mounting holes.
- 5. Secure the front end of the top shelf with the 20" support rods, then fasten the handle to the cart with the 20<sup>5</sup>/<sub>8</sub>" support rods (**Figure 5**).

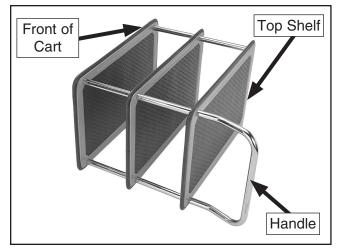


Figure 5. Top shelf and handle assembled.

**6.** Fasten the casters to the bottom shelf (see **Figure 6**)—placing the fixed casters in the front and swivel casters on the handle end—using the pre-installed M8-1.25 x 12 hex bolts and lock washers.


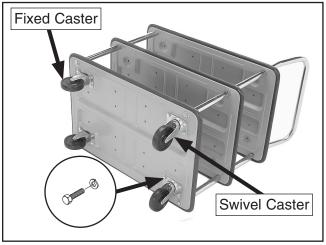


Figure 6. Casters installed.

7. Place the cart in an upright position with the wheels on a flat surface.

If you need help with your cart, call our Tech Support at: (570) 546-9663.

### **H0758 Parts Breakdown and List**

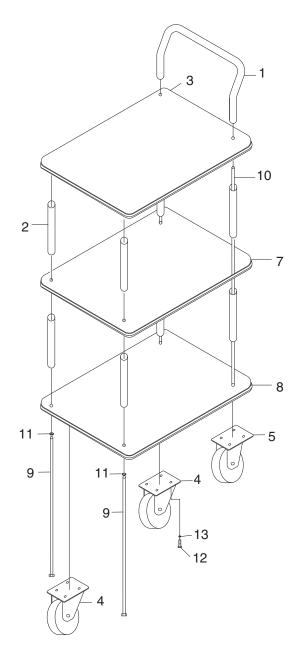

REF	PART#	DESCRIPTION
1	PH0758001	HANDLE
2	PH0758002	COLUMN
3	PH0758003	UPPER SHELF
4	PH0758004	FIXED CASTER
5	PH0758005	SWIVEL CASTER
7	PH0758007	MIDDLE SHELF

REF	PART#	DESCRIPTION
8	PH0758008	LOWER SHELF
9	PH0758009	HEX BOLT M10-1.5 X 508
10	PH0758010	HEX BOLT M10-1.5 X 524
11	PW04M	FLAT WASHER 10MM
12	PB06M	HEX BOLT M8-1.25 X 12
13	PW01M	FLAT WASHER 8MM



Buy Direct and Save with Grizzly® - Trusted, Proven and a Great Value!

Visit Our Website Today And Discover Why Grizzly® Is The Industry Leader!

- SECURE ORDERING
- ORDERS SHIPPED WITHIN 24 HOURS
- E-MAIL RESPONSE WITHIN ONE HOUR

-OR-

## Call Today For A FREE **Full Color Catalog**







