# ЛОС

## LCD Monitor User Manual E1660Sw



Safety	4
National Conventions	4
Power	5
Installation	6
Cleaning	7
Other	8
Setup	9
Contents in Box	9
Setup Stand & Base	10
Adjusting Viewing Angle	
Connecting the Monitor	12
Wall Mounting	13
Adjusting	14
Setting Optimal Resolution	14
Windows Vista	14
Windows XP	16
Windows ME/2000	17
Hotkeys	18
OSD Setting	19
Luminance	20
Image Setup	22
Color Setup	24
Picture Boost	26
OSD Setup	28
Extra	
Exit	32
LED Indicator	
Driver	34
Monitor Driver	34
Windows 7	34
Windows Vista	
Windows XP	40
Windows 2000	43
Windows ME	
i-Menu	44
e-Saver	45
Screen+	46
Troubleshoot	47
Specification	49
General Specification	49
Preset Display Modes	
Pin Assignments	
Plug and Play	
Regulation	
FCC Notice	
WEEE Declaration	53

EPEAT Declaration	.54
Service	
Warranty Statement for Europe	.55
Warranty Statement for North & South America (excluding Brazil)	.57
Ease	.59

## Safety

## **National Conventions**

The following subsections describe notational conventions used in this document.

#### Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

### Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V ~, Min. 5A

A The wall socket shall be installed near the equipment and shall be easily accessible.

## Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.

Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.


Lo not place the front of the product on the floor.

If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.


Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or on the stand:

#### Installed on the wall

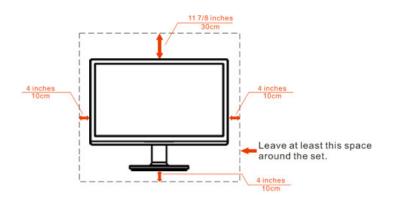

Installed with stand

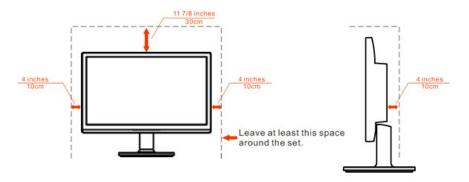


## Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

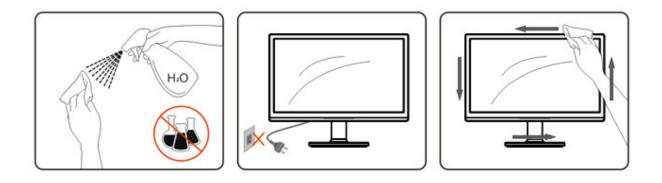

### Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.


All Make sure that the ventilating openings are not blocked by a table or curtain.

LOD not engage the LCD monitor in severe vibration or high impact conditions during operation.

LO not knock or drop the monitor during operation or transportation.

## Setup

## **Contents in Box**

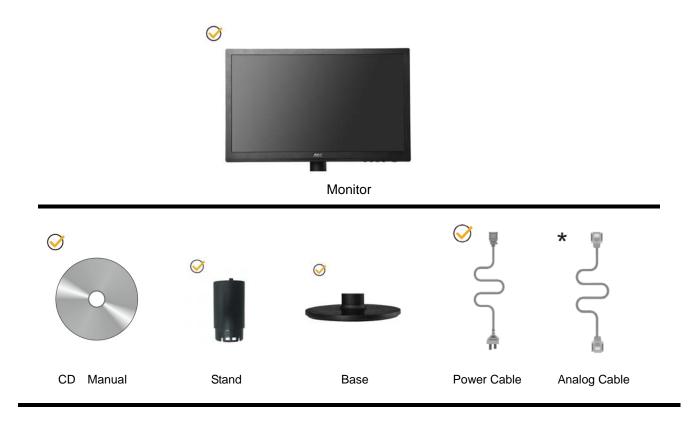

## Setup Stand & Base

Please setup or remove the base following the steps as below.

#### Setup:



#### Remove:



## **Adjusting Viewing Angle**

For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor's angle from -5° to 20 °.






Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.

## **Connecting the Monitor**

Cable Connections In Back of Monitor and Computer:

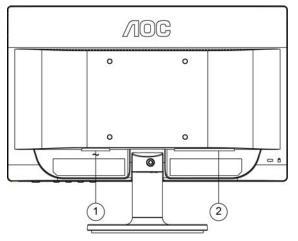

- 1. Power
- 2. Analog (DB-15 VGA cable)

To protect equipment, always turn off the PC and LCD monitor before connecting.


1. Connect the power cable to the AC port on the back of the monitor.

2. Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

## Wall Mounting

Preparing to Install An Optional Wall Mounting Arm.

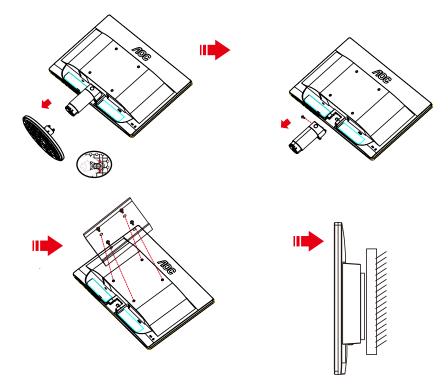

This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure. Follow these steps:

- 1 Remove the base.
- 2 Follow the manufacturer's instructions to assemble the wall mounting arm.

3 Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.

4 Insert the 4 screws into the holes and tighten.

5 Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

Noted : VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.

## Adjusting

## **Setting Optimal Resolution**

#### Windows Vista

For Windows Vista:

- 1 Click START.
- 2 Click CONTROL PANEL.



#### 3 Click Appearance and Personalization.



#### 4 Click Personalization



#### 5 Click Display Settings.



6 Set the resolution **SLIDE-BAR** to 1366 by 768.

jdentify Monitor
E (Microsoft Corporation -
Colors
Highest (32 bit)

#### Windows XP

For Windows XP:


#### 1 Click START.




2 Click SETTINGS.

3 Click CONTROL PANEL.

4 Click Appearance and Themes.

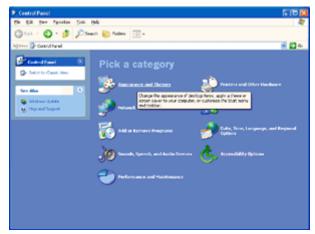

5 Double click **DISPLAY.** 

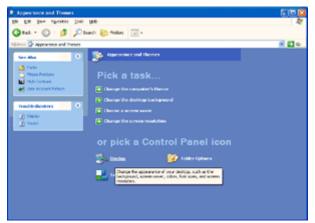

#### 6 Click SETTINGS.

7 Set the resolution **SLIDE-BAR** to 1366 by 768.

Display Properties	×
Themes Desktop Screen Saver Appearance Settings	_
Display: Phag and Play Manifest on 3D Prophet III	
Less More 1024 by 769 pixels	
Isoubleshoot Adgenced	
OK Cancel Apply	

#### Windows ME/2000


For Windows ME/2000:

- 1 Click START.
- 2 Click SETTINGS.
- 3 Click CONTROL PANEL.
- 4 Double click **DISPLAY.**
- 5 Click SETTINGS.

.

6 Set the resolution SLIDE-BAR to 1366 by 768

## Hotkeys

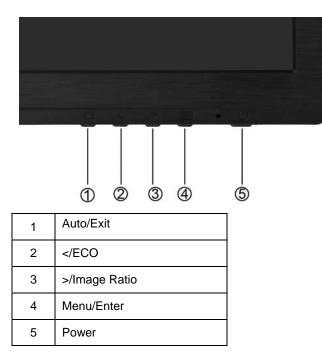

#### Power

Press the Power button to turn on/off the monitor.

#### Menu/Enter

When the OSD is closed, press Source button will be Source hot key function. Press Source button continuously to select the input source showed in the message bar, press Menu/Enter button to change to the source selected.

#### >/ Image Ratio

When there is no OSD, press > continuously to change 4:3 or wide image ratio. (If the product screen size is 4:3 or input signal resolution is wide format, the hot key is disable to adjust.)

#### </ Eco

Press the Eco key continuously to select the Eco mode of brightness and DCR on when there is no OSD. (Eco mode hot key may not be available in all models).

#### Auto/Exit

When there is no OSD, press Auto/Source button continuously about 3 second to do auto configure.

## **OSD Setting**

Basic and simple instruction on the control keys.

1) Press the MENU-button to activate the OSD window.

2) Press < or > to navigate through the functions. Once the desired function is highlighted, press the **MENU-button** to activate it . press < or > to navigate through the sub-menu functions. Once the desired function is highlighted, press **MENU-button** to activate it.

3) Press < or > to change the settings of the selected function. Press AUTO to exit. If you want to adjust any other function, repeat steps 2-3.

4) OSD Lock Function: To lock the OSD, press and hold the **MENU button** while the monitor is off and then press **power button** to turn the monitor on. To un-lock the OSD - press and hold the **MENU button** while the monitor is off and then press **power button** to turn the monitor on.

#### Notes:

1) If the product has only one signal input, the item of "Input Select" is disable to adjust.


2) If the product screen size is 4:3 or input signal resolution is wide format, the item of "Image Ratio" is disable to adjust.

3) One of DCR, Color Boost, and Picture Boost functions is active, the other two function is turned off accordingly.

#### Luminance





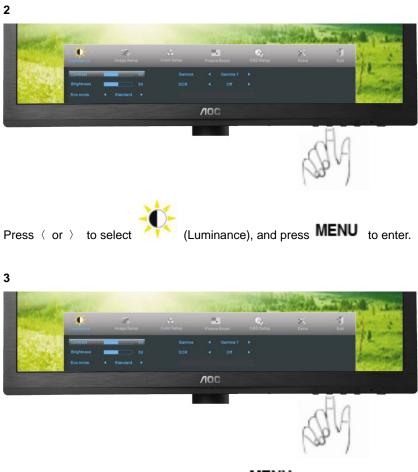

Press  $\langle \mbox{ or } \rangle$  to select submenu, and press  $\mbox{MENU}$  to enter.



Press  $\langle \mbox{ or } \rangle$  to adjust.


5



### Press AUTO to exit.

	Brightness	Brightness 0-100 Backlight Adjustment		Backlight Adjustment
	Contrast	0-100		Contrast from Digital-register.
		Standard	~	Standard Mode
	Eco mode	Text	T	Text Mode
		Internet	E	Internet Mode
1		Game	<u>ففق</u>	Game Mode
-0-		Movie	ø	Movie Mode
		Sports	32	Sports Mode
	Gamma	Gamma1		Adjust to Gamma1
		Gamma2		Adjust to Gamma 2
		Gamma3		Adjust to Gamma 3
		Off		Disable dynamic contrast ratio
	DCR	On	DCR	Enable dynamic contrast ratio

#### Image Setup

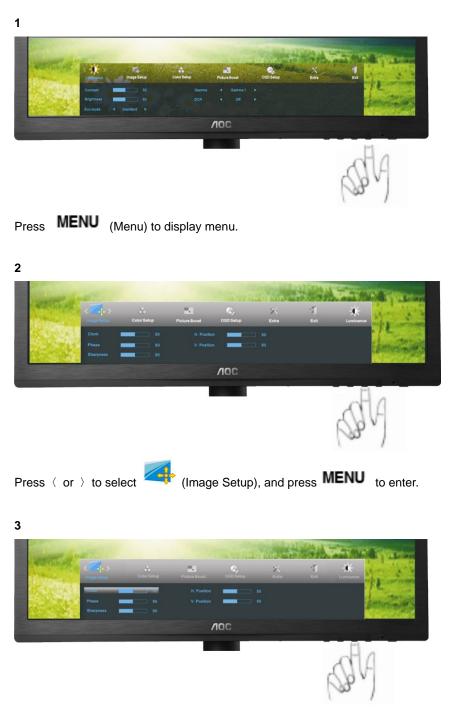

Press  $\langle \mbox{ or } \rangle \mbox{ to select submenu, and press } \textbf{MENU}$  to enter.

 Image and
 Color Series
 Old Delas
 Delas

Press  $\langle \mbox{ or } \rangle$  to adjust.

5

4




## Press AUTO to exit.

Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
Phase	0-100	Adjust Picture Phase to reduce Horizontal-Line noise
Sharpness	0-100	Adjust picture sharpness
 H.Position	0-100	Adjust the horizontal position of the picture.
V.Position	0-100	Adjust the vertical position of the picture.

### **Color Setup**





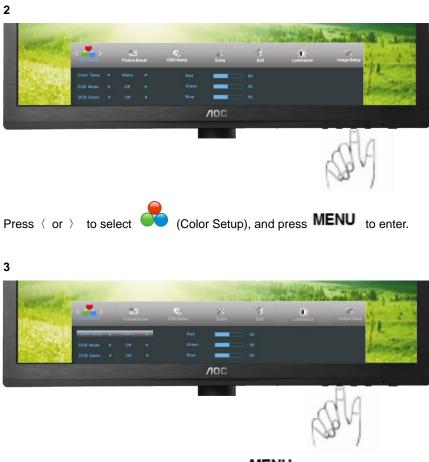

Press  $\langle \mbox{ or } \rangle$  to select submenu, and press  $\mbox{MENU}$  to enter.

 Image
 <th

Press  $\langle \mbox{ or } \rangle$  to adjust.

5

4





	Color setup.	Warm		Recall Warm Color Temperature from EEPROM.
	Normal		Recall Normal Color Temperature from EEPROM.	
		Cool		Recall Cool Color Temperature from EEPROM.
		sRGB		Recall SRGB Color Temperature from EEPROM.
			Red	Red Gain from Digital-register
		User	Green	Green Gain Digital-register.
DCB Mod			Blue	Blue Gain from Digital-register
	DCB Mode	Full Enhance	on or off	Disable or Enable Full Enhance Mode
		Nature Skin	on or off	Disable or Enable Nature Skin Mode
		Green Field	on or off	Disable or Enable Green Field Mode
		Sky-blue	on or off	Disable or Enable Sky-blue Mode
		AutoDetect	on or off	Disable or Enable AutoDetect Mode
	DCB Demo		On or off	Disable or Enable Demo

#### **Picture Boost**











Press  $\, \langle \, \mbox{ or } \, \rangle \,$  to adjust.



	Frame Size	14-100	Adjust Frame Size
	Brightness	0-100	Adjust Frame Brightness
	Contrast	0-100	Adjust Frame Contrast
•	H. position	0-100	Adjust Frame horizontal Position
	V.position	0-100	Adjust Frame vertical Position
	Bright Frame	on or off	Disable or Enable Bright Frame

#### **OSD Setup**





Press  $\langle \mbox{ or } \rangle$  to select submenu, and press  $\mbox{MENU}$  to enter.



Press  $\langle \mbox{ or } \rangle$  to adjust.





0	H.Position	0-100	Adjust the horizontal position of OSD	
	V.Position	0-100	Adjust the vertical position of OSD	
	Timeout	5-120	Adjust the OSD Timeout	
	Transparence	0-100	Adjust the transparence of OSD	
	Language		Select the OSD language	

#### Extra





Press  $\langle \mbox{ or } \rangle \mbox{ to select submenu, and press } \textbf{MENU}$  to enter.



 $\label{eq:press} \mathsf{Press}\ \langle\ \mathsf{or}\ \rangle \quad \ \mathsf{to}\ \mathsf{adjust}.$ 




	Auto /Analog	Auto /Analog	Select Input Signal Source
Auto Config yes c		yes or no	Auto adjust the picture to default
31	Off timer	0-24hrs	Select DC off time
	Image Ratio	wide or 4:3	Select wide or 4:3 format for display
	DDC-CI	yes or no	Turn ON/OFF DDC-CI Support
	Reset	Yes or no	Reset the menu to default
	Information		Show the information of the main image and sub-image source


#### Exit





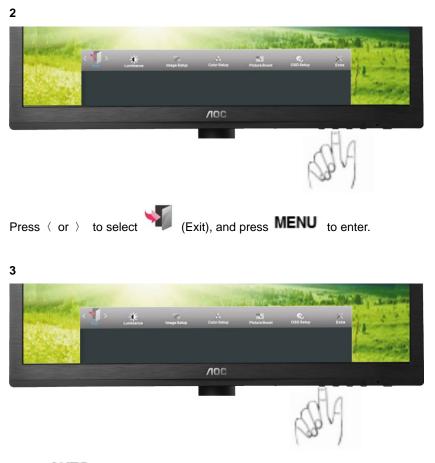



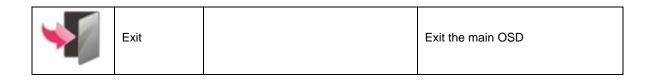

## **LED Indicator**

Status	LED Color
Full Power Mode	Green or Blue
Active-off Mode	Orange or red

## Driver

## **Monitor Driver**


#### Windows 7

1.Start Windows® 7

2.Click on the 'Start' button and then click on 'Control Panel'.



3. Click on the 'Display' icon.

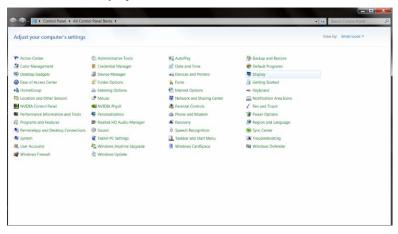

4.Ckick on the "Change display settings" button.

🕗 会 = 🔳 🔹 Control Panel a	All Control Panel Items + Display		- 4 Search Control Panel P
Control Panel Home Adjust resolution Collarate color Change disclary settings Adjust Clearlype text Set custom text size (DP)	Make it easier to read what's o	er items on your screen by choosing one of these options. To	
		Ageby	
See also Personalization Devices and Printers			


5.Click the "Advanced Settings" button.

Control Panel + All Control Panel Items + Displa	y   Screen Resolution	<ul> <li>Search Control Panel</li> </ul>
Change t	he appearance of your display  Perect Beently	
Display: Resolution: Orientation	I. Novida Default flat Panel   I. Sovida Default flat Panel  I. Sovida Default flat Panel  I. Sovida Default flat Panel  Adveced Actings  Adveced Actings	
	nd other items larger or smaller y settings should 1 choose?	
	OK Cancel Apply	


6.Click the "Monitor" tab and then click the "Properties" button.

Monitor Type Generic PnP Monitor Monitor Settings Screen refresh rate: 60 Hertz Hide modes that this monitor cannot display Hide modes that this monitor cannot display Pearing this check box allows you to select display modes tha cannot display correctly. This may lead to an unusable display damaged hardware.	perties
Generic PnP Monitor Generic PnP Monitor Monitor Settings Screen refresh rate: 60 Hertz Hide modes that this monitor cannot display Gearing this check box allows you to select display modes that cannot display correctly. This may lead to an unusable display	perties
Monitor Settings Screen refresh rate: 60 Hertz Heine modes that this monitor cannot display Heannot display correctly. This may lead to an unusable display	perties •
Monitor Settings Screen refresh rate: 60 Hertz Hide modes that this monitor cannot display Clearing this check box allows you to select display modes that cannot display correctly. This may lead to an unusable display	perties •
Screen refresh rate: 60 Hertz Hite modes that this monitor cannot display Clearing this check box allows you to select display modes that cannot display correctly. This may lead to an unusable display	•
Screen refresh rate: 60 Hertz Hite modes that this monitor cannot display Clearing this check box allows you to select display modes that cannot display correctly. This may lead to an unusable display	•
60 Hertz Hite modes that this monitor cannot display Clearing this check box allows you to select display modes that cannot display correctly. This may lead to an unusable display	•
In the modes that this monitor cannot display Dearing this check box allows you to select display modes that cannot display correctly. This may lead to an unusable display	-
Clearing this check box allows you to select display modes that cannot display correctly. This may lead to an unusable display	
	and/or
Colors	
True Color (32 bit)	
OK Cancel	


#### 7.Click the "Driver" tab.

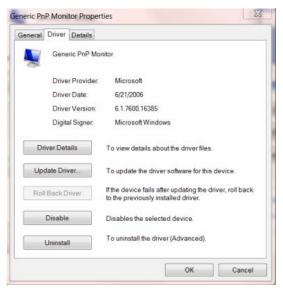

8. Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "**Update Driver...** "and then click the **"Browse my computer for driver software"** button.

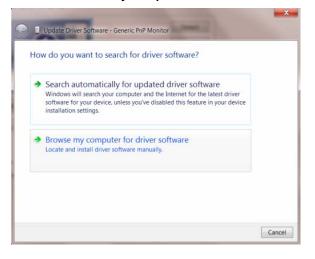

9. Select "Let me pick from a list of device drivers on my computer".

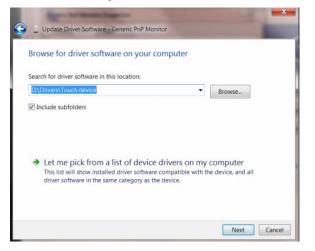

10. Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).



11. Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.

12. Select your monitor model and click the "**Next**" button. The files will be copied from the CD to your hard disk drive.

13. Close all open windows and remove the CD.


14. Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

### Windows Vista



1. Click "Start " and "Control Panel". Then, double-click on "Appearance and Personalization".

2. Click "Personalization" and then "Display Settings".

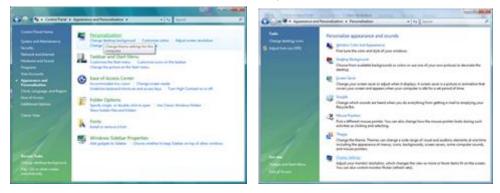


3. Click "Advanced Settings...".



4. Click "Properties" in the "Monitor" tab. If the "Properties" button is deactivated, it means the configuration for your monitor is completed. The monitor can be used as is.

100


If the message "Windows needs..." is displayed, as shown in the figure below, click "Continue".

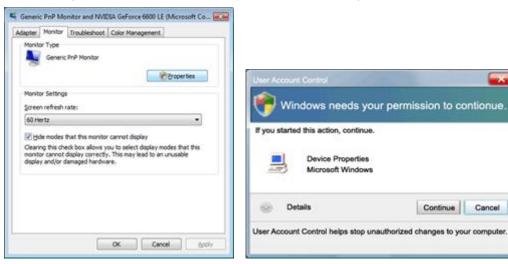

5. Click "Update Driver..." in the "Driver" tab.

eneric PnP Monitor Properties	Generic PnP Monitor Properties
General Driver Details	General Driver Details
Genetic PvP Montor	Generic Pri/P Monitor
Device type: Monitors Manufacturer: (Standard monitor types) Location: on IV/DIA GeForce 6600 LE (Microsoft Corpo	Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.0 6000 16386
Device status	Dgtal Sgner: microsoft windows
Pis device is working property.	Driver Databasis         To view database about the driver files.           Update Driver         To update the driver software for this device.           Biol Back Criver         If the device fails after update the driver, roll back to the previously installed driver.           Deable         Deables the selected drivice.
OK Cancel	Uninitial To uninitial the driver (Advanced).

6. Check the "Browse my computer for driver software" checkbox and click "Let me pick from a list of device drivers on my computer".

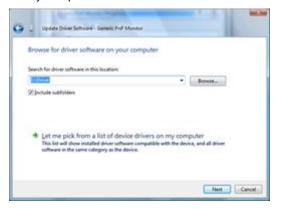

7. Click on the 'Have disk...' button, then click on the 'Browse...' button and then select the appropriate drive F:\Driver (CD-ROM Drive).

8. Select your monitor model and click on the 'Next' button.


9. Click "Close"  $\rightarrow$  "Close"  $\rightarrow$  "OK"  $\rightarrow$  "OK" on the following screens displayed in sequence.

### Windows XP


- 1. Start Windows® XP
- 2. Click on the 'Start' button and then click on 'Control Panel'.



3. Select and click on the category 'Appearance and Themes'

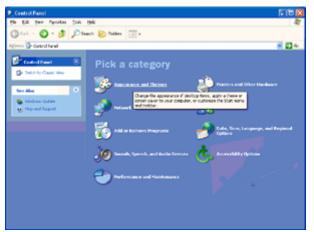

4. Click on the 'Display' Item.

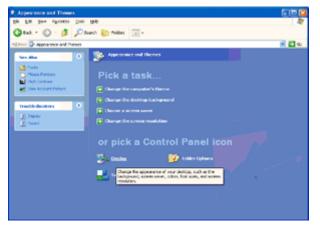

5. Select the 'Settings' tab then click on the 'Advanced' button.

Display Properties 🛛 😨 🔀
Themes Desktop Screen Saver Appearance Settings
Display: Plug and Play Monitor on 3D Prophet III
Screen resolution Lese More 1024 by 769 pixels
Iroubleshoot Adgenced
OK Cancel Apoly

- 6. Select 'Monitor' tab
- If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.
- If the 'Properties' button is active, click on 'Properties' button.

Please follow the steps below.

ag and Pilay Monnto	r and 3D Prophet III Pr	operties 🛛 😰 👔
	Device Selection	Color Correction
General Adapter	Monitor Troubleshoot	Color Management
Monitor settings		
Screen refresh rate:		
60 Hertz		¥
	is monitor cannot display w allows you to select display	modes that this
Clearing this check bo	x allows you to select display correctly. This may lead to a	
Clearing this check bo monitor cannot display	x allows you to select display correctly. This may lead to a	


7. Click on the 'Driver' tab and then click on 'Update Driver...' button.

Plug and Play Monitor Properties 🛛 😨 🔀	
General Driver	Plug and Play Monitor Properties
Plug and Play Monitor	General Driver
Device type: Monitors	Plug and Play Monitor
Manufacturer: (Standard monitor types) Location: on 3D Prophet III	Driver Provider: Microsoft Driver Date: 6/6/2001
Device status	Driver Version: 5.1.2001.0
This device is working properly.	Digital Signer: Microsoft Windows XP Publisher
If you are having problems with this device, click Troubleshoot to start the troubleshooter.	Driver Details To view details about the driver files.
	Ugdate Driver To update the driver for this device.
Iroubleshoot	Boll Back Driver If the device fails after updating the driver, roll back to the previously installed driver.
Device usage: Use this device (enable)	Uninatal To uninstall the driver (Advanced).
OK Cancel	OK. Cancel

8. Select the 'Install from a list or specific location [advanced]' radio button and then click on the 'Next' button.



9. Select the 'Don't Search. I will choose the driver to install' radio button. Then click on the 'Next' button.

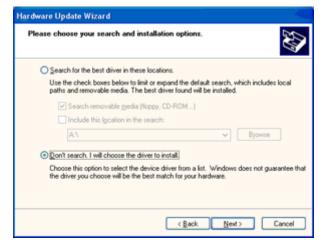

10. Click on the 'Have disk...' button, then click on the 'Browse...' button and then select the appropriate drive F: (CD-ROM Drive).

Hardware Update Wizard			
Select the device driver you want to install for this hardware.			
Select the manufacturer and model of your hardware device and then click. Next. If you have a disk that contains the driver you want to install, click. Have Disk.			
Model			
D Plug and Play Monitor			
This driver is digitally signed. Tell me why, driver signing is important			
< Back Next> Cancel			

11. Click on the 'Open' button, then click the 'OK' button.

12. Select your monitor model and click on the 'Next' button.

- If you can see the 'has not passed Windows® Logo testing to verify its compatibility with Windows® XP' message, please click on the 'Continue Anyway' button.

13. Click on the 'Finish' button then the 'Close' button.

14. Click on the 'OK' button and then the 'OK' button again to close the Display Properties dialog box.

#### Windows 2000

- 1. Start Windows® 2000
- 2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
- 3. Double click on the 'Display' Icon.
- 4. Select the 'Settings' tab then click on 'Advanced...'.
- 5. Select 'Monitor'
- If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.
- If the 'Properties' button is active. Click on 'Properties' button. Please follow the steps given below.
- 6. Click on 'Driver' and then click on 'Update Driver...' then click on the 'Next' button.

7. Select 'Display a list of the known drivers for this device so that I can choose a specific driver', then click on 'Next' and then click on 'Have disk...'.

- 8. Click on the 'Browse...' button then select the appropriate drive F: ( CD-ROM Drive).
- 9. Click on the 'Open' button, then click on the 'OK' button.
- 10. Select your monitor model and click on the 'Next' button.
- 11. Click on the 'Finish' button then the 'Close' button.

If you can see the 'Digital Signature Not Found' window, click on the 'Yes' button.

### Windows ME

- 1. Start Windows® Me
- 2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
- 3. Double click on the 'Display' Icon.
- 4. Select the 'Settings' tab then click on 'Advanced...'.
- 5. Select the 'Monitor' button, then click on 'Change...' button.
- 6. Select 'Specify the location of the driver(Advanced)' and click on the 'Next' button.
- 7. Select 'Display a list of all the drivers in a specific location, so you can choose the driver you want', then click on 'Next' and then click on 'Have Disk...'.
- 8. Click on the 'Browse...' button, select the appropriate drive F: ( CD-ROM Drive) then click on the 'OK' button.
- 9. Click on the 'OK' button, select your monitor model and click on the 'Next' button.
- 10. Click on 'Finish' button then the 'Close' button.

## i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide.

i-Menu	Lumi	Luminance	
		×	
Contras	st 50	🔆 Brightness	
γ Gamma	🖣 Gamma 1 🕨	💠 Eco Mode	∢ 🗹 ▹
DCR	<b>S</b>		
			\$
	Λ	OC	

### e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC status, you may choose from the pull-down menu the desired time (in minutes) for your monitor to automatically shutdown. The example above illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.



You can click "RESET" to set the e-Saver to its default settings like below.



### Screen+



Welcome to "Screen+" software by AOC, Screen+ software is a desktop screen splitting tool, it splits the desktop into different panes, each pane displays a different window. You only need to drag the window to a corresponding pane, when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it.



# Troubleshoot

Problem & Question	Possible Solutions	
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.	
No images on the screen	<ul> <li>Is the power cord connected properly?</li> <li>Check the power cord connection and power supply.</li> <li>Is the cable connected correctly?</li> <li>(Connected using the D-sub cable)</li> <li>Check the DB-15 cable connection.</li> <li>If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen.</li> <li>If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000/Win7) and then change the frequency of the video card.</li> <li>(Refer to the Setting the Optimal Resolution)</li> <li>If the initial screen (the login screen) does not appear, contact the Service Center or your dealer.</li> <li>Can you see "Input Not Supported" on the screen?</li> <li>You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly.</li> <li>Adjust the maximum resolution and frequency that the monitor can handle properly.</li> <li>Make sure the AOC Monitor Drivers are installed.</li> </ul>	
Picture Is Fuzzy & Has       Adjust the Contrast and Brightness Controls.         Ghosting Shadowing Problem       Press to auto adjust.         Make sure you are not using an extension cable or switch box.       recommend plugging the monitor directly to the video card outport on the back .		
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution your are using.	

	The Computer Power Switch should be in the ON position.	
	The Computer Video Card should be snugly fitted in its slot.	
	Make sure the monitor's video cable is properly connected to the computer.	
	Inspect the monitor's video cable and make sure no pin is bent.	
Monitor Is Stuck In Active	Make sure your computer is operational by hitting the CAPS LOCK key on	
Off-Mode"	the keyboard while observing the CAPS LOCK LED. The LED should either	
	turn ON or OFF after hitting the CAPS LOCK key.	
Missing one of the primary	Inspect the monitor's video cable and make sure that no pin is damaged.	
colors (RED, GREEN, or	Make sure the monitor's video cable is properly connected to the computer.	
BLUE)		
Screen image is not centered	Adjust H-Position and V-Position or press hot-key (AUTO).	
or sized properly		
Picture has color defects	Adjust RGB color or select desired color temperature.	
(white does not look white)		
Horizontal or vertical	Use Windows 95/98/2000/ME/XP/Win7 shut-down mode Adjust CLOCK and	
disturbances on the screen	FOCUS.	
	Press to auto-adjust.	

# **Specification**


# **General Specification**

	Model name	E1660Sw		
	Driving system	TFT Color LCD		
	Viewable Image Size	39.5 cm diagonal		
Danal	Pixel pitch	0.252 mm (H) x 0. 252 mm (V)		
Panel	Video	R, G, B Analog Interface		
	Separate Sync.	H/V TTL		
	Display Color	262,144 Colors		
	Dot Clock	85.5 MHz		
	Horizontal scan range	30 kHz - 60 kHz		
	Horizontal scan Size(Maximum)	344.2 mm		
	Vertical scan range	60 Hz - 70 Hz		
	Vertical scan Size(Maximum)	193.5 mm		
	Optimal preset resolution	1366 x 768 (60 Hz)		
	Plug & Play	VESA DDC2B		
Resolution	Input Connector	D-Sub 15 pin,		
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM,		
	Power Source	100-240V~, 50/60Hz		
	Dower Consumption	Active <12 W		
	Power Consumption	Standby < 0.5 W		
	Off timer	0~24 hrs		
	Connector Type	15-pin Mini D-Sub,		
	Signal Cable Type	Detachable		
Physical		Height (with base)	300 mm	
Characteristics	Dimensions & Weight	Width	371.6 mm	
		Depth	159.4 mm	
		Weight (monitor only)	1.6 kg	
	Temperature	Operating	0° to 40°	
		Non-Operating	-25°to 55°	
Environmental	Humidity	Operating	10% to 85% (non-condensing)	
Linnonmental		Non-Operating	5% to 93% (non-condensing)	
	Altitude	Operating	0~ 3658m (0~ 12000 ft )	
		Non-Operating	0~ 12192m (0~ 40000 ft )	

# Preset Display Modes

STANDARD	RESOLUTION	HORIZONTAL FREQUENCY(kHz)	VERTICAL FREQUENCY(Hz)
Dos-mode	720 x 400	31.47	70
VGA	640 x 480	31.47	60
SVGA	800 x 600	37.879	60
XGA	1024 x 768	48.363	60
WXGA	1360×768	47.712	60
WXGA	1366×768	47.712	59.79

## **Pin Assignments**

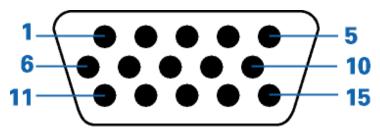

Pin Number	15-Pin Side of the Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
4	N.C.
5	Detect Cable
6	GND-R
7	GND-G
8	GND-B
9	+5V
10	Ground
11	N.C.
12	DDC-Serial data
13	H-sync
14	V-sync
15	DDC-Serial clock

# **Plug and Play**

### Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

# Regulation

# **FCC Notice**

#### FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

#### NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

### **WEEE Declaration**

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product .

## WEEE Declaration Zcf<sup>+</sup>=bX]U<sup>+</sup>



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste equipment for recycling in India please visit the below web link.

www.aocindia.com/ewaste.php.



### **EPEAT Declaration**



EPEAT is a system to help purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products.

AOC believes in protecting the environment.

With a key concern for the conservation of natural resources, as well as land fill protection, AOC announces the launch of AOC monitor's packaging recycling program. This program is designed to help you discard of your monitor carton and filler materials properly. If a local recycling center is not available, AOC will recycle the packaging material for you, including foam filler and carton. AOC Display solution will only recycle AOC monitor packaging. Please refer to the following website address:

#### Only for North and South American, excluding Brazil:

http://us.aoc.com/about/environmental\_impact

For Germany: http://www.aoc-europe.com/en/service/tco.php

For Brazil: http://www.aoc.com.br/2007/php/index.php?req=pagina&pgn\_id=134

### Service

### Warranty Statement for Europe

#### LIMITED THREE-YEAR WARRANTY\*

#### AOC Color Monitors sold within Europe

AOC International (Europe) BV warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) BV will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. The defective products that are replaced become the property of AOC International (Europe) BV.

If the product appears to be defective, please contact your local dealer or refer to the warranty card when attached to the product.

Deliver the product freight pre-paid, along with the dated proof of purchase, to the AOC Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

AOC International (Europe) BV is responsible neither for any damage or loss during inbound transport damage nor to inbound product that was not properly packaged.

AOC International (Europe) BV will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) BV is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union.

- \* This limited warranty does not cover any losses or damages that occur as a result of
- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have

modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD.

AOC INTERNATIONAL (EUROPE) BV OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) BV LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) BV BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more details, please visit: http://www.aoc-europe.com/en/service/index.php

### Warranty Statement for North & South America (excluding Brazil)

#### WARRANTY STATEMENT

for AOC Color Monitors Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI (EPI is the abbreviation of Envision Peripherals, Inc.) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

\* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/warranty ARGENTINA: http://ar.aoc.com/support/warranty BOLIVIA: http://bo.aoc.com/support/warranty CHILE: http://cl.aoc.com/support/warranty COLOMBIA: http://co.aoc.com/warranty COSTA RICA: http://cr.aoc.com/support/warranty DOMINICAN REPUBLIC: http://do.aoc.com/support/warranty ECUADOR: http://ec.aoc.com/support/warranty EL SALVADOR: http://sv.aoc.com/support/warranty GUATEMALA: http://gt.aoc.com/support/warranty HONDURAS: http://hn.aoc.com/support/warranty NICARAGUA: http://ni.aoc.com/support/warranty PANAMA: http://pa.aoc.com/support/warranty PARAGUAY: http://py.aoc.com/support/warranty PERU: http://pe.aoc.com/support/warranty URUGUAY: http://pe.aoc.com/warranty VENEZUELA: http://ve.aoc.com/support/warranty IF COUNTRY NOT LISTED: http://latin.aoc.com/warranty



Only for AOC branded monitors sold within the continental United States.

All AOC branded monitors are now covered by the EASE Program. If your monitor malfunctions at any time during the first three months, AOC will provide a replacement monitor within 72 hours after you are approved for our program. If your monitor qualifies for the EASE program, AOC will pay for freight both ways.

Step 1: Phone our TECH Department at 888.662.9888
Step 2: Fill out and return EASE registration forms by mail or fax.
Step 3: We will issue a Return Authorization Number upon verification into the program.
Step 4: A monitor will be advance shipped to your location.
Step 5: We will issue a UPS Call Tag to pick up the defective unit.
Step 6: Please review the following chart to see your EASE program qualifications.

WARRANTY PERIOD	COVERAGE AT NO CHARGE	CUSTOMER CHARGES
Within the first three months of purchase: Covered by EASE	<ul> <li>New AOC monitor</li> <li>Call tag dispatched and return freight charges via UPS</li> </ul>	- None*
Between 4 months – 1 Year	- All Parts & Labor Including CRT Tube & LCD Panel	- UPS Return Freight to AOC
Between 1 Year - 3 Years: Covered by standard limited warranty	- Parts & Labor (excluding CRT Tube & LCD Panel)	- UPS Return Freight to AOC

\*AOC will need to obtain a credit card number if you would like to get a new AOC monitor advanced shipped to your location, prior to the defective unit arriving at AOC's service center. If you do not wish to supply a credit card, AOC will only ship the new monitor, once the defective unit arrives at the AOC service center.

