

ViewSonic®

P220f



With Plug & Play[™]

22" (20" Viewable Diagonal)

Color Monitor

User Guide

Guide de l'utilisateur

Bedienungsanleitung

Guía del usuario

Guida dell'utente

Guia do usuário

Användarhandbok

Руководство пользователя

Podręcznik użytkownika

ユーザズ ガイド

使用手冊

使用手冊

사용자 안내서

دليل المستخدم

Contents

Electronic Warranty Registration.....	2
For Your Records.....	2

Getting Started

Package Contents.....	3
Precautions	3
Quick Installation.....	4

Using the Monitor

Setting the Timing Mode	5
OSD Lock Setting	6
Adjusting the Screen Image	7

Other Information

Specifications	12
Troubleshooting	13
Customer Support	14
Cleaning the Monitor	15
Limited Warranty	16

Appendix

Power Cord Safety Guidelines	17
FCC Information.....	18

Copyright © ViewSonic Corporation, 2003. All right reserved.

Macintosh and Power Macintosh are registered trademarks of Apple Computer, Inc.

Microsoft, Windows, Windows NT, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.

ViewSonic, the three birds logo, OnView, ViewMatch, and ViewMeter are registered trademarks of ViewSonic Corporation.

VESA is a registered trademark of the Video Electronics Standards Association. DPMS and DDC are trademarks of VESA.

ENERGY STAR® is a registered trademark of the U.S. Environmental Protection Agency (EPA).

As an ENERGY STAR® partner, ViewSonic Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Disclaimer: ViewSonic Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use this product.

In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

Electronic Warranty Registration

To meet your future needs, and to receive any additional product information as it becomes available, please register your monitor's warranty on the Internet at: <http://www.viewsonic.com>

For Your Records

Product Name:	ViewSonic P220f
Model Number:	VCDTS26344-1
Document Number:	A-CD-P220f-3
Serial Number:	_____
Purchase Date:	_____

Product disposal at end of product life

ViewSonic is concerned about the preservation of our environment. Please dispose of this product properly at the end of its useful life. Your local waste disposal company may provide information about proper disposal.

Getting Started

Congratulations on your purchase of a ViewSonic color monitor.

Important! *Save the original box and all packing material for future shipping needs.*

NOTE: The word “Windows” in this user guide refers to the following refers to the following Microsoft operating systems: Windows ‘95, Windows NT, Windows ‘98, Windows 2000, Windows ME (Millennium) and Windows XP.

Package Contents

Your package includes:

- Color monitor
- DB-15 video cable
- Power cord
- ViewSonic Wizard CD-ROM

NOTE: The CD jacket contains the Quick Start Guide, and the CD includes the User Guide PDF files and INF/ICM display optimization files. The INF file ensures compatibility with Windows operating systems, and the ICM file (Image Color Matching) ensures accurate on-screen colors. ViewSonic recommends that you install both files.

Precautions

-
- | | |
|---|---|
| <ul style="list-style-type: none">• For best viewing conditions sit at least 18" from the monitor.• AVOID TOUCHING THE SCREEN WITH YOUR FINGERS. Oils from the skin are difficult to remove.• NEVER REMOVE THE REAR COVER. The monitor contains high-voltage parts. You may suffer serious injury if you touch these parts.• Avoid exposing the monitor to direct sunlight or another heat source. The monitor should be facing away from direct sunlight to reduce glare.• Do not place your monitor near a source of water or moisture. | <ul style="list-style-type: none">• Place your monitor in a well ventilated area. Do not place anything on the monitor that blocks the ventilation slots or prevents adequate dissipation of heat.• Do not place heavy objects on the monitor, video cable, or power cord.• If smoke, abnormal noise, or strange odor is present, immediately switch the monitor off and call your dealer or ViewSonic. It is dangerous to operate your monitor under these conditions.• Keep the monitor away from magnets, motors, transformers and televisions. |
|---|---|
-

Quick Installation

1 Connect video cable(s)

Make sure both the monitor and computer are powered OFF.

The monitor can be connected to one or two computers using either the DB-15 video cable (included) or a BNC video cable (purchased separately). To toggle between two computers: connect the DB-15 video cable from the monitor to the first computer, and the BNC video cables from the monitor to the second computer.

Macintosh users: Models older than G3 require a ViewSonic Macintosh adapter. Attach the adapter to the computer and plug the video cable into the adapter.

To order a ViewSonic® Macintosh adapter, contact ViewSonic. See *Customer Support* in this user guide.

2 Connect power cord

Connect the power cord from the monitor to a properly grounded AC outlet.

3 Power-ON monitor and computer

Power-ON the monitor, then power-ON the computer. This sequence (monitor before computer) is very important.

NOTE: At this point Windows users may receive a message asking them to install the P220f INF file.

4 Install Display Optimization files

(1) Insert the ViewSonic wizard CD-ROM into your computer's CD-ROM drive.

NOTE: if your computer does not have a CD-ROM drive, see the Customer Support section of this user guide.

(2) Wait for the CD-ROM to auto-start.

NOTE: if the CD-ROM does not auto-start: double-click on the CD-ROM icon in Windows Explorer, then double-click on **viewsonic.exe**

(3) Follow the on-screen instructions.

5 Windows users: Set the Timing

Mode (resolution and refresh rate)

Example: 1600 X 1200 @ 85 Hz.


For instructions on changing the resolution and refresh rate, see the user guide for your computer's graphics card.

Installation is complete. Enjoy your new P220f monitor!

To be best prepared for any future customer service needs:

Write the serial number (see back of the monitor) in "For your Records" on page 2 of this guide.

Register the warranty of your monitor on the Internet at: **www.viewsonic.com**

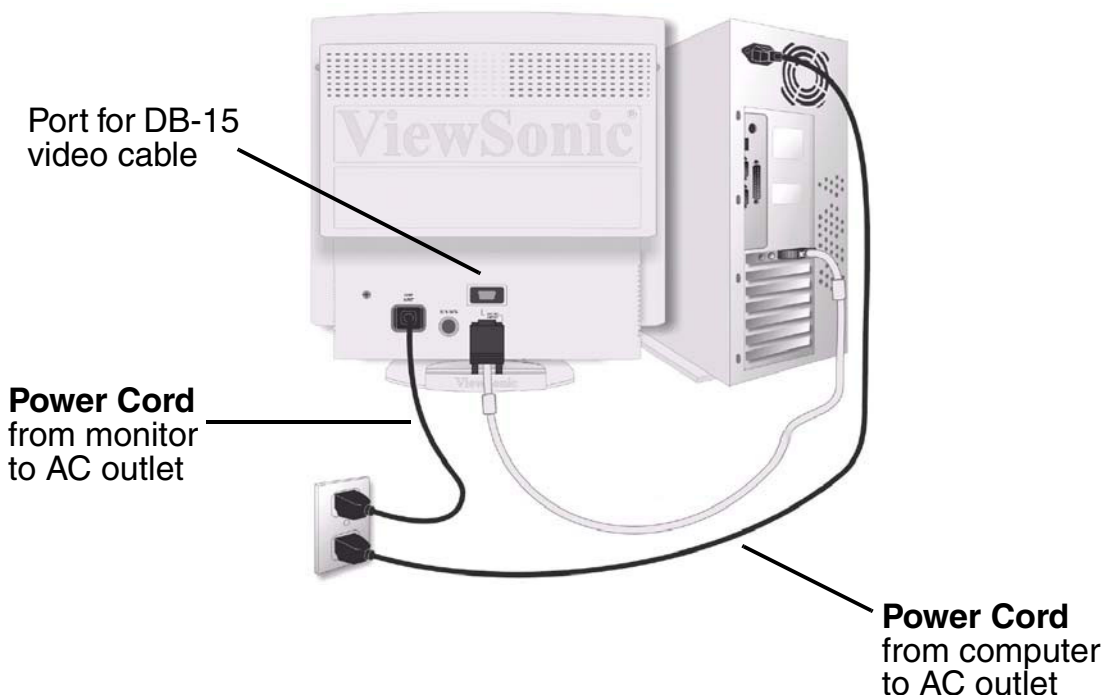

Using the Monitor

Setting the Timing Mode

Setting the timing mode is important for maximizing the quality of the screen image and minimizing eye strain. The **timing mode** consists of the **resolution** (example 1280 x 1024) and **refresh rate** (or vertical frequency; example 75 Hz). After setting the timing mode, use the OnView® controls to adjust the screen image.

The recommended timing mode for this monitor is:

VESA 1600 x 1200 @ 85 Hz.

To set the Timing Mode:

- 1 Set the resolution: Right-click on the Windows® desktop > **Properties** > **Settings** > Desktop Area (Screen Area for Windows 95 and newer) > set the resolution.
- 2 Set the refresh rate: See your graphic card's user guide for instructions.

NOTE: To minimize the adjustments required for an optimal screen image, select a timing mode from the **Preset Timing Modes** table below.

Preset Timing Modes

VGA 640 x 480 @ 60 Hz VGA 720 x 400 @ 70 Hz VESA 800 x 600 @ 85 Hz VESA 1024 x 768 @ 75 Hz VESA 1024 x 768 @ 85 Hz VESA 1280 x 1024 @ 75 Hz	VESA 1280 x 1024 @ 85 Hz VESA 1600 x 1200 @ 75 Hz VESA 1600 x 1200 @ 85 Hz VESA (GTF) 2048 x 1536 @ 60 Hz Macintosh 1152 x 870 @ 75 Hz
--	--

WARNING: Do NOT set the graphics card in your computer to exceed the maximum refresh rates; doing so may result in permanent damage to your monitor.

Timing Modes with Maximum Refresh Rates

2048 x 1536 NI @ 68 Hz 1920 x 1440 NI @ 73 Hz 1600 x 1200 NI @ 87 Hz 1280 x 1024 NI @ 101 Hz	1152 x 864 NI @ 118 Hz 1024 x 768 NI @ 132 Hz 800 x 600 NI @ 160 Hz 640 x 480 NI @ 160 Hz
---	--

(NI = Non Interlaced)

OSD Lock Settings


You have the option of using the On Screen Display (OSD) locking feature, OSD LOCK, to prevent unwanted changes to the current image settings.

- **OSD Lock:** Press and hold the [1] and [▼] buttons on the face of the monitor for 5 seconds. The message “OSD LOCK” will then display briefly, indicating that the OSD image settings are now locked.
- **OSD Unlock:** Press and hold the [1] and [▼] buttons again for 5 seconds. The message “OSD UNLOCK” will then display briefly, indicating that the OSD image settings are now unlocked.

Adjusting the Screen Image

Beginning with the Main Menu shown below, use the buttons on the front control panel to adjust the OnView® controls which display on the screen. The OnView controls are explained in the four steps at the top of the next page and are further explained on pages 8-10.

IMPORTANT: The monitor should be warmed up for 30 minutes prior to making any adjustments.

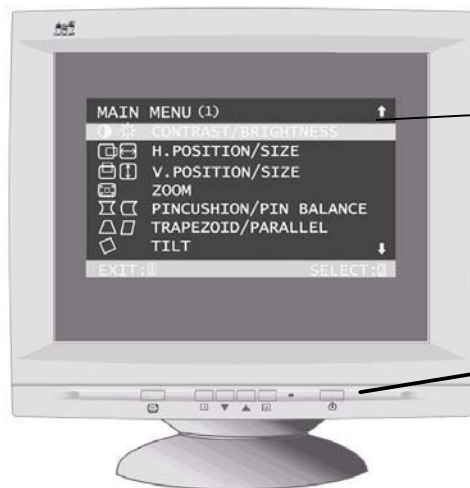


Main Menu with OnView controls

Front Control Panel

Zoom expands and contracts the entire screen image

Power Light

Power On/Off

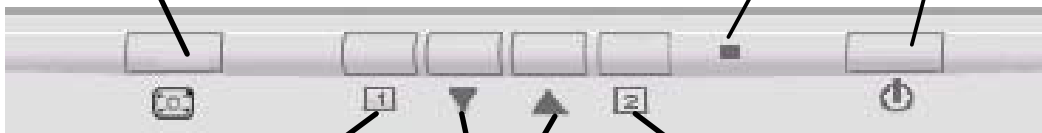

Displays Main Menu;
also saves changes/
exits Main Menu.

Scrolls through menu
options and adjusts
the displayed control.

Displays control screen for
highlighted control (or pair
of controls). Also, toggles
between pairs of controls on
some control screens.

To adjust the screen image:

- 1 To display the Main Menu (parts 1-3 shown below), press button [1].



With Main Menu highlighted, as shown on the left, press button [2] to toggle to the next Main Menu.

With a control highlighted, button [2] displays a control screen for making adjustments.














- 2 To select a control you want to adjust, press the arrow buttons on the front control panel of your monitor (▼▲) and scroll through the choices. When the control you want to adjust is highlighted, press button [2].

NOTE: Some controls on the Main Menu are listed in pairs, such as Contrast/Brightness. Press button [2] to toggle between control pairs after displaying a control screen.

- 3 To adjust the selected control, press the arrow buttons (▼▲).
- 4 To save the control setting and Exit the menu, press button [1] *twice*.

Main Menu Controls

The menu items shown below can be adjusted by using the arrow buttons (▲▼) on the front of your monitor.

Control	Explanation
	Contrast adjusts the difference between the image background (black level) and the foreground (white level). <i>Shortcut:</i> Before displaying the Main Menu, press ▼ or ▲ to display the Contrast/Brightness control screen.
	Brightness adjusts the background black level of the screen image.
	Horizontal Position moves the screen image left or right.
	Horizontal Size adjusts the width of the screen image.
	Vertical Position moves the screen image up or down.
	Vertical Size adjusts the height of the screen image.
	Zoom expands and contracts the entire screen image.
	Pincushion straightens curves along the vertical edges of the screen image that bow inward or outward.
	Pin Balance straightens curves along the vertical edges of the screen image that bow in the same direction.
	Trapezoid adjusts the top and bottom of the screen image until they have equal length.
	Parallel slants the vertical edges of the screen image until they are parallel.
	Tilt rotates the entire screen image.
	Degauss removes the build-up of magnetic fields that can cause irregular colors to appear around the edges of screen images. Your monitor will degauss automatically each time you power it on.

Control	Explanation (Continued)
---------	-------------------------

To degauss your monitor **manually**, select Degauss on the on-screen menu and press button [2].

Important: *Do not degauss repeatedly. Doing so can be harmful to the monitor.* Wait at least 20 minutes before using this control again.



ViewMeter® displays information about the video signal coming from your computer's graphics card. This includes the **refresh rate** (or Vertical Frequency) and the **scan rate** (or Horizontal Frequency).



ViewMatch® Color provides several color options: three preset color temperatures and User Color, which allows you to adjust red (R), green (G), and blue (B). The factory setting for this product is 9300K (9300 Kelvin).

9300K — Adds blue to the screen image for cooler white (often used in office settings with fluorescent lighting).

6500K — Adds red to the screen image for warmer white and richer red.

5000K — Adds blue and green to the screen image.

User Color — Individual adjustments for red and blue (green fixed).



OSD Position allows you to move the on-screen menus and control screens.



Moire reduces interference patterns that appear as ripples, waves, or unwanted background color textures. Interference patterns of this type are most noticeable when viewing images having closely spaced lines or finely detailed patterns.













Language allows you to choose from among several languages for the menus and control screens: English, French, German, Italian, Spanish, Traditional Chinese and Simplified Chinese.



H. Convergence (Horizontal Convergence) adjusts vertical color alignment. Use this control when red or blue borders are present around the vertical segments of black letters on a white background.



V. Convergence (Vertical Convergence) adjusts horizontal color alignment. Use this control when red or blue borders are present around the horizontal segments of black letters on a white background.

Control	Explanation (Continued)
	<p>V. Linear (Vertical Linearity Center) adjusts the vertical distortion at the center of the screen image.</p> <p>NOTE: Vertical Linearity Center is an advanced control and should be used for setup and calibration only.</p>
	<p>V. Linear Sym (Vertical Linearity Symmetry) minimizes the distortion (squeezing or stretching) images between the top and bottom of the screen image.</p> <p>NOTE: Vertical Linearity Symmetry is an advanced control and should be used for setup and calibration only.</p>
	<p>Top Hooking straightens the top corners of the screen image.</p>
	<p>Bottom Hooking straightens the bottom corners of the screen image.</p>
	<p>Purity adjusts the uneven color of the overall image. For example, if one area of a color appears darker than another area, first use the degauss feature. If color is still uneven, use the purity control.</p>
	<p>Top Left (Purity) adjusts uneven color at top left corner of screen.</p>
	<p>Top Right (Purity) adjusts uneven color at top right corner of screen.</p>
	<p>Bottom Left (Purity) adjusts uneven color at bottom left corner of screen.</p>
	<p>Bottom Right (Purity) adjusts uneven color at bottom right corner of screen.</p>
	<p>Data Recall returns adjustments to the original factory settings if the product is operating in a Preset Timing Modes (see the table at the bottom of page 11).</p> <p><i>Exception:</i> This control does not affect changes made with the User Color control.</p>

Other Information

Specifications

CRT	Type	22" (20.0" viewable diagonal area), 0.24 mm aperture grill pitch, 90° deflection
	Phosphor Glass surface	RGB, medium-short persistence Anti-reflection, anti-static coating Standard light transmission rate = 38.4%
Input Signal	Video Sync	RGB Analog (0.7 Vp-p, 75 Ohms) f _H : 30-110 kHz, f _V : 50-160 Hz HV Separate (TTL), Composite, Sync on Green
Compatibility	PC Macintosh ¹	VGA up to 2048 x 1536 Power Macintosh (may require Macintosh adapter)
Timing Modes with Maximum Refresh Rates²		2048 x 1536 NI @ 68 Hz 1280 x 1024 NI @ 101 Hz 1920 x 1440 NI @ 73 Hz 1152 x 864 NI @ 118 Hz 1856 x 1392 NI @ 75 Hz 1024 x 768 NI @ 132 Hz 1792 x 1344 NI @ 78 Hz 800 x 600 NI @ 160 Hz 1600 x 1200 NI @ 87 Hz 640 x 480 NI @ 160 H
Power	Voltage	AC 90-264V (auto switch) 50/60 Hz
Display Area	Default Full scan	396 mm (H) x 297 mm (V) (Typical) 400 mm (H) x 300 mm (V) (Depends on signal timing)
Operating Conditions	Temperature Humidity Altitude	32° F to 104° F (0° C to +40° C) 5% to 95% (no condensation) To 10,000 feet
Storage Conditions	Temperature Humidity Altitude	-40° F to +140° F (-40° C to +60° C) 5% to 95% (no condensation) To 40,000 feet
Dimensions	Physical (monitor)	500 mm (W) x 505 mm (H) x 511.5 mm (D) 19.7" (W) x 19.9" (H) x 20.2" (D)
Weight	Net	31.0 kg (68.4 lb.) (monitor only)
Regulations	UL1950, cUL, DHHS, FCC, ICES-003, Class-B, (EPA) Energy Star, CE, CB, PCBC, TUV/GS, VCCI, BSMI, C-Tick, CCC, TUV/Ergo, NEMKO, SEMKO, DEMKO, FIMKO, GOST-R, PSB, TCO95	
Power Saving Modes	On DPMS™ Standby DPMS™ Suspend DPMS™ Off	< 170W NORMAL (Green LED) < 15W (Orange LED) < 15W (Orange LED) < 5W (Flashing Orange LED)

¹ Macintosh models prior to G3 require a Macintosh adapter. To order a Macintosh adapter, contact ViewSonic Customer Support. You will need to provide serial number of the product.

² **Warning:** Do NOT set the graphics card in your computer to exceed these Maximum Refresh Rates; doing so could result in permanent damage to the monitor.

Troubleshooting

No power

- Make sure power button (or switch) is ON.
- Make sure A/C power cord is securely connected to the back of the monitor and to a power outlet.
- Plug another electrical device (like a radio) into the power outlet to verify that the outlet is supplying proper voltage.

Power on but no screen image

- Make sure the video cable supplied with the monitor is tightly secured to the video output port on the back of the computer. If the other end of the video cable is not attached permanently to the monitor, tightly secure it to the monitor.
- Adjust brightness and contrast.
- Verify whether an adapter is required for proper signal continuity between graphics card and monitor.

Flickering

- Not enough power supplied. Connect the monitor to a different outlet. If using a surge protector, reduce the number of devices plugged in.
- Check the ViewMeter® from the main menu to verify the refresh rate (vertical frequency) is 75 Hz or higher. See “Specifications” on page 12.
- Remove any devices from the area around the monitor that emit magnetic fields such as radios, surge protectors, unshielded speakers, fluorescent lights, AC power converters, desk fans, etc.
- Make sure the graphics card in your computer can use non-interlaced mode at the desired frequencies. To enable your graphics card to support higher refresh rates, try selecting fewer colors or running lower resolutions.

Wrong or abnormal colors

- If any colors (red, green, or blue) are missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection.
- Connect the monitor to another computer.
- Select Degauss from the Main Menu. Do this only once.
- If you have an older graphics card, contact ViewSonic® Customer Support.

Entire screen image (rolls) vertically

- Make sure video input signals are within the monitor's specified frequency range.
- Try the monitor with another power source, graphics card, or computer system.
- Connect the video cable securely.

Control buttons do not work

- Press only one button at a time.

Customer Support

For technical support or product service, see the table below or contact your reseller.

NOTE: You will need the product serial number.

Country/ Region	Web site	T = Telephone F = FAX	Email
United States	viewsonic.com/ support	T: (800) 688-6688 F: (909) 468-1202	service.us@ viewsonic.com
Canada	viewsonic.com/ support	T: (800) 688-6688 F: (909) 468-1202	service.ca@ viewsonic.com
United Kingdom	viewsoniceurope.com	T: 0800 833 648 F: (01293) 643910	service.eu@ viewsoniceurope.com
Europe, Middle East, Baltic countries, and North Africa	viewsoniceurope.com	Contact your reseller	service.eu@ viewsoniceurope.com
Australia and New Zealand	viewsonic.com.au	T: +61 2 9929 3955 F: +61 2 9929 8393	service@ au.viewsonic.com
Singapore/India and Southeast Asia	viewsonic.com.sg	T: 65 273 4018 F: 65 273 1566	service@ sg.viewsonic.com
Other Asia/Pacific countries and Indian Peninsula	viewsonic.com.tw	T: 886 2 2246 3456 F: 886 2 8242 3668	service.ap@ viewsonic.com
South Africa	viewsonic.com/asia	T: 886 2 2246 3456 F: 886 2 8242 3668	service.ap@ viewsonic.com

Cleaning the Monitor

- MAKE SURE THE MONITOR IS TURNED OFF.
- NEVER SPRAY OR POUR ANY LIQUID DIRECTLY ONTO THE SCREEN OR CASE.

To clean the screen:

- 1 Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
- 2 If still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.

To clean the case:

- 1 Use a soft, dry cloth.
- 2 If still not clean, apply a small amount of a non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

DISCLAIMER

ViewSonic® does not recommend the use of any ammonia or alcohol-based cleaners on the monitor screen or case. Some chemical cleaners have been reported to damage the screen and/or case of the monitor. ViewSonic will not be liable for damage resulting from use of any ammonia or alcohol-based cleaners.

Limited Warranty

VIEWSONIC CRT MONITORS

What the warranty covers:

ViewSonic warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, **ViewSonic** will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:

ViewSonic® color CRT monitors, including the display tubes, are warranted for three (3) years for all parts and three (3) years for all labor from the date of the first consumer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b. Repair or attempted repair by anyone not authorized by **ViewSonic**.
 - c. Any damage of the product due to shipment.
 - d. Removal or installation of the product.
 - e. Causes external to the product, such as electrical power fluctuations or failure.
 - f. Use of supplies or parts not meeting **ViewSonic**'s specifications.
 - g. Normal wear and tear.
 - h. Any other cause which does not relate to a product defect.
3. Removal, installation, and set-up service charges.

How to get service:

1. **For information about receiving service under warranty, contact ViewSonic Customer Support.** You will need to provide your product's serial number.
2. To obtain service under warranty, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product freight prepaid in the original container to an authorized **ViewSonic** service center or **ViewSonic**.
4. For additional information or the name of the nearest **ViewSonic** service center, contact **ViewSonic**.

Limitation of implied warranties:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages:

VIEWSONIC'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. VIEWSONIC SHALL NOT BE LIABLE FOR:

1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
3. ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

Effect of state law:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Sales outside the U.S.A. and Canada:

For warranty information and service on **ViewSonic** products sold outside of the U.S.A. and Canada, contact **ViewSonic** or your local **ViewSonic** dealer.

ViewSonic CRT Monitor Warranty (V3.0)

Release Date: 03-26-2002

Appendix

Power Cord Safety Guidelines

CAUTION: Use a power cable that is properly grounded. Always use the AC cords listed for each country. In other areas, use an AC cord which meets local safety standards.

USA..... UL	Switzerland SEV
Canada..... CSA	Britain BASE/BS
Germany VDE	Japan Electric Appliance Control Act

AC PLUG CORD PRECAUTIONS FOR THE UNITED KINGDOM

FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET THEN THE PLUG SHOULD BE CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO AN APPROPRIATE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

WARNING: THIS APPLIANCE MUST BE EARTHED.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

Green-and-Yellow:	Earth
Blue:	Neutral
Brown:	Live

If the coloured wires of the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the Earth symbol or coloured GREEN or GREEN-AND-YELLOW.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

IMPORTANT NOTICE CONCERNING POWER CORD SELECTION

The power cord set for this unit has been enclosed and has been selected according to the country of destination and must be used to prevent electric shock. Use the following guidelines if it is necessary to replace the original cord set, or if the cord set is not enclosed.

The female receptacle of the cord set must meet IEC-60320 requirements and will look like (Figure A1 below):


Figure A1



For the United States and Canada

In the United States and Canada the male plug is a NEMA5-15 style (Figure A2), UL Listed, and CSA Labeled. For units which are mounted on a desk or table, type SVT or SJT cord sets may be used. For units which sit on the floor, only SJT type cord sets may be used. The cord set must be selected according to the current rating for your unit. Please consult the table below for the selection criteria for power cords used in the United States and Canada.

Figure A2



Cord Type	Size of Conductors in Cord	Maximum Current Rating of Unit
SJT	18 AWG 16 AWG 14 AWG	10 Amps 12 Amps 12 Amps
SVT	18 AWG 17 AWG	10 Amps 12 Amps

For European Countries

In Europe you must use a cord set which is appropriate for the receptacles in your country. The cord set is HAR-Certified, and a special mark that will appear on the outer sheath, or on the insulation of one of the inner conductors.

If you have any questions concerning which proper power cord to use, please consult with the dealer from whom you have purchased the product

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning

To assure continued FCC compliance, the user must use grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. If a BNC cable is going to be used, use only a shielded BNC(5) cable. Also, any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Notice for Germany

The x-rays generated in this unit are shielded sufficiently. High voltage: Max. 30 kV. Also, for ergonomic reasons, we recommend that you do not display blue characters on a dark background. Doing so may produce insufficient contrast that could lead to eye strain.

Notice for Japan

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

CE Conformity



The device complies with the requirements of the EEC directive 89/336/EEC as amended by 92/31/EEC and 93/68/EEC Art.5 with regard to "Electromagnetic compatibility," and 73/23/EEC as amended by 93/68/EEC Art.13 with regard to "Safety."

ViewSonic® Corporation