


SCAG[®]

POWER EQUIPMENT

MODEL SZC

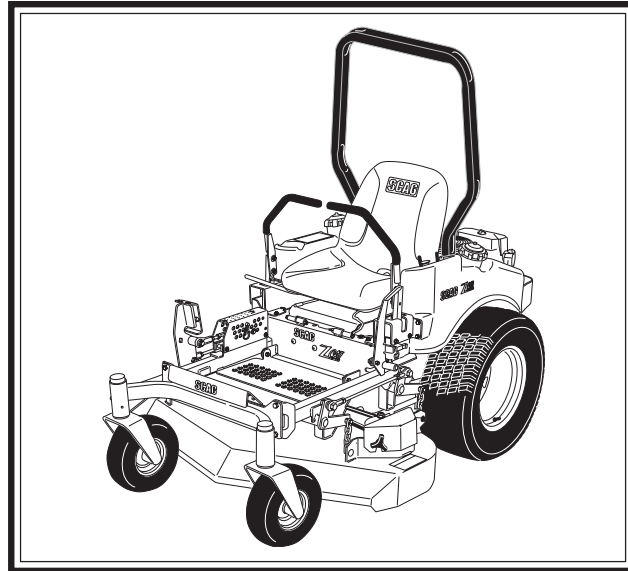

THIS MANUAL CONTAINS THE OPERATING INSTRUCTIONS AND SAFETY INFORMATION FOR YOUR SCAG MOWER. READING THIS MANUAL CAN PROVIDE YOU WITH ASSISTANCE IN MAINTENANCE AND ADJUSTMENT PROCEDURES TO KEEP YOUR MOWER PERFORMING TO MAXIMUM EFFICIENCY. THE SPECIFIC MODELS THAT THIS BOOK COVERS ARE CONTAINED ON THE INSIDE COVER. BEFORE OPERATING YOUR MACHINE, PLEASE READ ALL THE INFORMATION ENCLOSED.

© 2004
SCAG POWER EQUIPMENT
DIVISION OF METALCRAFT OF MAYVILLE, INC.

PART NO. 03149
PRINTED 9/04
PRINTED IN USA

OPERATOR'S MANUAL



WARNING:

FAILURE TO FOLLOW SAFE OPERATING PRACTICES MAY RESULT IN SERIOUS INJURY.

- * Keep all shields in place, especially the grass discharge chute.
- * Before performing any maintenance or service, stop the machine and remove the spark plug wire and ignition key.
- * If a mechanism becomes clogged, stop the engine before cleaning.
- * Keep hands, feet and clothing away from power-driven parts.
- * Read this manual completely as well as other manuals that came with your mower.
- * Keep others off the tractor (only one person at a time)

REMEMBER - YOUR MOWER IS ONLY AS SAFE AS THE OPERATOR!

Hazard control and accident prevention are dependent upon the awareness, concern, prudence, and proper training of the personnel involved in the operation, transport, maintenance, and storage of the equipment.

This manual covers the operating instructions
and illustrated parts list for:

SZC36A-17KA	with a serial number of A4200001 to A4299999
SZC36A-19KA	with a serial number of A9800001 to A9899999
SZC42A-19KA	with a serial number of A4400001 to A4499999
SMZC-36A	with a serial number of A4600001 to A4699999
SMZC-42A	with a serial number of A4700001 to A4799999

Always use the entire serial number listed on the serial number tag when referring to this product.



TABLE OF CONTENTS

SUBJECT	PAGE
Section 1 - General Information	
1.1 Introduction	1
1.2 Directional Reference	1
1.3 Servicing the Engine and Drive Train Components	1
1.3 Symbols	2-3
Section 2 - Safety Information	
2.1 Introduction	4
2.2 Signal Words	4
2.3 Before Operation Considerations	4
2.4 Operation Considerations	5
2.5 Roll Over Protection System (Optional)	6
2.6 Maintenance Considerations	8
2.7 Safety and Instructional Decals	9
Section 3 - Specifications	10-11
Section 4 - Operating Instructions	
4.1 Controls and Instrument Identification	12
4.2 Safety Interlock System	13
4.3 Initial Run-In Procedures	14
4.4 Starting the Engine	14
4.5 Ground Travel and Steering	14
4.6 Engaging the Deck Drive	15
4.7 Hillside Operation	16
4.8 Parking the Mower	16
4.9 After Operation	16
4.10 Removing Clogged Material	17
4.11 Moving Mower with Engine Stopped	17
4.12 Recommendations for Mowing	17
4.13 Adjusting Cutting Height	17
Section 5 - Troubleshooting Cutting Conditions	19-21

TABLE OF CONTENTS (CONT'D)

SUBJECT	PAGE
Section 6 - Adjustments	
6.1 Parking Brake Adjustment	22
6.2 Travel Adjustments	23
6.3 Throttle Control and Choke Adjustments	24
6.4 Belt Adjustment	24
6.5 Belt Alignment	24
6.6 Cutter Deck Adjustments	25
Section 7 - Maintenance	
7.1 Maintenance Chart	28
7.2 Lubrication Fitting Points	29
7.3 Hydraulic System	31
7.4 Engine Oil	32
7.5 Engine Fuel System	32
7.6 Engine Air Cleaner	33
7.7 Battery	33
7.8 Drive Belts	35
7.9 Cutter Blades	35
7.10 Tires	36
7.11 Body, Deck and Upholstery	36
Section 8 - Replacement Parts	
Notes	37
SZWC36A, 42A Cutter Deck	38-39
Cutter Deck Controls	40-41
Sheet Metal Components	42-43
SZC Roll Over Protection System	44-45
Drive System Components	46-47
Engine and Attaching Parts - Kohler	48-49
Steering Components	50-51
Brake Components	52-53
Fuel and Hydraulic System	54-55
Electrical System	56-57
Hydraulic Pump (BDP-10A)	48-59
Replacement Decals	60-61
Electrical Schematic (Kohler & Kawasaki)	62
Warranty Statement	Inside Back Cover

GENERAL INFORMATION

1.1 INTRODUCTION

Your mower was built to the highest standards in the industry. However, the prolonged life and maximum efficiency of your mower depends on you following the operating, maintenance and adjustment instructions in this manual.

If additional information or service is needed, contact your Scag Power Equipment Dealer.

We encourage you to contact your dealer for repairs. All Scag dealers are informed of the latest methods to service this equipment and provide prompt and efficient service in the field or at their service shop. They carry a full line of Scag service parts.

USE OF OTHER THAN ORIGINAL SCAG REPLACEMENT PARTS WILL VOID THE WARRANTY.

When ordering parts, always give the model and serial number of your tractor. The serial number plate is located where shown in Figure 1-1.

SERIAL NUMBER
PLATE LOCATION

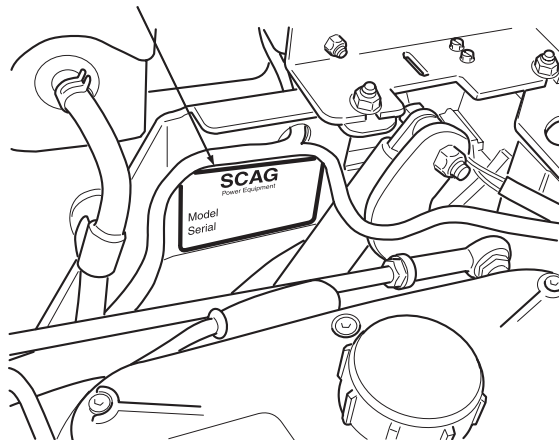


Figure 1-1 Tractor Serial Number Plate Location

USE ONLY SCAG APPROVED ATTACHMENTS AND ACCESSORIES.

Attachments and accessories manufactured by companies other than Scag Power Equipment are not approved for use on this machine.

Scag approved attachments and accessories:

GC-4D (p/n 9038)

GC-4F (p/n 9040)

Mulch Plate (p/n)

Hurricane Mulch (p/n 9272, 9273)

Blade Buddy (p/n 9212)

STC Lights (p/n 9274)

WARNING:

For pictorial clarity, some illustrations and figures in this manual may show shields, guards or plates open or removed. Under no circumstances should your mower be operated without these devices in place.

All information is based upon product information available at the time of approval for printing. Scag Power Equipment reserves the right to make changes at any time without notice and without incurring any obligation.

1.2 DIRECTION REFERENCE

The “Right” and “Left”, “Front” and “Rear” of the machine are referenced from the operator’s right and left when seated in the normal operating position and facing the forward travel direction.

1.3 SERVICING THE ENGINE AND DRIVE TRAIN COMPONENTS











The detail servicing and repair of the engine and hydraulic pumps are not covered in this manual; only routine maintenance and general service instructions are provided. For service of these components during the limited warranty period, it is important to contact your Scag dealer or find a local authorized servicing agent of the component manufacturer. Any unauthorized work done on these components during the warranty period may void your warranty.

ISO Symbols



CE Mark

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Choke		Transmission
	Parking Brake		Spinning Blade
	On/Start		Spring Tension on Idler
	Off/Stop		Oil
<div> <p>Falling Hazard</p> </div>			

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Fast		Slow
	Continuously Variable - Linear		Cutting Element - Basic symbol
	Pinch Point		Cutting Element - Engage
	Hourmeter/Elapsed Operating Hours		Cutting Element - Disengage
	Thrown Object Hazard Keep Bystanders Away		Read Operator's Manual

SAFETY INFORMATION

2.1 INTRODUCTION

Your mower is only as safe as the operator. Carelessness or operator error may result in serious bodily injury or death. Hazard control and accident prevention are dependent upon the awareness, concern, prudence, and proper training of the personnel involved in the operation, transport, maintenance and storage of the equipment. Make sure every operator is properly trained and thoroughly familiar with all of the controls before operating the mower. The owner/user can prevent and is responsible for accidents or injuries occurring to themselves, other people or property.

READ THIS OPERATOR'S MANUAL BEFORE ATTEMPTING TO START YOUR MOWER.

A replacement manual is available from your authorized Scag Service Dealer or by contacting Scag Power Equipment, Service Department at P.O. Box 152, Mayville, WI 53050 or via the Internet at www.scag.com. The manual for your machine can be downloaded by using the model and serial number or use the contact form to make your request. Please indicate the complete model and serial number of your Scag product when requesting replacement manuals.

2.2 SIGNAL WORDS



This symbol means **“Attention! Become Alert! Your Safety is Involved!”** The symbol is used with the following signal words to attract your attention to safety messages found on the decals on the machine and throughout this manual. The message that follows the symbol contains important information about safety. To avoid injury and possible death, carefully read the message! Be sure to fully understand the causes of possible injury or death.

Signal Word:

It is a distinctive word found on the safety decals on the machine and throughout this manual that alerts the viewer to the existence and relative degree of the hazard.

DANGER:

The signal word “DANGER” denotes that an extremely hazardous situation exists on or near the machine that could result in high probability of death or irreparable injury if proper precautions are not taken.

WARNING:

The signal word “WARNING” denotes that a hazard exists on or near the machine that can result in injury or death if proper precautions are not taken.

CAUTION:

The signal word “CAUTION” is a reminder of safety practices on or near the machine that could result in personal injury if proper precautions are not taken.

Your safety and the safety of others depends significantly upon your knowledge and understanding of all correct operating practices and procedures of this machine.

2.3 BEFORE OPERATION CONSIDERATIONS

1. **NEVER** allow children to operate this riding mower. Do not allow adults to operate this machine without proper instructions.
2. **DO NOT** mow when children and/or others are present. Keep children out of the mowing area and in the watchful care of a responsible adult other than the operator. Be alert and turn machine off if a child enters the area.
3. Clear the area to be mowed of objects that could be picked up and thrown by the cutter blades.
4. **DO NOT** carry passengers.
5. **DO NOT** operate the machine under the influence of alcohol or drugs.

Section 2

2.3 BEFORE OPERATION CONSIDERATIONS (CONT'D)

6. If the operator(s) or mechanic(s) cannot read English or Spanish, it is the owner's responsibility to explain this material to them.
7. **DO NOT** wear loose fitting clothing. Loose clothing, jewelry or long hair could get tangled in moving parts. Do not operate the machine wearing shorts; always wear adequate protective clothing including long pants. Wearing safety glasses, safety shoes and a helmet is advisable and is required by some local ordinances and insurance regulations.
8. Operator hearing protection is recommended, particularly for continuous operation of the mower. Wear suitable hearing protection. Prolonged exposure to loud noise can cause hearing impairment or loss.
9. Keep the machine and attachments in good operating condition. Keep all shields and safety devices in place. If a shield, safety device or decal is defective or damaged, repair or replace it before operating the machine.

WARNING:

This machine is equipped with an interlock system intended to protect the operator and others from injury. This is accomplished by preventing the engine from starting unless the deck drive is disengaged, the parking brake is on, the steering control levers are in the neutral position and the operator is in the seat. The system shuts off the engine if the operator leaves the seat with the deck drive engaged and/or the steering control levers are not in the neutral position and/or the parking brake is not engaged. Never operate equipment with the interlock system disconnected or malfunctioning.

10. Be sure the interlock switches are functioning correctly.
11. Fuel is flammable; handle it with care. Fill the fuel tank outdoors. Never fill it indoors. Use a funnel or spout to prevent spillage. Clean up any spillage before starting the engine.

12. **DO NOT** add fuel to a running or hot engine. Allow the engine to cool for several minutes before adding fuel.
13. Keep flammable objects (cigarettes, matches, etc.), open flames and sparks away from the fuel tank and fuel container.
14. Equipment must comply with the latest requirements per SAE J137 and/or ANSI/ASAE S279 when driven on public roads.

-NOTE-

If the mower is driven on public roads, it must comply with state and local ordinances as well as SAE J137 and/or ANSI / ASAE S279 requirements. Contact your local authorities for regulations and equipment requirements.

15. **DO NOT** operate without the side discharge chute installed and in the down position or with an optional grass catcher or mulch plate completely installed.
16. Check the blade mounting bolts at frequent intervals for proper tightness.
17. Make sure all hydraulic fluid connections are tight and all hydraulic hoses and lines are in good condition before starting the machine.

2.4 OPERATION CONSIDERATIONS

1. Know the function of all controls and how to stop quickly.
2. Reduce speed and exercise extreme caution on slopes and in sharp turns to prevent tipping or loss of control. Be especially cautious when changing directions on slopes.

WARNING:

DO NOT operate on steep slopes. To check a slope, attempt to back up it (with the cutter deck down). If the machine can back up the slope without the wheels slipping, reduce speed and use extreme caution. ALWAYS FOLLOW OSHA APPROVED OPERATION.

2.4 OPERATION CONSIDERATIONS (CONT'D)

3. To prevent tipping or loss of control, start and stop smoothly, avoid unnecessary turns and travel at reduced speed.
4. When using any attachment, never direct the discharge of material toward bystanders or allow anyone near the machine while in operation.
5. Before attempting to start the engine, with the operator in the seat, disengage power to the cutter deck, place the steering control levers in the neutral position and engage the parking brake.
6. If the mower discharge ever plugs, shut off the engine, remove the ignition key, and wait for all movement to stop before removing the obstruction.

WARNING:

DO NOT use your hand to dislodge the clogged discharge chute. Use a stick or other device to remove clogged material.

7. Be alert for holes, rocks, roots and other hidden hazards in the terrain. Keep away from any dropoff. Beware of overhead obstructions (low limbs, etc.), underground obstacles (sprinklers, pipes, tree roots, etc.). Cautiously enter a new area. Be alert for hidden hazards.
8. Disengage power to cutter deck before backing up. Do not mow in reverse unless absolutely necessary and then only after observation of the entire area behind the mower.
9. **DO NOT** turn sharply. Use care when backing up.
10. Disengage power to cutter deck before crossing roads, walks or gravel drives.
11. Mow only in daylight or good artificial light.
12. **NEVER** raise the deck with the blades engaged.

13. Take all possible precautions when leaving the machine unattended, such as disengaging the mower, lowering the attachments, setting the parking brake, stopping the engine, and removing the key.
14. Disengage power to the attachments when transporting or when not in use.
15. The machine and attachments should be stopped and inspected for damage after striking a foreign object, and damage should be repaired before restarting and operating the machine.

CAUTION:

DO NOT touch the engine or the muffler while the engine is running or immediately after stopping. These areas may be hot enough to cause a burn.

WARNING:

DO NOT run the engine inside a building or a confined area without proper ventilation. Exhaust fumes are hazardous and could cause death.

16. Keep hands and feet away from cutter blades and moving parts. Contact can injure.
17. Use care when loading or unloading the machine onto a trailer or truck.
18. Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

2.5 ROLL OVER PROTECTION SYSTEM

WARNING:

Seat belt must be securely fastened during operation. Failure to do so could cause serious injury or loss of life.

This mower has been designed for good traction and stability under normal mowing conditions. However, caution must be used when traveling on slopes, especially when the grass is wet. Wet grass reduces traction and steering control.

Any or all parts of the Roll Over Protection System **MUST NOT** be removed. Failure to adhere to this guideline could result in injury or death.

The potential exposure of this seat belt to severe environmental conditions make it crucial to inspect the seat belt system regularly.

It is recommended that the seat belt be inspected on a daily basis for signs of damage. Any seat belt system that shows cuts, fraying, extreme or unusual wear, significant discoloration due to UV exposure, dirt or stiffness, abrasion to the seat belt webbing, or damage to the buckle, latch plate, hardware or any other obvious problem should be replaced immediately.

WARNING:

Failure to properly inspect and maintain the seat belt can cause serious injury or loss of life.

1. Check the full length of the seat belt webbing for cuts, wear, fraying, dirt and stiffness. See Figure 2-1.
2. Check the seat belt webbing in areas exposed to ultra violet rays from the sun or extreme dust or dirt. If the original color of the webbing in these areas is extremely faded and/or is packed with dirt, the physical strength of this webbing may have deteriorated. If this condition exists, replace the seat belt system.
3. Check the buckle and latch for proper operation and determine if the latch plate is excessively worn, deformed, or if the buckle is damaged or cracked. See Figure 2-1.

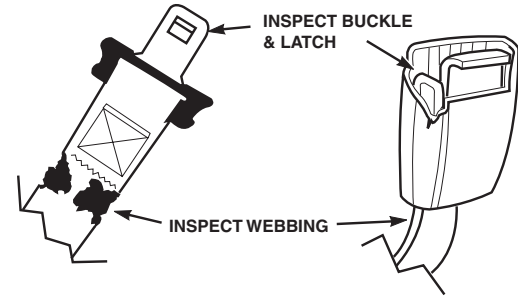


Figure 2-1 Seat Belt Inspection

WARNING:

Reduce speed when turning, operating on slopes, slick or wet surfaces. Allow extra distance to stop.

Stay off of slopes too steep for safe operation. To check a slope, attempt to back up it (with the cutter deck down). If the machine can not back up the slope without the wheels slipping, do not operate the machine on this slope.

ALWAYS travel up or down the slope whenever possible. Never across the slope.

DO NOT mow near drop-offs, ditches or embankments. The machine could suddenly roll over if a wheel goes over the edge or if the edge caves in.

Operate the machine smoothly, no sudden turns, starts or stops on a slope.

NEVER tow on slopes. The weight of the towed equipment may cause loss of traction and loss of control.

DO NOT permit untrained personnel to operate the machine.

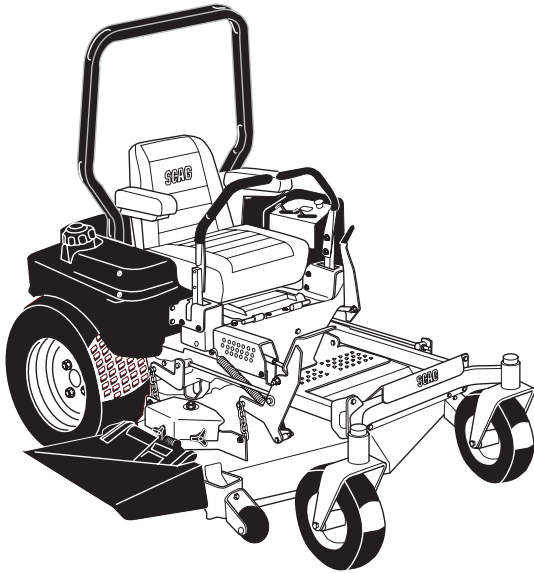



Figure 2-1. SZC With Optional Roll Over Protection System.

2.6 MAINTENANCE CONSIDERATIONS & STORAGE

1. Never make adjustments to the machine with the engine running unless specifically instructed to do so. If the engine is running, keep hands, feet, and clothing away from moving parts.
 2. Disengage drives, lower implement, set parking brake, stop engine and remove key or disconnect spark plug wire to prevent accidental starting of the engine when servicing or adjusting the machine. Wait for all movement to stop before adjusting, cleaning or repairing.
 3. Disconnect battery or remove spark plug wire before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect the positive first and the negative last.
 4. Keep all nuts, bolts and screws tight, to ensure the machine is in safe working condition. Check blade mounting bolts frequently to be sure they are tight.
 5. Do not change the engine governor settings or overspeed the engine. See the engine operator's manual for information on engine settings.
 6. To reduce fire hazard, keep the cutting units, drives muffler and engine free of grass, leaves, excessive grease, oil and dirt.
 7. Park the machine on level ground and engage the parking brake.
 8. **NEVER** allow untrained personnel to service the machine.
 9. Use care when checking blades. Wrap the blade(s) or wear gloves and use caution when servicing blades. Only replace blades. **NEVER** straighten or weld blades.
 10. Keep all parts in good working condition. Replace all worn or damaged decals.
 11. Use jack stands to support components when required.
 12. Carefully release pressure from components with stored energy.
-  WARNING:**

Hydraulic fluid is under high pressure. Keep body and hands away from pinholes or nozzles that eject hydraulic fluid under high pressure. If you need service on your hydraulic system, please see your authorized Scag dealer. If hydraulic fluid is injected into the skin, it must be surgically removed within a few hours by a doctor or gangrene may result.
13. Let the engine cool before storing.
 14. **DO NOT** store the machine near an open flame.
 15. Shut off fuel while storing or transporting.
 16. **DO NOT** store fuel near flames or drain indoors.
 17. Charge batteries in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.

Section 2

2.7 SAFETY AND INSTRUCTIONAL DECALS




482285




481039




482100

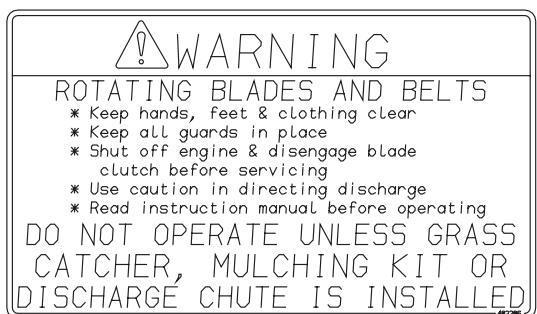


482286

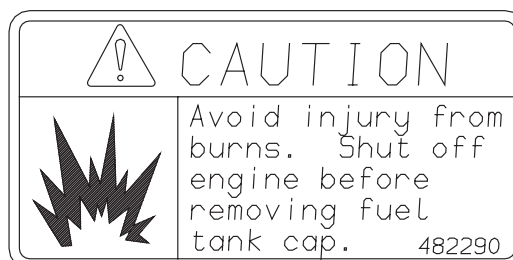


482290

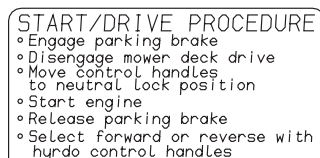


483023

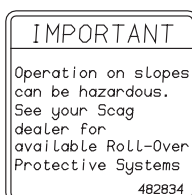


482834

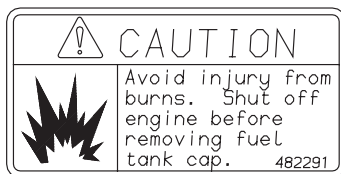

482291

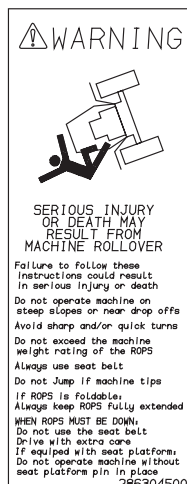

NEUTRAL ADJUSTMENT



With an operator in the seat, engine running, control lever in neutral and the parking brake disengaged - adjust control linkage. Loosen jam nuts. If wheel rotates forward, adjust turnbuckle CW. If wheel rotates rearward, adjust turnbuckle CCW. Adjust until drive wheel stops turning. Tighten jam nuts. Repeat procedure until proper Neutral Adjustment is obtained.

TRACKING ADJUSTMENT

If the machine pulls to the right, adjust LH control linkage CW to slow left wheel. If the machine pulls to the left adjust RH control linkage CW to slow right wheel. Readjust neutral if necessary.

FREE WHEEL OPERATION

To move machine without running the engine, rotate both dump valves located at the LH side of the pumps CCW 1/2 turn to "freewheel" positions. Return dump valves to original position to operate the mower. Tighten to 7-10 ft-lbs.

HYDRAULIC FLUID LEVEL

Check hydraulic fluid level while fluid is cool. Fluid level should be between add & full marks on the dipstick. Fill with SAE 20W50 motor oil only.

IMPORTANT

Do not overfill. Room for hot fluid expansion must be allowed or resulting expansion may cause leaks in the system.

483061

483061

SPECIFICATIONS

3.1 ENGINE

General Type	Heavy Duty Industrial/Commercial Gasoline
Brand	Kawasaki
Horsepower	17HP (Spec.#) (Scag Model SZC36A-17KA) 19HP (Spec. #) (Scag Model SZC36A-19KA, SZC42A-19KA) Type 4 Cycle Gasoline, Twin Cylinder, Vertical Shaft
Cylinders	2 with Cast Iron Sleeves
Governor	Mechanical Type with Variable Speed Control Set At 3600 RPM
Idle Speed	1550 RPM - Kawasaki
Kawasaki Fuel Pump Group	Pulse Fuel Pump with In-Line Fuel Filter, Fixed Jet Carburetor.
Fuel	Non-Leaded Gasoline with a Minimum Octane Rating of 87
Oil Pump Group	Positive Displacement Gerotor™ Oil Pump
Starter	Electric Starting with Solenoid Shift Starter
Belts:	Kevlar cord. Self-adjusting, Self-tightening
Pump Drive Belt	Scag Part Number - 483000

3.2 ELECTRICAL

Battery	12 Volt
Charging System	Alternator
Charging Output	12 Volt, 13 Amp - Kawasaki
System Polarity	Negative Ground
Starter	12 Volt Electric Ring Gear Type, Key and Solenoid Operated Interlock
Switches	Seat, Neutral Control, Mower Engagement (BBC), Parking Brake
Instrument Panel	Key Switch, Throttle Lever, Manual Choke, PTO Switch
Fuses	Two (2) 20 Amp

3.3 TRACTOR

Drive System	Hydraulic Drive with Two Variable Displacement Pumps and Two Cast-iron High Torque Motors
Hydrostatic Pumps	Two Hydro-Gear™ BDP 10A Pumps with Dump Valves for movement without running the engine
Drive Wheel Motors	Two Hydro-Gear™ Cast-Iron High Torque Motors
Steering/Travel Control	Twin Lever Fingertip Steering Control with Individual Control to Each Wheel with Gas Spring Dampers
Parking Brake	Lever Actuated Linkage to Brakes on Both Drive Wheel Axles
Wheels:	
(2) Front Caster	11 X 4-5 Four-Ply w/tapered roller bearing pivots
(2) Drive - (48"-52" Deck)	23 X 8.50 X 12 (SZC36A) 23 X 9.50 X 12 (SZC42A) Four-Ply Pneumatic Tubeless, Radius Edge
Fuel Tanks	Dual 2.5-Gallon Seamless Polyethylene Tanks with large opening and Fuel Cap
Tire Pressure:	
Front Caster	25 PSI
Drive	12 PSI
Seat	Molded, Cushioned

Section 3

3.3 TRACTOR (CONT'D)

-NOTE-

Travel Speed:	
Forward	0-7.5 MPH
Reverse	0-5 MPH

The machine will travel at 7.5 mph for transport purposes. For best cutting performance the forward travel speed should be adjusted depending upon the cutting conditions.

3.4 CUTTER DECK

Type:	Floating, Adjustable, Anti-scalping, Hybrid Design Combines Out-front and Belly-mount Designs
Construction:	Dual-plate deck construction, top of deck consists of two steel plates 10-gauge and 7 gauge, 7-gauge (3/16") deck skirt.
True Cutting Width:	36" (91.44cm), 42" (106.68cm)
Cutting Height Adjustment:	Foot Operated Lever Adjustment from Operator's Seat, 1.50" to 5.5" in 1/4" increments
Cutter Blades:	197 Thick, Milled Edge, Wear Resistant Marbain™
Blade Engagement:	Electric Blade Engagement Clutch with Control Panel Switch Connected to the Cutter Deck via through a Belt.
Discharge Opening:	Extra Wide Discharge Opening with Spring Loaded Discharge Chute and Turbo Baffle
Spindles:	Heavy-duty 1-1/8" Top Dimension Spindle Shaft, Cast Housing, Taper Roller Bearing, Low Maintenance with Top Access Grease Fitting and Grease Overfill Relief Poppet
Spindle Pulleys:	Cast Iron (SZC36A), Split Steel (SZC42A) with Easily Removed Taper Hubs
Cutter Deck Belts:	B-section with Kevlar Cord. Self-adjusting, Self-tightening
SMZC36	Scag Part Numbers - 483001
SMZC42	Scag Part Numbers - 483002
Electric Clutch Type	Ogura Heavy Duty PTO Clutch Brake

3.6 HYDRAULIC SYSTEM

Hydraulic Oil Filter	10 Micron Spin-on Element Type
Hydraulic Reservoir	Cast Aluminum; 2 Quart Capacity

3.7 PRODUCTIVITY

The following chart will aid you in determining how many acres your Scag mower will cut per day.

The chart is an estimate based on 8 hours per day cutting time at 6 MPH with a 20% allowance for overlap and turns.

Cutting Width:	36"	42"
Acres Per Day:	14	16

OPERATING INSTRUCTIONS



CAUTION:

Do not attempt to operate this mower unless you have read this manual. Learn the location and purpose of all controls and instruments before you operate this mower.

4.1 CONTROLS AND INSTRUMENT IDENTIFICATION

Before operating the mower, familiarize yourself with all mower and engine controls. Knowing the location, function and operation of these controls is important for safe and efficient operation of the mower.

1. **Ignition Switch (Figure 4-1).** Used to start the engine and has three positions; OFF, ON, and START.
2. **Mower Deck Switch (Figure 4-1).** Used to engage and disengage the mower drive system. Pulling up on the switch will engage the deck drive. Pushing down on the switch will disengage the deck drive.
3. **Engine Choke Control (Figure 4-1).** Used to start a cold engine.
4. **Engine Throttle Control (Figure 4-1).** Used to control the engine speed. Pushing the lever forward increases engine speed. Pulling the lever back decreases engine speed. Full backward position is the IDLE position. Full forward is the cutting position.

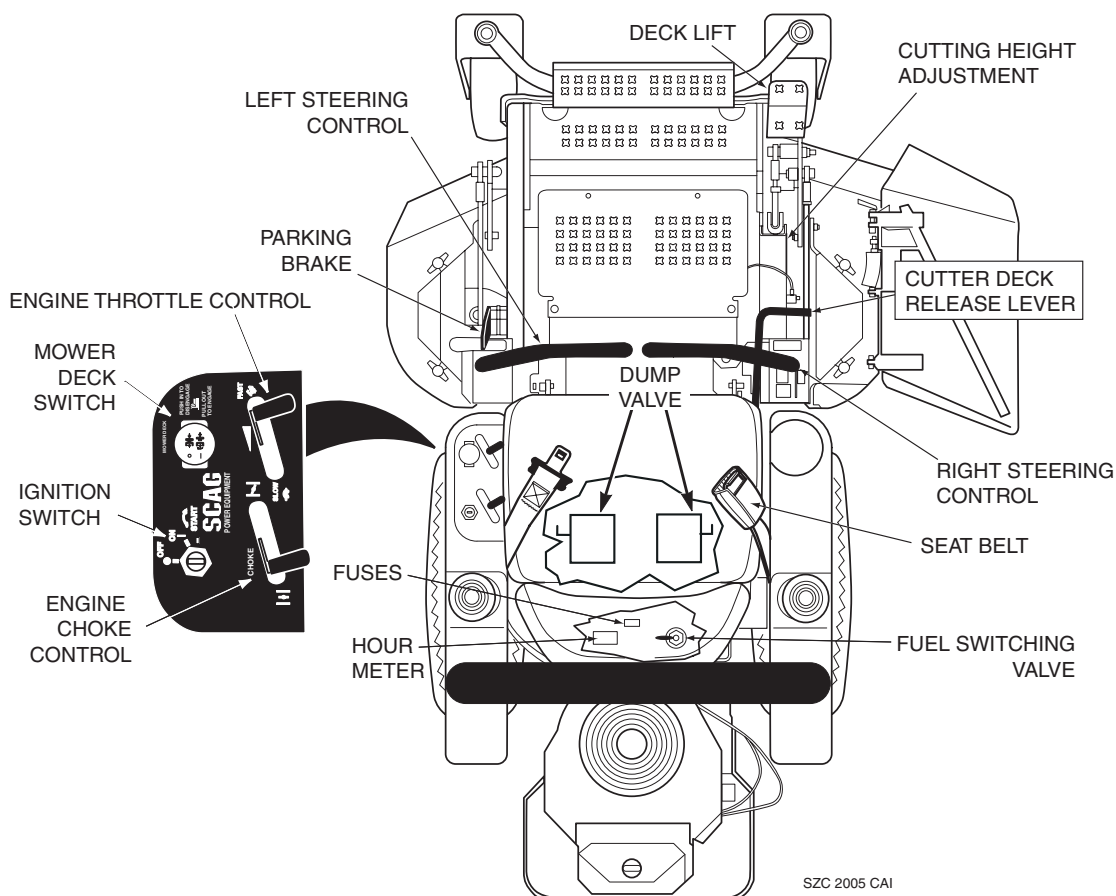


Figure 4-1 Controls and Instruments

5. **Hourmeter (Figure 4-1).** Indicates the number of hours the engine has been operated. It operates whenever the ignition key switch is in the ON position. It can be used to keep track of maintenance intervals and the amount of time required to perform various tasks.
6. **Fuse Holders (Figure 4-1).** Two 20-amp fuses protect the mower's electrical system. To replace fuses, pull fuse out of the socket and install a new fuse.
7. **Left Steering Control (Figure 4-1).** Used to control the mower's left wheel when traveling forward or reverse.
8. **Right Steering Control (Figure 4-1).** Used to control the mower's right wheel when traveling forward or reverse.
9. **Parking Brake Control (Figure 4-1).** Used to engage and disengage the parking brakes. Pull the lever back to engage the parking brakes. Push the lever forward to disengage the parking brakes.
10. **Fuel Switching Valve (Figure 4-1).** Located on the left side of the machine. Used to shut off fuel supply to the engine and change fuel supply between the fuel tanks. Rotate the valve counter clockwise to supply fuel from the tank on the left side only. Rotate the valve clockwise to supply fuel from the tank on the right side only.
11. **Dump Valve Control (Figure 4-2).** Located on the hydraulic pumps, used to "free-wheel" the mower. Rotating the levers clockwise until they stop allows the unit to move under hydraulic power. The levers must be in this position and torqued to 10ft/lbs during operation of the mower. Rotating the levers counter-clockwise, 1-2 turns, allows the mower to be moved by hand (free-wheeling).
12. **Deck Lift Foot Lever (Figure 4-1).** Used to raise and lower the cutter deck.
13. **Cutting Height Adjustment (Figure 4-1).** Used to set the cutter deck at the desired cutting height.

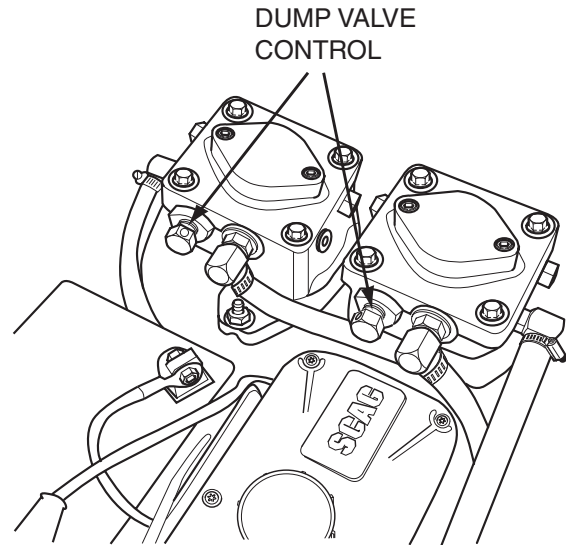


Figure 4-2 Dump Valve Control

14. **Cutter Deck Release Lever (Figure 4-1).** Used to lock the cutter deck in the transport position. Push the foot pedal forward and lift up on the release lever to release the cutter deck for normal mowing.
15. **Seat Belt (Figure 4-1).** Used to secure the operator. Seat belt must be worn at all times during operation.

4.2 SAFETY INTERLOCK SYSTEM

The mower is equipped with a safety interlock system that prevents the engine from starting unless the deck drive is disengaged, the parking brake is engaged, the steering control levers are in the neutral position and the operator is in the seat. The interlock system shuts off the engine if the operator leaves the seat with the steering control levers not in the neutral position and/or the cutter blades engaged and/or the parking brake not engaged.

WARNING:

Never operate the mower with the interlock system disconnected or malfunctioning. Do not disengage or bypass any switch; injury to yourself and others or property damage could result.

4.3 INITIAL RUN-IN PROCEDURES (First Day of Use or Approximately 10 Hours)

1. Check all belts for proper alignment and wear at 2, 4 and 8 hours.
2. Change the engine oil and oil filter after the first 8 hours of operation. (See Section 7.4.)
3. Check hydraulic oil level in reservoir. (See Section 7.3)
4. Check for loose hardware. Tighten as needed.
5. Check interlock system for proper operation. (See Section 4.2)
6. Check tire pressure. Adjust pressure if necessary. (See Section 7.10)

4.4 STARTING THE ENGINE



CAUTION:

DO NOT USE STARTING FLUIDS. Use of starting fluids in the air intake system may be potentially explosive or cause a “runaway” engine condition that could result in engine damage and/or personal injury.

1. Be sure the fuel shutoff valve, located behind the operator's seat by the left fuel tank, is completely open. (See Section 7.5)
2. Sit in the operator's seat, fasten seat belt and place the steering control levers in the neutral position.
3. Engage the parking brake.
4. If the engine is cold, choke the engine as needed.
5. Move the engine throttle control to about half engine speed.

6. Turn the ignition key to the START position and release the key as soon as the engine starts. Do not hold the key in the START position for more than 15 seconds at a time. Allow at least 60 seconds between each cranking attempt to prevent overheating of the starter motor. Prolonged cranking can damage the starter motor and shorten battery life.
7. Allow engine to warm before operating the mower.

4.5 GROUND TRAVEL AND STEERING

-IMPORTANT-

If you are not familiar with the operation of a machine with lever steering and/or hydrostatic transmissions, the steering and ground speed operations should be learned and practiced in an open area, away from buildings, fences, or obstructions. Practice until you are comfortable with the handling of the machine before attempting to mow. Learn the operation on flat ground before operating on slopes.

-IMPORTANT-

Start practicing with a slow engine speed and slow forward travel. Learn to feather the steering controls to obtain a smooth operating action.

Forward Travel

To travel forward with the mower, disengage the parking brake, pull levers inward out of the neutral lock position and slowly push the steering control levers forward an equal distance. The further the steering control levers are pushed forward the greater the forward speed will be. To increase the speed, push the steering control levers further forward and to decrease the speed, pull the steering control levers back.

To stop the forward travel, pull the steering control levers back to the neutral position.

To steer the mower left while traveling forward, pull the left steering lever back. The further the lever is pulled back, the quicker the mower will turn left.

To steer the mower right while traveling forward, pull the right steering control lever back. The further the lever is pulled back, the quicker the mower will turn right.

-NOTE-

Smooth operation of the steering levers will produce smooth mower operation. While learning the operation of the steering controls, keep the travel speed low.

-IMPORTANT-

Do not travel forward over a curb. The mower may hang up on the curb. Raise the deck and travel backwards over the curb at a 45 degree angle. (see section 4.1, item 12 for cutter deck raising instructions)

Reverse Travel

CAUTION:

Disengage power to the mower before backing up. Do not mow in reverse unless absolutely necessary and then only after observation of the entire area behind the mower.

CAUTION:

Before backing up, observe the rear for persons and obstructions. Clear the area before backing up. Possible injury or property damage could occur.

To travel in reverse, pull levers inward out of the neutral lock position and pull both handles back. Keep the travel speed low while traveling in reverse.

-NOTE-

The mower may not travel straight in reverse. Slight adjustments must be made using the steering controls.

To steer left while traveling in reverse, allow the left steering control lever to move forward. The further the control is allowed to move forward, the quicker the mower will turn left.

To steer right while traveling in reverse, allow the right steering control lever to move forward. The further the control is allowed to move forward, the quicker the mower will turn right.

To stop the reverse travel, allow the steering control levers to return to the neutral position. If the mower is to be parked, place the handles in the neutral lock position and engage the parking brake.

4.6 ENGAGING THE DECK DRIVE (CUTTER BLADES)

1. Set the throttle at about 3/4 speed. Do not attempt to engage the deck drive at high speed as this shortens the electric clutch life — use only moderate engine speed when engaging the deck drive.
2. Engage the deck drive by pulling out on the yellow switch, located on the instrument panel, (Figure 4-3) to the engage position.

-NOTE-

A squealing noise may be heard when engaging or disengaging the deck drive. It is caused by the electric clutch plates meshing as the mower comes up to speed. This is normal.

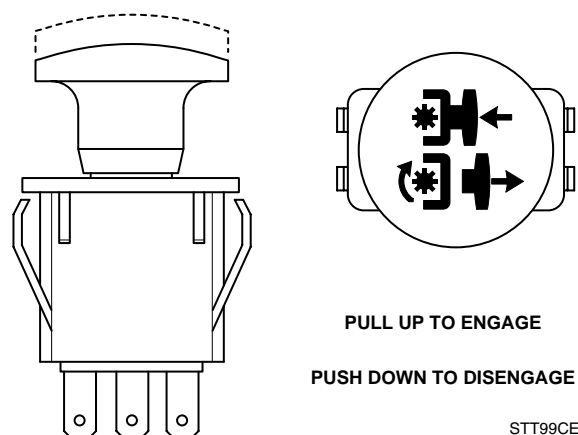


Figure 4-3 Cutter Deck Engage Switch

3. To disengage the deck drive, push the switch in to the disengage position.
4. Always operate the engine at full throttle to properly maintain cutting speed. If the engine starts to lug down, reduce the forward speed and allow the engine to operate at maximum RPM.

4.7 HILLSIDE OPERATION

WARNING:

DO NOT operate on steep slopes. To check a slope, attempt to back up it (with the cutter deck down). If the machine can back up the slope without the wheels slipping, reduce speed and use extreme caution. ALWAYS FOLLOW OSHA APPROVED OPERATION.

1. The mower has been designed for good traction and stability under normal mowing conditions. However, caution must be used when traveling on slopes, especially when the grass is wet. Wet grass reduces traction and steering control. The Roll Over Protection System is standard equipment for this machine. See section 2.5, page 6 of this manual for further details.
2. To prevent tipping or loss of control, do not start or stop suddenly, avoid unnecessary turns and travel at reduced speed. If tires lose traction, disengage blades and proceed slowly off the slope.
3. Avoid sudden starts when mowing uphill. Sudden starts may cause the machine to tip backwards.
4. Loss of traction may occur when traveling down hill. Weight transfers to the front of the machine and may cause the drive wheels to slip causing loss of braking or steering.
5. Keep tires properly inflated.

4.8 PARKING THE MOWER

1. Park the machine on a flat, level surface only. Do not park the machine on an incline.
2. Place the steering control levers in the neutral position.
3. Disengage the cutter blades.
4. Slow the engine to idle speed.
5. Engage the parking brake.
6. Turn the ignition key to the OFF position and remove the key.

4.9 AFTER OPERATION

1. Wash the entire mower after each use. Do not use high pressure spray or direct the spray onto electrical components.

-IMPORTANT-

Do not wash a hot or running engine. Cold water will damage the engine. Use compressed air to clean the engine if it is hot.

2. Keep the entire mower clean to inhibit serious heat damage to the engine or hydraulic oil circuit.
3. Check the drive belts for proper alignment and any signs of wear. Correct and adjust if necessary.

DANGER:

To avoid injury from burns, allow the mower to cool before removing the fuel tank cap and refueling.

4. After the mower has cooled down, fill the fuel tanks with fresh, clean fuel at the end of every day of operation. See Engine Owner's Manual for proper octane requirements.
5. Check the tire pressure. Adjust pressure if necessary.

4.10 REMOVING CLOGGED MATERIAL



DANGER: **ROTATING BLADES**

NEVER PUT YOUR HANDS INTO THE DISCHARGE CHUTE FOR ANY REASON! Shut off the engine and remove the key and only then use a stick or similar object to remove material if clogging has occurred.

1. If the discharge chute becomes clogged, shut off the engine and remove the ignition key. Using a stick or similar item, dislodge the clogged material. Then resume normal mowing.

4.11 MOVING MOWER WITH ENGINE STOPPED

To “free-wheel” or move the mower around without the engine running, place the dump valve levers in the FREE-WHEEL position (Figure 4-2, page 13). Disengage the parking brake and move the mower by hand. The dump valve levers must be returned to the DRIVE position and torqued to 7-10 ft/lbs to drive the mower.

4.12 RECOMMENDATIONS FOR MOWING

1. Do not mow with dull blades. A dull blade will tear grass, resulting in poor lawn appearance and require extra power.
2. The discharge chute must not be removed and must be kept in the lowest position to deflect grass clippings and thrown objects downward. Direct the side discharge away from sidewalks or streets to minimize cleanup of clippings. When mowing close to obstacles, direct the discharge away from the obstacles to reduce the chance of property damage by thrown objects.



WARNING

DO NOT OPERATE WITHOUT DISCHARGE CHUTE, MULCHING KIT, OR ENTIRE GRASS CATCHER INSTALLED

3. Cut grass when it is dry and not too tall. Do not cut grass too short (cut off 1/3 or less of existing grass for best appearance). Mow frequently.

4. Keep mower and discharge chute clean.
5. When mowing wet or tall grass, mow the grass twice. Raise the mower to the highest setting for the first pass and then make a second pass to the desired height.
6. Use a slow travel speed for trimming purposes.
7. Operate the engine at full throttle for best cutting. Mowing with a lower RPM causes the mower to tear the grass. The engine is designed to be operated at full speed.
8. Use the alternate stripe pattern for best lawn appearance. Vary the direction of the stripe each time the grass is mowed to avoid wear patterns in the grass.

4.13 ADJUSTING CUTTING HEIGHT

The mower deck can be adjusted from a height of 1-inch to 5-1/2 inches at 1/4-inch intervals. To adjust the cutting height:



WARNING:

DO NOT adjust the cutting height with the mower blades rotating. Disengage the power to the cutter blades and then adjust cutting height.

1. Disengage the power to the cutter blades.
2. Push the cutting height adjustment foot pedal all the way forward using your right foot until it locks in place. (Figure 4-5, page 18)
3. Insert the lanyard pin into the cutting height index at the desired cutting height. Push forward on the deck lift foot lever, hold in place and lift up on the deck release lever, (Figure 4-4). Slowly release the foot pedal. A deck height decal is located on the cutting height index as an aid in adjusting the deck to the desired height. (Figure 4-5)

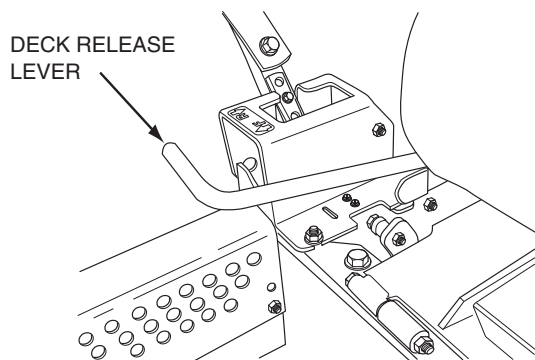


Figure 4-4 Deck Release Lever

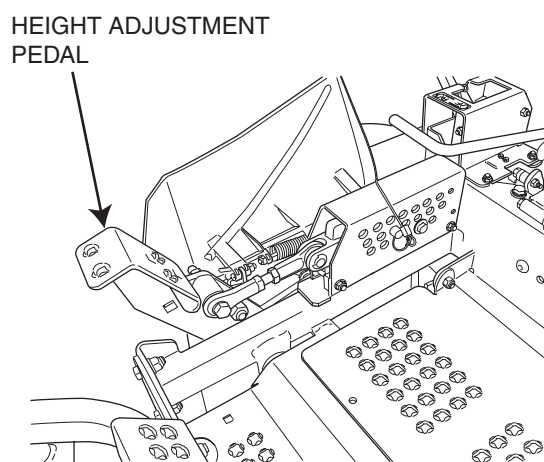
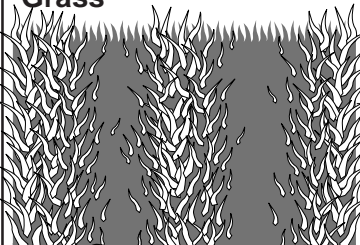

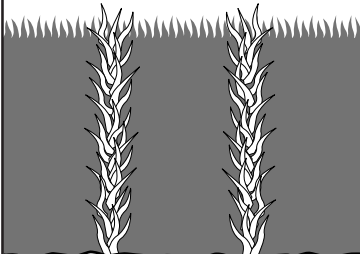

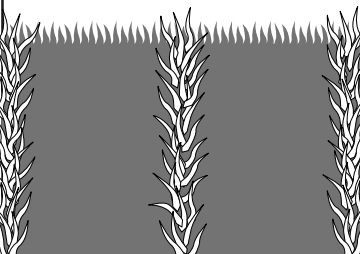

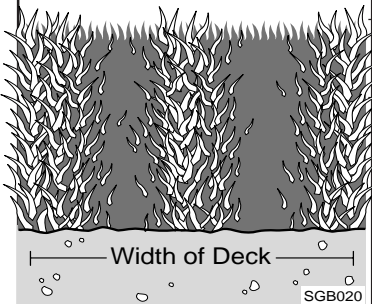
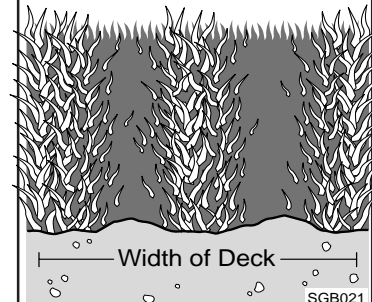
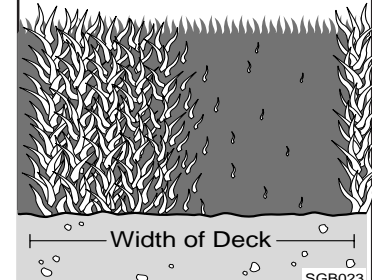


Figure 4-5 Adjusting Cutting Height




TROUBLESHOOTING CUTTING CONDITIONS

CONDITION	CAUSE	CURE
Stringers - Occasional Blades of Uncut Grass   SGB020	Low engine RPM	Run engine at full RPM
	Ground speed too fast	Slow speed to adjust for conditions
	Wet grass	Cut grass after it has dried out
	Dull blades, incorrect sharpening	Sharpen blades
	Deck plugged, grass accumulation	Clean underside of deck
	Belts slipping	Adjust belt tension
Streaking - Strips of Uncut Grass in Cutting Path   SGB018	Dull, worn blades	Sharpen blades
	Incorrect blade sharpening	Sharpen blades
	Low engine RPM	Run engine at full RPM
	Belt slipping	Adjust belt tension
	Deck plugged, grass accumulation	Clean underside of deck
	Ground speed too fast	Slow speed to adjust for conditions
	Wet grass	Cut grass after it has dried out
	Bent blades	Replace blades
Streaking - Strips of Uncut Grass Between Cutting Paths   SGB019	Not enough overlapping between rows	Increase the overlap of each pass

TROUBLESHOOTING (CONT'D)

CONDITION	CAUSE	CURE
Uneven Cut on Flat Ground - Wavy High-Low Appearance, Scalloped Cut, or Rough Contour 	Lift worn from blade	Replace blade
	Blade upside down	Mount with cutting edge toward ground
	Deck plugged, grass accumulation	Clean underside of deck
	Too much blade angle (deck pitch)	Adjust pitch and level
	Deck mounted improperly	See your authorized SCAG dealer
	Bent spindle area	See your authorized SCAG dealer
	Dull blade	Sharpen blade
Uneven Cut on Uneven Ground - Wavy Appearance, High-Low Scalloped Cut, or Rough Contour 	Uneven ground	May need to reduce ground speed, raise cutting height, and/or change direction of cut
Sloping Ridge Across Width of Cutting Path 	Tire pressures not equal	Check and adjust tire pressure
	Wheels uneven	Check and adjust tire pressure
	Deck mounted incorrectly	See your authorized SCAG dealer
	Deck not level side-to-side	Check for level and correct

TROUBLESHOOTING (CONT'D)

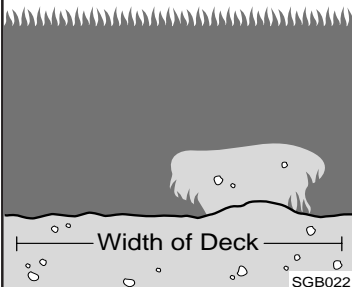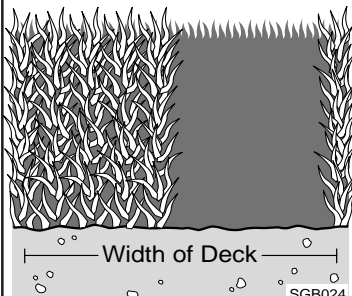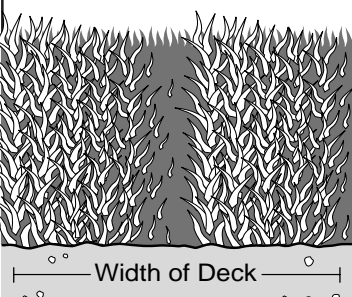CONDITION	CAUSE	CURE
Scalping - Blades Hitting Dirt or Cutting Very Close to the Ground 	Low tire pressures	Check and adjust pressures
	Ground speed too fast	Slow speed to adjust for conditions
	Cutting too low	May need to reduce ground speed, raise cutting height, change direction of cut, and/or change pitch and level
	Rough terrain	May need to reduce ground speed, raise cutting height, and/or change direction of cut
	Ground speed too fast	Slow speed to adjust for conditions
	Wet grass	Cut grass after it has dried out
Step Cut - Ridge in Center of Cutting path 	Blades not mounted evenly	Adjust pitch and level
	Bent blade	Replace blade
	Internal spindle failure	See your authorized SCAG dealer
	Mounting of spindle incorrect	See your authorized SCAG dealer
Slope Cut - Sloping Ridges Across Width of Cutting Path 	Bent spindle mounting area	See your authorized SCAG dealer
	Internal spindle failure	See your authorized SCAG dealer
	Bent deck housing	See your authorized SCAG dealer

ADJUSTMENTS

6.1 PARKING BRAKE ADJUSTMENT

WARNING:

DO NOT operate the mower if the parking brake is not operable. Possible severe injury could result.

The parking brake linkage should be adjusted whenever the parking brake lever is placed in the “ENGAGE” position and the parking brake will not prevent the mower from moving. If the following procedures do not allow you to engage the parking brake properly, contact your Scag dealer for further brake adjustments.

1. Position a floor jack under the rear of the machine. Raise the machine and support it to prevent it from falling. Block the caster wheels to prevent the machine from moving. Remove the drive wheels.
2. Loosen the nut on the top of the actuator bar until it is flush with the end of the bolt. (See Figure 6-2, top view).
3. Measure the distance between frame and the top of the actuator bar. The distance should be 1-1/4". If this measurement is not at the specified 1-1/4", adjust the brake control rod. Adjust by loosening the jam nuts at both ends of the brake control rod and turning the rod until the proper distance is achieved. Tighten the jam nuts. (See Figure 6-1).
5. When the 1-1/4" measurement has been achieved, tighten the nut on the top of the actuator bar until the measurement between the frame and actuator bar is approximately 2".
6. Check the measurement on the RH side between the frame and actuator bar. This measurement should be approximately 2". If the measurement is not at 2", tighten or loosen the nut on top of the actuator bar until the 2" measurement is achieved.
7. Replace the drive wheels and test the brake.

-NOTE-

If this procedure does not achieve proper brake adjustment, please contact your authorized Scag dealer.

SZC 2005 BA



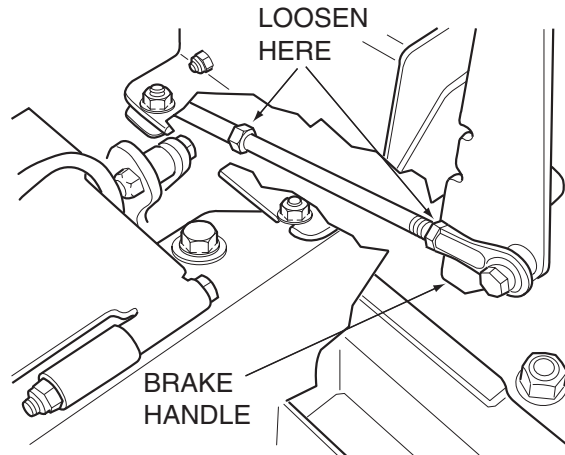


Figure 6-1. Brake Adjustment

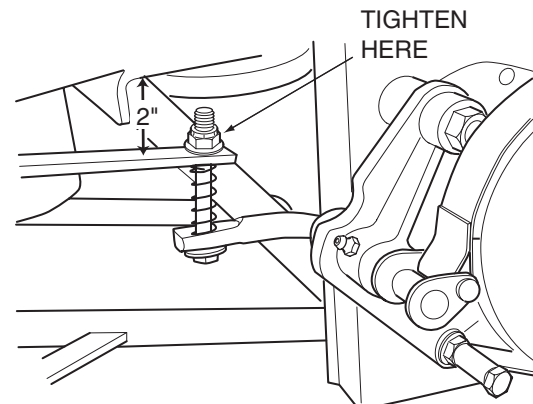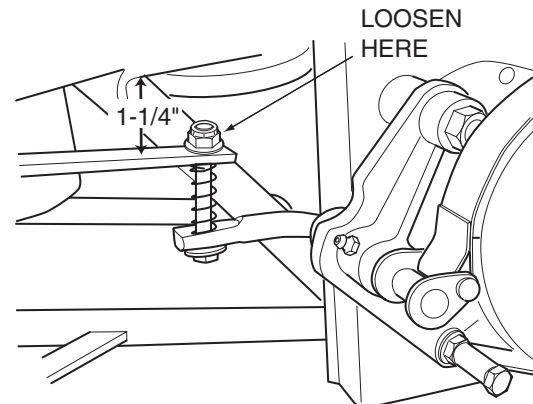

SZC 2005 BRA

Figure 6-2. Brake Rod Adjustment

6.2 TRAVEL ADJUSTMENTS

Neutral or tracking adjustments will need to be made if:

- A. The steering control levers are in the neutral position and the machine creeps forward or backward. (See Neutral Adjustment).
- B. The steering control levers are in the full forward position and the mower pulls to one side or the other when traveling in a forward direction. (Tracking Adjustment, See Page 24).

Neutral Adjustment

1. Be sure the dump valve levers are in the run position and the steering control levers are in the neutral lock position.
2. With an operator in the seat, start the engine and disengage the parking brake.
3. Run the engine at full operating speed and check if the machine creeps forward or backwards.
4. Adjust the RH wheel by loosening the jam nuts on the steering control rod and turning the rod until the drive wheel turns in the forward direction. Turn the rod back until the drive wheel stops moving. Turn the rod back an additional 1/2 turn. (See Figure 6-3).
5. Tighten the jam nuts and repeat for the LH wheel.
6. Actuate the steering control levers forward and reverse several times and return them to the neutral position.
7. Check that the drive wheels remained in neutral and readjust if necessary.
8. Check that the steering control levers hit the stop before the pumps reach full stroke. Adjust as needed.

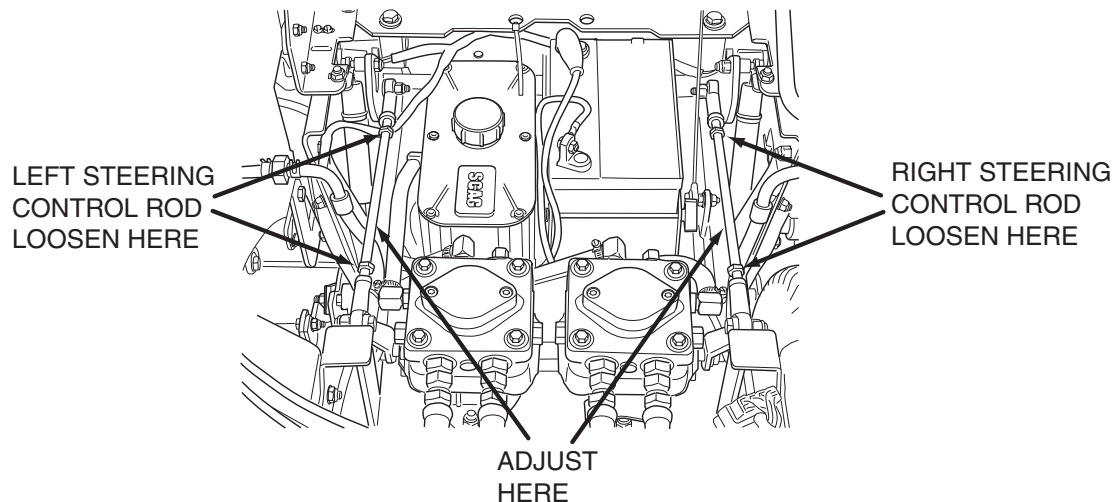


Figure 6-3. Steering Control Rods Adjustment

Tracking Adjustment

CAUTION:

Stop the engine and remove the key from the ignition before making any adjustments. Wait for all moving parts to come to a complete stop before beginning work.

CAUTION:

The engine and drive unit can get hot during operation causing burn injuries. Allow engine and drive components to cool before making any adjustments.

-NOTE-

Before proceeding with this adjustment, be sure that the caster wheels turn freely and that the tire pressure in the drive wheels is correct. If the tire pressure is not correct, the machine will pull to the side with the lower pressure.

1. If at full speed the mower pulls right, it is an indication that the left wheel is turning faster than the right wheel. To adjust this condition, proceed as follows:

- A. Stop the machine and place the steering control levers in the neutral position. Loosen the lock nuts securing the ball joints at each end of the LH steering control rod. Rotate the control rod to shorten the rod and tighten the lock nuts. This will cause the control rod to stroke the LH pump less, slowing down the LH wheel. (See Figure 6-3).

-NOTE-

If after making the adjustment as outlined in step 1A, the machine creeps forward or backward, the neutral adjustment must be made as described on page 23.

2. If at full speed the mower pulls left, it is an indication that the right wheel is turning faster than the left wheel. To adjust this condition, proceed as follows:

- A. Stop the machine and place the steering control levers in the neutral position. Loosen the lock nuts securing the ball joints at each end of the RH steering control rod. Rotate the control rod to shorten the rod and tighten the lock nuts. This will cause the control rod to stroke the RH pump less, slowing down the RH wheel. (See Figure 6-3).

-NOTE-

If after making the adjustment as outlined in step 2A, the machine creeps forward or backward, the neutral adjustment must be made as described on page 23.

6.3 THROTTLE CONTROL AND CHOKE ADJUSTMENTS

These adjustments must be performed by your Scag dealer to ensure proper and efficient running of the engine. Should either need adjustment, contact your authorized Scag service center.

6.4 BELT ADJUSTMENT

WARNING:

Before removing any guards, shut the engine off and remove the ignition key.

All drive belts and cutter deck belts are spring loaded and self-tensioning. The belts should be checked periodically for proper alignment and wear.

6.5 BELT ALIGNMENT

Belt alignment is important for proper performance of your Scag mower. If you experience frequent belt wear or breakage, see your authorized Scag service center for belt adjustment.

6.6 CUTTER DECK ADJUSTMENTS

Cutter deck level, pitch and height are set at the factory. However, if these adjustments should ever need to be made, the following procedures will aid in obtaining the proper cutter deck adjustment.

-NOTE-

Before proceeding with the cutter deck adjustments, be sure that all tires are properly inflated.

Cutter Deck Level

The cutter deck should be level from side-to-side for proper cutting performance. To check for level, be sure that the mower is on a flat, level surface, the tires are properly inflated and the cutter deck is set at the most common cutting height that you will use. On the RH side of the machine, check the distance from the top of the cutter deck to the floor. Next check the distance from the top of the cutter deck to the floor on the LH side of the machine. Both measurements should be the same. If the two measurements are different, the cutter deck level must be adjusted as follows:

1. On the front LH side of the cutter deck locate the cutter deck adjusting bolt. (See Figure 6-4)

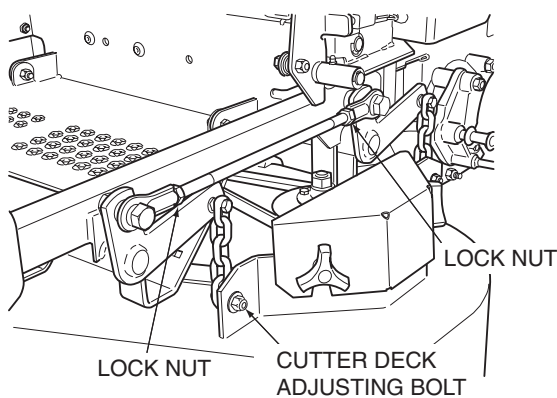


Figure 6-4. Cutter Deck Adjustment

2. Loosen the elastic stop nut and move the bolt up or down in the slot to adjust the cutter deck until the distance from the top of the cutter deck to the floor is the same as the measurement on the RH side of the machine.
3. Tighten the elastic stop nut to secure the cutter deck in the proper position.

Cutter Deck Pitch

The pitch of the cutter deck should be equal between the front and rear of the cutter deck for proper cutting performance. To check for proper deck pitch, be sure that the mower is on a flat, level surface and the tires are properly inflated.

Check the distance from the top of the cutter deck to the floor at the rear RH side of the cutter deck directly behind the cutter deck hanging chains. Next check the distance from the top of the cutter deck to the floor at the front RH side of the cutter deck directly in front of the cutter deck hanging chains. The measurement at the front of the cutter deck should be the same as the rear of the deck. Make these measurements at the LH side of the cutter deck also. If the measurement at the front of the deck is not the same, the cutter deck pitch must be adjusted as follows:

1. Loosen the lock nuts on both adjusting rods. (See Figure 6-4)
2. Using an adjustable jaw pliers, turn the adjusting rods on the non-threaded portion of the rod until the deck is equal front to back on both the RH and the LH side of the cutter deck. Tighten both lock nuts.

-NOTE-

To prevent the cutter deck from teetering, all four cutter deck hanging chains must have tension on them. If all four chains do not have tension on them and the deck teeters, you must readjust the cutter deck as outlined in the procedures above. All measurements should be taken from the top edge of the deck as the Advantage decks have an uneven bottom edge.

Cutter Deck Height

The cutter deck height adjustment is made to ensure that the cutter deck is cutting at the height indicated on the cutting height index gauge. To check for proper deck height, be sure that the mower is on a flat, level surface and the tires are properly inflated.

1. Place the cutter deck in the transport position. Loosen the jam nuts on both ends of the deck height control rod. (See Figure 6-5)

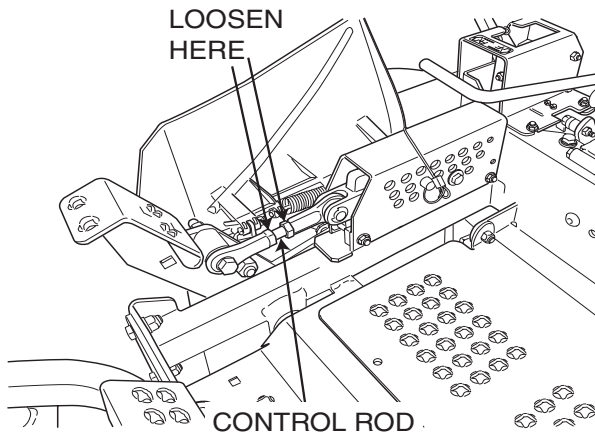


Figure 6-5. Cutter Deck Height Adjustment

2. Turn the control rod (See Figure 6-6) until there is a 1/4" space between the rear deck stop and the top of the cutter deck. (See Figure 6-6). Tighten the jam nuts on the control rod.

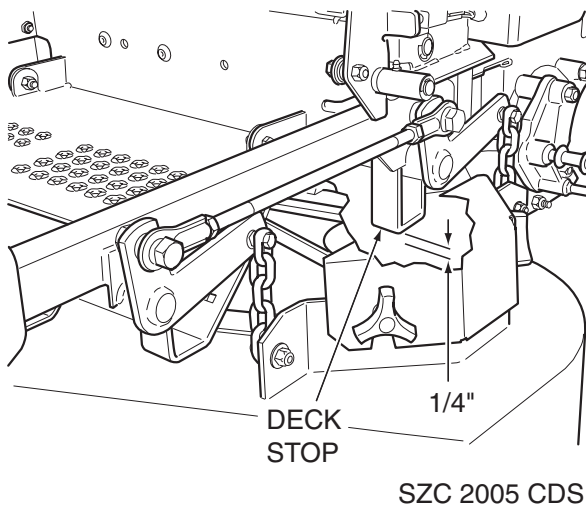


Figure 6-6. Cutter Deck Stop

3. Check the cutter deck cutting height by placing the lanyard pin in the 3" position on the cutting height index. Release the deck from the transport position and allow the deck to move to the 3" cutting height position.
4. Check the measurement from the floor to the cutter blade tip. If the measurement is not at 3", an adjustment can be made using the deck height control rod. (See Figure 6-5)

-NOTE-

If an adjustment had to be made, be sure that the cutter deck can easily be locked into the transport position.

Custom-Cut Baffle Adjustment

The Custom-Cut Baffle is designed to deliver optimum airflow and superior cutting performance in any type of grass. The Custom-Cut Baffle can be raised or lowered to precisely tailor the deck's performance for the type of grass being cut. The baffle can be set in three (3) different positions for optimum performance.

- A. 3" Position - baffle is installed using the top set of holes on the front baffle welded inside the cutter deck. (See Figure 6.8). The Advantage cutter deck will deliver the best quality-of-cut in very tall, wiry, tough to cut grass.
- B. 3-1/2" Position (factory setting) - baffle is installed using the middle set of holes on the front baffle welded inside the cutter deck. (See Figure 6.9). For general purpose cutting, place the Custom-Cut Baffle in the 3-1/2" position. This gives the best mix of cutting performance in all types of grass.
- C. 4" Position - baffle is installed using the bottom set of holes on the front baffle welded inside the cutter deck. (See Figure 6.10). Placing the baffle in the 4" setting will enhance fall cutting (leaf pickup) and reduce cutter deck "blowout".

Section 6

To adjust the Custom-Cut Baffle height:

1. Place the cutter deck in the transport position.
2. Remove the hardware securing the Custom-Cut Baffle to the cutter deck. (See Figure 6.7).

-NOTE-

Hardware location used in the illustrations are for reference only. Location of hardware may vary depending on cutter deck size.

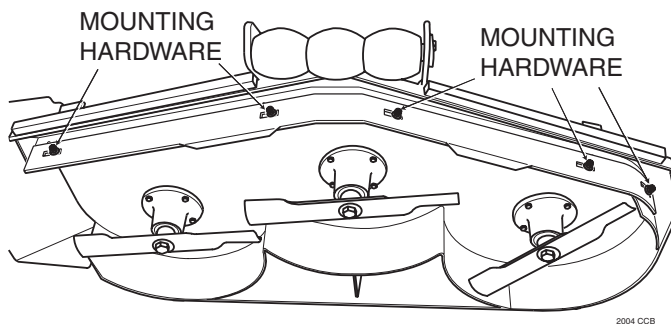


Figure 6-7. Custom-Cut Baffle

3. Move the Custom-Cut Baffle to desired position. (See Figures 6.8 through 6.10 for position).
4. Reinstall the mounting hardware as shown. (See Figures 6.18 though 6.10). Torque hardware to 39 ft/lbs.

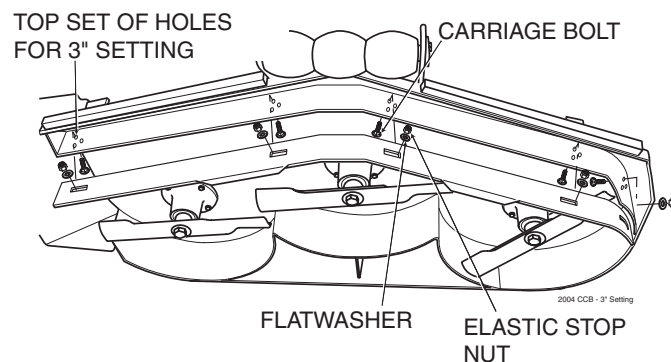


Figure 6-8. 3" Custom-Cut Baffle Position

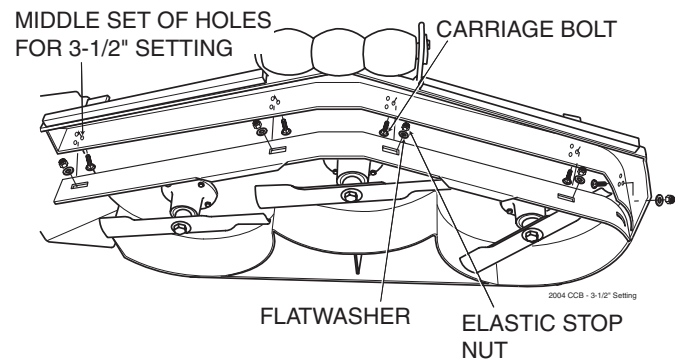


Figure 6-9. 3-1/2" Custom-Cut Baffle Position

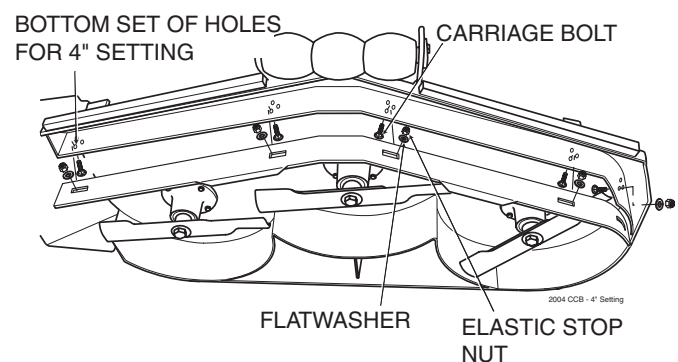


Figure 6-10. 4" Custom-Cut Baffle Position

MAINTENANCE

7.1 MAINTENANCE CHART - RECOMMENDED SERVICE INTERVALS

Break-In (First 10)	HOURS					Procedure	Comments
	8	40	100	200	500		
X						Check all hardware for tightness	
X						Check hydraulic oil level	See paragraph 7.3
X						Check all belts for proper alignment	See paragraph 7.8
X (First 8)						Change engine oil and filter	See paragraph 7.4
X						Check hydraulic hoses for leaks	Use extreme caution when checking the hydraulic hoses See paragraph 2.5
	X					Check engine oil level	See paragraph 7.4
	X					*Clean mower	See paragraph 7.11
	X					Check condition of blades	See paragraph 7.9
	X					Apply grease to fittings	See paragraph 7.2
	X					Check tire pressure	See paragraph 7.10
		X				Check battery electrolyte level, clean battery posts and cables	See paragraph 7.7
		X				Check belts for proper alignment	See paragraph 7.8
			X			Apply grease to fittings	See paragraph 7.2
			X			Change engine oil	See paragraph 7.4
			X			*Clean air cleaner element	See paragraph 7.6

* Perform these maintenance procedures more frequently under extreme dusty or dirty conditions.

Section 7

MAINTENANCE CHART - RECOMMENDED SERVICE INTERVALS (CONT'D)

Break-In (First 10)	HOURS					Procedure	Comments
	8	40	100	200	500		
				X		Apply grease to fittings	See paragraph 7.2
				X		Check hardware for tightness	
				X		Change engine oil filter	See paragraph 7.4
				X		Check hydraulic oil level	See paragraph 7.3
					X	Replace engine fuel filter	See paragraph 7.5
					X	Drain hydraulic system and replace hydraulic oil	See paragraph 7.3 Use SAE 20W50 Motor Oil
					X	Replace hydraulic oil filter	See paragraph 7.3
					X	Adjust electric PTO clutch	See Scag Dealer

7.2 LUBRICATION - GREASE FITTING LUBRICATION CHART (SEE FIGURE 7-1)

LOCATION		LUBRICATION INTERVAL	LUBRICANT	NO. OF PLACES
1	Caster Wheel Pivot *	500 Hours/Yearly	Chassis Grease	2
2	Caster Wheel Bearings	100 Hours/Bi-Weekly	Chassis Grease	2
3	Brake Actuator	200 Hours/Monthly	Chassis Grease	2
4	Cutter Deck Bellcranks	100 Hours/Bi-Weekly	Chassis Grease	4
5	Cutter Deck Pusharms	100 Hours/Bi-Weekly	Chassis Grease	2
6	Control Pivot	100 Hours/Bi-Weekly	Chassis Grease	2
7	Cutter Deck Spindle	40 Hours/Weekly	+Lithium MP White Grease 2125	3
8	Brake Handle	200 Hours/Monthly	Chassis Grease	1

* **PROCEDURE:** Remove grease cap, part number 481559. Remove plug, part number 482028-01, and install grease zerk. Apply grease to the fitting until new grease appears at the top of the caster extension. Remove the grease zerk and reinstall the plug. Reinstall the grease cap. Special tool, part number 47007, is recommended for use in the installation of the grease cap.

+ Compatible Greases: Mobilix #2 found at Mobil Service Stations
 Ronex MP found at Exxon Service Stations
 Super Lube MEP #2 & Super Stay-M #2 found at Conoco Stations
 Shell Alvania #2 found at Shell Service Stations
 Lidok EP #2 found at industrial shops


GREASE FITTING LUBRICATION Lubricant Interval

□ Lithium MP White Grease 2125
(40 Hours/Weekly)

○ Chassis Grease
(100 Hours/Bi-monthly)

⬡ Chassis Grease
(200 Hours/Monthly)

△ Chassis Grease
(500 Hours/Yearly)

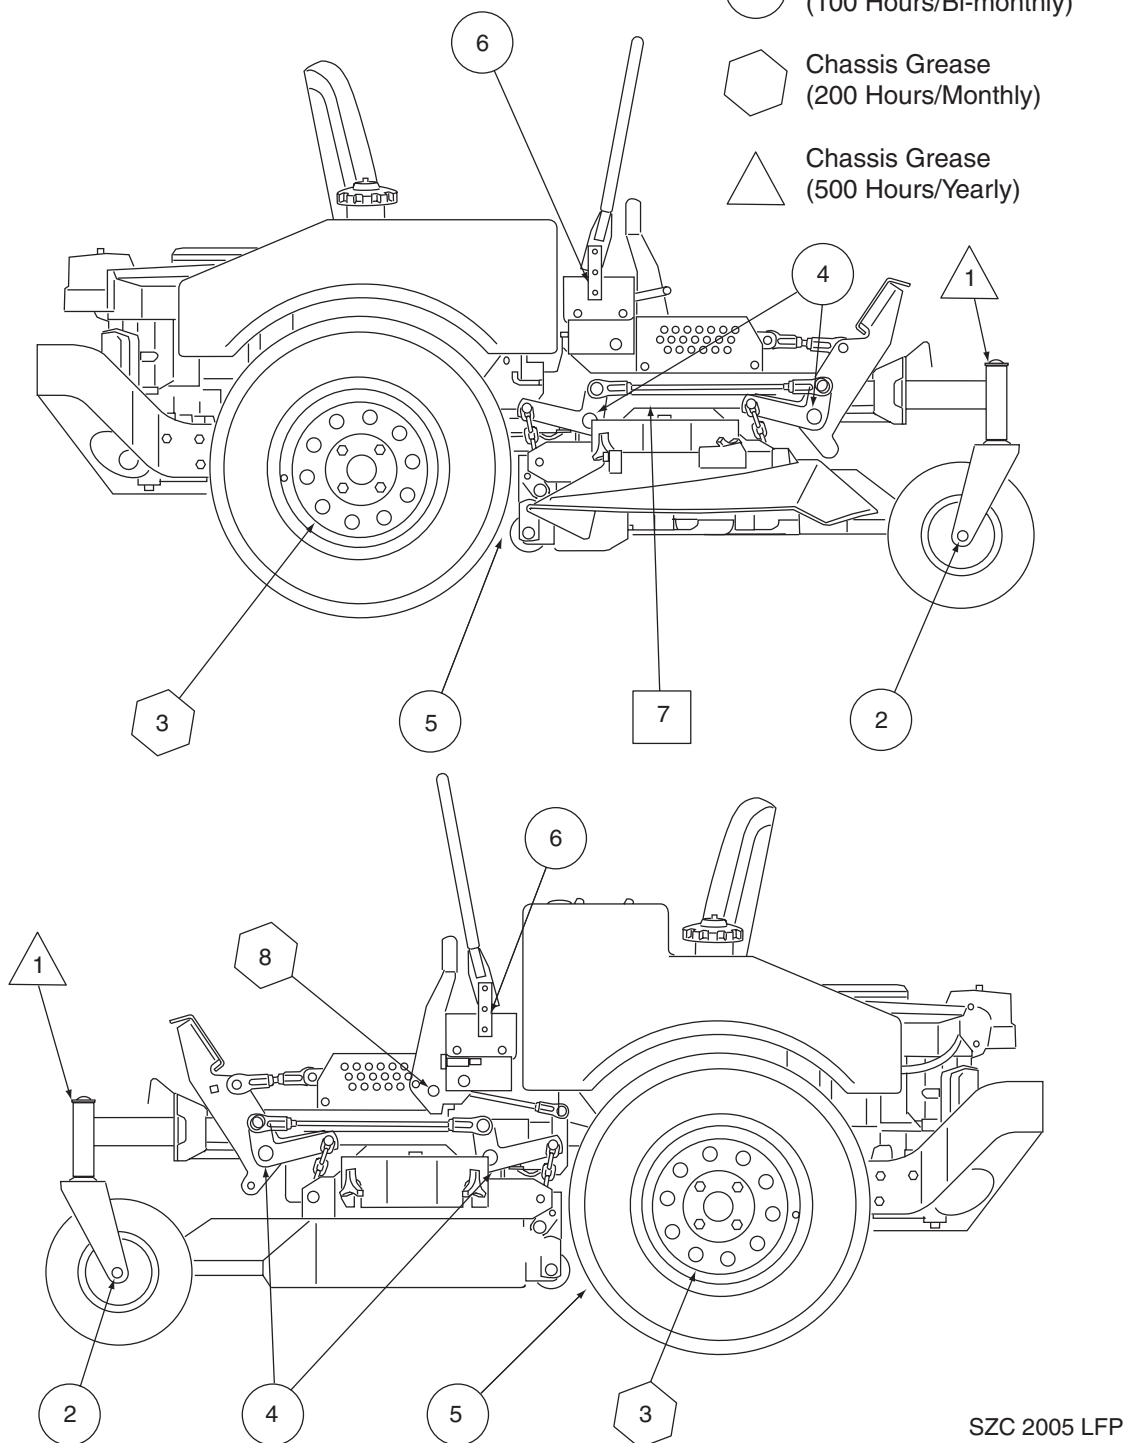

SZC 2005 LFP

Figure 7.1 Lubrication Fitting Points

Section 7

7.3 HYDRAULIC SYSTEM

A. Checking Hydraulic Oil Level

The hydraulic oil level should be checked after the first 10 hours of operation. Thereafter, check the oil after every 200 hours of machine operation or monthly, whichever occurs first.

-IMPORTANT-

If the oil level is consistently low, check for leaks and correct immediately.

1. Wipe dirt and contaminants from around the reservoir cap. Remove the cap from the hydraulic oil reservoir.
2. Visually check the level of hydraulic oil. Hydraulic oil must be at the full tab below the filler neck. If the fluid is low, add 20W50 motor oil. DO NOT overfill; (overfilling the oil reservoir may cause oil seepage).
3. Clean the fill cap and install it onto the reservoir.

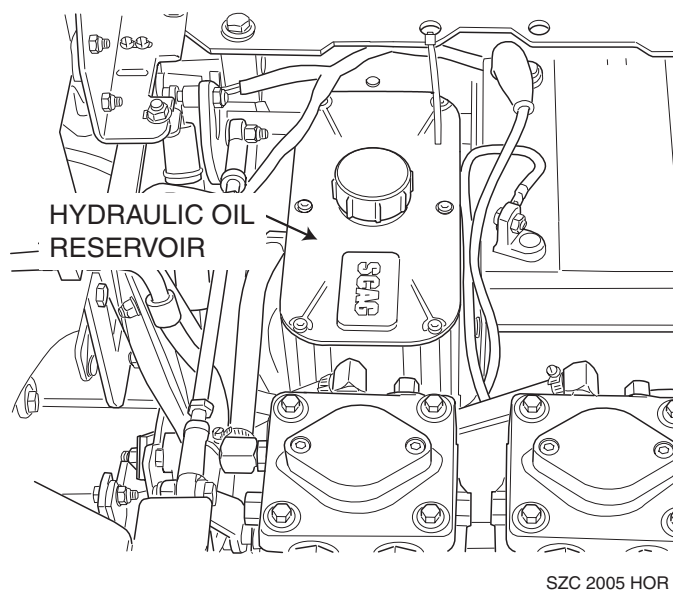


Figure 7-2 Hydraulic Oil Reservoir

B. Changing Hydraulic Oil

The hydraulic oil should be changed after every 500 hours or annually, whichever occurs first. The oil should also be changed if the color of the fluid has become black or milky. A black color and/or a rancid odor usually indicates possible overheating of the oil, and a milky color usually indicates water in the hydraulic oil.

-IMPORTANT-

The hydraulic oil should be changed if you notice the presence of water or a rancid odor to the hydraulic oil.

1. Park the mower on a level surface and stop the engine.
2. Place a suitable container under the hydraulic oil filter. Tilt the seat forward. Remove the fill cap from the reservoir and the drain plug from the bottom of the reservoir. (See Figure 7-3). Allow the fluid to drain into the container and properly discard it.

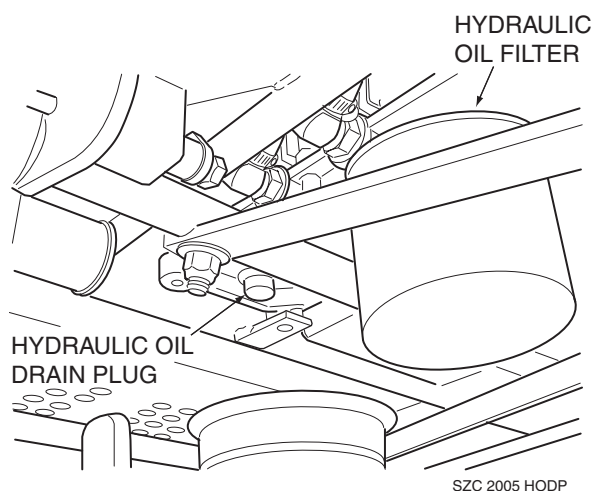


Figure 7-3 Hydraulic Oil Filter and Drain Plug

3. Re-install the drain plug into the tee fitting and be sure it is tight.

-NOTE-

Before refilling the hydraulic oil reservoir the hydraulic oil filter should be changed as outlined in section C -Changing Hydraulic Oil Filter Element- on the next page.

4. Fill the reservoir to the full tab below the filler neck with SAE 20W50 motor oil.
5. Replace the reservoir fill cap. Start the engine and drive forward and backward for two minutes. Check the oil level in the reservoir. If necessary, add oil to the reservoir.

C. Changing Hydraulic Oil Filter Element

The hydraulic oil filter should be changed after every 500 hours of operation or annually, whichever occurs first.

1. Remove the oil filter element (Figure 7-3, Page 31) and properly discard it. Fill the new filter with clean SAE 20W50 engine oil and install the filter. Hand tighten only.
2. Run the engine at idle speed with the speed control lever in neutral for five minutes.
3. Check the oil level in the hydraulic tank. It must be 3-1/4" inches from the top of the filler neck. If necessary, add SAE 20W50 motor oil.

7.4 ENGINE OIL

A. Checking Engine Crankcase Oil Level

The engine oil level should be checked after every 8 hours of operation or daily as instructed in the Engine Operator's Manual furnished with this mower.

B. Changing Engine Crankcase Oil

After the first 5 hours of operation, change the engine crankcase oil and replace the oil filter. Thereafter, change the engine crankcase oil after every 100 hours of operation or bi-weekly, whichever occurs first. Refer to the Engine Operator's Manual furnished with this mower for instructions.

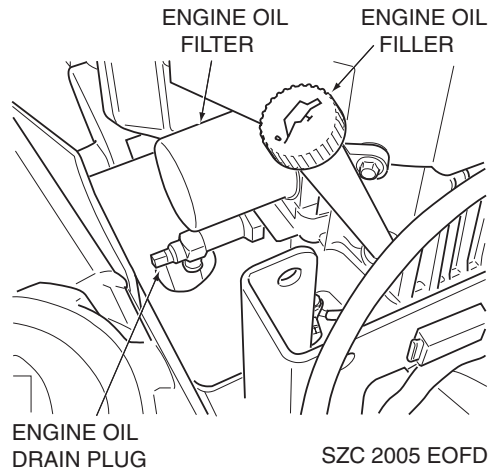


Figure 7-5 Kawasaki Engine Oil Fill/Dipstick, Filter and Drain Plug Locations

C. Changing Engine Oil Filter

After the first 5 hours of operation, replace the engine oil filter. Thereafter, replace the oil filter after every 200 hours of operation or every month, whichever occurs first. Refer to Engine Operator's Manual for instructions.

-NOTE-

The engine oil filter for the Honda engine is supplied by Scag Power Equipment. Use only the part number listed in the illustrated parts list of this manual when replacing.

7.5 ENGINE FUEL SYSTEM



DANGER:

To avoid injury from burns, allow the mower to cool before removing the fuel tank cap and refueling.


A. Filling the Fuel Tank

Fill the fuel tank at the beginning of each operating day to within 1 inch below the filler neck. Do not overfill. Use clean, fresh unleaded gasoline with a minimum octane rating of 87.

To avoid personal injury or property damage, use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive.

Section 7

1. Extinguish all cigarettes, cigars, pipes and other sources of ignition.
2. Use only an approved gasoline container.
3. Never remove the gas cap or add fuel with the engine running. Allow the engine to cool before fueling.
4. Never fuel the machine indoors or in an enclosed trailer.
5. Never store the machine or fuel container where there is an open flame, spark or pilot light such as on a water heater or other appliances.
6. Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before filling.
7. Remove the machine from the truck or trailer and fuel on the ground. If this is not possible, then refuel the machine with a portable container, rather than from a gasoline dispenser nozzle.
8. Keep the nozzle in contact with the rim of fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
9. If fuel is spilled on clothing, change clothing immediately and wash affected skin.
10. Replace gas cap and tighten securely.

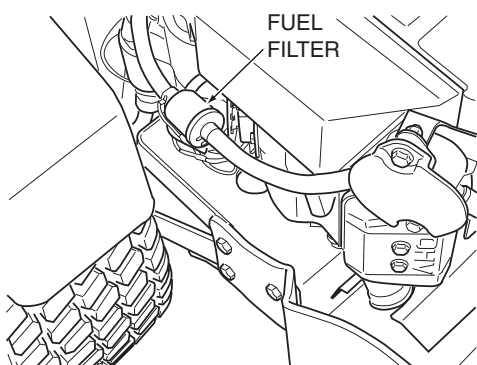

SZC 2005 EFF

Figure 7-6 Engine Fuel Filter Location

7.6 ENGINE AIR CLEANER

A. Cleaning and/or Replacing Air Cleaner Element

For any air cleaner, the operating environment dictates the air cleaner service periods. Inspect and clean the air cleaner element after every 100 hours of operation or bi-weekly, whichever occurs first and replace the element if required.

-NOTE-

In extremely dusty conditions it may be necessary to check the element once or twice daily to prevent engine damage.

1. Release the two latches securing the air cleaner cover to the air cleaner assembly and remove the cover. Set aside.
2. Remove the air cleaner and inspect.
3. Clean or replace the air cleaner and foam pre-cleaner as recommended by the engine manufacturer.

7.7 BATTERY

! WARNING:

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

! WARNING:

Lead-acid batteries produce flammable and explosive gases. To avoid personal injury when checking, testing or charging batteries, DO NOT use smoking materials near batteries. Keep arcs, sparks and flames away from batteries. Provide proper ventilation and wear safety glasses.

WARNING:

Electric storage battery fluid contains sulfuric acid which is **POISON** and can cause **SEVERE CHEMICAL BURNS**. Avoid contact of fluid with eyes, skin, or clothing. Use proper protective gear when handling batteries. **DO NOT** tip any battery beyond 45° angle in any direction. If fluid contact does occur, follow first aid suggestions below.

BATTERY ELECTROLYTE FIRST AID

EXTERNAL CONTACT — Flush with water.

EYES — Flush with water for at least 15 minutes and get medical attention immediately.

INTERNAL — Drink large quantities of water. Follow with Milk Of Magnesia, beaten egg, or vegetable oil. Get medical attention immediately. In case of internal contact, DO NOT give fluids that would induce vomiting.

A. Charging the Battery

Refer to the battery charger's manual for specific instructions.

Under normal conditions the engine's alternator will have no problem keeping a charge on the battery. If the battery has been completely discharged for a long period of time, the alternator may not be able to recharge the battery, and a battery charger will be required.

DO NOT charge a frozen battery. It may explode and cause injury. Let the battery warm before attaching a charger.

Whenever possible, remove the battery from the mower before charging and make sure the electrolyte covers the plates in all cells.

WARNING:

BATTERIES PRODUCE EXPLOSIVE GASES. Charge the battery in a well ventilated space so gases produced while charging can dissipate.

Charging rates between 3 and 50 amperes are satisfactory if excessive gassing or spewing of electrolyte does not occur or the battery does not feel excessively hot (over 125°F). If spewing or gassing occurs or the temperature exceeds 125°F, the charging rate must be reduced or temporarily stopped to permit cooling.

B. Jump Starting

1. The booster battery must be a 12 volt type. If a vehicle is used for jump starting, it must have a negative ground system.
2. When connecting the jumper cables, connect the positive cable to the positive battery post, then connect the negative cable to the negative battery post.

Section 7

7.8 DRIVE BELTS

All drive belts are spring loaded and self-tensioning, however after the first 2, 4, 8 and 10 hours of operation, the belts should be checked for proper alignment and wear. Thereafter, check the belts after every 40 hours of operation or weekly, whichever occurs first.

-NOTE-

If you experience frequent belt wear or breakage, see your authorized Scag Dealer for belt adjustment.

7.9 CUTTER BLADES

A. Blade Inspection

1. Remove the ignition key before servicing the blades.
2. Raise the mower deck to the highest position. Place the lanyard pin in the highest cutting height position to prevent the cutter deck from falling.



WARNING:

Always wear proper hand and eye protection when working with cutter blades.

3. Check the cutter blades for straightness. If the cutter blades appear bent, they will need to be replaced.



WARNING:

Do not attempt to straighten a bent blade, and never weld a broken or cracked blade. Always replace it with a new blade to assure safety.

4. If a blade cutting edge is dull or nicked, it should be sharpened. Remove the blades for sharpening. See "Blade Replacement."

-NOTE-

Keep the blades sharp. Cutting with dull blades not only yields a poor mowing job, but slows the cutting speed of the mower and causes extra wear on the engine and the blade drive.

B. Blade Sharpening

-NOTE-

If possible, use a file to sharpen the blade. Using a wheel grinder may burn the blade.

-NOTE-

DO NOT sharpen the blades beyond 1/3 of the width of the blade.

1. Sharpen the cutting edge at the same bevel as the original (See Figure 7-9). Sharpen only the top of the cutting edge to maintain sharpness.

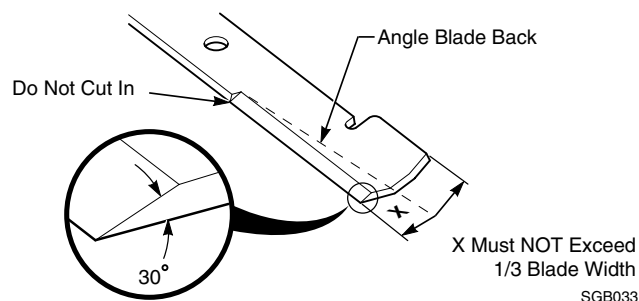


Figure 7-9 Blade Sharpening

2. Check the balance of the blade. If the blades are out of balance, vibration and premature wear can occur. See your authorized Scag dealer for blade balancing or special tools, if you choose to balance your own blades.

C. Blade Replacement



WARNING:

Always wear proper hand and eye protection when working with cutter blades.

1. Remove the ignition key before replacing the blades.
2. Raise the mower deck to the highest position. Place the lanyard pin in the highest cutting height position to prevent the cutter deck from falling.

- Secure the cutter blades to prevent them from rotating, (Use the optional Blade Buddy tool, P/N 9212, to assist in securing the cutter blades), remove the nut from the blade attaching bolt. Remove the cutter blade, bolt and spacer from the spindle shaft. (Figure 7-10).

-NOTE-

The front of the machine will have to be raised slightly to remove the blade bolt from the cutter spindle.

- To install the new cutter blade, put the flat washer onto the blade bolt and slide the bolt into the hole in the cutter blade.

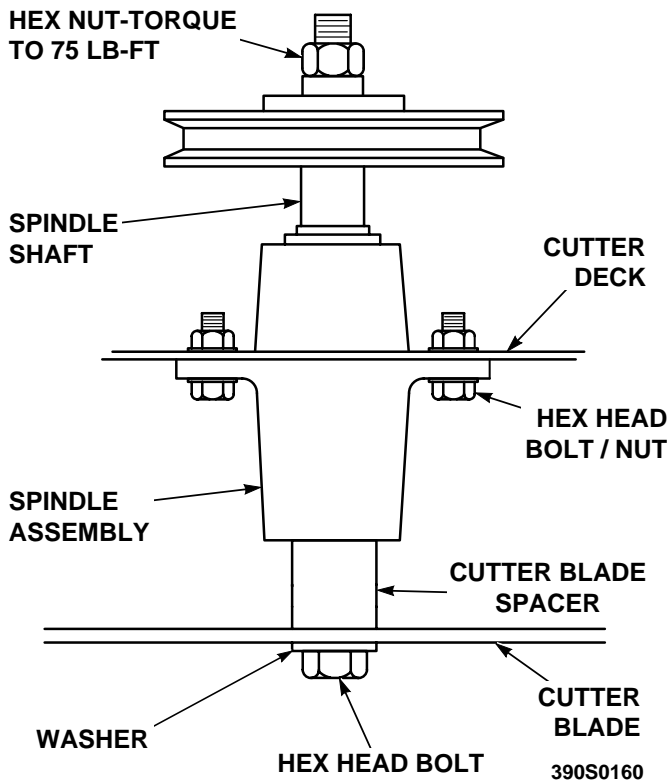


Figure 7-10 Blade Replacement

-NOTE-

Be sure that the blade is installed with the lift wing toward the top of the cutter deck.

- Install the spacer onto the blade bolt and insert the bolt into the cutter spindle shaft.
- Install the hex nut to the blade bolt at the top of the cutter spindle. Secure the blades from rotating and torque to 75 ft-lbs. (See Figure 7-10)

7.10 TIRES

Check the tire pressures after every 8 hours of operation or daily.

Caster Wheels	25 PSI
Drive Wheels	12 PSI

7.11 BODY, DECK, AND UPHOLSTERY




CAUTION:

Do not wash any portion of the equipment while it is hot. Do not wash the engine; use compressed air.

- After each use, wash the mower and cutter deck. Use cold water and automotive cleaners. Do not use pressure cleaners.
- Do not spray electrical components.
- Use a mild soap solution or a vinyl/rubber cleaner to clean the seat.
- Repair damaged metal surfaces using Scag touch-up paint (P/N 48521) available from your authorized Scag dealer. Wax the mower with an automotive paint wax for maximum paint protection.

36A" & 42A" CUTTER DECKS

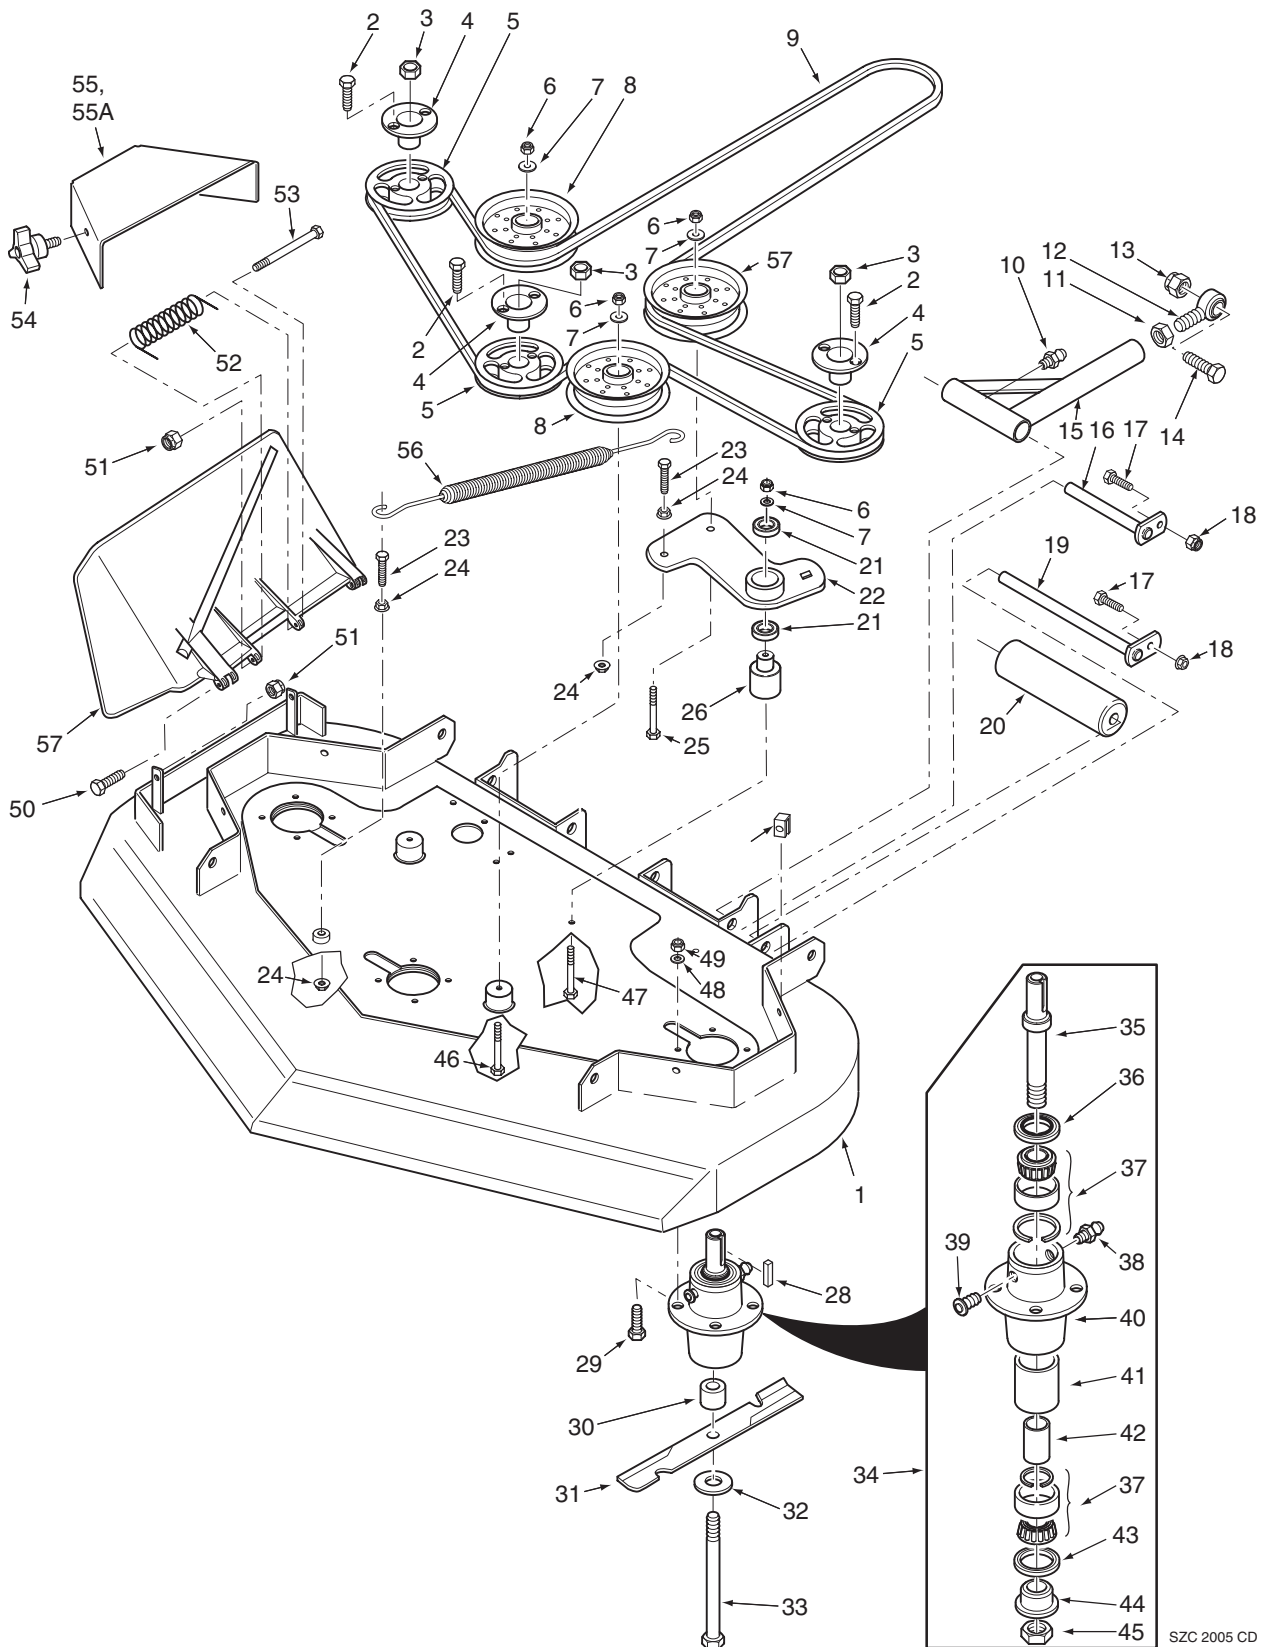


SZC 2005 CD

36A" & 42A" CUTTER DECKS

Ref. Part No. No.	Description	36 42	Ref. Part No. No.	Description	36 42
1	461833 Cutter Deck (incl. decals)	x	43589	Shaft, Cutter Spindle	x
	461834 Cutter Deck (incl. decals)	x	36 481024	Seal, Top	x x
2	04015-14 Bolt, Hex Head 1/4-20 x 3/4"	x	37 481022	Bearing Assembly	x x
	04001-172 Bolt, Hex Head 1/4-20 x 1"	x	38 48114-04	Grease Fitting	x x
3	04020-09 Nut, 5/8-11	x x	39 48677	Relief Fitting, Tapered Spindle	x x
4	48926 Tapered Hub, 1.125" Bore	x x	40 43644	Spindle Housing	x x
5	483110 Pulley, 4.15 O.D. (36")	x	41 43312	Spacer, Outside	x x
	482646 Pulley, 4.75 O.D. (42")	x	42 43296	Spacer, Inside	x x
6	04021-09 Nut, Elastic Stop 3/8-16	x	43 481025	Seal, Bottom	x x
7	04043-04 Flatwasher, 3/8-.391 x .938 x .105	x x	44 43297	Spindle Bushing, Bottom	x x
8	482416 Pulley, 5" Idler	x x	45 481035	Nut, Special 1 - 1/16-18	x x
9	483001 Belt, Cutter Deck (36")	x	46 04001-23	Bolt, 3/8-16 x 4-1/2"	x x
	483002 Belt, Cutter Deck (42")	x	47 04001-77	Bolt, 3/8-16 x 3-1/2"	x x
10	48114-04 Grease Fitting 1/4-28 Self Tapping	x x	48 04030-03	Lock washer, 5/16"	x x
11	04020-08 Nut, 1/2-20 UNF	x x	49 04021-22	Nut, Elastic Stop 5/16-18 Gr. 8	x x
12	48542 Rod End, 1/2-20 RH Thread	x x	50 04001-11	Bolt, 5/16-18 x 1-1/2"	x x
13	04021-07 Nut, Elastic Stop 1/2-13	x x	04001-12	Bolt, 5/16-18 x 1-3/4"	x x
14	04001-87 Bolt, Hex Head 1/2-13 x 4"	x x	51 04021-10	Nut, Elastic Stop 5/16-18	x x
15	461769 Push Arm Assembly (incl. 10, 11, 12)	x x	52 482245	Spring, Discharge Chute	x x
16	451240 Rod Weldment, Push Arm	x x	53 04001-154	Bolt, Hex Head 5/16-18 x 4-3/4"	x x
17	04001-09 Bolt, Hex Head 5/16-18 x 1"	x x	54 481625-01	Knob w/stud, 3/8-16 x 1-1/4"	x x
18	04019-03 Nut, Serrated Flange 5/16-18	x x	55 424055	Belt Cover	x
19	45944 Shaft Weldment, Guide Roller	x x	56 483112	Spring	x x
20	48038 Roller	x x	57 482783	Pulley, 5" Idler	x x
21	48224 Bearing	x x	58 461295	Discharge Chute	x x
22	461632 Idler Arm Assembly (incl. item 21)	x x			
23	04001-136 Bolt, Hex Head 3/8-16 x 1-1/2" Gr. 8	x x			
24	04019-04 Nut, Serrated Flange 3/8-16	x x			
25	04001-54 Bolt, Hex Head 3/8-16 x 3"	x x			
26	43660 Pivot, Idler	x x			
27	04110-03 U-Nut, 3/8-16	x x			
28	04063-20 Key, 1/4 x 1/4 x 1"	x x			
29	04001-176 Bolt, 5/16-18 x 1-3/4" Gr. 8	x x			
30	43590 Spacer, Spindle	x x			
31	482959 Cutter Blade, 12.20"	x			
	483014 Cutter Blade, 14-3/4"	x			
32	04043-06 Flatwasher, 5/8-.688 x .75 x .134 HD	x x			
33	04001-180 Bolt, Hex Head 5/8-11 x 8-1/2"	x			
	04001-41 Bolt, Hex Head 5/8-11 x 9-1/2"	x			
34	461776 Spindle Assembly (36")	x			
	461663 Spindle Assembly	x			
35	43663 Shaft, Cutter Spindle (36")	x			

CUTTER DECK CONTROLS

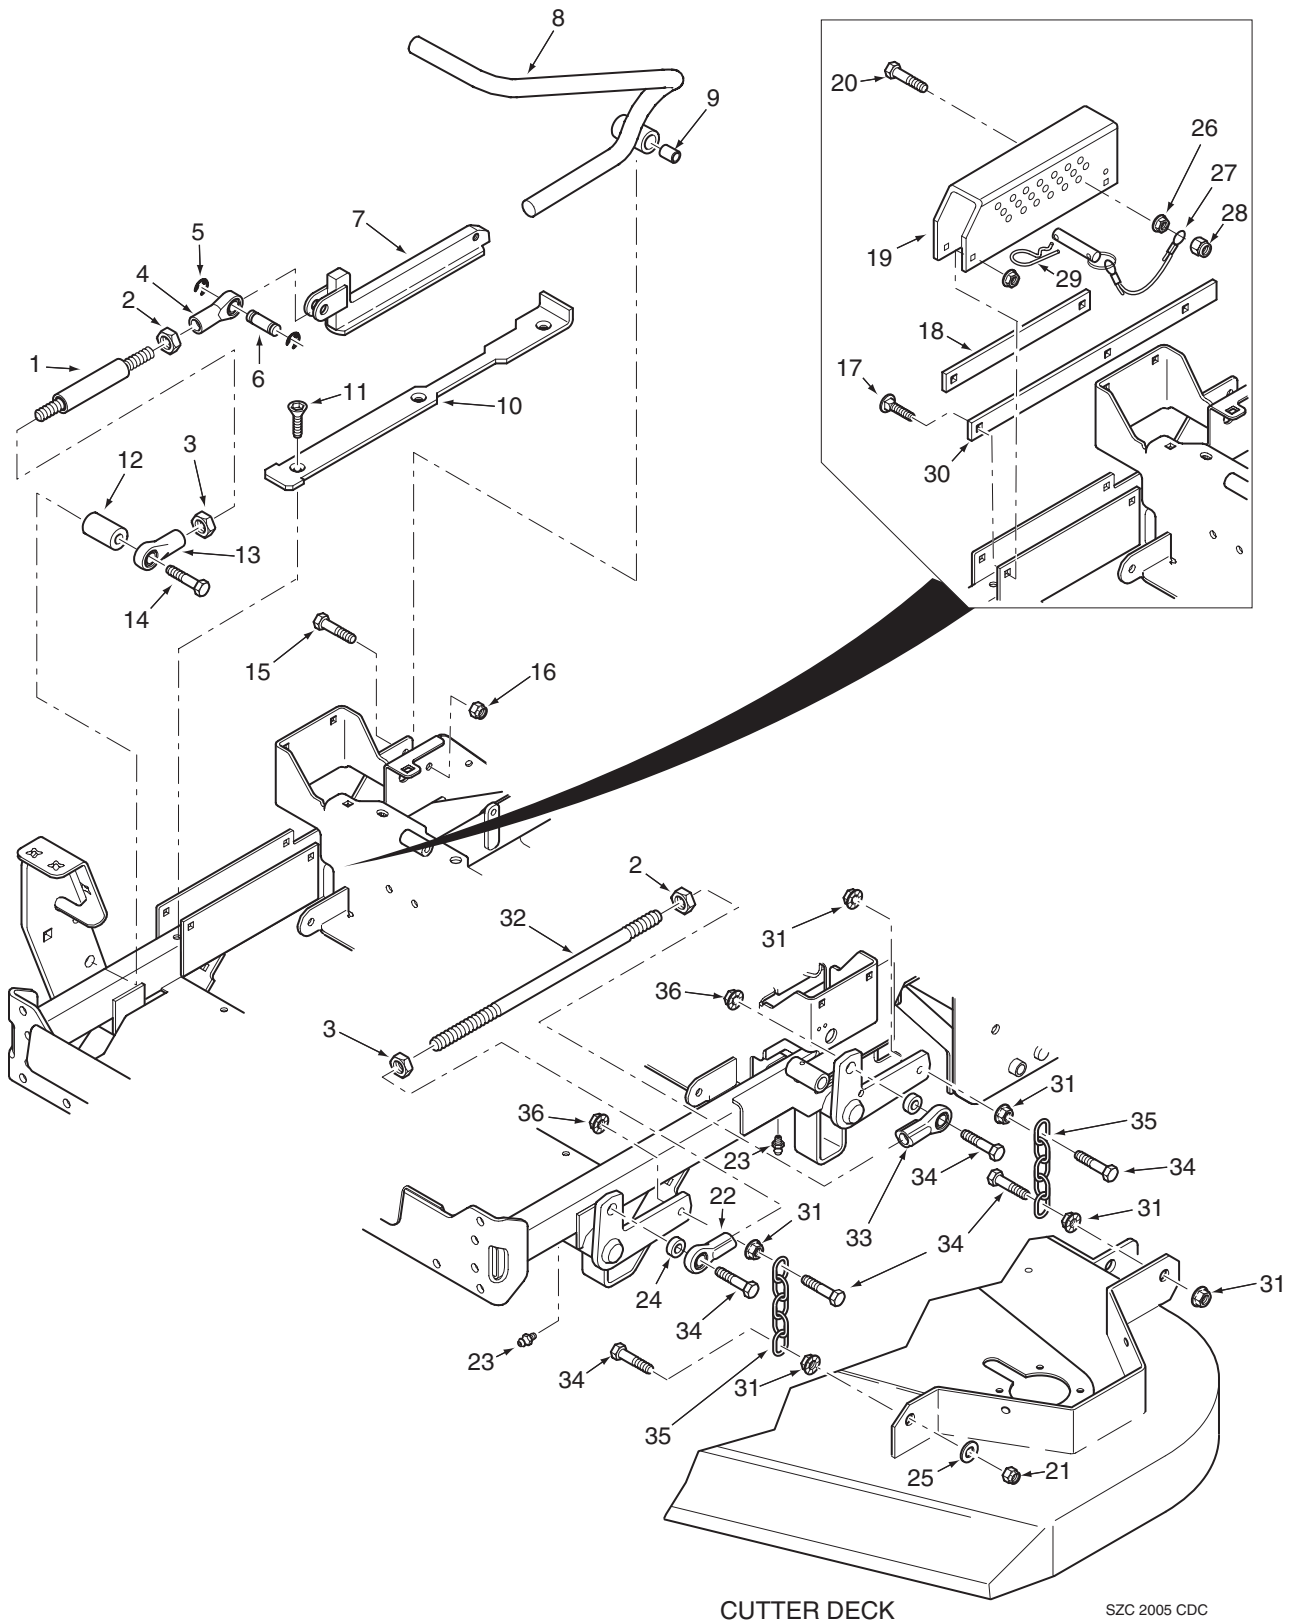


CUTTER DECK

SZC 2005 CDC

CUTTER DECK CONTROLS

Ref. No.	Part No.	Description
1	483136	Link, Deck Lift
2	04020-28	Nut, 1/2-20 UNF LH Thread Jam
3	04020-27	Nut, 1/2-20 UNF RH Jam
4	483134	Rod End, 1/2-20 LH Female
5	04050-10	Ring, Retaining 1/2" External "E"
6	43487	Pin, Deck Lift
7	483062	Slide, Deck Height Adjust
8	451703	Deck Latch Weldment
9	43668	Bushing, .502 O.D.
10	422346	Lock Plate, Deck Lift
11	04014-03	Screw, Cap 5/16-18 x 3" FHHS
12	43666	Spacer, Foot Pedal SZC
13	483135	Rod End, 1/2-20 RH Female
14	04001-145	Bolt, Hex Head 1/2-13 x 3-1/2"
15	04001-31	Bolt, Hex Head 3/8-16 x 2-1/2"
16	04021-09	Nut, Elastic Stop 3/8-16
17	04003-04	Bolt, Carriage 5/16-18 x 1"
18	422381	Guide, Short
19	423463	Bracket, Cutting Height Adjustment
20	04001-77	Bolt, Hex Head 3/8-16 x 3-1/2"
21	04021-09	Nut, Elastic Stop 3/8-16
22	483130	Rod End, 1/2-20 RH Female
23	48114-04	Grease Fitting, 1/4-28 Self Tap
24	43432	Spacer
25	04041-07	Flatwasher, 3/8-.391 x .938 x .105
26	04019-04	Nut, Serr. Flange 3/8-16
27	04067-09	Pin
	481547	Lanyard
28	04021-09	Nut, Elastic Stop 3/8-16
29	04062-04	Hair Pin Cotter, .177 x 3-1/4"
30	422380	Guide, Long
31	04019-04	Nut, Serr. Flange 3/8-16
32	483132	Link, Lift 1/2-20 x 14.18"
33	483131	Rod End, 1/2-20 LH Female
34	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
35	48540	Chain
36	04021-23	Nut, Center Lock 5/8-11


SHEET METAL COMPONENTS

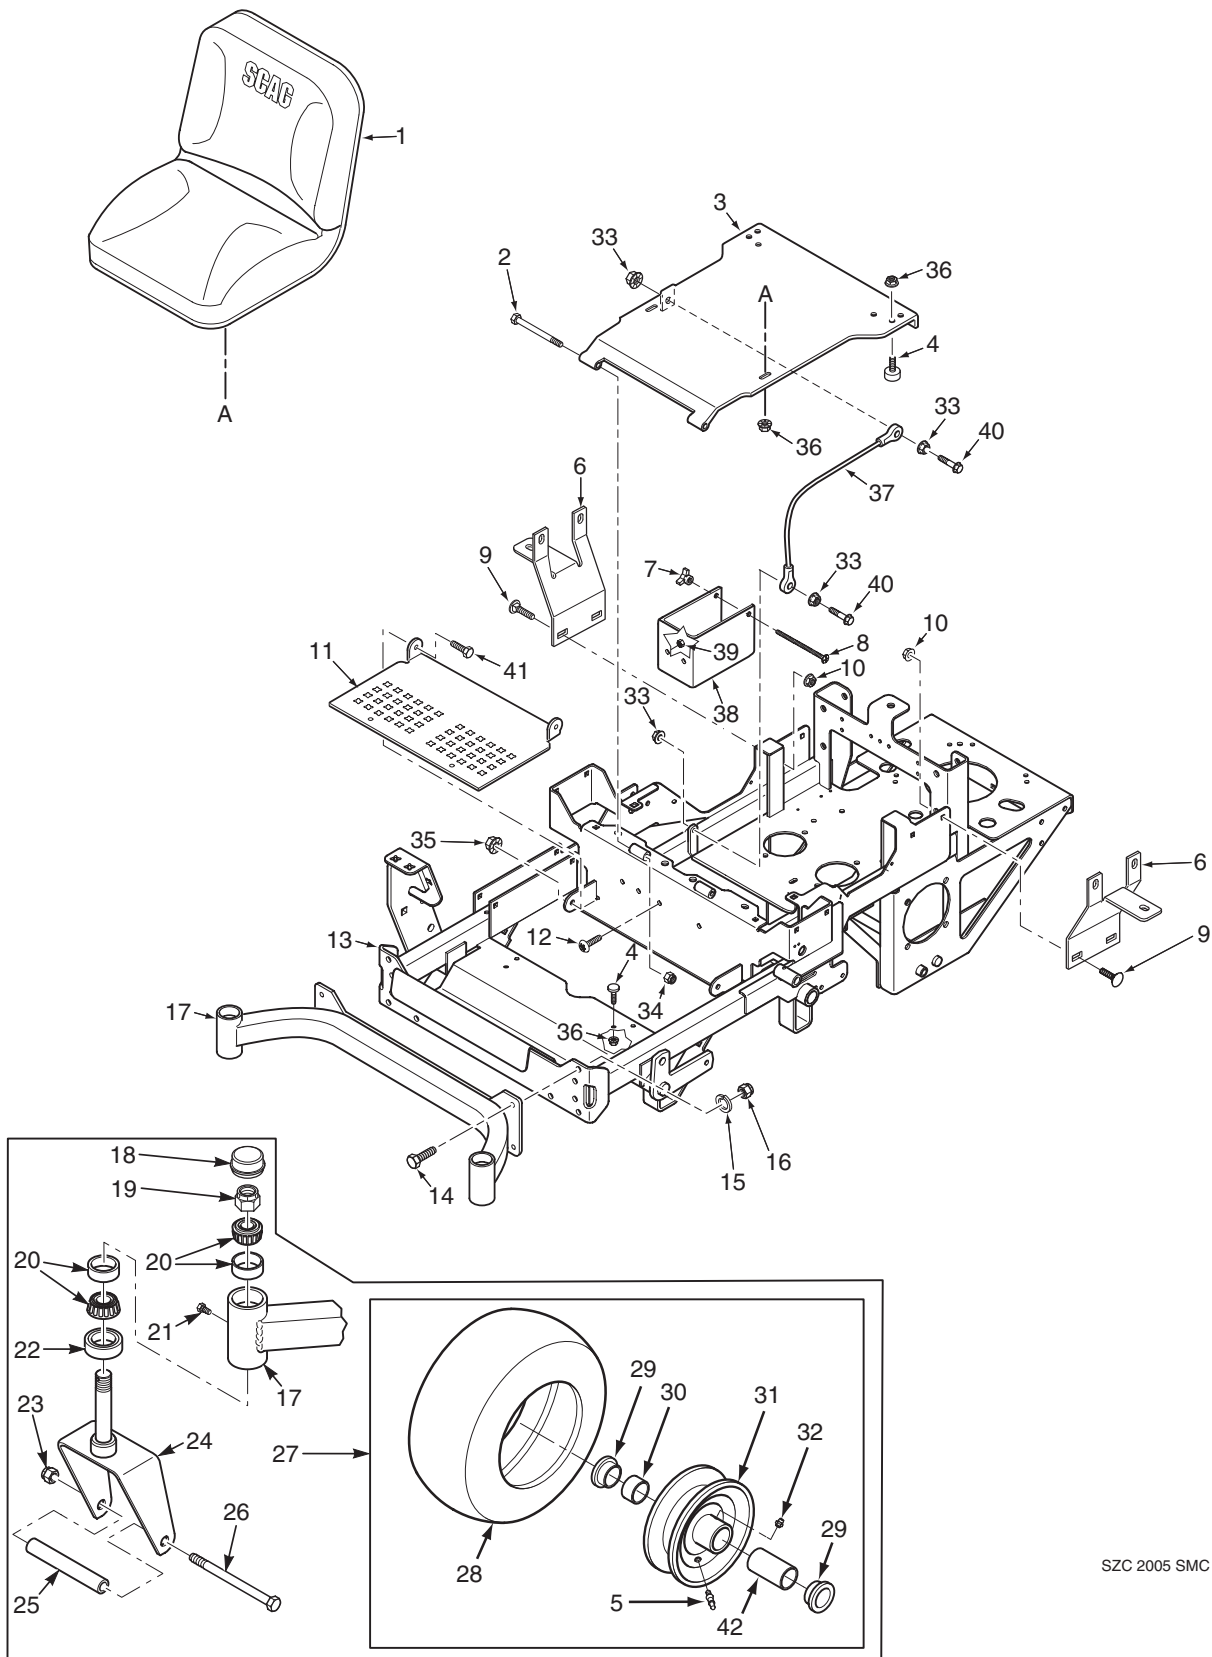

SZC 2005 SMC

SHEET METAL COMPONENTS

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	483116	Seat Assembly	31	481844	Wheel, 5" x 3.25"
2	04001-51	Bolt, Hex Head 3/8-16 x 3-3/4"	32	48114-05	Grease Fitting, 1/4-28 Straight
3	451732	Seat Mounting Base Weldment	33	04019-02	Nut, Serr. Flange 1/4-20
4	481284	Bumper, Rubber	34	04021-10	Nut, Elastic Stop 5/16-18
5	**	Tire Valve, Purchase Locally	35	04021-09	Nut, Elastic Stop 3/8-16
6	424200	Bracket, Fuel Tank Mounting	36	04019-03	Nut, Serr. Flange 5/16-18
7	04029-01	Wing Nut, 1/4-20	37	48566	Cable, Seat Stop
8	04003-39	Bolt, Carriage 1/4-20 x 6"	38	424058	Battery Box
9	04003-12	Bolt, Carriage 5/16-18 x 3/4"	39	04019-04	Nut, Serr. Flange 3/8-16
10	04019-03	Nut, Serr. Flange 5/16-18	40	04001-59	Bolt, Hex Head 1/4-20 x 1-1/4"
11	423557	Foot Plate	41	04001-19	Bolt, Hex Head 3/8-16 x 1"
12	04104-01	Bolt, Torx 3/8-16 x 1"	42	481769	Roller Bearing, .625 x 3-1/4"
13	451673	Mainframe Weldment			
14	04001-28	Bolt, Hex Head 7/16-14 x 1-1/4"			
15	04030-05	Lockwasher, 7/16"			
16	04021-11	Nut, Elastic Stop 7/16-14			
17	451728	Caster Support Weldment - 36"			
	451729	Caster Support Weldment - 42"			
18	481559	Cap, Grease			
19	04021-20	Nut, Elastic Stop 1"-14 Jam			
20	48668	Bearing w/Race			
21	482028-01	Plug, 1/4-28 Self Tap			
22	481025	Seal, 2" O.D. x 1.625 I.D.			
23	04021-07	Nut, Elastic Stop 1/2-13			
24	451727	Caster Yoke Weldment			
25	43511	Sleeve, Caster Wheel			
26	04001-80	Bolt, Hex Head 1/2-13 x 6-1/2"			
27	481843	Caster Wheel Assy. (incl. 28, 29, 30, 31, 32)			
28	481845	Tire, 11" x 4"-5			
29	481770	Retainer, .625 x 1.375			
30	481846	Roller Bearing, .625 x 1"			

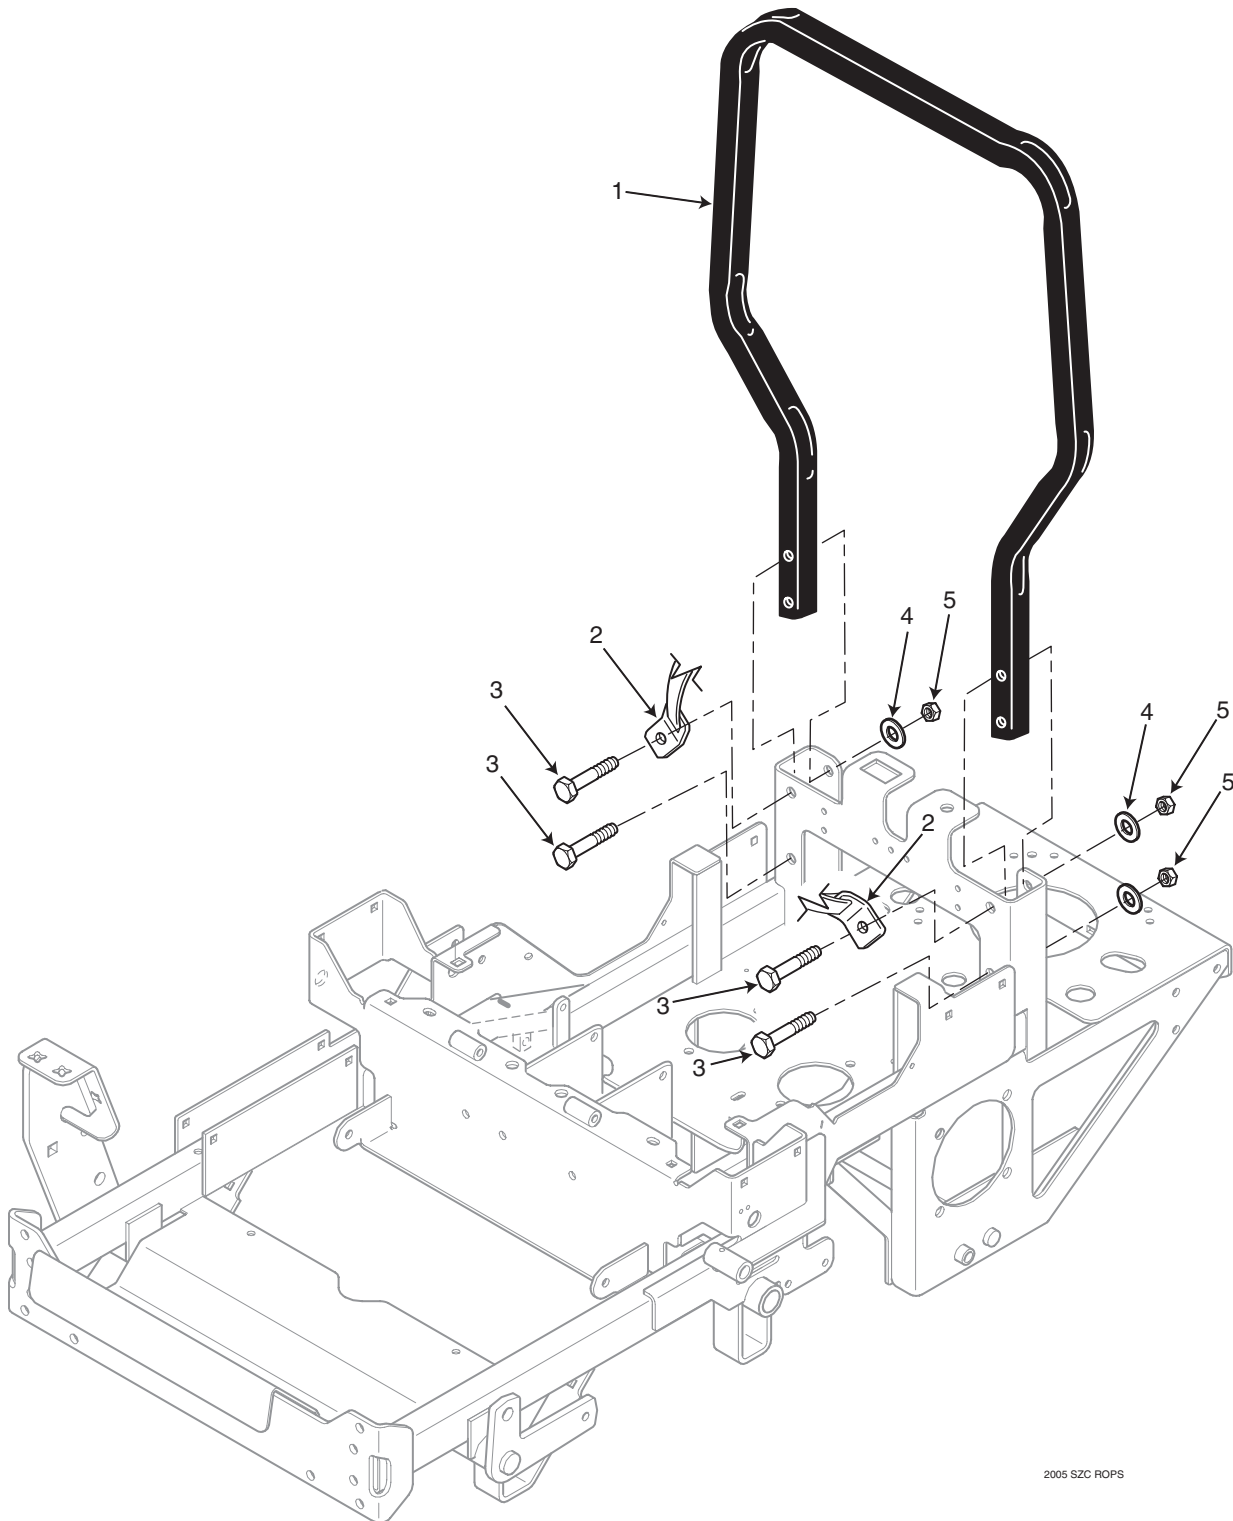
SZC ROLL OVER PROTECTION SYSTEM

2005 SZC ROPS

SZC ROLL OVER PROTECTION SYSTEM

Ref. No.	Part No.	Description
1	483140	SZC ROPS
2	483150	Seat Belt, ROPS
3	04001-145	Bolt, Hex Head 1/2-13 x 3-1/2"
4	04040-13	Flatwasher, 1/2-.562 x 1.375 x .109
5	04021-19	Nut, Center Lock 1/2-13


DRIVE SYSTEM COMPONENTS

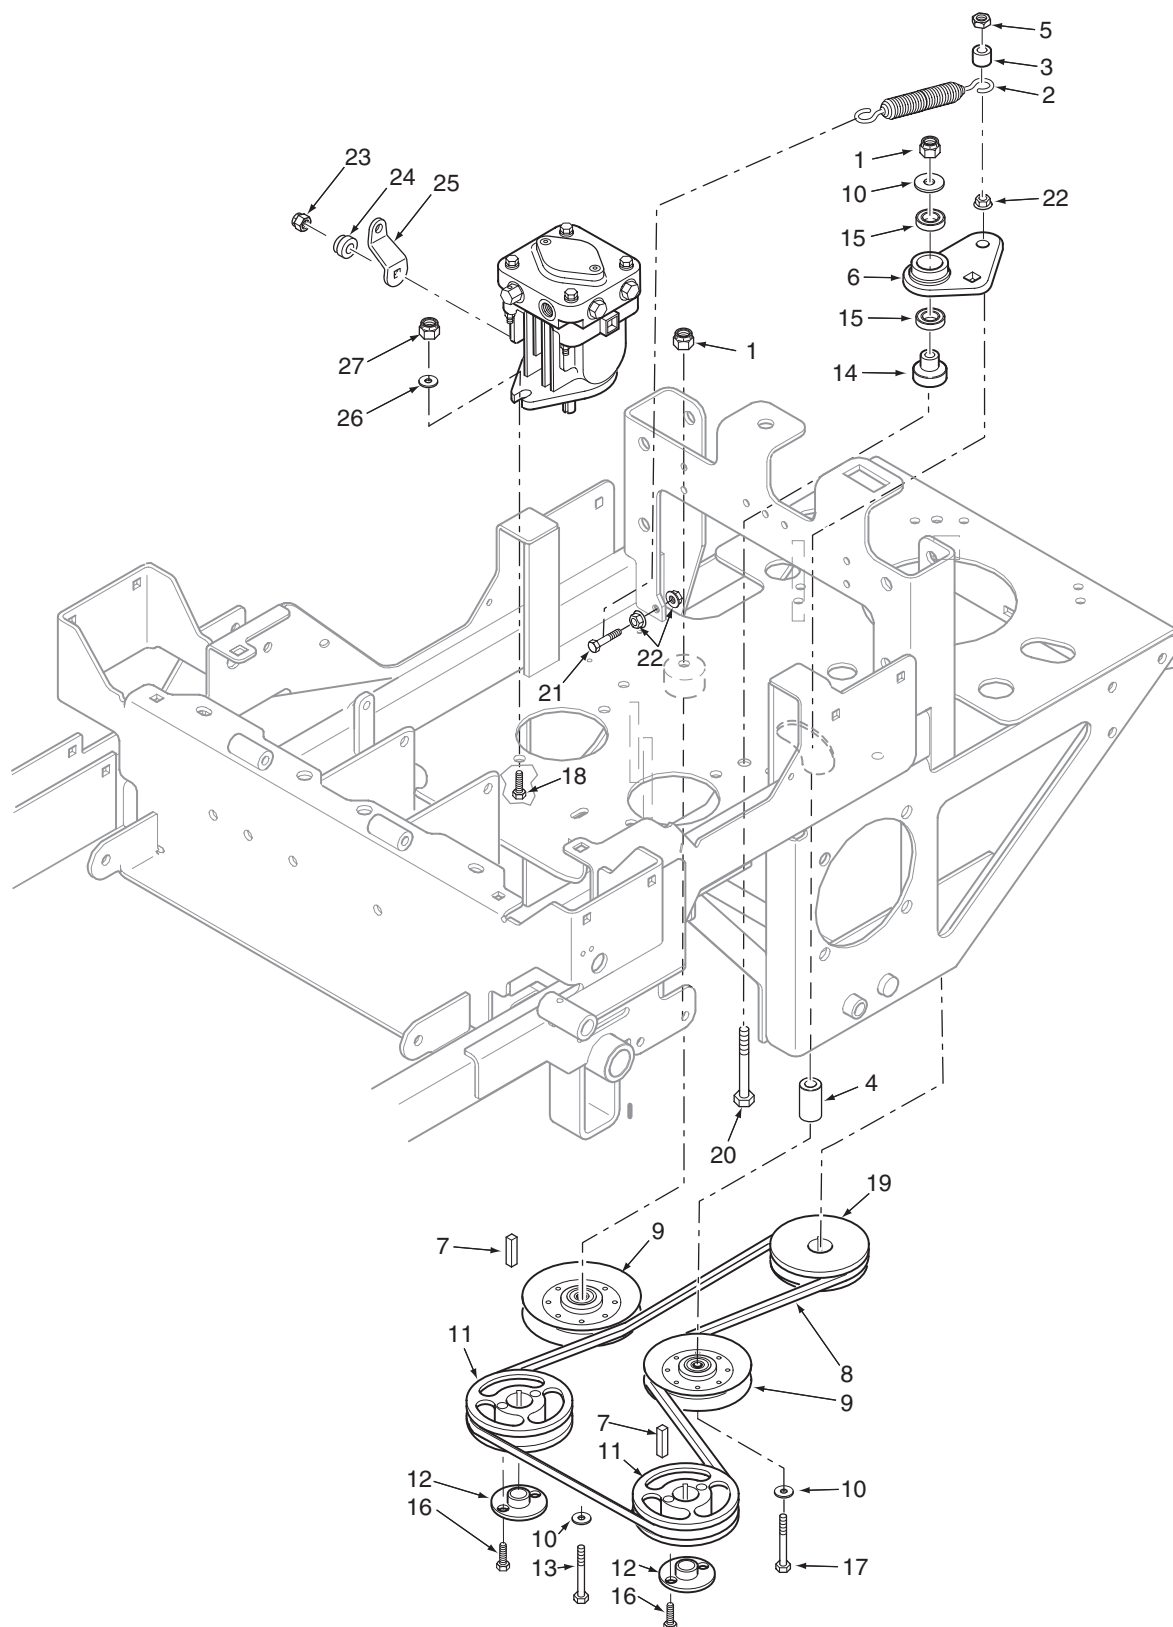

DRIVE SYSTEM COMPONENTS

Ref. No.	Part No.	Description
1	04021-09	Nut, Elastic Stop 3/8-16
2	483088	Spring, SZC Pump Drive
3	43212	Sleeve
4	43674	Spacer, Pump Idler
5	04021-05	Nut, Center Lock 3/8-16
6	49922	Idler Arm Assembly, Pump Drive
7	04063-14	Key, 5 x 5 x 25mm
8	483164	Belt, Pump Drive SZC
9	481048	Pulley, Idler 3" Dia.
10	04043-04	Flatwasher, 3/8-.391 x .938 x .105 HD
11	482649	Pulley, 5.45 O.D. Tapered Bore
12	482085	Hub, Tapered, 15mm Bore
13	04001-45	Bolt, Hex Head 3/8-16 x 2"
14	43503	Pivot, Idler Short
15	48224	Bearing
16	04001-172	Bolt, Hex Head 1/4-20 x 1" Grade 8 Black
17	04001-62	Bolt, Hex Head 3/8-16 x 3-1/4"
18	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
19	482968	Pulley, 5.45" Dia. 1" Bore
20	04001-31	Bolt, Hex Head 3/8-16 x 2-1/2"
21	04001-136	Bolt, Hex Head 3/8-16 x 1-1/4 Grade 8 Black
22	04019-04	Nut, Serr. Flange 3/8-16
23	04021-12	Nut, Center Lock 5/16-24
24	483123	Retainer, Pump Lever
25	424061	Control Lever, Pump
26	04043-04	Flatwasher, 3/8-.391 x .938 x .105
27	04021-09	Nut, Elastic Stop 3/8-16

ENGINE AND ATTACHING PARTS

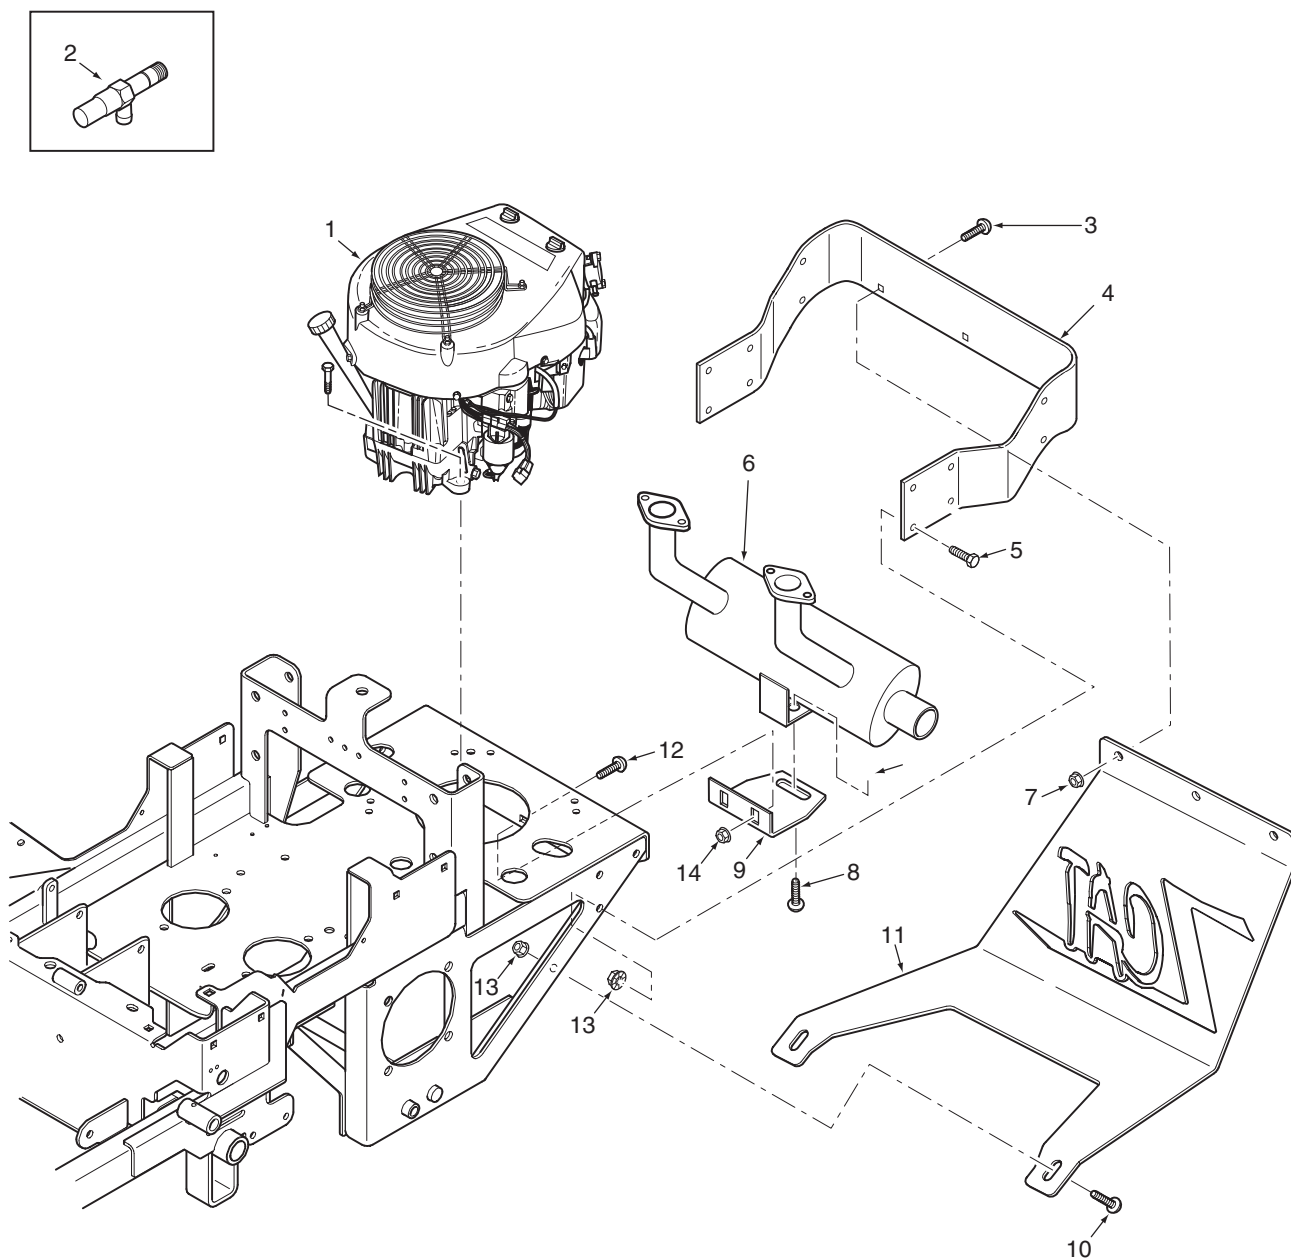


SZC 2005 EAPKA

ENGINE AND ATTACHING PARTS

Ref. No.	Part No.	Description
1	482931	Engine, Kawasaki 17hp (FH541V-AS36)
	483024	Engine, Kawasaki 19hp (FH580V-AS33)
2	482349	Extension, Oil Drain 4"
3	04104-01	Bolt, Torx 3/8-16 x 1"
4	424014	Bumper, Rear
5	04001-19	Bolt, Hex Head 3/8-16 x 1"
6	483102	Muffler, SZC Kawasaki
7	04019-04	Nut, Serr. Flange 3/8-16
8	04011-12	Bolt, 5/16-18 x 3/4" Self Tap
9	424133	Mounting Bracket, Muffler
10	04104-01	Bolt, Torx 3/8-16 x 1"
11	424072	Skidplate
12	04003-12	Bolt, Carriage 5/16-18 x 3/4"
13	04019-04	Nut, Elastic Stop 3/8-16
14	04019-03	Nut, Elastic Stop 5/16-18
15	04003-12	Bolt, Carriage 5/16-18 x 3/4"


STEERING COMPONENTS

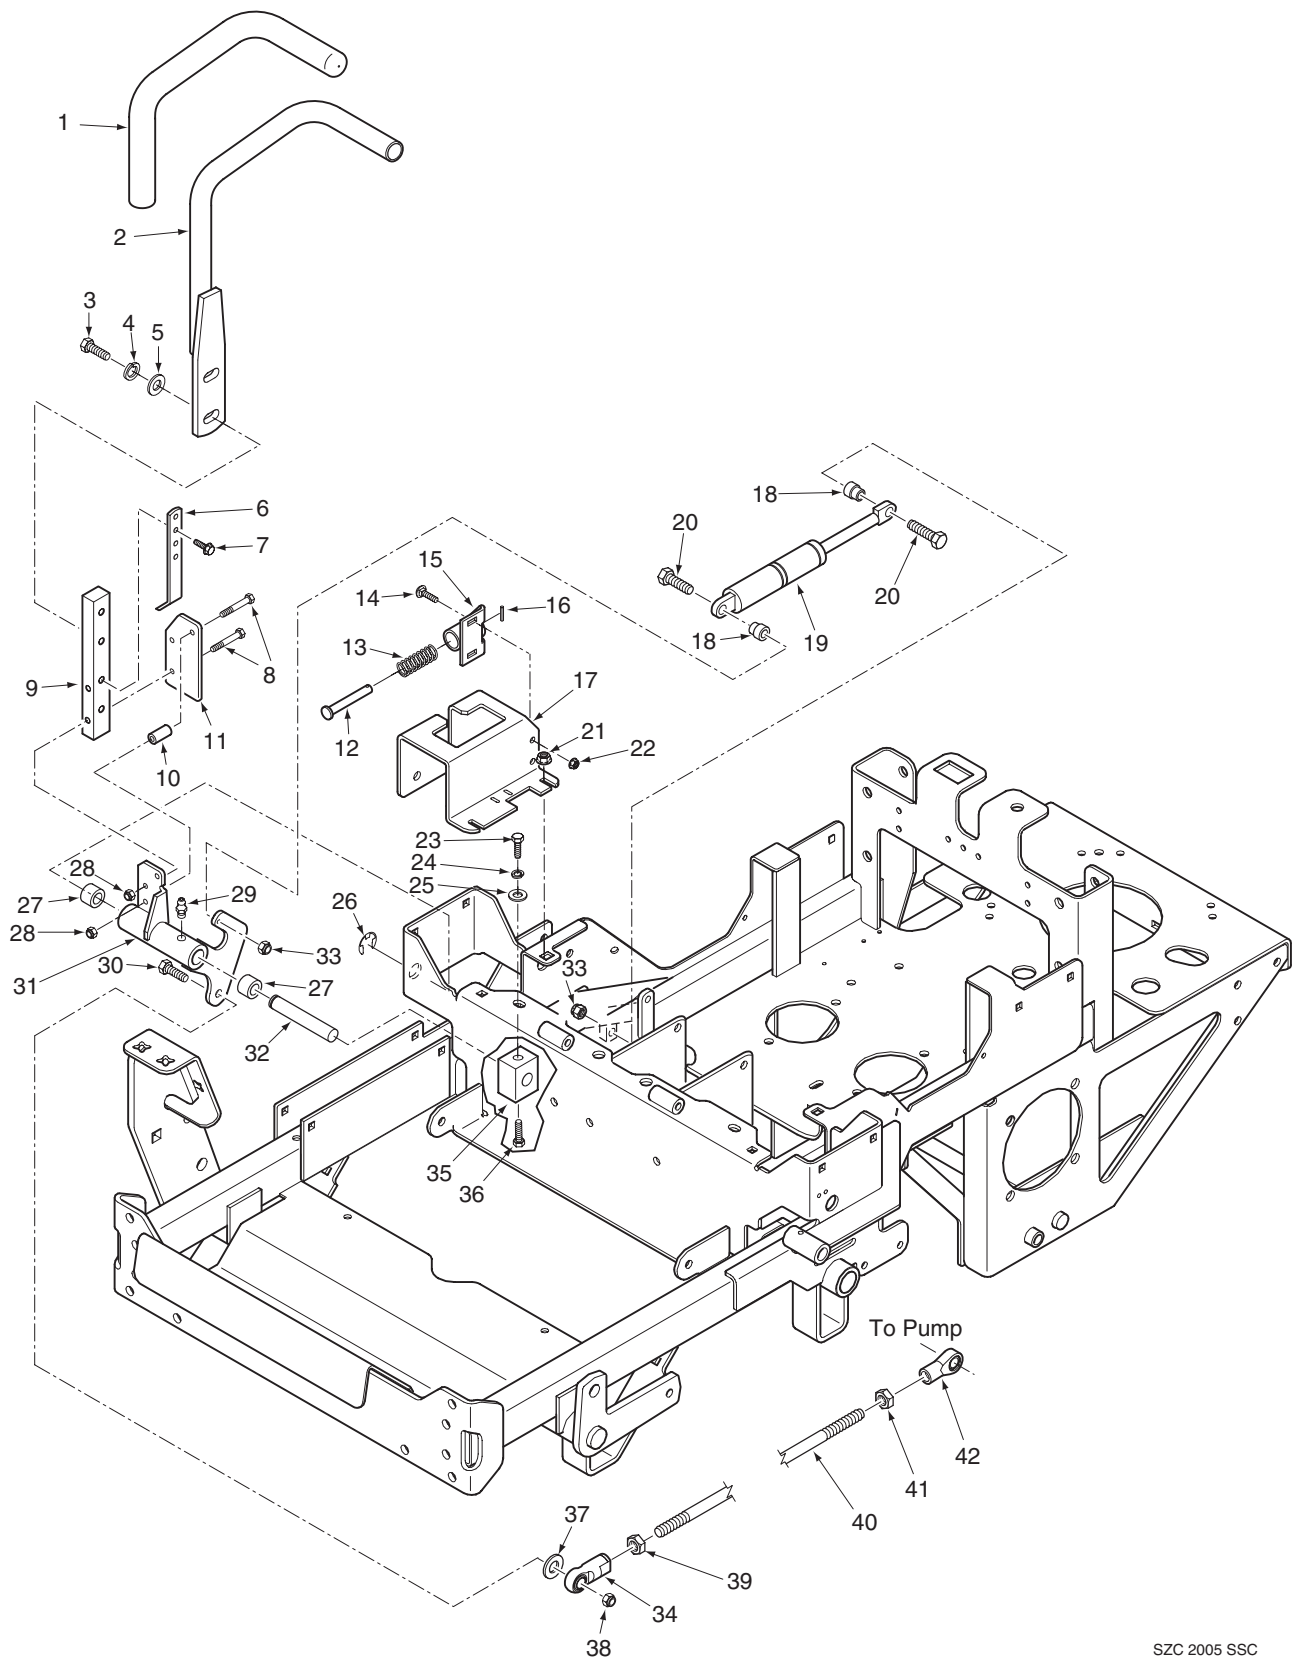

STEERING COMPONENTS

Ref. Part No. No.	Description
1 482340	Grip, Control Lever
2 461386	Handle Bar (Includes item 1)
3 04001-32	Bolt, Hex Head 3/8-16 x 1-1/4"
4 04030-04	Lock Washer, 3/8"
5 04041-07	Flatwasher, 3/8-.391 x .938 x .105
6 423057	Bracket, Switch Actuator
7 04017-16	Bolt, Hex Serr. Flange 5/16-18 x 3/4"
8 04001-17	Bolt, Hex Head 5/16-18 x 2"
9 422372	Bar, Control Lever
10 43559	Spacer, Control
11 423599	Plate, Control Lever
12 43477	Pin Retainer
13 481389	Spring
14 04003-02	Bolt, Carr. 1/4-20 x 3/4"
15 45918	Bracket, Control Return
16 04060-01	Roll Pin, Spring 5/32 x 3/4"
17 461770	Control Bracket with Decal, L.H.
461771	Control Bracket with Decal, R.H.
18 43602	Spacer, Pump Dampener
19 482452	Gas Damper
20 04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
21 04019-03	Nut, Serr., Flange, 5/16-18
22 04021-08	Nut, Elastic Stop 1/4-20
23 04001-18	Bolt, Hex Head 3/8-16 x 3/4"
24 04030-04	Lock Washer, 3/8"
25 04041-07	Flatwasher, 3/8-.391 x .938 x .105
26 04050-02	Retaining Ring, 3/4" Ext.
27 48100-06	Bushing, .753 ID
28 04021-10	Nut, Elastic Stop 5/16-18
29 48114-04	Grease Fitting, 1/4-28 Self Tap
30 04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
31 49921	Linkage Bellcrank Assembly R.H.(Incl. Items 27, 29)
49920	Linkage Bellcrank Assembly L.H.(Incl. Items 27, 29)
32 43616	Shaft, Steering Control
33 04021-10	Nut, Elastic Stop 5/16-18
34 482330	Rod End, 3/8-24 RH Female
35 482099	Block, Clamping
36 04001-19	Bolt, Hex Head 3/8-16 x 1"
37 04041-07	Flatwasher, 3/8-.391 x .938 x .105
38 04021-09	Nut, Elastic Stop 3/8-16
39 04020-14	Nut, 3/8-24 RH Thread
40 483133	Link, Pump 3/8-24 x 10.89"
41 04020-17	Nut, 3/8-24 UNF-2B LH Thread
42 482331	Rod End, 3/8-24 LH Thread


BRAKE COMPONENTS

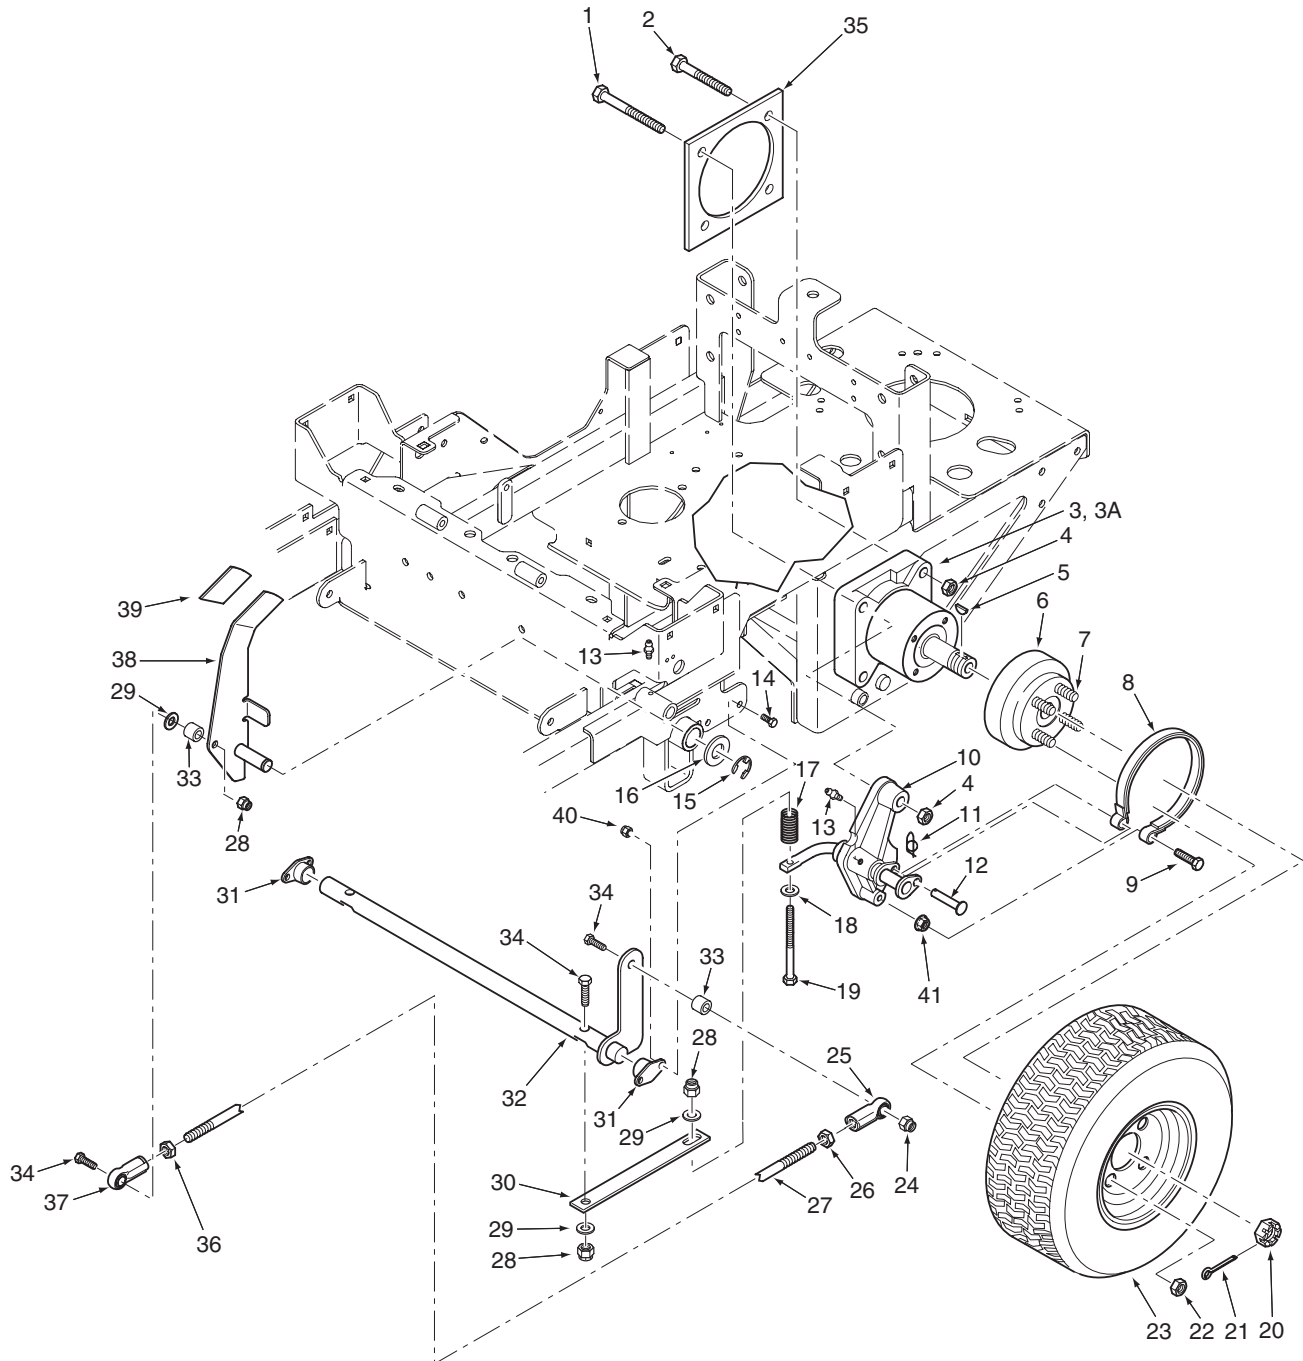

BRAKE COMPONENTS

Ref. No.	Part No.	Description
1	04001-163	Bolt, Hex Head 1/2-13 x 3-3/4"
2	04001-52	Bolt, Hex Head 1/2-13 x 2-1/2"
3	483107	Wheel Motor, L.H. - Hydro-Gear
3A	483108	Wheel Motor, R.H. - Hydro-Gear
4	04021-19	Nut, 1/2-13 Center Lock
5	04063-25	Key, Woodruff 5/16 x 1"
6	461438	Wheel Hub Assembly
7	04008-01	Bolt, Serr. Flange 1/2-20 x 1.563"
8	481601	Brake Band Assembly
9	04001-31	Bolt, Hex Head 3/8-16 x 2-1/2"
10	451730	Brake Linkage Weldment, L.H. SZC
	451731	Brake Linkage Weldment, R.H. SZC
11	04069-01	Pin, Rue Cotter 3/8 Dia.
12	04064-16	Clevis Pin, 3/8 x 1.93"
13	48114-04	Grease Fitting, 1/4-28
14	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
15	04050-01	Retaining Ring, .625 Ext.
16	04043-06	Flatwasher, 5/8-.688 x 1.75 x .134
17	483124	Spring, Brake
18	04043-04	Flatwasher, 3/8-.391 x .938 x .105 HD
19	04001-77	Bolt, Hex Head 3/8-16 x 3-1/2"
20	48680	Nut, Hex Castle 1.0-20 UNEF
21	04061-06	Cotter Pin, 9/64 x 1-1/2"
22	04028-02	Lug Nut, 1/2-20
23	482185	Wheel Assembly, 23 x 8.5-12 4 Ply (36")
	482186	Rim w/Valve Stem (36")
	481833	Tire, 23 x 8.5-12 4 Ply (36")
	482413	Wheel Assembly, 23 x 9.5-12 4 Ply (42")
	482414	Rim w/Valve Stem (42")
	482194	Tire, 23 x 9.5-12 4 Ply (42")
24	04021-09	Nut, Elastic Stop 3/8-16
25	483128	Rod End, 3/8-24 R.H. Female
26	04020-25	Nut, 3/8-24 UNF Jam
27	483129	Link, Brake 3/8-24 x 8-5/8"
28	04021-09	Nut, Elastic Stop 3/8-16
29	04043-04	Flatwasher 3/8-.391 x .938 x .105 HD
30	483111	Spring, Flat Brake
31	482061	Bushing, Self Align
32	451733	Brake Shaft Weldment, SZC
33	43063	Spacer
34	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
35	423279	Plate Weldment, Motor Backing
36	04020-26	Nut, 3/8-24 UNF L.H. Jam
37	483127	Rod End, 3/8-24 L.H. Female
38	461509	Brake Lever (includes item 39)
39	482102	Grip, Brake Lever
40	04021-10	Nut, Elastic Stop 5/16-18
41	04019-04	Nut, Serr. Flange 3/8-16

FUEL AND HYDRAULIC SYSTEM

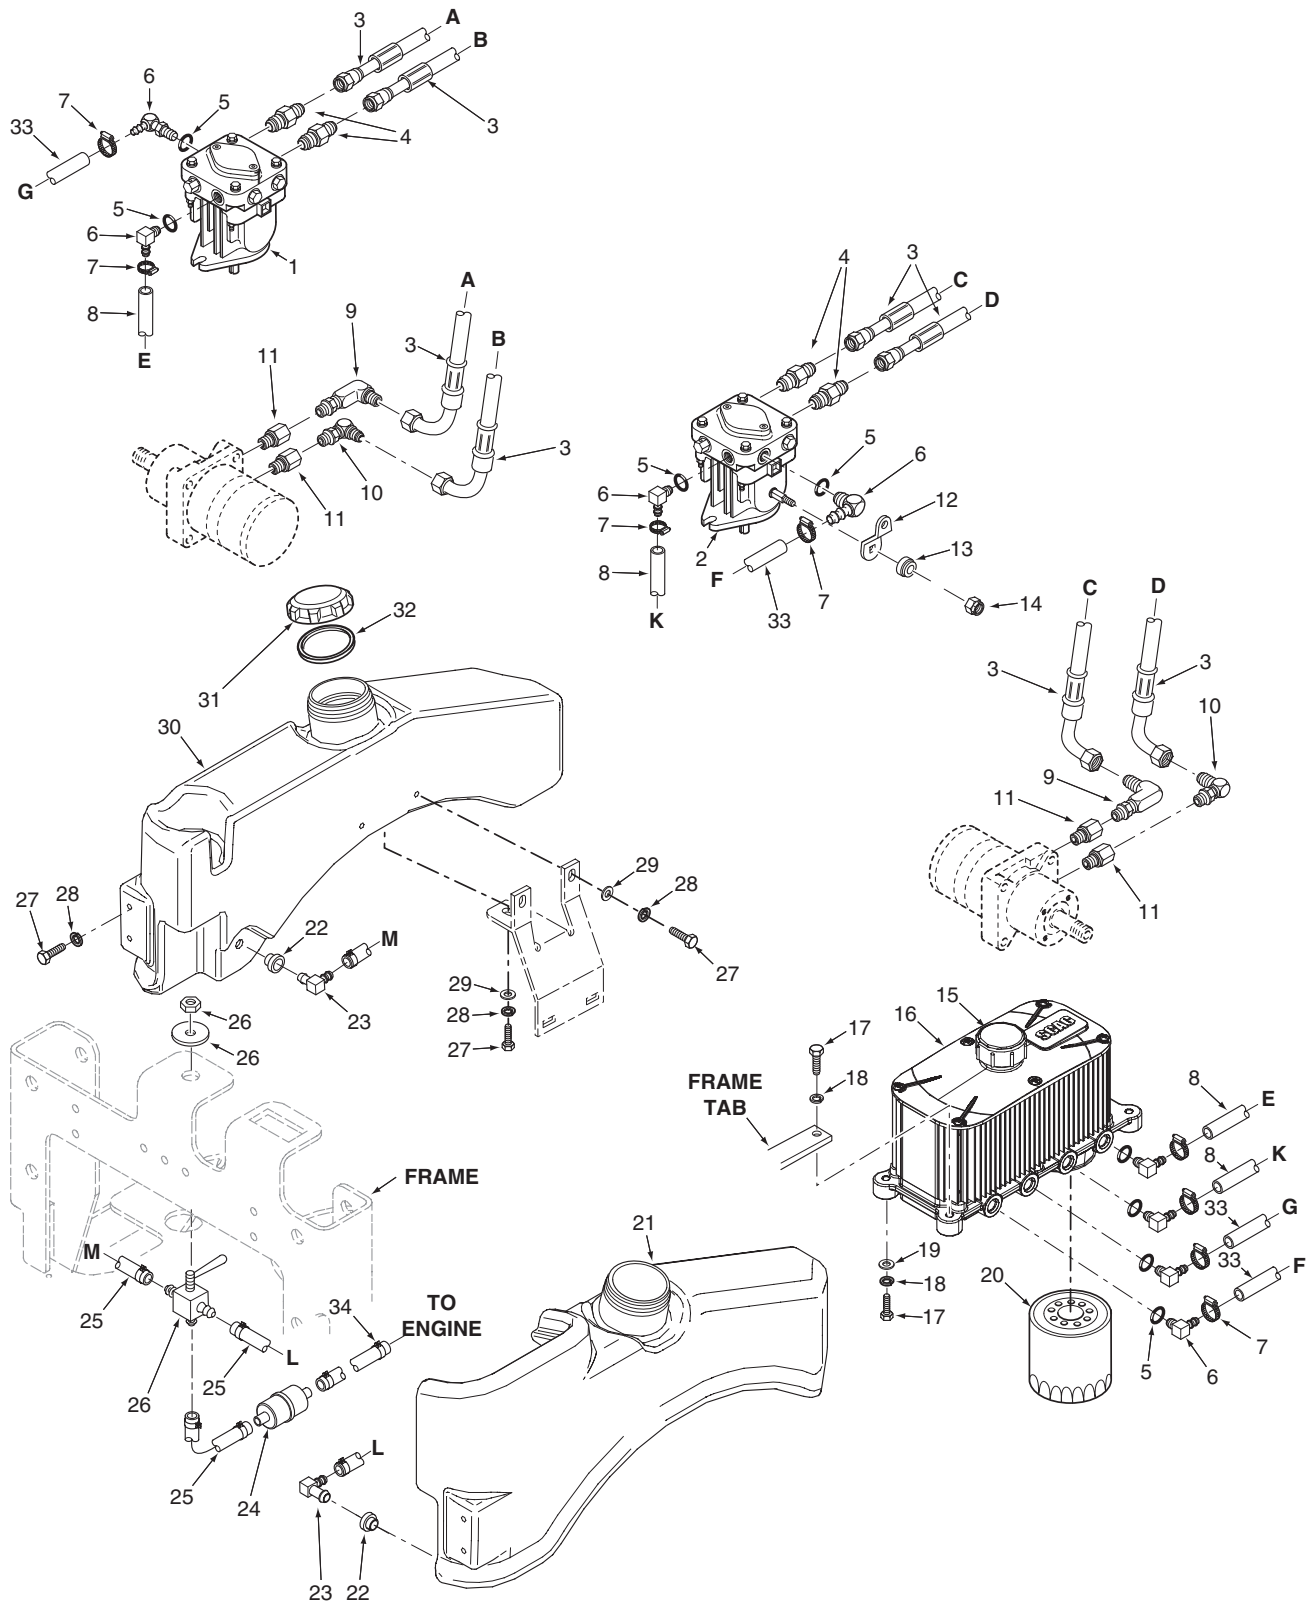


FUEL AND HYDRAULIC SYSTEM

Ref. Part No. No. Description			Ref. Part No. No. Description		
1	483106	Pump, R.H. BDP-10A (PG-1GCC-D11X-XXXX)	18	04030-03	Lockwasher, 5/16" Spring
2	483105	Pump, L.H. BDP-10A (PG-1JCC-D11X-XXXX)	19	04040-15	Flatwasher, 5/16-.375 x .875 x .083
3	482994	Hose Assembly, Wheel Motor SZC	20	48462-01	Filter, Spin On
4	48572-04	Fitting, 1/2" JIC x 1/2" O-Ring	21	461828	Fuel Tank, L.H. SZC
5	48603-06	O-Ring	22	48309	Tank Bushing
6	482266-01	Elbow, 90 Degree O-Ring 9/16-18 x 3/8 Hose	23	48939	Elbow, 90 Degree
7	48136-13	Clamp, Hose .69 Max Dia.	24	**	Fuel Filter
8	48811	Hose, 3/8" Pushlock (order by inch)	25	48058	Fuel Hose, 1/4 ID
9	481761-01	Elbow, 90 Degree JIC to O-Ring	26	482212	Valve, Fuel Shutoff
10	48350-02	Elbow, 90 Degree 1/2 x 1/2" JIC to O-Ring	27	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
11	48938-02	O-Ring Bushing, 5/8"	28	04030-03	Lockwasher, 5/16
12	424061	Control Lever, Pump	29	04040-15	Flatwasher, 5/16-.375 x .875 x .083
13	483123	Retainer, Pump Lever	30	461829	Fuel Tank, R.H. SZC
14	04021-12	Nut, Center Lock 5/16-24	31	482547	Cap, Fuel Tank (incl. item #32)
15	483094	Cap, Oil Reservoir	32	482774	Gasket, Gas Tank Cap
16	461752	Oil Reservoir (incl. items 6, 15, 20)	33	483146	Hose, 3/8" Pushlock Gray (order by inch)
17	04001-09	Bolt, Hex Head 5/16-18 x 1"	34	48059-01	Clamp, Fuel Hose 1/4 Hose ID

** Available through the individual engine manufacturer.


ELECTRICAL SYSTEM

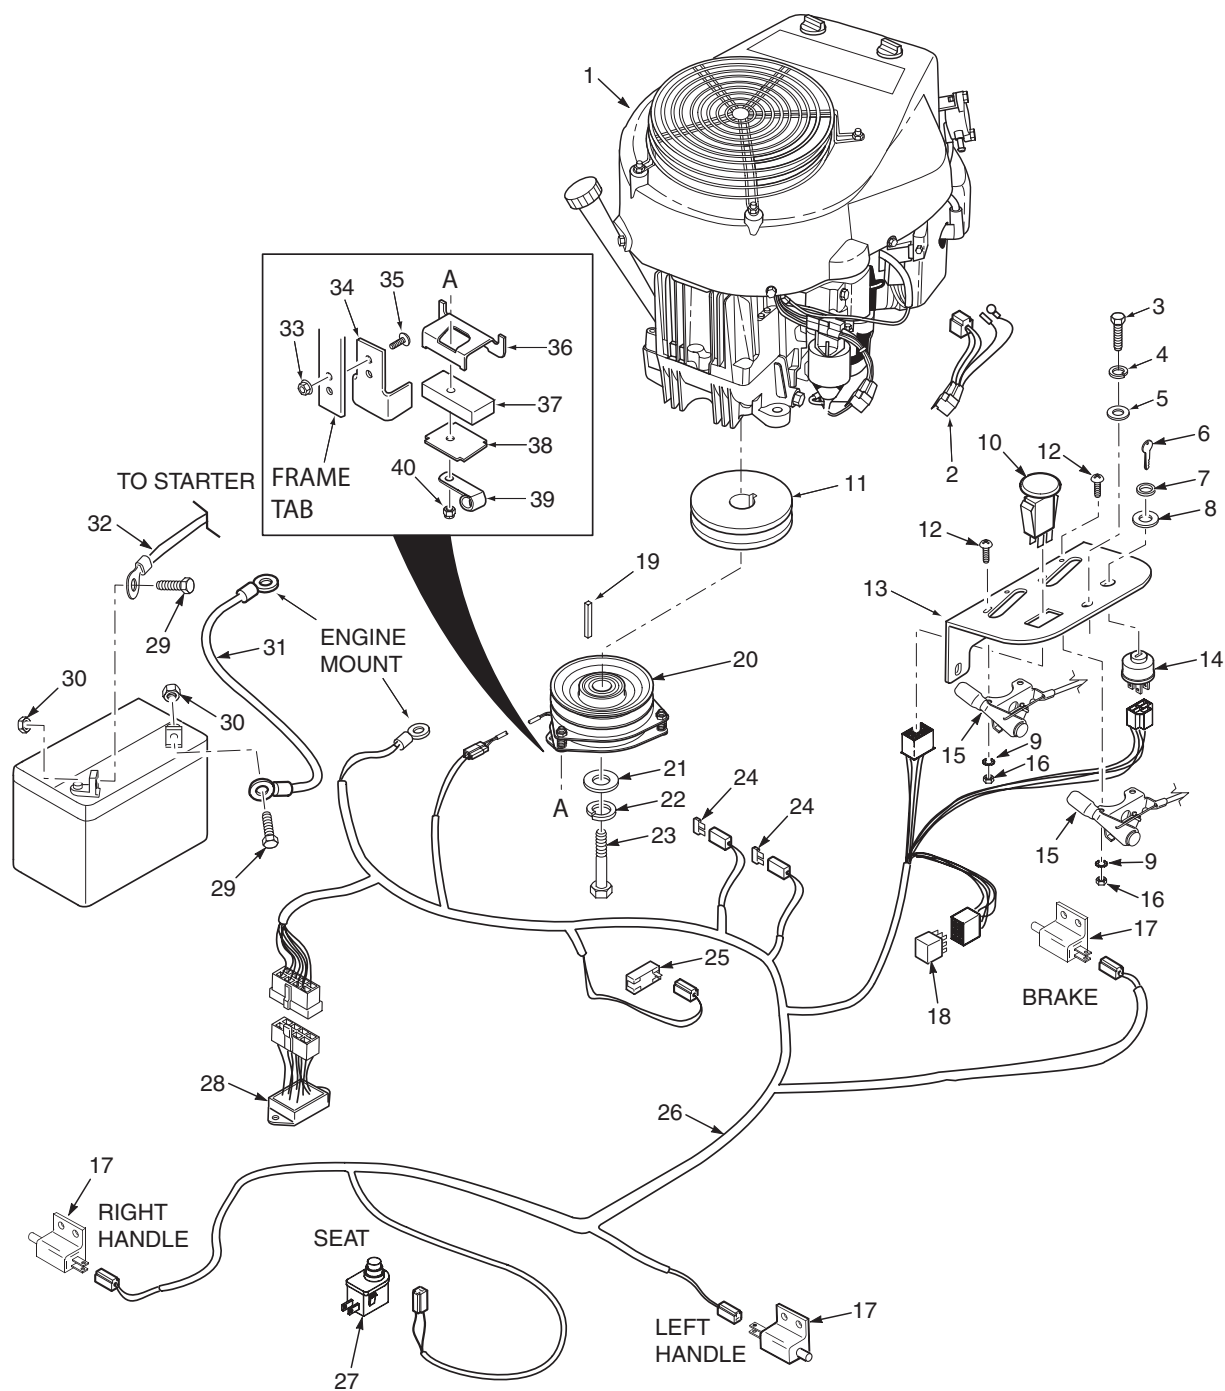

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description
1	482931	Engine, Kawasaki 17hp (FH541V-AS36)
	483024	Engine, Kawasaki 19hp (FH580V-AS33)
2	483103	Wire Harness Adapter, SZC KA
3	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
4	04030-03	Lockwasher, 5/16
5	04040-15	Flatwasher, 5/16-.375 x .875 x .083
6	48017-02	Key, Ignition
7	48017-04	Nut, Hex 5/8-32
8	48017-03	Lockwasher, 5/8" Internal
9	04031-01	Lock Washer, #10 External Tooth
10	483162	Switch, PTO
11	482968	Pulley, 5.45" Dia. 1" Bore
12	04010-12	Screw, #10-32 x 3/4"
13	461836	Instrument Panel
14	48798	Switch, Ignition
15	483168	Control Cable
16	04020-01	Nut, Hex #10-32
17	481637	Switch, N/O
18	483013	Relay
19	04063-23	Key, 1/4 x 1/4 x 3-1/4"
20	461772	Clutch Assembly, GT2.5 - 1" Bore (incl. items 33, 34, 35, 36, 37, 38, 39, 40)
21	04041-28	Flatwasher, 7/16-.469 x 1.75 x .25
22	04030-05	Lockwasher, 7/16 Spring
23	04102-04	Bolt, Hex Head 7/16-20 x 2-1/2" w/Patch
24	48298	Fuse, 20 amp
25	483072	Hourmeter
26	483020	Wire Harness, SZC
27	481638	Switch, Seat
28	483029	Electric Module
29	04001-44	Bolt, Hex Head 1/4-20 x .5"
30	04020-02	Nut, Hex 1/4-20
31	48029-15	Battery Cable, Negative Black
32	48029-12	Battery Cable, Positive Red
33	04021-10	Nut, Elastic Stop 5/16-18
34	421370	Plate, Clutch Anti-Rotation
35	04003-04	Bolt, Carriage 5/16-18 x 1"
36	422533	Retainer, Clutch
37	481716	Rubber Pad, Clutch Stop
38	422534	Plate, Backing
39	48030-09	Clamp, Cable 1/2" ID
40	04021-10	Nut, Elastic Stop 5/16-18

HYDRAULIC PUMP ASSEMBLY

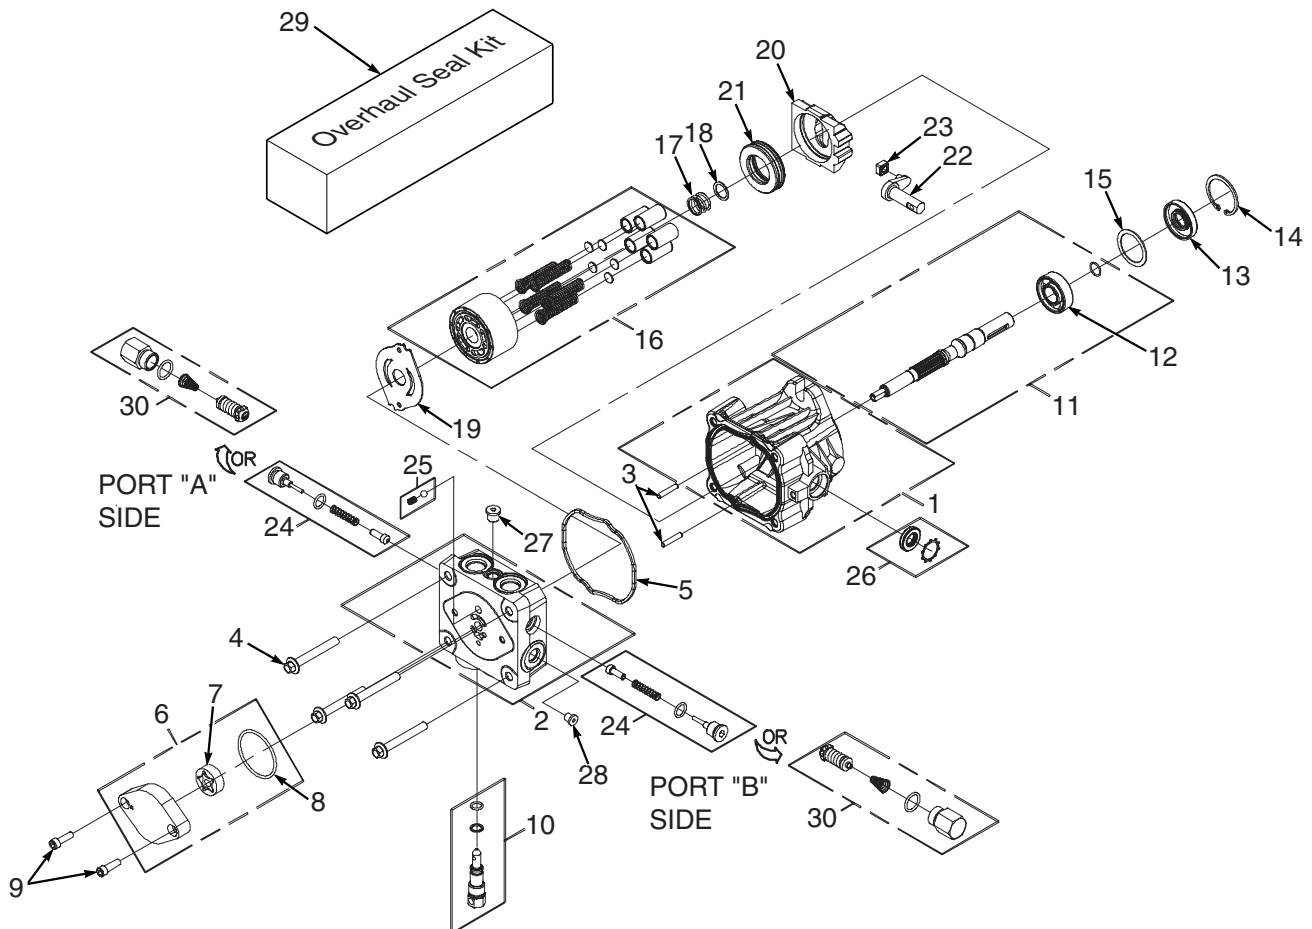


HYDRAULIC PUMP ASSEMBLY

Ref. No.	Part No.	Description
1	HG 70516	Housing Kit
2	HG 70573	End Cap Kit
3	HG 50641	Straight Headless Pin
4	HG 50969	Hex Flange Bolt, M8-1.25 x 60mm
5	HG 51232	Housing O-Ring
6	HG 2513027	Charge Pump Kit
7	HG 50273	Gerotor Assembly
8	HG 9004101-1340	O-Ring
9	HG 50095	Socket Head Screw, M6 x 1.0-20mm
10	HG 2513030	Bypass Valve Kit
11	HG 70521	Pumpshaft Kit
12	HG 50315	Ball Bearing, 17 x 40 x 12
13	HG 51161	Lip Seal
14	HG 50329	Retaining Ring
15	HG 50951	Spacer
16	HG 70331	Cylinder Block Kit
17	HG 2003014	Block Spring
18	HG 2003017	Block Thrust Washer
19	HG 51444	Valve Plate
20	HG 2003087	Swash Plate
21	HG 50551	Ball Thrust Bearing
22	HG 50807	Trunnion Arm
23	HG 2000015	Slot Guide
24	HG 2510062	Check Valve Kit (.024" Orifice) port "A" on Left Hand Pump, port "B" on Right Hand Pump
25	HG 70403	Charge Relief Kit
26	HG 2513043	Trunnion Seal with Retainer
27	HG 9005110-4400	Straight Thread Plug
28	HG 9005110-3100	Straight Thread Plug
29	HG 70525	Overhaul Seal Kit
30	HG 70589	System Check Relief Kit, port "B" on Left Hand Pump, port "A" on Right Hand Pump

REPLACEMENT DECALS AND INFORMATION PLATES



1

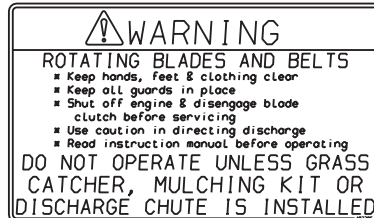


2



8



6

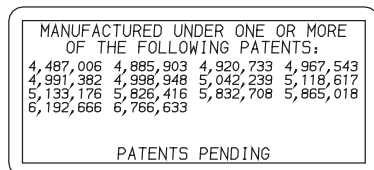


5



7




13

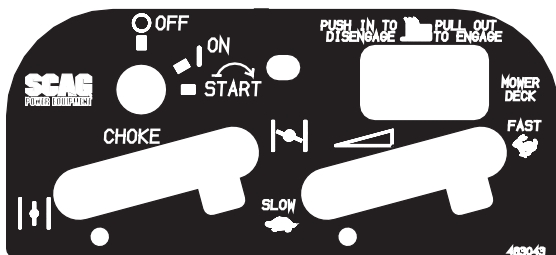

10




9

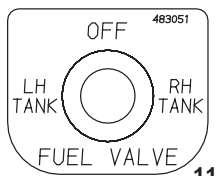


11



12

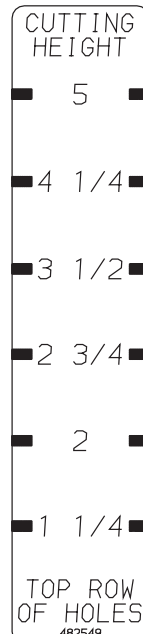

18

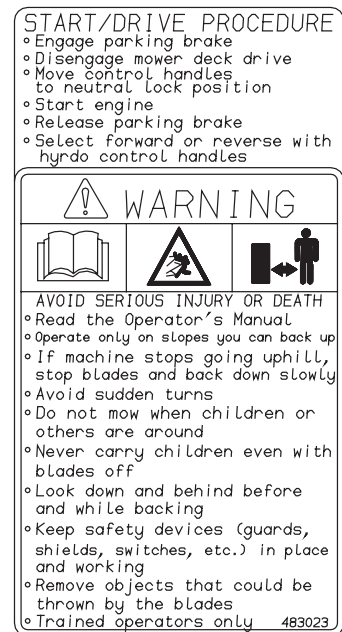

4

REPLACEMENT DECALS AND INFORMATION PLATES


Ref. No.	Part No.	Description
1	482285	Decal, Danger-Spinning Blades
2	482286	Decal, Warning-Rotating Blades
3	483059	Decal, 36 Advantage
	483060	Decal, 42 Advantage
4	483023	Decal, Fuel Tank Start/Drive
5	483044	Decal, Patents
6	482100	Decal, Traction Control
7	481971	Decal, Heavy Duty Commercial
8	48404	Decal, Metalcraft - Made in USA
9	481039	Decal, Belt Cover
10	483163	Decal, Instrument Panel
11	483051	Decal, Fuel Shutoff
12	482566	Decal, Cutting Height Bottom Row of Holes
13	483026	Decal, Front SZC
14	483061	Decal, Seat Support
15	483027	Decal, Rear SZC
16	482166	Decal, Front Footplate
17	482165	Decal, Discharge Chute
18	482549	Decal, Cutting Height Top Row of Holes

IMPORTANT ADJUSTMENT PROCEDURES

READ OPERATOR'S MANUAL FOR MORE DETAILS
Check tire pressure - (Drive tires-12 psi)
- (Caster tires-25 psi)

NEUTRAL ADJUSTMENT

Loosen jam nuts



Rotate turnbuckle
With an operator in the seat, engine running, control lever in neutral and the parking brake disengaged - adjust control linkage. Loosen jam nuts. If wheel rotates forward, adjust turnbuckle CW. If wheel rotates rearward, adjust turnbuckle CCW. Adjust until drive wheel stops turning. Tighten jam nuts. Repeat procedure until proper Neutral Adjustment is obtained.

TRACKING ADJUSTMENT

If the machine pulls to the right, adjust LH control linkage CW to slow left wheel. If the machine pulls to the left adjust RH control linkage CW to slow right wheel. Readjust neutral if necessary.

FREE WHEEL OPERATION

To move machine without running the engine, rotate both dump valves located at the LH side of the pumps CCW 1/2 turn to "freewheel" positions. Return dump valves to original position to operate the mower. Tighten to 7-10 Ft-Lbs.

HYDRAULIC FLUID LEVEL

Check hydraulic fluid level while fluid is cool. Fluid level should be between add & full marks on the dipstick. Fill with SAE 20W50 motor oil only.

IMPORTANT

Do not overfill. Room for hot fluid expansion must be allowed or resulting expansion may cause leaks in the system.

483061

14



483027

15



483059

3



482166

16

WARNING


DO NOT OPERATE WITHOUT DISCHARGE CHUTE, MULCHING KIT, OR ENTIRE GRASS CATCHER INSTALLED

482165

17

SZC 2005 RDP2

ELECTRICAL SCHEMATIC - KAWASAKI

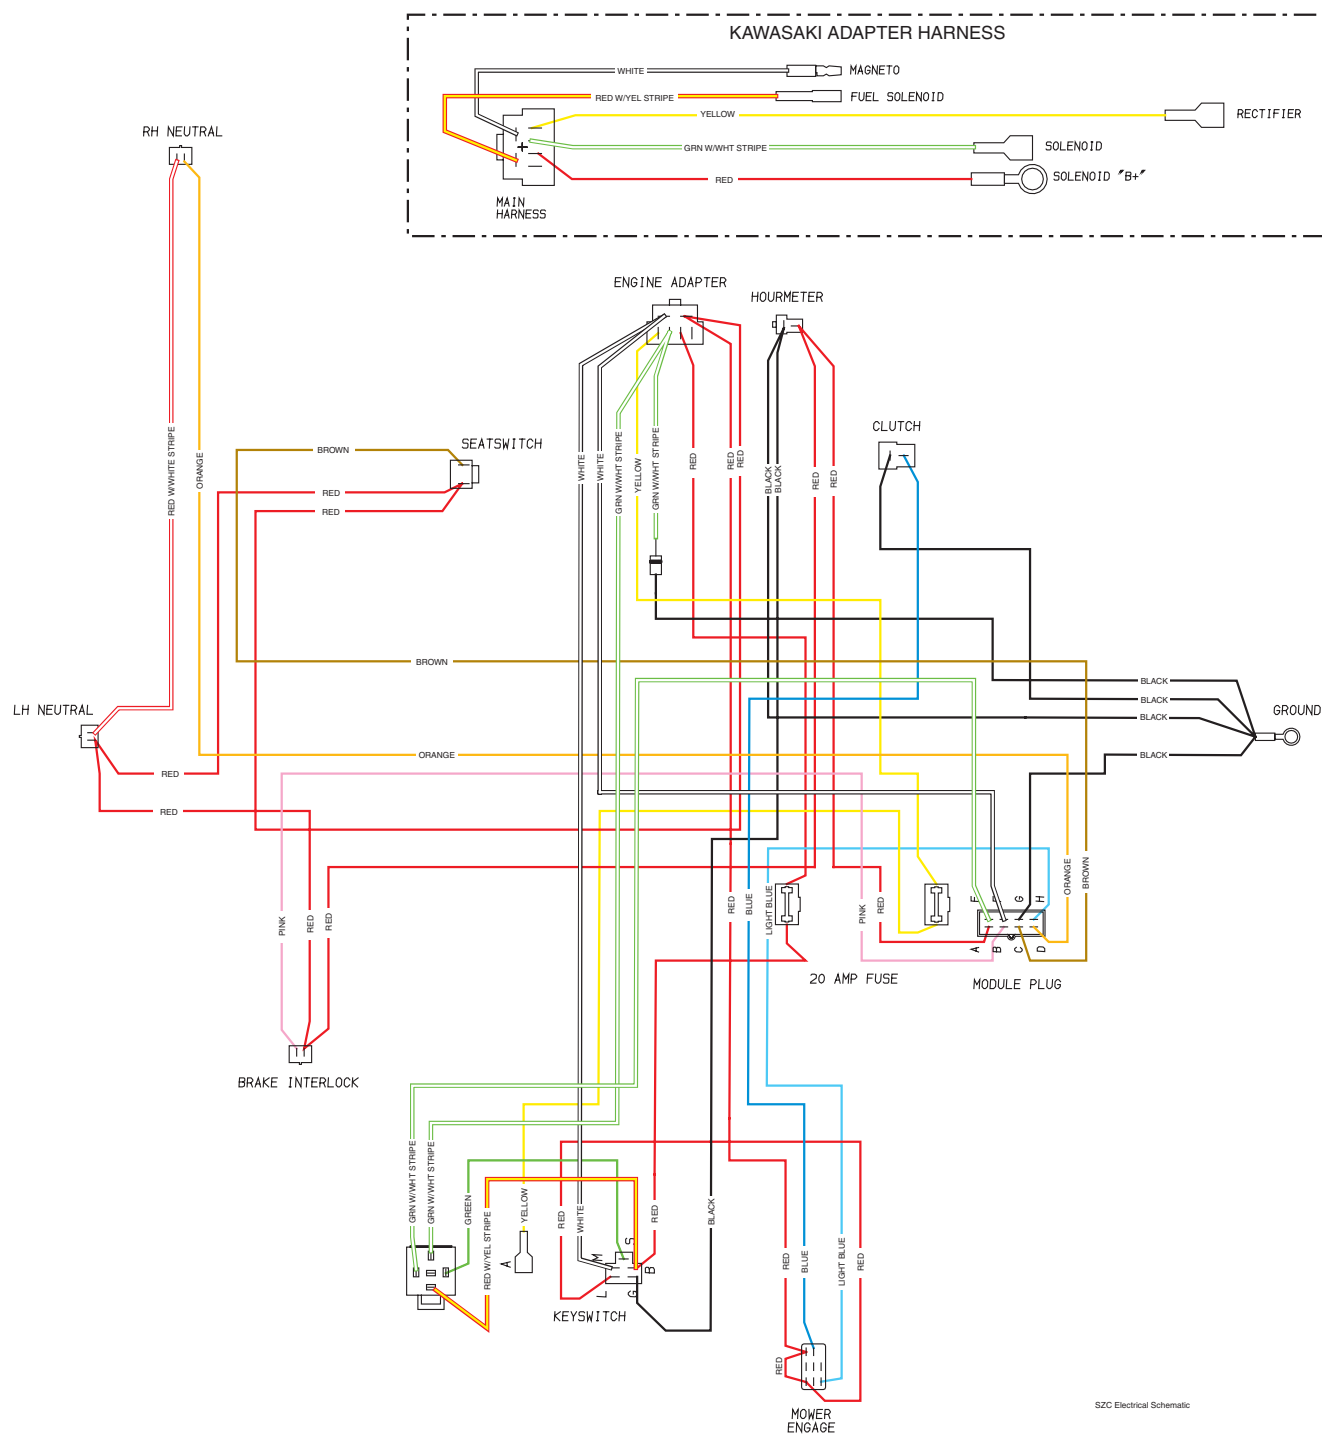

LIMITED WARRANTY - COMMERCIAL EQUIPMENT

Any part of the Scag commercial mower manufactured by Scag Power Equipment and found, in the reasonable judgment of Scag, to be defective in materials or workmanship, will be repaired or replaced by an Authorized Scag Service Dealer without charge for parts and labor. This warranty is limited to the original purchaser and is not transferable. Proof of purchase will be required by the dealer to substantiate any warranty claims. All warranty work must be performed by an Authorized Scag Service Dealer.

This warranty is limited to the following specified periods from the date of the original retail purchase for defects in materials or workmanship:

- * Wear items including drive belts, blades, hydraulic hoses and tires are warranted for ninety (90) days.
- * Batteries are covered for ninety (90) days.
- * Frame and structural components including oil reservoir, fittings, and oil coolers are warranted for 2 years (Parts and labor 1st year; Parts only 2nd year).
- * Cutter decks are warranted against cracking for a period of three (3) years. (Parts and labor 1st year; Parts only 2nd and 3rd year) The repair or replacement of the cutter deck will be at the option of Scag Power Equipment. We reserve the right to request components for evaluation. This warranty does not cover any mower that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual.
- * Engines and electric starters are covered by the engine manufacturer's warranty period.
- * Major drive system components are warranted for two (2) years by Scag Power Equipment. (Parts and labor 1st year; Parts only 2nd year) (Two year warranty exclude fittings, hoses, drive belts). The repair or replacement of the hydraulic pump or hydraulic motor will be at the option of Scag Power Equipment. This warranty does not cover any mower that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual.
- * Electric clutches have a Limited Warranty for 2 year (Parts and labor 1st year; Parts only 2nd year).
- * Cutter Spindle Assemblies 46631 have a Limited Warranty for three years (Parts and labor 1st year; Parts only 2nd and 3rd year).
- * Any Scag product used for rental purposes is covered by a 90 day warranty.

The Scag mower, including any defective part must be returned to an Authorized Scag Service Dealer within the warranty period. The expense of delivering the mower to the dealer for warranty work and the expense of returning it to the owner after repair will be paid for by the owner. Scag's responsibility is limited to making the required repairs and no claim of breach of warranty shall be cause for cancellation or rescission of the contract of sale of any Scag mower.

This warranty does not cover any mower that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual. The warranty does not apply to any damage to the mower that is the result of improper maintenance, or to any mower or parts that have not been assembled or installed as specified in the Operator's Manual and Assembly Manual. The warranty does not cover any mower that has been altered or modified, changing performance or durability. In addition, the warranty does not extend to repairs made necessary by normal wear, or by the use of parts or accessories which, in the reasonable judgment of Scag, are either incompatible with the Scag mower or adversely affect its operation, performance or durability.

Scag Power Equipment reserves the right to change or improve the design of any mower without assuming any obligation to modify any mower previously manufactured. All other implied warranties are limited in duration to the two (2) year warranty period or ninety (90) days for mowers used for rental purpose. Accordingly, any such implied warranties including merchantability, fitness for a particular purpose, or otherwise, are disclaimed in their entirety after the expiration of the appropriate two year or ninety day warranty period. Scag's obligation under this warranty is strictly and exclusively limited to the repair or replacement of defective parts and Scag does not assume or authorize anyone to assume for them any other obligation. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Scag assumes no responsibility for incidental, consequential or other damages including, but not limited to, expense for gasoline, expense of delivering the mower to an Authorized Scag Service Dealer and expense of returning it to the owner, mechanic's travel time, telephone or telegram charges, rental of a like product during the time warranty repairs are being performed, travel, loss or damage to personal property, loss of revenue, loss of use of the mower, loss of time or inconvenience. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.